



Count on it.

Parts Catalog

Commercial Walk-Behind Mower
Fixed Deck, Pistol Grip, Hydro Drive with
48in TURBO FORCE® Cutting Unit
Model No. 30938—Serial No. 313000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquefied Petroleum Gas

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head


STD: standard

TAP: self tapping

TTH: torx truss head

Contents

Engine and Exhaust Assembly	4
Fuel System Assembly	6
Pump Drive and Engine Pulley Assembly	7
Hydraulic Wheel Motor Assembly No. 1-603718	8
LH Hydraulic Pump Assembly No. 116-0942	9
RH Hydraulic Pump Assembly No. 116-0943	10
Parking Brake Assembly	11
Deck Engagement Assembly	12
Hydraulic System Assembly	13
Lower Control Assembly	14
Upper Control Assembly	16
Handle Assembly No. 119-6538	18
Drive Lever Assembly	19
Deck Assembly	20
Deck Decal Assembly No. 110-4909	21
Deflector Assembly No. 110-0758	22
Sheave, Spindle and Blade Assembly	23
Idler Assembly	24
Caster Assembly	25
Attachments and Accessories	26

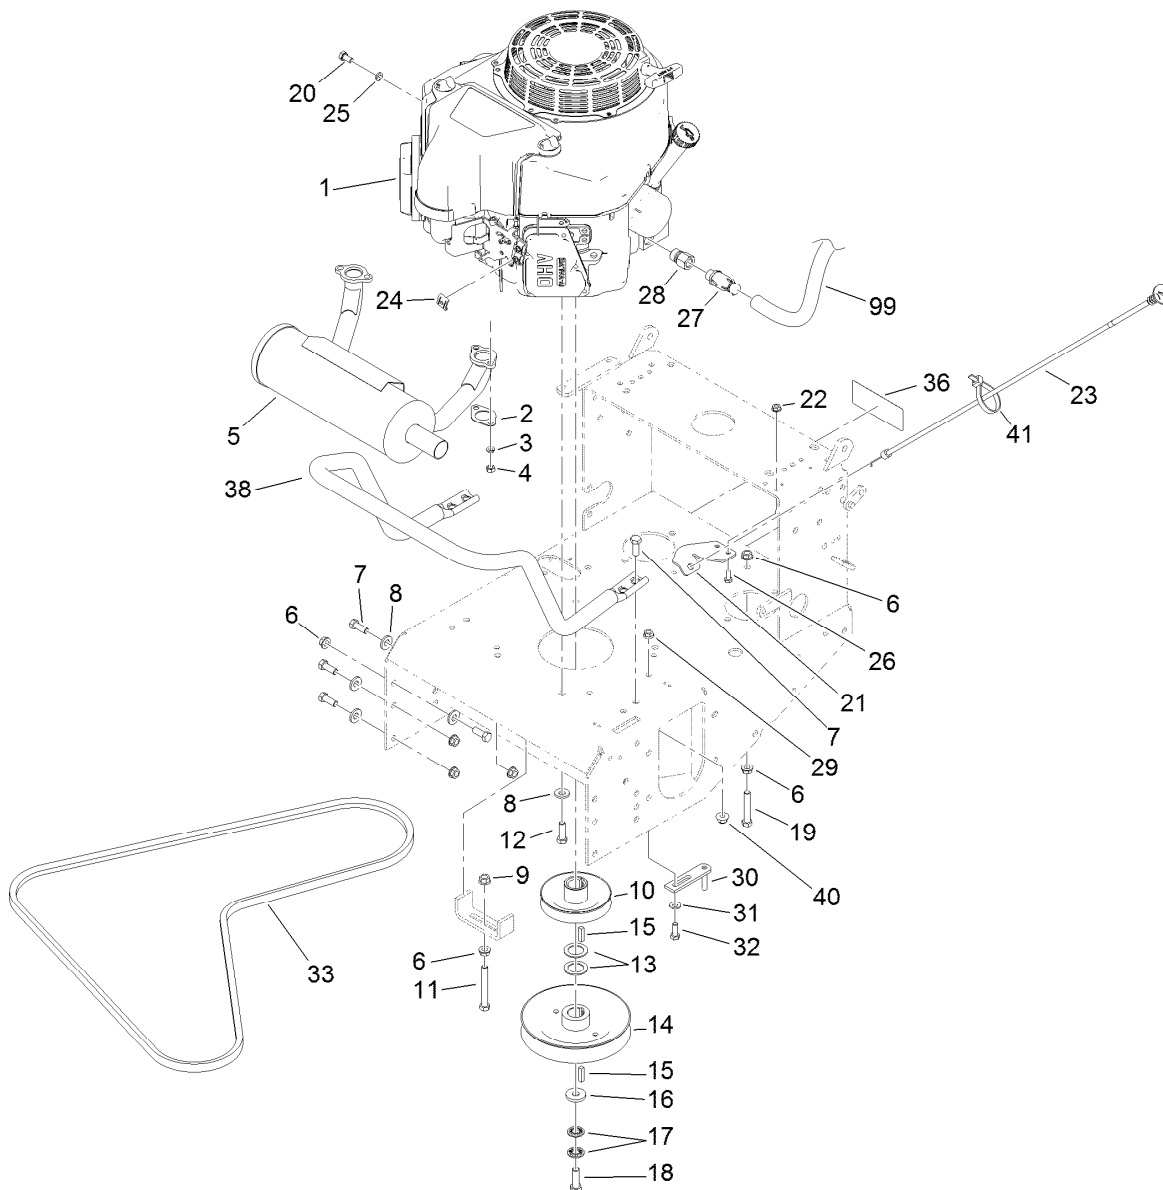


Engine and Exhaust Assembly

Ref.	Part Number	Qty.	Description
1		1	Engine-Kawasaki, Fs481V-As06 ●■
2	1-653313	2	Gasket-Exhaust
3	114-3550	4	Washer-Lock, Spring
4	114-3549	4	Nut
5	116-3734	1	Muffler-Horizontal, Offset
6	3290-357	11	Nut-HHF, Whiz
7	323-6	12	Screw-HH
8	98-5975	12	Washer-Belleville
9	32128-21	1	Nut-HF
10	1-653035	1	Pulley
11	323-14	1	Screw-HH
12	323-7	4	Screw-HH
13	1-523157	2	Washer-Spacer
14	110-4890	1	Pulley ASM
15	1-807259	2	Key
16	1-373034	1	Washer
17	1-603610	2	Washer-Spring

Ref.	Part Number	Qty.	Description
18	116-3702	1	Screw-HH
19	323-11	1	Screw-HH
20	33114-016	1	Screw-HH
21	103-1797-01	1	Bracket-Cable, Choke
22	32128-33	2	Nut-HF
23	103-1796	1	Cable-Choke
24	81-1690	1	Clamp-Cable
25	3253-4	1	Washer-Lock
26	321-3	2	Screw-HH
27	120-4321	1	Valve-Drain, Oil
28	103-1966	1	Adapter
29	32128-20	1	Nut-HF
30	1-322110	1	Guide-Belt
31	1-303334	1	Washer-Spring
32	322-4	1	Screw-HH
33	110-0543	1	Belt-V
36	98-0776	1	Decal-Caution
38	116-6278-03	1	Guard-Muffler

● Not serviced separately

■ Obtain parts from www.kawpowerepc.com

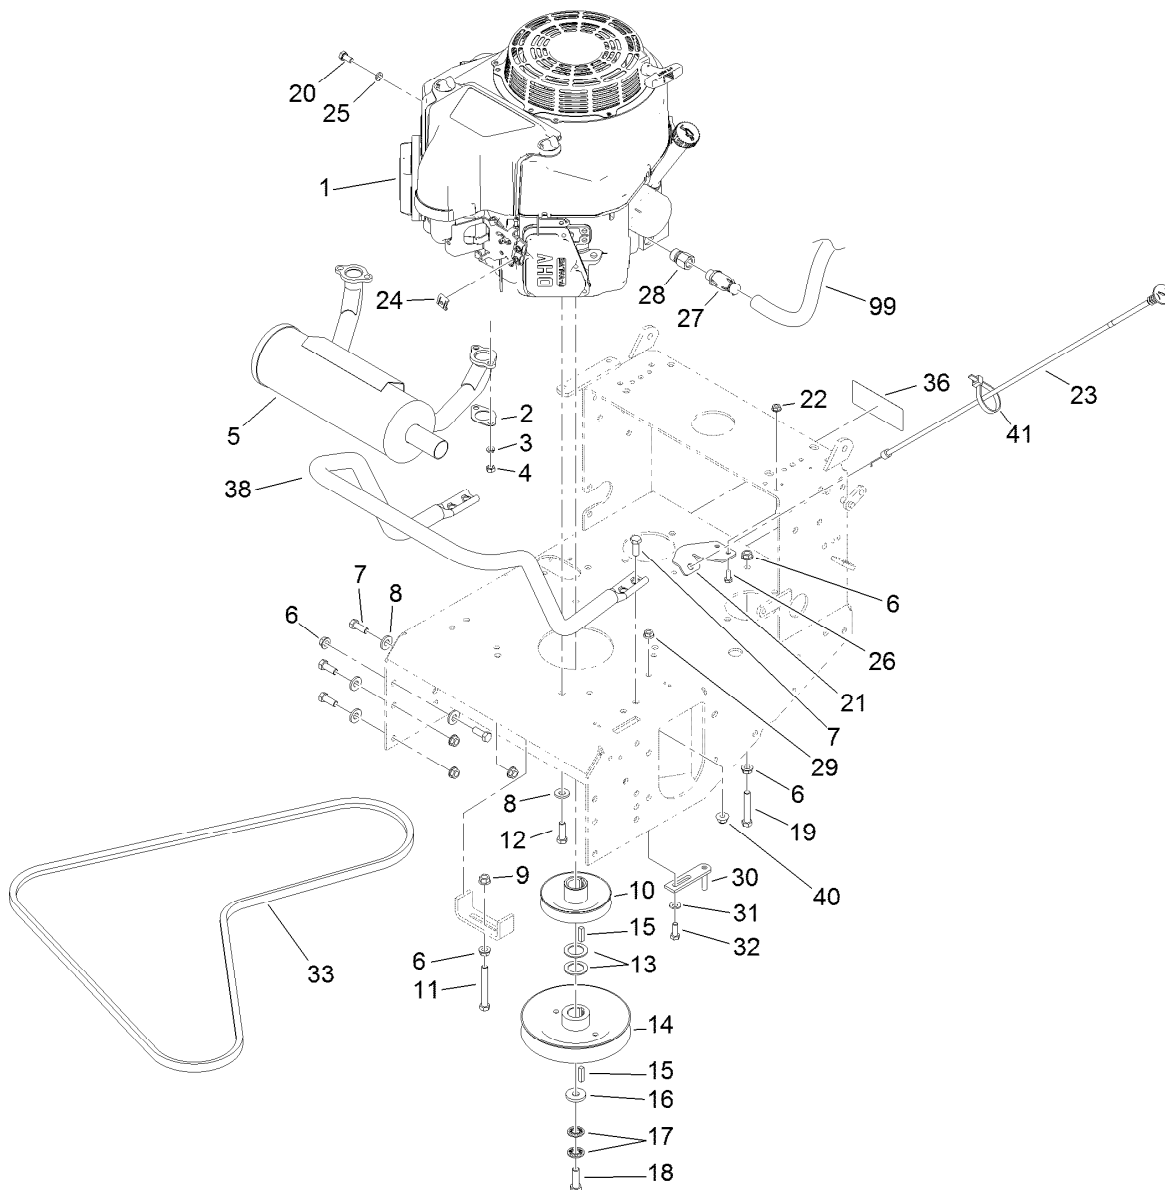


Engine and Exhaust Assembly (continued)

Ref.	Part Number	Qty.	Description
40	104-8301	4	Nut-Flange, NI

Ref.	Part Number	Qty.	Description
41	1-303287	1	Tie-Cable
99	103-1964	1	Hose-Drain, Oil

● Not serviced separately


■ Obtain parts from www.kawpowerpc.com

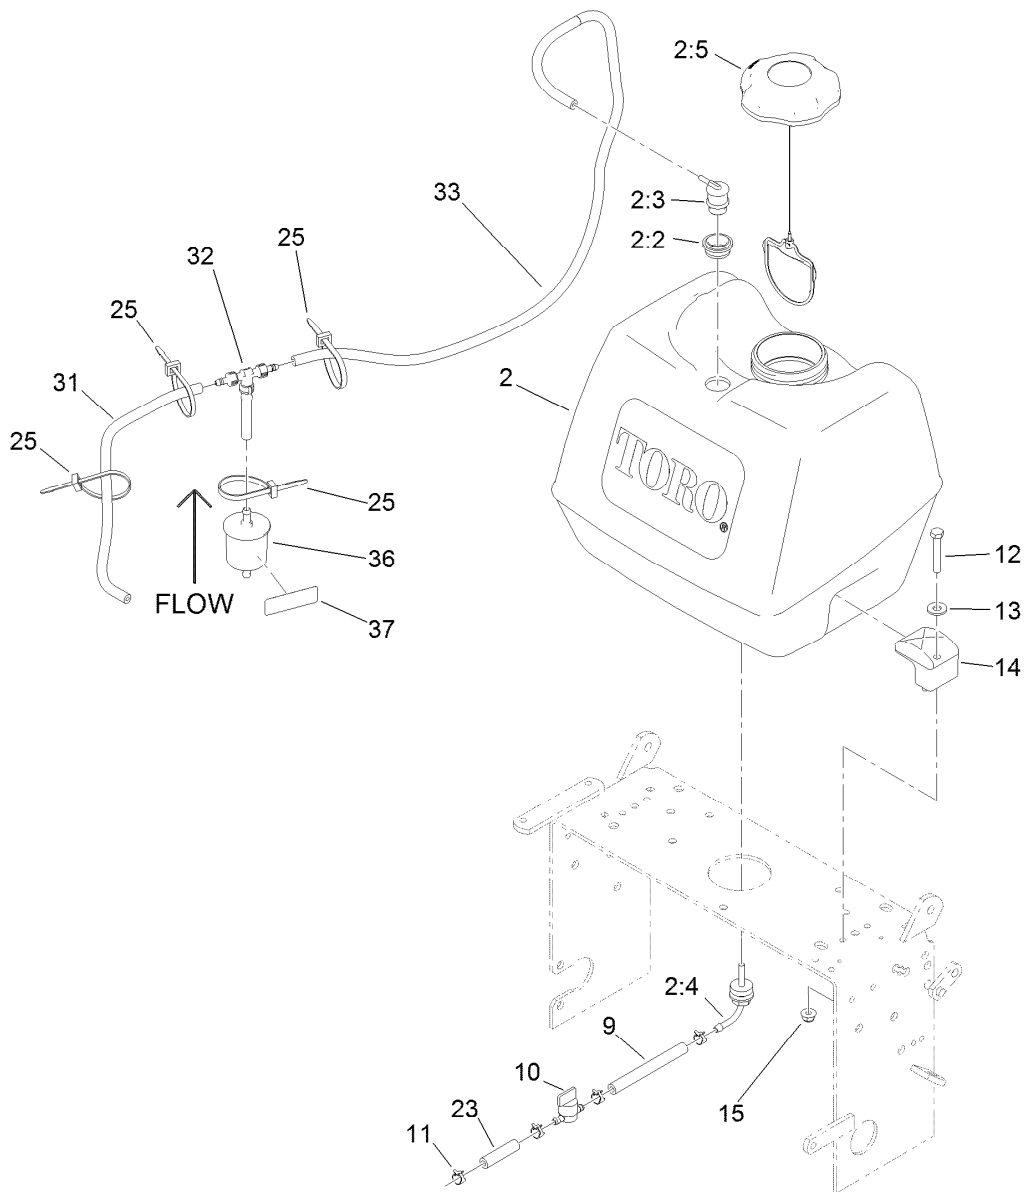

Fuel System Assembly

Ref.	Part Number	Qty.	Description
2	119-7899	1	Fuel Tank ASM
2:2	114-0284	1	Grommet
2:3	114-0285	1	Valve-Rollover
2:4	103-2605	1	Fitting-Fuel, Bulkhead
2:5	120-5461	1	Cap-Fuel, Ratcheting
9	109-0650	1	Hose-Fuel
10	1-603770	1	Valve-Fuel
11	2412-98	4	Clamp-Hose
12	322-10	2	Screw-HH
13	3256-3	2	Washer-Flat


Ref.	Part Number	Qty.	Description
14	107-4543	2	Clamp
15	104-8300	2	Nut-Flange, NI
23	99-9415	1	Hose-Fuel
25	3290-378	4	Tie-Cable
31	115-7872	1	Hose-Fuel
32	116-5464	1	Tee And Check ASM
33	116-4346	1	Hose-Emissions
36	120-2235	1	Filter-Fuel
37	116-4769	1	Decal-Filter, Emissions

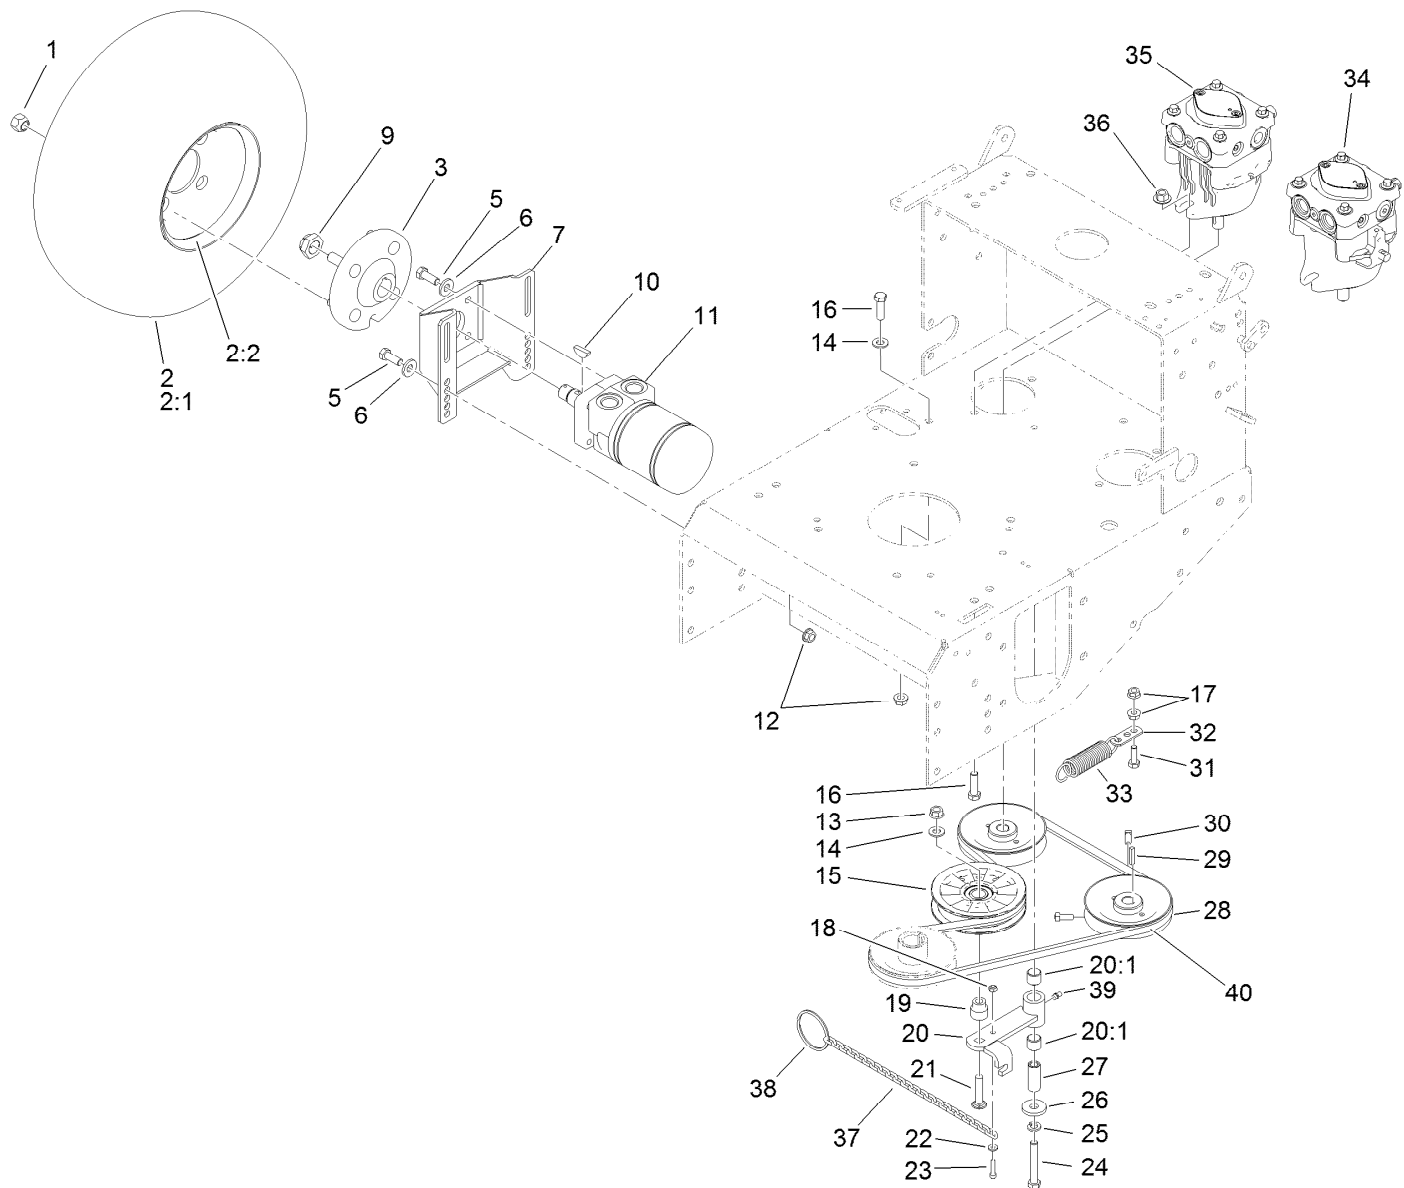

Pump Drive and Engine Pulley Assembly


Ref.	Part Number	Qty.	Description
1	242-50	8	Nut-Lug
2	1-613263	2	Wheel And Tire ASM
2:1	1-613264	1	Tire-Turfmaster
2:2	1-603715	1	Wheel-Rim
3	112-9049	2	Wheel Hub ASM
5	323-6	16	Screw-HH
6	98-5975	16	Washer-Belleville
7	1-402062-01	2	Mount-Motor
9	116-2839	2	Nut-Lock
10	1-807019	2	Key-Woodruff
11	1-603718	2	HYD Motor ASM
12	3290-357	9	Nut-HHF, Whiz
13	32128-21	1	Nut-HF
14	3256-24	2	Washer-Flat
15	109-4077	1	Pulley-Idler, Flat
16	323-7	5	Screw-HH
17	32128-20	2	Nut-HF
18	3296-2	1	Nut-Lock, NI
19	1-603496	1	Bushing-Idler
20	1-602521	1	Idler Arm ASM
20:1	103-4681	2	Sleeve-Bearing

Ref.	Part Number	Qty.	Description
21	3231-29	1	Screw-CARR
22	3256-14	1	Washer-Flat
23	1-809069	1	Screw-HSH
24	323-12	1	Screw-HH
25	3253-21	1	Washer-Lock
26	1-373034	1	Washer
27	1-603044	1	Bushing
28	1-413010	2	Sheave ASM
29	1-807272	2	Key
30	120-6474	4	Screw-Set, SQH
31	322-5	1	Screw-HH
32	1-603801	1	Anchor-Spring
33	1-603402	1	Spring-Extension
34	116-0942	1	LH HYD Pump ASM
35	116-0943	1	RH HYD Pump ASM
36	32128-43	4	Nut-Flange
37	1-323365	1	Chain-Link, Twist
38	1-323366	1	Ring-Split
39	302-19	1	Fitting-Grease
40	106-2740	1	V-Belt

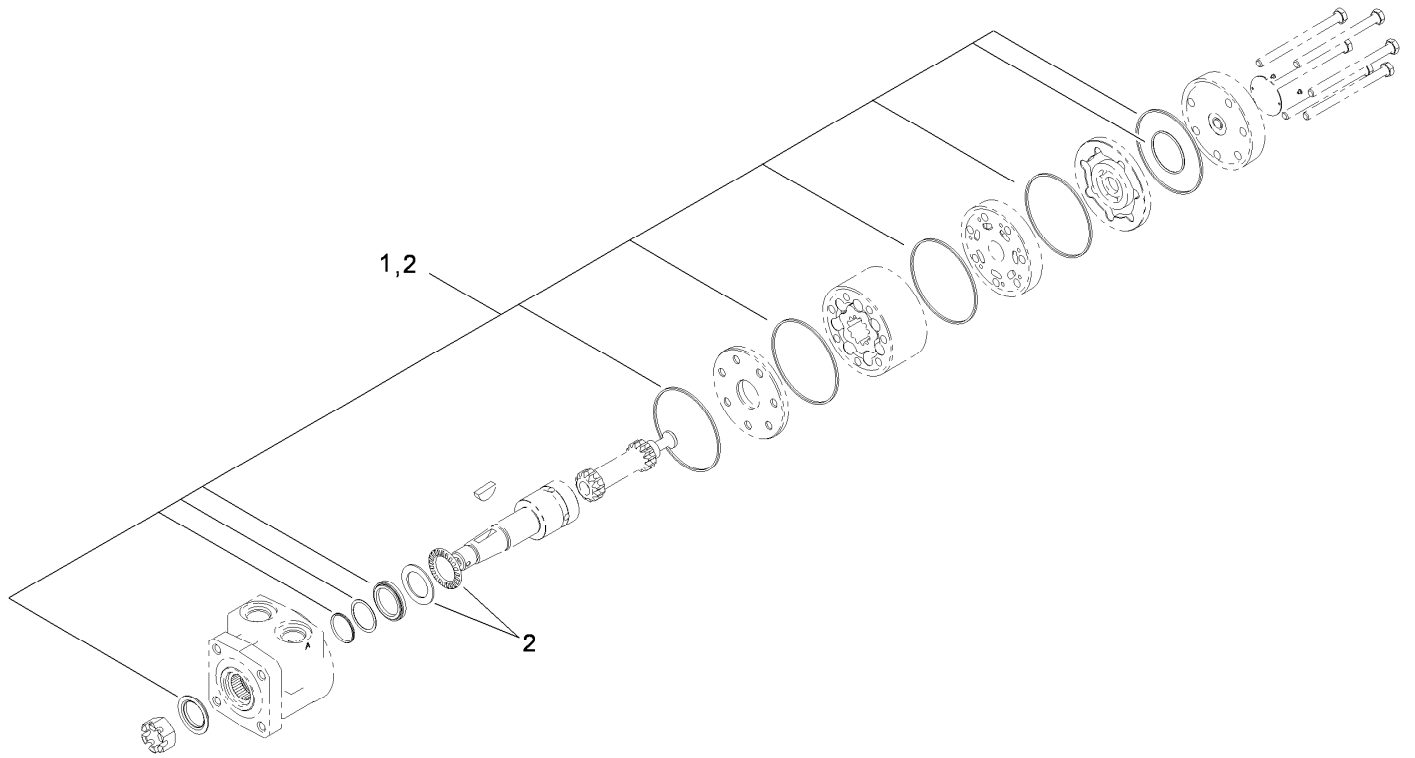


Hydraulic Wheel Motor Assembly No. 1-603718

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	1-000119	1	Seal Kit
2	1-000138	1	Bearing And Seal Kit

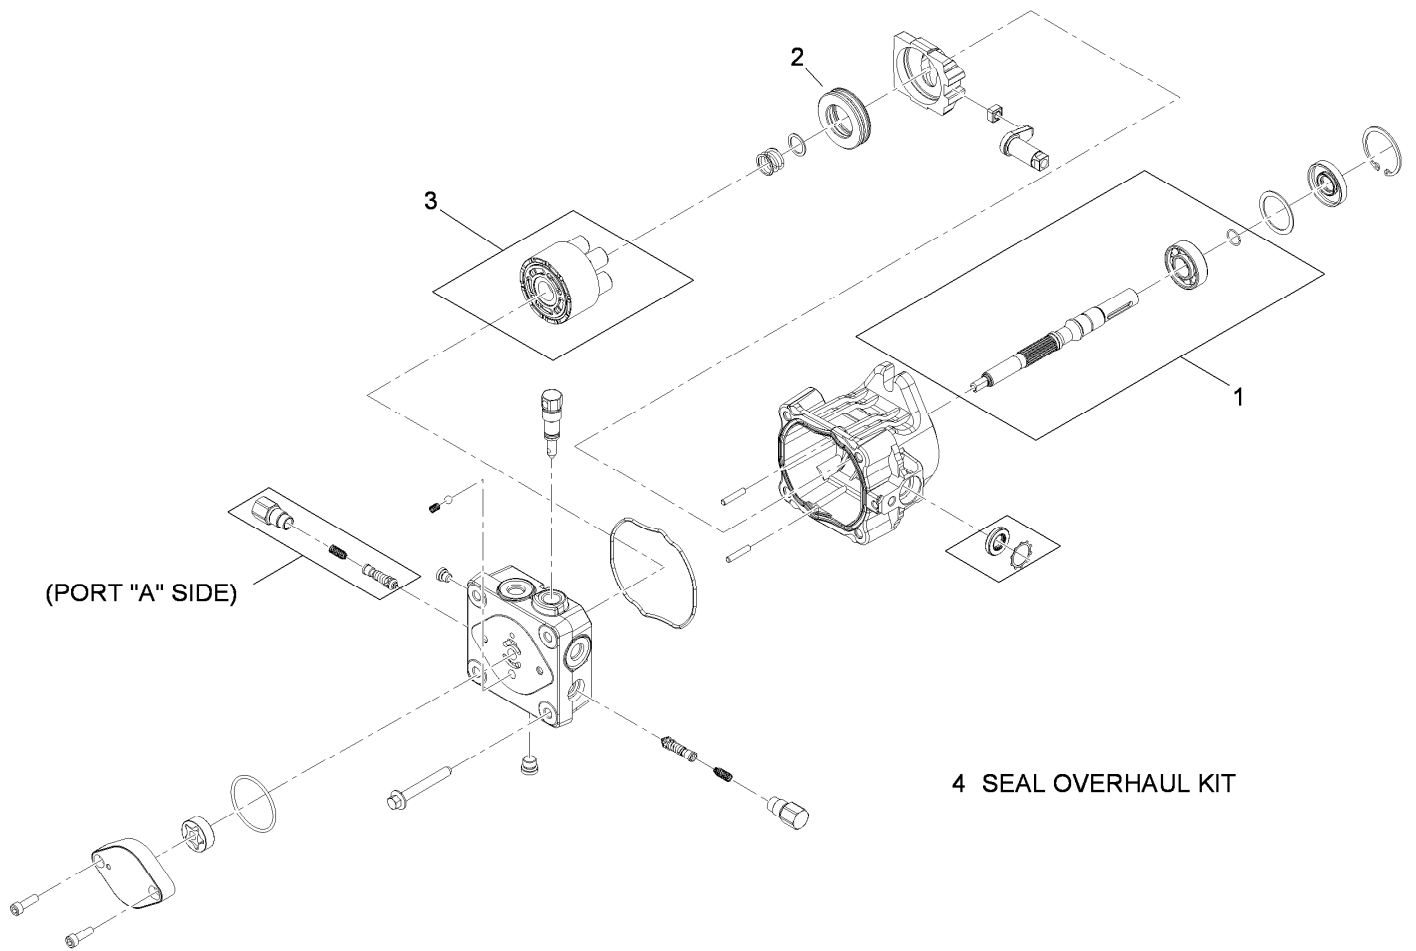


LH Hydraulic Pump Assembly No. 116-0942

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	103-2664	1	Input Shaft Kit
2	94-6922	1	Bearing-Thrust
3	103-2666	1	Cylinder Block Kit
4	105-6184	1	Seal Overhaul Kit

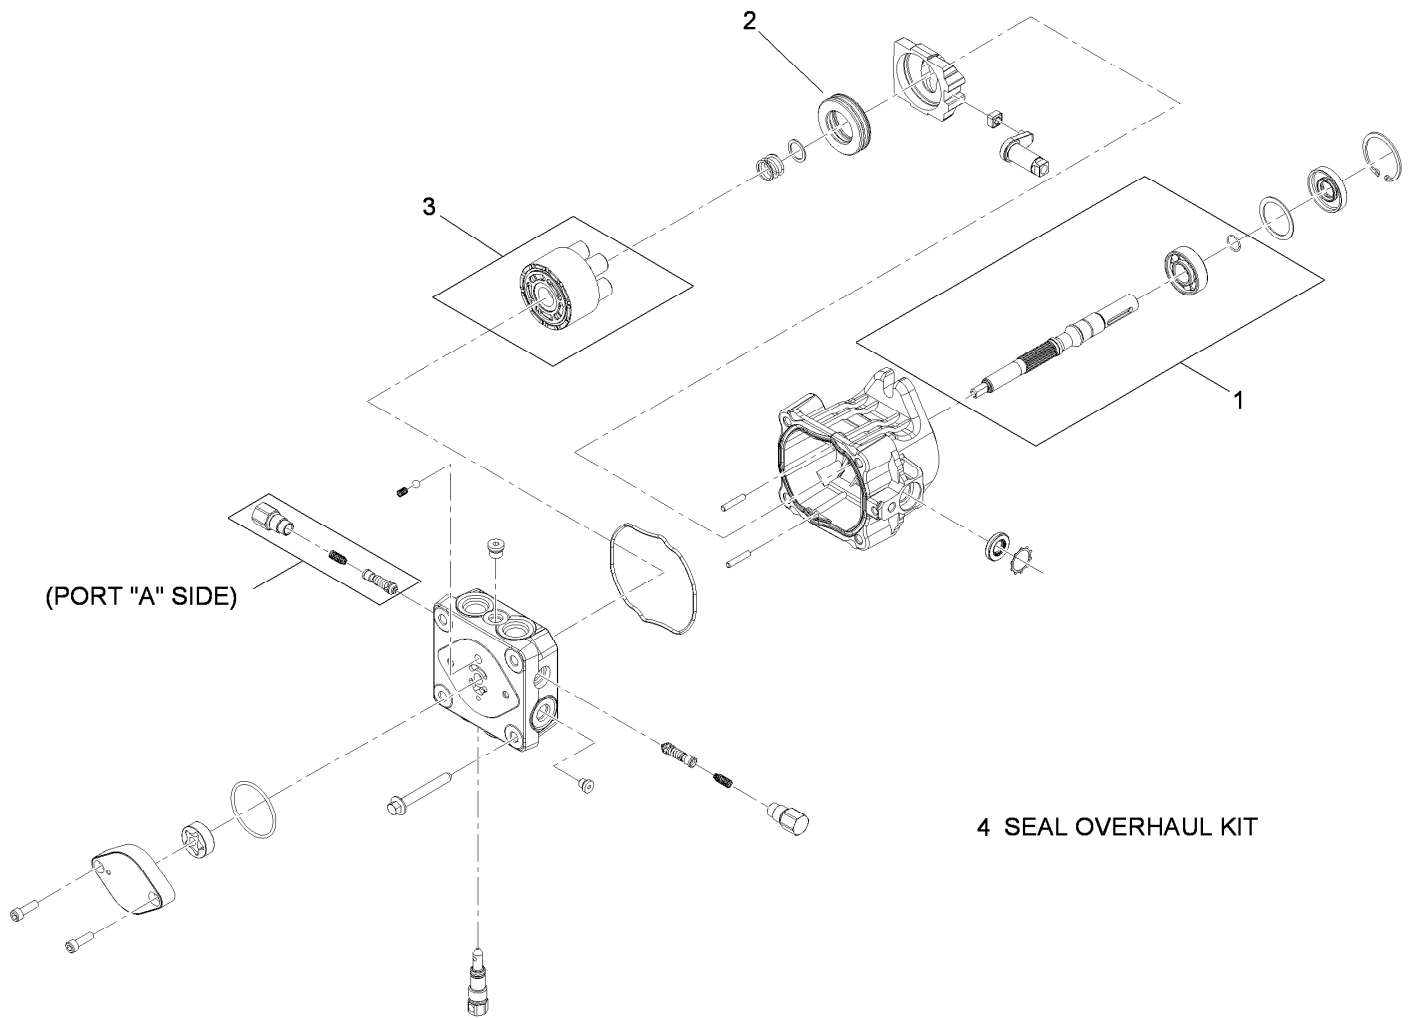

RH Hydraulic Pump Assembly No. 116-0943


Ref.	Part Number	Qty.	Description
1	103-2664	1	Input Shaft Kit
2	94-6922	1	Bearing-Thrust
3	103-2666	1	Cylinder Block Kit
4	105-6184	1	Seal Overhaul Kit

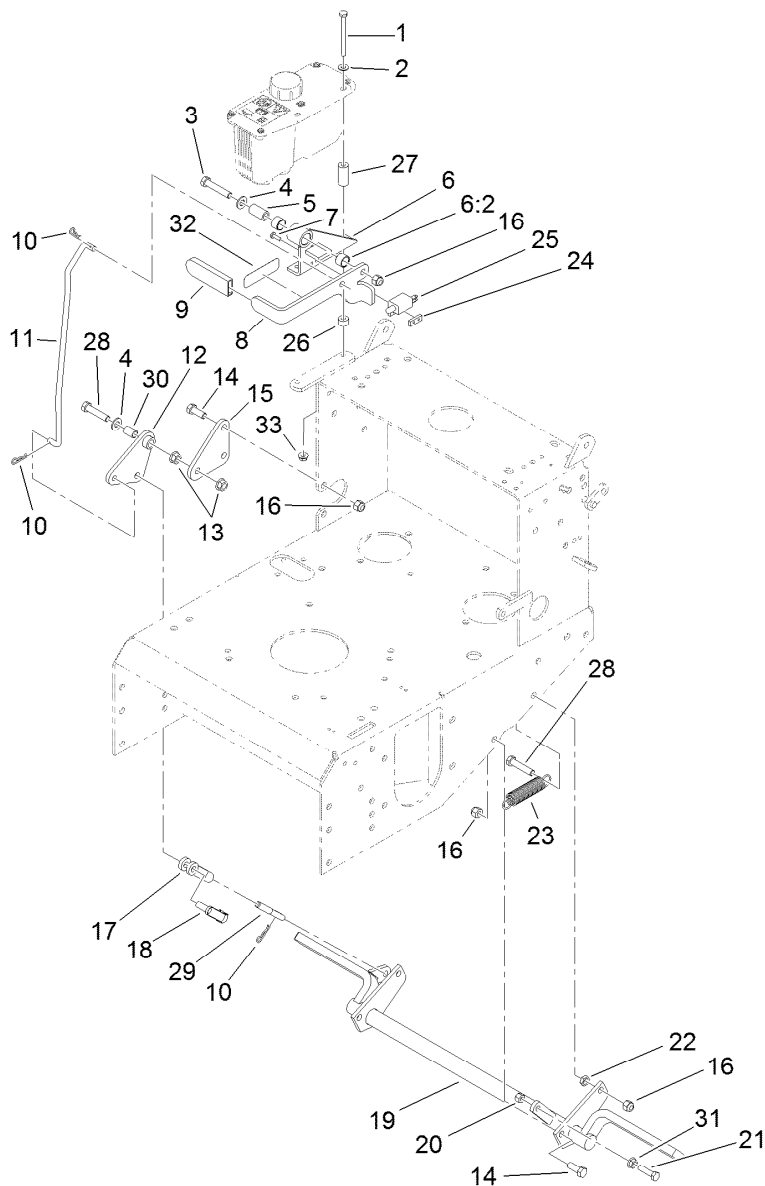

Parking Brake Assembly

Ref.	Part Number	Qty.	Description
1	321-23	2	Screw-HH
2	3256-22	2	Washer-Flat
3	323-10	1	Screw-HH
4	3256-24	2	Washer-Flat
5	1-413344	1	Bushing-Pivot
6	1-414504	1	Bracket ASM
6:2	1-413347	2	Sleeve-Bushing
7	3290-500	2	Screw-PPH
8	116-1725-03	1	Lever-Brake, Park
9	1-303020	1	Grip-Lever
10	1-806003	3	Pin-Cotter, Hair
11	1-413496	1	Linkage-Upper
12	1-414508	1	Bellcrank ASM
13	32128-21	2	Nut-HF
14	323-6	5	Screw-HH
15	1-413497	1	Bellcrank
16	3296-39	7	Nut-Lock, NI


Ref.	Part Number	Qty.	Description
17	1-633131	1	Yoke-Linkage, Brake
18	103-2399	1	Pin-Spring, Clevis
19	103-2004-03	1	Brake
20	3296-29	1	Nut-Lock, NI
21	116-3515	1	Screw-HH, Special
22	3218-3	1	Nut-Jam
23	1-323161	1	Spring-Idler
24	1-633181	1	Plate-Tapped
25	1-513051	1	Switch-Open, Normally
26	1-323549	2	Spacer
27	103-2191	2	Spacer
28	323-9	2	Screw-HH
29	1-413489	1	Linkage-Lower
30	1-303548	1	Bushing-Plastic
31	32128-20	1	Nut-HF
32	103-2103	1	Decal-Brake, Park
33	32128-33	2	Nut-HF

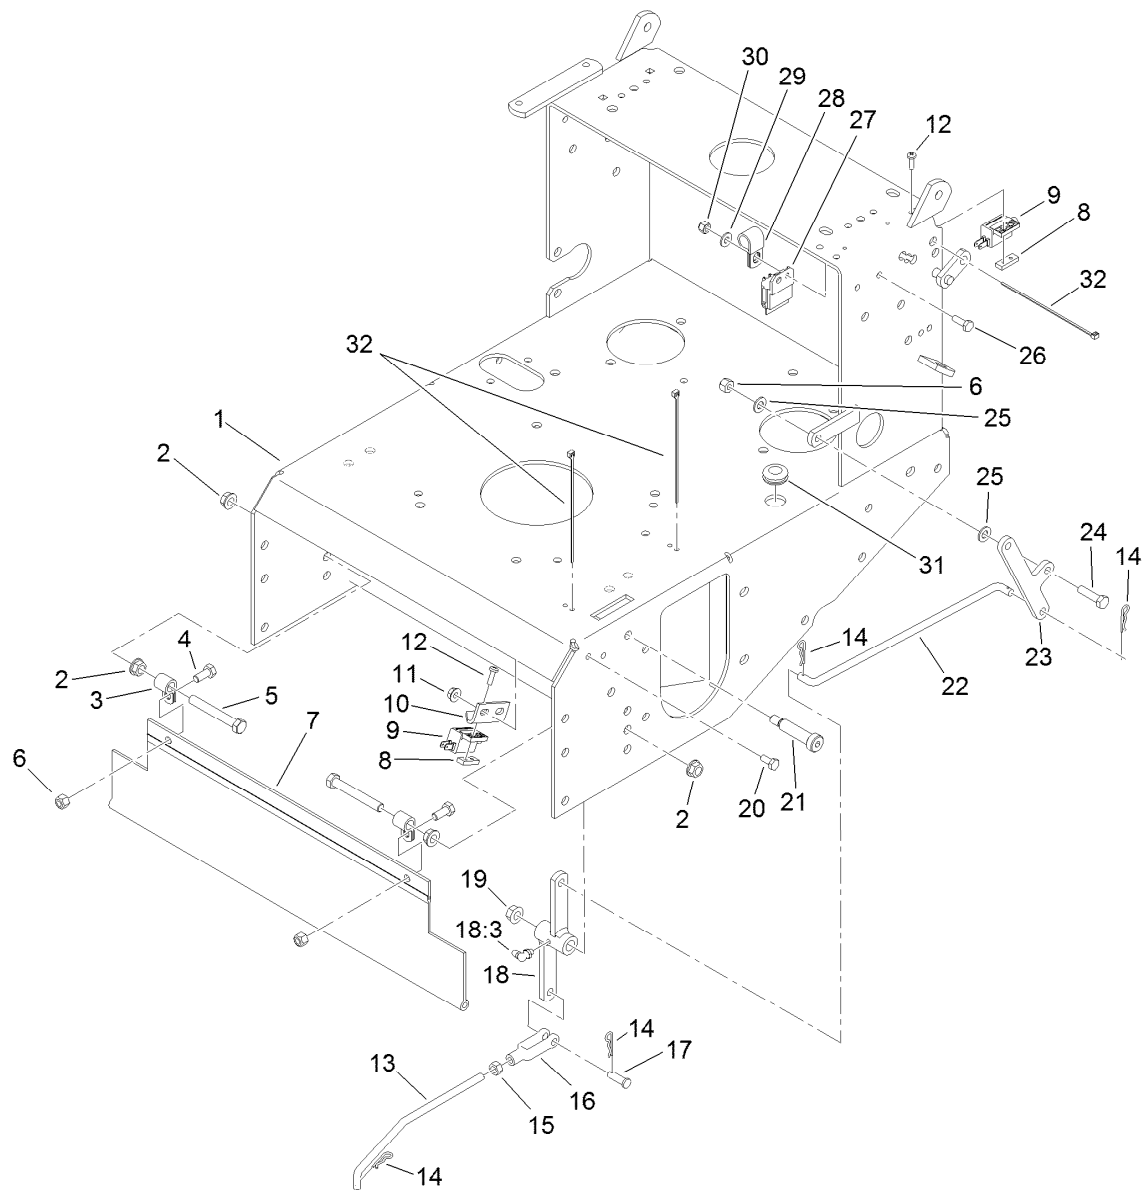

Deck Engagement Assembly

Ref.	Part Number	Qty.	Description
1	116-6086-01	1	Frame
2	3290-357	4	Nut-HHF, Whiz
3	1-413510	2	Clip-Loom
4	322-3	2	Screw-HH
5	323-13	2	Screw-HH
6	3296-29	3	Nut-Lock, NI
7	103-2056	1	Shield-Drag
8	1-633181	2	Plate-Tapped
9	1-513051	2	Switch-Open, Normally
10	1-323213	1	Bracket-Switch, Blade
11	32128-33	2	Nut-HF
12	3290-500	4	Screw-PPH
13	1-323174	1	Arm-Linkage, Assist
14	1-806003	4	Pin-Cotter, Hair
15	3219-2	1	Nut-Hex
16	1-303105	1	Yoke-Adjustable
17	1-808280	1	Pin-Clevis

Ref.	Part Number	Qty.	Description
18	1-322108	1	Bellcrank ASM
18:3	302-40	1	Fitting-Grease
19	32128-21	1	Nut-HF
20	321-3	2	Screw-HH
21	1-809062	1	Screw
22	1-323172	1	Linkage-Engage, Blade
23	116-1737-01	1	Bellcrank
24	322-6	1	Screw-HH
25	3256-23	2	Washer-Flat
26	321-4	1	Screw-HH
27	1-323430	1	Module-Interlock
28	1-603727	1	Clip-Loom
29	3256-22	1	Washer-Flat
30	3296-42	1	Nut-Lock, NI
31	1-543296	1	Grommet
32	1-303287	3	Tie-Cable

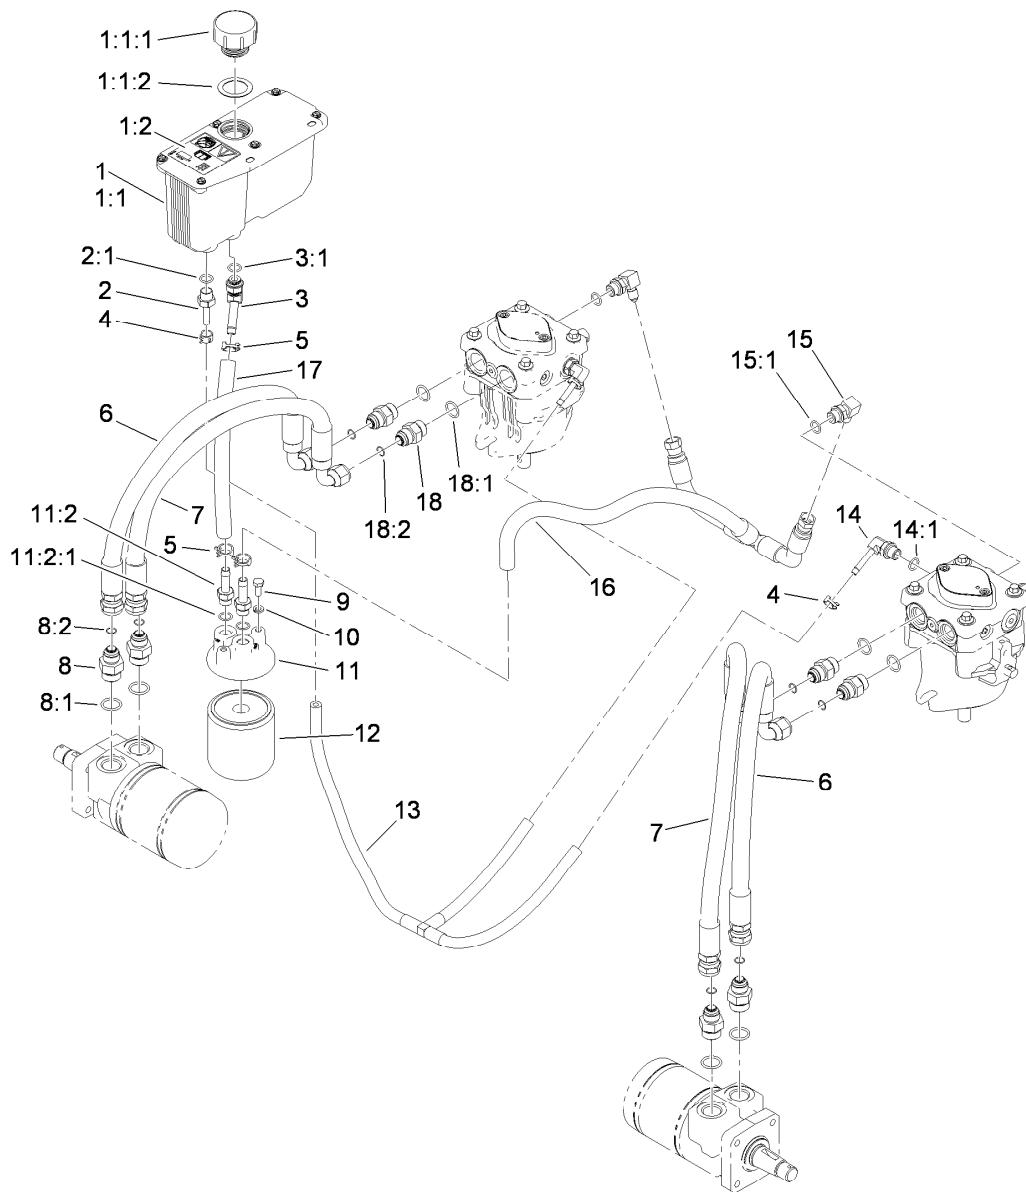


Hydraulic System Assembly

Ref.	Part Number	Qty.	Description
1	107-8433	1	HYD Reservoir ASM
1:1		1	Reservoir-HYD ●
1:1:1	103-1948	1	Cap-Reservoir, HYD
1:1:2	103-1949	1	Gasket-Cap
1:2	115-4212	1	Decal-Warning
2	103-1801	1	Adapter-Straight
2:1	237-42	1	O-Ring
3	103-1807	1	Fitting-Barbed, 45 DEG
3:1	237-42	1	O-Ring
4	103-1716	3	Clamp-Hose
5	103-1988	3	Clamp-Hose
6	119-7827	2	HYD Hose ASM
7	119-7826	2	HYD Hose ASM
8	1-603991	4	Fitting-Straight
8:1	237-80	1	O-Ring
8:2	1-603992	1	O-Ring

Ref.	Part Number	Qty.	Description
9	321-3	2	Screw-HH
10	1-805004	2	Washer-Lock
11	103-2889	1	Filter Head ASM
11:2	103-1912	2	Adapter-Straight
11:2:1	237-42	1	O-Ring
12	1-633750	1	Filter-Oil, HYD
13	116-0918	1	Case Drain Hose ASM
14	103-1799	2	Elbow-90 DEG
14:1	237-42	1	O-Ring
15	103-1802	2	Fitting-HYD, 90 DEG
15:1	1-603921	1	O-Ring
16	116-2123	1	Charge Hose ASM
17	103-2959	1	Hose-Charge
18	1-603990	4	Fitting-Straight
18:1	1-603920	1	O-Ring
18:2	1-603992	1	O-Ring


● Not serviced separately

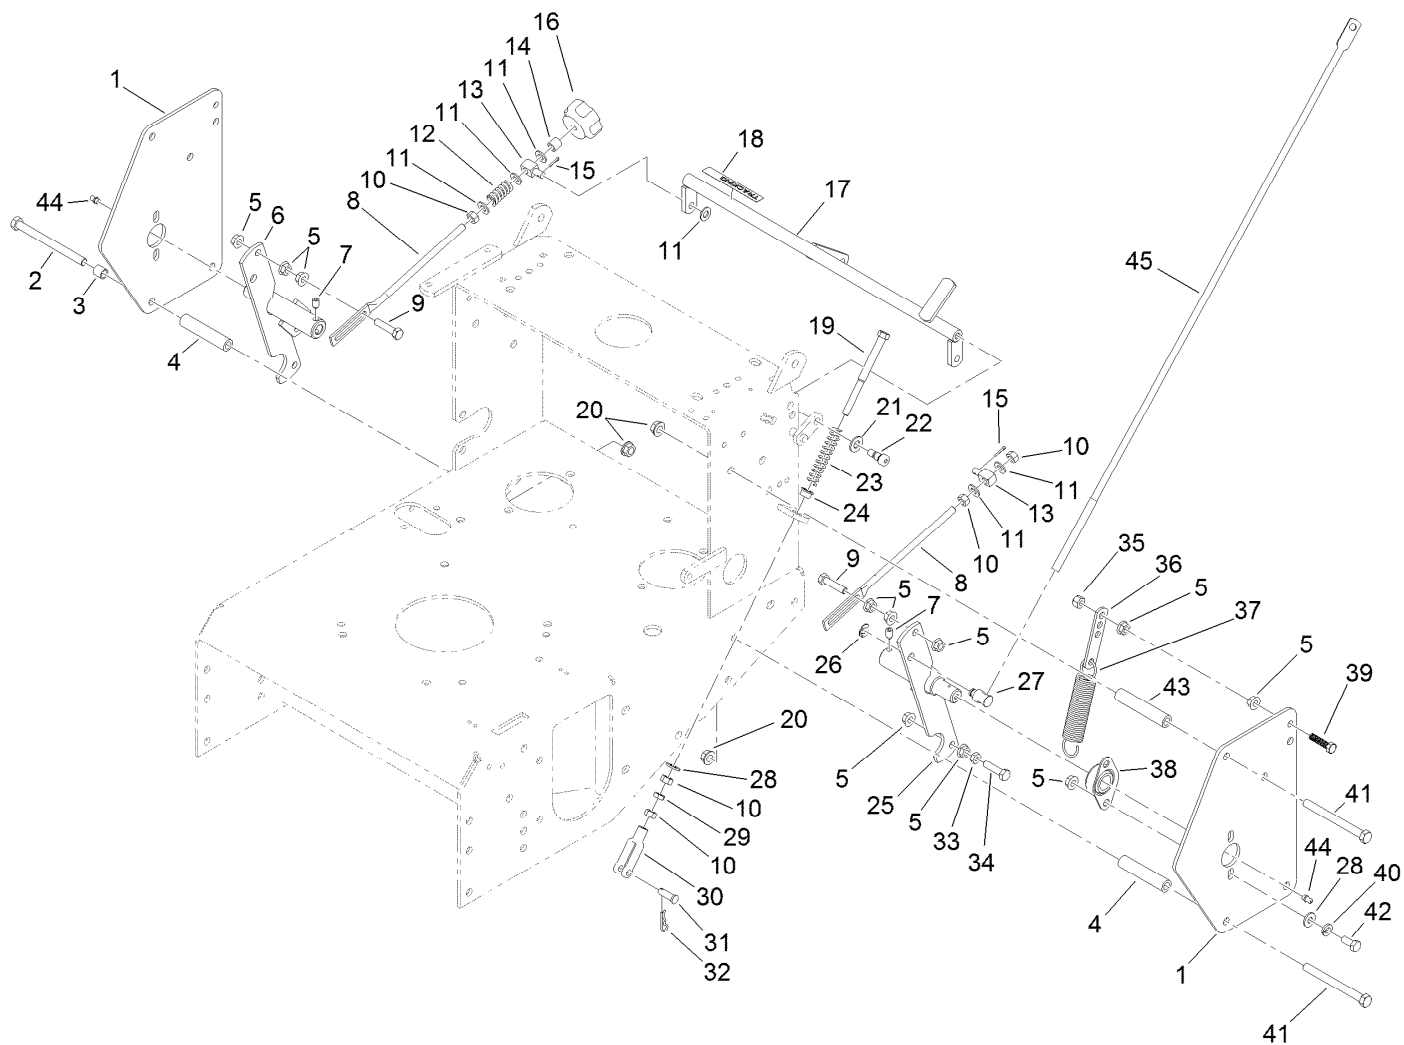

Lower Control Assembly

Ref.	Part Number	Qty.	Description
1	110-4897-01	2	Shield-Control
2	323-23	1	Screw-HH
3	103-1166	1	Spacer-Tube, Pump Link
4	1-323197-01	4	Spacer-Shield
5	32128-20	18	Nut-HF
6	103-4796-01	1	Shaft-Control, RH
7	3246-4	2	Screw-Set
8	1-413350	2	Link-Control, Speed
9	1-403180	2	Screw-HH
10	3219-2	7	Nut-Hex
11	3256-23	7	Washer-Flat
12	1-323245	1	Spring-Compression
13	1-603676	2	Swivel-Adjustable, Short
14	1-603903	1	Spacer
15	3272-5	2	Pin-Cotter
16	103-3060	1	Knob-Tracking
17	1-412203-01	1	Crank-Control, Speed
18	105-4109	1	Decal-Tracking
19	1-603737	2	Bolt-Return, Neutral
20	3290-357	8	Nut-HHF, Whiz
21	3256-24	2	Washer-Flat


Ref.	Part Number	Qty.	Description
22	1-809056	2	Screw
23	1-603807	2	Spring-Return, Neutral
24	1-603735	2	Bushing-Flanged
25	103-1190-01	1	Shaft-Control, LH
26	32151-47	2	Ring-Retaining
27	103-1235	2	Swivel-Lever, Drive
28	3256-2	6	Washer-Flat
29	3220-2	2	Nut-Jam
30	1-303105	2	Yoke-Adjustable
31	1-808280	2	Pin-Clevis
32	1-806003	2	Pin-Cotter, Hair
33	3218-2	2	Nut-Jam
34	116-3515	2	Screw-HH, Special
35	3296-29	2	Nut-Lock, NI
36	1-613089	2	Tab-Spring, Extension
37	1-603693	2	Spring-Extension
38	1-633102	2	Bearing-Flange, Side
39	1-800016	2	Bolt-TAP, HH
40	1-805005	4	Washer-Lock
41	323-16	7	Screw-HH
42	322-3	4	Screw-HH

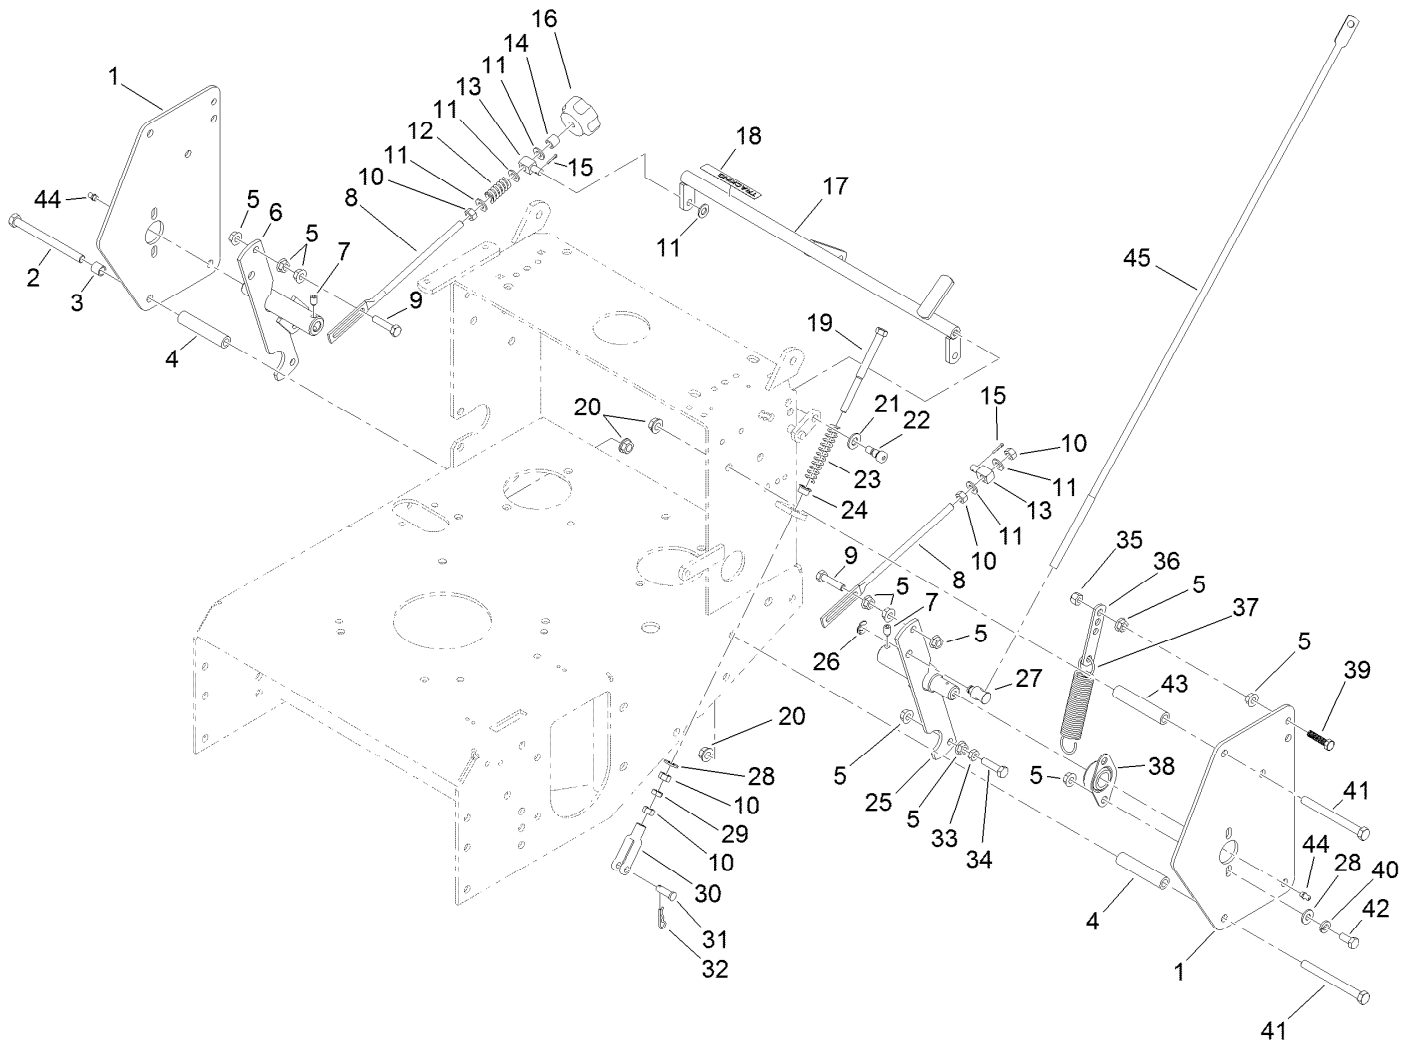

Lower Control Assembly (continued)

Ref.	Part Number	Qty.	Description
43	1-323195-01	4	Spacer-Shield


Ref.	Part Number	Qty.	Description
44	302-19	2	Fitting-Grease
45	1-413219	2	Rod-Lever, Drive

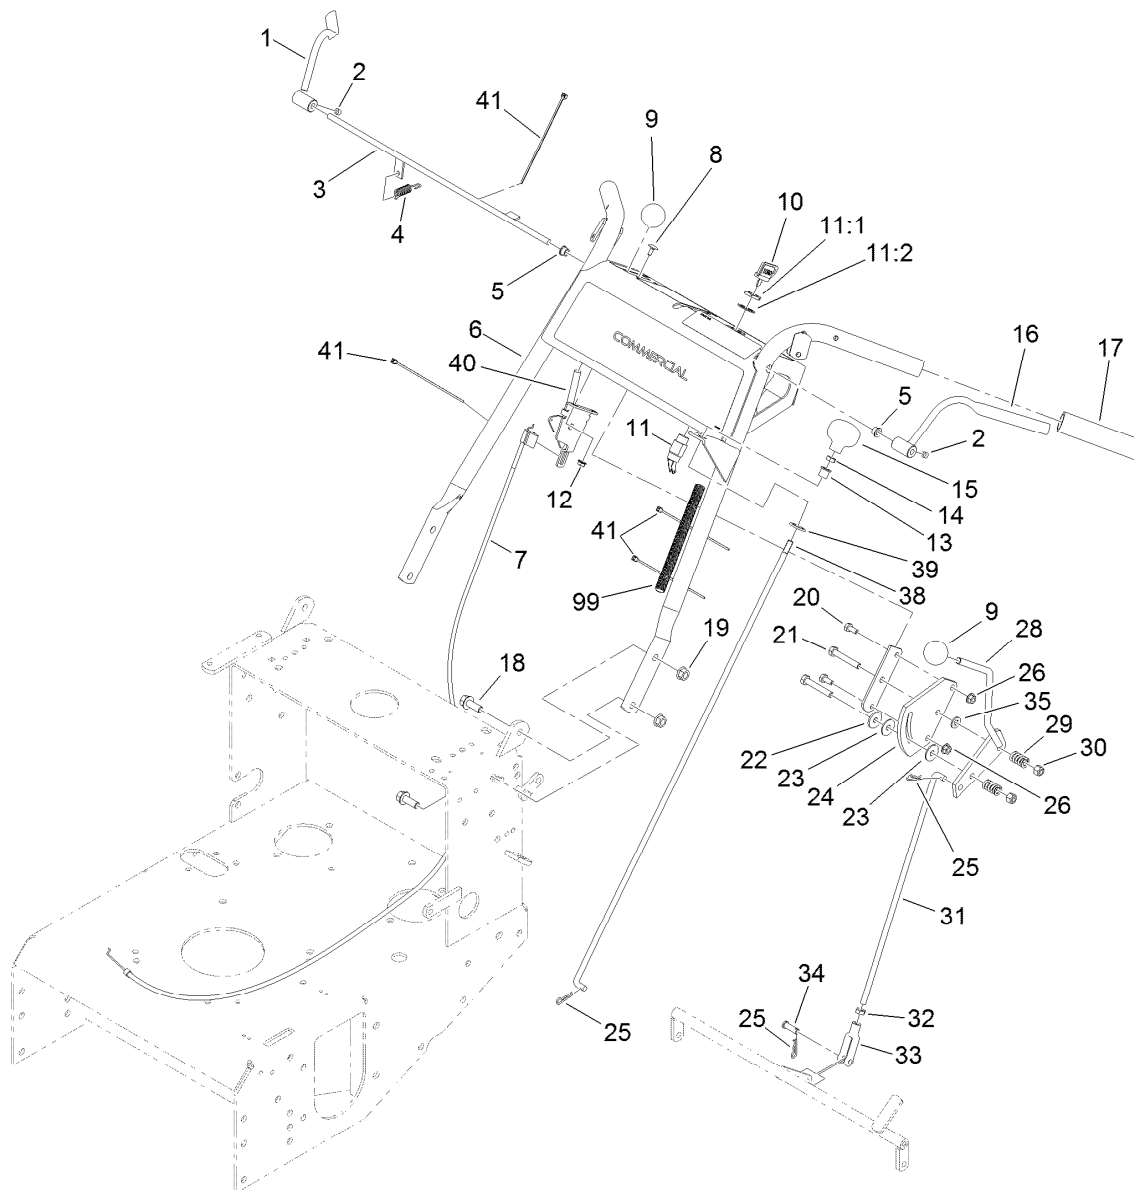

Upper Control Assembly


Ref.	Part Number	Qty.	Description
1	106-5486	1	RH Operator Presence Control Lever ASM
2	1-803322	2	Screw-Set
3	106-2717-03	1	Rod-Control, Operator Presence
4	1-303363	1	Spring-Extension
5	1-303365	2	Bushing-Nylon
6	119-6538	1	Handle ASM
7	119-1823	1	Cable-Control, Throttle
8	1-807513	2	Bolt-CARR
9	1-603175	2	Knob-Ball
10	63-8360	1	Key-Ignition (W/Shield)
11	29-5560	1	Switch-On / Off
11:1	218-461	1	Nut-HH
11:2	3254-5	1	Washer-Tooth, Internal
12	32128-17	2	Nut-Lock, Flange
13	1-323143	1	Bearing-Nylon
14	3218-2	1	Nut-Jam
15	1-323134	1	Knob-Push / Pull
16	106-5485	1	LH Operator Presence Control Lever ASM

Ref.	Part Number	Qty.	Description
17	104-9838	2	Grip-Foam
18	3234-11	4	Screw-HHF
19	32128-21	4	Nut-HF
20	321-3	2	Screw-HH
21	322-10	2	Screw-HH
22	1-603716	1	Washer-Friction
23	1-323244	2	Washer-Friction
24	1-603730	1	Plate-Lever, Shifter
25	1-806003	3	Pin-Cotter, Hair
26	32128-33	2	Nut-HF
28	106-2748	1	Lever-Shift
29	1-323245	2	Spring-Compression
30	3296-29	2	Nut-Lock, NI
31	1-323522	1	Rod-Control, Speed
32	3220-2	1	Nut-Jam
33	1-303105	1	Yoke-Adjustable
34	1-808280	1	Pin-Clevis
35	3256-23	1	Washer-Flat
38	1-323181	1	Linkage-Blade
39	1-323142	1	Nut-Push
40	110-5547	1	Lever-Control

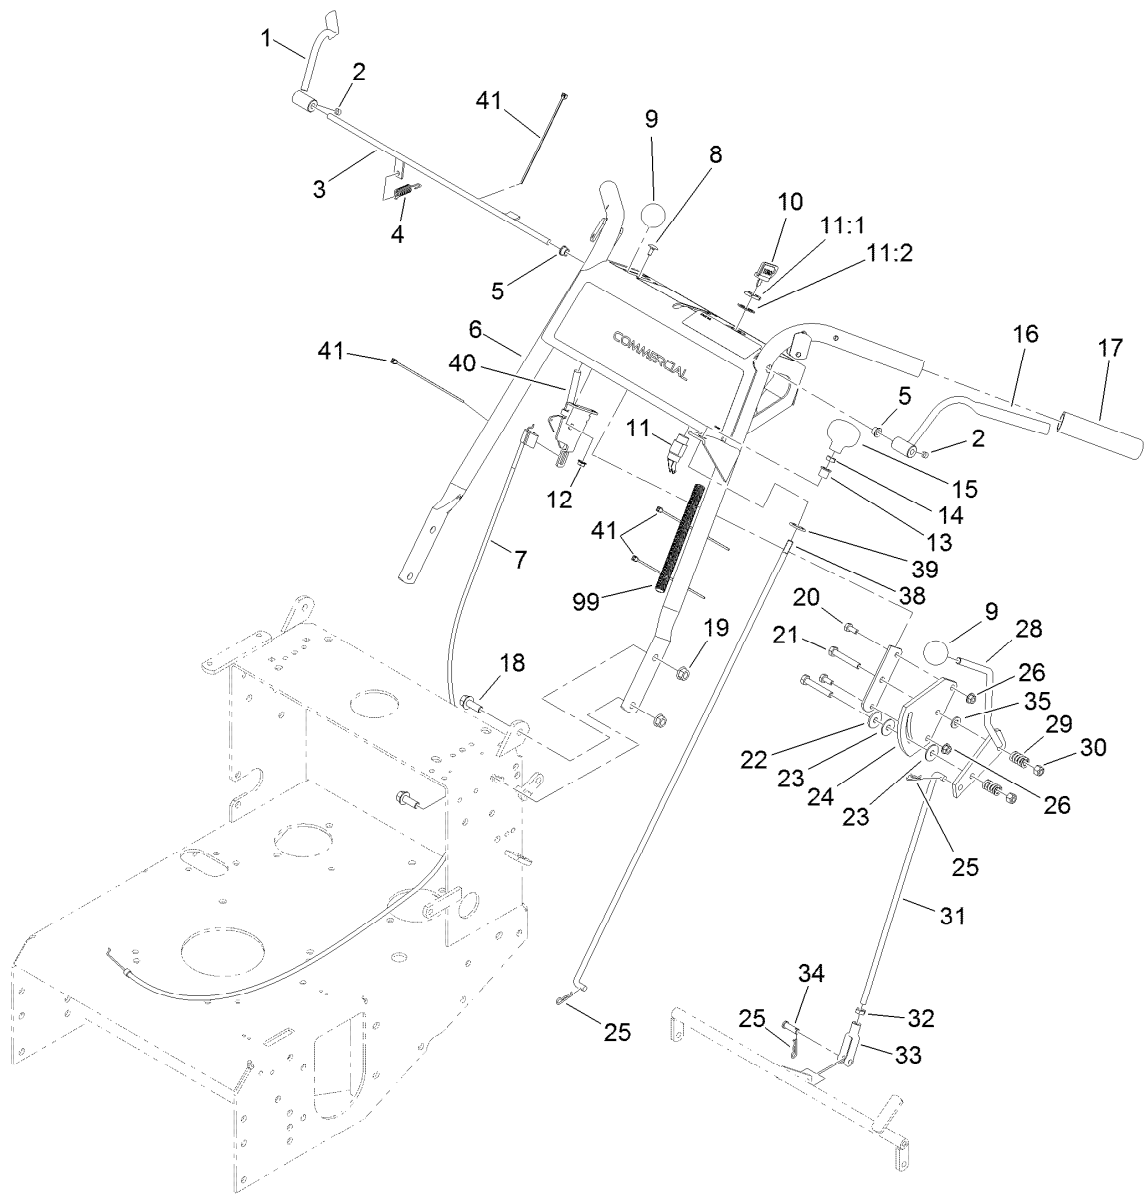


Upper Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
41	1-303287	4	Tie-Cable
99	116-2611	1	Harness-Wiring

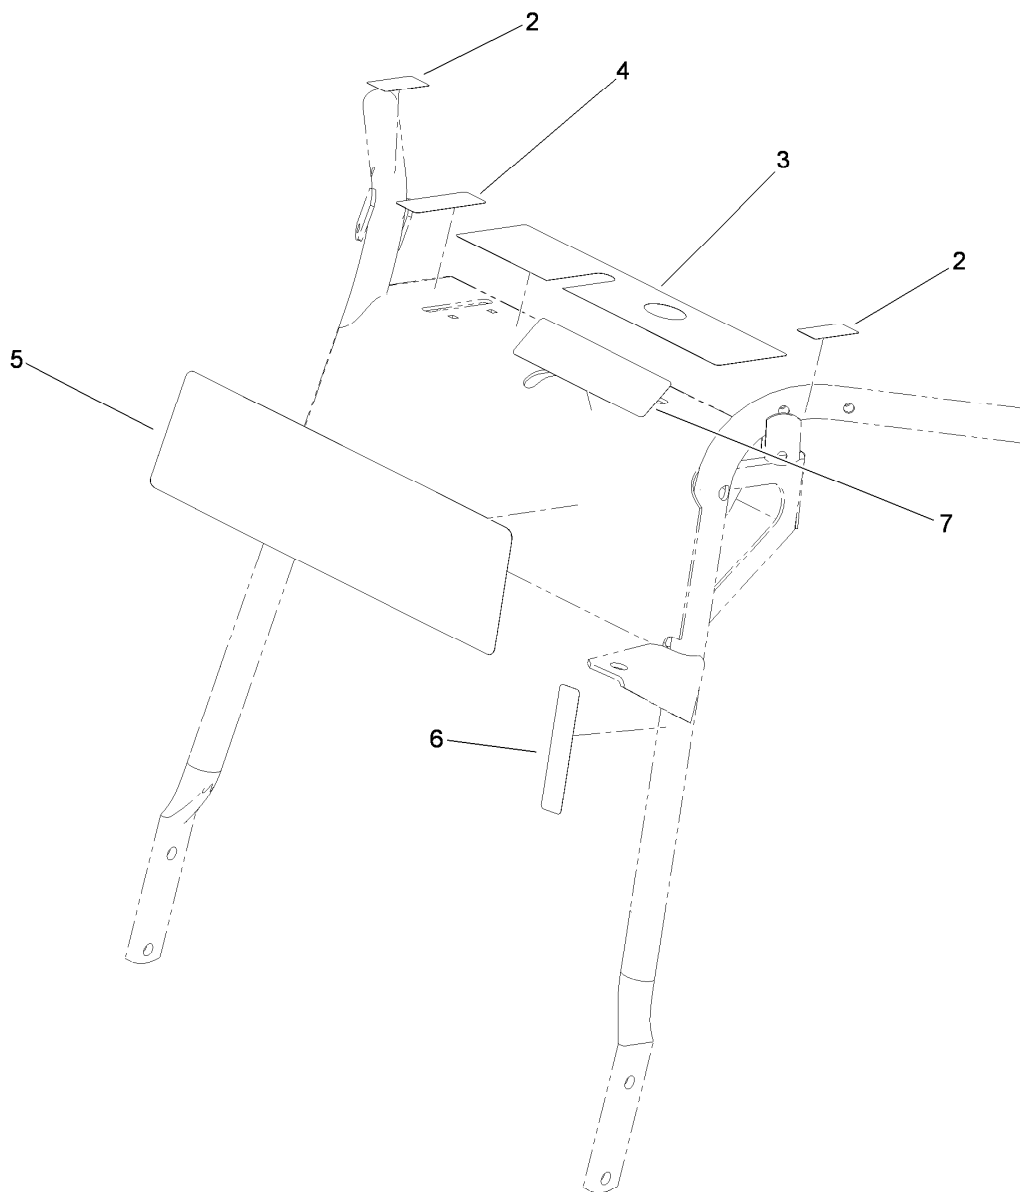


Handle Assembly No. 119-6538

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	105-4110	2	Decal-Lock, Neutral
3	106-2738	1	Decal-Warning
4	106-2733	1	Decal-Throttle
5	110-6917	1	Decal
6	95-5537	1	Decal-Engage, Deck
7	106-2743	1	Decal-Caution, Brake

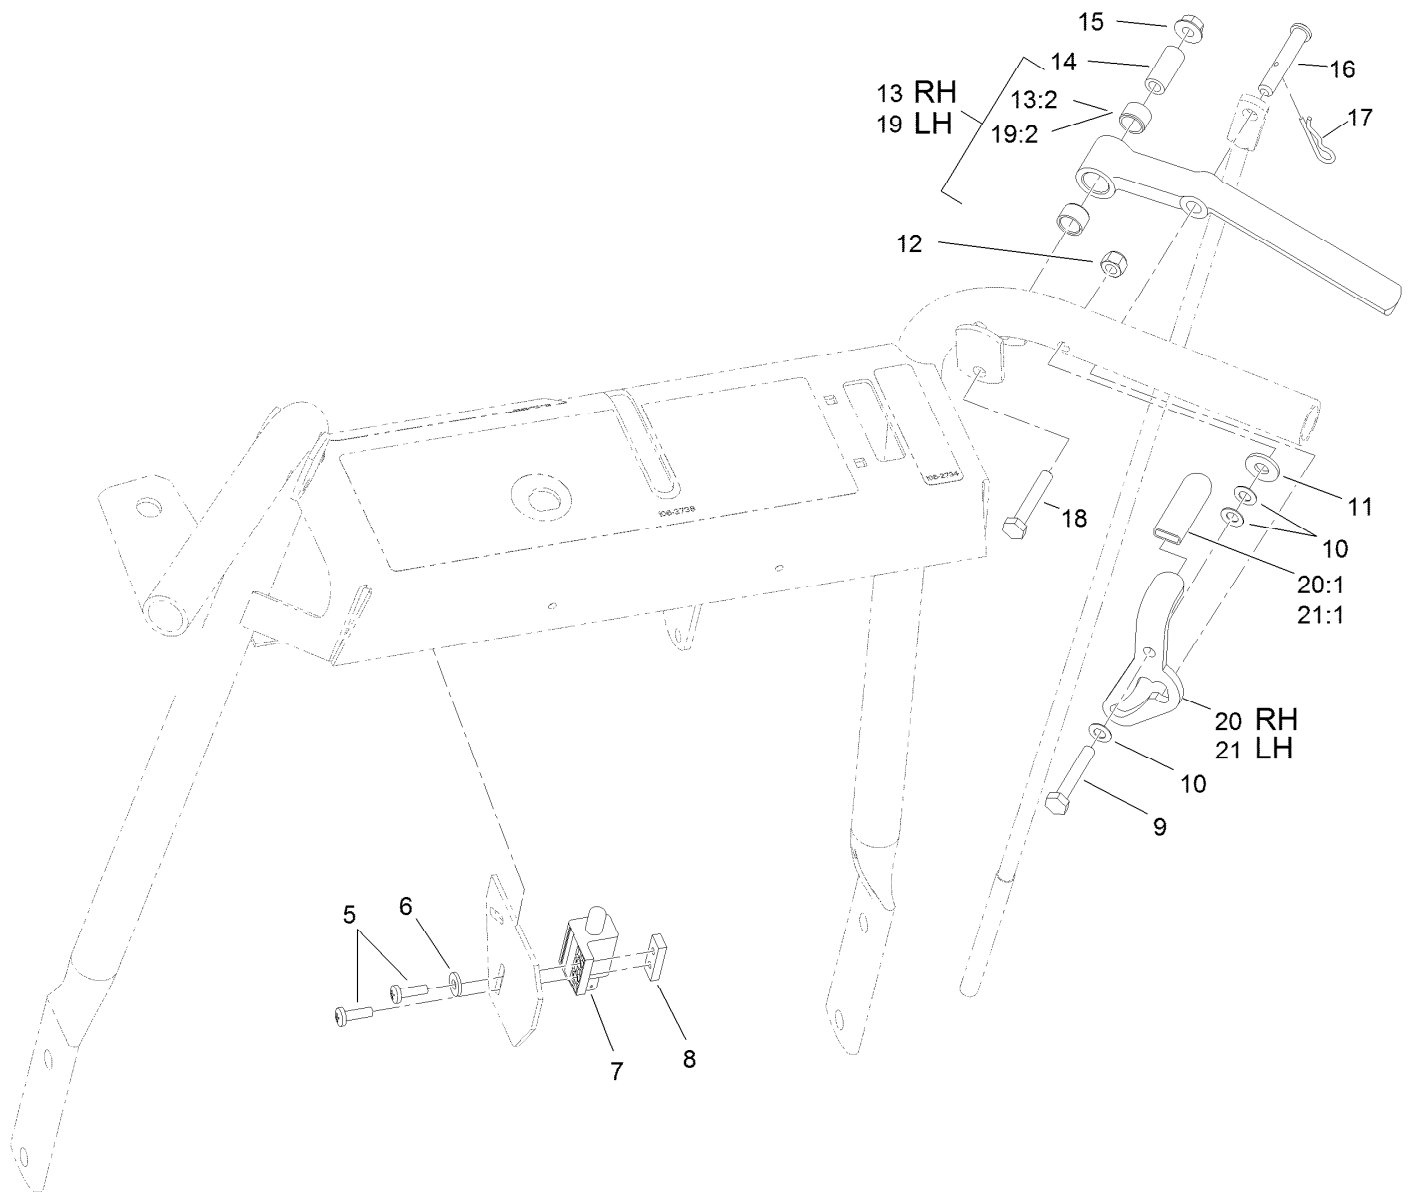

Drive Lever Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
5	3290-500	2	Screw-PPH	15	32128-33	2	Nut-HF
6	3256-14	1	Washer-Flat	16	1-613055	2	Pin-Clevis
7	1-513051	1	Switch-Open, Normally	17	1-806003	2	Pin-Cotter, Hair
8	1-633181	1	Plate-Tapped	18	321-9	2	Screw-HH
9	321-10	2	Screw-HH	19	103-0218	1	LH Drive Lever ASM
10	1-303435	6	Washer-Spring	19:2	1-413152	2	Bushing-Sleeve
11	3256-2	2	Washer-Flat	20	1-612168	1	RH Latch And Grip ASM
12	3296-42	2	Nut-Lock, NI	20:1	1-303019	1	Grip-Latch
13	103-0219	1	RH Drive Lever ASM	21	1-612167	1	LH Latch Grip ASM
13:2	1-413152	2	Bushing-Sleeve	21:1	1-303019	1	Grip-Latch
14	1-603749	2	Bushing-Lever, Drive				

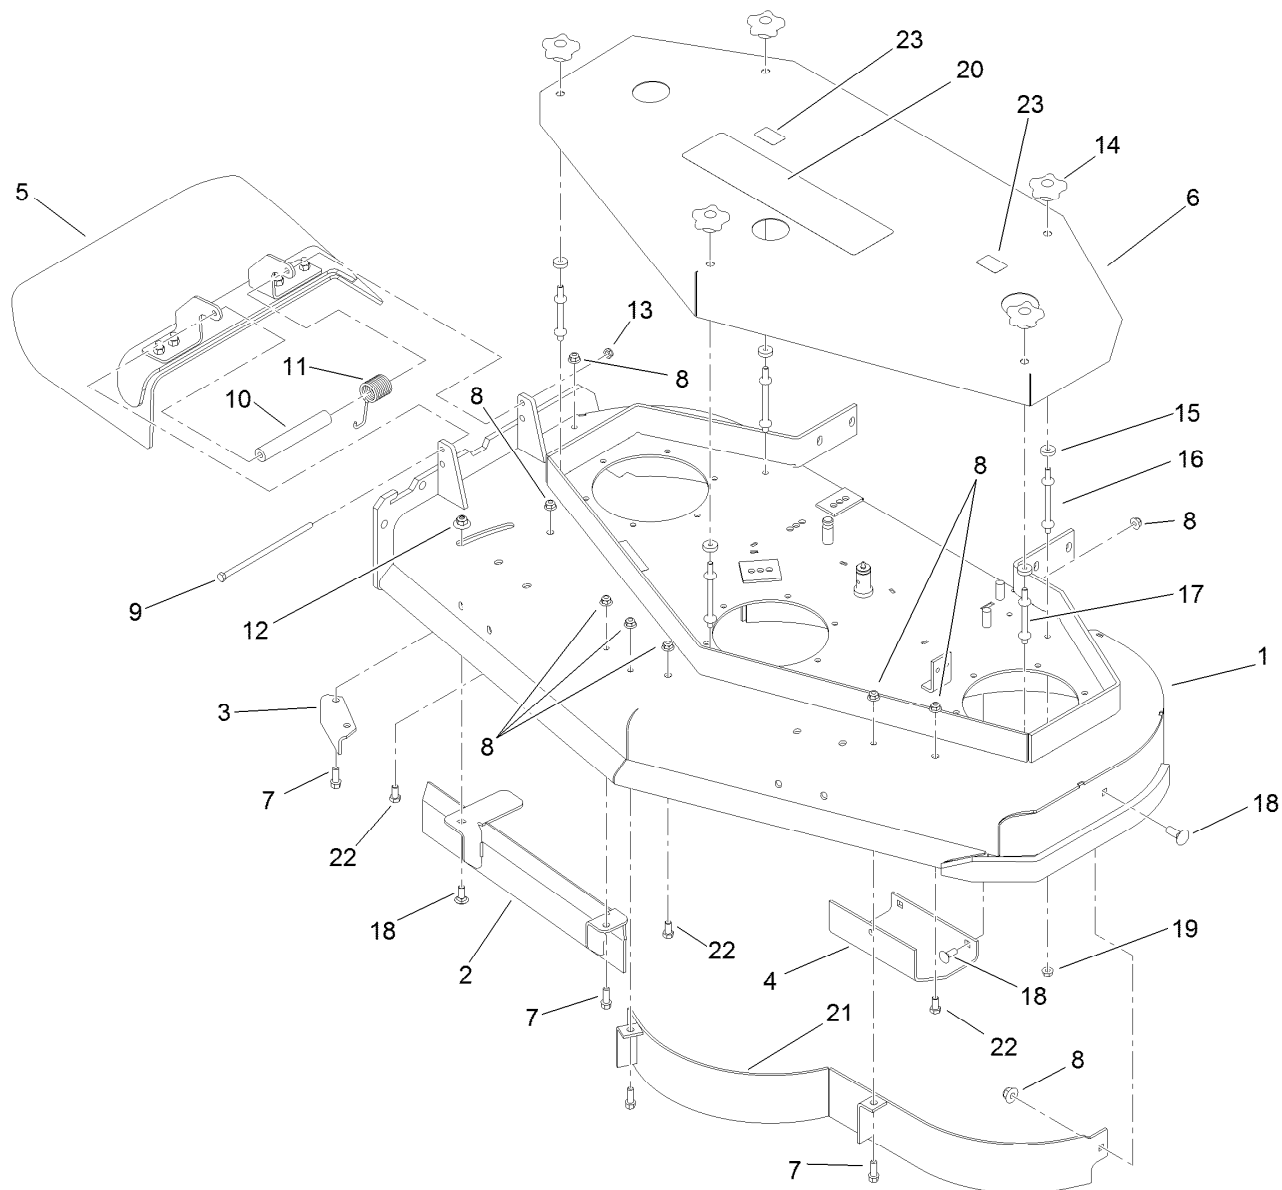

Deck Assembly

Ref.	Part Number	Qty.	Description
1	110-4909	1	Deck ASM
2	121-1775-03	1	Baffle
3	110-0744-01	1	Baffle-Discharge
4	107-3166-01	1	Skid
5	110-0758	1	Deflector ASM
6	110-2119-01	1	Cover
7	92-1624	5	Screw-HWH
8	104-8301	12	Nut-Flange, NI
9	322-50	1	Screw-HH
10	105-4622	1	Spacer
11	108-4052	1	Spring-Torsion
12	109-6658	1	Nut-Flange, NI


Ref.	Part Number	Qty.	Description
13	3296-47	1	Nut-Lock, NI
14	106-4161	5	Knob-Handle
15	1-323417	5	Washer
16	1-303536	3	Stud-Shield, Belt (Long)
17	1-303537	2	Stud-Shield, Belt (Short)
18	3231-2	5	Bolt-CARR
19	32128-20	5	Nut-HF
20	112-9712	1	Decal
21	110-0735-03	1	Baffle
22	323-4	3	Screw-HH
23	103-2076	2	Decal-Caution

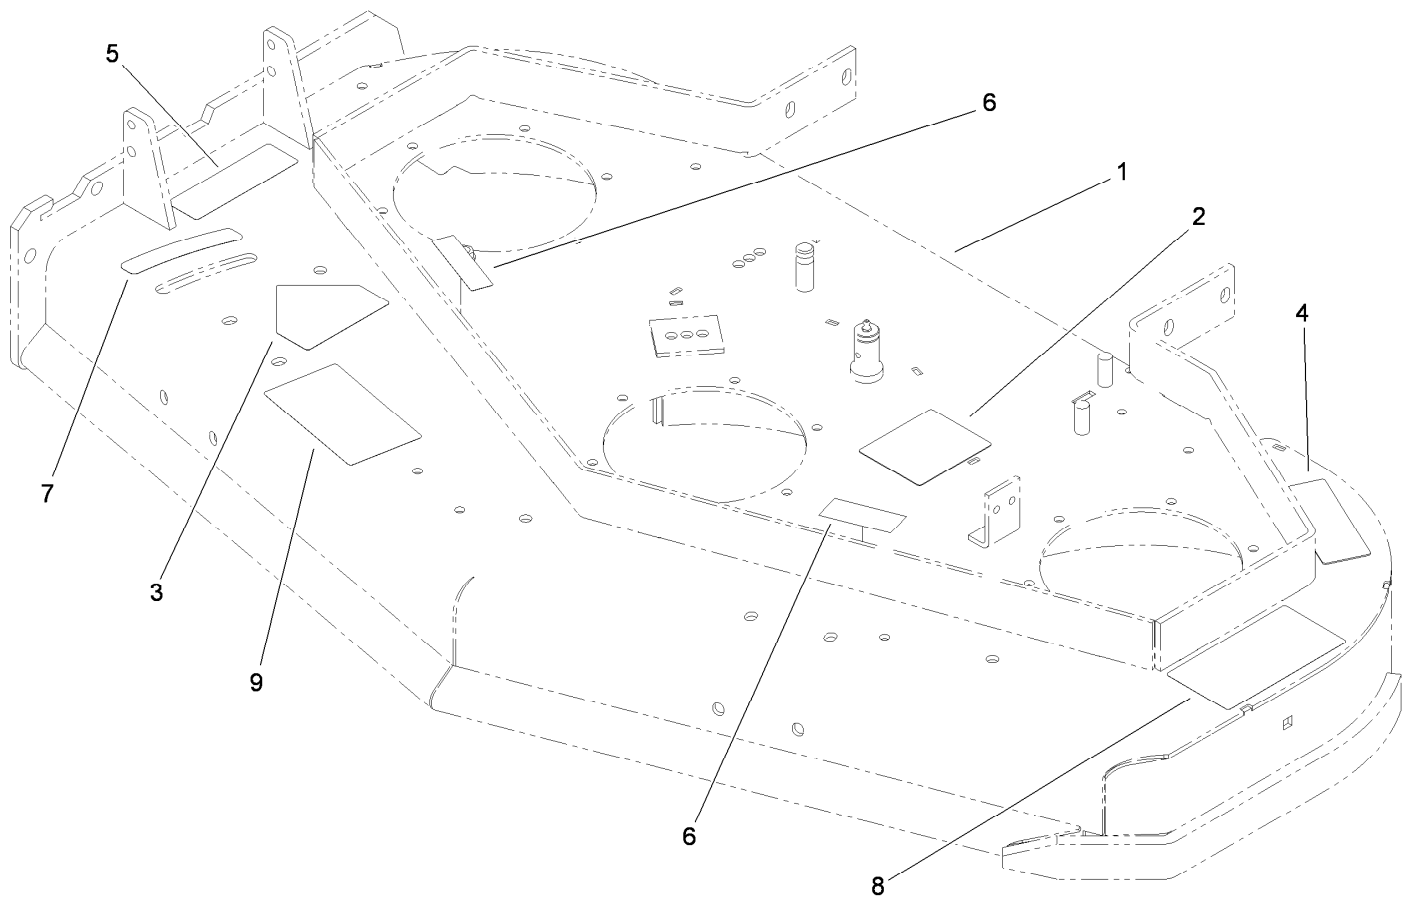

Deck Decal Assembly No. 110-4909


Ref.	Part Number	Qty.	Description
1		1	48 Inch Deck ASM ●
2	99-3943	1	Decal-Routing, Belt
3	1-403005	1	Decal-Danger
4	98-5130	1	Decal-Torque, Bolt
5	104-8569	1	Decal-Warning
6	98-5954	2	Decal-Cover, Missing
7	110-2067	1	Decal-Setting, Baffle
8	66-1340	1	Decal-Danger, Thrown Object
9	110-2068	1	Decal-Adjustment, Baffle

● Not serviced separately

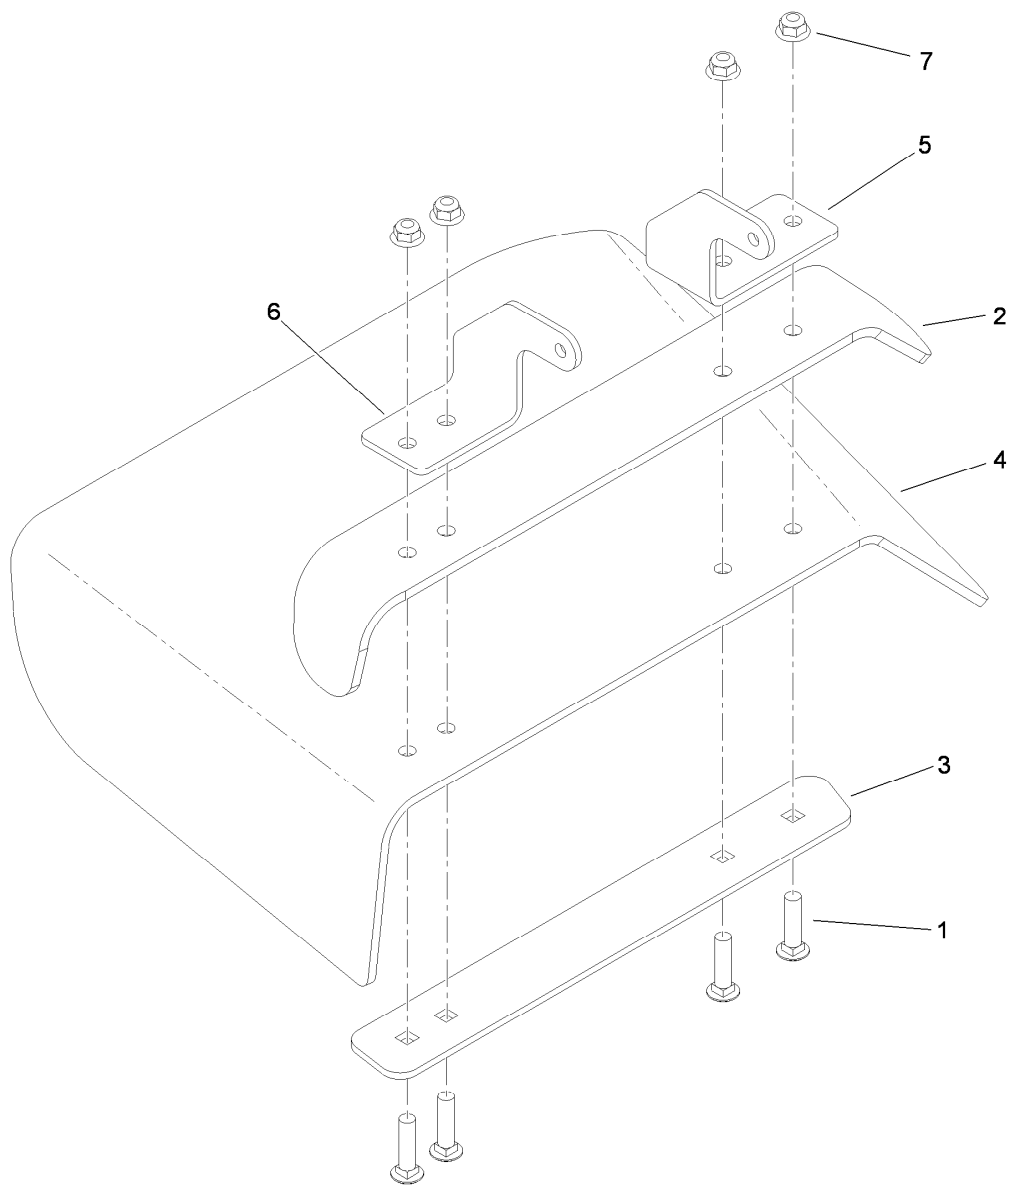

Deflector Assembly No. 110-0758


Ref.	Part Number	Qty.	Description
1	3231-4	4	Screw-CARR
2	106-3246-01	1	Deflector
3	106-3248-03	1	Strap-Discharge
4	110-0759	1	Deflector-Rubber
5	107-4197-01	1	Bracket-Hinge, Rear
6	107-4196-01	1	Bracket-Hinge, Front
7	104-8301	4	Nut-Flange, NI

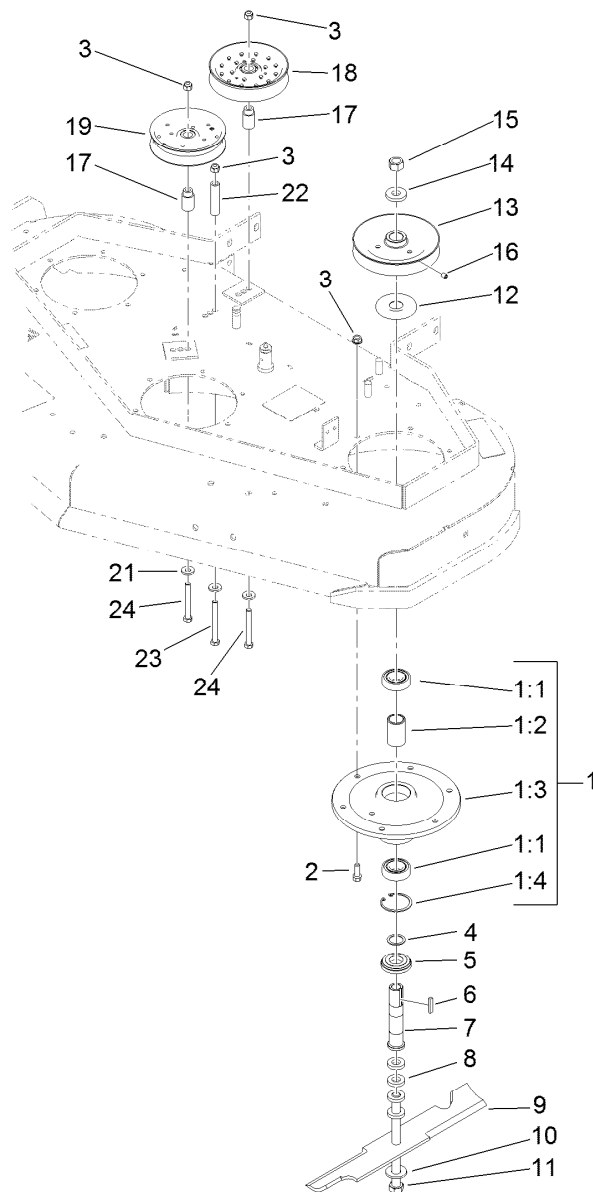

Sheave, Spindle and Blade Assembly

Ref.	Part Number	Qty.	Description
1	108-6697	3	Spindle Housing ASM
1:1	119-7857	2	Bearing-Ball, 1 Inch
1:2	110-2116	1	Spacer-Bearing
1:3	108-6694	1	Housing-Spindle
1:4	32120-8	1	Ring-Snap
2	92-1624	18	Screw-HWH
3	104-8301	21	Nut-Flange, NI
4	110-4888	3	Washer-Spacer
5	103-2535	3	Spacer-Guard, Bottom
6	1-807267	3	Key
7	1-323529	3	Tube-Spindle, Short
8	1-323539	12	Spacer
9	107-3192-03	3	Blade-16.5 Inch (High Flow)
10	1-513208	3	Washer-Spring


Ref.	Part Number	Qty.	Description
11	1-800861	3	Screw-Cap, HH
12	103-1330	3	Guard-Bearing, Top
13	1-403183	3	Sheave
14	1-323339	3	Washer-Retainer, Sheave
15	3219-6	3	Nut-Hex
16	3246-18	3	Setscrew
17	1-413113	2	Bushing-Idler
18	116-4665	1	Idler-Pulley, Flat
19	1-613098	1	Pulley-Idler
21	98-5975	3	Washer-Belleville
22	1-403188	1	Spacer
23	323-15	1	Screw-HH
24	323-14	2	Screw-HH

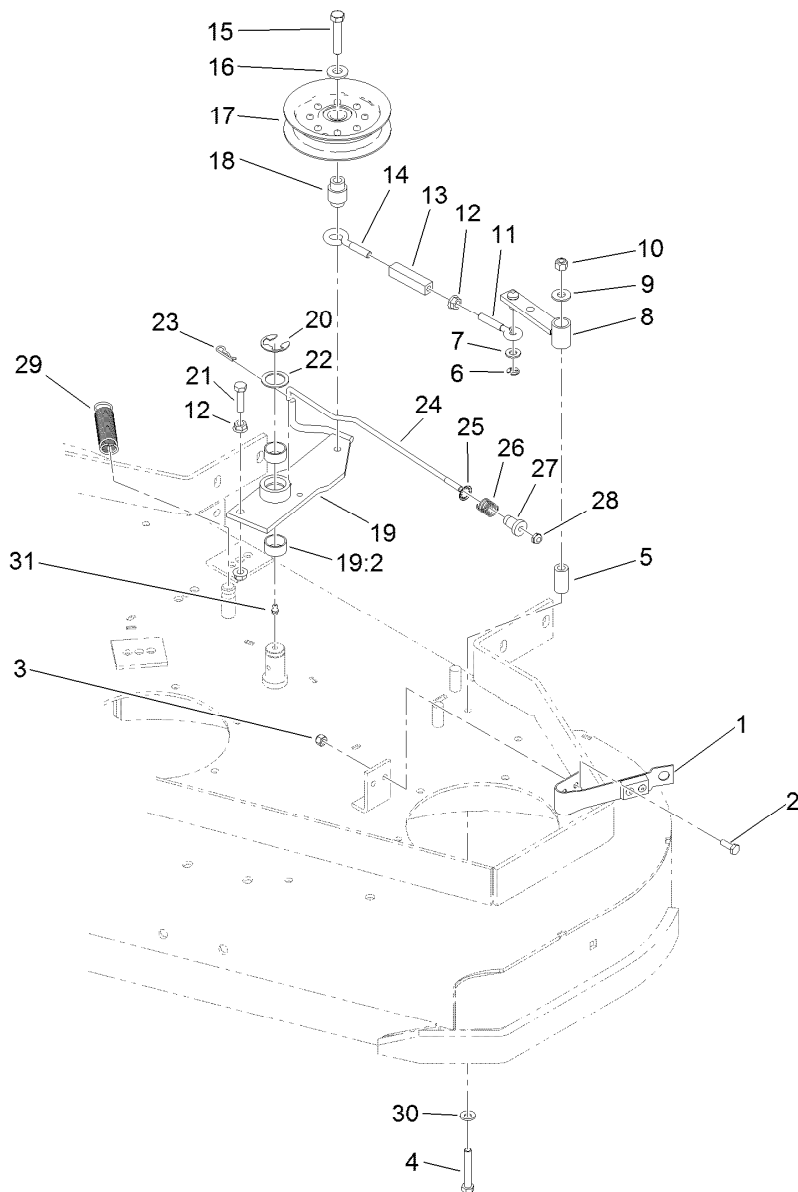

Idler Assembly

Ref.	Part Number	Qty.	Description
1	1-324372	1	Pad And Spring ASM
2	321-4	2	Screw-HH
3	3296-42	2	Nut-Lock, NI
4	322-10	1	Screw-HH
5	1-403179	1	Tube-Pivot
6	32120-35	1	Ring-Retaining, EXT
7	3256-23	1	Washer-Flat
8	1-322235	1	Arm-Assist
9	3256-3	1	Washer-Flat
10	3296-29	1	Nut-Lock, NI
11	1-303238	1	Eyebolt-Thread, RH
12	32128-20	3	Nut-HF
13	1-303236	1	Body-Turnbuckle
14	1-303348	1	Eyebolt-Thread, LH
15	702809	1	Screw-HH
16	98-5975	1	Washer-Belleville
17	116-3626	1	Pulley-Idler

Ref.	Part Number	Qty.	Description
18	1-303434	1	Bushing-Engagement
19	103-3600	1	Idler Arm ASM
19:2	1-323729	2	Sleeve-Bearing
20	32151-103	1	Ring-Retaining, EXT
21	116-3515	1	Screw-HH, Special
22	1-303352	1	Washer-Spindle
23	1-806003	1	Pin-Cotter, Hair
24	110-4932	1	Rod-Brake
25	1-323748	1	Ring-Push On
26	1-323747	1	Spring-Compression
27	1-323746	1	Spacer-Flanged
28	3296-56	1	Nut-Lock, NI
29	1-323071	1	Spring-Extension
30	1-303334	1	Washer-Spring
31	302-40	1	Fitting-Grease

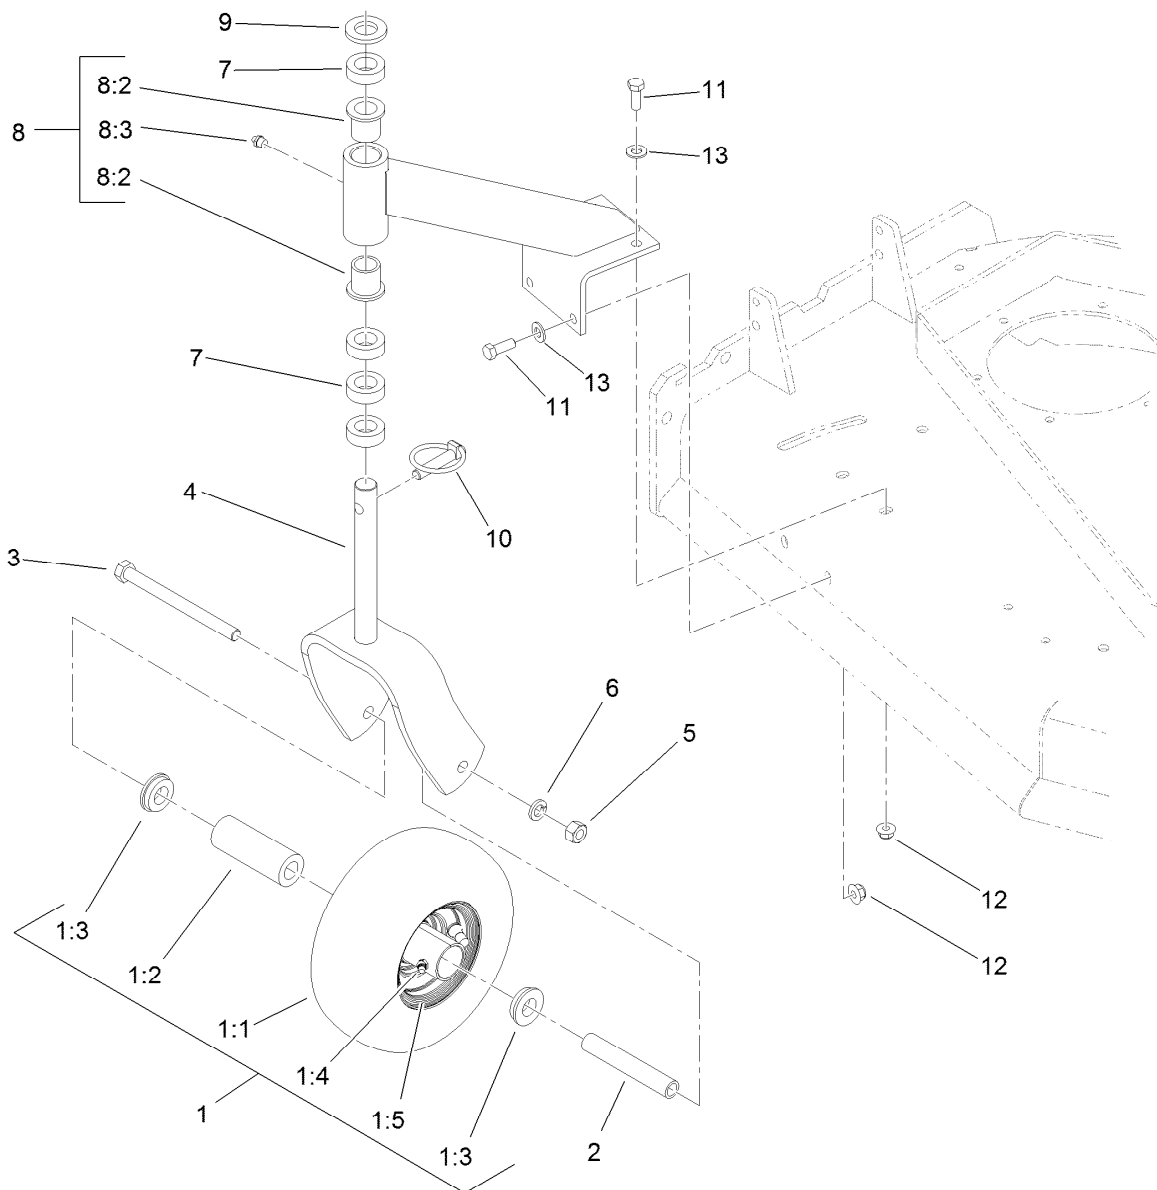

Caster Assembly

Ref.	Part Number	Qty.	Description
1	110-5023	2	Wheel And Tire ASM
1:1		1	Tire ●
1:2	1-513809	1	Bearing
1:3	1-513810	2	Bushing
1:4	302-61	1	Fitting-Grease
1:5		1	Wheel ●
2	1-513547	2	Spacer
3	325-20	2	Screw-HH
4	1-322145-01	2	Fork
5	3217-9	2	Nut-HH

Ref.	Part Number	Qty.	Description
6	3253-7	2	Washer-Lock
7	1-303314	8	Spacer-Caster
8	110-2130	2	Support ASM
8:2	1-303514	2	Bearing-Flanged
8:3	302-52	1	Fitting-Grease
9	1-513338	2	Washer-Flat
10	1-809020	2	Pin
11	323-6	8	Screw-HH
12	104-8301	8	Nut-Flange, NI
13	3256-24	8	Washer-Flat

● Not serviced separately

Attachments and Accessories

For 30938 Commercial Walk-Behind Mower Fixed Deck, Pistol Grip, Hydro Drive with 48in TURBO FORCE Cutting Unit

Product Name	Model/Part
Blade-Low Flow, 16.5in.....	107-3193-03
Blade-Mid Flow, 16.5in	107-3194-03
Blade-Atomic, 16.5in	107-3195-03
Blade-Recycling, 16.5in.....	107-3196-03
Bagging Enhancement Kit	108-4091
Blade-Hi Flow, 16.5in (6 Pack).....	110-0414
Blade-Lo Flow, 16.5in (6 Pack)	110-0415
Blade-Recycler, 16.5in (6 Pack).....	110-0416
Blade-Atomic, 16.5in (6 Pack)	110-0417
Blade-Mid Flow, 16.5in (6 Pack)	110-0418
48in Recycler Kit.....	110-2060
Operator Controlled Discharge Chute Kit.....	115-4195
Soft Bag (3 Bushel).....	30104
Sulky.....	30109

Notes:



Count on it.