



Count on it.

Parts Catalog

20in Turf Seeder

Model No. 23510—Serial No. 312000001 and Up

Model No. 33510—Serial No. 312000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquefied Petroleum Gas

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head


STD: standard

TAP: self tapping

TTH: torx truss head

Contents

| | |
|--|----|
| Engine and Frame Assembly | 4 |
| Main Frame Assembly No. 121-6196 | 5 |
| Handle Assembly | 6 |
| Cutting Wheel Assembly | 8 |
| Shaft Assembly No. 126-0034 | 9 |
| Seed Gate Assembly | 10 |
| Belt Drive Assembly | 12 |
| Transmission Assembly | 14 |

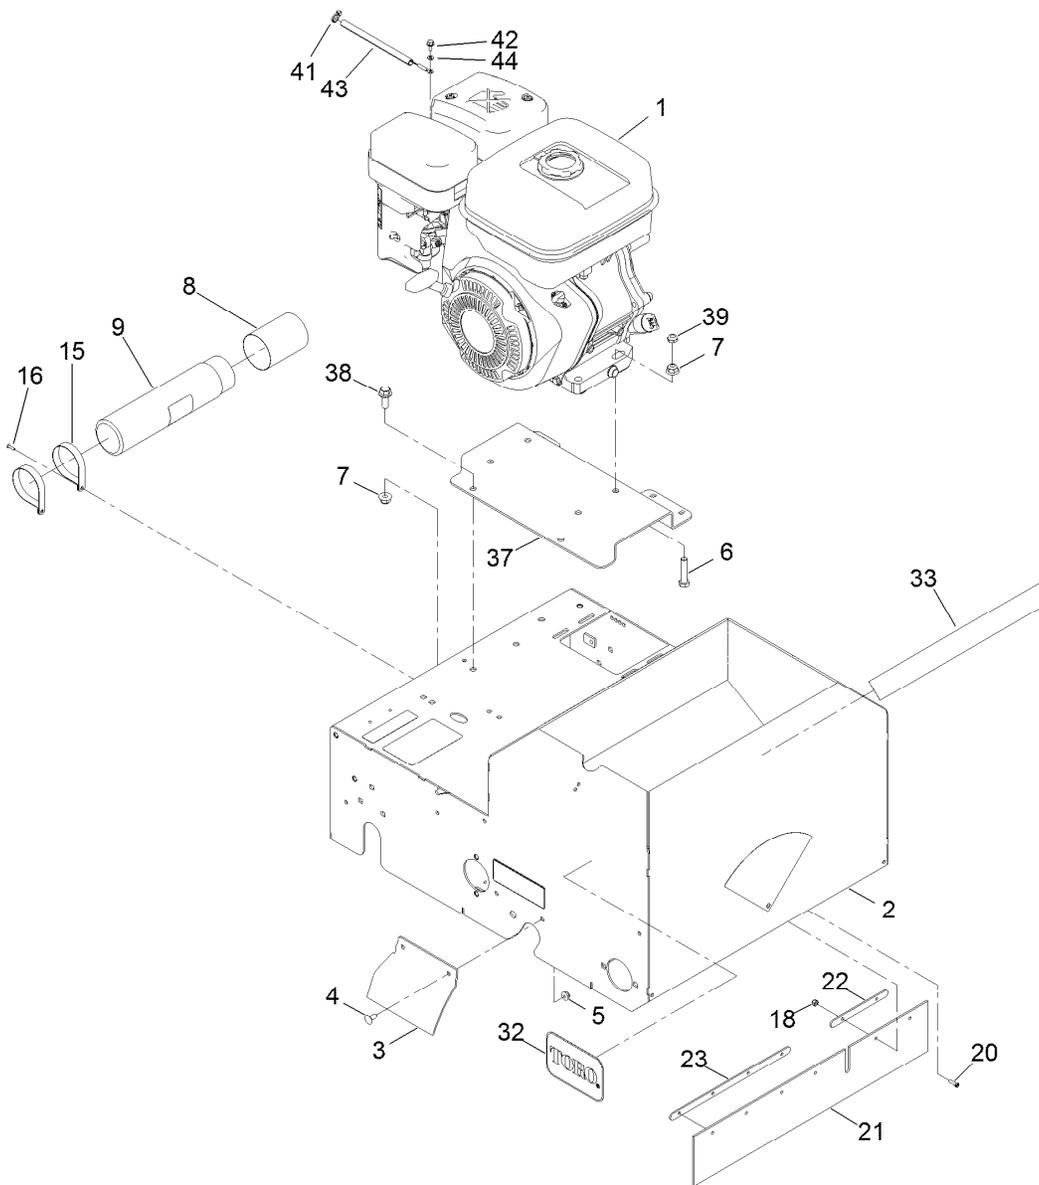


Engine and Frame Assembly

| Ref. | Part Number | Qty. | Description | Ref. | Part Number | Qty. | Description |
|------|-------------|------|------------------------|------|-------------|------|---------------------|
| 1 | | 1 | Engine-Subaru, Ex27 ■● | 21 | 121-1990 | 1 | Guard-Dust |
| 2 | 121-6196 | 1 | Frame ASM | 22 | 121-1991 | 1 | Plate-Retainer |
| 3 | 121-1896-01 | 1 | Guard-RH | 23 | 121-1992 | 1 | Plate-Retainer |
| 4 | 3229-11 | 2 | Screw-CARR | 32 | 67-1300 | 2 | Decal |
| 5 | 104-7201 | 2 | Nut-HF | 33 | 121-6177 | 1 | Decal |
| 6 | 323-9 | 4 | Screw-HH | 37 | 116-9524-01 | 1 | Plate-Engine |
| 7 | 104-8301 | 7 | Nut-Flange, NI | 38 | 3234-42 | 3 | Screw-HHF |
| 8 | 104-7048 | 1 | Cap-Housing | 39 | 3296-59 | 1 | Nut-Lock, NI |
| 9 | 104-7050 | 1 | Tube-Manual | 41 | 1-303287 | 1 | Tie-Cable |
| 15 | 2412-120 | 2 | Clamp-R | 42 | 120-4579 | 1 | Screw-Hfh |
| 16 | 3269-17 | 2 | Rivet-Pop | 43 | 126-1000 | 1 | Rfi-Sheathing |
| 18 | 3296-1 | 6 | Nut-Lock | 44 | 43-5920 | 1 | Washer-Lock, Spring |
| 20 | 3290-392 | 6 | Screw-SHH | | | | |

● Not serviced separately


■ Obtain parts from www.subarupower.com

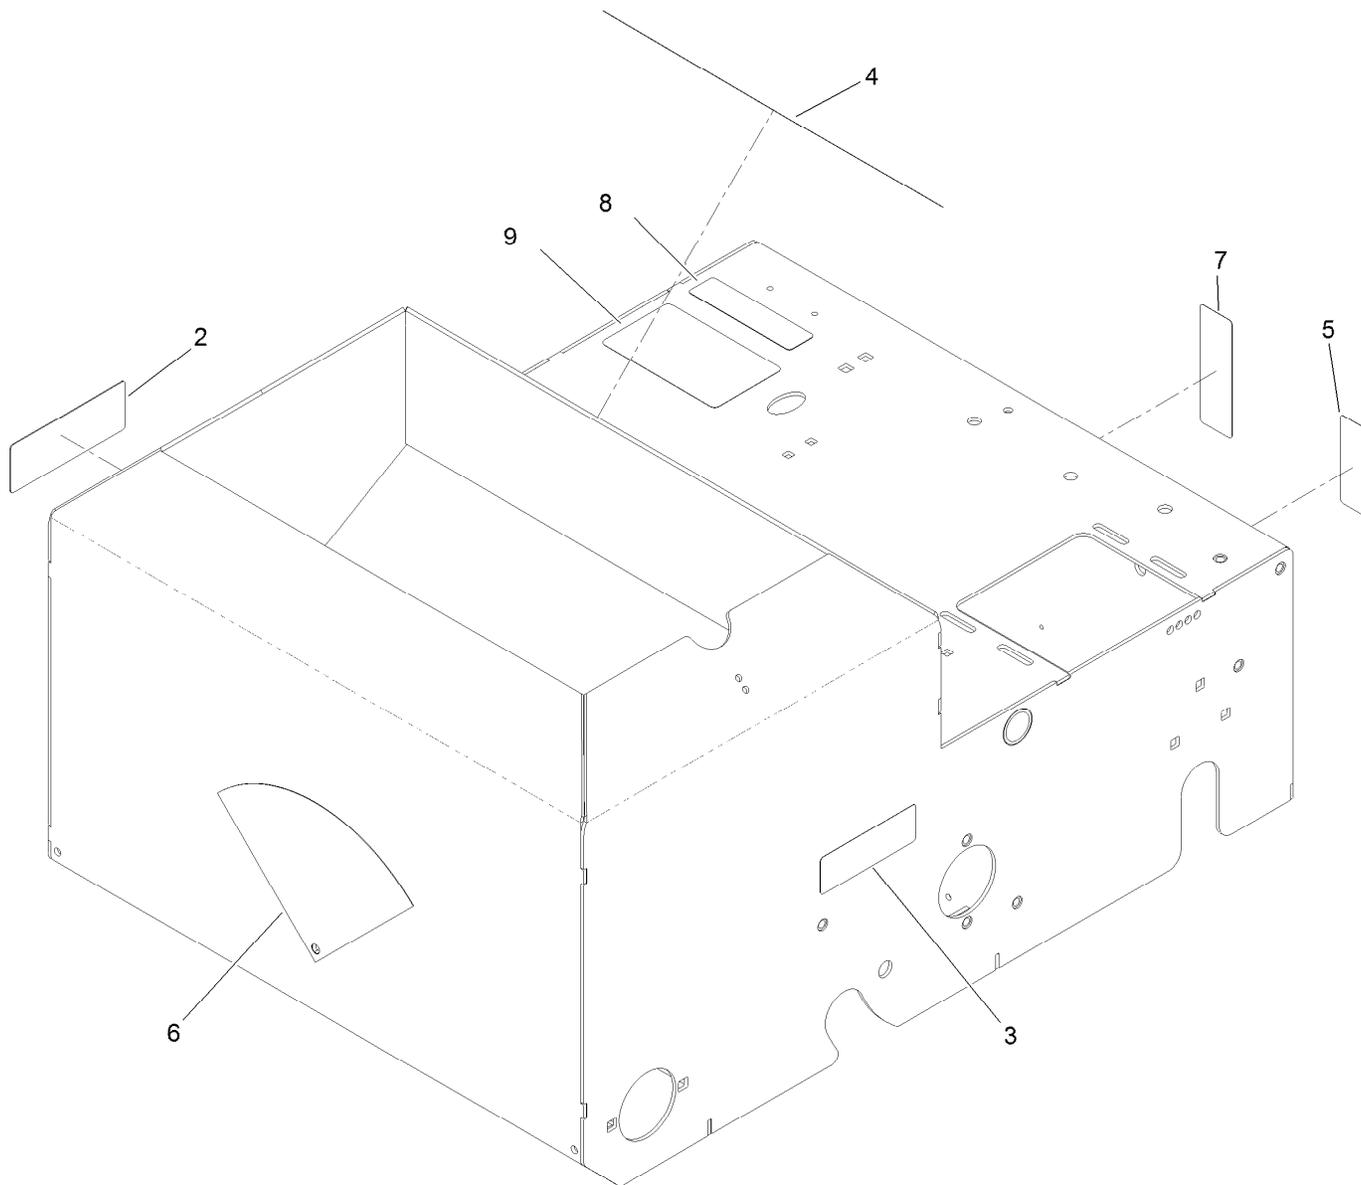

Main Frame Assembly No. 121-6196

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------------|
| 2 | 93-7321 | 1 | Decal-Danger |
| 3 | 117-4979 | 1 | Decal-Warning, Shields |
| 4 | 121-2011 | 1 | Decal-Warning |
| 5 | 115-9625 | 1 | Decal |
| 6 | 116-8535 | 1 | Decal-Flow, Seed |
| 7 | 121-6203 | 1 | Decal-Bypass |
| 8 | 117-2718 | 1 | Decal-Arrester, Spark |
| 9 | 126-0296 | 1 | Decal-Service Aid Seeder |


Handle Assembly

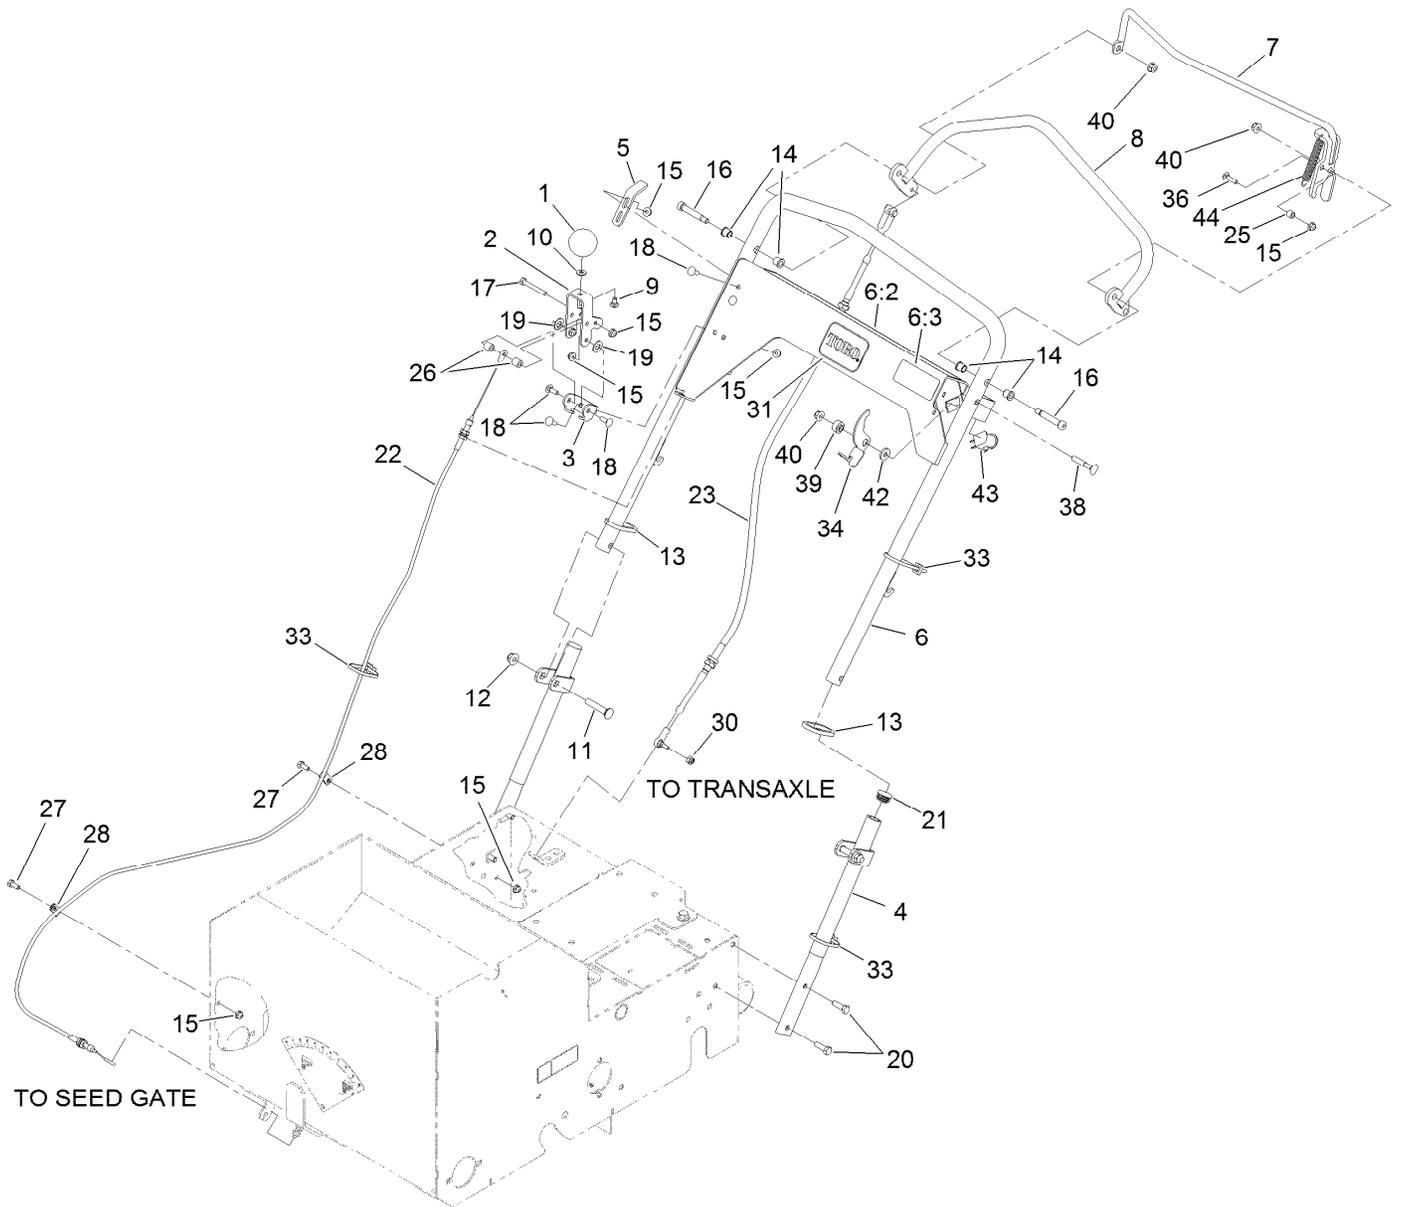

Handle Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------------------|-------------|--------------------|-------------|----------------------|
| 1 | 121-1877 | 1 | Knob-Rate, Flow | 19 | 48-9220 | 2 | Washer |
| 2 | 121-1878 | 1 | Lever-Adjust, Flow | 20 | 322-5 | 4 | Screw-HH |
| 3 | 121-1879 | 1 | Bracket-Adjust, Flow | 21 | 121-4870 | 2 | Plug |
| 4 | 121-1893-03 | 2 | Handle-Lower | 22 | 126-0042 | 1 | Cable-Flow, Seed |
| 5 | 121-1928 | 1 | Bracket-Adjust, Drive | 23 | 116-8252 | 1 | Cable-Push Pull |
| 6 | 116-9735 | 1 | Handle | 25 | 66-8010 | 1 | Spacer-Hub, Impeller |
| 6:2 | 116-8648 | 1 | Decal-Control Panel, Seeder | 26 | 22-7810 | 2 | Spacer |
| 6:3 | 116-8536 | 1 | Decal-Safety Latch | 27 | 321-3 | 2 | Screw-HH |
| 7 | 116-9738-03 | 1 | Bail | 28 | 2412-149 | 2 | Clamp-Hose |
| 8 | 121-1948-03 | 1 | Handle-Drive | 30 | 3296-3 | 1 | Nut-Lock |
| 9 | 3229-10 | 1 | Screw-CARR ● | 31 | 70-2200 | 1 | Decal |
| 10 | 3256-22 | 1 | Washer-Flat | 33 | 3290-378 | 3 | Tie-Cable |
| 11 | 3231-6 | 2 | Screw-CARR | 34 | 126-0205 | 1 | Latch-Bail |
| 12 | 104-8301 | 2 | Nut-Flange, NI | 36 | 3229-2 | 1 | Screw-CARR |
| 13 | 121-6202 | 2 | Ring-Handle Lock | 38 | 112-8876 | 1 | Screw-Handle |
| 14 | 103-9928 | 4 | Bearing | 39 | 116-2690 | 1 | Bushing-Stepped |
| 15 | 104-7201 | 10 | Nut-HF | 40 | 104-8300 | 3 | Nut-Flange, NI |
| 16 | 126-0277 | 2 | Screw-Shoulder | 42 | 88-7200 | 1 | Washer-Flat |
| 17 | 321-11 | 1 | Screw-HH | 43 | 82-2190 | 1 | Switch-Bail |
| 18 | 3229-1 | 6 | Bolt-CARR | 44 | 95-3805 | 1 | Spring |


● Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

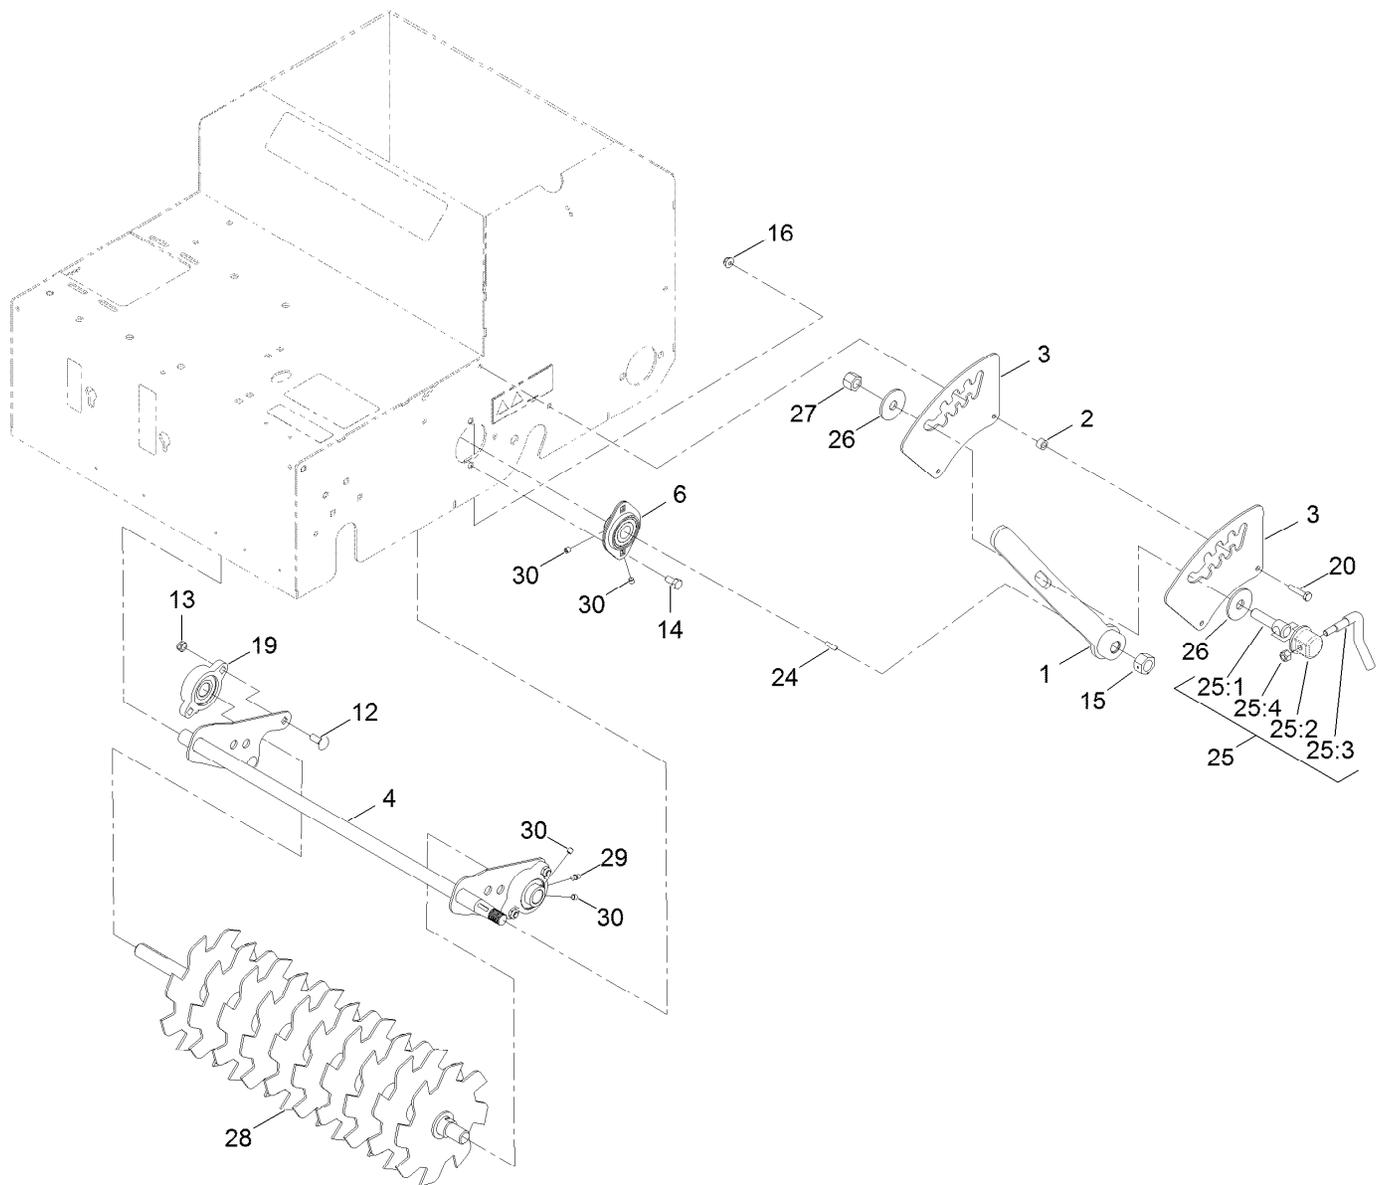

Cutting Wheel Assembly

| Ref. | Part Number | Qty. | Description | Ref. | Part Number | Qty. | Description |
|------|-------------|------|----------------|------|-------------|------|------------------|
| 1 | 116-9932-03 | 1 | Handle-Height | 24 | 3257-5 | 1 | Key-Woodruff |
| 2 | 98-4799 | 2 | Spacer | 25 | 107-1664 | 1 | Lever ASM |
| 3 | 116-9928 | 2 | Plate-Height | 25:1 | 106-3239 | 1 | Screw-Lock |
| 4 | 126-0010-03 | 1 | Pivot-Height | 25:2 | 107-1644 | 1 | Cap-Lock |
| 6 | 121-1961 | 2 | Bearing | 25:3 | 106-3241 | 1 | Lever-Lock |
| 12 | 3230-16 | 4 | Screw-CARR | 25:4 | 3296-29 | 1 | Nut-Lock, NI |
| 13 | 3296-47 | 4 | Nut-Lock, NI | 26 | 86-1990 | 2 | Washer |
| 14 | 322-2 | 4 | Screw-HH | 27 | 3296-23 | 1 | Nut-Lock, NI |
| 15 | 603164 | 1 | Nut-Blade | 28 | 126-0034 | 1 | Slicer Shaft ASM |
| 16 | 104-7201 | 2 | Nut-HF | 29 | 302-19 | 2 | Fitting-Grease ● |
| 19 | 116-9992 | 2 | Bearing-Flange | 30 | 3245-35 | 8 | Screw-Set, HSH ● |
| 20 | 321-8 | 2 | Screw-HH | | | | |


● Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

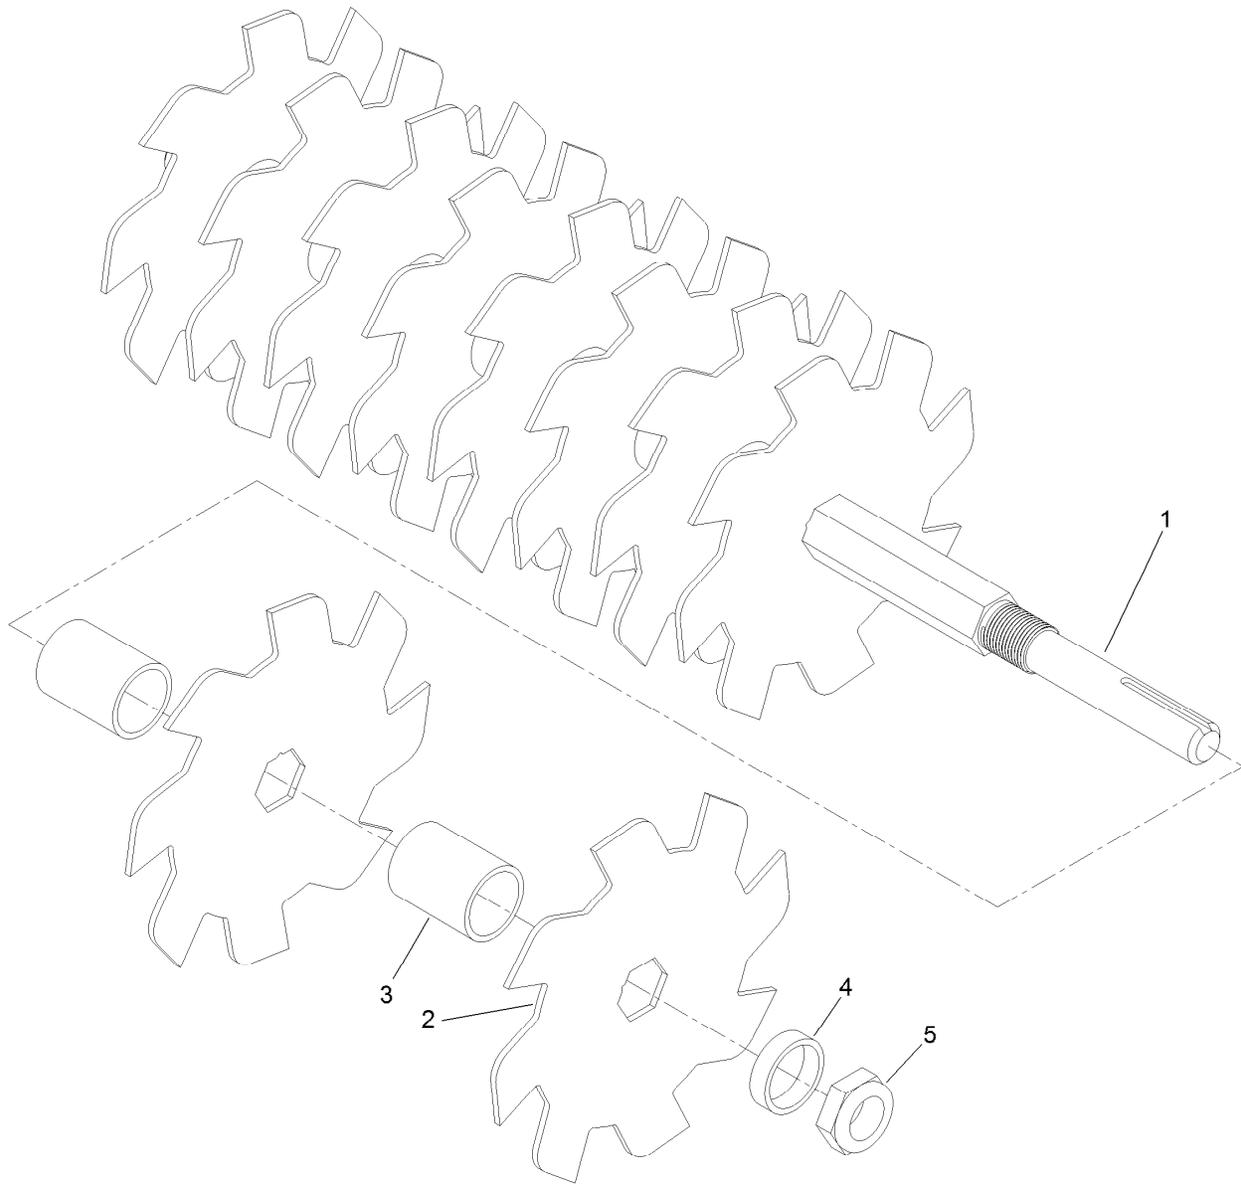

Shaft Assembly No. 126-0034

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|-----------------------|
| 1 | 126-0009 | 1 | Shaft-Slicer |
| 2 | 121-1931 | 10 | Blade-Cutting, Seeder |
| 3 | 126-0041 | 9 | Spacer-Blade |
| 4 | 126-0033 | 1 | Spacer |
| 5 | 3296-60 | 1 | Nut-Lock, NI |

Seed Gate Assembly

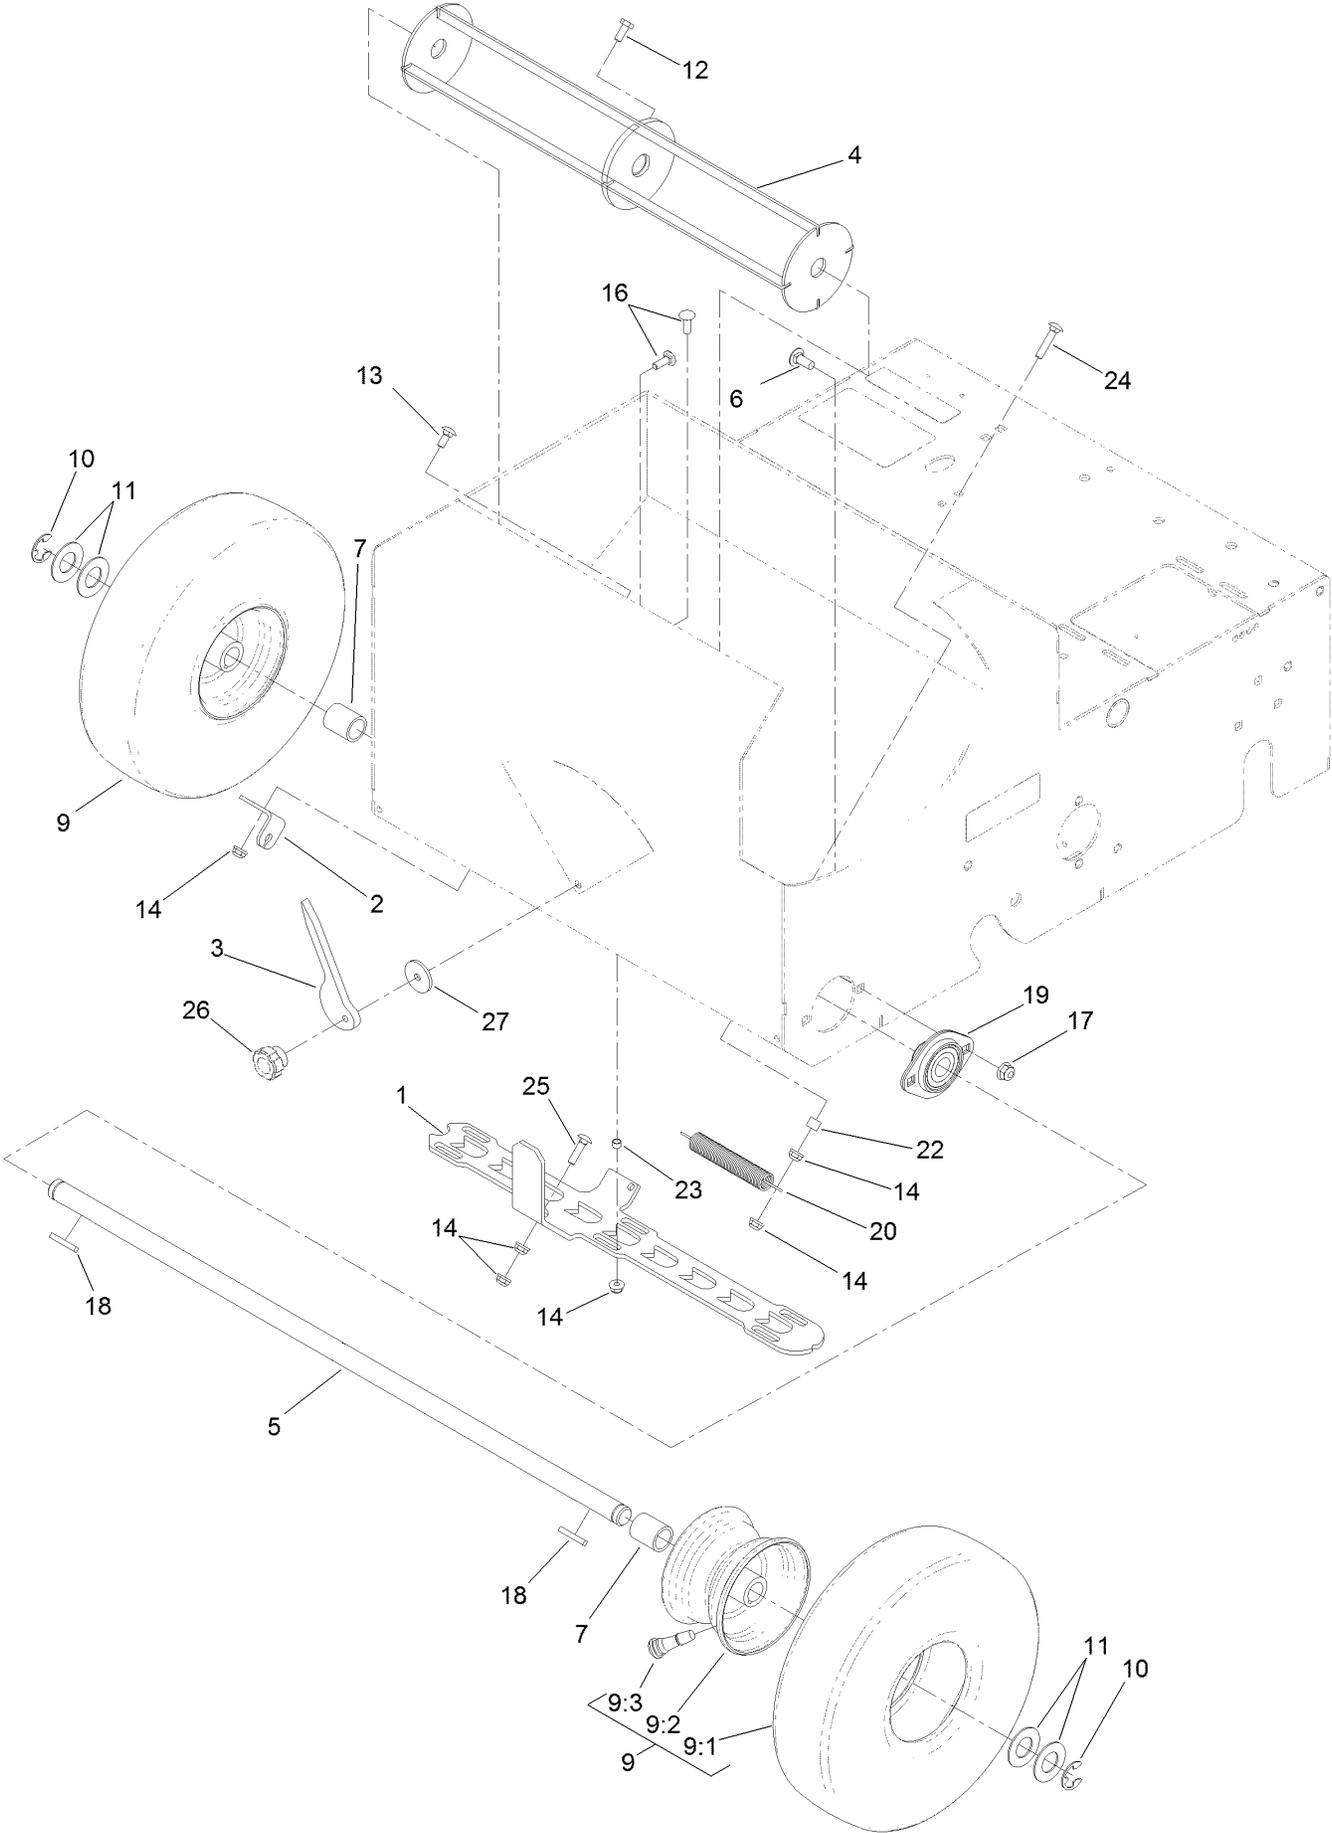


Seed Gate Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|----------------------------|
| 1 | 121-1905-03 | 1 | Gate-Seed | 13 | 3229-11 | 2 | Screw-CARR |
| 2 | 121-1907 | 1 | Bracket-Seed Flow | 14 | 104-7201 | 18 | Nut-HF |
| 3 | 121-1912 | 1 | Gauge-Seed Flow | 16 | 1-807512 | 7 | Bolt-CARR |
| 4 | 125-3782-03 | 1 | Mixer | 17 | 104-8300 | 4 | Nut-Flange, NI |
| 5 | 121-1929 | 1 | Axle-Front ■ | 18 | 92-0049 | 2 | Key-Square |
| 6 | 3230-23 | 4 | Screw-CARR | 19 | 121-1961 | 2 | Bearing |
| 7 | 105-3838 | 2 | Spacer | 20 | 121-2016 | 2 | Spring-Extension |
| 9 | 120-3550 | 2 | Wheel ASM | 22 | 66-8010 | 2 | Spacer-Hub, Impeller |
| 9:1 | 121-6081 | 1 | Tire | 23 | 121-2015 | 6 | Spacer |
| 9:2 | 121-6082 | 1 | Wheel-Rim | 24 | 3229-3 | 2 | Screw-CARR |
| 9:3 | 5108 | 1 | Valve | 25 | 32105-31 | 3 | Screw, Truss HD 1/4-20 X 1 |
| 10 | 32151-48 | 2 | E-Ring | 26 | 233-67 | 1 | Knob-Chute |
| 11 | 3256-39 | 4 | Washer-Flat | 27 | 103995 | 1 | Washer |
| 12 | 321-3 | 1 | Screw-HH ● | | | | |

- Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.
- Apply anti-seize compound to axle ends before installing tires.

Belt Drive Assembly

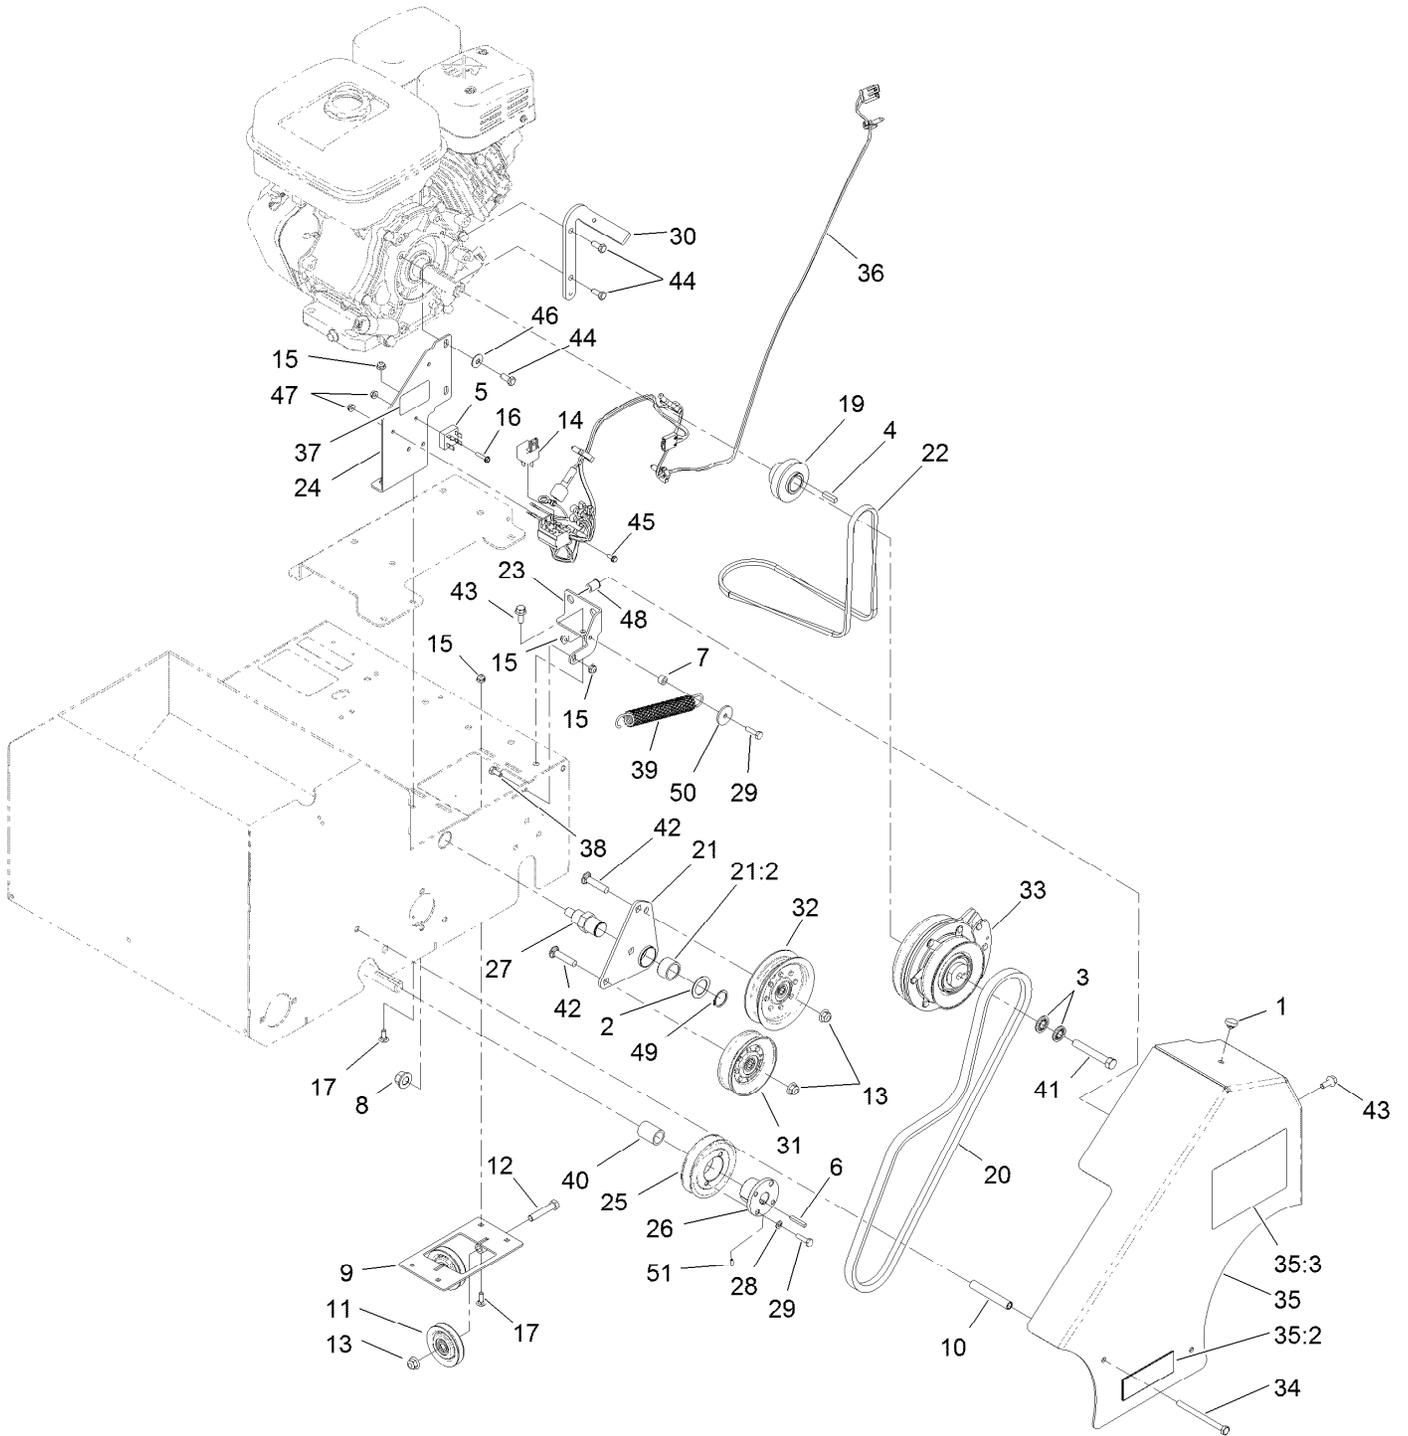


Belt Drive Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|------------------------|-------------|--------------------|-------------|-------------------------------|
| 1 | 1-513658 | 1 | Bumper | 28 | 3253-3 | 2 | Washer-Lock |
| 2 | 1-543436 | 1 | Washer-Spacer | 29 | 321-6 | 3 | Screw-HH |
| 3 | 1-603610 | 2 | Washer-Spring | 30 | 116-9551 | 1 | Stop-Clutch |
| 4 | 1-807259 | 1 | Key | 31 | 116-9623 | 1 | Pulley-Idler V |
| 5 | 37-7600 | 1 | Rectifier-Bridge | 32 | 116-9728 | 1 | Pulley-Idler Flat (4.06-Inch) |
| 6 | 92-0049 | 1 | Key-Square | 33 | 116-9852 | 1 | Clutch-Electric |
| 7 | 98-4799 | 1 | Spacer | 34 | 322-19 | 2 | Screw-HH |
| 8 | 99-5107 | 1 | Nut-Lock | 35 | 116-9925 | 1 | Belt Guard ASM |
| 9 | 121-1967-03 | 1 | Pulley-Tension | 35:2 | 93-7321 | 1 | Decal-Danger |
| 10 | 104-0502 | 2 | Spacer-Kickstand, Long | 35:3 | 116-8537 | 1 | Decal-Seed Graph |
| 11 | 121-1965 | 2 | Pulley-Idler | 36 | 116-9926 | 1 | Harness-Slicer/Seeder ■ |
| 12 | 323-10 | 2 | Screw-HH | 37 | 116-9985 | 1 | Decal-Bridge Rectifier |
| 13 | 104-8301 | 4 | Nut-Flange, NI | 38 | 321-3 | 1 | Screw-HH |
| 14 | 105-4145 | 1 | Relay | 39 | 126-0091 | 1 | Spring-Extension |
| 15 | 104-7201 | 8 | Nut-HF | 40 | 126-0108 | 1 | Spacer |
| 16 | 106-9169 | 1 | Screw-HWH | 41 | 3212-12 | 1 | Screw-HH ● |
| 17 | 3229-1 | 6 | Bolt-CARR | 42 | 3231-29 | 2 | Screw-CARR |
| 19 | 116-9471 | 1 | Pulley-Mule Drive | 43 | 3234-47 | 3 | Screw-HHF |
| 20 | 116-9518 | 1 | Belt-Seeder, Clutch | 44 | 3235-6 | 4 | Screw-HH |
| 21 | 116-9519 | 1 | Idler Arm ASM | 45 | 3290-321 | 1 | Screw-HWH |
| 21:2 | 116-9538 | 1 | Bushing | 46 | 3290-456 | 2 | Washer-Belleville |
| 22 | 116-9532 | 1 | Belt-Mule Drive | 47 | 32128-17 | 2 | Nut-Lock, Flange |
| 23 | 116-9533-01 | 1 | Bracket-Spring | 48 | 32148-7 | 2 | Nut-Insert |
| 24 | 116-9534-01 | 1 | Support-Engine | 49 | 32151-29 | 1 | Ring-Retaining |
| 25 | 121-2019 | 1 | Sheave-Taper Lock | 50 | 103995 | 1 | Washer |
| 26 | 121-2022 | 1 | Bushing-Taper Lock | 51 | 126-0284 | 1 | Screw-Set, Hs |
| 27 | 116-9539 | 1 | Pivot-Idler | | | | |

● Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

■ Use dielectric grease on all unsealed connectors and terminals only. Do not apply in sealed connectors.

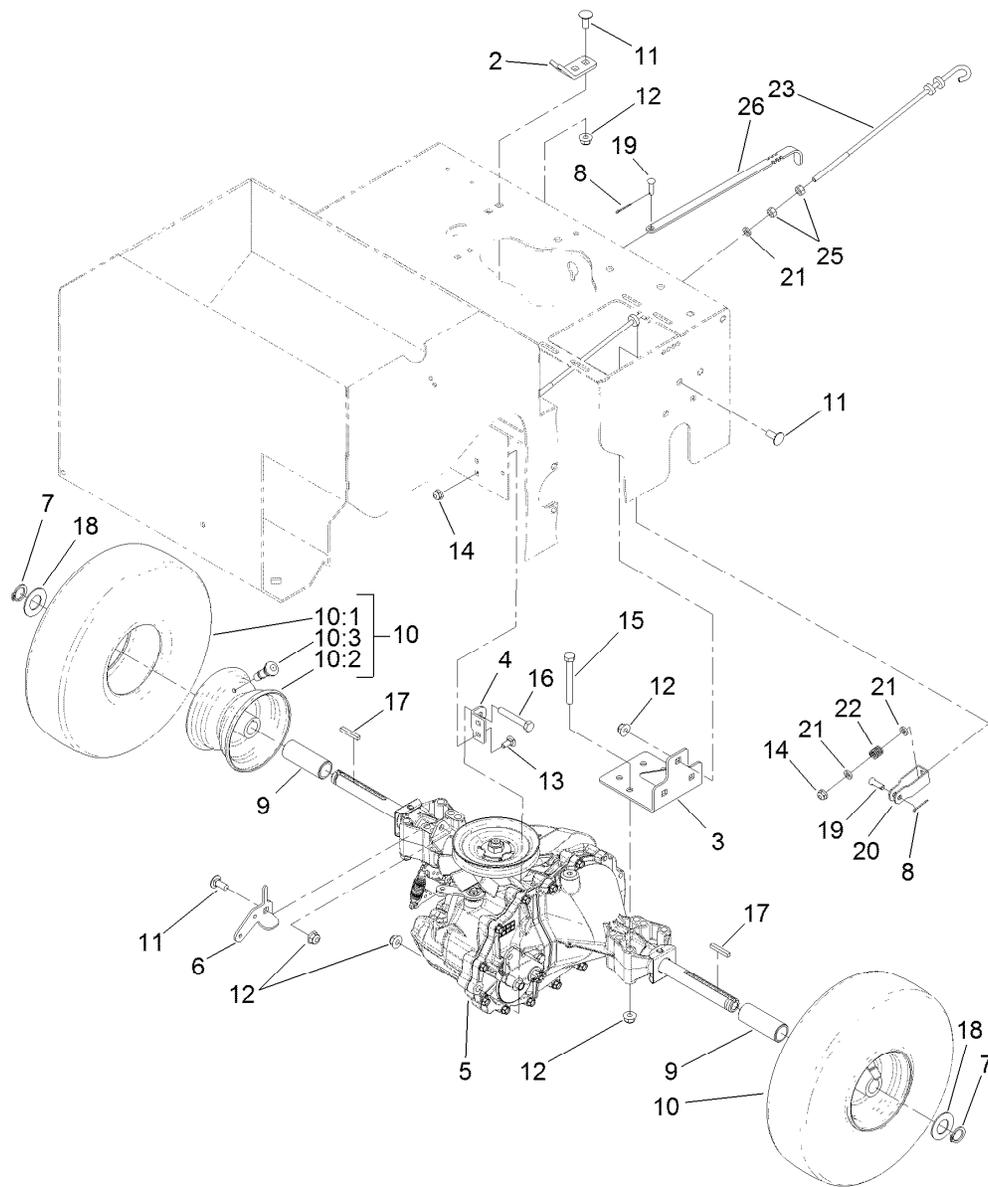

Transmission Assembly

| Ref. | Part Number | Qty. | Description | Ref. | Part Number | Qty. | Description |
|------|-------------|------|---------------------------|------|-------------|------|---------------------|
| 2 | 121-1897 | 1 | Bracket-Cable | 13 | 3229-11 | 2 | Screw-CARR |
| 3 | 121-1901-03 | 2 | Bracket-Axle | 14 | 104-7201 | 3 | Nut-HF |
| 4 | 121-1904 | 1 | Bracket-Transaxle, Torque | 15 | 322-13 | 8 | Screw-HH |
| 5 | 121-1908 | 1 | Transaxle ASM ● | 16 | 322-10 | 1 | Screw-HH |
| 6 | 121-1909 | 1 | Bracket-Transaxle | 17 | 92-0049 | 2 | Key-Square |
| 7 | 32120-93 | 2 | Ring-Retaining | 18 | 3256-39 | 2 | Washer-Flat |
| 8 | 3272-4 | 2 | Pin-Cotter | 19 | 1-808265 | 2 | Pin-Clevis |
| 9 | 121-1988 | 2 | Spacer | 20 | 39-3080 | 1 | Clevis |
| 10 | 120-3550 | 2 | Wheel ASM | 21 | 55-9620 | 3 | Spacer-Plate, Pivot |
| 10:1 | 121-6081 | 1 | Tire | 22 | 63-4220 | 1 | Spring-Compression |
| 10:2 | 121-6082 | 1 | Wheel-Rim | 23 | 121-2018 | 1 | Rod-Brake |
| 10:3 | 5108 | 1 | Valve | 25 | 3217-5 | 2 | Nut-Hex |
| 11 | 3230-23 | 9 | Screw-CARR | 26 | 121-2039 | 1 | Lever-Bypass |
| 12 | 104-8300 | 18 | Nut-Flange, NI | | | | |

● Apply anti-seize compound to axle ends before installing tires.

Notes:



Count on it.