



Count on it.

Form No. 380-0007 Rev B

Parts Catalog

V-1550 Series Sprinklers

Model No. V-1550 Series



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquefied Petroleum Gas

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping


TTH: torx truss head

Contents

V-1550-Shrub 4

V-1550-4 components 6

V-1550-12 8

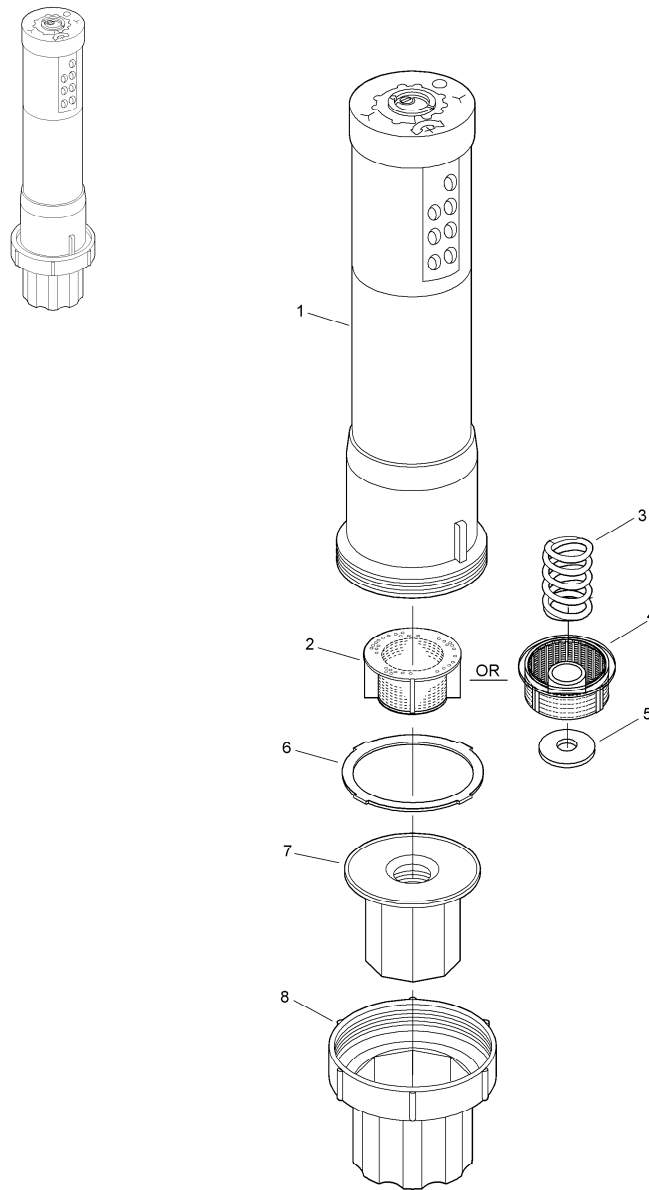


V-1550-Shrub

Ref.	Part Number	Qty.	Description
1		1	Body Assembly ♦
2	89-5847	1	Screen
3	102-0581	1	Spring, Com ▲
4	102-0576	1	Screen, Com
5	89-7561	1	Seal, Check, Com
6	9-5211	1	Seal
7	89-6094	1	Threaded Insert, 3/4" & 1/2"
7	102-0577	1	Threaded Insert, 3/4"
8	89-8305	1	Base, Shrub
	89-7350		Adjustment Key ●■

● SERVICE ITEMS
▲ No longer available

■ Not illustrated
♦ Not serviced separately

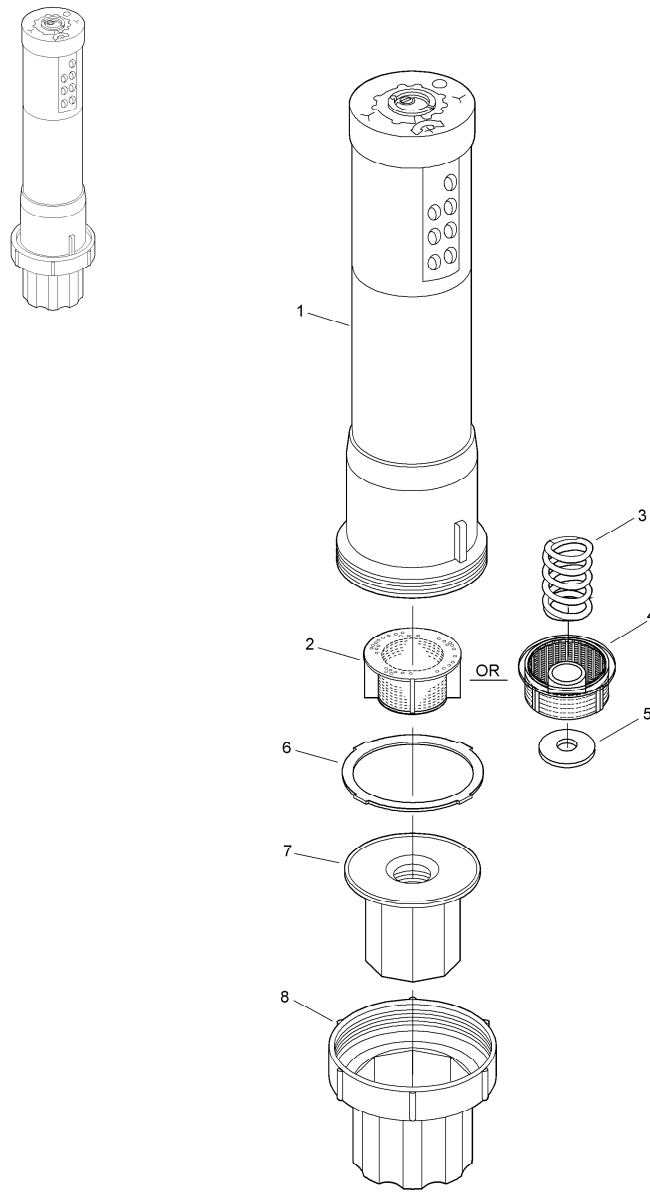


V-1550-Shrub (continued)

● SERVICE ITEMS
▲ No longer available

■ Not illustrated
◆ Not serviced separately

V-1550-4 components

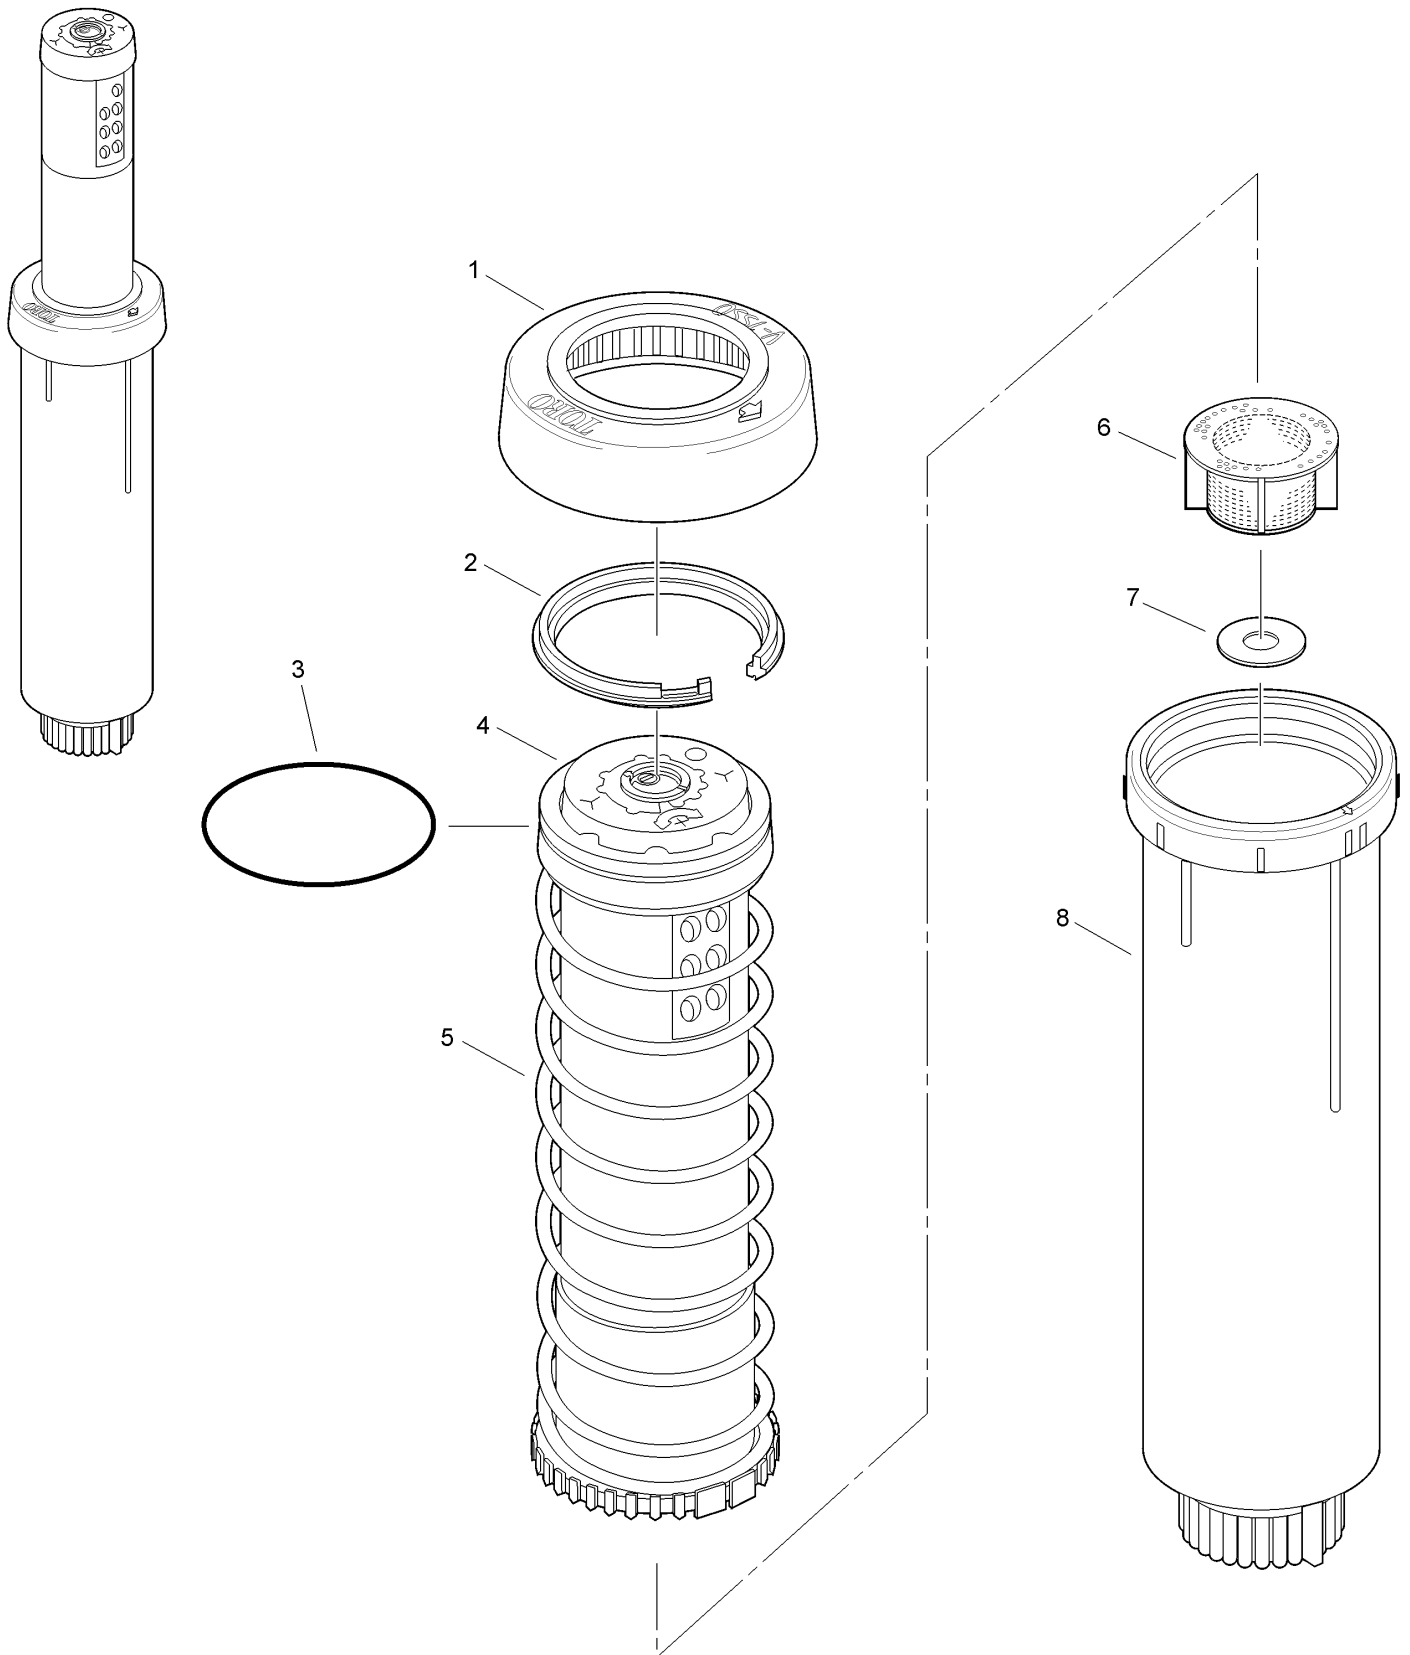


V-1550-4 components (continued)

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	89-5840	1	Rubber Cover, Body	102-3808	1	Spring Retainer & Seal Kit, V1550	●■
1	89-7857	1	Rubber Cover, Body, Effluent	102-2247	1	Retainer W/ O-Ring (Includes 3 And 4)	●■
2	89-8657	1	Snap Ring	102-2798	1	V-1550-4Flfp Riser Assy. (Full Circle, Low Flow, Low Pressure)	●■
3	363-4195	1	O-Ring	102-2799	1	V-1550-4Lflfp Riser Assy. (Part Circle, Low Flow, Low Pressure)	●■
4		1	Retainer (See Service Items)	89-7350		Adjustment Key	●■
5		1	Riser Assy. (See Service Items)	995-83		Multi-Purpose Tool	●■
6	89-5847	1	Screen				
7	89-7561	1	Seal, Check, Com				
8	89-8658	1	Body				

● SERVICE ITEMS
▲ No longer available

■ Not illustrated
◆ Not serviced separately

V-1550-12

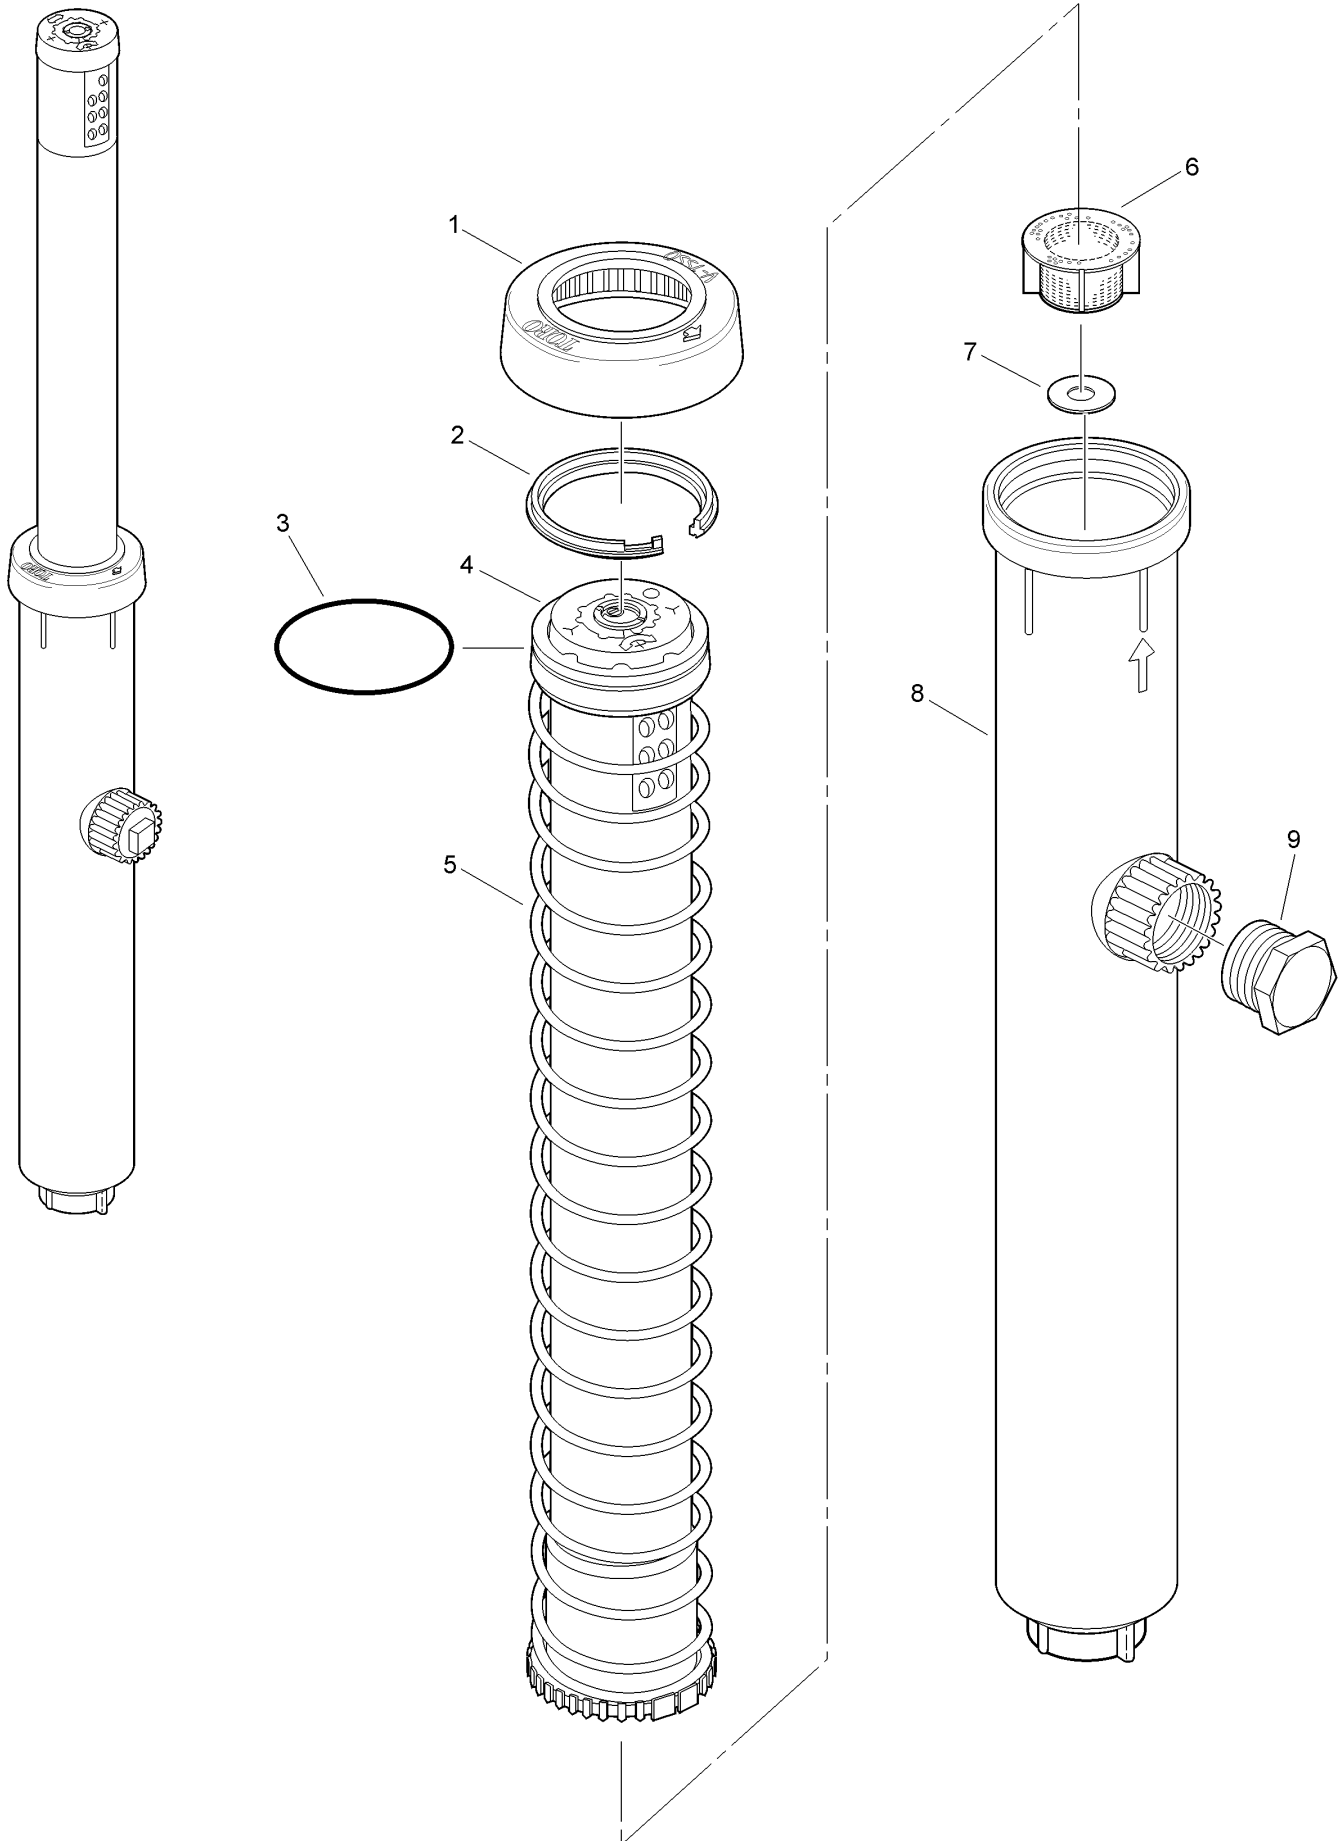

V-1550-12 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	89-5840	1	Rubber Cover, Body
1	89-7857	1	Rubber Cover, Body, Effluent
2	89-8657	1	Snap Ring
3	363-4195	1	O-Ring
4		1	Retainer (See Service Items) ♦ ▲
5		1	Riser Assembly (See Service Items) ♦ ▲
6	89-9428	1	Screen
7	89-7561	1	Seal, Check
8	89-5972	1	Body ▲
9	363-3779	1	Plug, 3/4" Npt Male
	102-3808	1	Spring Retainer & Seal Kit, V1550

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
	102-2247	1	Retainer W/ O-Ring (Includes Items 3 And 4)
	102-2800	1	V-1550-12Flip Riser Assy. (Full Circle, Low Flow, Low Pressure)
	102-2801	1	V-1550-12Lflp Riser Assy. (Part Circle, Low Flow, Low Pressure)
	89-5877	1	V-1550-12 Riser Assy. (Part Circle, Standard)
	89-7657	1	V-1550-12F Riser Assy. (Full Circle, Standard)
	89-7350		Adjustment Key ● ■
	995-83		Multi-Purpose Tool ● ■

● SERVICE ITEMS
▲ No longer available

■ Not illustrated
♦ Not serviced separately

Notes:

Notes:



Count on it.