



Count on it.

Parts Catalog

GrandStand® Mower

With 52in TURBO FORCE® Cutting Unit

Model No. 79589—Serial No. 313000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquefied Petroleum Gas

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head


STD: standard

TAP: self tapping

TTH: torx truss head

Contents


Frame Assembly.....	4
Wheel and Bearing Assembly No. 112-3810.....	5
Parking Brake Assembly.....	6
Decklift Assembly.....	7
Platform Assembly.....	9
Cushion Assembly No. 119-8742.....	10
Platform Assembly No. 117-9640.....	11
Ground Drive Assembly.....	12
Hydraulic Motor Assembly No. 114-0549.....	13
Pump Idler Assembly.....	14
Hydraulic System Assembly.....	15
Hydraulic Pump Assembly No. 125-4672.....	16
Control Assembly.....	17
Fuel Tank Assembly.....	18
Electrical Assembly.....	19
Carbon Canister Assembly.....	21
Engine Assembly.....	22
Deck Assembly.....	23
Deck Decal Assembly No. 120-6405.....	24
Idler Arm Assembly No. 120-6410.....	25
Idler Adjust Assembly No. 117-0446.....	26
Spindle Assembly No. 119-8560.....	27
Deflector Assembly No. 120-2451.....	28
Attachments and Accessories.....	29

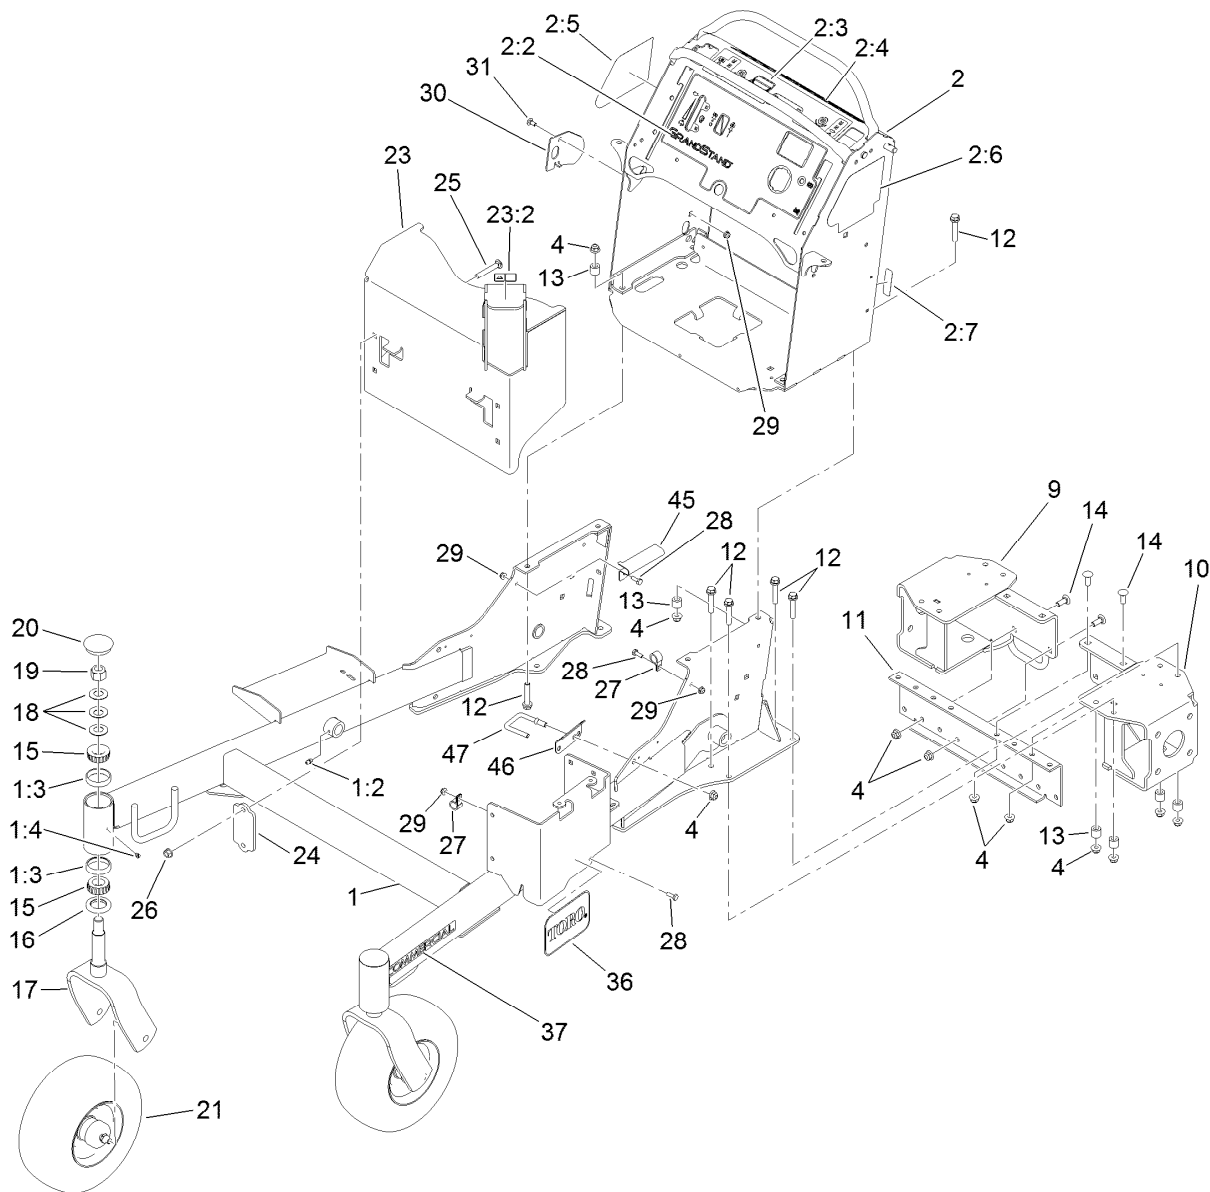

Frame Assembly

Ref.	Part Number	Qty.	Description
1	121-5990	1	Front Frame ASM
1:2	302-5	4	Fitting-Grease
1:3	1-543508	4	Cup-Bearing
1:4	1-811010	2	Plug
2	121-5950	1	Control Tower ASM
2:2	120-6497	1	Decal-Control Panel, Efi
2:3	119-8727	1	Decal-Opc
2:4	117-3626	1	Decal-Warning
2:5	117-0456	1	Decal-HOC
2:6	121-5972	1	Decal-Service/Spark Arrest
2:7	116-3267	1	Decal-Fuse
4	104-8301	22	Nut-Flange, NI
9	119-7222-01	1	Mount-Motor, RH
10	119-7220-01	1	Mount-Motor, LH
11	119-7224-01	1	Mount-Motor, Center
12	108-3742	12	Screw-HHF
13	121-1760	12	Spacer
14	3231-22	8	Screw-CARR
15	1-543509	4	Bearing-Roller, Tapered
16	1-543511	2	Seal-Grease
17	103-8618-01	2	Fork-Caster

Ref.	Part Number	Qty.	Description
18	1-633508	6	Washer-Bellville
19	3296-51	2	Nut-Lock, NI
20	103-4882	2	Cap-Grease
21	112-3810	2	Wheel/Tire And Bearing ASM
23	116-8739	1	Muffer Guard ASM
23:2	106-5517	1	Decal-Warning, Hot Surface
24	119-7303-01	2	Bracket-Mounting, Guard
25	3231-31	4	Screw-CARR
26	32128-21	4	Nut-HF
27	2412-87	1	Clamp-Cable
28	321-4	2	Screw-HH
29	104-7201	3	Nut-HF
30	119-7312	1	Plate-Striker
31	3229-11	1	Screw-CARR
36	68-3640	1	Decal
37	117-3591	2	Decal-Commercial
45	116-5067	1	Bracket-Hose, Fuel (Double)
46	121-6003	2	Guard-Hose
47	121-6004	2	Guide-Hose

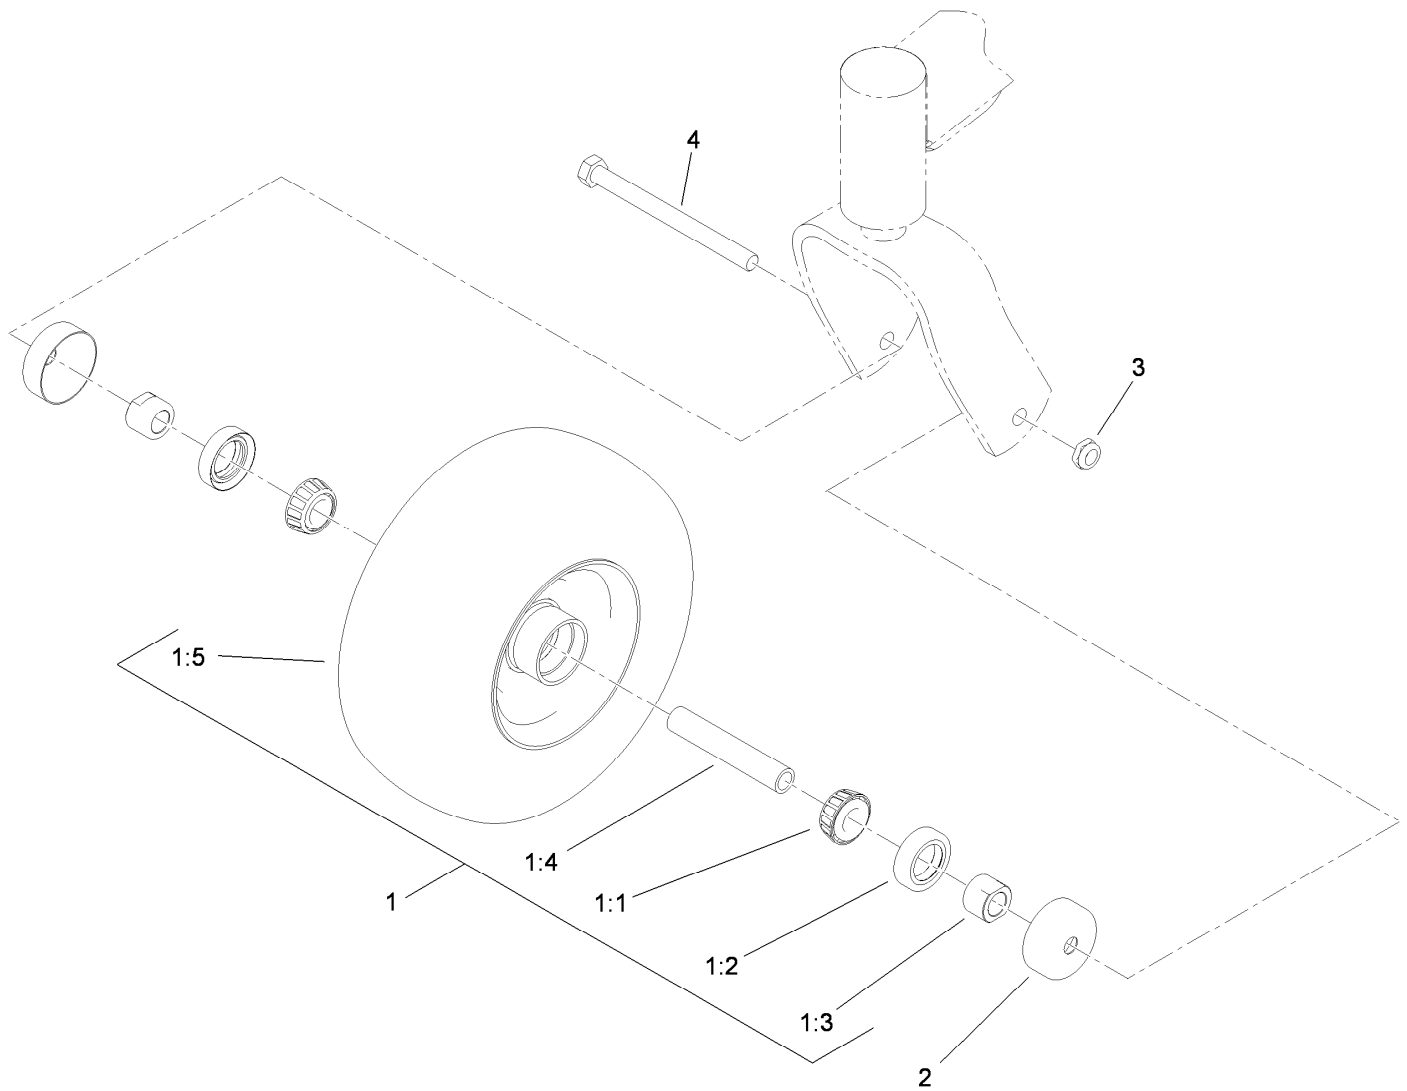


Wheel and Bearing Assembly No. 112-3810

Ref.	Part Number	Qty.	Description
1		1	Wheel And Bearing ASM ●
1:1	1-633585	2	Bearing-Cone, Taper
1:2	103-0063	2	Seal-Caster
1:3	103-3051	2	Spacer-Nut ■
1:4	103-3157	1	Axle-Caster
1:5	110-9965	1	Wheel And Tire ASM
2	103-2768	2	Guard-Seal
3	3296-45	1	Nut-Lock, NI
4	325-20	1	Screw-HH

● Not serviced separately


■ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on spacer nut

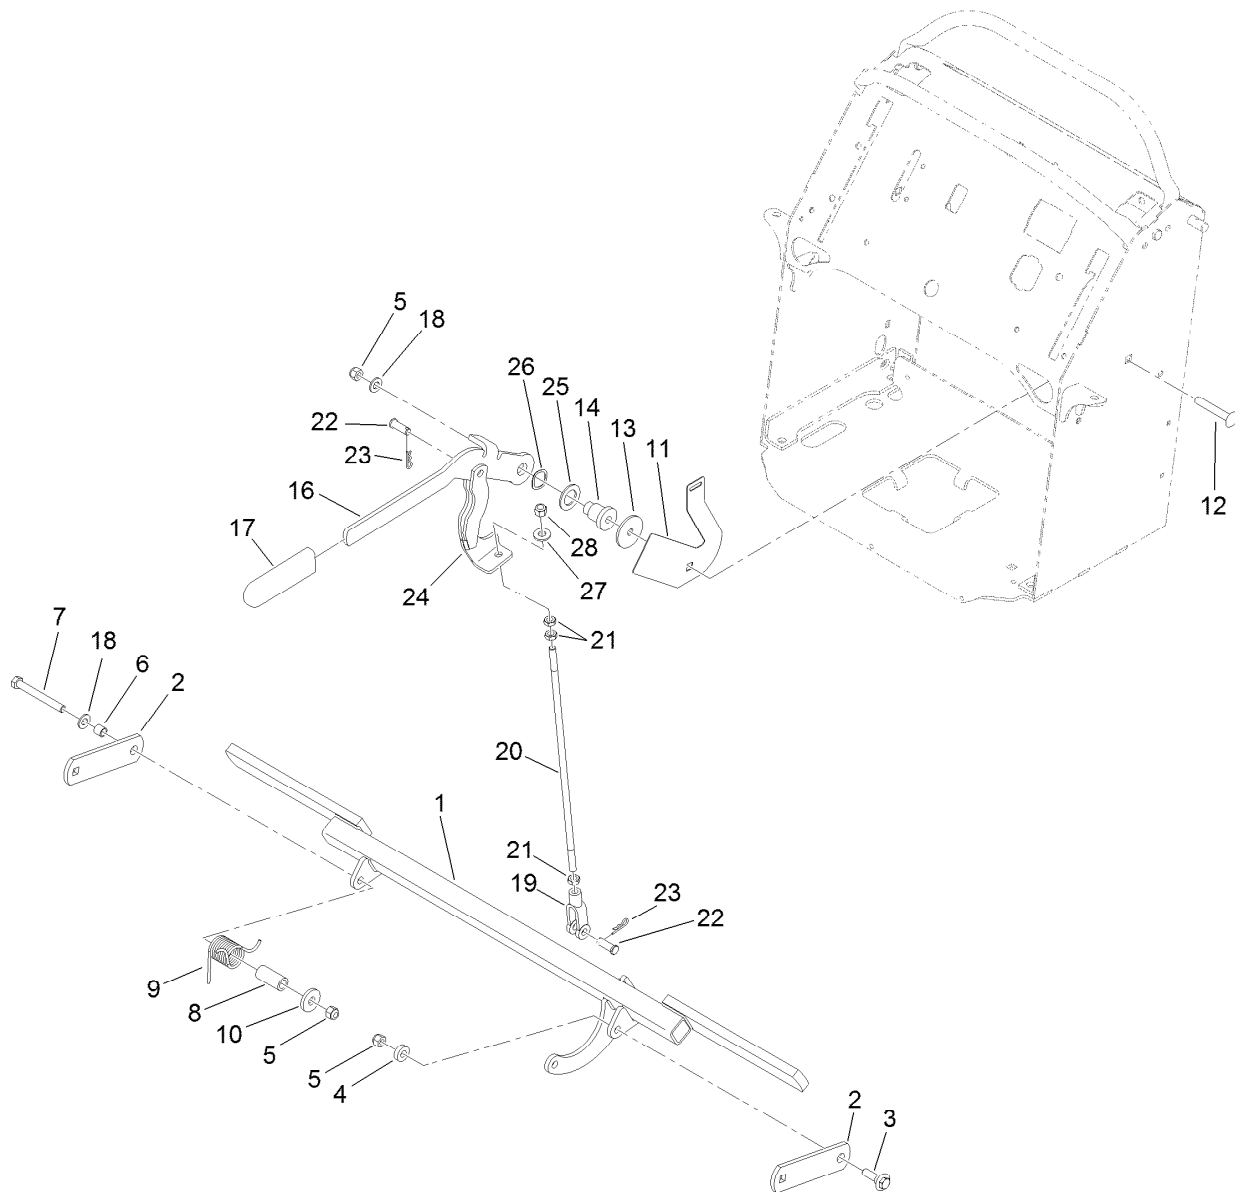

Parking Brake Assembly

Ref.	Part Number	Qty.	Description
1	119-8730-03	1	Bar-Brake
2	114-5186-01	2	Support-Brake
3	614672	1	Bolt-Shoulder
4	5-0652	1	Spacer
5	104-8301	3	Nut-Flange, NI
6	117-9684	1	Spacer
7	323-20	1	Screw-HH
8	117-9683	1	Spacer
9	117-9682	1	Spring-Torsion
10	1-373034	1	Washer
11	117-0452-03	1	Plate-Switch, Brake
12	3231-44	1	Screw-CARR
13	63-7400	1	Washer-Rebound
14	106-3214	1	Mount-Pulley


Ref.	Part Number	Qty.	Description
16	117-5759-03	1	Lever-Brake
17	1-633268	1	Grip-Lever
18	3256-24	2	Washer-Flat
19	1-633131	1	Yoke-Linkage, Brake
20	119-7244	1	Rod-Brake
21	3220-3	3	Nut-HJ
22	283-2	2	Pin-Clevis
23	3290-307	2	Pin-Hair
24	119-8780-03	1	Arm-Brake
25	1-303007	1	Washer
26	106-5335	1	Washer-Wave
27	98-5975	1	Washer-Belleville
28	3296-6	1	Nut-Lock

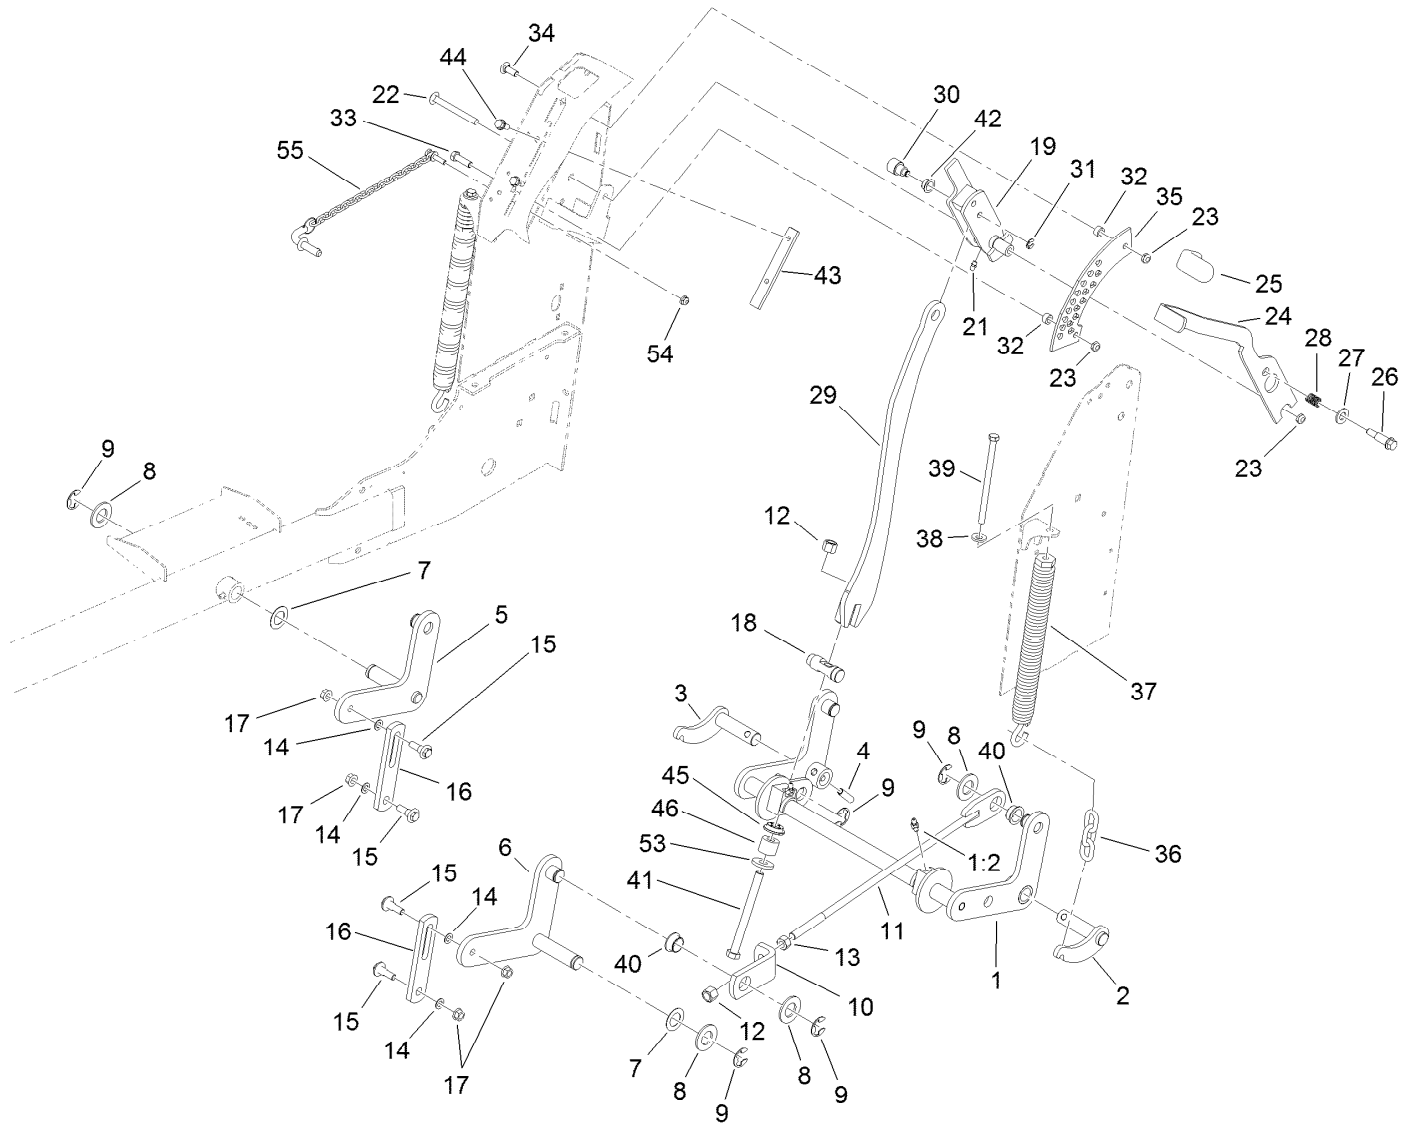

Decklift Assembly

Ref.	Part Number	Qty.	Description
1	116-3103	1	Rear Crossshaft ASM
1:2	302-11	2	Fitting-Lube, 45 DEG
2	116-3104-01	1	Shaft-Pivot, LH
3	116-3105-01	1	Shaft-Pivot, RH
4	116-3107	2	Pin-Spiral
5	121-5994-01	1	Arm-Lift, RH
6	121-5993-01	1	Arm-Lift, LH
7	110-6767	2	Washer-Thrust
8	3256-29	6	Washer-Flat
9	32151-103	7	Ring-Retaining, EXT
10	116-2901	2	Bracket-Lift Rod
11	116-8676	2	Lift Rod ASM
12	3296-23	3	Nut-Lock, NI
13	3217-9	2	Nut-HH
14	40-1940	4	Washer
15	109-9840	4	Screw-Shoulder, HHF
16	117-0519	2	Link-Lift
17	32128-21	4	Nut-HF
18	114-5274	1	Pin-HOC
19	114-3512	1	HOC Handle ASM
21	302-5	1	Fitting-Grease


Ref.	Part Number	Qty.	Description
22	3231-24	1	Screw-CARR
23	3296-59	3	Nut-Lock, NI
24	114-1878-03	1	Lever-HOC
25	1-633268	1	Grip-Lever
26	66-0561	1	Screw-Shoulder
27	3256-26	1	Washer-Flat
28	65-9940	1	Spring
29	116-2939	1	Bar-Lift
30	116-3048	1	Hub-Pivot
31	32151-47	1	Ring-Retaining
32	111044	2	Spacer
33	323-7	1	Screw-HH
34	3231-22	1	Screw-CARR
35	114-5307	1	Bracket-HOC
36	103-9859	2	Chain-Decklift
37	116-0886	2	Extension Spring ASM
38	98-5975	2	Washer-Belleville
39	323-58	2	Bolt-TAP, HH
40	116-2909	4	Bearing-Flange
41	325-22	1	Screw-HH
42	116-3047	1	Bearing-Flange

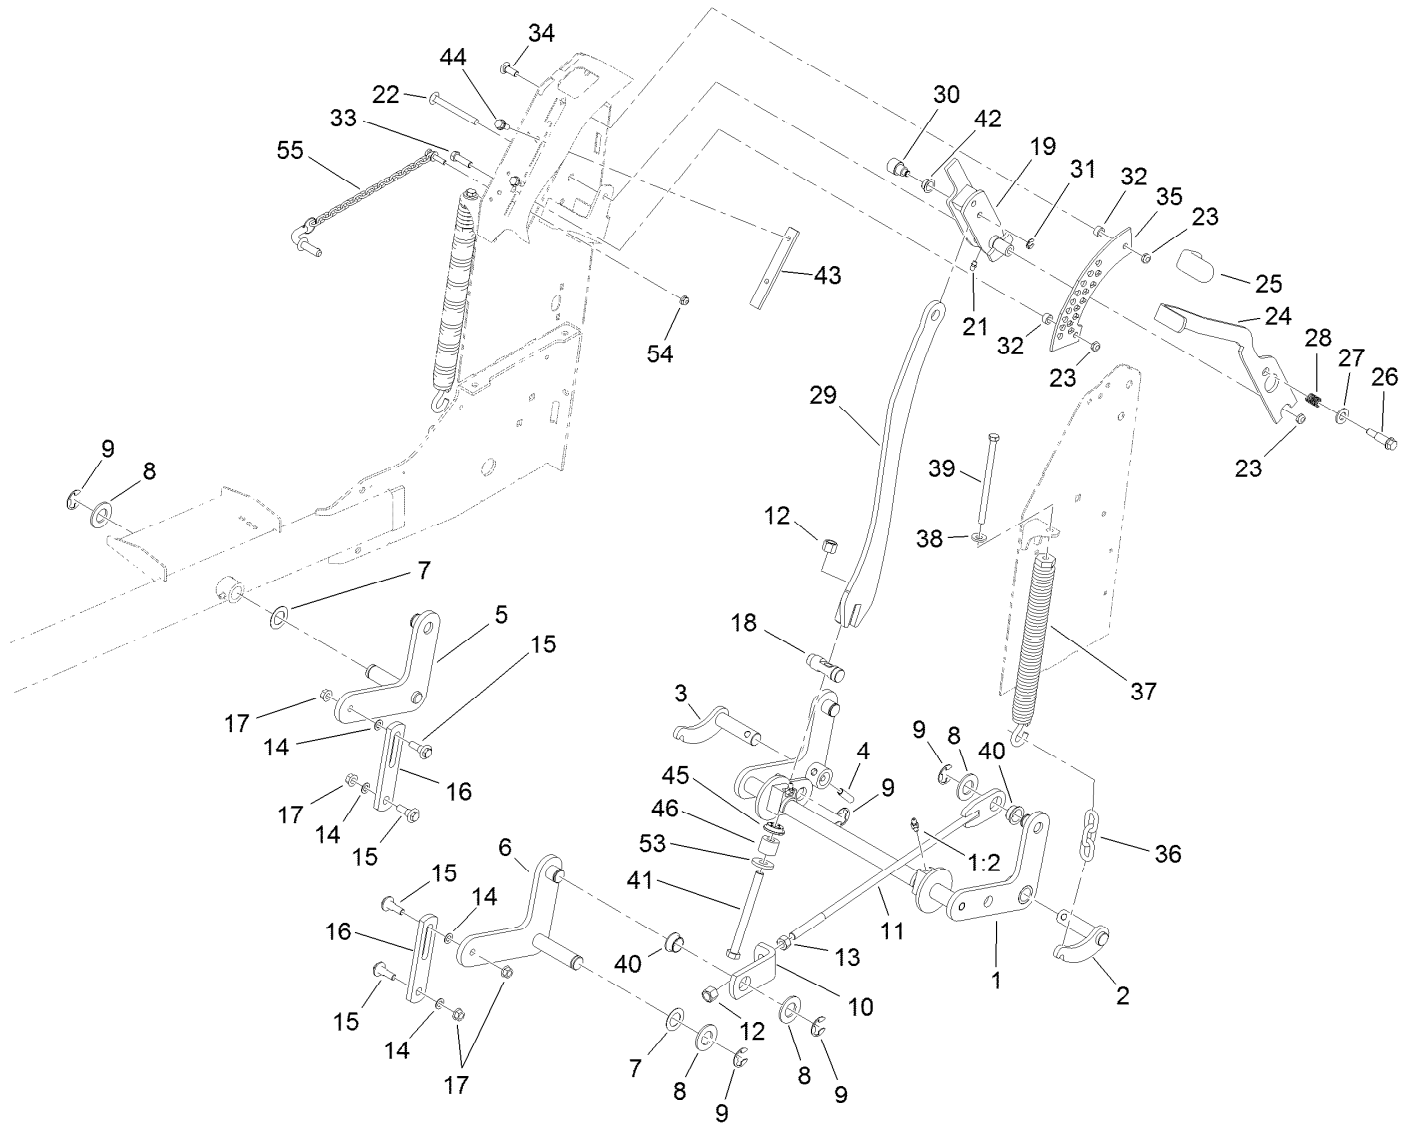

Decklift Assembly (continued)


Ref.	Part Number	Qty.	Description
43	116-3124	1	Skid-Handle, Lift
44	32144-70	2	Screw-HWHTF
45	116-3625	1	Seat-Spring
46	116-3241	1	Spring-Urethane

Ref.	Part Number	Qty.	Description
53	92-2651	1	Washer
54	104-7201	1	Nut-HF
55	114-0409	1	HOC Pin ASM

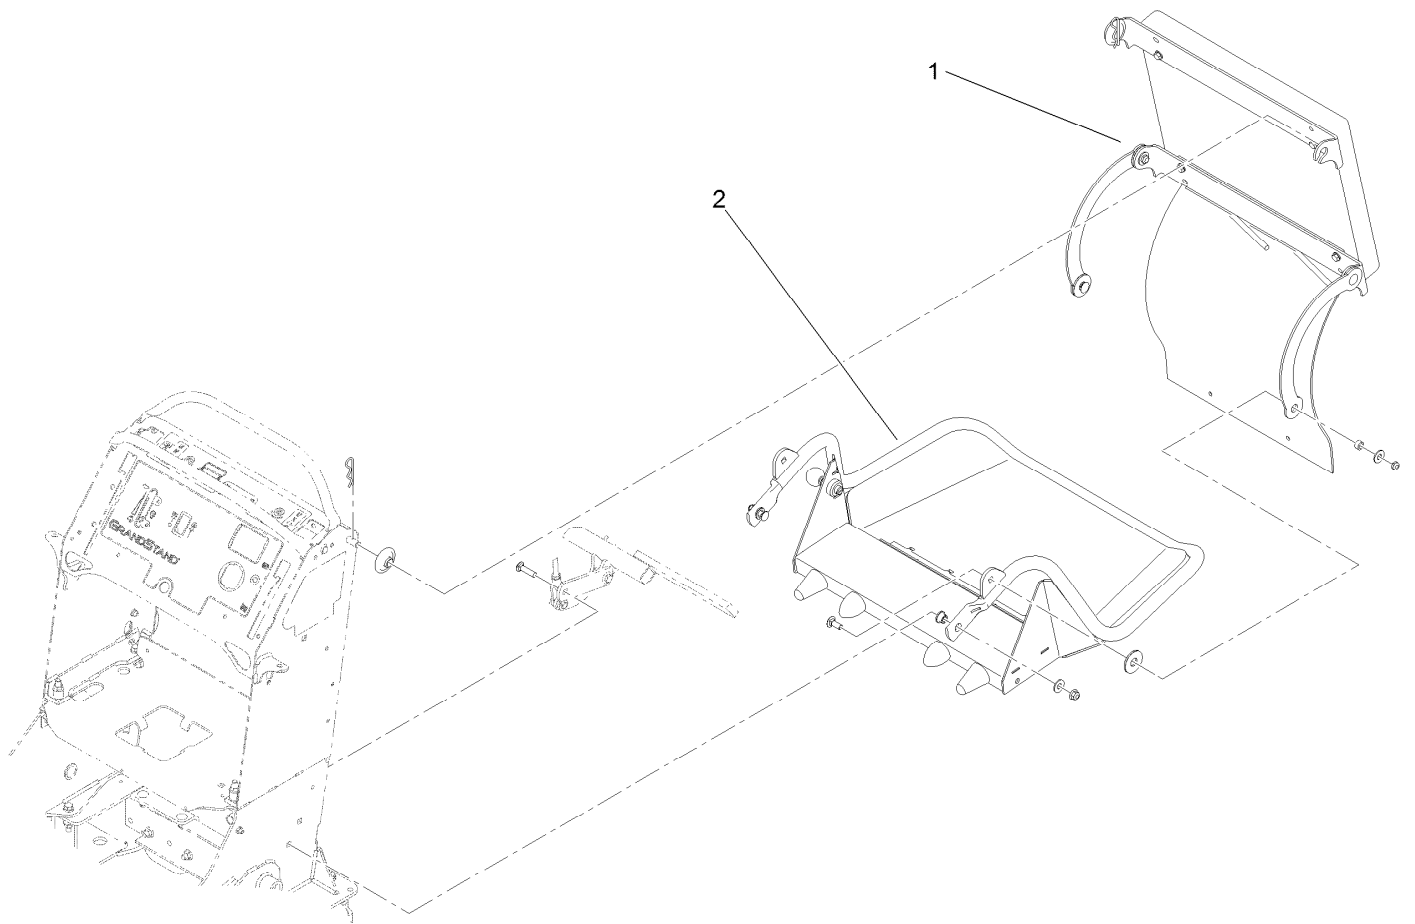


Platform Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-8742	1	Cushion ASM
2	117-9640	1	Platform ASM

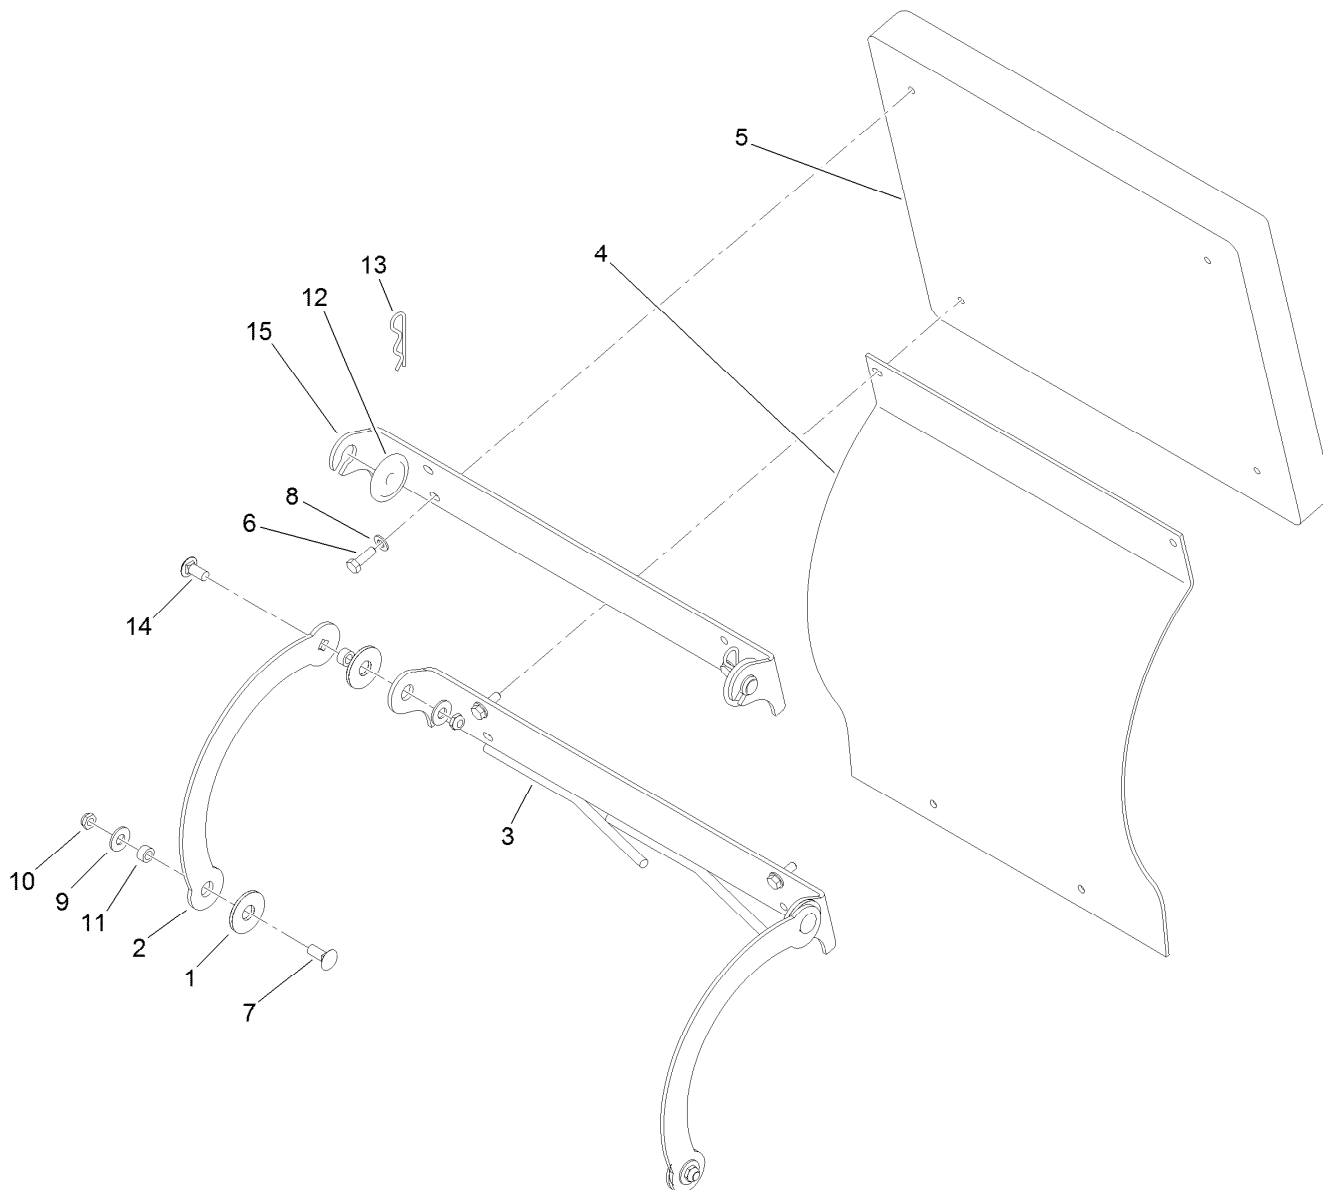


Cushion Assembly No. 119-8742

Ref.	Part Number	Qty.	Description
1	114-0463	4	Washer-Friction, Composite
2	114-1915-01	2	Link-Pad
3	119-7369-03	1	Hinge-Lower
4	114-1919	1	Shield-Rear
5	117-9739	1	Pad-Cushion
6	322-5	4	Screw-HH
7	3231-2	2	Bolt-CARR
8	3256-23	4	Washer-Flat
9	3256-4	4	Washer-Flat
10	3296-59	4	Nut-Lock, NI
11	111044	4	Spacer
12	116-2886	2	Slide-Bushing
13	3290-355	2	Pin-Hair
14	3231-27	2	Screw-CARR
15	116-2757-03	1	Hinge-Pad

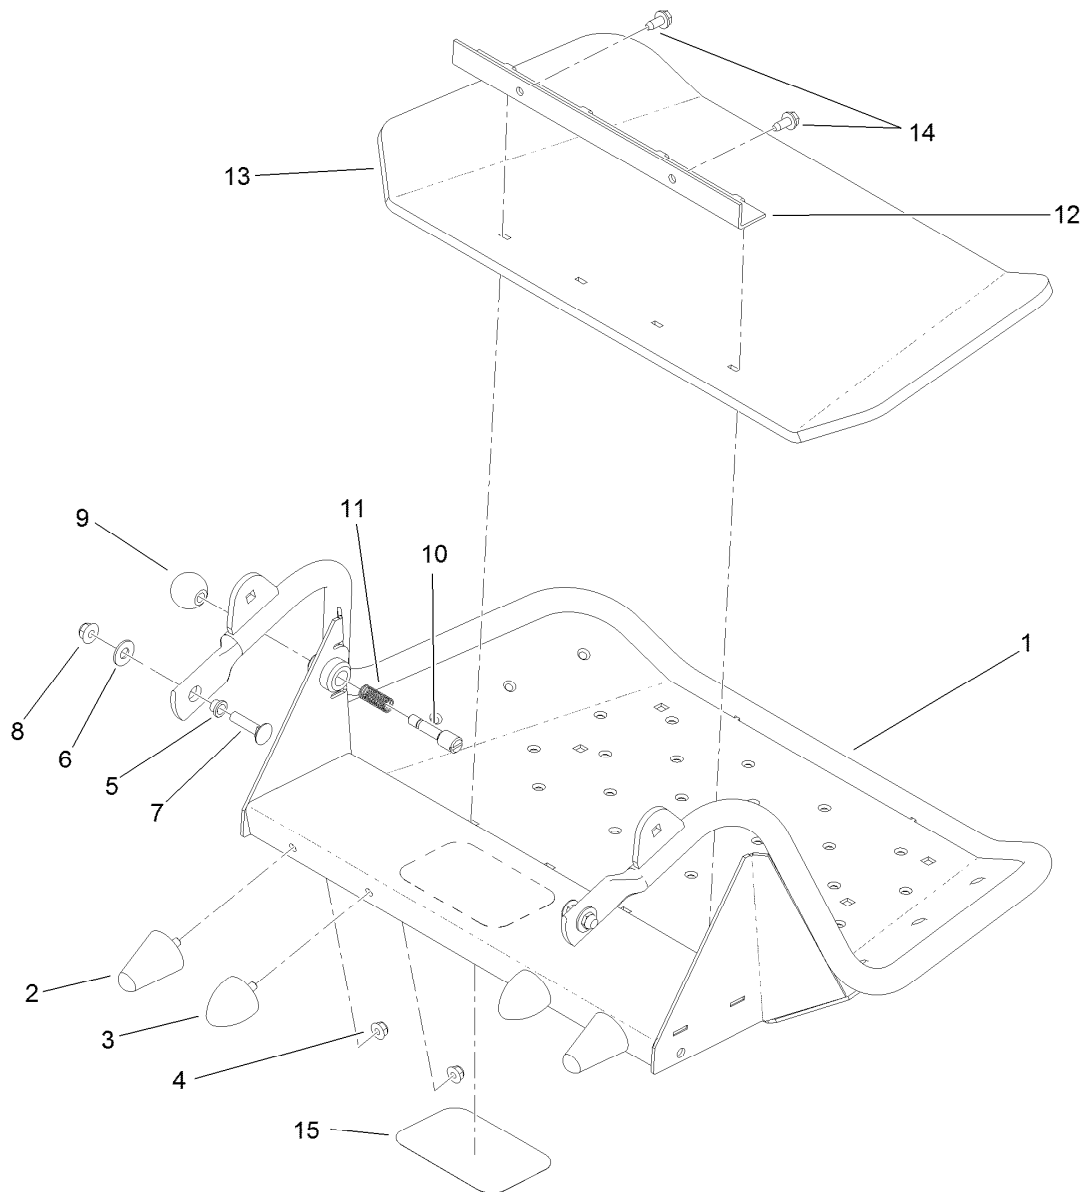

Platform Assembly No. 117-9640

Ref.	Part Number	Qty.	Description
1	117-9641-01	1	Platform
2	114-1925	2	Bumper-Rubber
3	114-1926	2	Bumper-Rubber
4	104-8300	4	Nut-Flange, NI
5	109-8788	2	Bushing-Flanged
6	3256-4	2	Washer-Flat
7	3231-4	2	Screw-CARR
8	104-8301	2	Nut-Flange, NI
9	1-603175	1	Knob-Ball
10	119-8650	1	Pin-Latch
11	114-5348	1	Spring
12	114-1920-03	1	Clamp-Shield
13	114-5349	1	Mat-Foot
14	32144-70	2	Screw-HWHTF
15	68-3640	1	Decal

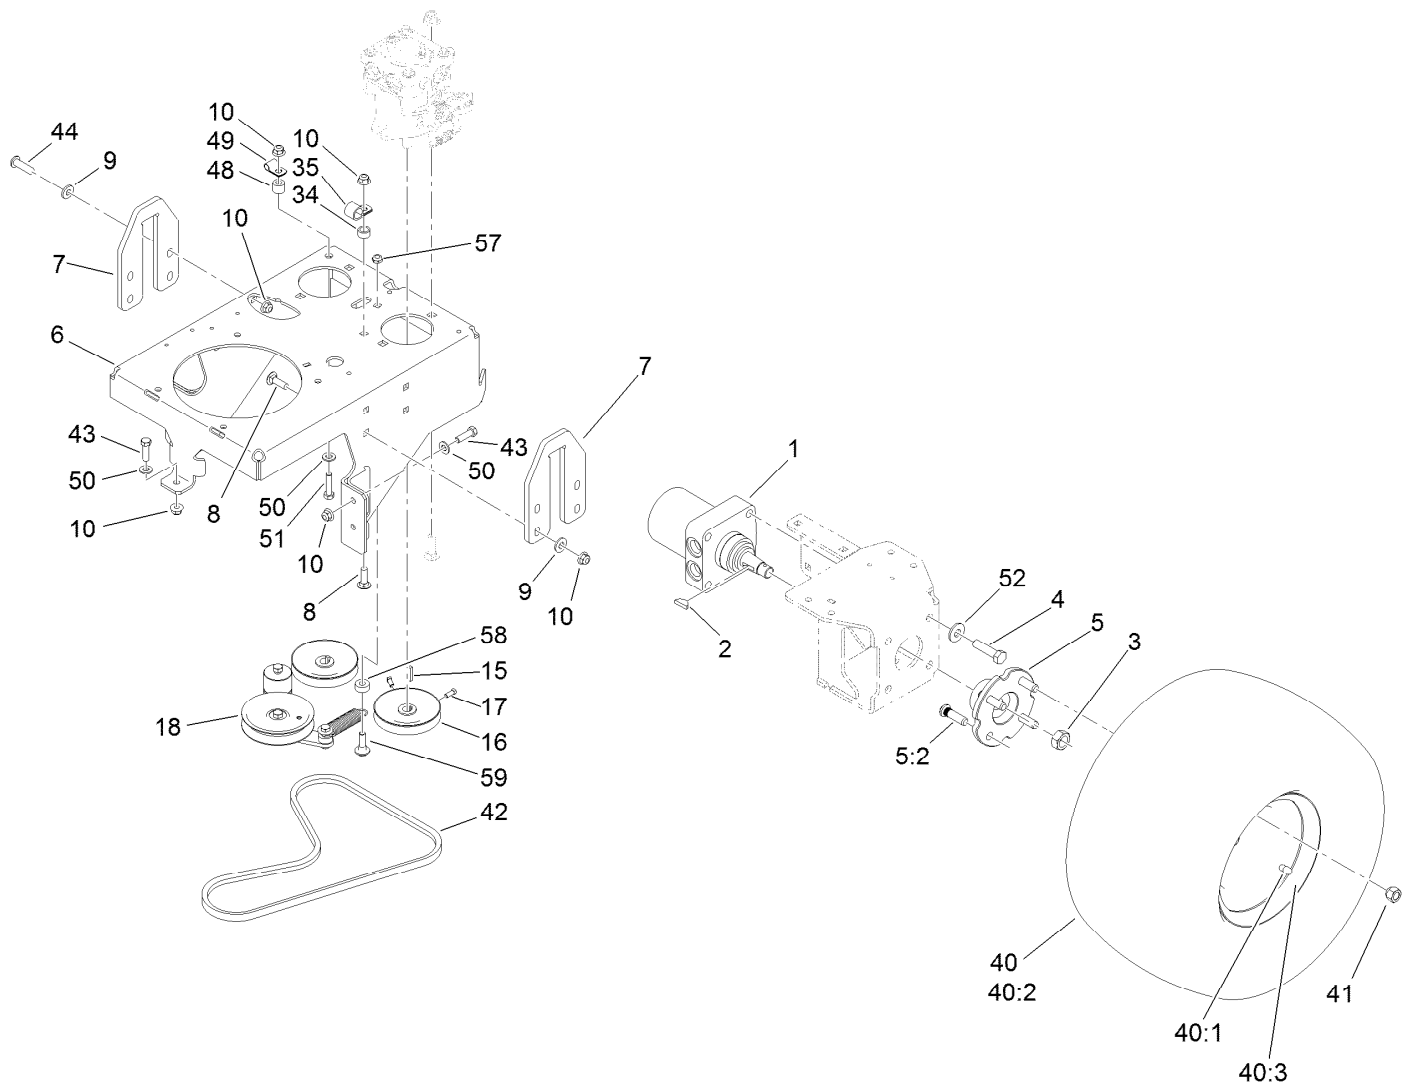


Ground Drive Assembly

Ref.	Part Number	Qty.	Description
1	114-0549	2	HYD Motor ASM
2	3257-8	2	Key-Woodruff
3	85-7310	2	Nut-Motor, Wheel
4	325-8	8	Screw-HH
5	105-0800	2	Wheel Hub ASM
5:2	10-6830	4	Stud-Type, Drive
6	120-6456-01	1	Base-Engine
7	119-8662	2	Plate-Lift
8	3231-25	8	Bolt-CARR
9	98-5975	8	Washer-Belleville
10	104-8301	15	Nut-Flange, NI
15	1-807272	2	Key
16	105-5648	2	Pulley-Pump
17	3241-5	4	Screw-Set
18		1	Pump Idler ASM ●
34	1-653069	1	Spacer-Wheel
35	1-633396	1	Clip-Loom

Ref.	Part Number	Qty.	Description
40	120-6465	2	Wheel/Tire ASM
40:1	116-4605	1	Rim-8 Inch
40:2	120-6466	1	Tire
40:3	232-27	1	Stem-Valve
41	242-50	8	Nut-Lug
42	114567	1	Belt-V, Lower PTO
43	3234-42	5	Screw-HHF
44	3274-63	1	Screw-HSBH
48	121-1760	1	Spacer
49	116-3362	1	Clip-Tube
50	3256-24	1	Washer-Flat
51	323-8	1	Screw-HH
52	1-513435	8	Washer-Spring
57	3296-59	1	Nut-Lock, NI
58	104-8426	1	Spacer
59	614672	1	Bolt-Shoulder


● Not serviced separately

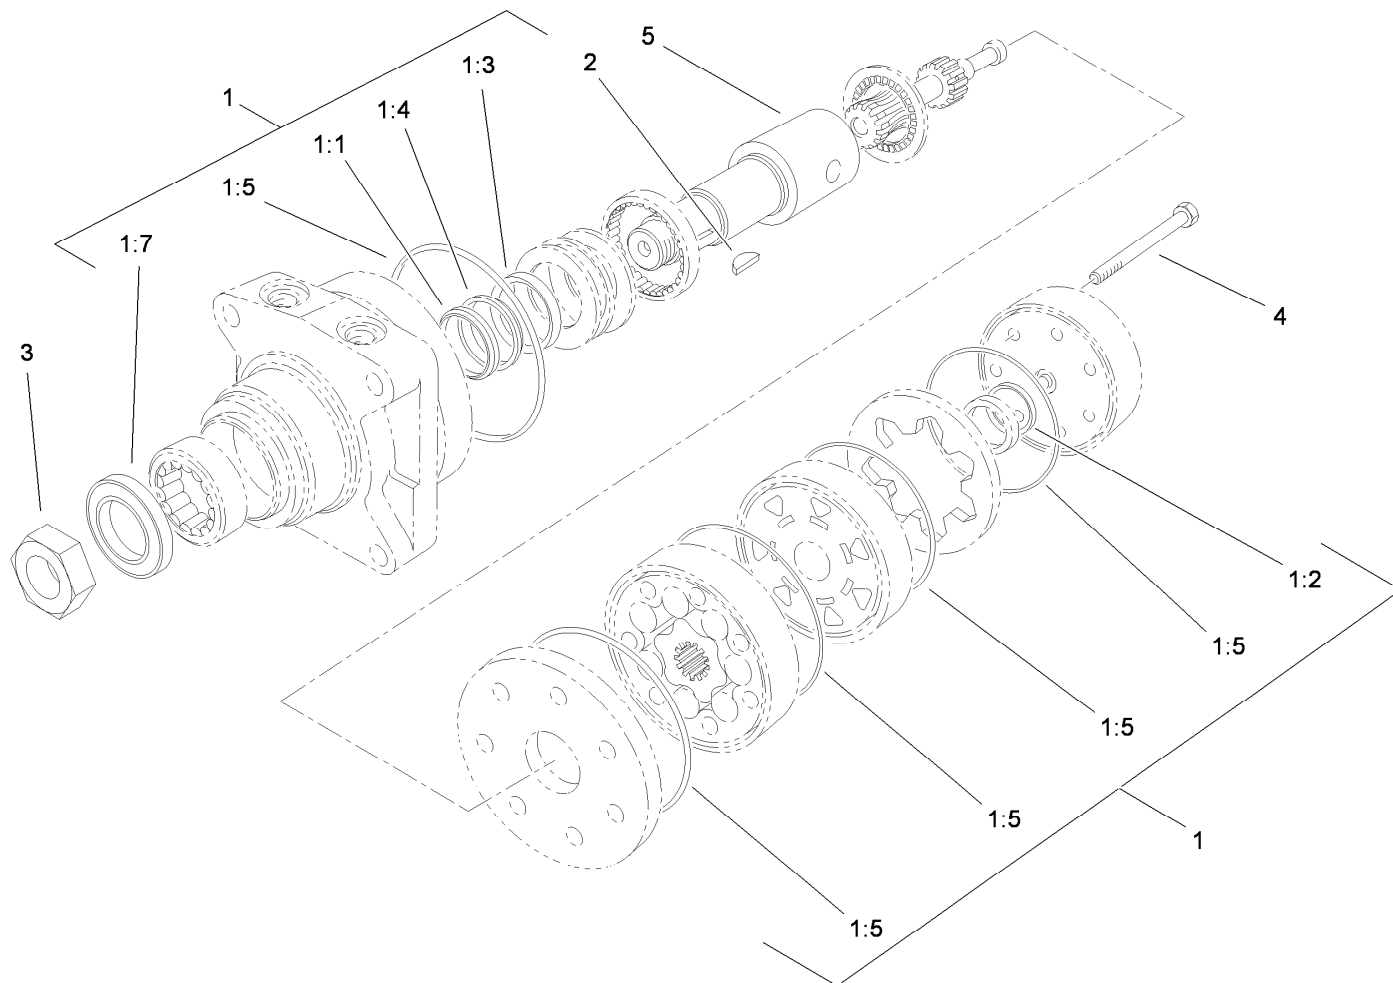

Hydraulic Motor Assembly No. 114-0549


Ref.	Part Number	Qty.	Description
1	1-000119	1	Seal Kit
1:1		1	Ring-Back Up ●
1:2		1	Seal-Commutator ●
1:3		1	Seal-Shaft (Viton) ●
1:4		1	Washer-Back Up, Steel ●
1:5		5	Ring-Seal (Viton) ●
1:7		1	Seal-Dirt And Water ●
2	3257-8	1	Key-Woodruff
3	85-7310	1	Nut-Motor, Wheel
4	106-5549	6	Bolt-Special
5	106-8764	1	Shaft-Coupling

● Not serviced separately

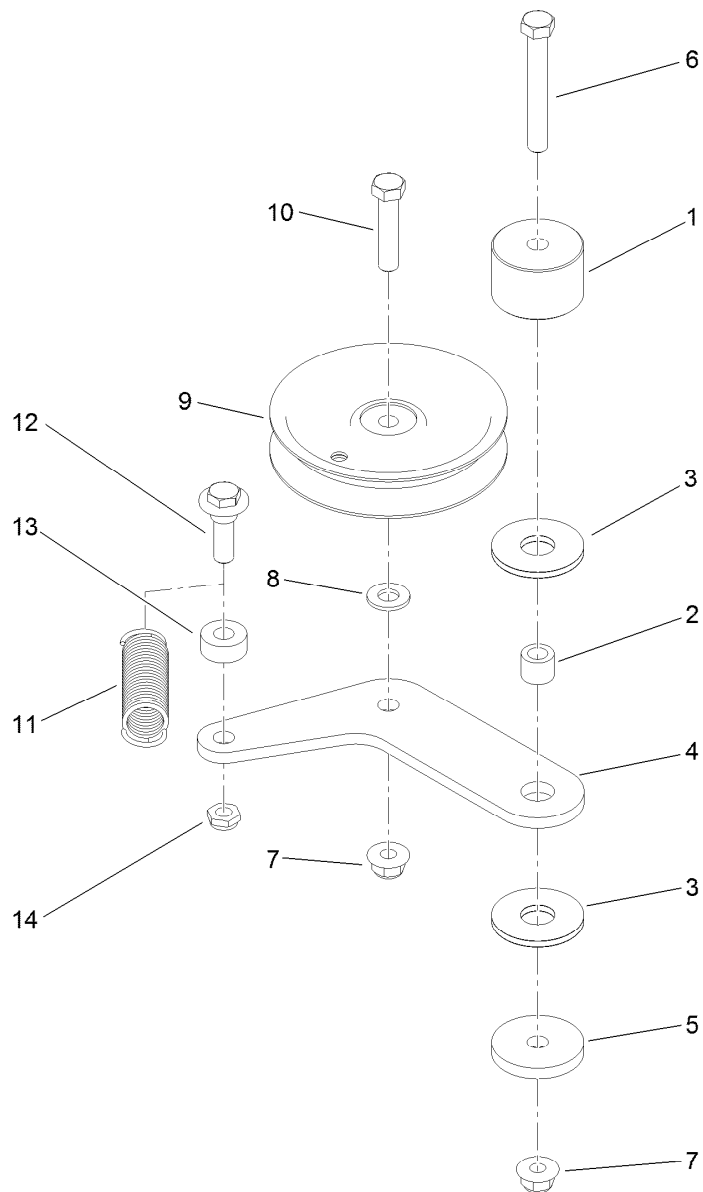

Pump Idler Assembly

Ref.	Part Number	Qty.	Description
1	116-7599	1	Hub, Idler
2	1-413088	1	Bushing-Lever, Lift
3	114-0463	2	Washer-Friction, Composite
4	119-8737	1	Plate-Idler
5	110-9981	1	Washer-Plain
6	323-13	1	Screw-HH
7	104-8301	2	Nut-Flange, NI
8	3256-24	1	Washer-Flat
9	93-1622	1	Pulley-Idler
10	323-9	1	Screw-HH
11	108-4056	1	Spring-Extension
12	614672	1	Bolt-Shoulder
13	104-8426	1	Spacer
14	3296-59	1	Nut-Lock, NI

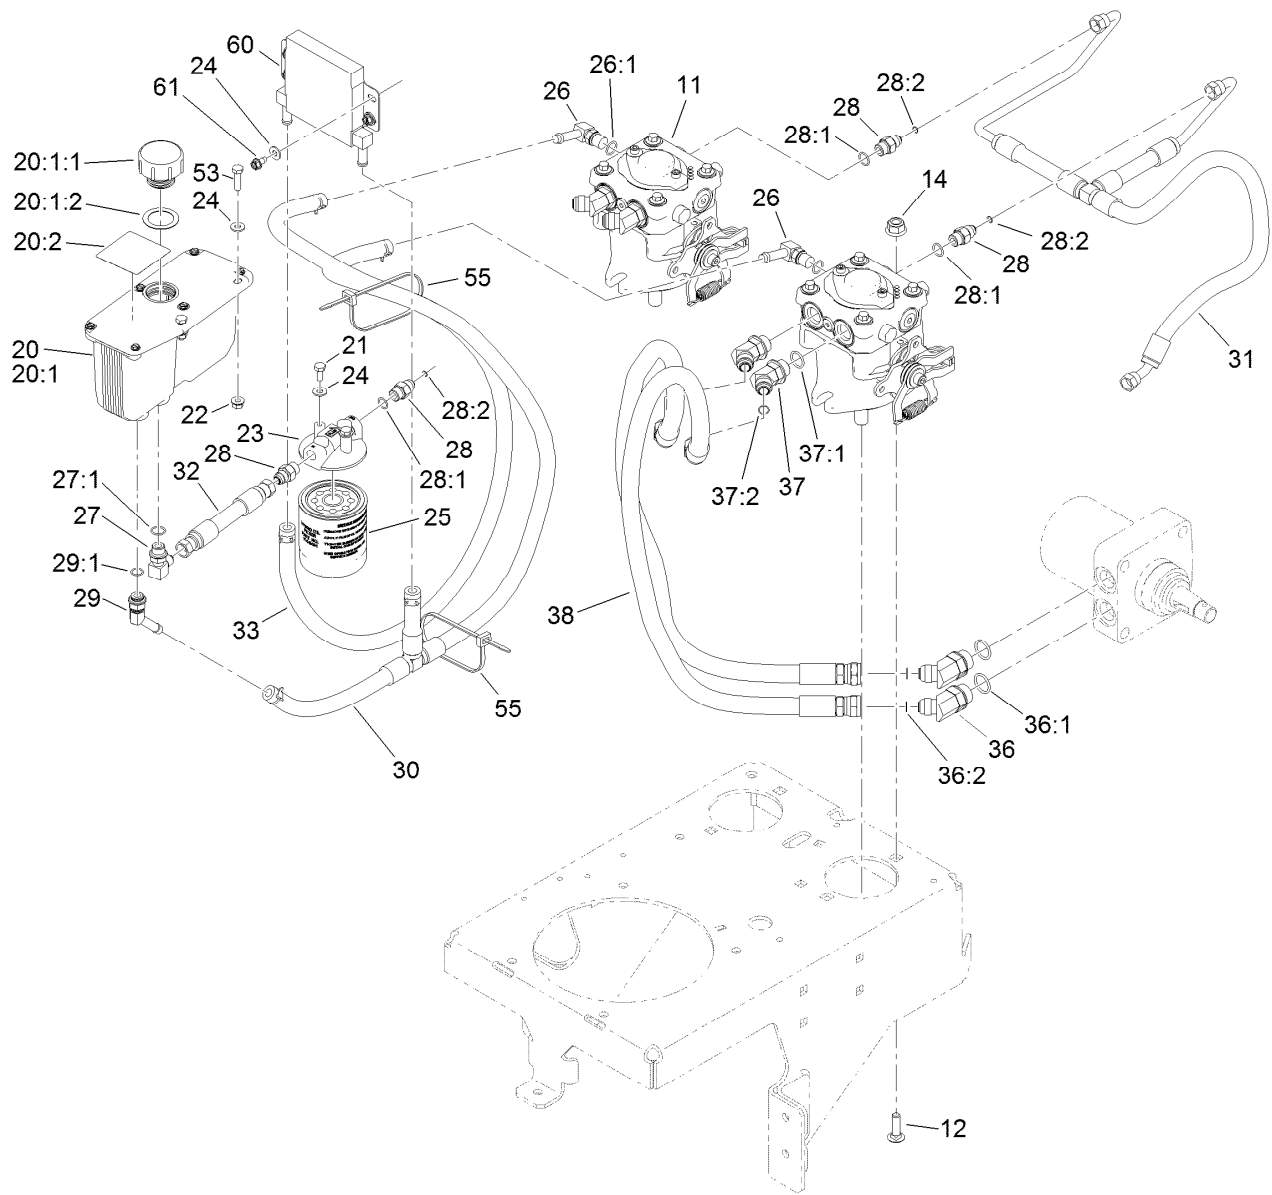


Hydraulic System Assembly

Ref.	Part Number	Qty.	Description
11	125-4672	2	Hydraulic Pump ASM
12	3232-3	4	Bolt-CARR
14	114-8417	4	Nut-HF, NI
20	107-8433	1	HYD Reservoir ASM
20:1		1	Reservoir-HYD ●
20:1:1	103-1948	1	Cap-Reservoir, HYD
20:1:2	103-1949	1	Gasket-Cap
20:2	115-4212	1	Decal-Warning
21	321-3	2	Screw-HH
22	32128-32	2	Nut-HHF
23	104-7836	1	Head-Filter
24	3256-22	8	Washer-Flat
25	114-3494	1	Element-Filter, 25 Micron
26	100-4887	2	Fitting-Barbed, 90 DEG
26:1	237-42	1	O-Ring
27	103-1802	1	Fitting-HYD, 90 DEG
27:1	1-603921	1	O-Ring
28	103-2156	4	Fitting-Straight
28:1	1-603921	1	O-Ring

Ref.	Part Number	Qty.	Description
28:2	103-1020	1	O-Ring
29	103-1807	1	Fitting-Barbed, 45 DEG
29:1	237-42	1	O-Ring
30	121-5981	1	Case Drain Hose ASM
31	121-5968	1	Charge Hose ASM
32	121-5983	1	HYD Hose ASM
33	121-5982	1	Case Drain Hose ASM
36	1-523222	4	Fitting-HYD, 45 DEG
36:1	1-603919	1	O-Ring
36:2	1-603992	1	O-Ring
37	1-523221	4	Fitting-HYD, 45 DEG
37:1	1-603920	1	O-Ring
37:2	1-603992	1	O-Ring
38	116-6902	4	HYD Hose ASM
53	321-6	2	Screw-HH
55	3290-378	2	Tie-Cable
60	116-7205	1	Cooler-Oil
61	32104-17	4	Screw-HWH

● Not serviced separately


99 Seal Overhaul Kit

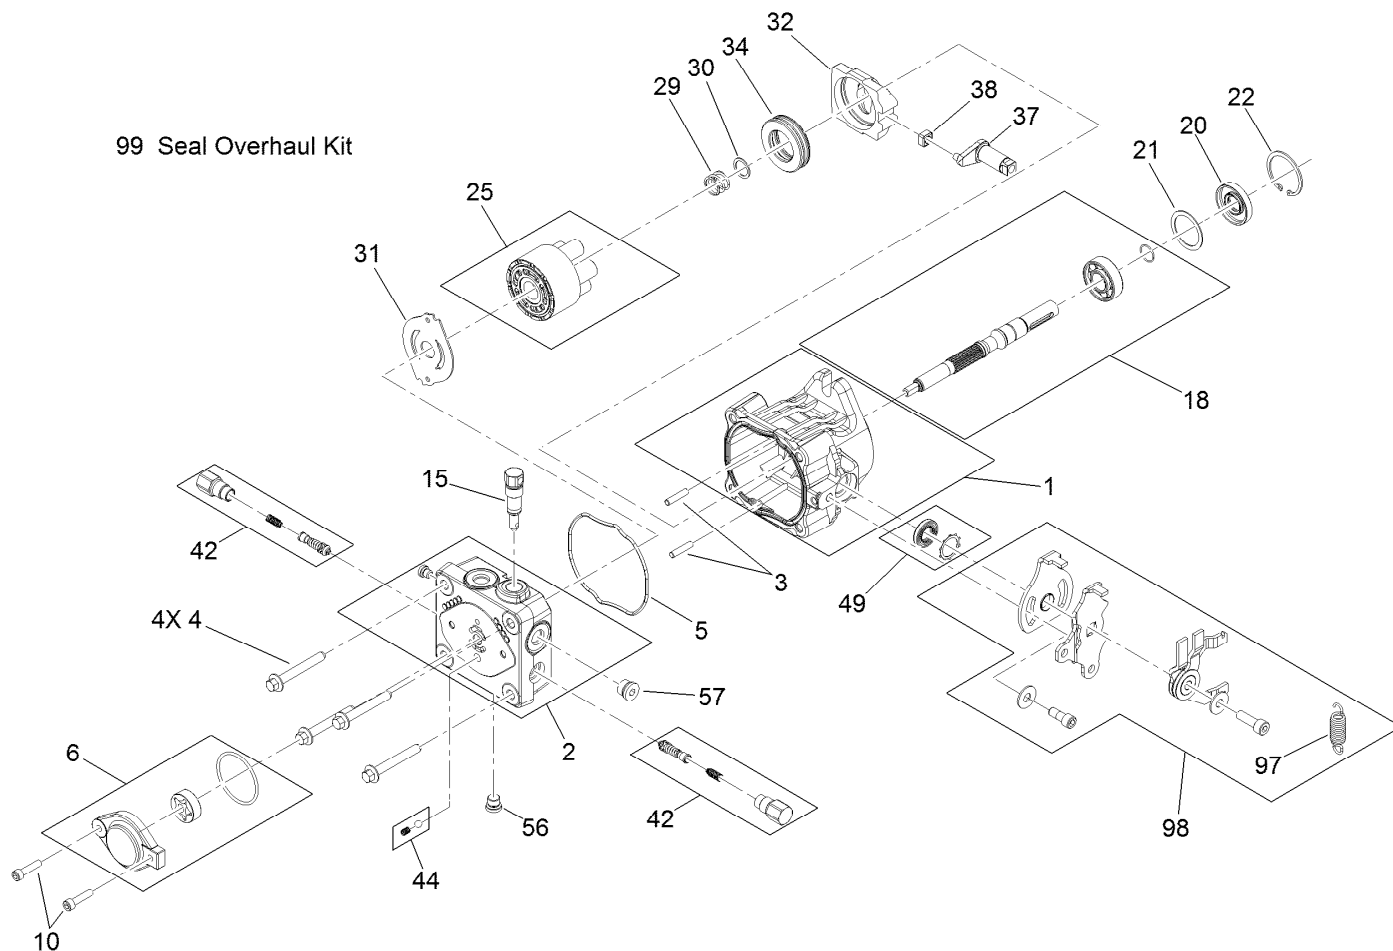

Hydraulic Pump Assembly No. 125-4672

Ref.	Part Number	Qty.	Description
1	115-4464	1	Housing Kit
2	106-8752	1	End Cap Kit (W/Poppets)
3	106-8753	2	Pin-Headless, Straight
4	106-8754	4	Bolt-HF
5	125-4682	1	O-Ring
6	106-8756	1	Charge Pump Kit
10	104-2111	2	Capscrew
15	106-8759	1	Bypass Valve Kit
18	103-2664	1	Input Shaft Kit
20	104-5310	1	Seal-Lip
21	104-5308	1	Spacer
22	104-5309	1	Ring-Retaining
25	103-2666	1	Cylinder Block Kit
29	94-1936	1	Spring-Block
30	94-1937	1	Washer-Thrust


Ref.	Part Number	Qty.	Description
31	105-6185	1	Plate-Valve
32	94-1907	1	Swashplate-Variable
34	94-6922	1	Bearing-Thrust
37	115-4458	1	Arm-Trunnion, Tapered Square
38	94-1910	1	Guide-Slot
42	125-4683	2	Shock Valve Kit
44	112-4164	1	Charge Relief Kit
49	106-8761	1	Trunnion Seal / Retainer Kit
56	106-8762	1	Plug-HSH
57	104-2189	1	Plug-Thread, Straight
97	125-4684	1	Spring-Extension
98	115-4046	1	Return Kit
99	105-6184	1	Seal Overhaul Kit

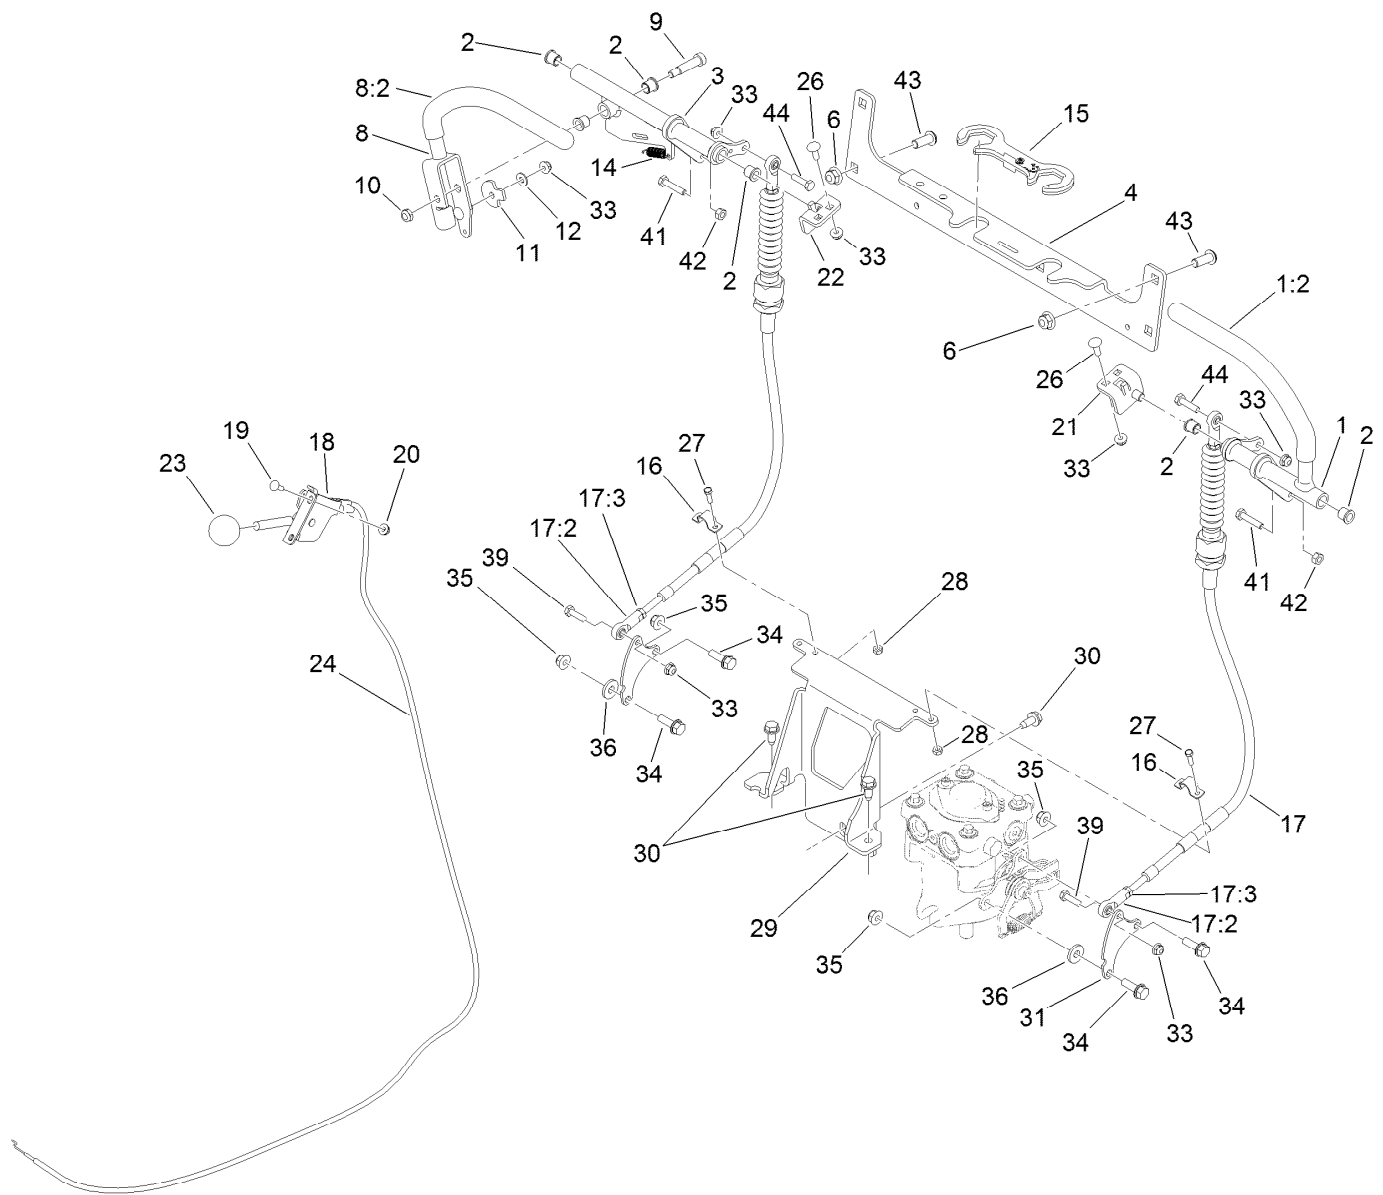

Control Assembly

Ref.	Part Number	Qty.	Description
1	119-8743	1	LH Lever ASM
1:2	119-0222	1	Grip
2	103-9928	6	Bearing
3	119-7353	1	RH Motion Control ASM
4	119-7359-01	1	Bracket-Cross
6	104-8301	4	Nut-Flange, NI
8	119-1887	1	RH Motion Lever ASM
8:2	119-0222	1	Grip
9	114-0239	1	Screw-HSH
10	3296-47	1	Nut-Lock, NI
11	114-0268	1	Cam-Lever
12	3256-22	1	Washer-Flat
14	114-0249	1	Spring-Extension
15	120-8372	1	Lock-Cable
16	119-7370	2	Clamp
17	119-7366	2	Cable ASM
17:2	119-7379	2	Rod-Ball Joint
17:3	3220-1	3	Nut-Jam
18	110-5547	1	Lever-Control
19	1-807533	2	Bolt-CARR


Ref.	Part Number	Qty.	Description
20	32128-17	2	Nut-Lock, Flange
21	119-8690	1	LH Pivot Tab ASM
22	119-8718	1	RH Pivot Tab ASM
23	1-603175	1	Knob-Ball
24	119-6654	1	Cable-Throttle
26	3229-1	4	Bolt-CARR
27	3290-134	4	Screw
28	3296-2	4	Nut-Lock, NI
29	119-8746-01	1	Bracket-Mount, Cable
30	32144-70	3	Screw-HWHTF
31	121-5967	2	Plate-Control, Pump
33	104-7201	9	Nut-HF
34	3234-29	4	Screw-HHF
35	104-8300	4	Nut-Flange, NI
36	4-2390	2	Washer-Flat
39	321-5	2	Screw-HH
41	114-0282	2	Screw-HH
42	3217-5	2	Nut-Hex
43	3274-94	4	Screw-HSBH
44	321-6	2	Screw-HH

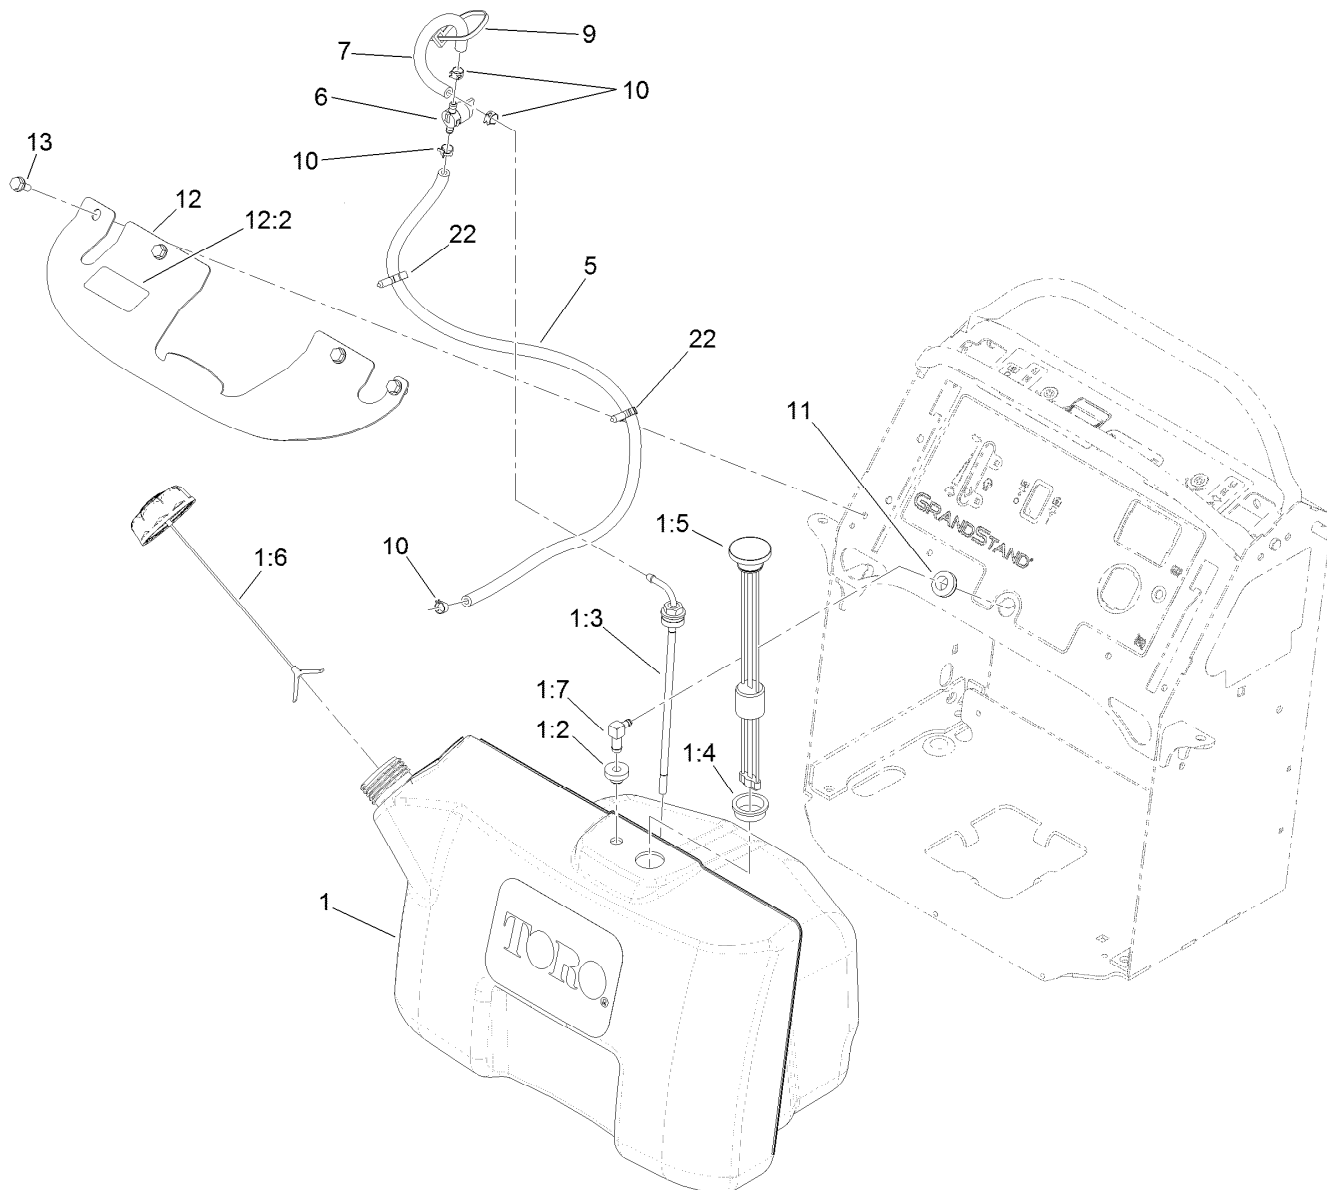

Fuel Tank Assembly

Ref.	Part Number	Qty.	Description
1	119-7340	1	Tank ASM
1:2	46-6560	3	Bushing
1:3	1-643172	3	Elbow-90 DEG
1:4	95-8972	1	Grommet
1:5	117-9719	1	Guage-Fuel
1:6	116-1704	1	Cap-Fuel, Ratcheting
1:7	116-3408	1	Fitting-Fuel, Bulkhead
5	109-0273	1	Hose-Fuel
6	1-603770	1	Valve-Fuel

Ref.	Part Number	Qty.	Description
7	109-0297	1	Hose-Fuel
9	3290-378	1	Tie-Cable
10	2412-98	4	Clamp-Hose
11	112-7069	2	Grommet
12	120-6462	1	Bracket-Tank
12:2	116-3290	1	Decal-Fill, Fuel
13	32144-70	4	Screw-HWHTF
22	32180-040	2	Clip-Harness

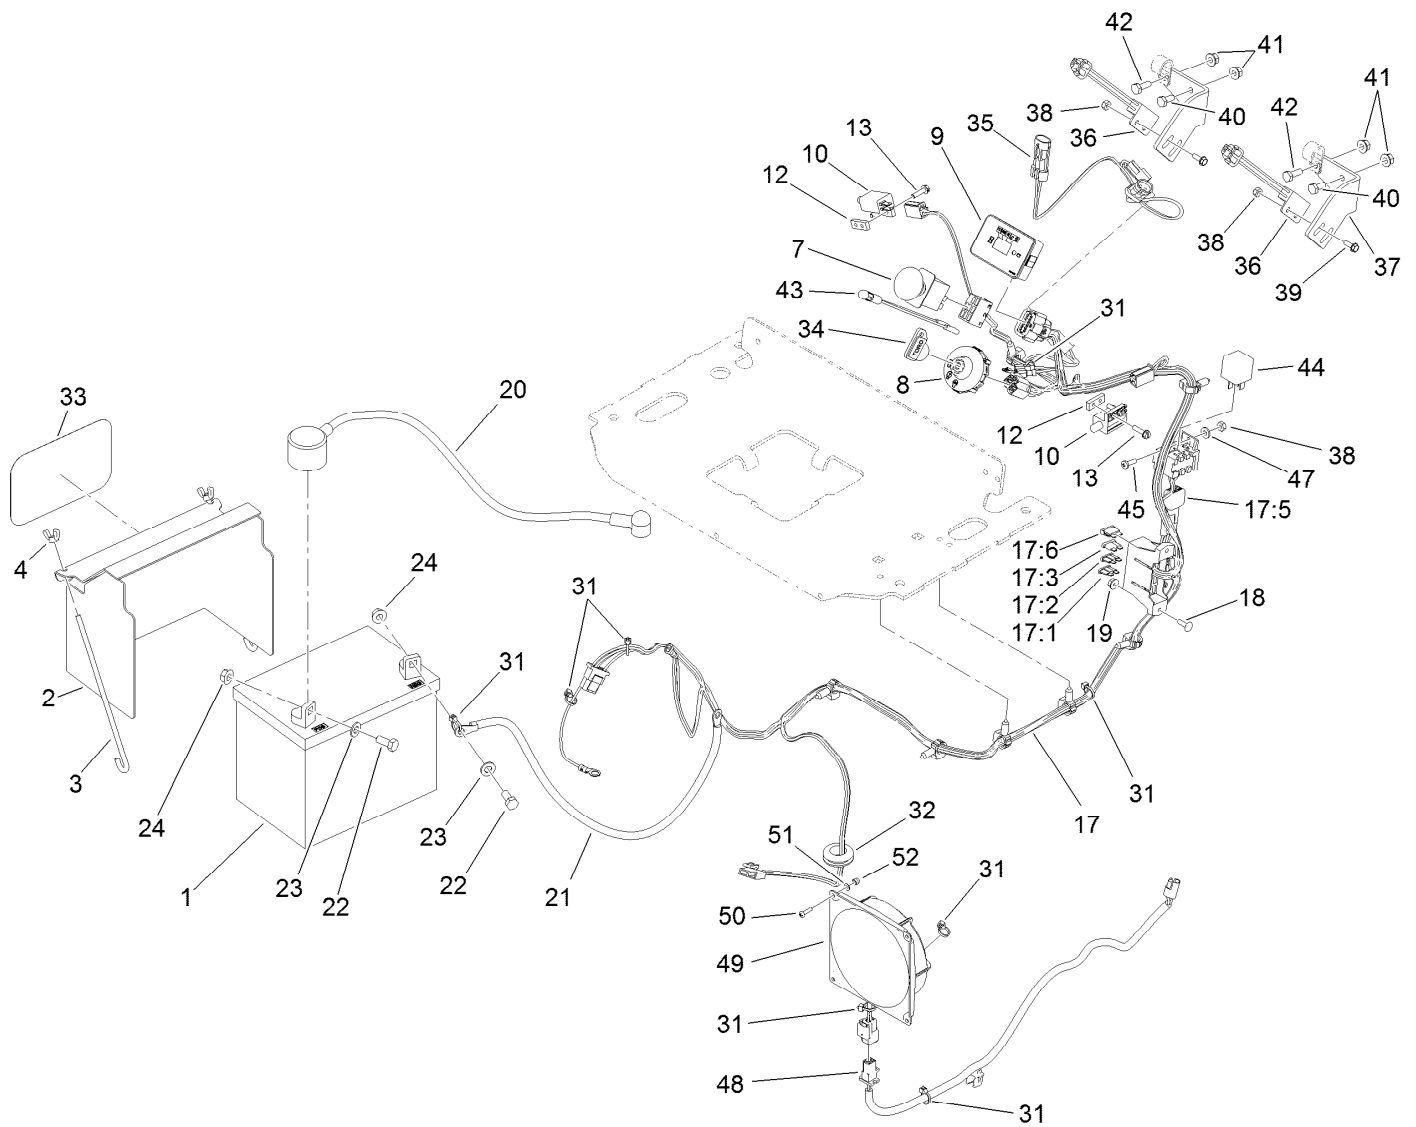


Electrical Assembly

Ref.	Part Number	Qty.	Description
1	104-8162	1	Battery
2	117-0543-01	1	Cover-Battery
3	1-633651	2	Bolt-Holddown
4	1-543792	2	Wingnut
7	114-0279	1	Switch-PTO
8	117-2222	1	Switch-Ignition
9	117-3886	1	Module-Hour Meter
10	1-513152	2	Switch-Closed, Normally
12	1-633181	2	Plate-Tapped
13	32105-13	4	Screw-HWH
17	121-7509	1	Harness-Wire Efi
17:1	109103	1	Fuse-Blade, 30 Amp
17:2	109102	1	Fuse-Blade, 25 Amp
17:3	218-578	1	Fuse-Blade, 10 Amp
17:4	116-0053	1	Cap-Plug ●
17:5	103-3895	1	Diode-Tvs
17:6	109355	1	Fuse-Blade, 15 Amp
18	1-807533	2	Bolt-CARR

Ref.	Part Number	Qty.	Description
19	3290-148	2	Nut-HF
20	115-3864	1	Cable-Battery, Positive
21	105-0836	1	Cable-Battery, Black
22	322-3	2	Screw-HH
23	3256-23	2	Washer-Flat
24	109-5715	2	Nut-HHF, Smooth
31	1-303287	8	Tie-Cable
32	117-2781	1	Grommet
33	68-3640	1	Decal
34	63-8360	1	Key-Ignition (W/Shield)
35	119-8729	1	Harness-Wire, Neutral Switch
36	105-0023	2	Switch-Proximity
37	119-8503-01	2	Bracket-Mount, Switch
38	3296-2	5	Nut-Lock, NI
39	32105-23	4	Screw
40	321-3	2	Screw-HH
41	32128-32	4	Nut-HHF

● Not illustrated

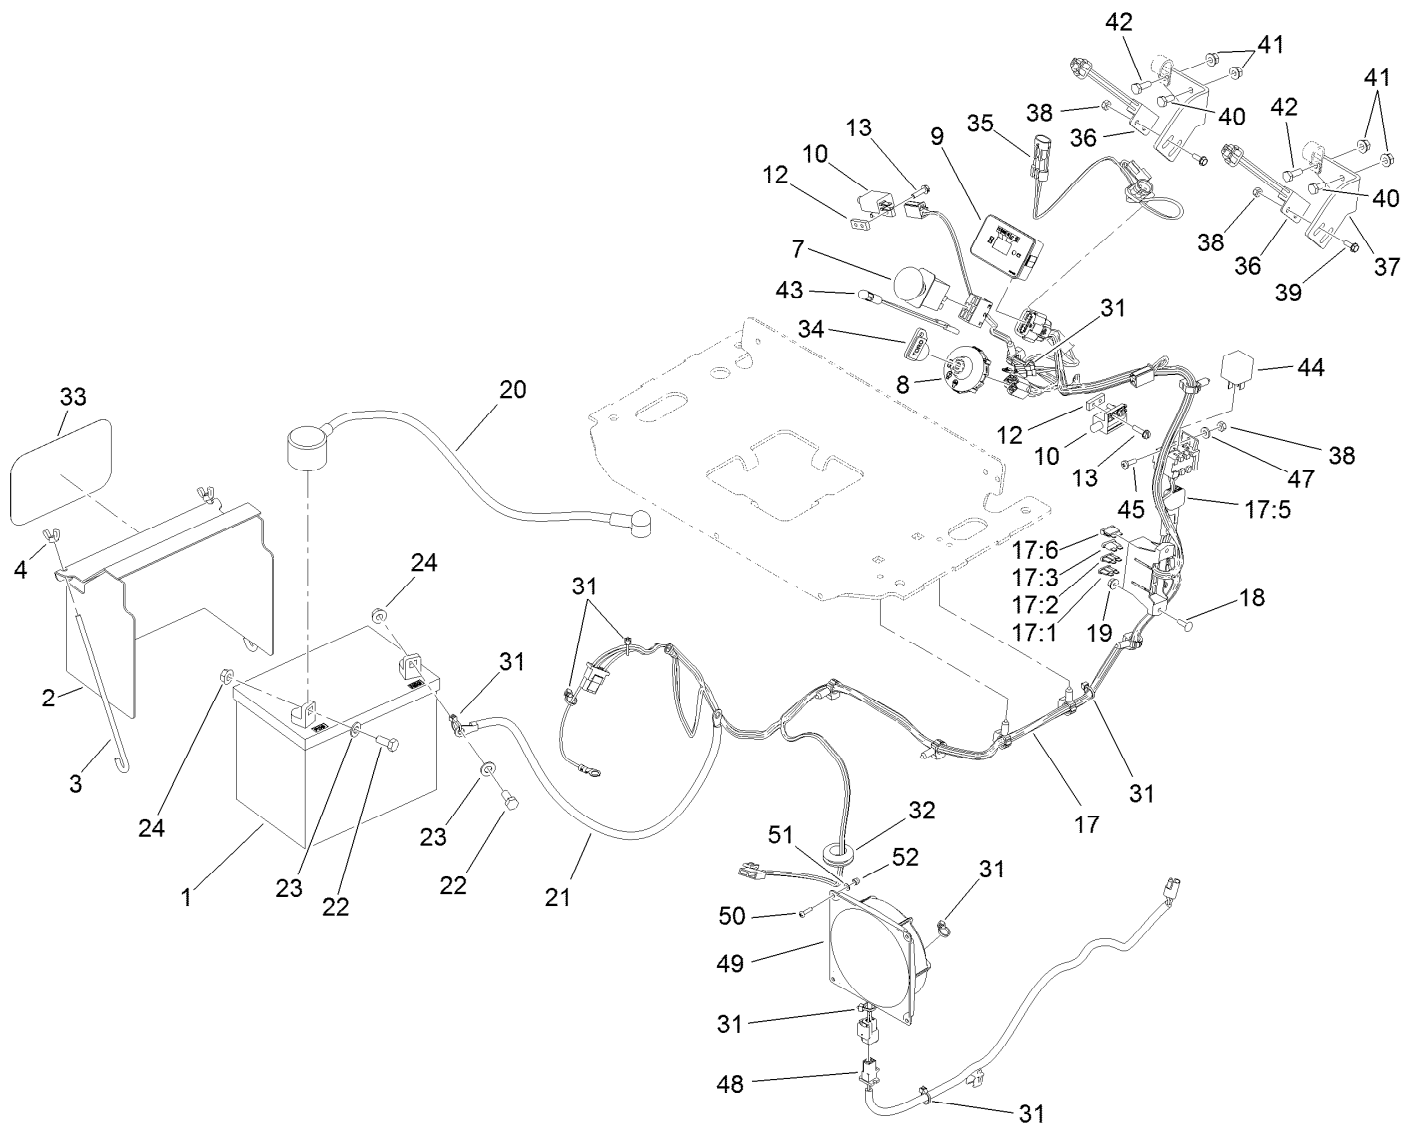


Electrical Assembly (continued)

Ref.	Part Number	Qty.	Description
42	321-4	2	Screw-HH
43	1-643267	1	Indicator-Led, Red
44	1-643275	1	Relay
45	3290-500	1	Screw-PPH
47	3256-14	1	Washer-Flat

Ref.	Part Number	Qty.	Description
48	120-8389	1	Harness-Wire, Fan
49	116-7047	1	Fan-Electric
50	46-0670	4	Screw-PPH
51	48-7990	4	Washer-Flat
52	46-0430	4	Nut-Lock


● Not illustrated

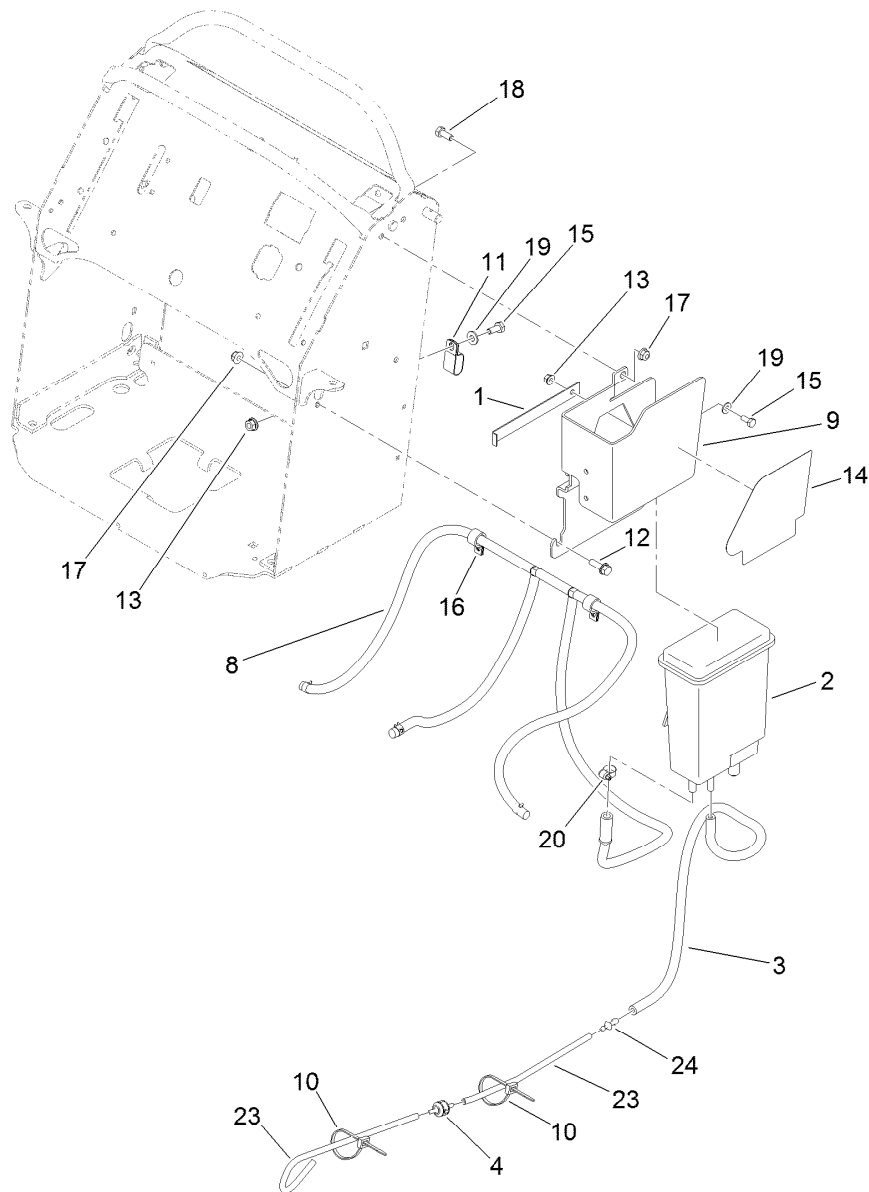

Carbon Canister Assembly

Ref.	Part Number	Qty.	Description
1	120-8307-01	1	Plate-Loc
2	117-9795	1	Canister-Carbon, 1200Cc
3	109-3491	1	Hose-Fuel
4	115-7868	1	Valve-Check, Vacuum
8	120-8303	1	Vent Hose ASM
9	119-7385-01	1	Plate- Adapter
10	3290-378	2	Tie-Cable
11	2412-105	1	Clamp-Tube, Double
12	3234-29	2	Screw-HHF
13	32128-32	2	Nut-HHF

Ref.	Part Number	Qty.	Description
14	121-5972	1	Decal-Service/Spark Arrest
15	321-3	2	Screw-HH
16	2412-87	2	Clamp-Cable
17	104-8300	3	Nut-Flange, NI
18	322-3	1	Screw-HH
19	3256-22	2	Washer-Flat
20	2412-108	1	Clamp-Worm
23	119-4235	2	Hose-Vent, Formed
24	106-8150	1	Fitting-Straight

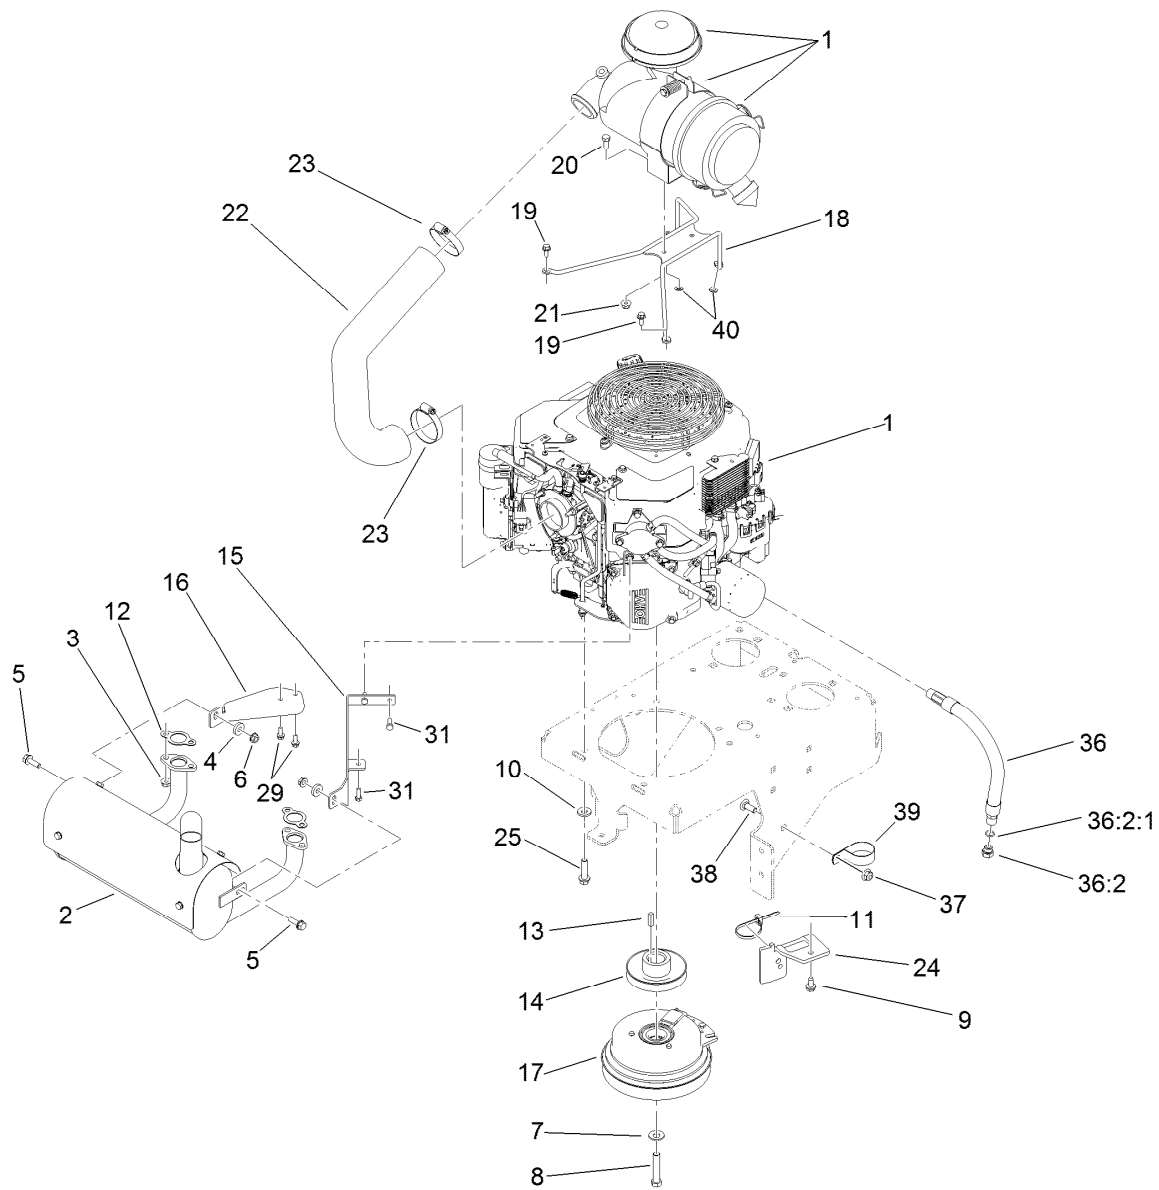

Engine Assembly


Ref.	Part Number	Qty.	Description
1		1	Engine-Kohler ●■
2	116-4092	1	Muffler
3	68-9400	4	Nut-Flange
4	104-7658	2	Spacer
5	3234-29	2	Screw-HHF
6	32128-25	2	Nut-HF
7	1-603610	1	Washer-Spring
8	3212-9	1	Screw-HH ▲
9	32144-70	1	Screw-HWHTF
10	98-5975	3	Washer-Belleville
11	3290-378	1	Tie-Cable
12	110-6697	2	Gasket-Exhaust
13	1-807259	1	Key
14	116-3882	1	Pulley
15	116-4039	1	Bracket-Muffler, LH
16	116-4038	1	Bracket-Muffler, RH
17	116-4172	1	Clutch

Ref.	Part Number	Qty.	Description
18	125-4660-03	1	Mount-Cleaner, Air
19	33103-016	2	Screw-HHF
20	322-3	2	Screw-HH
21	104-8300	2	Nut-Flange, NI
22	116-4047	1	Hose-Intake, Air
23	2412-42	2	Clamp-Hose
24	116-3811-01	1	Bracket-Anchor, Clutch
25	32144-102	4	Screw-HWH
29	116-5722	2	Screw-HWHTF
31	116-4295	3	Screw-HH
36	116-5108	1	Oil Drain Hose ASM
36:2	353-508	1	Plug-HH
36:2:1	237-42	1	O-Ring
37	104-8301	1	Nut-Flange, NI
38	3231-22	1	Screw-CARR
39	2412-147	1	Clamp
40	3256-23	2	Washer-Flat

● Not serviced separately

▲ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.


■ Obtain parts from www.kohlerplus.com

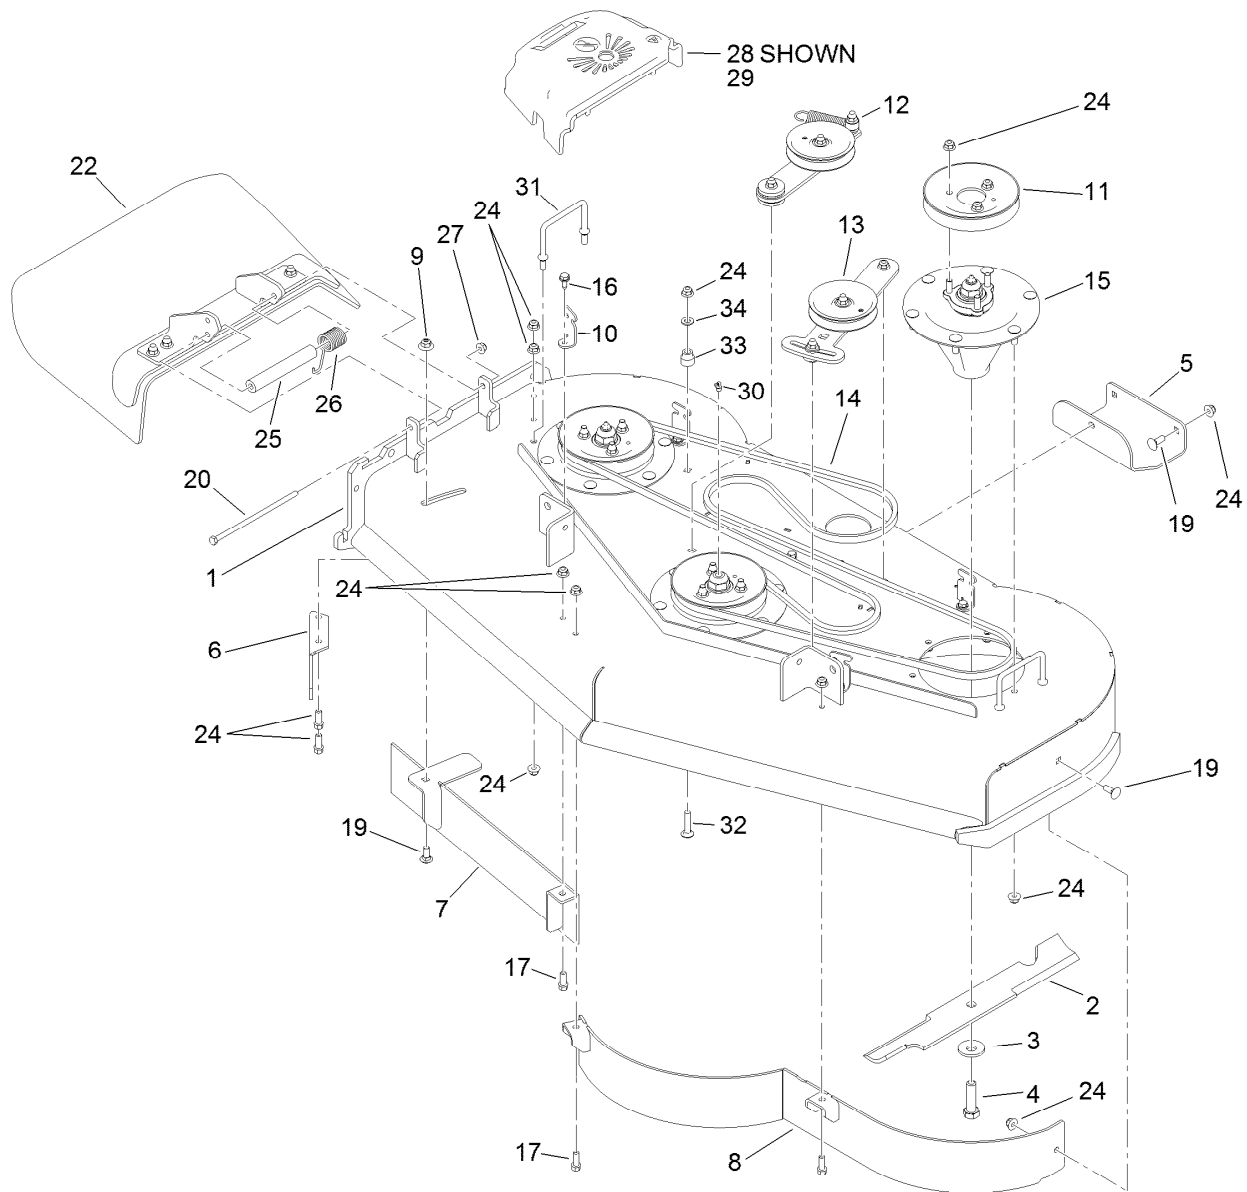

Deck Assembly

Ref.	Part Number	Qty.	Description
1	120-6405	1	Deck ASM
2	105-7781-03	3	Blade-18 Inch, Hi Flow
3	103-0865	3	Washer-Blade Bolt, Heavy
4	51-4060	3	Screw-Blade
5	114-1908-01	1	Skid
6	106-3216-01	1	Baffle-Discharge
7	121-1790-01	1	Baffle
8	114-1979-01	1	Baffle-52 Inch
9	109-6658	1	Nut-Flange, NI
10	117-5758-03	4	Bracket-Cover
11	120-6433	3	Pulley
12	120-6410	1	Idler Arm ASM
13	117-0446	1	Idler Adjust ASM
14	114-0454	1	Belt-V
15	119-8560	3	Spindle ASM
16	32144-70	4	Screw-HWHTF


Ref.	Part Number	Qty.	Description
17	92-1624	5	Screw-HWH
19	3231-2	5	Bolt-CARR
20	322-50	1	Screw-HH
22	120-2451	1	Deflector ASM
24	104-8301	41	Nut-Flange, NI
25	105-4622	1	Spacer
26	108-4052	1	Spring-Torsion
27	104-8300	1	Nut-Flange, NI
28	120-6431	1	Cover-Belt, RH
29	120-6423	1	Cover-Belt
30	302-33	1	Fitting-Grease
31	109-6982	2	Wireform-Cover
32	3231-5	1	Screw-CARR
33	1-603496	1	Bushing-Idler
34	3256-24	1	Washer-Flat

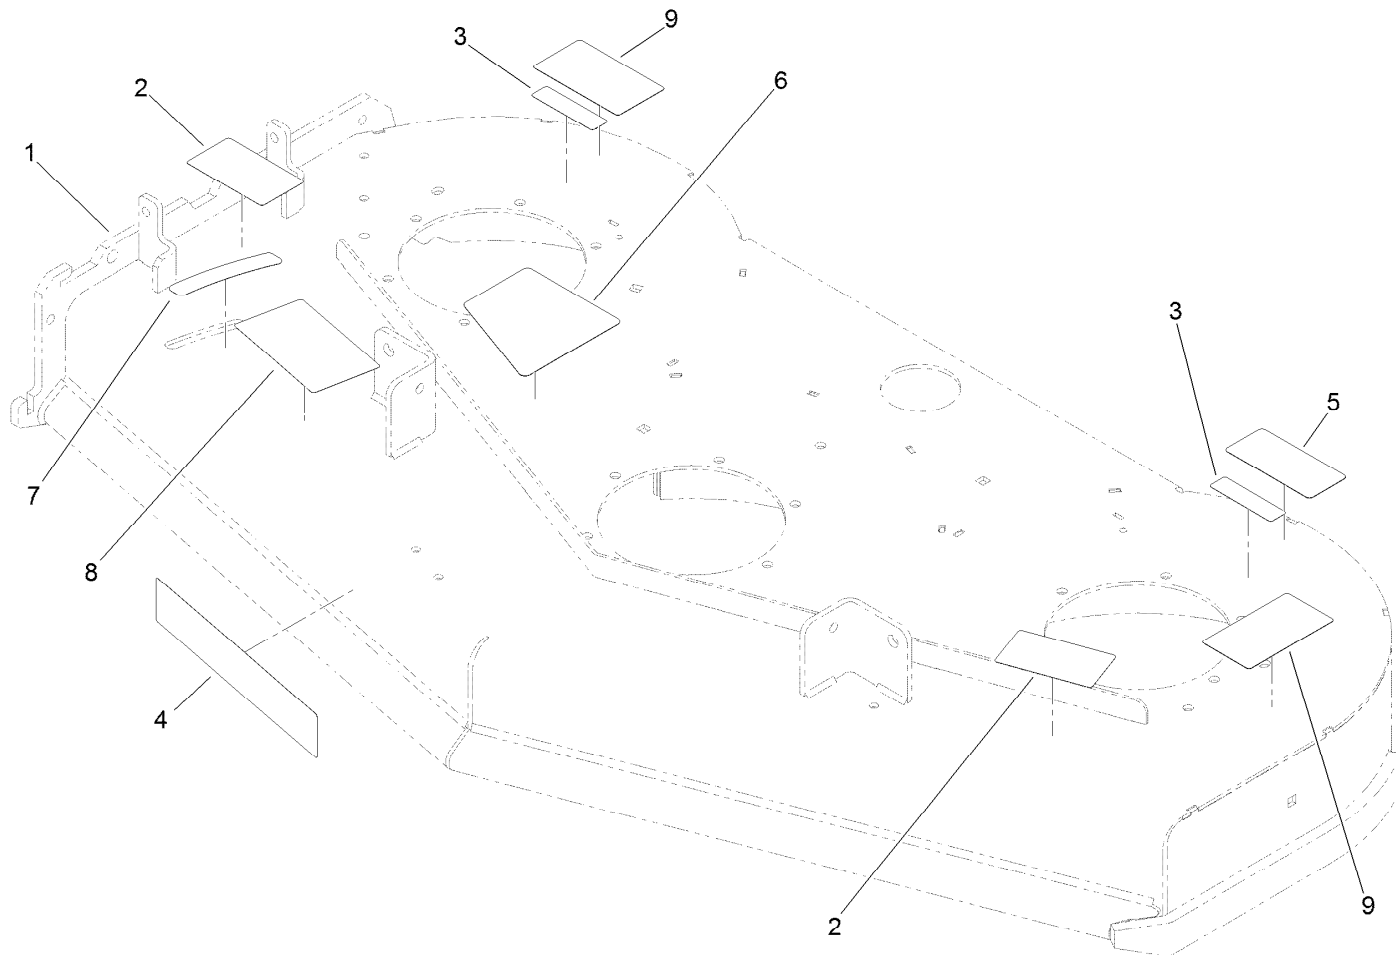

Deck Decal Assembly No. 120-6405


Ref.	Part Number	Qty.	Description
1		1	Deck ASM ●
2	121-6049	2	Decal-Danger
3	119-0217	2	Decal-Danger
4	107-1618	1	Decal
5	93-7818	1	Decal-Torque, Blade Bolt
6	120-6412	1	Decal-Belt Tension, Ce
7	110-2067	1	Decal-Setting, Baffle
8	110-2068	1	Decal-Adjustment, Baffle
9	120-6424	2	Decal-Danger, Rotating Parts

● Not serviced separately

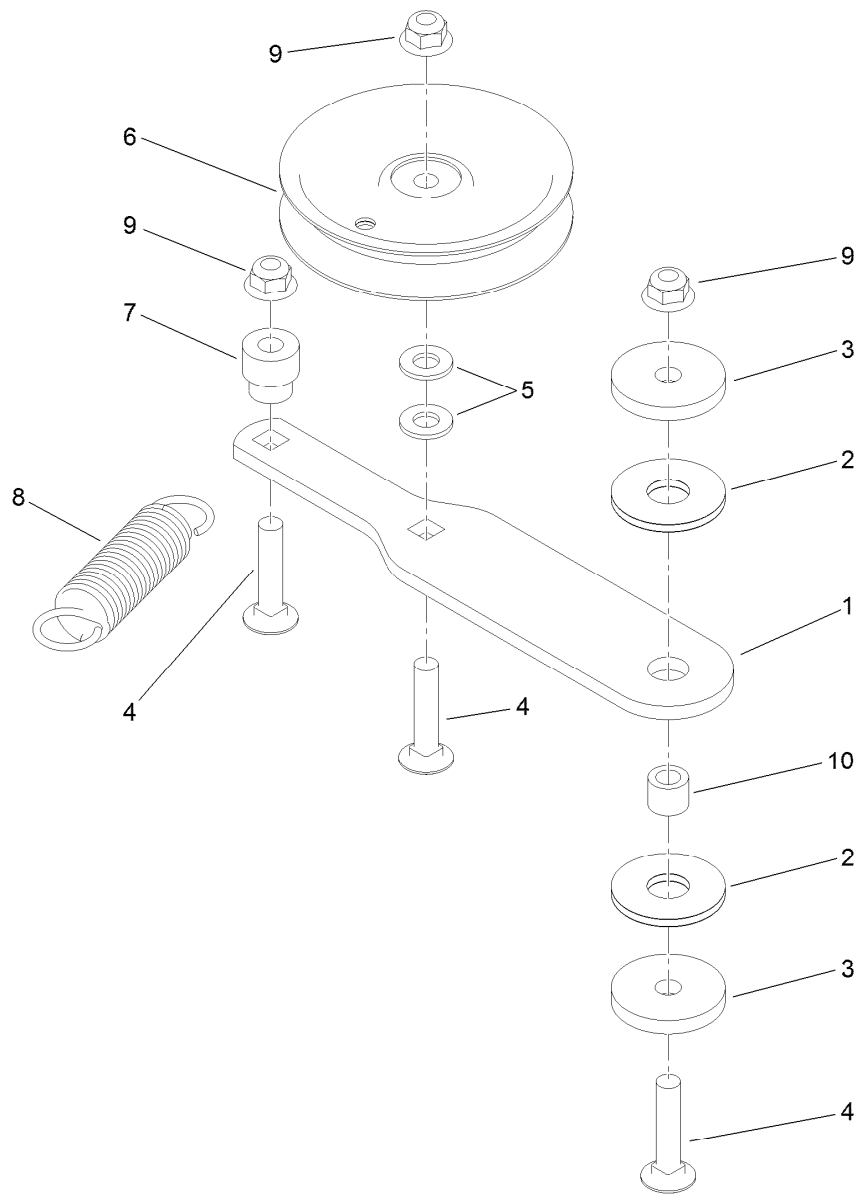


Idler Arm Assembly No. 120-6410

Ref.	Part Number	Qty.	Description
1	120-6409	1	Arm-Idler
2	114-0463	2	Washer-Friction, Composite
3	110-9981	2	Washer-Plain
4	3231-5	3	Screw-CARR
5	3256-24	2	Washer-Flat
6	93-1622	1	Pulley-Idler
7	1-603496	1	Bushing-Idler
8	1-603402	1	Spring-Extension
9	104-8301	3	Nut-Flange, NI
10	1-413088	1	Bushing-Lever, Lift

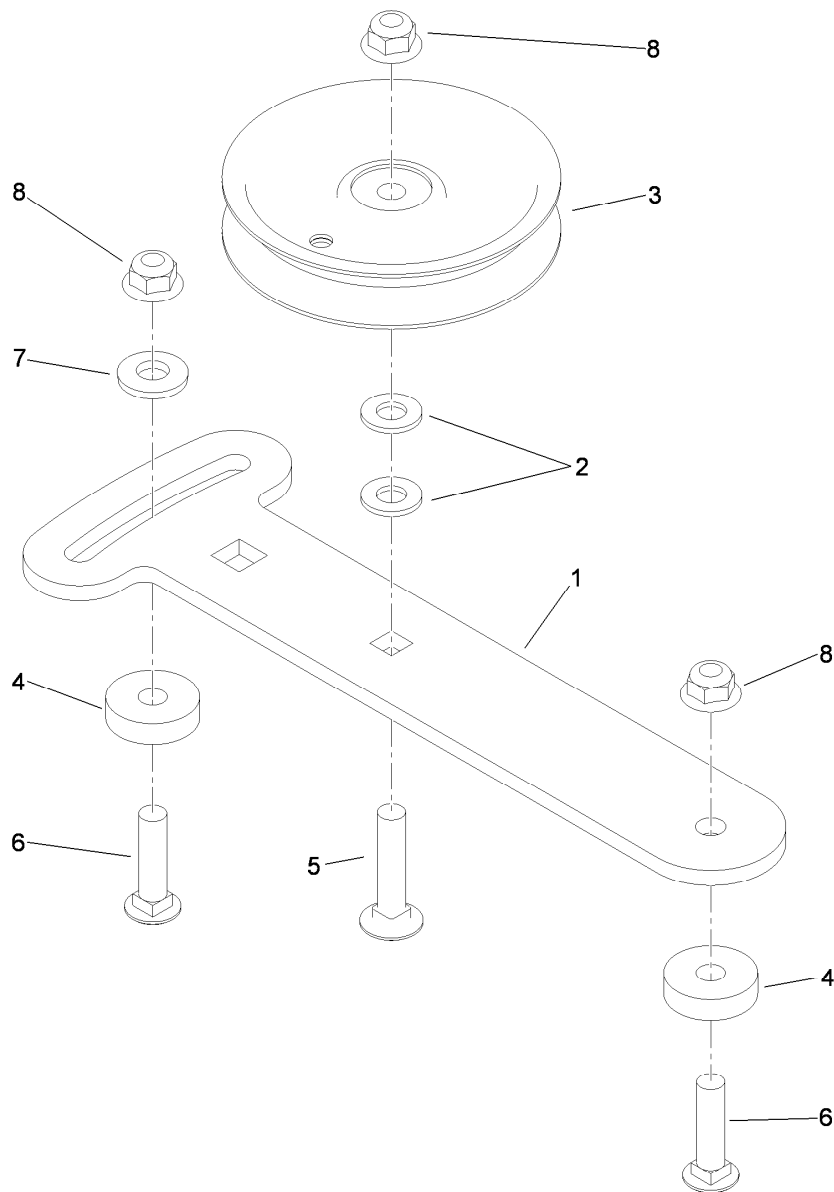

Idler Adjust Assembly No. 117-0446


Ref.	Part Number	Qty.	Description
1	114-1991	1	Plate-Idler
2	3256-24	2	Washer-Flat
3	93-1622	1	Pulley-Idler
4	105-7788	2	Spacer
5	3231-5	1	Screw-CARR
6	3231-4	2	Screw-CARR
7	98-5975	1	Washer-Belleville
8	104-8301	3	Nut-Flange, NI

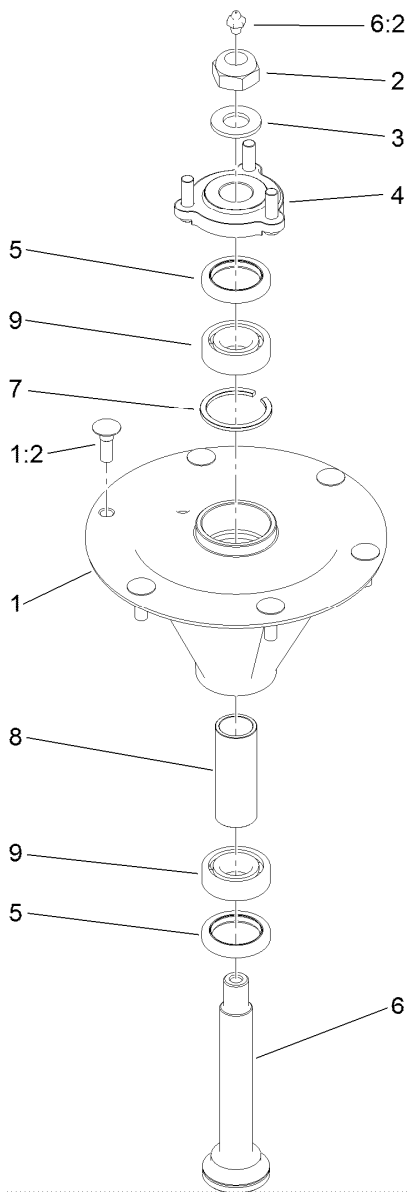

Spindle Assembly No. 119-8560

Ref.	Part Number	Qty.	Description
1		1	Spindle Housing And Studs ASM ●
1:2	114-8195	6	Bolt-Ribbed Neck
2	3296-67	1	Nut-Lock, NI
3	92-5836	1	Washer
4	117-6172	1	Spindle Hub ASM
5	253-133	2	Seal-Oil
6	119-8527	1	Spindle Shaft And Zerk ASM
6:2	302-2	1	Fitting-Grease
7	119-8532	1	Snap Ring
8	117-6184	1	Spacer
9	119-8558	2	Bearing-Noseal

● Not serviced separately

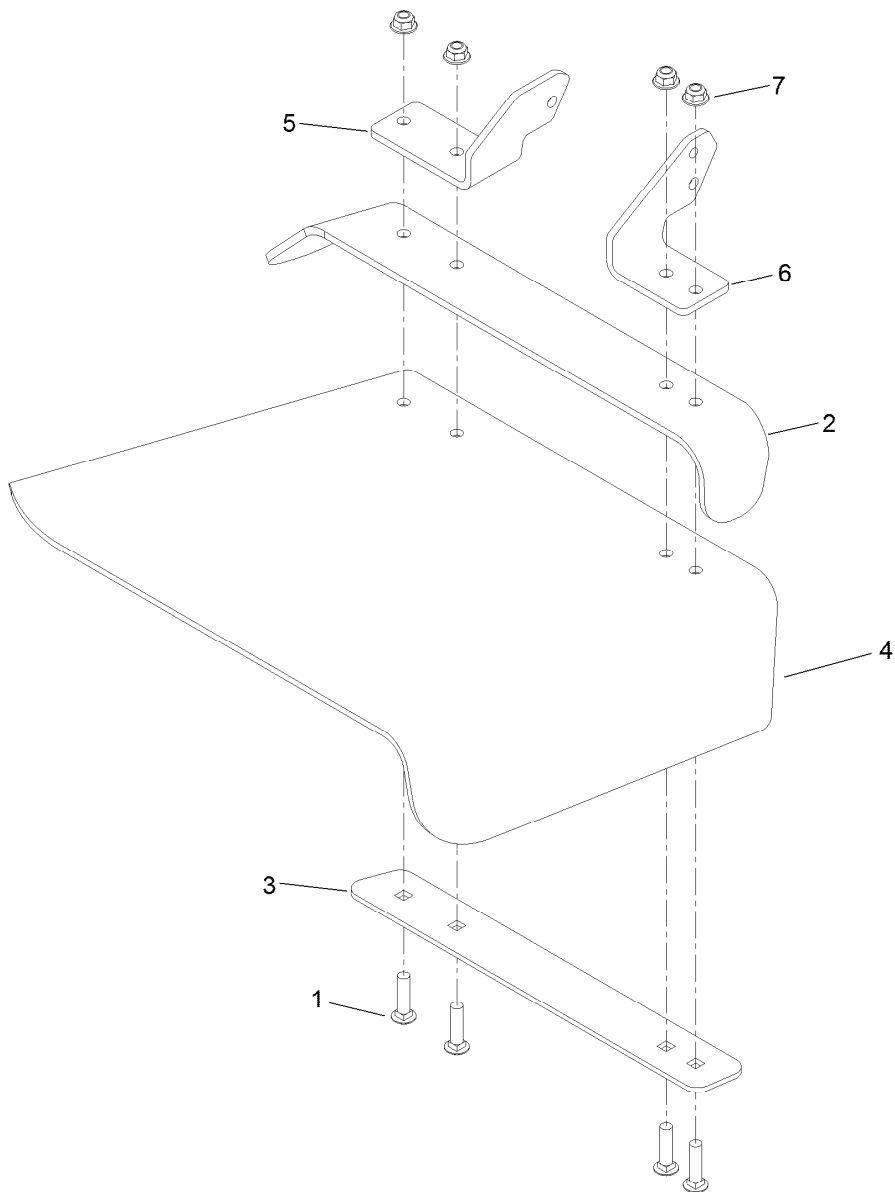

Deflector Assembly No. 120-2451

Ref.	Part Number	Qty.	Description
1	3231-4	4	Screw-CARR
2	106-3246-01	1	Deflector
3	106-3248-03	1	Strap-Discharge
4	110-0759	1	Deflector-Rubber
5	108-4059-01	1	Plate-Hinge, Rear
6	106-3253-01	1	Plate-Hinge, Front
7	104-8301	4	Nut-Flange, NI

Attachments and Accessories

For 79589 GrandStand Mower With 52in TURBO FORCE Cutting Unit

Product Name	Model/Part
Blade-Recycler, 18in.....	105-7779-03
Blade-Hi Flow, 18in.....	105-7781-03
Blade-Med Flow, 18in	105-7794-03
Blade-Low Flow, 18in.....	105-7795-03
Blade-Atomic, 18in	105-7796-03
Turbo Baffle Kit	107-1634
Blade-Hi Flow, 18in (6 Pack).....	108-1117
Blade-Atomic, 18in (6 Pack)	108-1118
Blade-Lo Flow, 18in (6 Pack)	110-0406
Blade-Recycler, 18in (6 Pack).....	110-0408
Blade-Med Flow, 18in (6 Pack)	110-0409
Weight-Cast.....	112-7059-01
Light Kit.....	114-3505
Striping Kit	114-3521
Hypr-Oil 500 (quart)	114-4713
Hypr-Oil 500 (gallon).....	114-4714
Hypr-Oil 500-5 (5 gallon).....	114-4715
Recycler Kit	115-7467
Weight Kit	117-3620
Chute Gate Kit With Bag	119-7292
Speed Control Kit.....	119-7390
Trash Bag Kit	121-7530
Soft Bag (3 Bushel).....	30104
Spark Arrestor	98-9099

Notes:

Notes:



Count on it.