



Form No. 3377-560 Rev A

Count on it.

Parts Catalog

VIB-2.5BP Concrete Vibrator

Model No. 68043—Serial No. 313000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquefied Petroleum Gas

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head


Contents

Backpack 2.5 Vibratory Assembly 4

Decals 6

Attachments and Accessories 7


Backpack 2.5 Vibratory Assembly

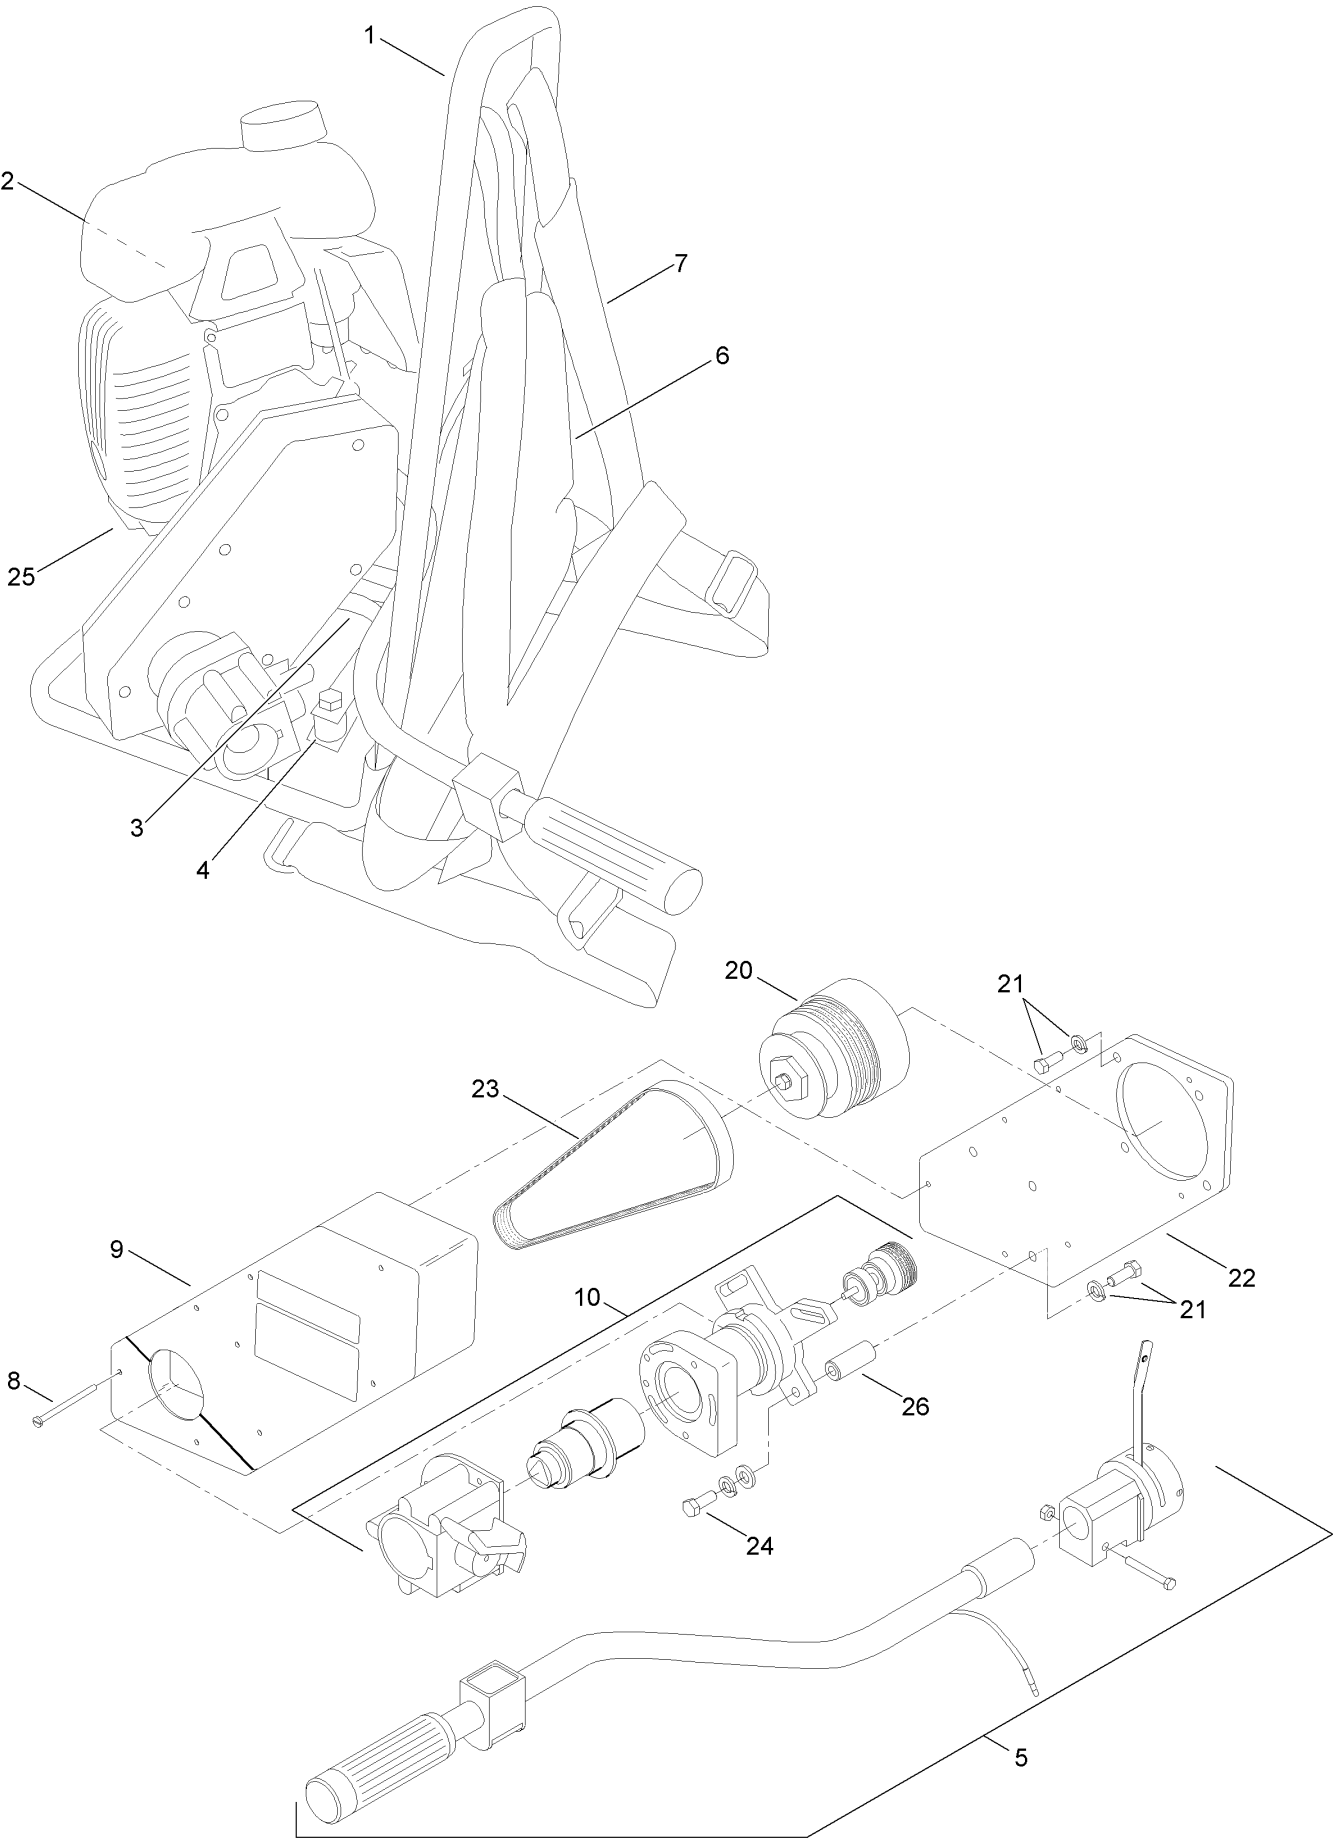


Backpack 2.5 Vibratory Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-5667	1	Frame ASM	9	127-5673	1	Guard-Belt
2	127-5688	1	Starter-Recoil	10	127-5573	1	Drive Block ASM
3	127-5668	1	Spider ASM	20	127-5674	1	Clutch ASM
4	127-5669	3	Mount-Shock, Rubber	21	127-5675	4	Screw-Plate, Transmission
5	127-5572	1	Rotary Throttle ASM	22	127-5676	1	Plate-Mount, Transmission
6	127-5670	1	Backpack Pad With Velcro Strap ASM	23	127-5677	1	V-Belt, 6 Groove
7	127-5671	1	Backpack Shoulder Strap ASM	24	127-5678	3	Screw-Housing, Bearing Block
8	127-5672	5	Screw And Retaining Washer ASM	25	127-5679	1	LH Engine Base ASM
				26	127-7596	3	Spacer

4

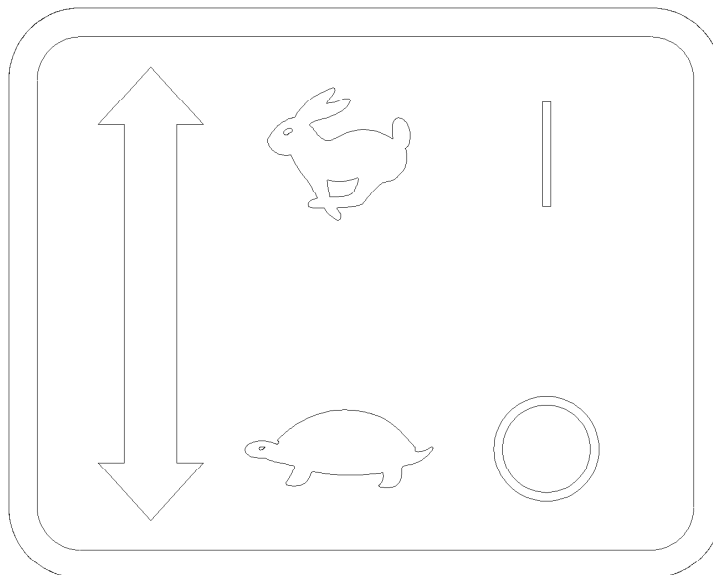

3

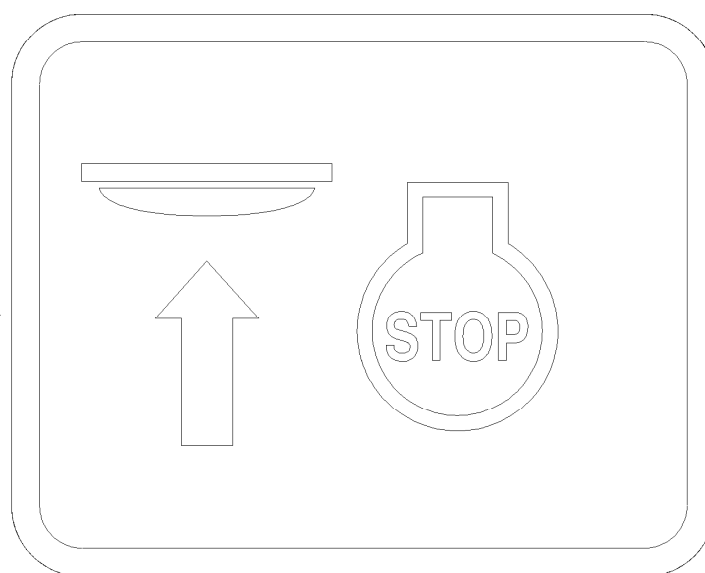

Decals

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	127-1658	1	Decal-Throttle
4	127-1657	1	Decal-Stop Engine

Attachments and Accessories

For 68043 VIB-2.5BP Concrete Vibrator

Product Name	Model/Part
Drive Block Asm	127-5573
Shaft Coupling	127-5643
0.75in Small Head Assembly	68110
1in Small Head Assembly	68111
1.25in Large Head Assembly	68112
1.5in Large Head Assembly	68113
1.75in Large Head Assembly	68114
2in Large Head Assembly	68115
2.5in Large Head Assembly	68116
3ft Small Flex Shaft.....	68117
7ft Small Flex Shaft.....	68118
10ft Small Flex Shaft.....	68119
14ft Small Flex Shaft.....	68120
3ft Large Flex Shaft	68121
5ft Large Flex Shaft	68122
7ft Large Flex Shaft	68123
10ft Large Flex Shaft	68124
14ft Large Flex Shaft	68125
21ft Large Flex Shaft	68126



Count on it.