



Front Weight Kit

TITAN Series Riding Mower

Model No. 79033

Installation Instructions

Loose Parts

Use the chart below to verify that all parts have been shipped.

| Description | Qty. | Use |
|--------------------|------|---------------------|
| Weight | 2 | |
| Adhesive bumper | 2 | |
| Rod | 1 | |
| Washer (5/16 inch) | 4 | Install the weight. |
| Hairpin cotter pin | 2 | |

Installing the Weight

CAUTION

The attachment changes the weight distribution of the machine. Operating the machine without the front weights may cause an unstable condition which could result in a loss of control.

Ensure the front weights are properly installed before operating the machine with the attachment.

- For machines with a mower housing pan, remove the 2 nuts and bolts that secure the front of the mower housing pan to the machine (Figure 1). Ensure the pan is installed once the weights are secured.

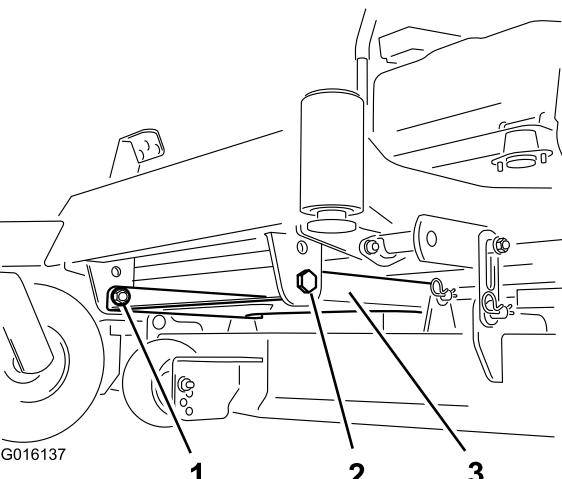


Figure 1

- Nut
- Bolt
- Mower housing pan

- Install an adhesive bumper to the weight (Figure 2).

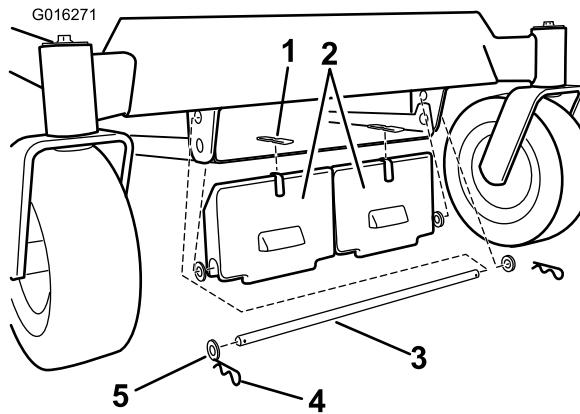


Figure 2

| | |
|--------------------|-------------|
| 1. Adhesive bumper | 4. Hair pin |
| 2. Front weight | 5. Washer |
| 3. Rod | |

- Install the weights to the front of the machine frame. Secure the weights with a rod, four washers, and two hairpins as shown in Figure 2.



Note: When installing the front weight allow it to rest on the front lip of the underside of the machine frame as shown [Figure 3](#). This will suspend the weight while you secure it to the machine. Use care not to dislodge the weight when installing the supporting rod.

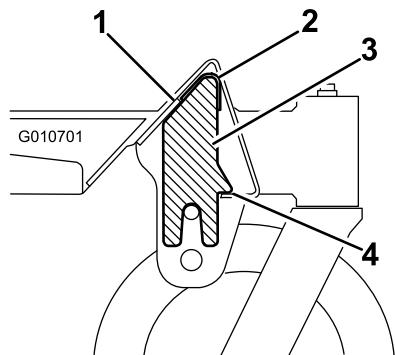


Figure 3

- 1. Cutaway of the front of the machine frame
- 2. Bumper
- 3. Weight
- 4. Rest the weight here during install

Important: Whenever you remove the attachment, remember to remove the front weight to return the proper stability to the machine.

- 4. For machines with a mower housing pan, install the mower housing pan to the machine ([Figure 1](#)).