



**Count on it.**

# Parts Catalog

## Power Max Heavy Duty 928 OXE Snowthrower

Model No. 38822—Serial No. 313000001 and Up



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# List of Abbreviations

**AR:** as required

**ASM:** assembly

**BBC:** blade brake control

**BHTF:** button head thread forming

**CARR:** carriage

**CCW:** counter clockwise

**CW:** clockwise

**DEG:** degrees

**DPA:** Dual Point Adjustment

**ECM:** electronic control module

**EXT:** external

**FH:** flat head

**GA:** gauge

**HD:** heavy-duty

**HF:** hex flange

**HH:** hex head

**HHF:** hex head flange

**HHFTF:** hex head flange thread forming

**HJ:** hex jam

**HLH:** hex lag head

**HOC:** height-of-cut

**HSBH:** hex socket button head

**HSFH:** hex socket flat head

**HSH:** hex socket head

**HWH:** hex washer head

**HWHTF:** hex washer head thread forming

**HYD:** hydraulic

**LH:** left hand

**LP:** Liquefied Petroleum Gas

**LPG:** Liquefied Petroleum Gas

**NI:** nylon insert

**NPTF:** national pipe thread fine

**PFH:** phillips flat head

**PPH:** phillips pan head

**PPHTF:** phillips pan head thread forming

**PRH:** phillips round head

**PTH:** phillips truss head

**PTO:** power-take-off

**RH:** right hand

**ROPS:** roll-over protection system

**RRB:** rear roller brush

**SFH:** slotted fillister head

**SHH:** slotted hex head

**SHWH:** slotted hex washer head

**SPH:** slotted pan head

**SQH:** square head

**SRH:** slotted round head

**STD:** standard

**TAP:** self tapping

**TTH:** torx truss head

# Contents

Housing Assembly ..... 4

Traction Frame Assembly ..... 5

Idler and Linkage Assembly ..... 6

Auger and Impeller Assembly ..... 8

28 Inch Auger Gearcase Assembly No. 108-7329 ..... 9

Impeller Assembly ..... 10

Engine Assembly ..... 11

Engine Decal Assembly ..... 12

Fuel Tank and Recoil Engine Assembly ..... 13

Crankcase Engine Assembly ..... 14

Muffler, Cylinder Head and Carburetor Engine Assembly ..... 16

Chute Assembly ..... 18

Lever Chute Control Assembly ..... 19

 
Lower Handle and Headlamp Assembly ..... 20

Handle and Control Assembly ..... 21

Wheel Clutch Assembly ..... 22

Wheel Clutch Sprocket Assembly ..... 24


Attachments and Accessories ..... 25

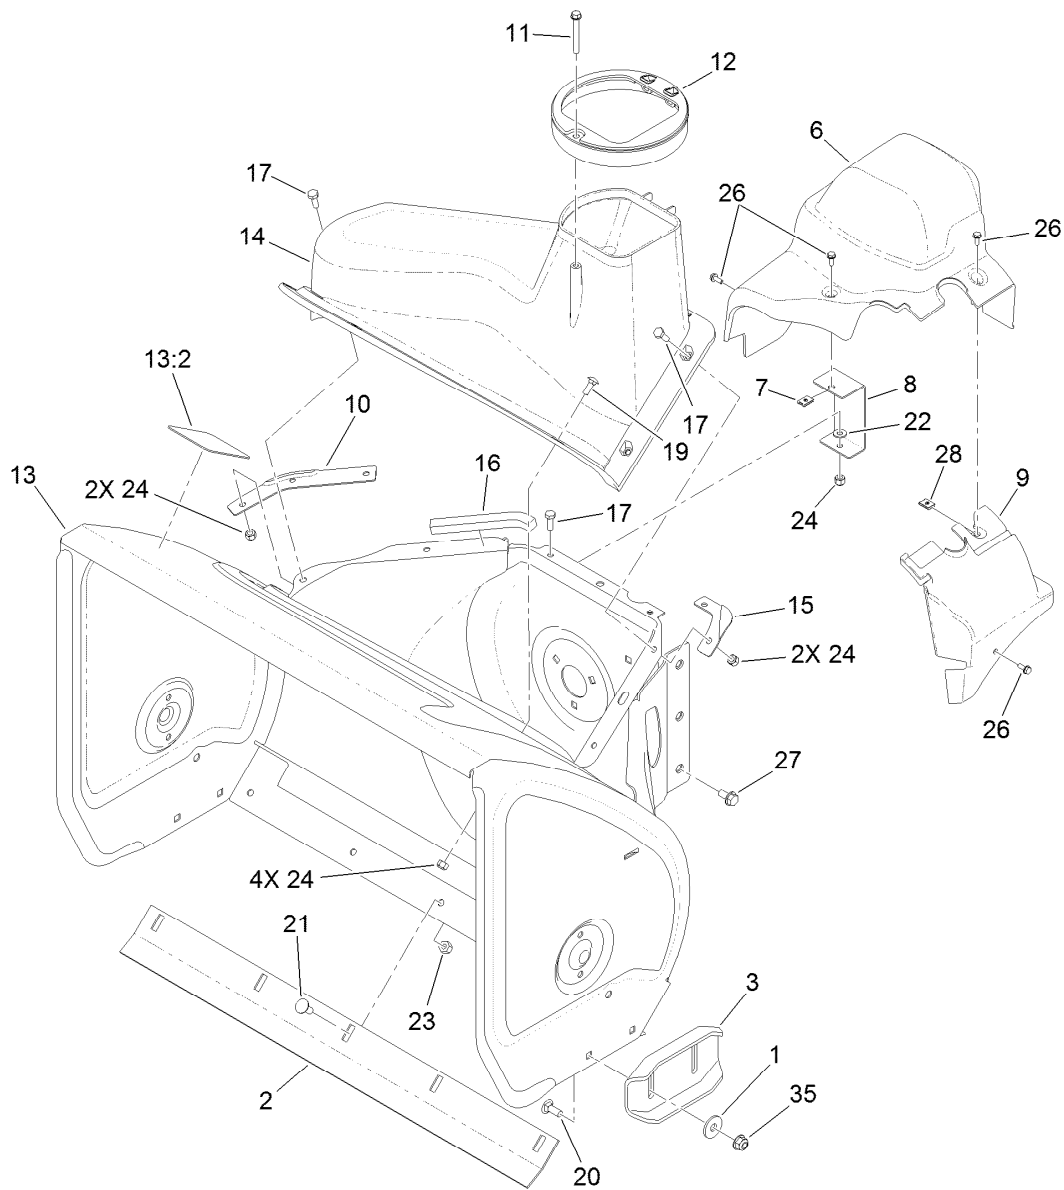

## Housing Assembly


| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 1    | 52-2861     | 4    | Washer                  |
| 2    | 106-4573-01 | 1    | Scraper-Fixed           |
| 3    | 120-3098-03 | 2    | Skid                    |
| 6    | 119-1563    | 1    | Cover-Belt              |
| 7    | 107-1013    | 1    | Nut-Speed, U-Type       |
| 8    | 107-1014-03 | 1    | Bracket-Cover, Clip Nut |
| 9    | 107-1016    | 1    | Cover-Extension, Belt   |
| 10   | 107-1017-03 | 1    | Seal-Flange, Cover      |
| 11   | 107-3003    | 1    | Screw-Plastite          |
| 12   | 107-3006    | 1    | Guide-Chute             |
| 13   | 107-3824    | 1    | Housing-Auger, 28 Inch  |
| 13:2 | 107-3040    | 1    | Decal-Danger, Auger     |
| 14   | 108-0017    | 1    | Cover                   |
 
| Ref. | Part Number | Qty. | Description    |
|------|-------------|------|----------------|
| 15   | 108-0039-03 | 1    | Seal           |
| 16   | 120-0124    | 1    | Seal-Housing   |
| 17   | 321-4       | 7    | Screw-HH       |
| 19   | 3229-1      | 4    | Bolt-CARR      |
| 20   | 3230-16     | 4    | Screw-CARR     |
| 21   | 3230-23     | 5    | Screw-CARR     |
| 22   | 3256-22     | 1    | Washer-Flat    |
| 23   | 3296-29     | 5    | Nut-Lock, NI   |
| 24   | 3296-42     | 11   | Nut-Lock, NI   |
| 26   | 32144-112   | 4    | Screw-HWH      |
| 27   | 32144-14    | 6    | Screw-HWHTF    |
| 28   | 701493      | 1    | Nut-Speed      |
| 35   | 104-8300    | 4    | Nut-Flange, NI |

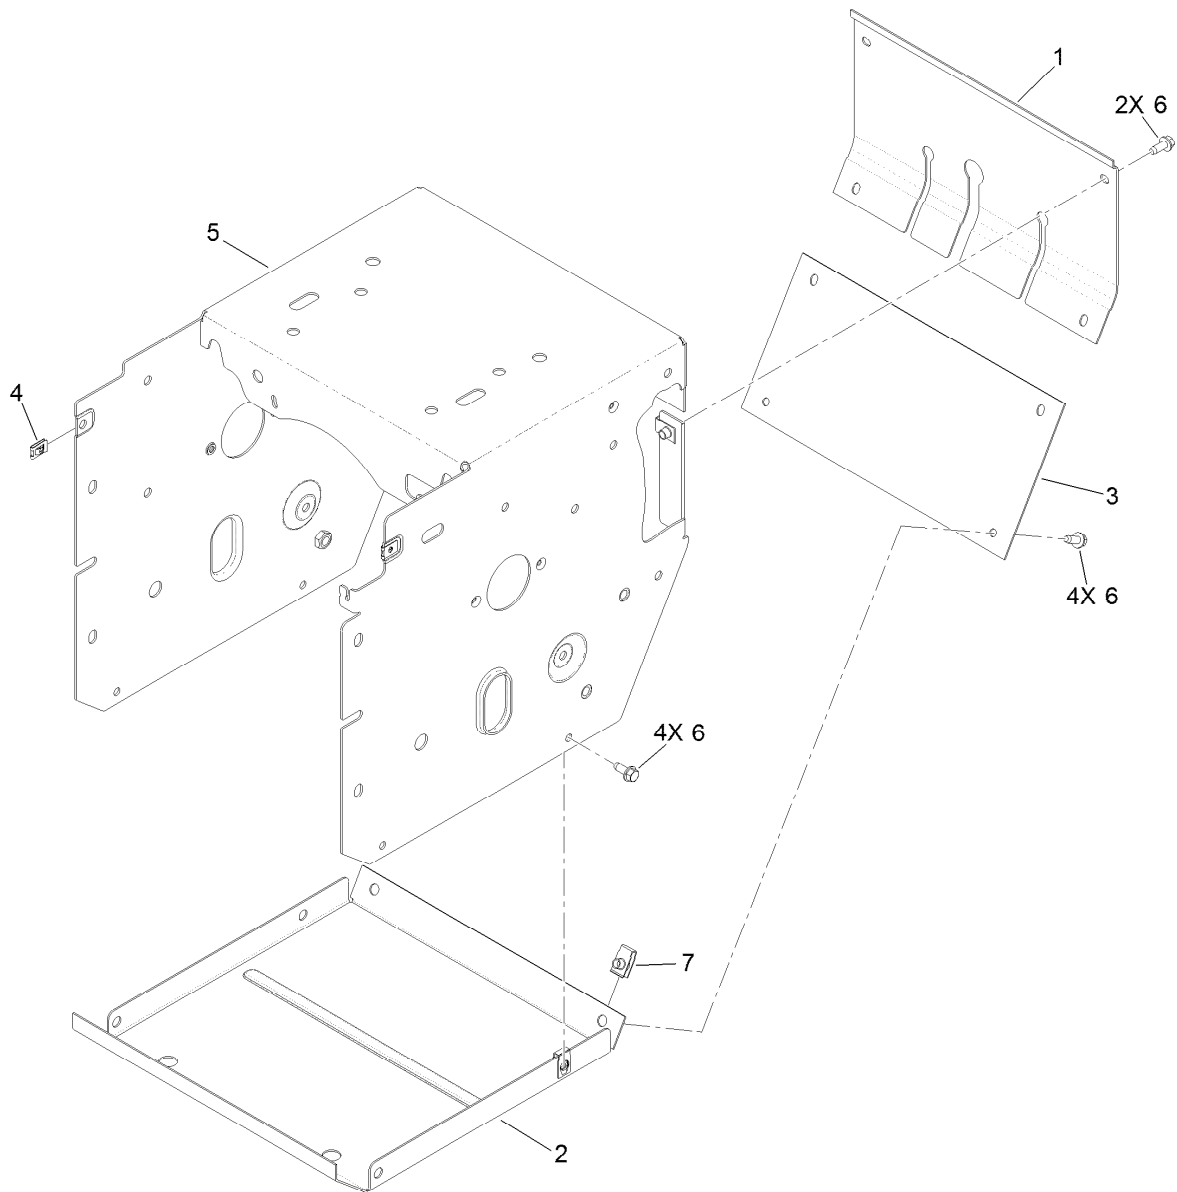


## Traction Frame Assembly
 
| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 1    | 108-0022-01 | 1    | Cover-Upper        |
| 2    | 106-7330-01 | 1    | Pan-Bottom         |
| 3    | 106-7345-01 | 1    | Cover-Lower        |
| 4    | 107-1013    | 2    | Nut-Speed, U-Type  |
| 5    | 120-9832-01 | 1    | Traction Frame ASM |
| 6    | 32144-10    | 10   | Screw-HWH          |
| 7    | 107069      | 7    | Clip               |

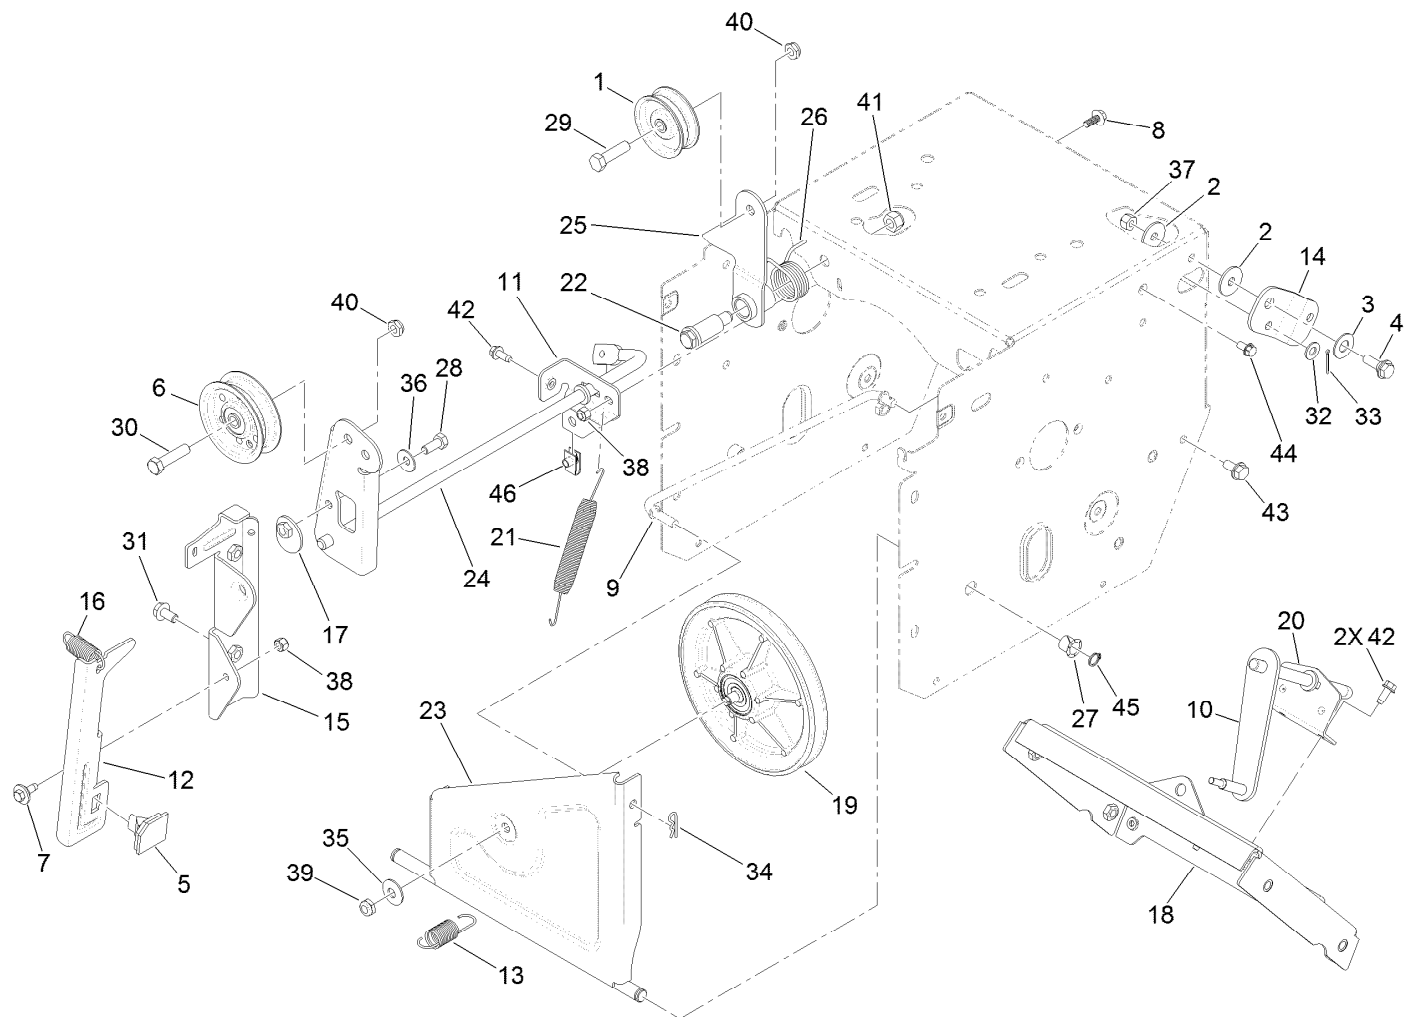

## Idler and Linkage Assembly

 
| Ref. | Part Number | Qty. | Description              | Ref. | Part Number | Qty. | Description                |
|------|-------------|------|--------------------------|------|-------------|------|----------------------------|
| 1    | 3-4244      | 1    | Pulley-Idler             | 22   | 108-5056    | 1    | Bolt-Shoulder              |
| 2    | 5-4460      | 2    | Washer-Pivot             | 23   | 108-7307    | 1    | Friction Wheel Bracket ASM |
| 3    | 25-5640     | 1    | Washer                   | 24   | 120-0144-03 | 1    | Impeller Clutch ASM        |
| 4    | 27-0410     | 1    | Screw-Shoulder           | 25   | 120-0148    | 1    | Arm-Traction Idler ASM     |
| 5    | 66-8060     | 1    | Pad-Brake                | 26   | 120-3060    | 1    | Spring-Torsion             |
| 6    | 92-7104     | 1    | Pulley-Idler             | 27   | 256-257     | 2    | Bushing-Nyliner            |
| 7    | 92-9698     | 1    | Screw-Shoulder           | 28   | 322-3       | 1    | Screw-HH                   |
| 8    | 99-6810     | 1    | Screw-HH                 | 29   | 323-29      | 1    | Screw-HH                   |
| 9    | 106-4467    | 1    | Link-Control, Speed      | 30   | 323-8       | 1    | Screw-HH                   |
| 10   | 106-7268    | 1    | Lever-Control, Traction  | 31   | 3234-7      | 2    | Screw-HHF                  |
| 11   | 120-9824    | 1    | Bracket-Clutch, Impeller | 32   | 3256-23     | 1    | Washer-Flat                |
| 12   | 107-1000    | 1    | Arm-Brake                | 33   | 3272-4      | 1    | Pin-Cotter                 |
| 13   | 107-1003    | 1    | Spring-Extension         | 34   | 3290-307    | 1    | Pin-Hair                   |
| 14   | 107-1011    | 1    | Bellcrank-Drive          | 35   | 3290-340    | 1    | Washer-Belleville          |
| 15   | 107-1039    | 1    | Bracket-Idler, Impeller  | 36   | 3290-456    | 1    | Washer-Belleville          |
| 16   | 107-1045    | 1    | Spring-Extension         | 37   | 3296-29     | 1    | Nut-Lock, NI               |
| 17   | 107-1047    | 1    | Nut                      | 38   | 3296-42     | 2    | Nut-Lock, NI               |
| 18   | 108-0026-01 | 1    | Shift Plate ASM          | 39   | 3296-5      | 1    | Nut-Lock                   |
| 19   | 108-0031    | 1    | Traction Pulley ASM      | 40   | 3296-59     | 2    | Nut-Lock, NI               |
| 20   | 108-0036    | 1    | Bracket-Rod, Shift       | 41   | 3296-76     | 1    | Nut-Lock, NI               |
| 21   | 108-2976    | 1    | Spring-Extension         | 42   | 32144-10    | 3    | Screw-HWH                  |

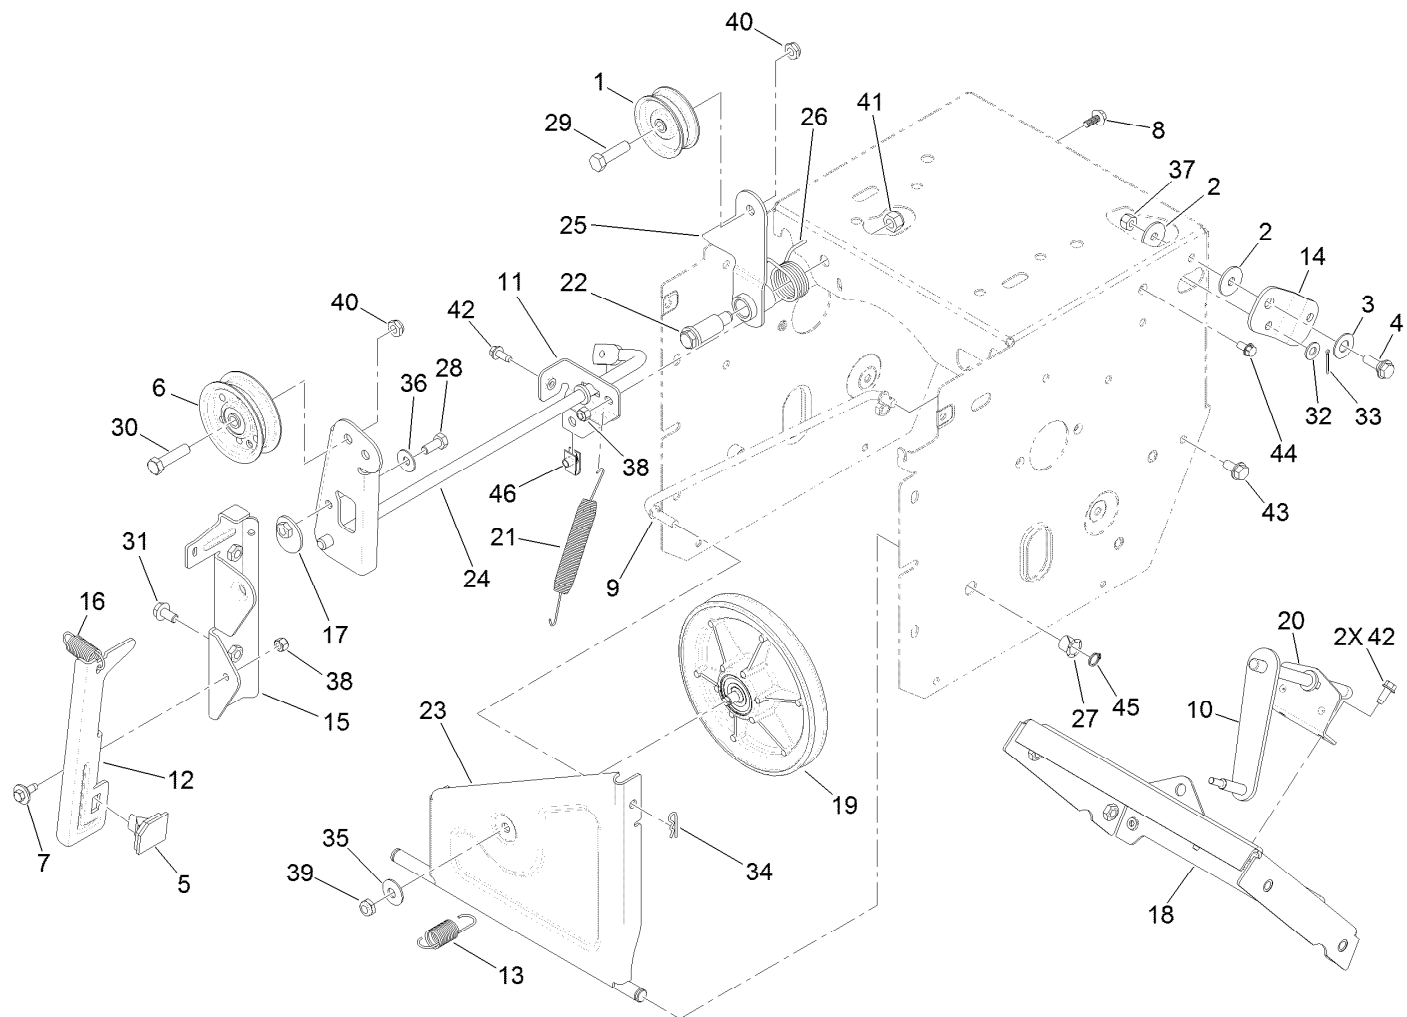

## Idler and Linkage Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|------|-------------|------|-------------|
| 43   | 32144-14    | 4    | Screw-HWHTF |
| 44   | 32144-4     | 1    | Screw-HWH   |
 
| Ref. | Part Number | Qty. | Description    |
|------|-------------|------|----------------|
| 45   | 32151-61    | 2    | Ring-Retaining |
| 46   | 107069      | 1    | Clip           |

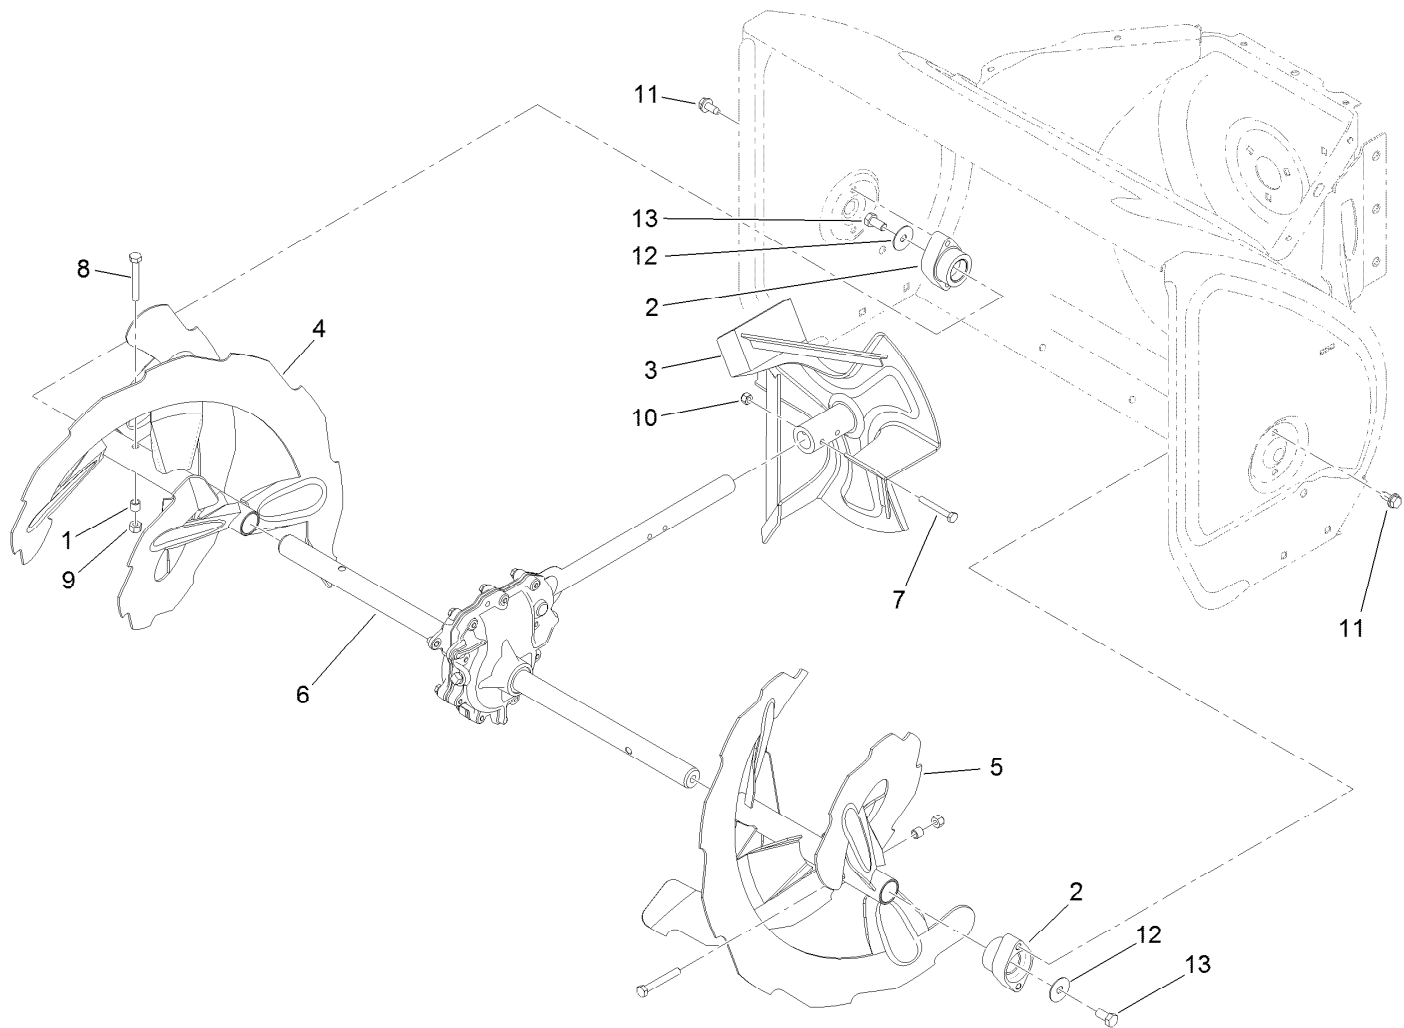


## Auger and Impeller Assembly

| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 1    | 1-633545    | 2    | Spacer                     |
| 2    | 106-4570    | 2    | Auger-Bearing              |
| 3    | 106-4576-03 | 1    | Impeller ASM               |
| 4    | 106-7291-03 | 1    | Auger-RH                   |
| 5    | 106-7301-03 | 1    | LH Auger ASM               |
| 6    | 108-7329    | 1    | 28 Inch Auger Gearcase ASM |
| 7    | 321-11      | 2    | Screw-HH                   |
| 8    | 322-11      | 2    | Screw-HH                   |
| 9    | 3296-29     | 2    | Nut-Lock, NI               |
| 10   | 3296-42     | 2    | Nut-Lock, NI               |
| 11   | 32144-70    | 4    | Screw-HWHTF                |
| 12   | 3-0750      | 2    | Washer                     |
| 13   | 323-4       | 2    | Screw-HH                   |




| <b>Ref.</b> | <b>Part Number</b> | <b>Qty.</b> | <b>Description</b>     |
|-------------|--------------------|-------------|------------------------|
| 6           | 3257-10            | 1           | Key-Woodruff           |
| 7           | 66-7811            | 1           | Shaft-Impeller         |
| 8           | 253-149            | 1           | Seal-Oil               |
| 9           | 37-6560            | 1           | Bushing-Input          |
| 10          | 62-1150            | 1           | Bushing-Worm           |
| 11          | 252-78             | 2           | Washer-Thrust          |
| 12          | 252-76             | 1           | Bearing-Thrust         |
| 13          | 32151-33           | 1           | Ring-Retaining, EXT    |
| 14          | 108-4862           | 9           | Screw-HWHTF            |
| 15          | 281-1              | 1           | Plug-Pipe, SQH         |
| 16          | 108-7330           | 1           | Gasket-Gearcase, Auger |

 3369-573C

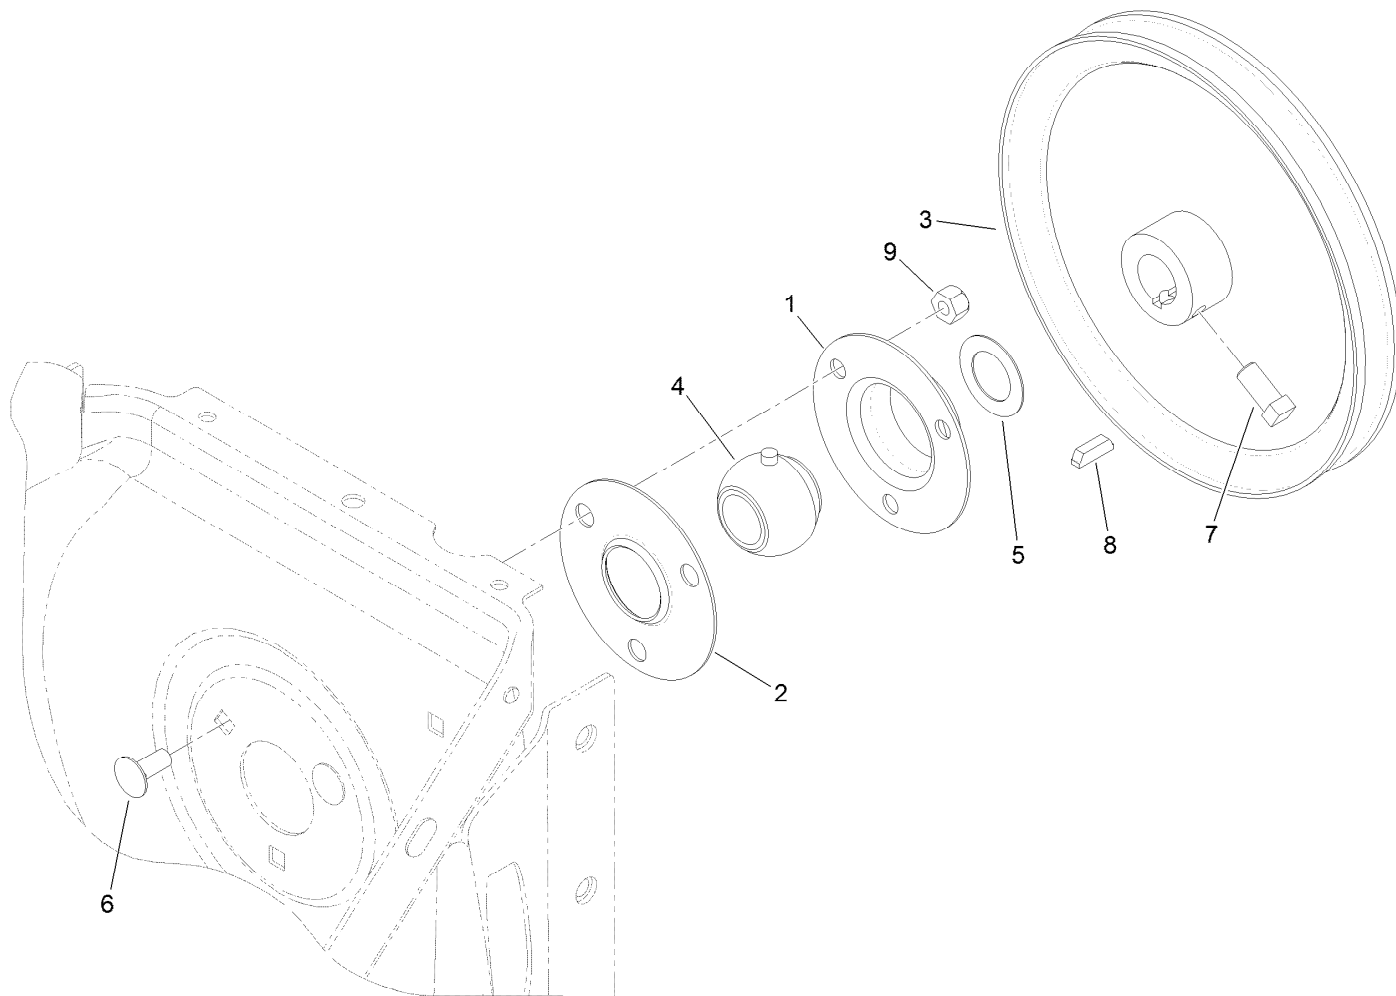

## Impeller Assembly

 
| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 1    | 26-6110     | 1    | Flange-Cup, Bearing |
| 2    | 26-6120     | 1    | Flange-Cup, Bearing |
| 3    | 62-1300     | 1    | Pulley-Impeller     |
| 4    | 63-3450     | 1    | Bearing-Ball        |
| 5    | 252-80      | 1    | Washer-Thrust       |
| 6    | 3230-23     | 3    | Screw-CARR          |
| 7    | 3242-4      | 2    | Screw-Set, SQH      |
| 8    | 3257-23     | 1    | Key-Woodruff        |
| 9    | 3296-29     | 3    | Nut-Lock, NI        |

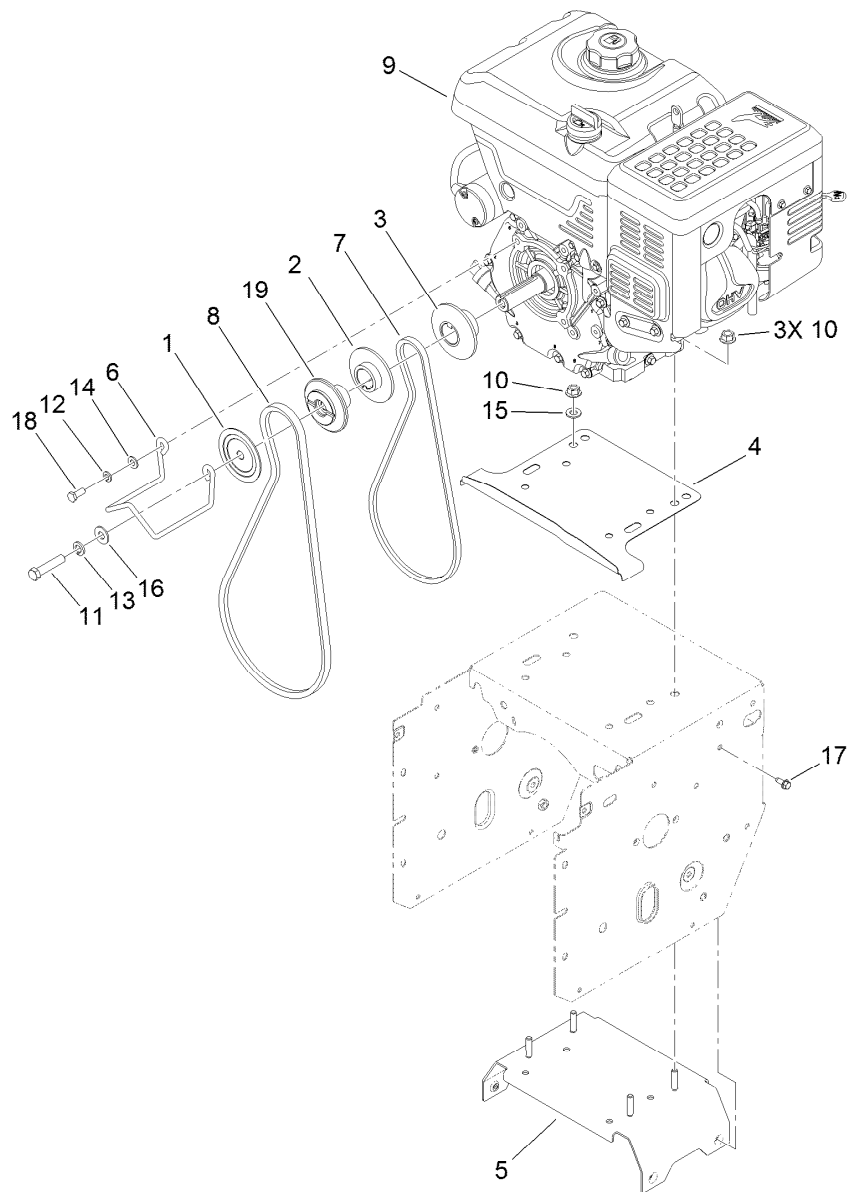

## Engine Assembly


| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 1    | 62-0940     | 1    | Sheave-Half, Impeller   |
| 2    | 121-6603    | 1    | Pulley-Engine, Traction |
| 3    | 106-7334    | 1    | Sheave-Half, Traction   |
| 4    | 117-6022-01 | 1    | Shield-Drive            |
| 5    | 119-1560    | 1    | Frame Brace ASM         |
| 6    | 119-1562    | 1    | Guide-Belt              |
| 7    | 119-1564    | 1    | Belt-V                  |
| 8    | 125-1145    | 1    | Belt-V                  |
| 9    | 120-4424    | 1    | Engine-Lc175Fds-1       |
| 10   | 120-3067    | 4    | Nut-Flange              |
 
| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 11   | 3212-8      | 1    | Screw-HH                |
| 12   | 3253-4      | 2    | Washer-Lock             |
| 13   | 3253-6      | 1    | Washer-Lock             |
| 14   | 3256-23     | 2    | Washer-Flat             |
| 15   | 3256-24     | 1    | Washer-Flat             |
| 16   | 3256-4      | 1    | Washer-Flat             |
| 17   | 32144-10    | 4    | Screw-HWH               |
| 18   | 33114-020   | 2    | Screw-HH                |
| 19   | 121-6602    | 1    | Pulley-Engine, Impeller |

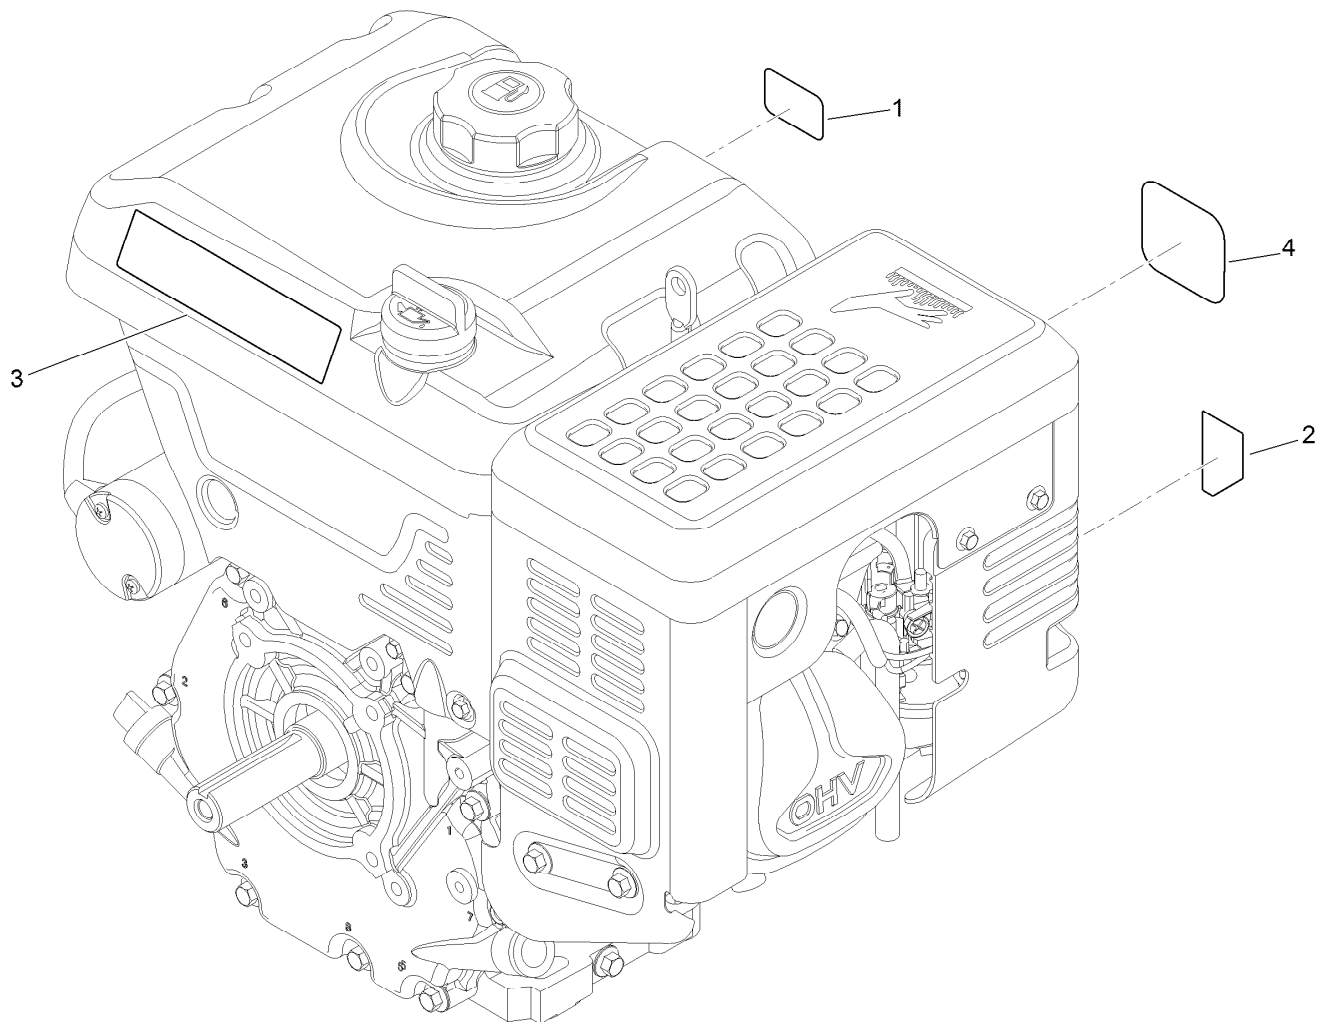


## Engine Decal Assembly
 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|-----------------------|
| 1           | 125-1102           | 1           | Decal-Throttle        |
| 2           | 120-9805           | 1           | Decal-Control, Engine |
| 3           | 120-9807           | 1           | Decal-Engine          |
| 4           | 120-9810           | 1           | Decal-Recoil          |

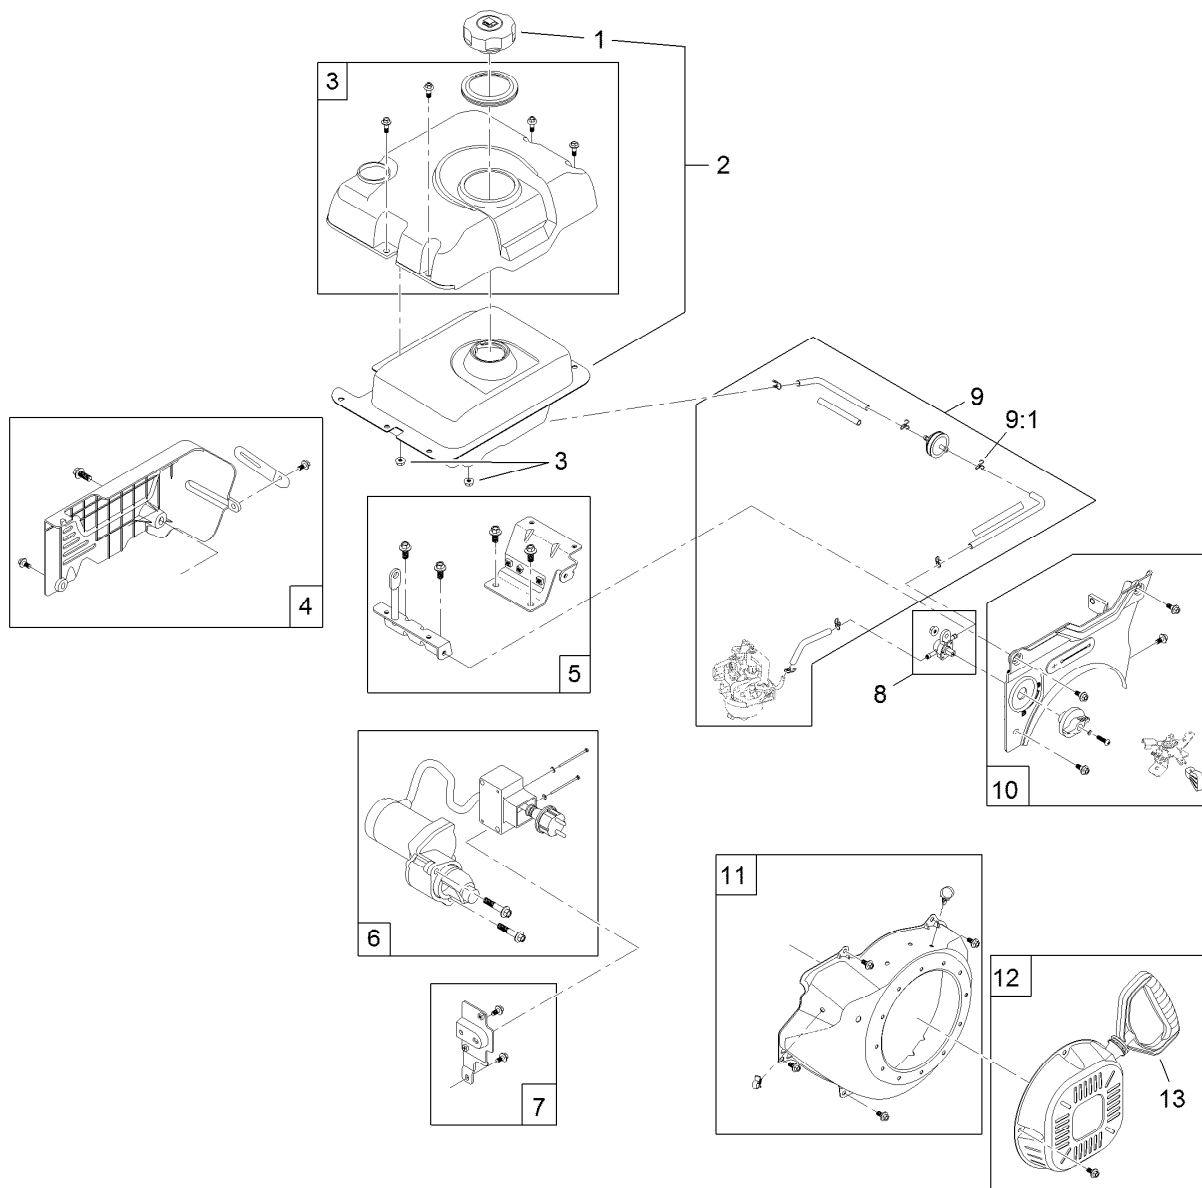

## Fuel Tank and Recoil Engine Assembly
 
| Ref. | Part Number | Qty. | Description                 |
|------|-------------|------|-----------------------------|
| 1    | 121-0257    | 1    | Cap-Fuel                    |
| 2    | 121-0414    | 1    | Fuel Tank And Cap Kit       |
| 3    | 121-0349    | 1    | Fuel Tank Cover Kit         |
| 4    | 121-0347    | 1    | Rear Panel And Hardware Kit |
| 5    | 121-0351    | 1    | Tank Mount Bracket Kit      |
| 6    | 121-0446    | 1    | Starter Kit                 |
| 7    | 121-4103    | 1    | Switch Box Bracket Kit      |
| 8    | 121-4109    | 1    | Fuel Shut-Off Valve Kit     |
| 9    | 121-0353    | 1    | Complete Fuel Line Kit      |
| 9:1  | 121-0087    | 6    | Clamp-Hose                  |
| 10   | 121-4105    | 1    | Front Panel Kit             |
| 11   | 121-0274    | 1    | Recoil Shroud Kit           |
| 12   | 121-0342    | 1    | Recoil Kit                  |
| 13   | 121-0287    | 1    | Handle-Recoil               |

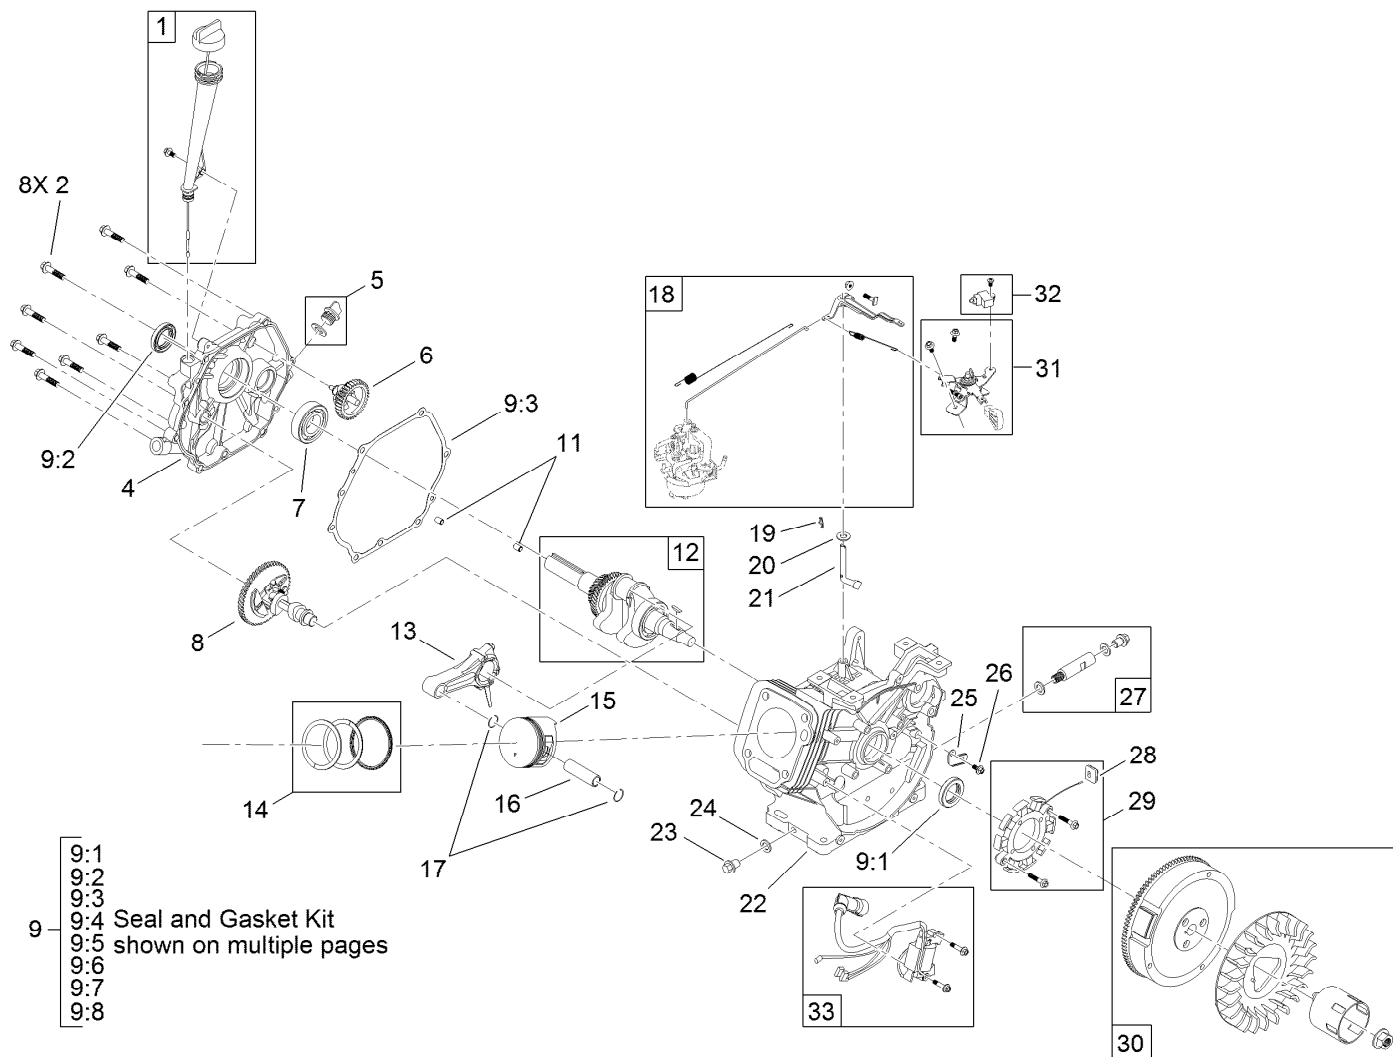


## Crankcase Engine Assembly

| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 1    | 121-0361    | 1    | Oil Fill Kit            |
| 2    | 121-0299    | 8    | Screw-HHF               |
| 4    | 121-0227    | 1    | Cover-Crankcase         |
| 5    | 121-0223    | 1    | Sump Plug ASM           |
| 6    | 121-0265    | 1    | Governor Gear ASM       |
| 7    | 121-0315    | 1    | Bearing-Main            |
| 8    | 121-0242    | 1    | Camshaft ASM            |
| 9    | 121-0356    | 1    | Seal And Gasket Kit     |
| 9:1  |             | 1    | Seal-Oil ●              |
| 9:2  |             | 1    | Seal-Oil ●              |
| 9:3  | 121-0228    | 1    | Gasket-Cover, Crankcase |
| 9:4  | 121-0232    | 1    | Gasket-Head, Cylinder   |
| 9:5  | 121-0234    | 1    | Gasket-Cover, Valve     |
| 9:6  |             | 1    | Gasket-Exhaust ●        |
| 9:7  |             | 1    | Gasket-Carburetor ●     |
| 9:8  |             | 1    | Gasket-Carburetor ●     |
| 11   | 121-0314    | 2    | Pin-Dowel               |

| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 12   | 121-0241    | 1    | Crankshaft ASM        |
| 13   | 121-0240    | 1    | Connecting Rod ASM    |
| 14   | 121-0239    | 1    | Set-Ring, Piston      |
| 15   | 121-0236    | 1    | Piston                |
| 16   | 121-0237    | 1    | Pin-Piston            |
| 17   | 121-0313    | 2    | Clip-Pin, Piston      |
| 18   | 121-0352    | 1    | Complete Governor Kit |
| 19   | 120-4256    | 1    | Pin-Hair              |
| 20   | 121-0311    | 1    | Washer-Plain          |
| 21   | 121-0263    | 1    | Shaft-Governor        |
| 22   | 121-0439    | 1    | Crankcase             |
| 23   | 121-0222    | 1    | Screw-HHF             |
| 24   | 121-0310    | 1    | Washer-Plain          |
| 25   | 121-0278    | 1    | Clamp                 |
| 26   | 121-0118    | 1    | Screw-HHF             |
| 27   | 121-0341    | 1    | Drain Plug Kit        |
| 28   | 121-0325    | 1    | Grommet-Rubber        |

 ● Not serviced separately

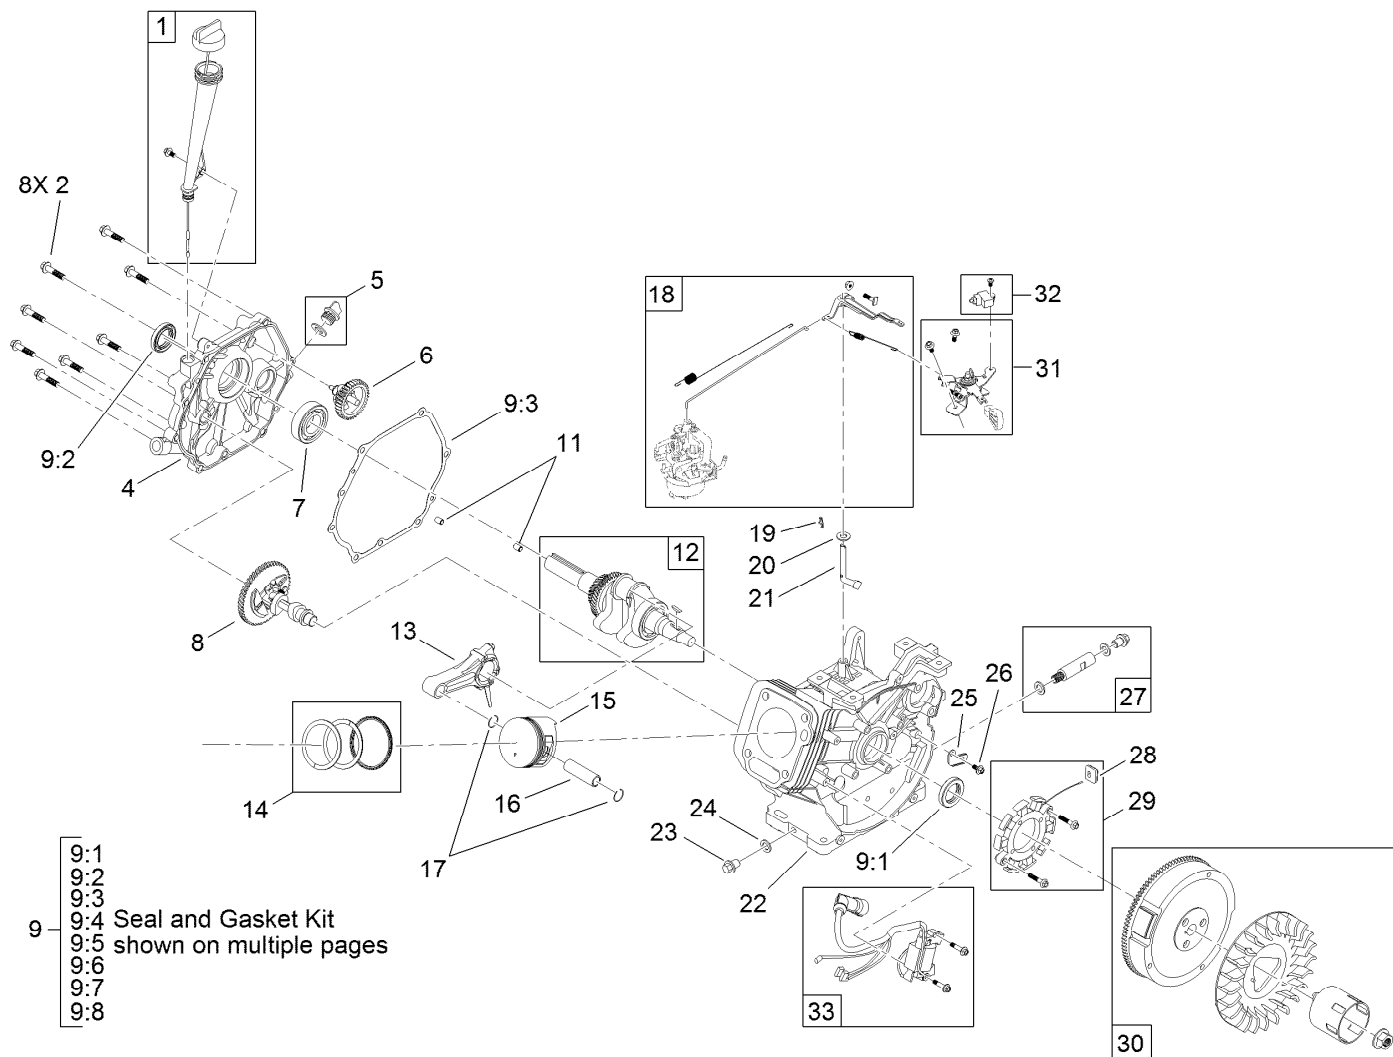


## Crankcase Engine Assembly (continued)

| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 29   | 121-0362    | 1    | Stator Kit           |
| 30   | 121-0354    | 1    | Fan And Flywheel Kit |
| 31   | 121-4107    | 1    | Throttle Control Kit |

| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 32   | 121-4106    | 1    | Kill Switch Kit     |
| 33   | 121-0334    | 1    | Ignition Module Kit |

 
● Not serviced separately

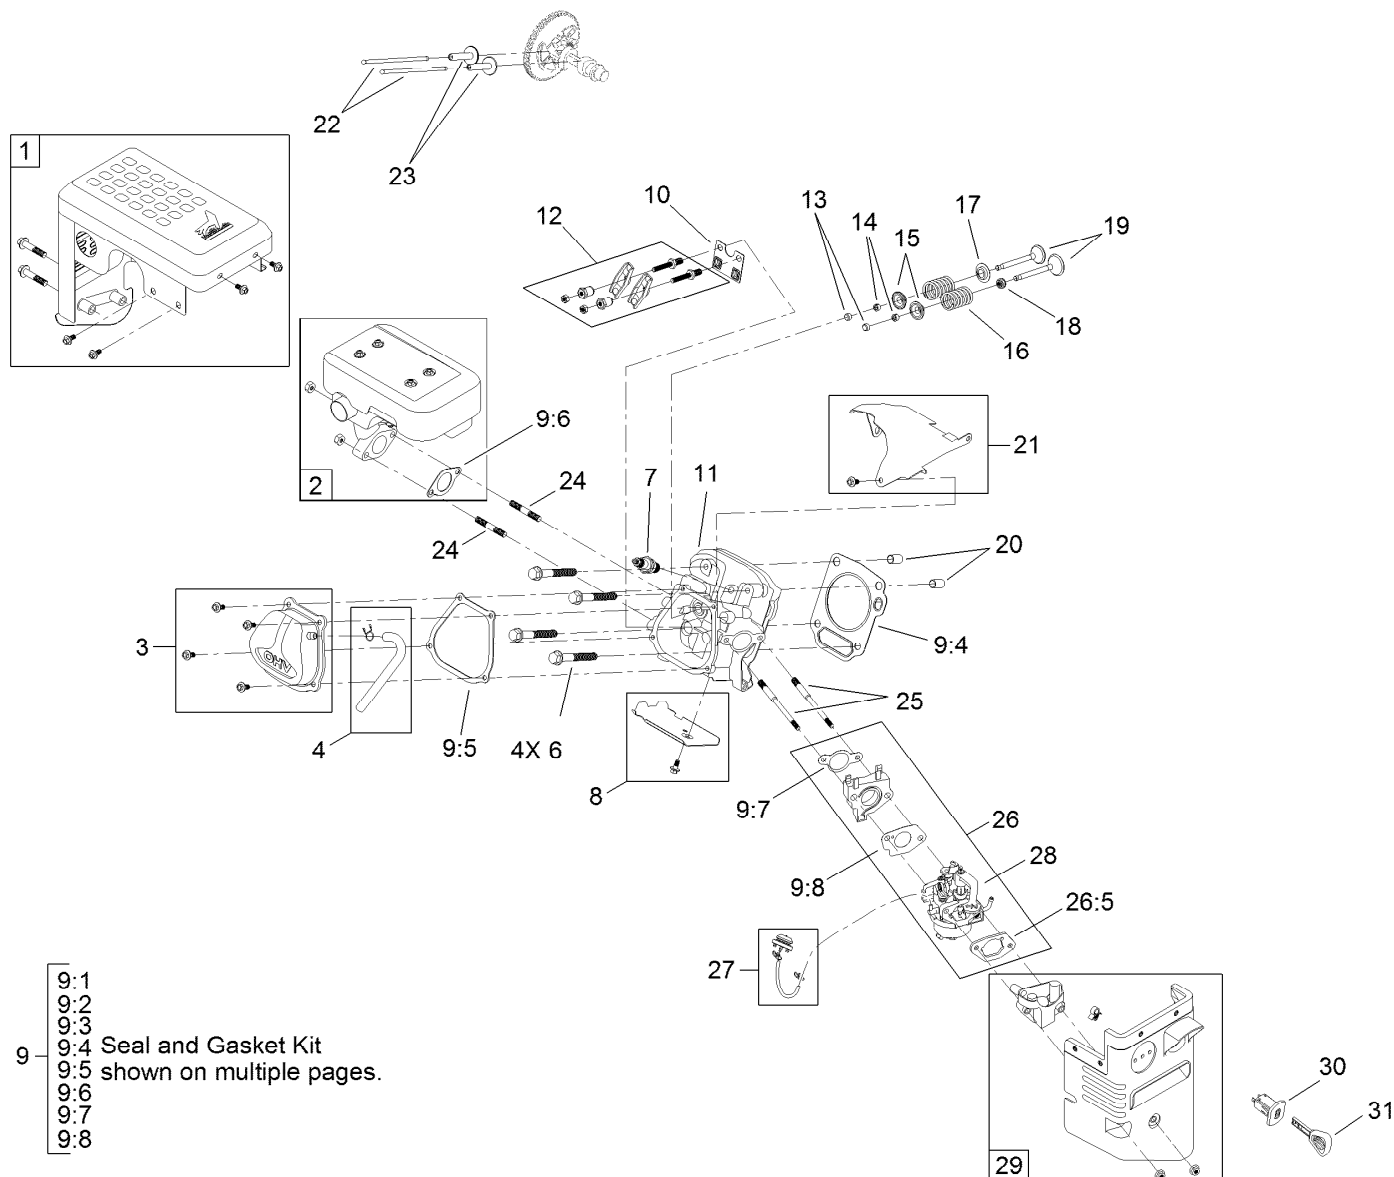

## Muffler, Cylinder Head and Carburetor Engine Assembly

| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 1    | 121-4101    | 1    | Muffler Shield Kit      |
| 2    | 121-4100    | 1    | Muffler Kit             |
| 3    | 121-0343    | 1    | Valve Cover Kit         |
| 4    | 121-0340    | 1    | Breather Tube Kit       |
| 6    | 121-0302    | 4    | Screw-HHF               |
| 7    | 119-1901    | 1    | Spark Plug              |
| 8    | 121-0348    | 1    | Lower Heat Shroud Kit   |
| 9    | 121-0356    | 1    | Seal And Gasket Kit     |
| 9:1  |             | 1    | Seal-Oil ●              |
| 9:2  |             | 1    | Seal-Oil ●              |
| 9:3  | 121-0228    | 1    | Gasket-Cover, Crankcase |
| 9:4  | 121-0232    | 1    | Gasket-Head, Cylinder   |
| 9:5  | 121-0234    | 1    | Gasket-Cover, Valve     |
| 9:6  |             | 1    | Gasket-Exhaust ●        |
| 9:7  |             | 1    | Gasket-Carburetor ●     |
| 9:8  |             | 1    | Gasket-Carburetor ●     |
| 10   | 121-0247    | 1    | Plate-Guide, Push Rod   |

 
| Ref. | Part Number | Qty. | Description               |
|------|-------------|------|---------------------------|
| 11   | 121-0230    | 1    | Head-Cylinder             |
| 12   | 121-0245    | 1    | Rocker Arm ASM            |
| 13   | 121-0244    | 2    | Rotator-Valve             |
| 14   | 120-4307    | 2    | Keeper-Valve              |
| 15   | 120-4306    | 2    | Retainer-Spring, Valve    |
| 16   | 120-4305    | 2    | Spring-Valve              |
| 17   | 120-4303    | 1    | Seat-Spring, Valve        |
| 18   | 120-4304    | 1    | Seal-Stem, Valve          |
| 19   | 121-0328    | 1    | Valve Kit                 |
| 20   | 120-4200    | 2    | Pin-Dowel                 |
| 21   | 121-4102    | 1    | Upper Heat Shroud Kit     |
| 22   | 121-0246    | 2    | Rod-Push                  |
| 23   | 120-4298    | 2    | Lifter-Valve              |
| 24   | 121-0304    | 2    | Stud-Mount, Muffler       |
| 25   | 121-0303    | 2    | Stud-Mount, Carburetor    |
| 26   | 121-0345    | 1    | Complete Carb Service Kit |
| 26:5 | 121-0254    | 1    | Gasket-Coated, Rubber     |

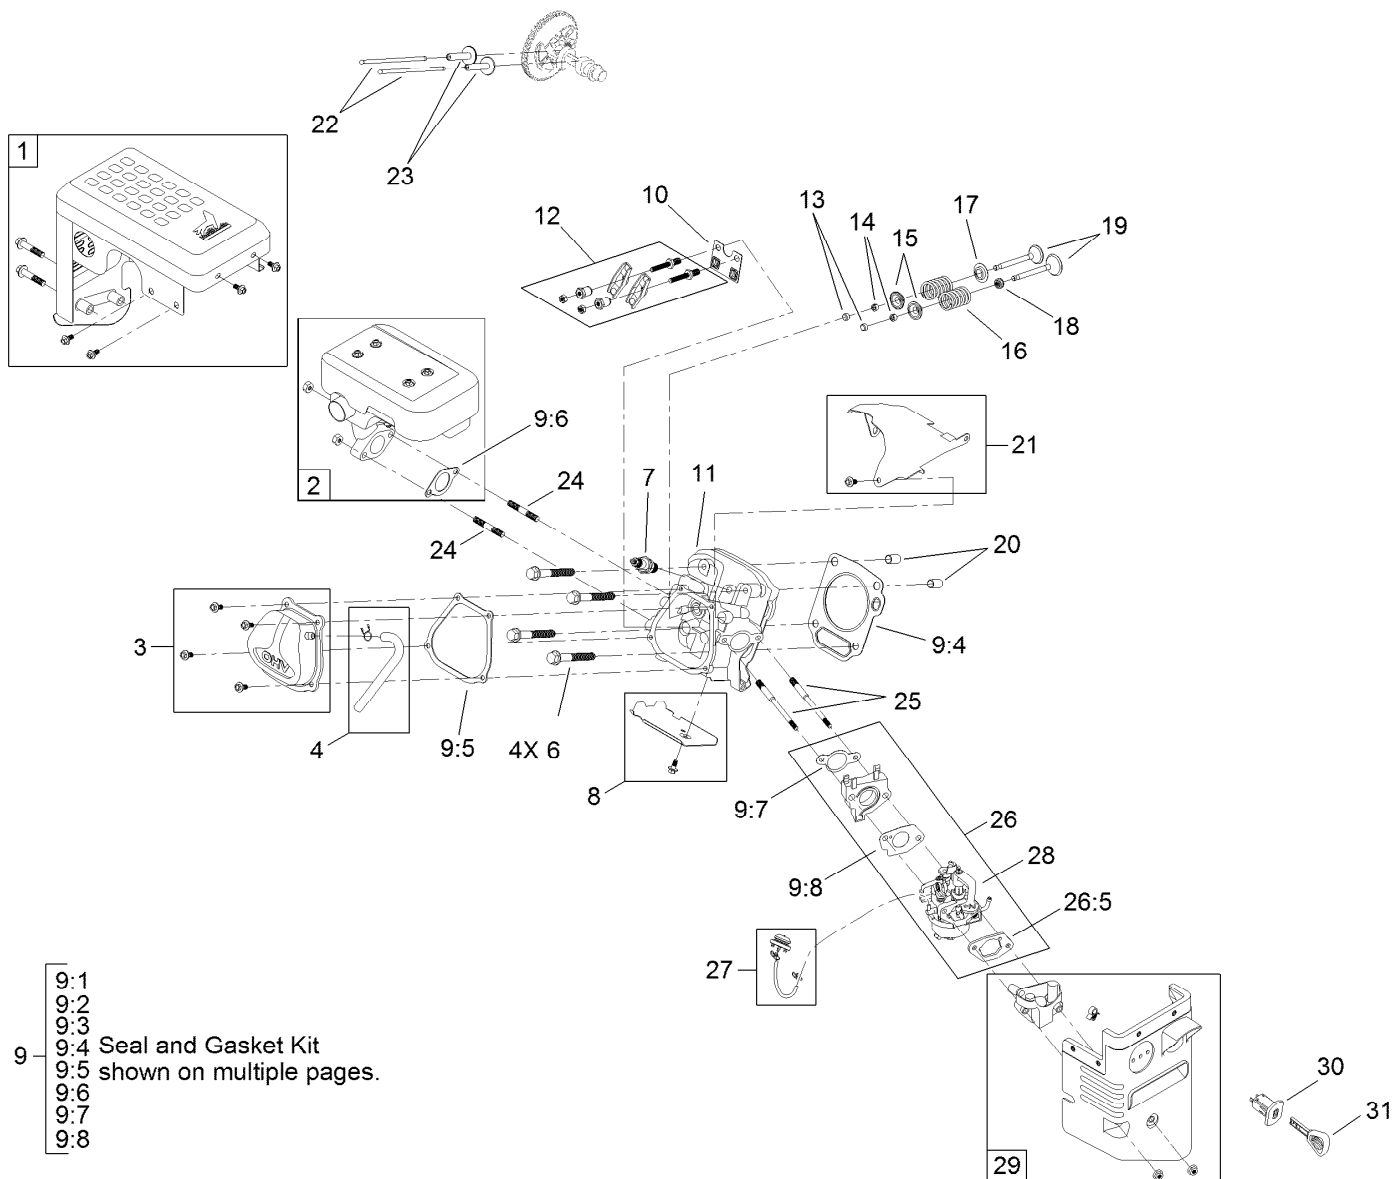

## Muffler, Cylinder Head and Carburetor Engine Assembly (continued)

| Ref. | Part Number | Qty. | Description                    | Ref. | Part Number | Qty. | Description    |
|------|-------------|------|--------------------------------|------|-------------|------|----------------|
| 27   | 121-0344    | 1    | Primer Kit                     | 29   | 121-0355    | 1    | Heater Box Kit |
| 28   | 121-0360    | 1    | Carburetor Internal Repair Kit | 30   | 121-0283    | 1    | Switch-Key     |
|      |             |      |                                | 31   | 117-7728    | 1    | Key            |

 
● Not serviced separately

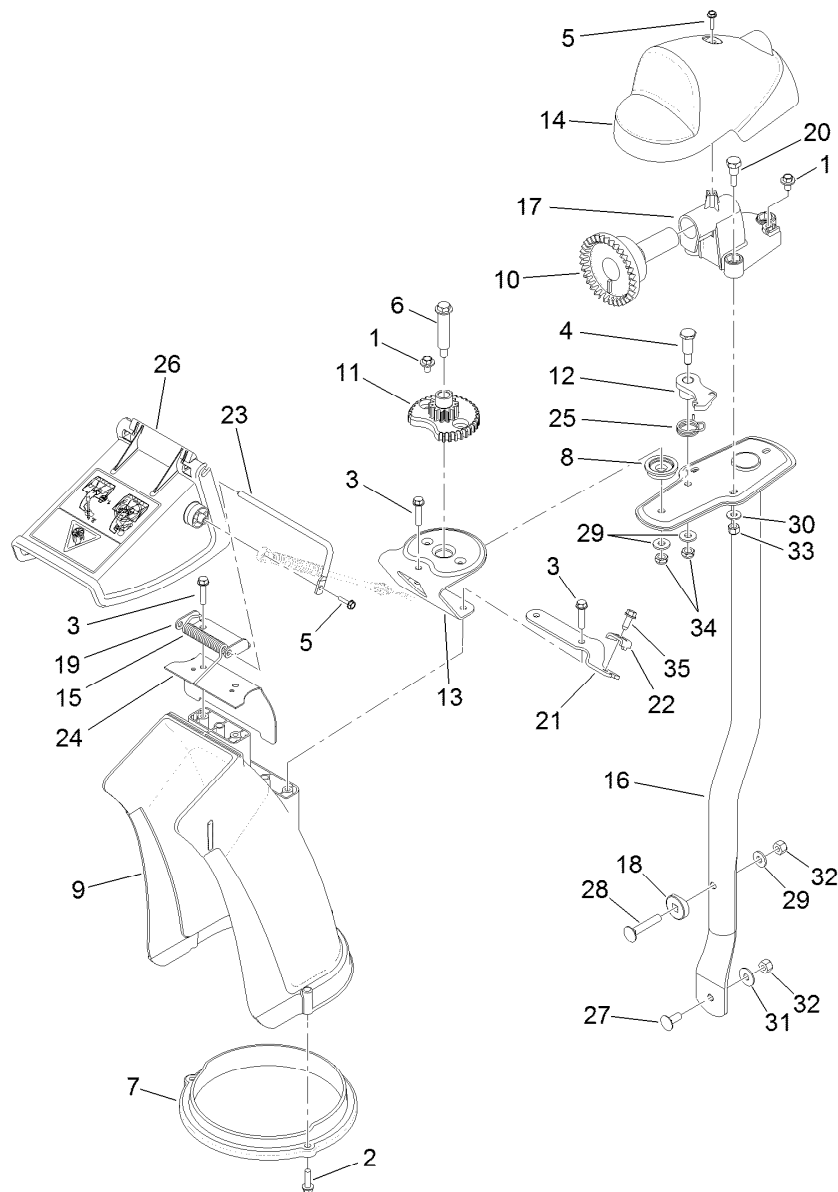

## Chute Assembly

| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 1    | 46-6810     | 3    | Screw And Washer ASM   |
| 2    | 46-8091     | 3    | Screw-HWH              |
| 3    | 46-8092     | 5    | Screw-Plastite         |
| 4    | 63-2650     | 1    | Screw-Shoulder         |
| 5    | 98-1375     | 2    | Screw-HWH              |
| 6    | 100-9880    | 1    | Bolt-Shoulder          |
| 7    | 105-9991    | 1    | Ring-Chute             |
| 8    | 106-4422    | 1    | Spacer-Chute           |
| 9    | 106-4440    | 1    | Chute-Discharge        |
| 10   | 106-4471    | 1    | Gear-Face              |
| 11   | 106-4472    | 1    | Gear-Chute             |
| 12   | 106-4476    | 1    | Latch-Chute            |
| 13   | 106-4582-03 | 1    | Bracket-Support, Chute |
| 14   | 106-4585    | 1    | Cover-Gear, Chute      |
| 15   | 106-4594    | 1    | Spring-Torsion         |
| 16   | 106-7253-03 | 1    | Tube-Support           |
| 17   | 106-7257    | 1    | Mount-Gear, Face       |
| 18   | 106-7260    | 1    | Washer-Curved          |

 
| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 19   | 106-7266    | 1    | Bracket-Deflector    |
| 20   | 106-7276    | 3    | Screw-Shoulder       |
| 21   | 106-7296    | 1    | Bracket-Cable, Clamp |
| 22   | 106-7297    | 1    | Clamp-Cable          |
| 23   | 107-1021    | 1    | Rod-Deflector        |
| 24   | 108-5052    | 1    | Seal-Chute           |
| 25   | 108-7315    | 1    | Spring-Torsion       |
| 26   | 112-6629    | 1    | Deflector-Chute, Ce  |
| 27   | 3230-23     | 1    | Screw-CARR           |
| 28   | 3230-5      | 1    | Screw-CARR           |
| 29   | 3256-2      | 3    | Washer-Flat          |
| 30   | 3256-22     | 3    | Washer-Flat          |
| 31   | 3290-456    | 1    | Washer-Belleville    |
| 32   | 3296-29     | 2    | Nut-Lock, NI         |
| 33   | 3296-42     | 3    | Nut-Lock, NI         |
| 34   | 3296-47     | 2    | Nut-Lock, NI         |
| 35   | 32144-10    | 1    | Screw-HWH            |

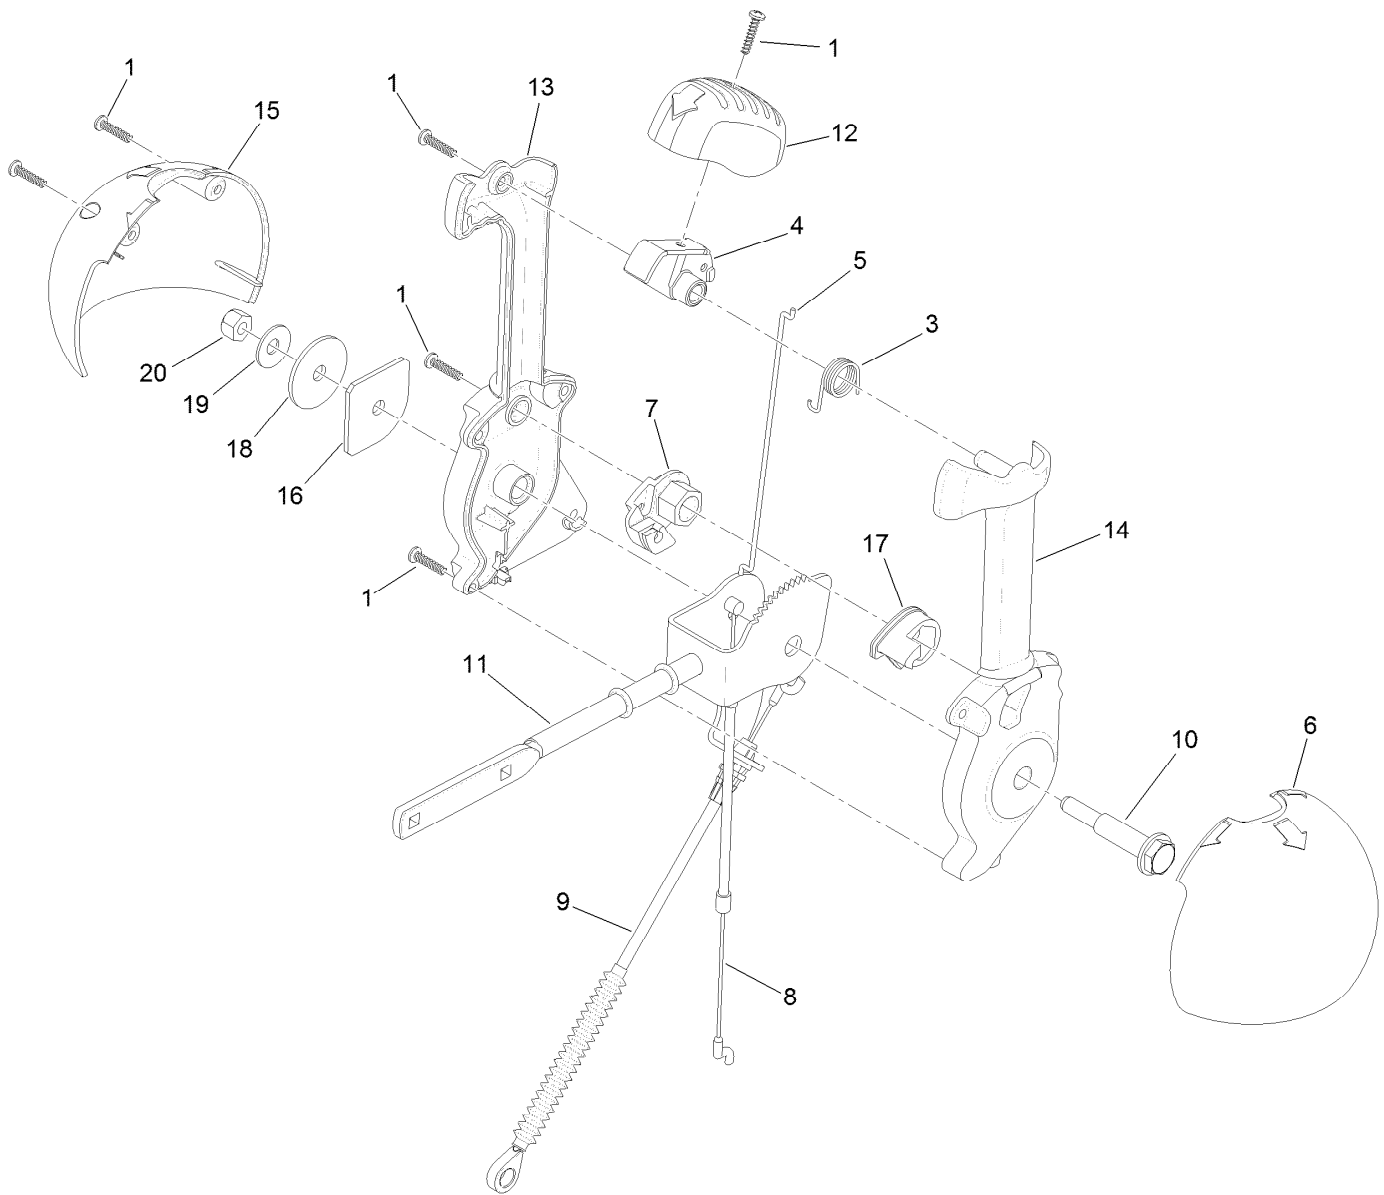

## Lever Chute Control Assembly

| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 1    | 94-4496     | 6    | Screw-PPH                |
| 3    | 105-9982    | 1    | Spring-Torsion           |
| 4    | 105-9984    | 1    | Trigger-Latch            |
| 5    | 105-9985    | 1    | Link-Latch               |
| 6    | 105-9986    | 1    | Cover-Chute Lever, LH    |
| 7    | 105-9988    | 1    | Lever-Cable, Deflector   |
| 8    | 125-1113    | 1    | Cable-Release, Chute     |
| 9    | 105-9990    | 1    | Cable-Control, Deflector |
| 10   | 105-9995    | 1    | Screw-Shoulder           |
| 11   | 106-4479    | 1    | Rod-Control, Chute       |

 
| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 12   | 106-7280    | 1    | Cap-Lever               |
| 13   | 106-7281    | 1    | Lever-Chute Control, RH |
| 14   | 106-7282    | 1    | Lever-Chute Control, LH |
| 15   | 106-7292    | 1    | Cover-Chute Lever, RH   |
| 16   | 106-7295    | 1    | Plate-Friction          |
| 17   | 106-7310    | 1    | Pawl-Latch              |
| 18   | 107-3002    | 1    | Washer-Nylon            |
| 19   | 3290-456    | 1    | Washer-Belleville       |
| 20   | 3296-29     | 1    | Nut-Lock, NI            |

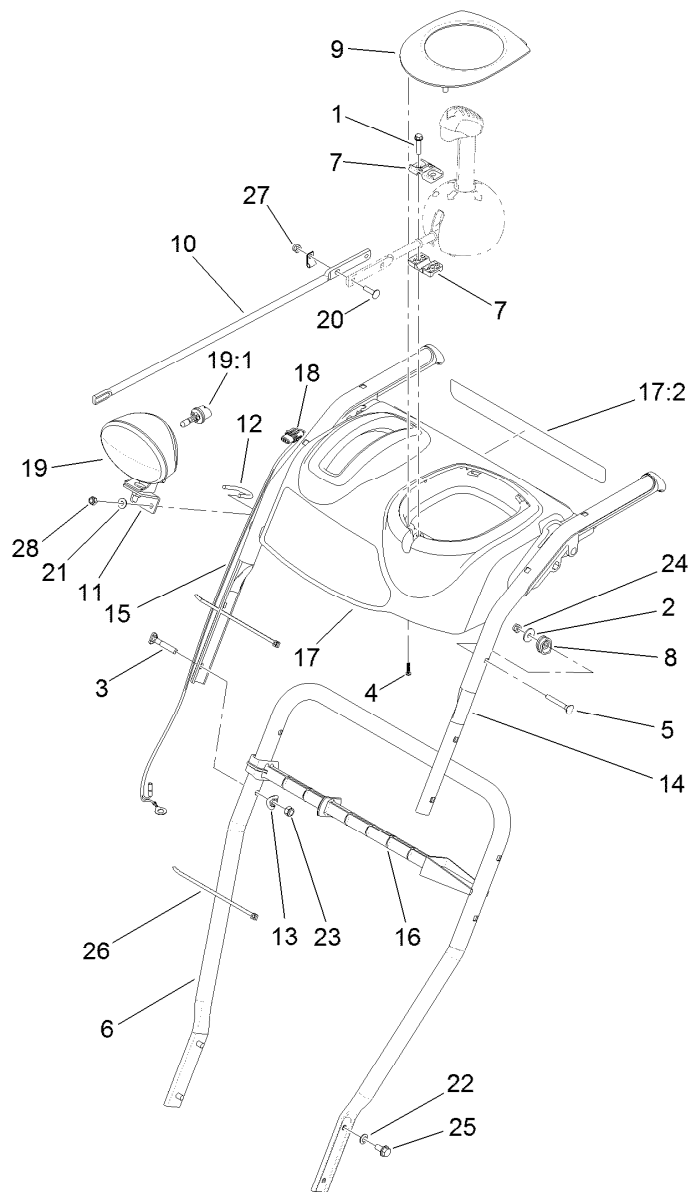

## Lower Handle and Headlamp Assembly

| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 1    | 46-8092     | 2    | Screw-Plastite       |
| 2    | 87-6630     | 2    | Washer-Plain         |
| 3    | 92-2260     | 4    | Screw-Handle         |
| 4    | 94-4496     | 2    | Screw-PPH            |
| 5    | 95-4453     | 2    | Screw                |
| 6    | 105-9981-03 | 1    | Handle-Lower         |
| 7    | 105-9987    | 2    | Support-Rod          |
| 8    | 106-4509    | 2    | Clamp-Cable          |
| 9    | 106-4586    | 1    | Cover-Panel, Control |
| 10   | 106-7283    | 1    | Rod-Chute, Front     |
| 11   | 107-1020-03 | 1    | Bracket-Light        |
| 12   | 107-3024    | 1    | Clamp                |
| 13   | 107-3844    | 4    | Washer               |
| 14   | 108-0037-03 | 1    | Handle-Upper, LH     |
| 15   | 108-0038-03 | 1    | Handle-Upper, RH     |

 
| Ref. | Part Number | Qty. | Description               |
|------|-------------|------|---------------------------|
| 16   | 110-3408    | 1    | Stick-Cleanout            |
| 17   | 112-6633    | 1    | Panel-Control             |
| 17:2 | 112-6627    | 1    | Decal-Back, Control Panel |
| 18   | 120-3062    | 1    | Harness-Wire, Headlight   |
| 19   | 120-3074    | 1    | Headlamp ASM              |
| 19:1 | 120-3075    | 1    | Lamp-12 Volt              |
| 20   | 3229-30     | 2    | Screw-CARR                |
| 21   | 3256-1      | 2    | Washer-Flat               |
| 22   | 3290-475    | 4    | Washer-Belleville         |
| 23   | 3296-72     | 4    | Nut-Lock, NI              |
| 24   | 3296-73     | 2    | Nut-Lock, NI              |
| 25   | 32144-14    | 4    | Screw-HWHTF               |
| 26   | 614249      | 2    | Tie-Cable                 |
| 27   | 3296-73     | 2    | Nut-Lock, NI              |
| 28   | 3296-73     | 2    | Nut-Lock, NI              |

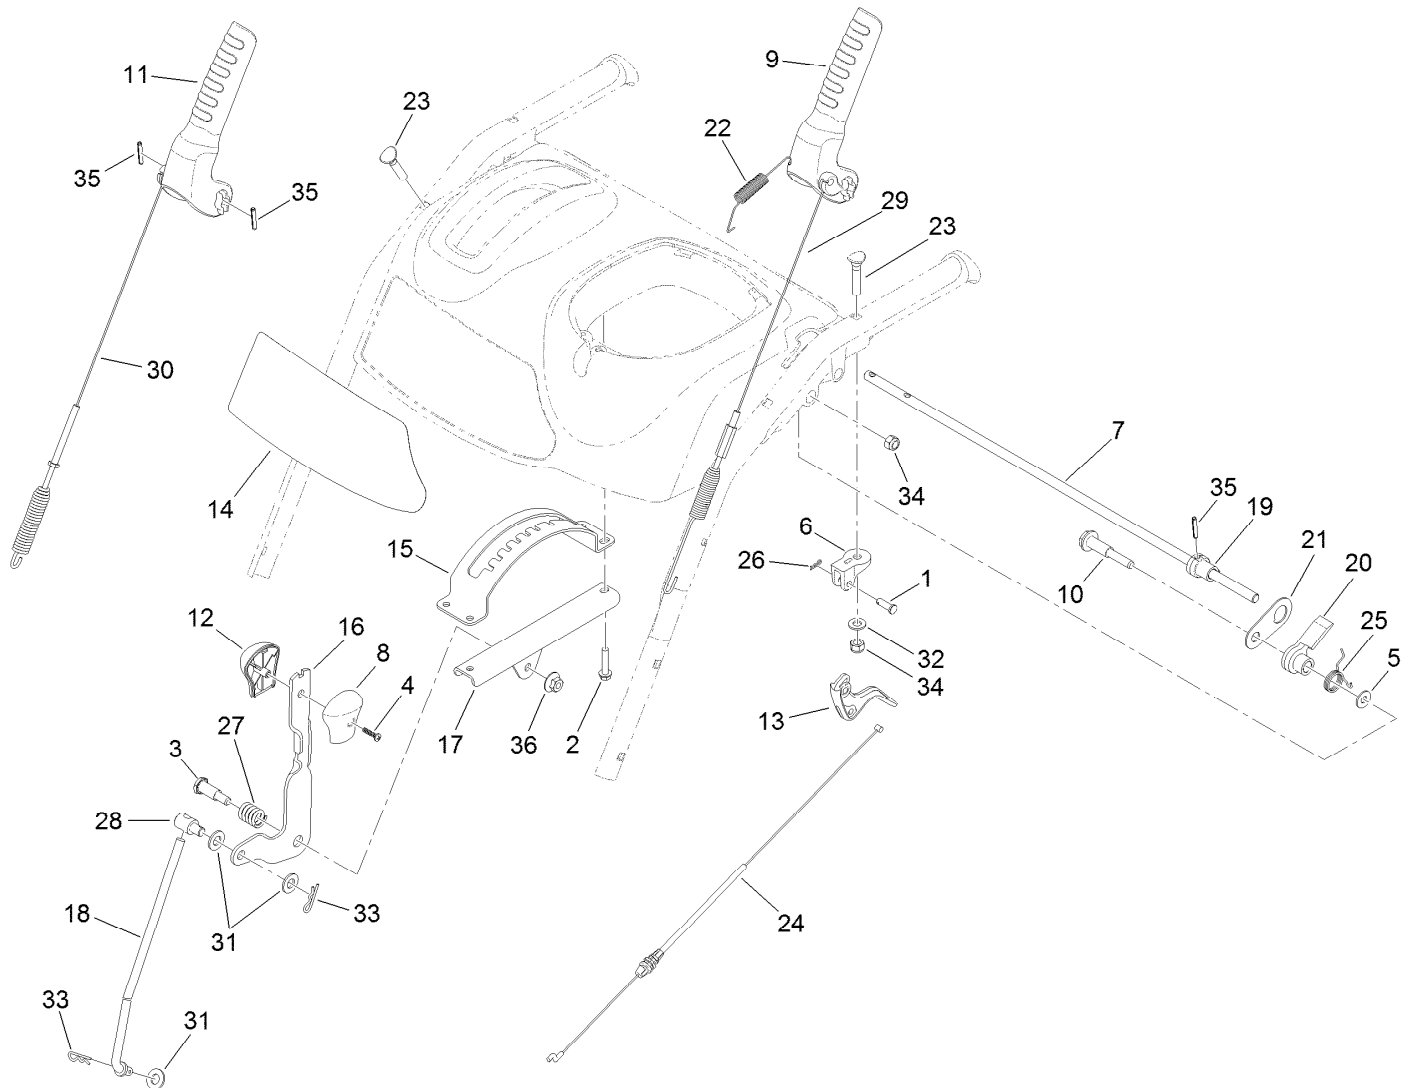

## Handle and Control Assembly

| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 1    | 1-808265    | 2    | Pin-Clevis            |
| 2    | 46-8092     | 4    | Screw-Plastite        |
| 3    | 63-2650     | 1    | Screw-Shoulder        |
| 4    | 94-4496     | 1    | Screw-PPH             |
| 5    | 98-3499     | 1    | Washer-Flat           |
| 6    | 105-9980    | 2    | Mount-Clutch, Lever   |
| 7    | 105-9996    | 1    | Rod-Lockout           |
| 8    | 105-9999    | 1    | Knob-Shift, LH        |
| 9    | 106-4410    | 1    | Lever-Traction        |
| 10   | 106-4412    | 1    | Screw-Shoulder        |
| 11   | 106-4413    | 1    | Lever-Auger           |
| 12   | 106-4423    | 1    | Knob-Shift, RH        |
| 13   | 106-4505    | 2    | Lever-Clutch          |
| 14   | 121-6643    | 1    | Decal-Control Panel   |
| 15   | 106-7277-03 | 1    | Guide-Selector, Speed |
| 16   | 106-7278-03 | 1    | Selector-Speed        |
| 17   | 106-7279-03 | 1    | Mount-Selector, Speed |
| 18   | 107-1005    | 1    | Rod-Shift             |
 
| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 19   | 107-1043    | 1    | Cam-Lockout        |
| 20   | 108-0023    | 1    | Latch-Lockout      |
| 21   | 107-3000    | 1    | Link-Lockout       |
| 22   | 107-3001    | 1    | Spring-Tension     |
| 23   | 107-3018    | 4    | Screw-Handle       |
| 24   | 107-8896    | 2    | Cable-Clutch       |
| 25   | 108-0024    | 1    | Spring-Torsion     |
| 26   | 108-2992    | 2    | Pin-Hair           |
| 27   | 108-7313    | 1    | Spring-Compression |
| 28   | 110-3446    | 1    | Trunnion-Rod       |
| 29   | 120-0132    | 1    | Cable-Traction     |
| 30   | 120-3086    | 1    | Cable-Auger        |
| 31   | 3256-24     | 3    | Washer-Flat        |
| 32   | 3256-70     | 4    | Washer-Flat        |
| 33   | 3290-307    | 2    | Pin-Hair           |
| 34   | 3296-72     | 5    | Nut-Lock, NI       |
| 35   | 32121-125   | 3    | Pin-Spring         |
| 36   | 32128-13    | 1    | Nut-HHF            |

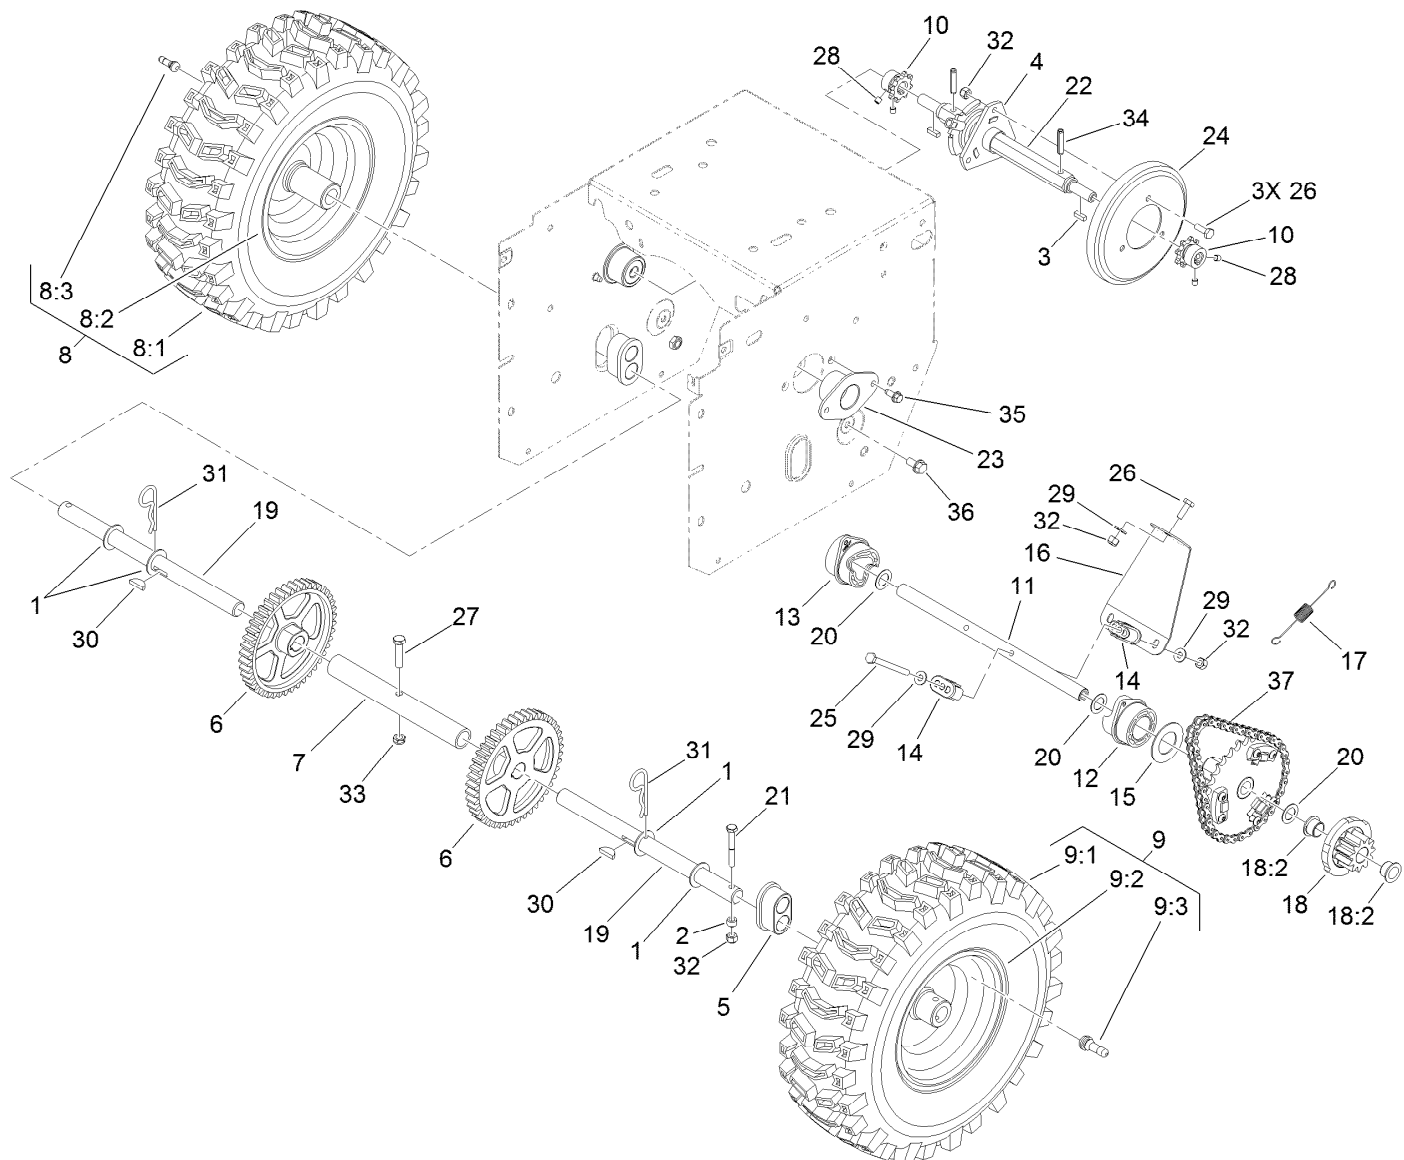


## Wheel Clutch Assembly

| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 1    | 3-8664      | 4    | Washer-Thrust           |
| 2    | 55-9370     | 2    | Spacer-Blade, Rotor     |
| 3    | 94-8850     | 2    | Key-Square              |
| 4    | 106-4434    | 1    | Trunnion-Hex            |
| 5    | 106-4558    | 2    | Bearing-Axle            |
| 6    | 106-4572    | 2    | Gear-Axle, 44 Tooth     |
| 7    | 106-7259    | 1    | Tube-Axle               |
| 8    |             | 1    | RH Wheel And Tire ASM ● |
| 8:1  | 107-3042    | 1    | Tire                    |
| 8:2  | 107-3043    | 1    | Rim-Tire                |
| 8:3  | 232-27      | 1    | Stem-Valve              |
| 9    |             | 1    | LH Wheel And Tire ASM ● |
| 9:1  | 107-3042    | 1    | Tire                    |
| 9:2  | 107-3043    | 1    | Rim-Tire                |
| 9:3  | 232-27      | 1    | Stem-Valve              |
| 10   | 106-7317    | 2    | Sprocket-8 Tooth        |
| 11   | 107-8883    | 1    | Shaft-Intermediate      |
| 12   | 107-8887    | 1    | Collar-Shift, LH        |

| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 13   | 107-8888    | 1    | Collar-Shift, RH    |
| 14   | 107-8889    | 4    | Guide-Collar        |
| 15   | 107-8891    | 2    | Washer-Thrust       |
| 16   | 107-8892-03 | 1    | Brace-Collar, Shift |
| 17   | 107-8893    | 2    | Spring-Extension    |
| 18   | 107-8894    | 2    | 11T Gear ASM        |
| 18:2 | 108-2973    | 2    | Bushing-Flange      |
| 19   | 107-8898    | 2    | Shaft-Axle          |
| 20   | 108-0015    | 4    | Washer-Flat         |
| 21   | 108-2975    | 2    | Screw-HH            |
| 22   | 108-7314    | 1    | Shaft-Hex           |
| 23   | 108-7319    | 2    | Retainer-Bearing    |
| 24   | 119-1567    | 1    | Wheel-Friction      |
| 25   | 321-23      | 2    | Screw-HH            |
| 26   | 321-4       | 4    | Screw-HH            |
| 27   | 322-17      | 1    | Screw-HH            |
| 28   | 3245-32     | 4    | Screw-HSH           |
| 29   | 3256-22     | 5    | Washer-Flat         |

 ● Not serviced separately

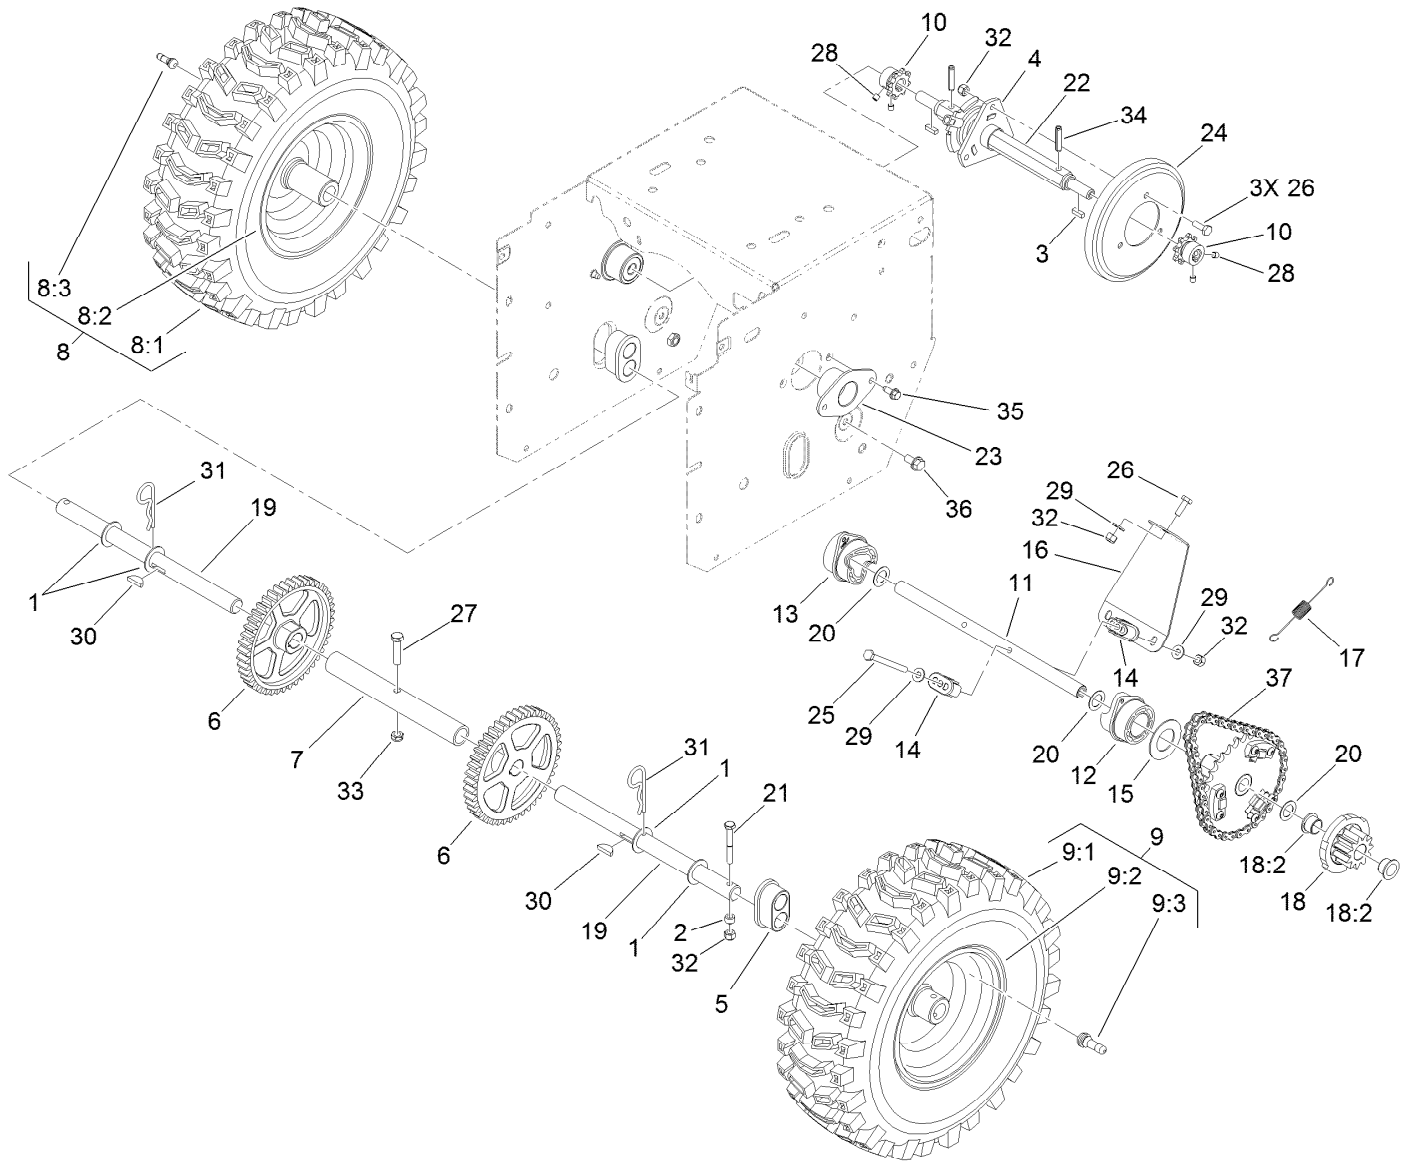


## Wheel Clutch Assembly (continued)

| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 30   | 3257-7      | 2    | Key-Woodruff      |
| 31   | 3290-343    | 2    | Pin-Hair          |
| 32   | 3296-42     | 8    | Nut-Lock, NI      |
| 33   | 3296-47     | 1    | Nut-Lock, NI      |
| 34   | 32121-9     | 2    | Pin-Roll, Slotted |

| Ref. | Part Number | Qty. | Description     |
|------|-------------|------|-----------------|
| 35   | 32144-10    | 4    | Screw-HWH       |
| 36   | 32144-14    | 2    | Screw-HWHTF     |
| 37   | 108-0016    | 2    | Chain-Roller    |
| 37   | 2710-6      | 2    | Link-Connecting |

 ● Not serviced separately

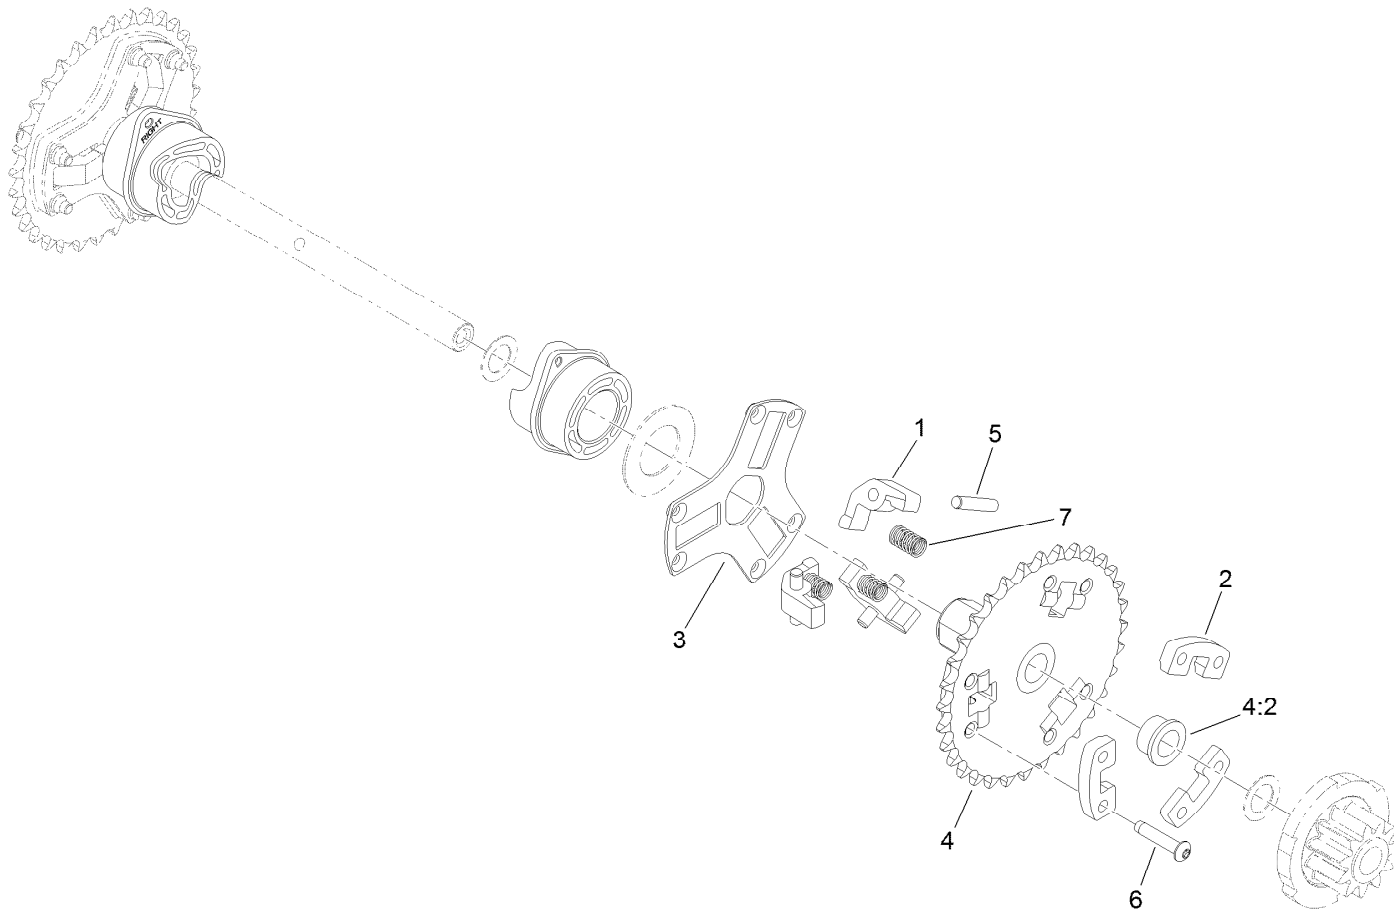

## Wheel Clutch Sprocket Assembly

| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 1    | 107-8879    | 6    | Pawl-Clutch            |
| 2    | 107-8880    | 6    | Support-Pawl           |
| 3    | 107-8886    | 2    | Retainer-Pin, Pawl     |
| 4    | 107-8895    | 2    | 32T Sprocket ASM       |
| 4:2  | 108-2973    | 2    | Bushing-Flange         |
| 5    | 107-8899    | 6    | Pin-Dowel              |
| 6    | 108-0035    | 12   | Screw-Torx Button Head |
| 7    | 107-8885    | 6    | Spring-Compression     |

# Attachments and Accessories

## For 38822 Power Max Heavy Duty 928 OXE Snowthrower

| Product Name                | Model/Part |
|-----------------------------|------------|
| Tire Chain Kit .....        | 107-3813   |
| Snow Cab .....              | 107-3814   |
| Weight Kit .....            | 107-3815   |
| 28 Inch Drift Breaker ..... | 107-3817   |
| Non-Marking Skid Kit .....  | 38211      |
| Toro 2-Stage Cover .....    | 490-7466   |
| Plain 2-Stage Cover .....   | 490-7467   |

**Notes:**

**Notes:**



**Count on it.**