 


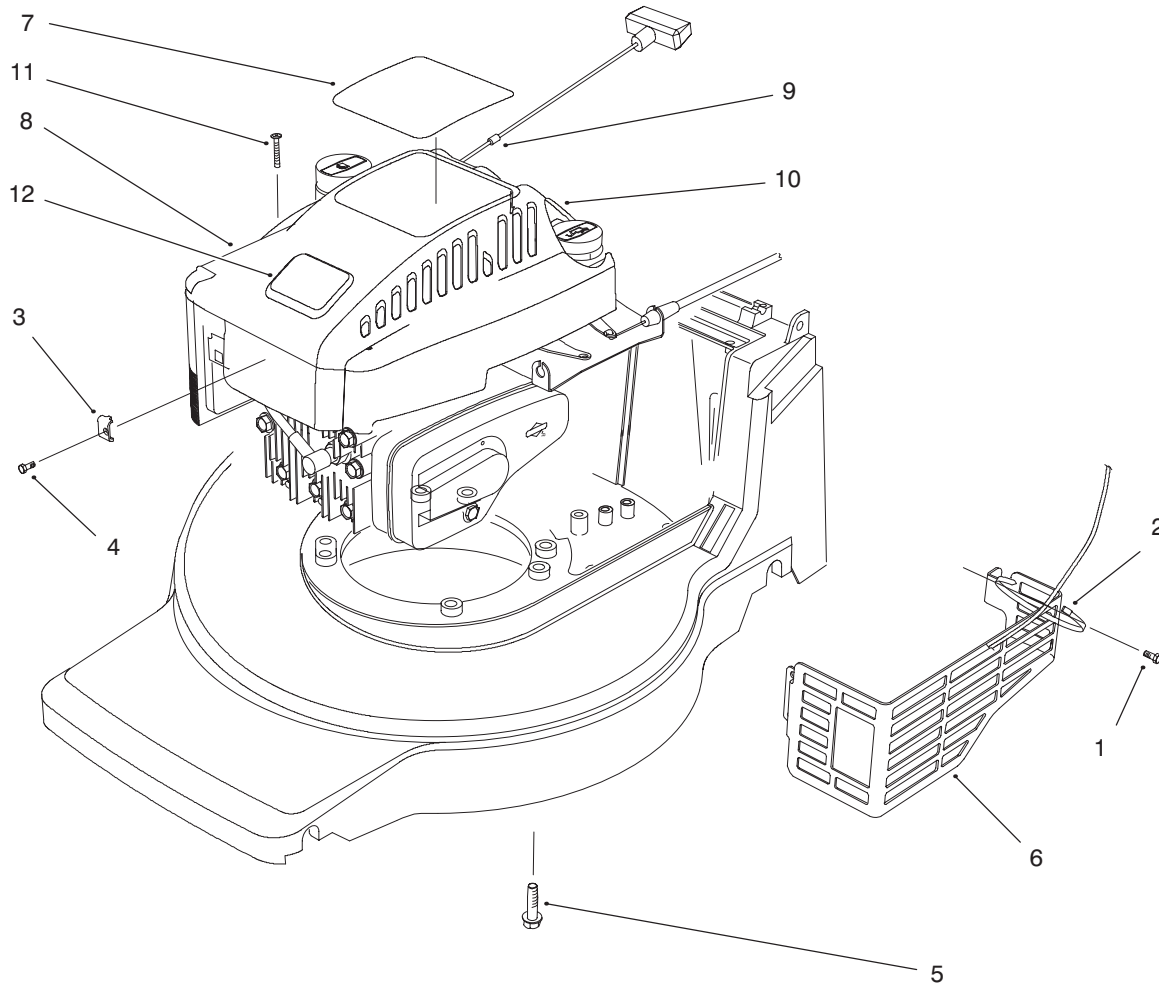

MODEL NO. 20804-7900001 & UP


**PARTS
CATALOG**
48cm RECYCLER[®]
REAR BAGGER MOWER


C-2627

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-73	Screw	3
2	3290-378	Tie - Cable	1
3	2210-249	Clamp - Casting	1
4	93-8470	Screw - Clamp	1
5	32144-102	Screw	3
6	82-8550	Shield - Muffler	1

Ref. No.	Part No.	Description	No. Used
7	93-4354	Decal - Engine	1
8		Engine	1
9	2210-316	Rope - Stop	1
10	93-0243	Shroud	1
11	32144-121	Screw	2
12	92-2289	Plate - Logo	1

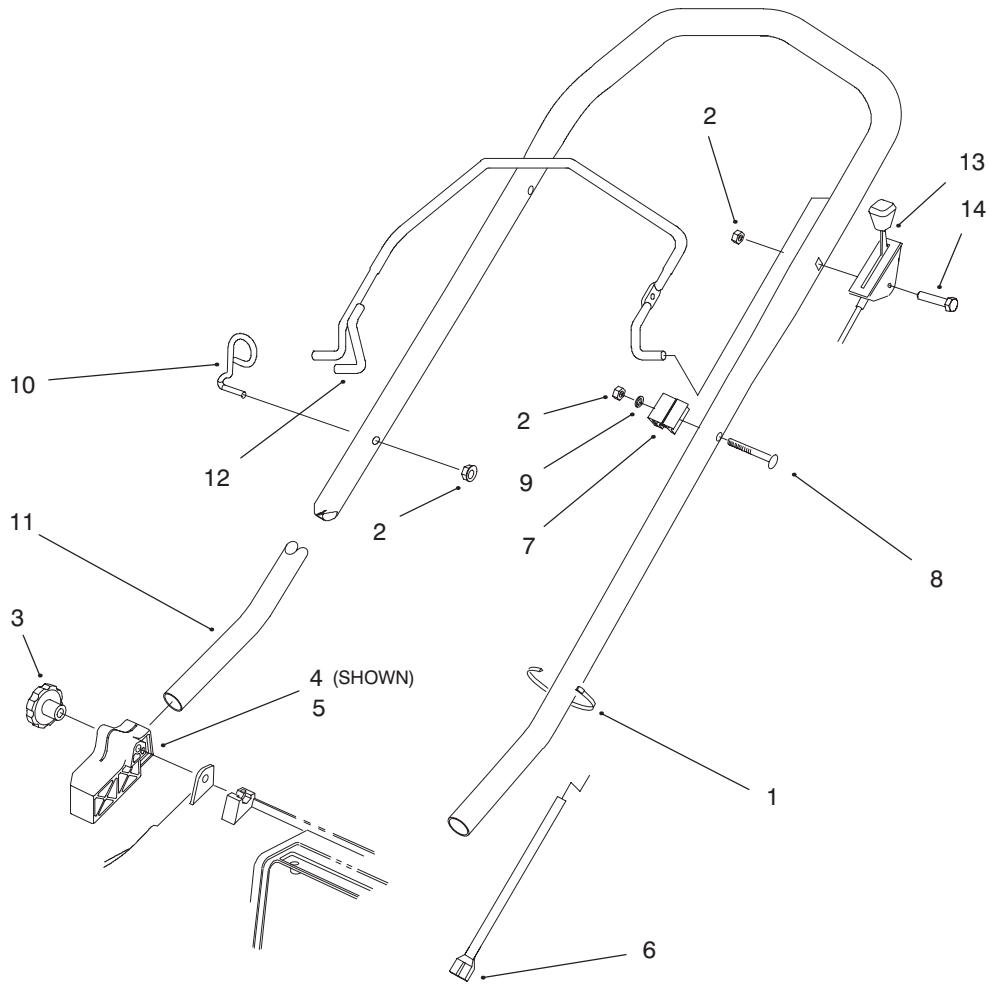 


C-2624

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3290-378	Tie – Cable	1
2	3296-73	Nut – Lock Insert	3
3	19-4050	Knob	2
4	71-8100	Mount – Handle RH	1
5	71-8090	Mount – Handle LH	1
6	93-1116	Cable – Brake	1
7	92-7729	Anchor – Cable	1

Ref. No.	Part No.	Description	No. Used
8	95-4453	Screw – Handle	1
9	3256-1	Washer – Flat	1
10	95-4457	Rope – Guide	1
11	94-4375	Handle	1
12	95-5924	Bail – Brake	1
13	93-1118	Control – Throttle	1
14	321-48	Screw – Hex Head	1

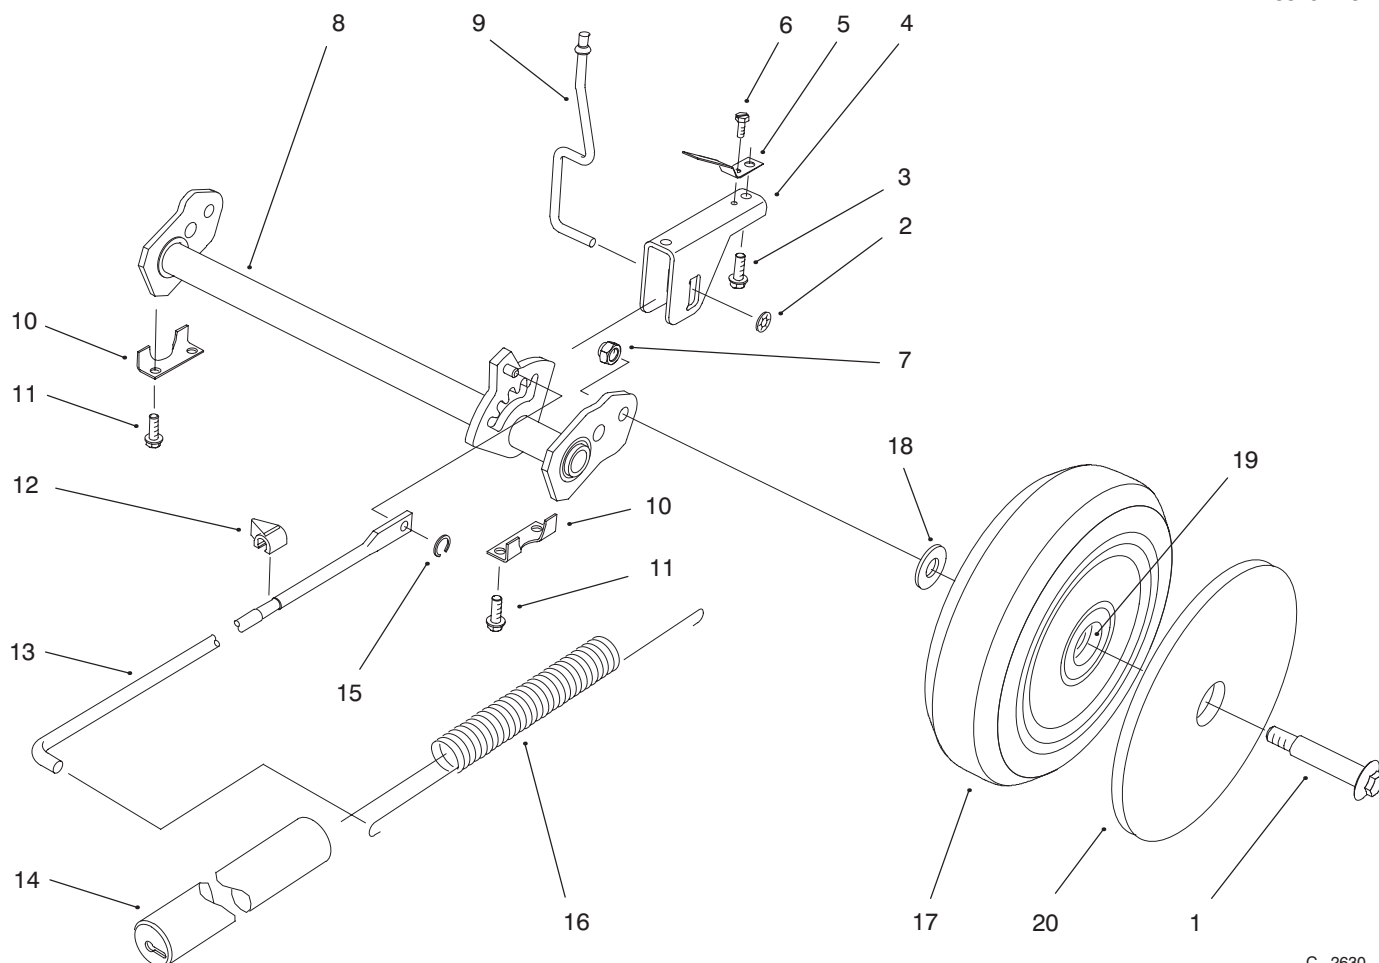 


C-2630

DECK SUSPENSION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	27-6230	Bolt - Wheel	2
2	32112-13	Nut - Push	1
3	63-8590	Screw	2
4	71-8080	Saddle - Height of Cut	1
5	71-8060	Spring - Trigger	2
6	32144-31	Screw	1
7	3296-5	Nut - Lock (Nylon)	2
8	71-7800	Arm - Pivot	1
9	71-7840	Rod - Trigger	1
10	71-7770	Plate - Securing	2
11	32144-4	Screw - Hex Head Tap	4

Ref. No.	Part No.	Description	No. Used
12	71-7980	Indicator - Height of Cut	1
13	71-7970	Rod - Link	1
14	71-8450	Cover - Spring	1
15	32151-93	Ring - Grip	1
16	71-7740	Spring - Counterbalance	1
17	14-9949	Rear Wheel & Tire Assembly (Incl. Ref. # 19)	2
18	40-1940	Washer	2
19	27-6250	Bushing	2
20	92-7663	Cover - Wheel	1

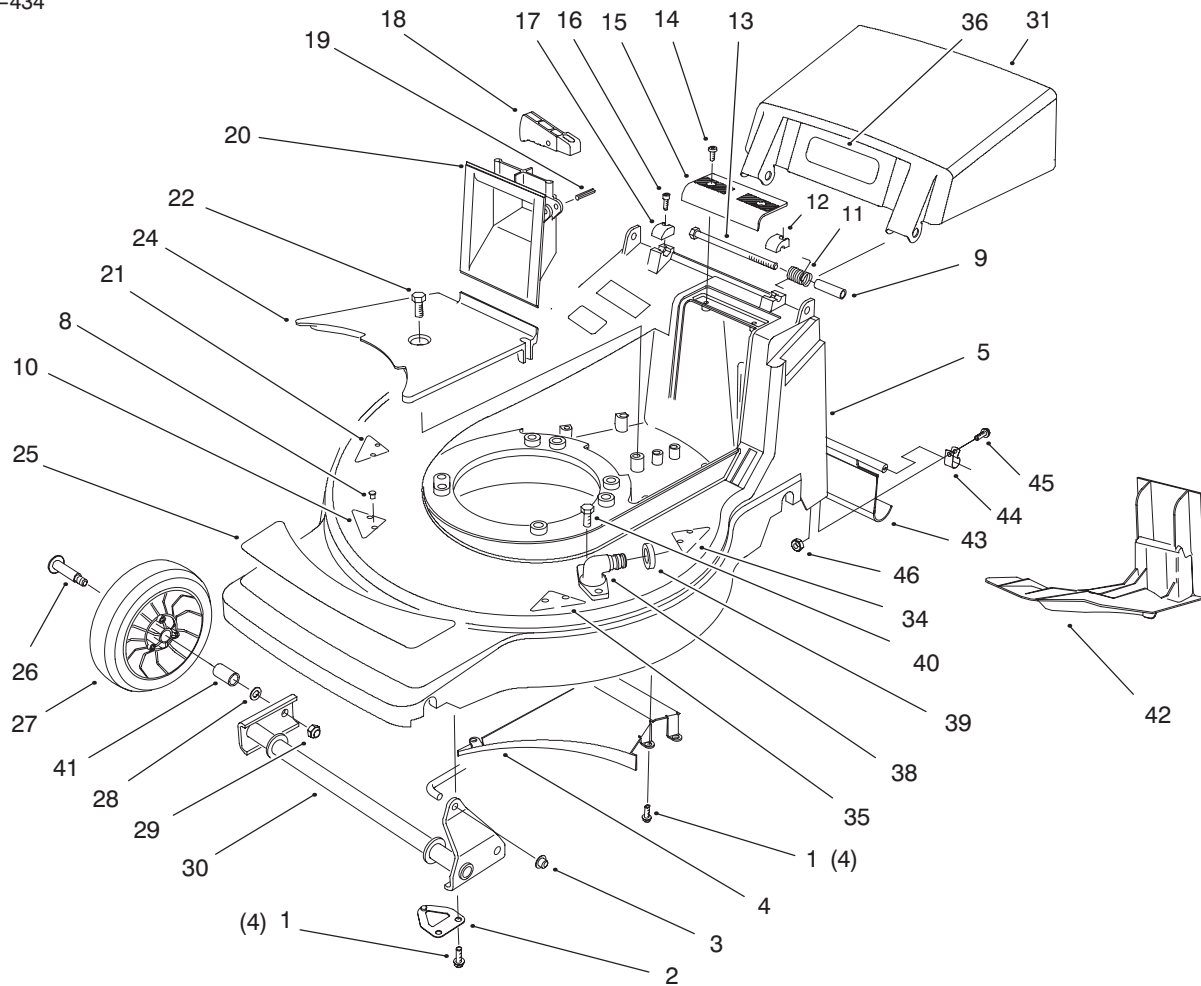 


C-2686

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-4	Screw - Hex Head	8
2	71-8830	Retainer - Shaft Assembly	2
3	32112-11	Nut - Push	1
4	71-7990	Ramp - Discharge	1
5	95-6134	Housing Assembly (Incl. Ref. # 8, 10, 21, 25, 34, 35, 38-40)	1
8	32144-111	Screw - Phillips Pan Head	8
9	71-8580	Spacer - Door	2
10	71-8920	Kicker - Front, Right	1
11	71-9840	Spring - Door	2
12	71-7900	Cap - Bolt, Hinge (LH)	1
13	322-29	Screw - Hex Head	2
14	32144-97	Screw - Phillips Pan Head	2
15	71-7860	Grip - Upper	1
16	65-5210	Screw - Thread Forming	2
17	71-7910	Cap - Bolt, Hinge (RH)	1
18	71-7930	Trigger - Height of Cut	1
19	3284-5	Pin - Groove	1
20	71-7870	Grip - Lower	1
21	71-9230	Kicker - Right, Rear	1
22	32144-70	Screw - Tap	1

Ref. No.	Part No.	Description	No. Used
24	71-7920	Cover - Belt	1
25	92-7863	Decal - Deck	1
26	27-2630	Bolt - Wheel	2
27	46-1113	Wheel & Tire Assembly (Incl. Ref. #41)	2
28	40-1940	Washer	2
29	3296-5	Nut - Lock	2
30	71-7820	Pivot - Front	1
31	17-1569	Discharge Door Assembly (Incl. Ref. # 36)	1
34	71-9250	Kicker - Rear, Left	1
35	71-9440	Kicker - Front, Left	1
36	93-4105	Decal - Danger	1
38	95-2747	Fitting - Washout	1
39	46-6290	O-Ring	1
40	46-6811	Screw - Hex Washer Head	2
41	27-6250	Bushing	2
42	71-9990	Plug - Recycler	1
43	95-7097	Shield - Trailing	1
44	95-7098	Hanger - Shield	2
45	3290-134	Screw - Hex Head	2
46	3296-2	Nut - Lock	2

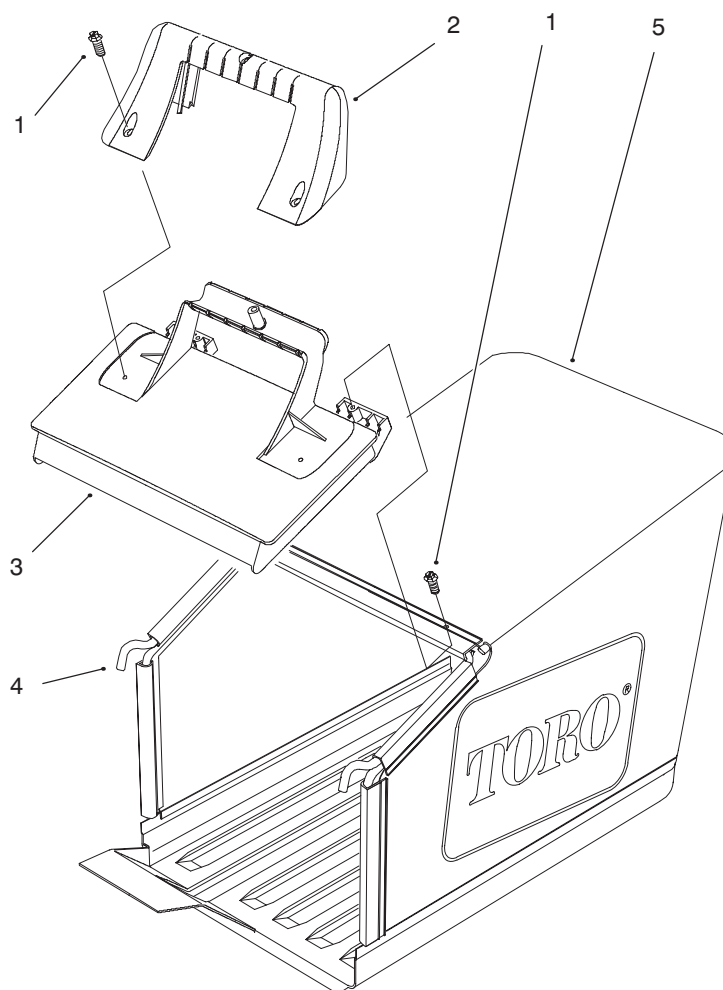 


C-2626

BAG AND COMPONENTS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-111	Screw – Phillips Pan Head	5
2	71-9480	Handle Door	1
3	71-9470	Door – Bag	1

Ref. No.	Part No.	Description	No. Used
4	71-9900	Frame	1
5	71-9460	Bag – Grass	1

 * Not Illustrated

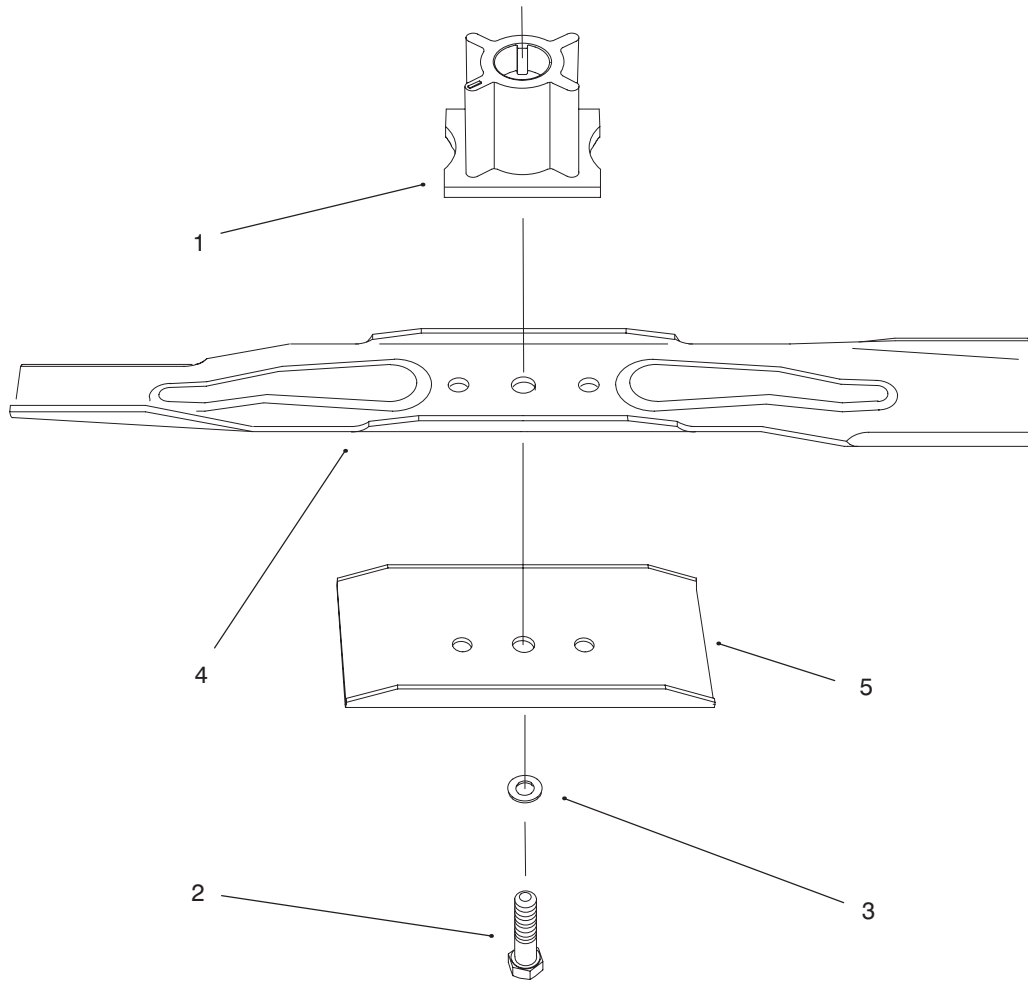


C-2628

BLADE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-7940	Retainer - Blade	1
2	26-0672	Bolt - Blade	1
3	3253-22	Washer - Lock	1

Ref. No.	Part No.	Description	No. Used
4	71-9260	Blade	1
5	80-0510	Stiffener - Blade	1

 Obtain Parts From Briggs & Stratton

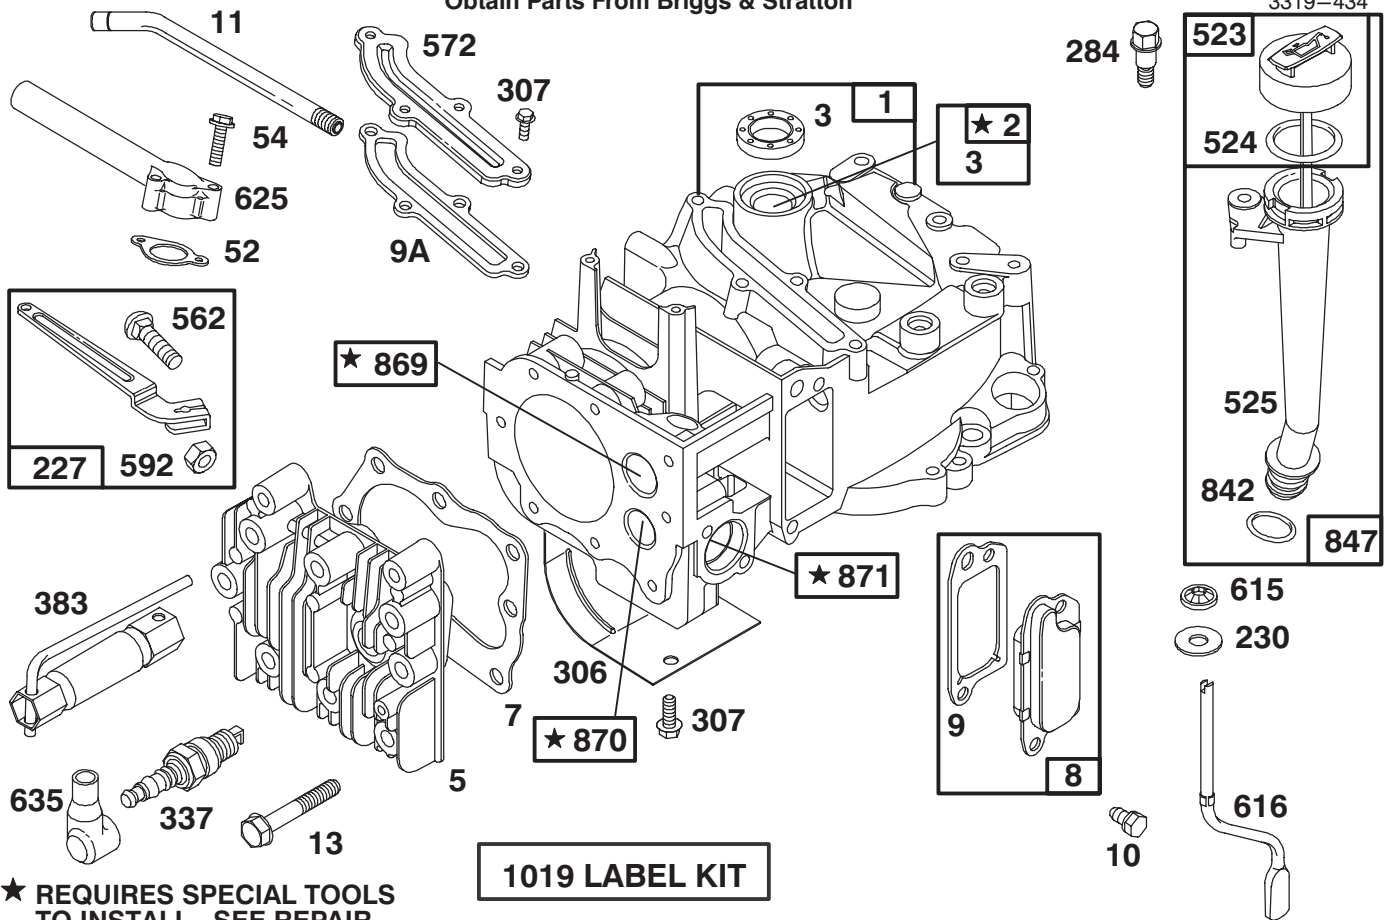

★ REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.


1019 LABEL KIT

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0667-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1	383	89838	Wrench – Spark Plug	1
2	293708	Bushing – Cylinder	1	523	495264	Cap With Dipstick – Oil Filler	1
★3	299819	Seal – Oil	1	★524	280393	Seal – Filler Tube	1
5	214349	Head – Cylinder	1	525	495265	Tube – Oil Filler	1
★7	272916	Gasket – Cylinder Head	1	562	94852	Bolt – Carriage	1
8	495786	Breather – Valve Chamber	1	572	224328	Baffle – Cylinder	1
★9	272481	Gasket – Breather	1	592	231082	Nut – Hex.	1
★9A	272238	Gasket – Baffle Plate	1	615	94474	Fastener	1
10	94650	Screw – Breather Mtg.	1	616	262578	Crank – Governor	1
11	231933	Tube – Breather	1	625	497465	Tube – Fuel Intake	1
13	94547	Screw – Cylinder Head	1	635	66538	Elbow – Spark Plug	1
★52	272199	Gasket – Intake Elbow	1	★842	280966	Seal – O-Ring	1
54	94526	Screw – Intake Elbow Mtg.	1	847	495263	Oil Fill Tube Assy.	1
227	492349	Lever Assembly – Gov.	1	869	213512	Seat – Intake Valve	1
230	67072	Washer – Gov. Crank	1	870	213513	Seat – Exhaust Valve	1
284	94511	Screw – Hex. Head	1	871	262001	Guide – Exhaust Valve	1
306	224324	Shield – Cylinder	1			Note: 63709 Guide – Intake Valve	1
307	94515	Screw – Hex. Head	1			Label Kit	1
337	802592	Plug – Spark	1	1019	494256		

 ★ Included in Gasket Set—Part No. 496316.

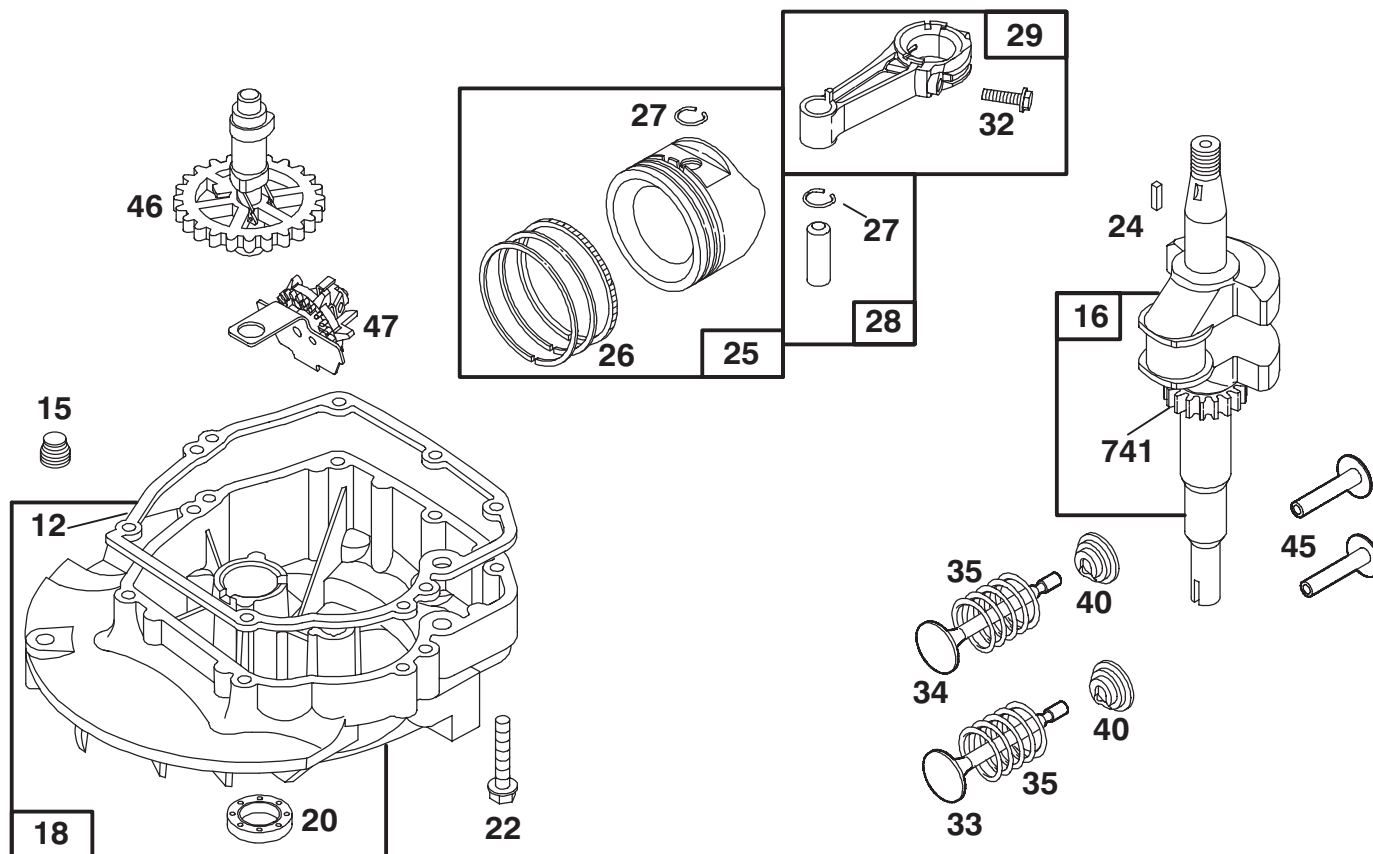


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0667-01

Ref. No.	Part No.	Description	No. Used
★12	272198	Gasket – Crankcase	1
15	94720	Plug – Oil Drain	1
16	494546	Crankshaft	
		Note: Order 94388 For Timing Gear Key.	
18	493279	Sump – Engine	1
★20	399781	Seal – Oil	1
22	94220	Screw – Hex. Head	1
		Note: 94612 Screw – Hex. Head (One (1) Used in Hole Nearest Breather)	1
24	222698	Key – Flywheel	1
25	493262	Piston Assy. (Standard)	1
	493385	Piston Assy. (.010" O.S.)	1
	493386	Piston Assy. (.020" O.S.)	1
	493387	Piston Assy. (.030" O.S.)	1
26	493261	Ring Set (Standard)	1
	493388	Ring Set (.010" O.S.)	1
	493389	Ring Set (.020" O.S.)	1
	493390	Ring Set (.030" O.S.)	1

Ref. No.	Part No.	Description	No. Used
27	26026	Lock – Piston Pin	1
28	298909	Pin – Piston (Standard)	1
	298908	Pin – Piston (.005" O.S.)	1
29	490566	Rod Assembly – Connecting	1
		Note: For Connecting Rod With .020" Undersize Crankpin Bearing – Order No. 490743.	
32	94699	Screw – Connecting Rod	1
33	262651	Valve – Exhaust	1
34	262652	Valve – Intake	1
35	262224	Spring – Valve	1
40	93312	Retainer – Valve Spring	1
45	262204	Tappet – Valve	1
46	492830	Gear – Cam	1
47	493737	Slinger – Oil	1
741	262598	Gear – Timing	1

 ★ Included in Gasket Set—Part No. 496316.

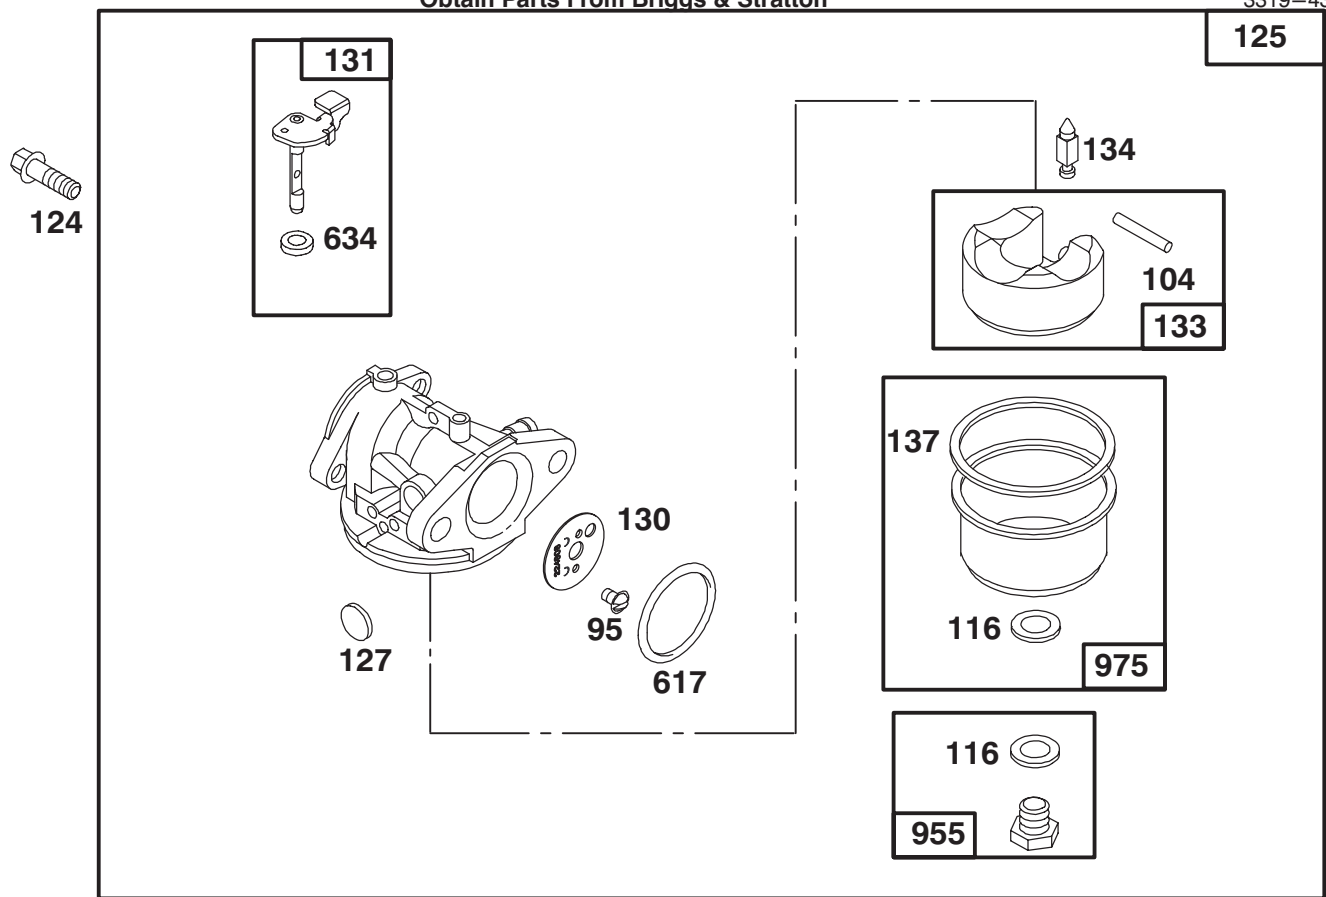

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 12F802-0667-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
95	94098	Screw—Throttle Valve Mtg.	1	◆◆137		Gasket — Bowl	1
◆104	231371	Pin — Float Hinge	1	◆◆617	270344	(Sold in Kit Only)	1
◆◆116		Gasket—Sealing	1	◆◆634		Seal — Fuel Intake Tube	1
		(Sold in Kit Only)				Washer—Shaft	1
124	94525	Screw — Carburetor Mtg.	1			(Sold in Kit Only)	
125	497314	Carburetor	1	955	497315	Screw — Bowl Mtg. (Std.)	1
◆127		Plug — Welch	1			Note: 496495 Screw — Bowl Mtg. (High Altitude)	1
		(Sold in Kit Only)		975	493640	Bowl Assy. — Carburetor	1
130	224908	Valve — Throttle	1				
131	493267	Shaft — Throttle	1				
133	398187	Float Assy. — Carburetor	1				
◆134	398188	Valve — Inlet	1				
		(Includes Seat)					

◆ Included in Carburetor Kit—Part No. 493762.

◆ Included in Carburetor Gasket Set—Part No. 490937.

 Obtain Parts From Briggs & Stratton

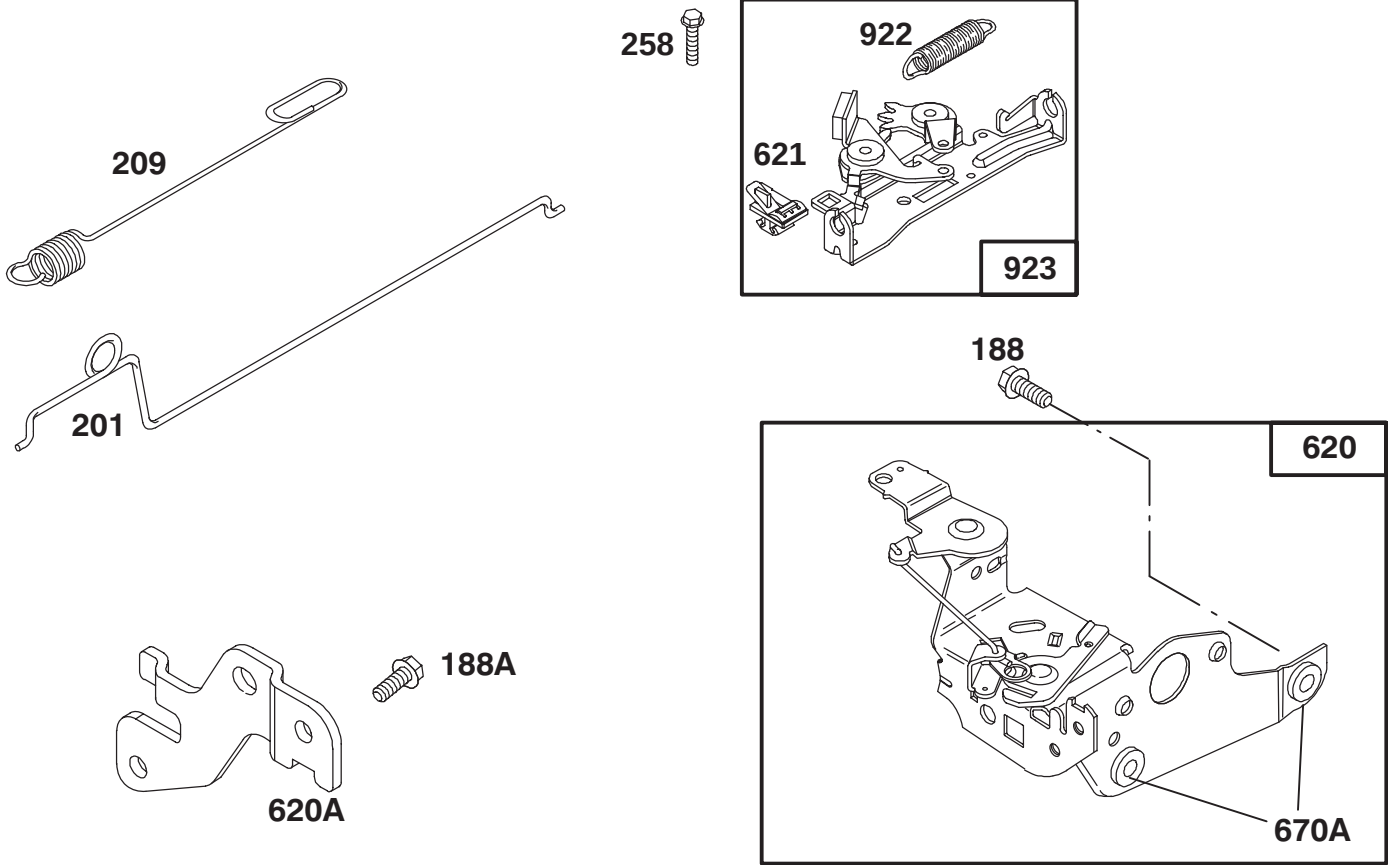


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0667-01

Ref. No.	Part No.	Description	No. Used
188	94644	Screw – Hex. Head	1
188A	94602	Screw – Hex. Head	1
201	262579	Link – Governor	1
209	263046	Spring – Governor	1
258	94512	Screw–Hex. Head	1
620	497203	Bracket – Carburetor	1

Ref. No.	Part No.	Description	No. Used
620A	225152	Bracket – Control	1
621	396847	Switch – Stop	1
670A	493823	Spacer – Bracket	1
922	262640	Spring–Brake	1
923	493442	Brake Assembly	1

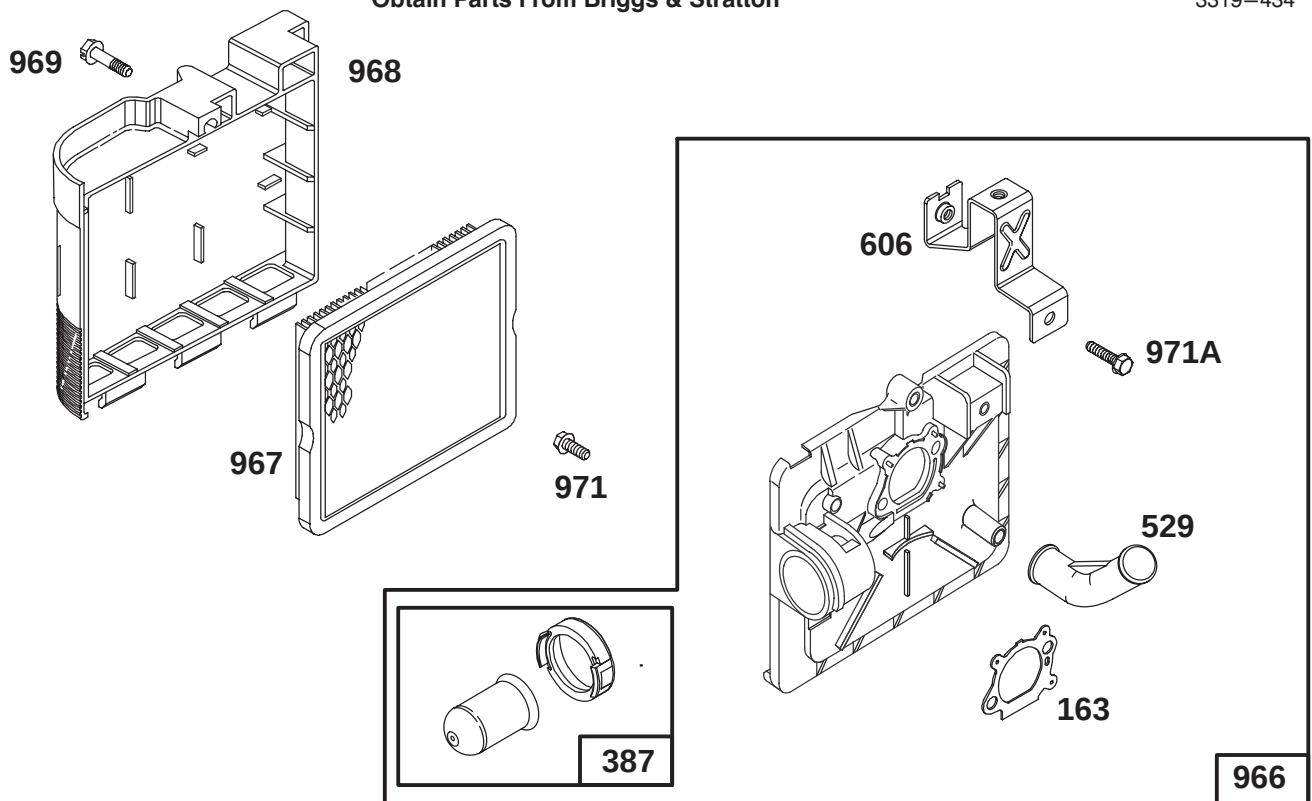 


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0667-01

Ref. No.	Part No.	Description	No. Used
163	272653	Gasket — Air Cleaner	1
387	496115	Primer—Carburetor	1
529	281299	Grommet — Breather	1
606	224815	Strap — Bracket	1
966	496116	Base — Air Cleaner	1

Ref. No.	Part No.	Description	No. Used
967	491588	Filter — Air	1
968	281340	Cover — Air Cleaner	1
969	94120	Screw — Cover Mtg.	1
971	94121	Screw — Air Cleaner	1
971A	94749	Screw — Hex. Head	1

 ★ Included in Gasket Set—Part No. 496316.

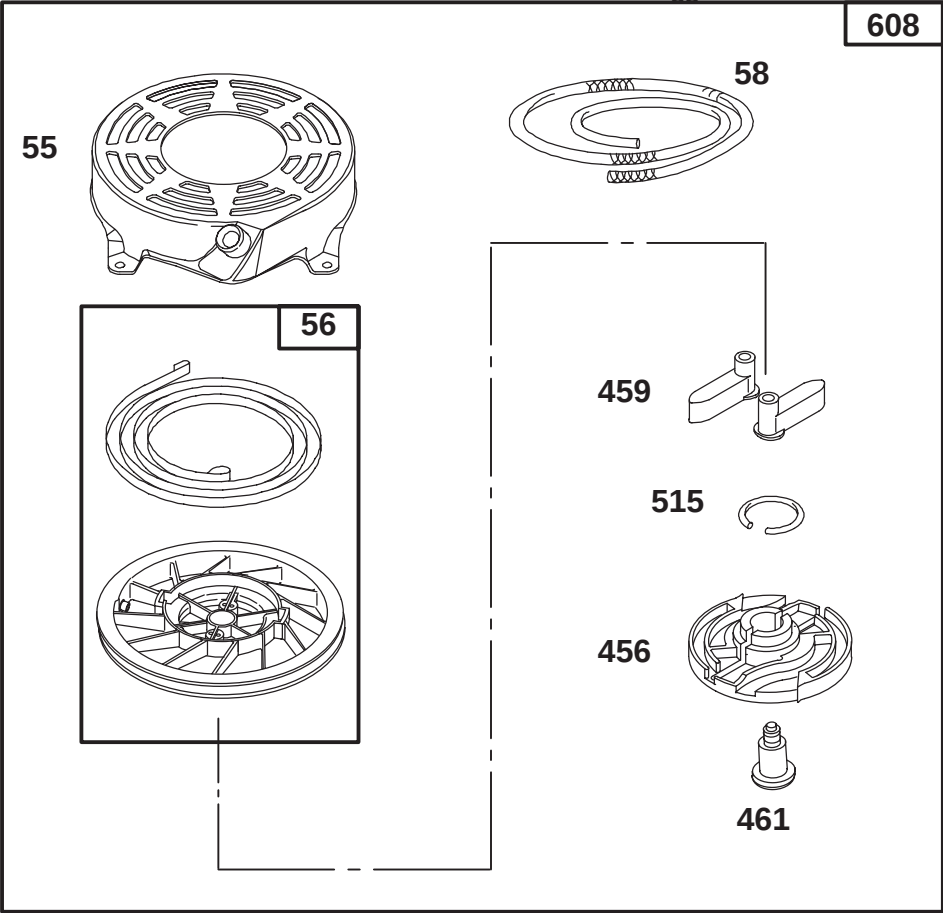


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0667-01


Ref. No.	Part No.	Description	No. Used
55	497440	Housing – Rewind Starter	1
56	498144	Pulley – Rewind Starter	1
58	280399	Rope – Rewind Starter (Cut to Required Length)	1
59	224467	Insert – Starter Grip	1
60	493926	Handle – Rewind Starter	1
456	281503	Retainer – Rewind Starter	1

Ref. No.	Part No.	Description	No. Used
459	281505	Pawl – Starter	1
461	94943	Pin – Starter	1
515	263073	Spring – Torsion	1
608	497680	Starter Assy. – Rewind Includes: 94128 Screw – Hex. Hd. 92987 Nut – Hex.	1 1 1

 

Ref. No.	Part No.	Description	No. Used
23	492177	Flywheel	1
37	224511	Guard – Flywheel	1
304	493293	Housing – Blower	1
305	94744	Screw – Sem	1
332	92284	Nut – Flywheel	1
333	802574	Armature – Magneto	1

Ref. No.	Part No.	Description	No. Used
334	94731	Screw – Sem	1
356	398808	Wire – Ground	1
363	19069	Flywheel Puller	1
455	225121	Cup – Starter	1
851	493880	Terminal – Ignition Cable	1



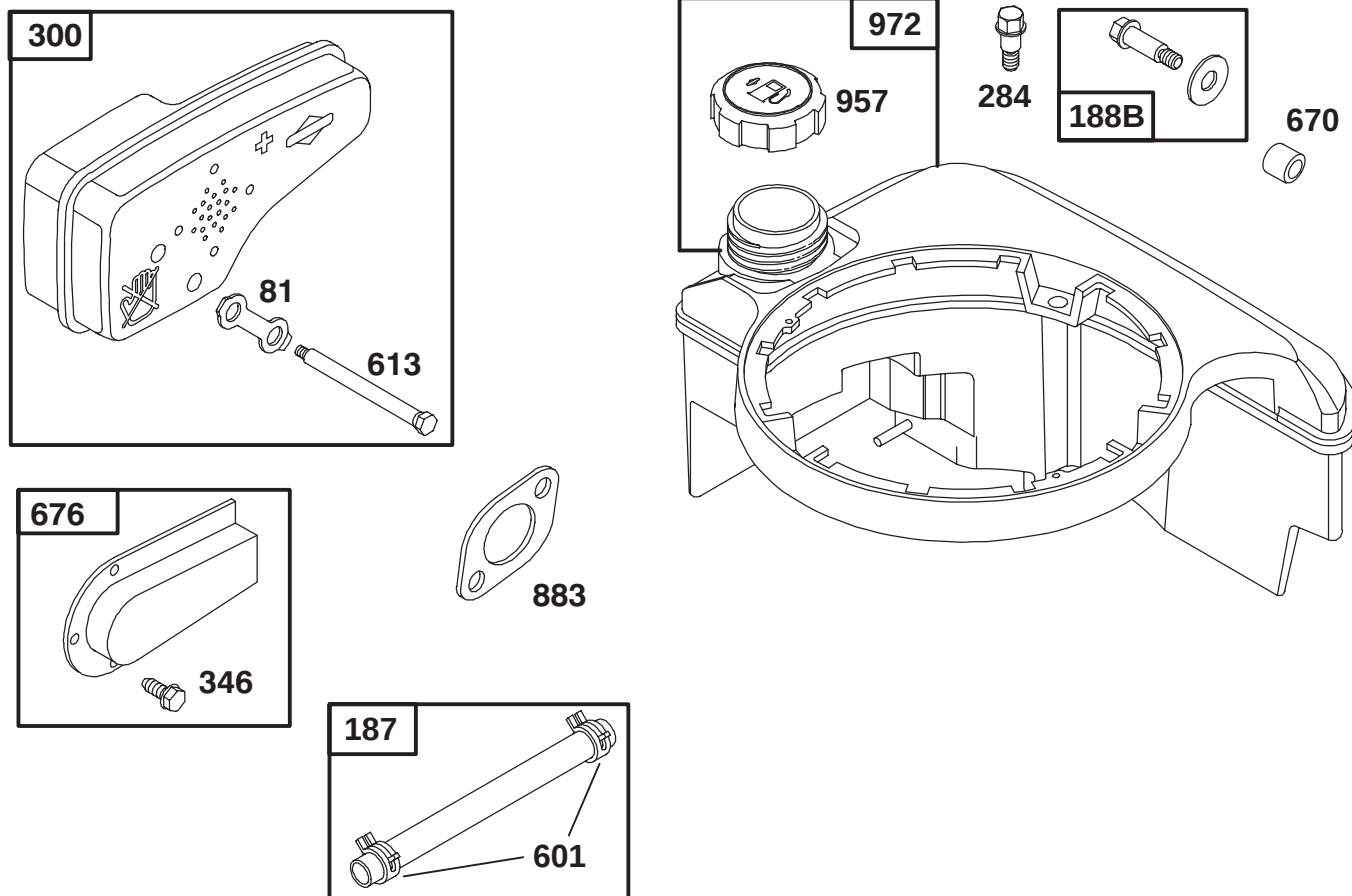 


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0667-01

Ref. No.	Part No.	Description	No. Used
81	223664	Lock – Muffler Screw	1
187	492790	Hose – Fuel	1
188	398540	Screw – Tank Mounting	1
284	94511	Screw – Shoulder	1
300	496106	Muffler – Exhaust	1
346	93705	Screw – Hex. Head	1
601	93053	Clamp – Hose	1

Ref. No.	Part No.	Description	No. Used
613	94231	Screw – Shoulder	1
670	280512	Spacer – Fuel Tank	1
676	493871	Deflector – Muffler	1
★883	272253	Gasket – Exhaust	1
957	397974	Cap Assy. – Fuel	1
972	495224	Tank Assembly – Fuel	1

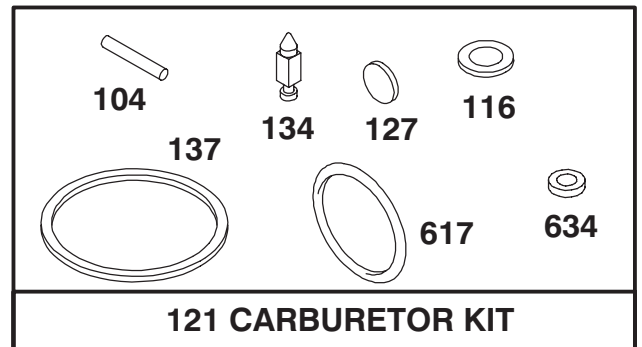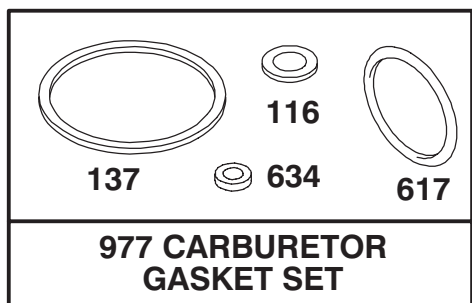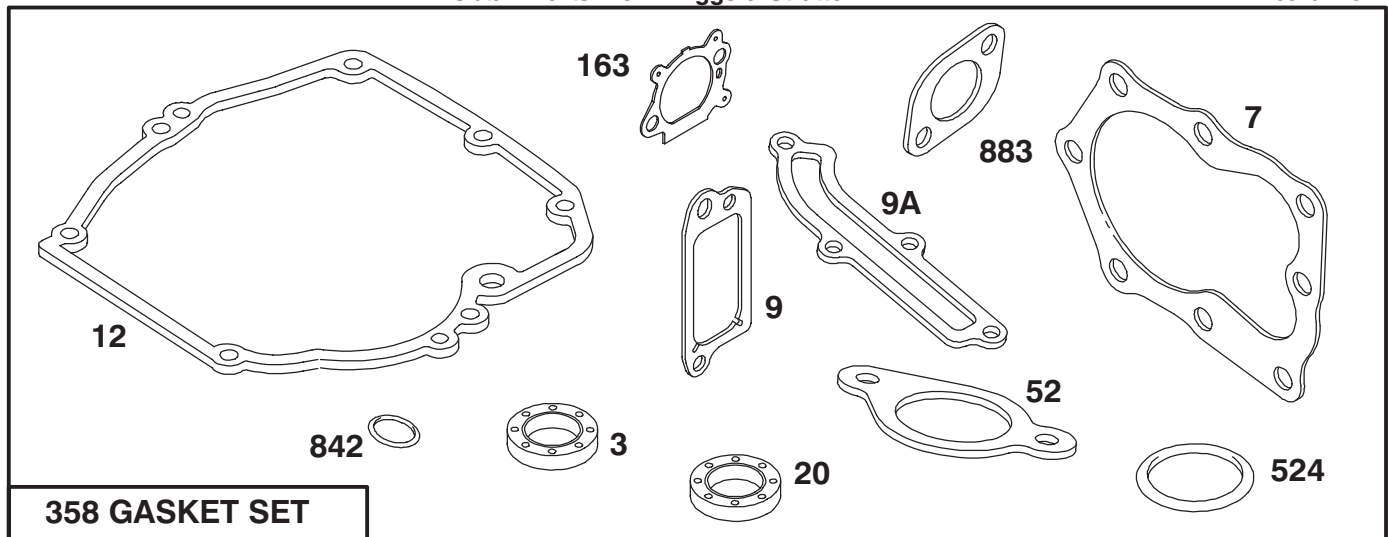   

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0667—01

Ref. No.	Part No.	Description	No. Used
★3	299819	Seal — Oil	1
★7	272916	Gasket — Cylinder Hd.	1
★9	272481	Gasket — Breather	1
★9A	272238	Gasket — Baffle Plate	1
★12	272198	Gasket — Crankcase	1
★20	399781	Seal — Oil	1
★52	272199	Gasket — Intake Elbow	1
●104	231371	Pin — Float Hinge	1
◆116		Gasket — Sealing (Sold in Kit Only)	1
121	493762	Carburetor Kit	1
●127		Plug — Welch (Sold in Kit Only)	1

Ref. No.	Part No.	Description	No. Used
●134	398188	Valve — Inlet (Includes Seat)	1
◆137		Gasket — Bowl (Sold in Kit Only)	1
★163	272653	Gasket — Air Cleaner	1
358	497316	Gasket Set	1
★524	280393	Seal — Filler Tube	1
◆617	270344	Seal — Fuel Intake Tube	1
◆634		Washer — Shaft (Sold in Kit Only)	1
★842	280966	Seal — O-Ring	1
★883	272253	Gasket — Exhaust	1
977	490937	Gasket Set — Carburetor	1

● Included in Carburetor Kit—Part No. 493762.

◆ Included in Carburetor Gasket Set—Part No. 490937.

★ Included in Gasket Set—Part No. 496316.

TORO PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
14-9949	Rear Wheel & Tire Assembly	3 17 2	80-0510	Stiffener - Blade	6 5 1
17-1569	Discharge Door Assembly	4 31 1	82-8550	Shield - Muffler	1 6 1
19-4050	Knob	2 3 2	92-2289	Plate - Logo	1 12 1
26-0672	Bolt - Blade	6 2 1	92-7663	Cover - Wheel	3 20 1
27-2630	Bolt - Wheel	4 26 2	92-7729	Anchor - Cable	2 7 1
27-6230	Bolt - Wheel	3 1 2	92-7863	Decal - Deck	4 25 1
27-6250	Bushing	3 19 2	93-0243	Shroud	1 10 1
27-6250	Bushing	4 41 2	93-1116	Cable - Brake	2 6 1
40-1940	Washer	3 18 2	93-1118	Control - Throttle	2 13 1
40-1940	Washer	4 28 2	93-4105	Decal - Danger	4 36 1
46-1113	Wheel & Tire Assembly	4 27 2	93-4354	Decal - Engine	1 7 1
46-6290	O-Ring	4 39 1	93-8470	Screw - Clamp	1 4 1
46-6811	Screw - Hex Washer Head	4 40 2	94-4375	Handle	2 11 1
63-8590	Screw	3 3 2	95-2747	Fitting - Washout	4 38 1
65-5210	Screw - Thread Forming	4 16 2	95-4453	Screw - Handle	2 8 1
71-7740	Spring - Counterbalance	3 16 1	95-4457	Rope - Guide	2 10 1
71-7770	Plate - Securing	3 10 2	95-5924	Bail - Brake	2 12 1
71-7800	Arm - Pivot	3 8 1	95-6134	Housing Assembly	4 5 1
71-7820	Pivot - Front	4 30 1	95-7097	Shield - Trailing	4 43 1
71-7840	Rod - Trigger	3 9 1	95-7098	Hanger - Shield	4 44 2
71-7860	Grip - Upper	4 15 1	2210-249	Clamp - Casting	1 3 1
71-7870	Grip - Lower	4 20 1	2210-316	Rope - Stop	1 9 1
71-7900	Cap - Bolt, Hinge (LH)	4 12 1	321-48	Screw - Hex Head	2 14 1
71-7910	Cap - Bolt, Hinge (RH)	4 17 1	322-29	Screw - Hex Head	4 13 2
71-7920	Cover - Belt	4 24 1	3253-22	Washer - Lock	6 3 1
71-7930	Trigger - Height of Cut	4 18 1	3256-1	Washer - Flat	2 9 1
71-7940	Retainer - Blade	6 1 1	3284-5	Pin - Groove	4 19 1
71-7970	Rod - Link	3 13 1	3290-134	Screw - Hex Head	4 45 2
71-7980	Indicator - Height of Cut	3 12 1	3290-378	Tie - Cable	2 1 1
71-7990	Ramp - Discharge	4 4 1	3290-378	Tie - Cable	1 2 1
71-8060	Spring - Trigger	3 5 2	3296-2	Nut - Lock	4 46 2
71-8080	Saddle - Height of Cut	3 4 1	3296-5	Nut - Lock	4 29 2
71-8090	Mount - Handle LH	2 5 1	3296-5	Nut - Lock (Nylon)	3 7 2
71-8100	Mount - Handle RH	2 4 1	3296-73	Nut - Lock Insert	2 2 3
71-8450	Cover - Spring	3 14 1	32112-11	Nut - Push	4 3 1
71-8580	Spacer - Door	4 9 2	32112-13	Nut - Push	3 2 1
71-8830	Retainer - Shaft Assembly	4 2 2	32144-4	Screw - Hex Head	4 1 8
71-8920	Kicker - Front, Right	4 10 1	32144-4	Screw - Hex Head Tap	3 11 4
71-9230	Kicker - Right, Rear	4 21 1	32144-31	Screw	3 6 1
71-9250	Kicker - Rear, Left	4 34 1	32144-70	Screw - Tap	4 22 1
71-9260	Blade	6 4 1	32144-73	Screw	1 1 3
71-9440	Kicker - Front, Left	4 35 1	32144-97	Screw - Phillips Pan Head	4 14 2
71-9460	Bag - Grass	5 5 1	32144-102	Screw	1 5 3
71-9470	Door - Bag	5 3 1	32144-111	Screw - Phillips Pan Head	5 1 5
71-9480	Handle Door	5 2 1	32144-111	Screw - Phillips Pan Head	4 8 8
71-9840	Spring - Door	4 11 2	32144-121	Screw	1 11 2
71-9900	Frame	5 4 1	32151-93	Ring - Grip	3 15 1
71-9990	Plug - Recycler	4 42 1			