




MODEL NO. 20809-7900001 & UP

PARTS CATALOG

48cm RECYCLER[®] REAR BAGGING MOWER

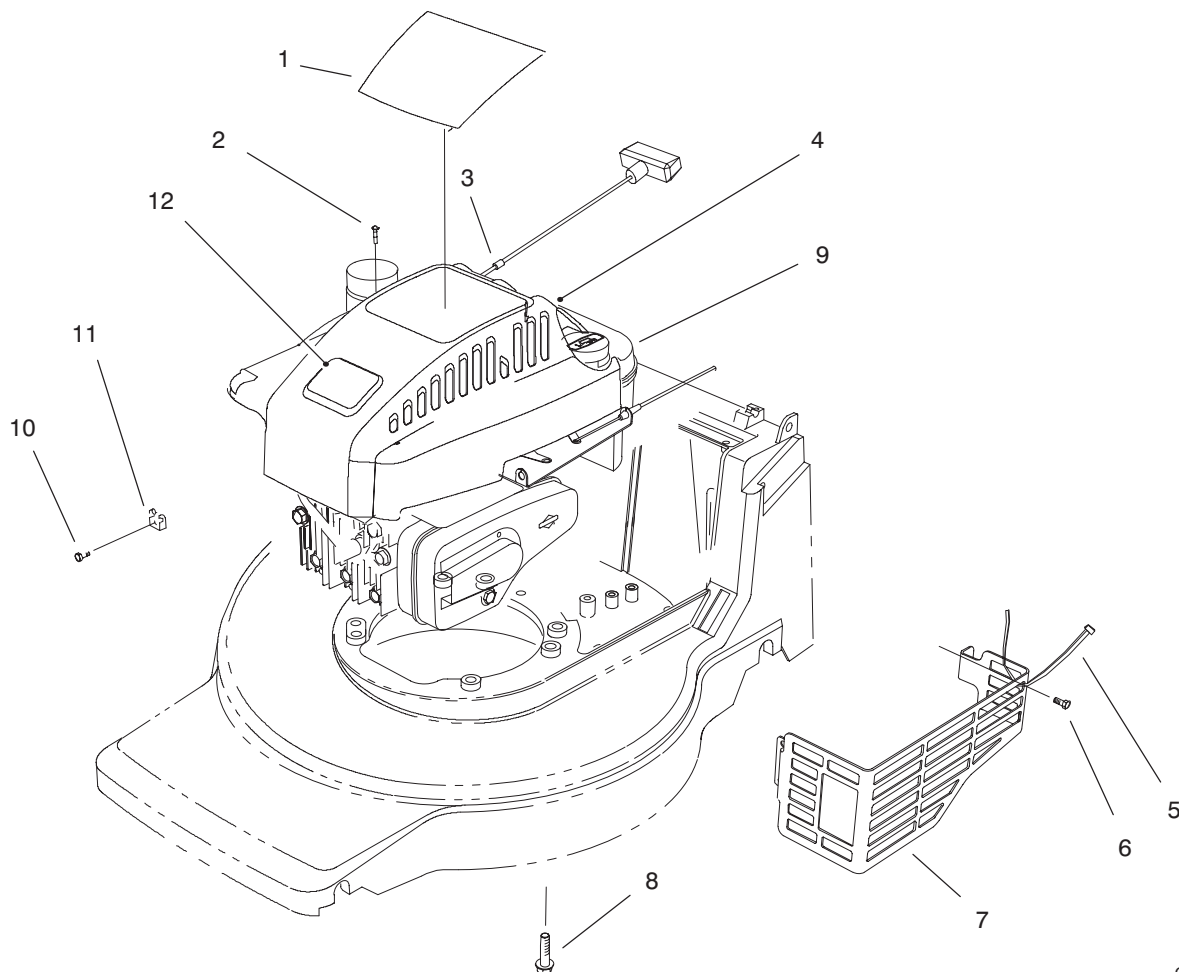


C-2273

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-4354	Decal - Engine	1
2	32144-121	Screw - Mounting	2
3	2210-316	Stop - Rope	1
4	93-0243	Shroud - QT Wedge	1
5	3290-378	Tie - Cable	1
6	32144-73	Screw - Hex Washer Hd. Thread Forming	3

Ref. No.	Part No.	Description	No. Used
7	82-8550	Shield - Muffler	1
8	32144-102	Screw - Engine	3
9		Engine	1
10	93-8470	Screw - Clamp	1
11	2210-249	Clamp - Casing	1
12	92-2289	Plate - Logo Toro	1

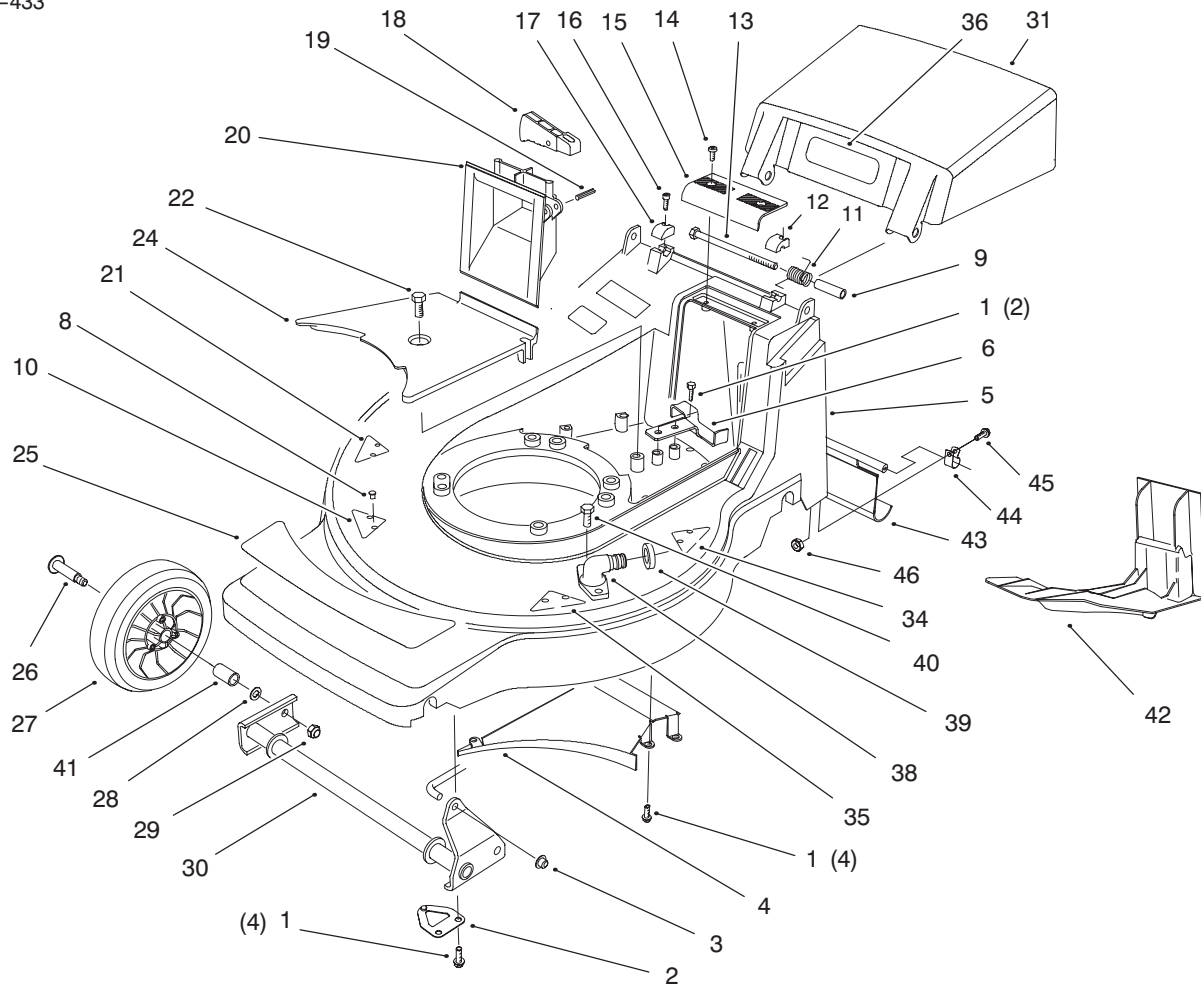


C-2687

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-4	Screw - Hex Head	10
2	71-8830	Retainer - Shaft Assembly	2
3	32112-11	Nut - Push	1
4	71-7990	Ramp - Discharge	1
5	95-6134	Housing Assembly (Incl. Ref. # 8, 10, 21, 25, 34, 35, 38-40)	1
6	71-7890	Guide - Belt, Rear	1
8	32144-111	Screw - Phillips Pan Head	8
9	71-8580	Spacer - Door	2
10	71-8920	Kicker - Front, Right	1
11	71-9840	Spring - Door	2
12	71-7900	Cap - Bolt, Hinge (LH)	1
13	322-29	Screw - Hex Head	2
14	32144-97	Screw - Phillips Pan Head	2
15	71-7860	Grip - Upper	1
16	65-5210	Screw - Thread Forming	2
17	71-7910	Cap - Bolt, Hinge (RH)	1
18	71-7930	Trigger - Height of Cut	1
19	3284-5	Pin - Groove	1
20	71-7870	Grip - Lower	1
21	71-9230	Kicker - Right, Rear	1
22	32144-70	Screw - Tap	1


Ref. No.	Part No.	Description	No. Used
24	71-7920	Cover - Belt	1
25	92-7863	Decal - Deck	1
26	27-2630	Bolt - Wheel	2
27	46-1113	Wheel & Tire Assembly (Incl. Ref. #41)	2
28	40-1940	Washer	2
29	3296-5	Nut - Lock	2
30	71-7820	Pivot - Front	1
31	17-1569	Discharge Door Assembly (Incl. Ref. # 36)	1
34	71-9250	Kicker - Rear, Left	1
35	71-9440	Kicker - Front, Left	1
36	93-4105	Decal - Danger	1
38	95-2747	Fitting - Washout	1
39	46-6290	O-Ring	1
40	46-6811	Screw - Hex Washer Head	2
41	27-6250	Bushing	2
42	71-9990	Plug - Recycler	1
43	95-7097	Shield - Trailing	1
44	95-7098	Hanger - Shield	2
45	3290-134	Screw - Hex Head	2
46	3296-2	Nut - Lock	2

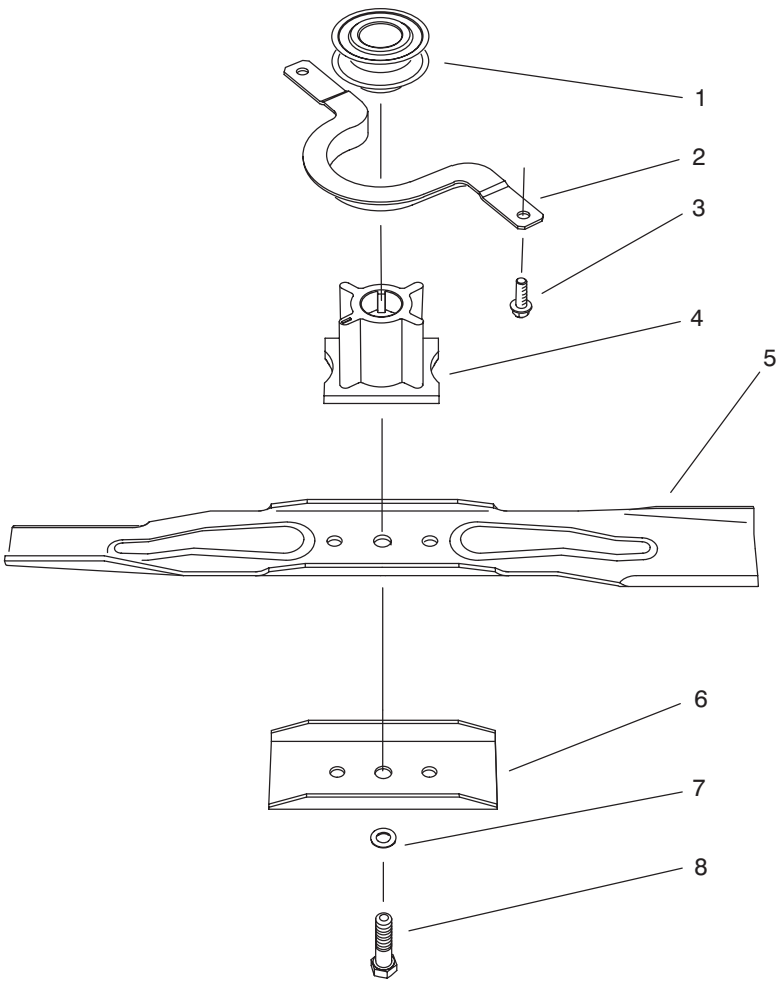

C-1012

BLADE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	62-7550	Pulley - Driver	1	5	71-9260	Blade - 48cm Recycler	1
2	71-7960	Guide - Engine Belt	1	6	80-0510	Stiffener - Blade	1
3	32144-4	Screw - Tapping	2	7	3253-22	Washer - Lock	1
4	71-7940	Retainer - Blade	1	8	26-0672	Bolt - Blade	1

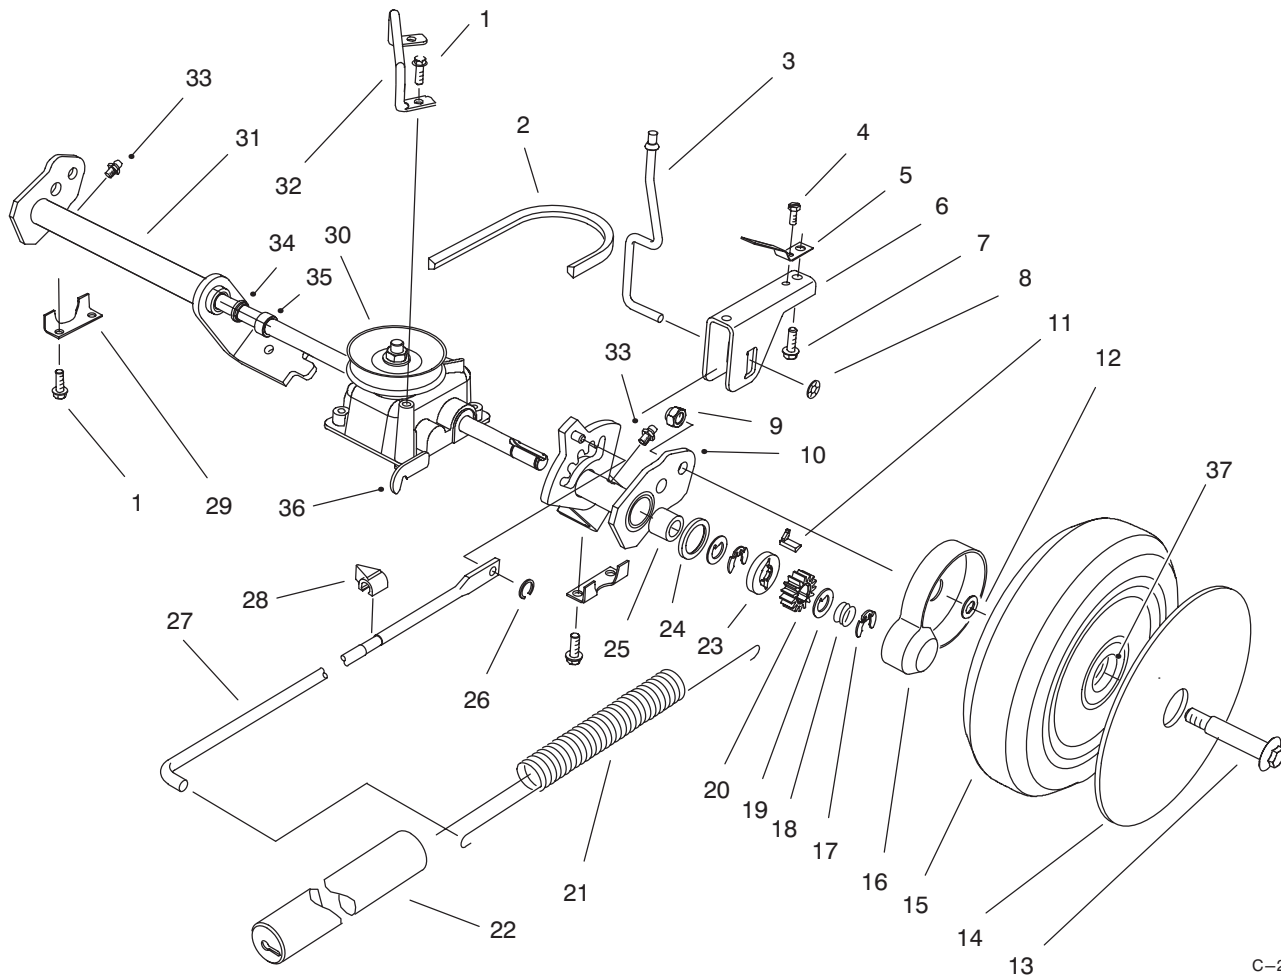


C-2013

REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-4	Screw - Tapping	6
2	71-9450	V-Belt	1
3	71-7840	Rod - Trigger	1
4	32144-31	Screw - Tapping	1
5	71-8060	Spring - Trigger Ret.	2
6	71-8080	Saddle - H.O.C.	1
7	63-8590	Screw	2
8	32112-13	Nut - Push	1
9	3296-5	Nut - Lock	2
10	92-9677	Arm - Pivot L.H. (Incl. Ref. #25, & 33-35)	1
11	66-6050	Key - Rocking L.H.	1
*	66-6040	Key - Rocking R.H.	1
12	74-1671	Spacer - Wheel	2
13	27-6230	Bolt - Wheel	2
14	92-7663	Cover - Wheel	1
15	14-9959	Wheel & Tire Assembly 8"	2
16	74-1660	Cover - Wheel	2
17	65-2720	Ring - Retaining	4
18	65-4720	Spring - Compression	2

Ref. No.	Part No.	Description	No. Used
19	65-4740	Washer - Thrust Keyed	4
20	65-4750	Gear - Pinion	2
21	71-7740	Spring - Counterbalance	1
22	71-8450	Cover - Spring	1
23	65-4760	Washer	2
24	65-4710	Ring - Friction	2
25	48-2060	Bearing - Roller	2
26	32151-93	Ring - Grip	1
27	71-7970	Rod - Link	1
28	71-7980	Indicator - H.O.C.	1
29	71-7770	Plate - Securing Rear	2
30	71-9600	Gear Case Assembly	1
31	92-9680	Arm - Pivot R.H. (Incl. Ref. #25, & 33-35)	1
32	95-2740	Retainer - Belt	1
33	302-26	Fitting - Grease	2
34	47-6730	Seal - Oil	2
35	47-2890	Bushing	2
36	71-9630	Bracket - Traction	1
37	27-6250	Bushing	2

*Not Illustrated

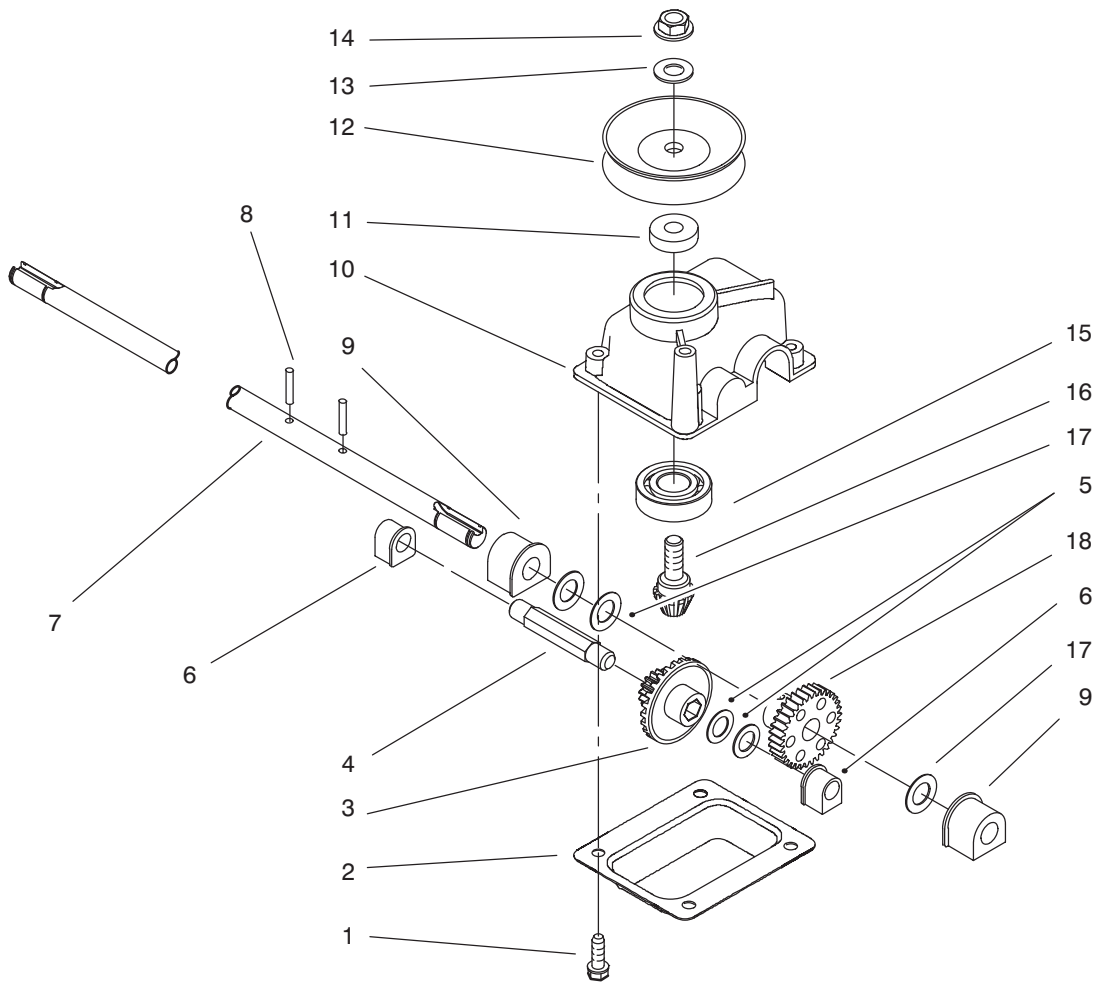


C-1292a

GEAR CASE ASSEMBLY #71-9600

Ref. No.	Part No.	Description	No. Used
1	49-2040	Screw - Taptite	4
2	614668	Cover - Gear Case	1
3	55-3760	Pinion - 15 Tooth	1
4	614696	Shaft - Intermediate	1
5	36-4791	Washer	2
6	60-8750	Bushing	2
7	71-9620	Shaft - Output	1
8	32121-114	Pin - Groove	2
9	60-8850	Bushing - Output	2
10	614578	Cover - Gearcase	1

Ref. No.	Part No.	Description	No. Used
11	62-6660	Spacer	1
12	71-9610	Pulley - Half	2
13	3256-24	Washer	1
14	3296-5	Nut	1
15	38-7820	Bearing - Ball	1
16	60-8890	Gear - Bevel Pinion	1
17	36-4780	Washer - Thrust	3
18	614596	Gear 34 Tooth	1
*	71-9600	Gear Case Ass'y Complete	1

*Not Illustrated

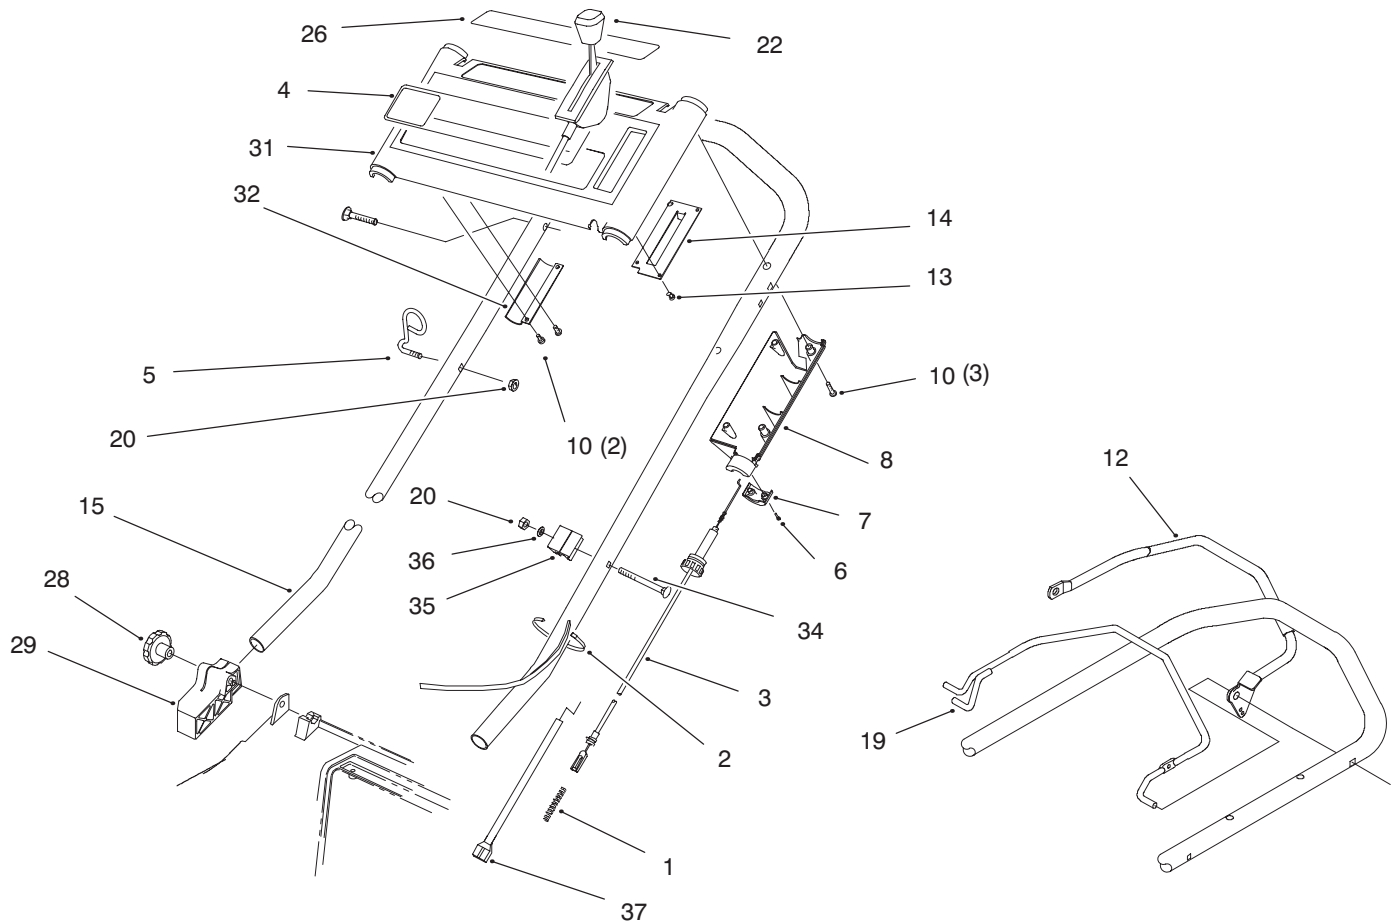


C-2680

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-8310	Spring – Compression	1
2	3290-378	Tie – Cable	1
3	95-9649	Cable – Traction	1
4	92-7865	Decal – Panel SP	1
5	95-4457	Guide – Rope	1
6	32144-99	Screw – Phillips Pan Hd.	2
7	71-7630	Cap – Throttle Lower	1
8	93-0339	Cover – Throttle Lower	1
10	32144-97	Screw – Phillips Pan Hd.	5
12	95-4450	Bail – Traction	1
13	32144-98	Screw – Phillips Pan Hd.	4
14	71-8040	Plate – Throttle	1
15	94-4367	Handle SP	1
19	95-4454	Bail – Brake	1

Ref. No.	Part No.	Description	No. Used
20	3296-73	Nut – Lock, Insert	2
22	93-1117	Control – Throttle	1
26	94-6026	Decal – Instruction	1
28	19-4050	Knob	2
29	71-8100	Mount – Handle R.H.	1
*	71-8090	Mount – Handle L.H.	1
31	17-4319	Panel – Control (Incl. Ref. # 26)	1
32	71-8130	Bracket – Control	1
34	95-4453	Screw – Handle	1
35	92-7729	Support – Cable	1
36	3256-1	Washer – Flat	1
37	93-1116	Cable – Brake	1

*Not Illustrated

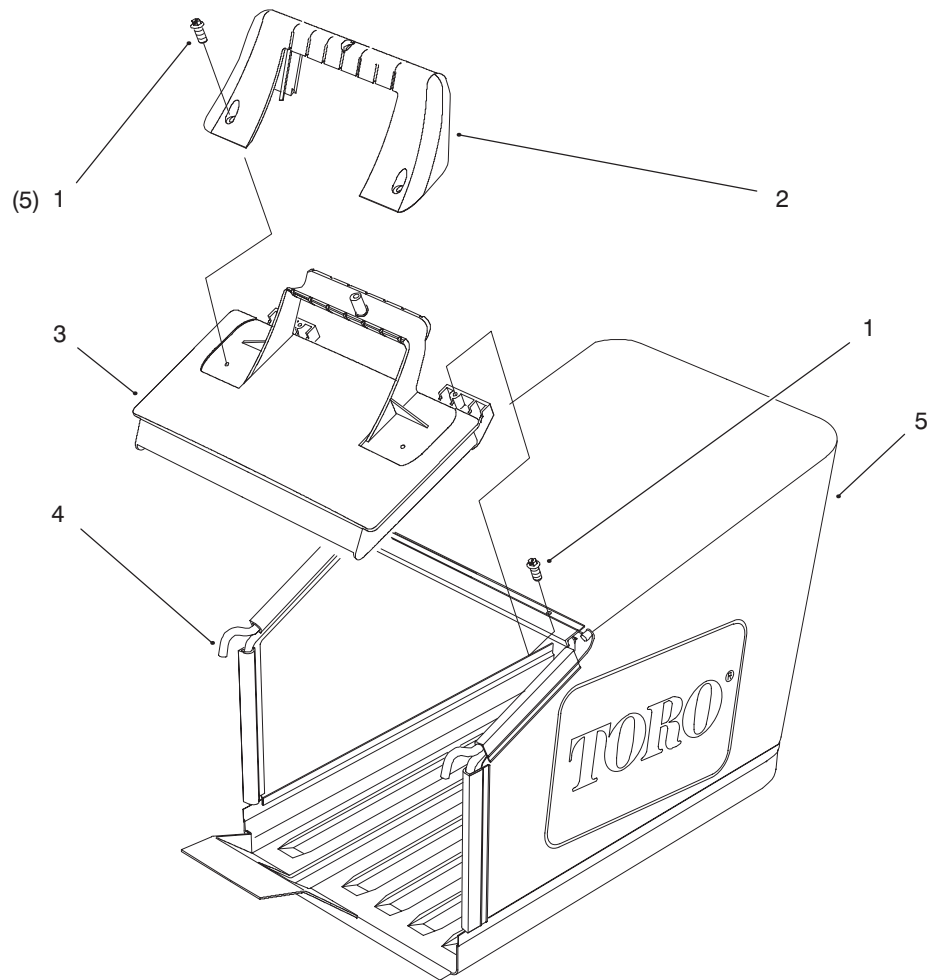


C-1509

GRASS BAG ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-111	Screw – Thread Forming	5
2	71-9480	Handle – Door	1
3	71-9470	Door – Bag	1

Ref. No.	Part No.	Description	No. Used
4	71-9900	Frame – Bag	1
5	71-9460	Bag – Grass	1

Obtain engine parts from Briggs & Stratton

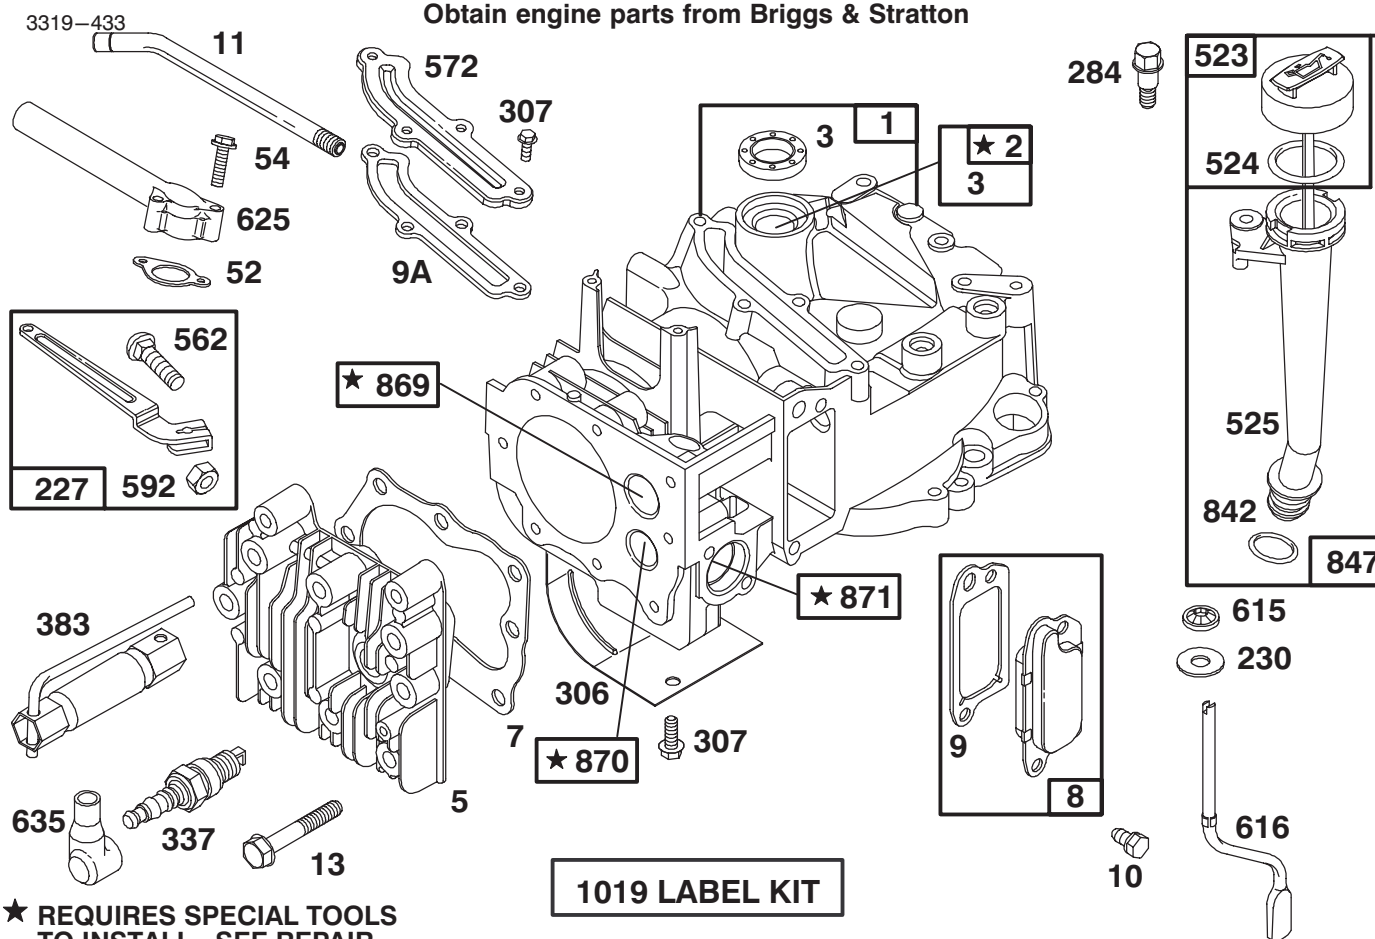


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0667-01

Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1
2	293708	Bushing — Cylinder	1
★3	299819	Seal — Oil	1
5	214349	Head — Cylinder	1
★7	272916	Gasket — Cylinder Head	1
8	495786	Breather — Valve Chamber	1
★9	272481	Gasket — Breather	1
★9A	272238	Gasket — Baffle Plate	1
10	94650	Screw — Breather Mtg.	1
11	231933	Tube — Breather	1
13	94547	Screw — Cylinder Head	1
★52	272199	Gasket — Intake Elbow	1
54	94526	Screw — Intake Elbow Mtg.	1
227	492349	Lever Assembly — Gov.	1
230	67072	Washer — Gov. Crank	1
284	94511	Screw — Hex. Head	1
306	224324	Shield — Cylinder	1
307	94515	Screw — Hex. Head	1
337	802592	Plug — Spark	1

Ref. No.	Part No.	Description	No. Used
383	89838	Wrench — Spark Plug	1
523	495264	Cap With Dipstick — Oil Filler	1
★524	280393	Seal — Filler Tube	1
525	495265	Tube — Oil Filler	1
562	94852	Bolt — Carriage	1
572	224328	Baffle — Cylinder	1
592	231082	Nut — Hex.	1
615	94474	Fastener	1
616	262578	Crank — Governor	1
625	497465	Tube — Fuel Intake	1
635	66538	Elbow — Spark Plug	1
★842	280966	Seal — O-Ring	1
847	495263	Oil Fill Tube Assy.	1
869	213512	Seat — Intake Valve	1
870	213513	Seat — Exhaust Valve	1
871	262001	Guide — Exhaust Valve	1
1019	494256	Note: 63709 Guide — Intake Valve Label Kit	1

★ Included in Gasket Set—Part No. 496316.

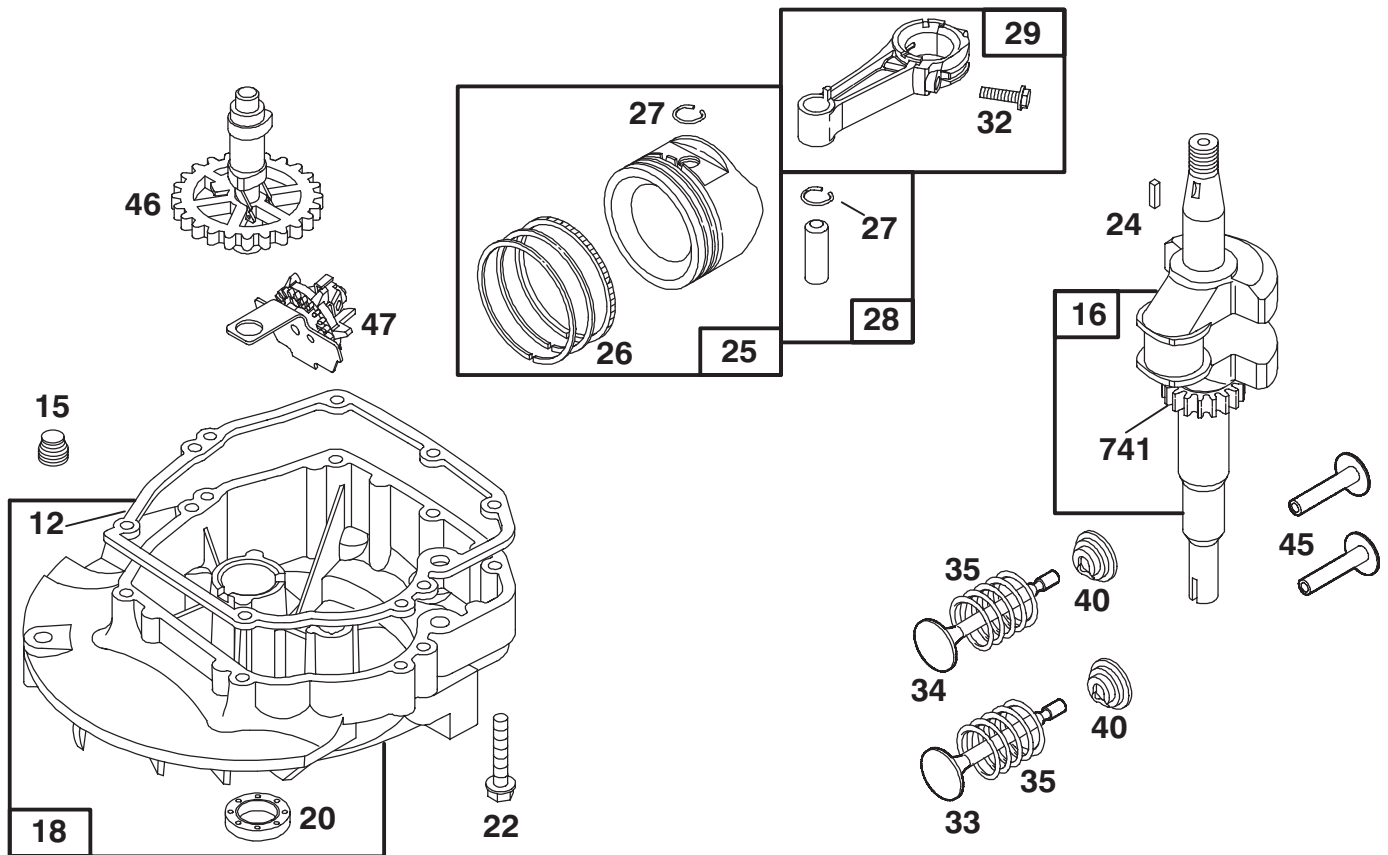


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0667—01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
★12	272198	Gasket — Crankcase	1	27	26026	Lock — Piston Pin	1
15	94720	Plug — Oil Drain	1	28	298909	Pin — Piston (Standard)	1
16	494546	Crankshaft			298908	Pin — Piston (.005" O.S.)	1
		Note: Order 94388 For Timing Gear Key.		29	490566	Rod Assembly — Connecting	1
18	493279	Sump — Engine	1			Note: For Connecting Rod With .020" Undersize Crankpin Bearing — Order No. 490743.	
★20	399781	Seal — Oil	1	32	94699	Screw — Connecting Rod	1
22	94220	Screw — Hex. Head	1	33	262651	Valve — Exhaust	1
		Note: 94612 Screw — Hex. Head (One (1) Used in Hole Nearest Breather)	1	34	262652	Valve — Intake	1
24	222698	Key — Flywheel	1	35	262224	Spring — Valve	1
25	493262	Piston Assy. (Standard)	1	40	93312	Retainer — Valve Spring	1
	493385	Piston Assy. (.010" O.S.)	1	45	262204	Tappet — Valve	1
	493386	Piston Assy. (.020" O.S.)	1	46	492830	Gear — Cam	1
	493387	Piston Assy. (.030" O.S.)	1	47	493737	Slinger — Oil	1
26	493261	Ring Set (Standard)	1	741	262598	Gear — Timing	1
	493388	Ring Set (.010" O.S.)	1				
	493389	Ring Set (.020" O.S.)	1				
	493390	Ring Set (.030" O.S.)	1				

★ Included in Gasket Set—Part No. 496316.

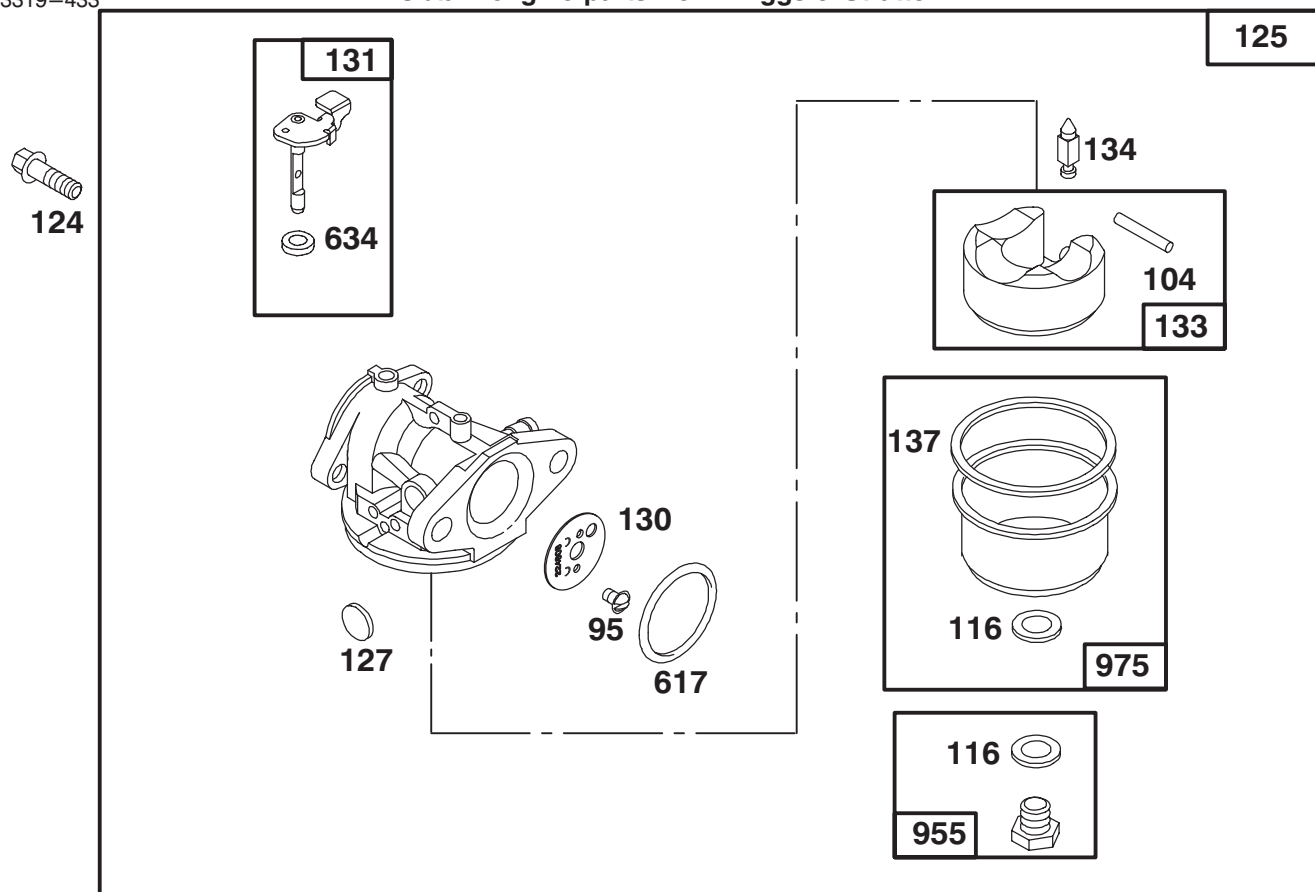

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 12F802-0667-01

Ref. No.	Part No.	Description	No. Used
95	94098	Screw—Throttle Valve Mtg.	1
●104	231371	Pin — Float Hinge	1
●◆116		Gasket—Sealing (Sold in Kit Only)	1
124	94525	Screw — Carburetor Mtg.	1
125	497314	Carburetor	1
●127		Plug — Welch (Sold in Kit Only)	1
130	224908	Valve — Throttle	1
131	493267	Shaft — Throttle	1
133	398187	Float Assy. — Carburetor	1
●134	398188	Valve — Inlet (Includes Seat)	1

Ref. No.	Part No.	Description	No. Used
●◆137		Gasket — Bowl (Sold in Kit Only)	1
●◆617	270344	Seal — Fuel Intake Tube	1
●◆634		Washer—Shaft (Sold in Kit Only)	1
955	497315	Screw — Bowl Mtg. (Std.) Note: 496495 Screw — Bowl Mtg. (High Altitude)	1
975	493640	Bowl Assy. — Carburetor	1

● Included in Carburetor Kit—Part No. 493762.

◆ Included in Carburetor Gasket Set—Part No. 490937.

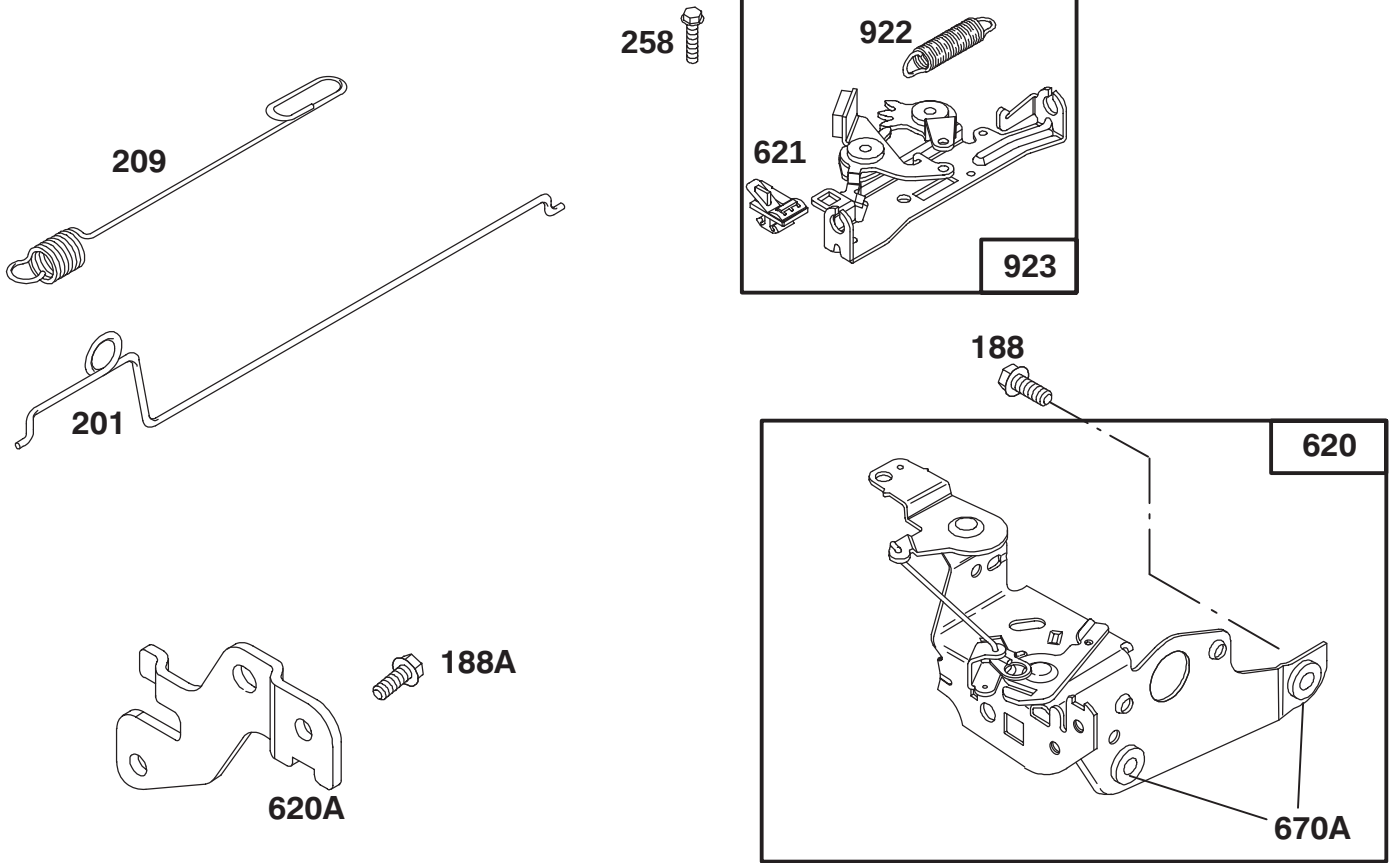


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0667–01

Ref. No.	Part No.	Description	No. Used
188	94644	Screw – Hex. Head	1
188A	94602	Screw – Hex. Head	1
201	262579	Link – Governor	1
209	263046	Spring – Governor	1
258	94512	Screw–Hex. Head	1
620	497203	Bracket – Carburetor	1

Ref. No.	Part No.	Description	No. Used
620A	225152	Bracket – Control	1
621	396847	Switch – Stop	1
670A	493823	Spacer – Bracket	1
922	262640	Spring–Brake	1
923	493442	Brake Assembly	1

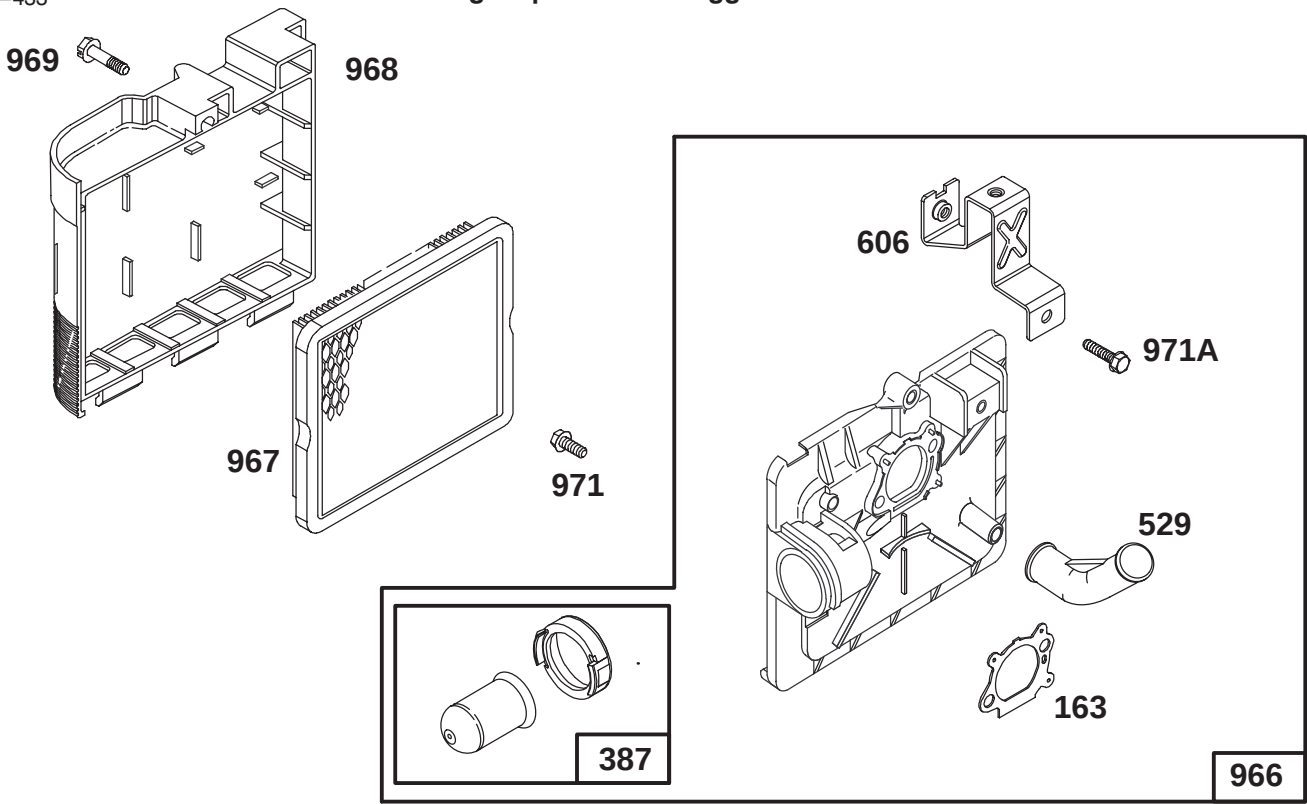


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0667-01

Ref. No.	Part No.	Description	No. Used
163	272653	Gasket — Air Cleaner	1
387	496115	Primer—Carburetor	1
529	281299	Grommet — Breather	1
606	224815	Strap — Bracket	1
966	496116	Base — Air Cleaner	1

Ref. No.	Part No.	Description	No. Used
967	491588	Filter — Air	1
968	281340	Cover — Air Cleaner	1
969	94120	Screw — Cover Mtg.	1
971	94121	Screw — Air Cleaner	1
971A	94749	Screw — Hex. Head	1

★ Included in Gasket Set—Part No. 496316.

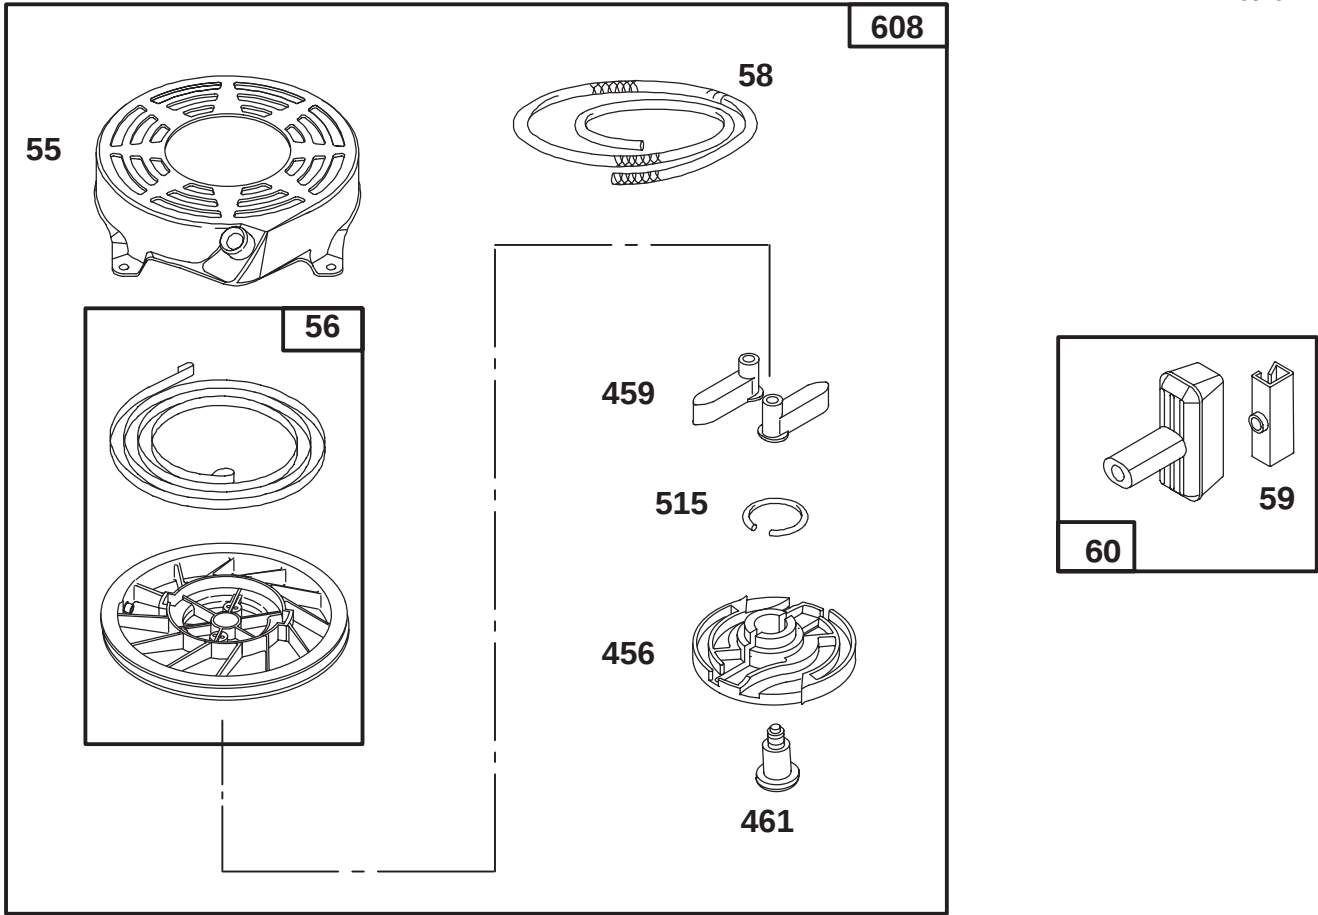


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0667—01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
55	497440	Housing — Rewind Starter	1	459	281505	Pawl — Starter	1
56	498144	Pulley — Rewind Starter	1	461	94943	Pin — Starter	1
58	280399	Rope — Rewind Starter (Cut to Required Length)	1	515	263073	Spring — Torsion	1
59	224467	Insert — Starter Grip	1	608	497680	Starter Asm. — Rewind	1
60	493926	Handle — Rewind Starter	1			Includes:	
456	281503	Retainer — Rewind Starter	1			94128 Screw — Hex. Hd.	1
						92987 Nut — Hex	1

Obtain engine parts from Briggs & Stratton

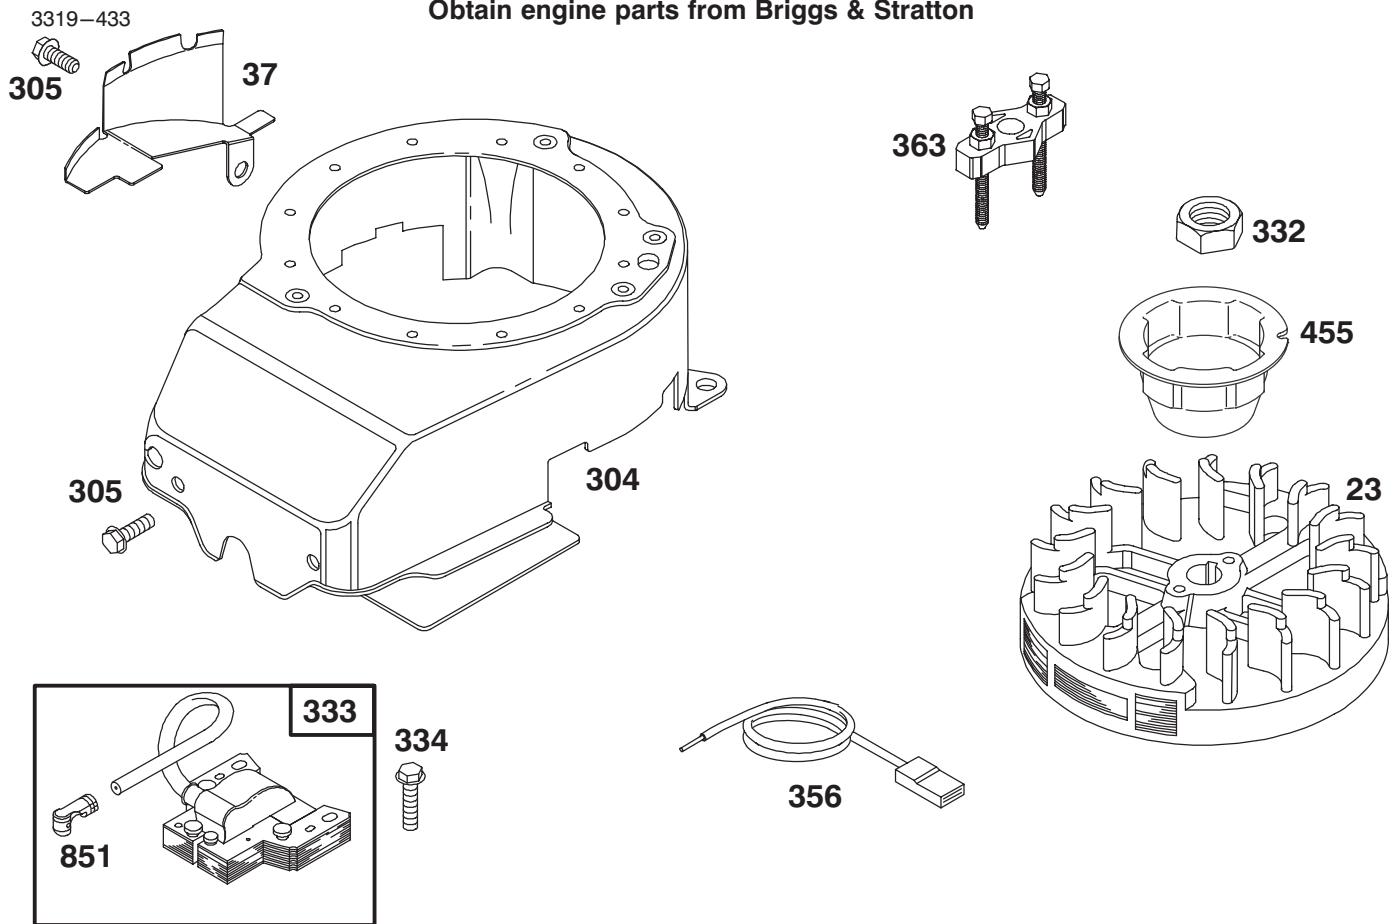


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0667-01

Ref. No.	Part No.	Description	No. Used
23	492177	Flywheel	1
37	224511	Guard - Flywheel	1
304	493293	Housing - Blower	1
305	94744	Screw - Sem	1
332	92284	Nut - Flywheel	1
333	802574	Armature - Magneto	1

Ref. No.	Part No.	Description	No. Used
334	94731	Screw - Sem	1
356	398808	Wire - Ground	1
363	19069	Flywheel Puller	1
455	225121	Cup - Starter	1
851	493880	Terminal - Ignition Cable	1



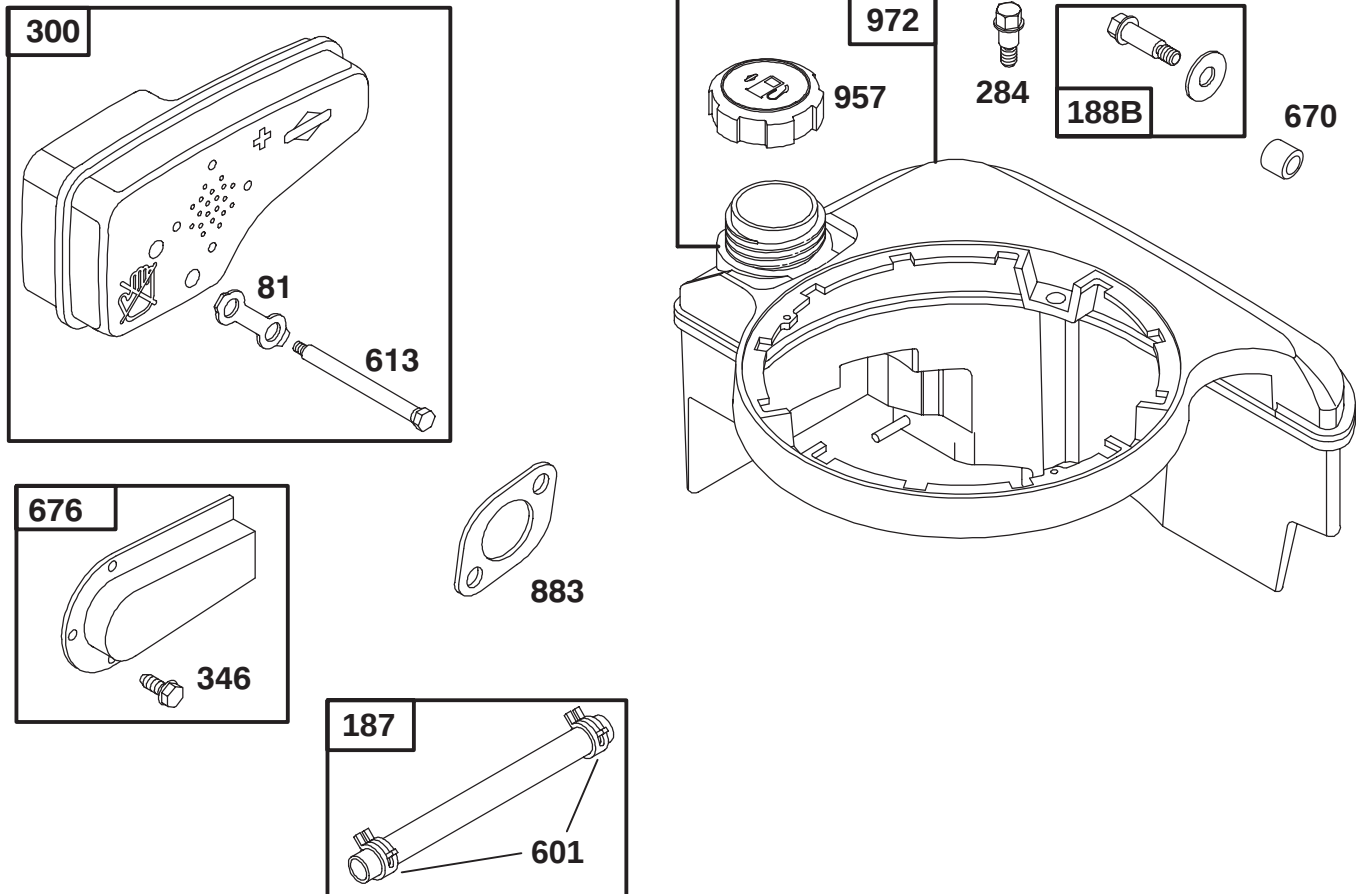


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0667-01

Ref. No.	Part No.	Description	No. Used
81	223664	Lock – Muffler Screw	1
187	492790	Hose – Fuel	1
188	398540	Screw – Tank Mounting	1
284	94511	Screw – Shoulder	1
300	496106	Muffler – Exhaust	1
346	93705	Screw – Hex. Head	1
601	93053	Clamp – Hose	1

Ref. No.	Part No.	Description	No. Used
613	94231	Screw – Shoulder	1
670	280512	Spacer – Fuel Tank	1
676	493871	Deflector – Muffler	1
★883	272253	Gasket – Exhaust	1
957	397974	Cap Assy. – Fuel	1
972	495224	Tank Assembly – Fuel	1

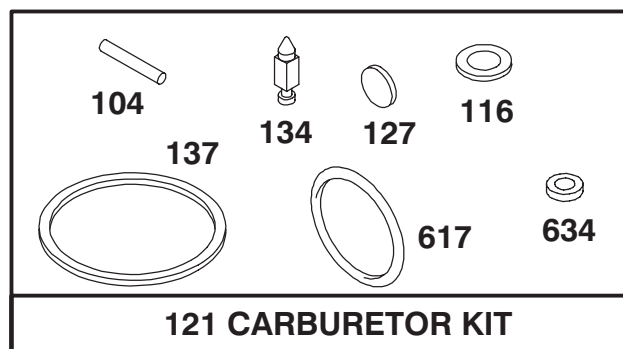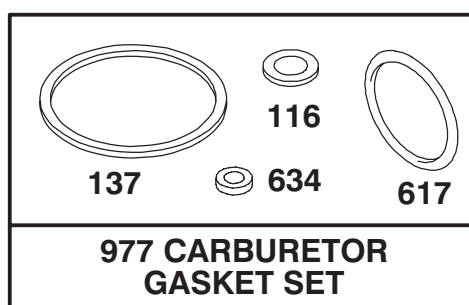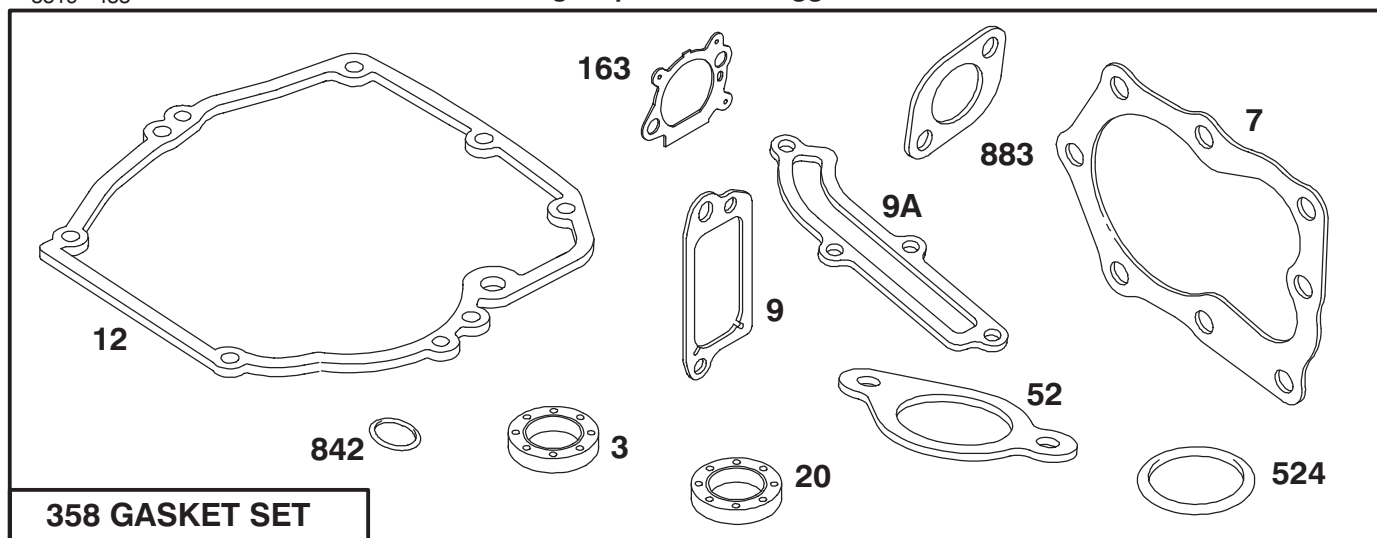

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0667-01

Ref. No.	Part No.	Description	No. Used
★3	299819	Seal – Oil	1
★7	272916	Gasket – Cylinder Hd.	1
★9	272481	Gasket – Breather	1
★9A	272238	Gasket – Baffle Plate	1
★12	272198	Gasket – Crankcase	1
★20	399781	Seal – Oil	1
★52	272199	Gasket – Intake Elbow	1
●104	231371	Pin – Float Hinge	1
●◆116		Gasket – Sealing (Sold in Kit Only)	1
121	493762	Carburetor Kit	1
●127		Plug – Welch (Sold in Kit Only)	1

Ref. No.	Part No.	Description	No. Used
●134	398188	Valve – Inlet (Includes Seat)	1
●◆137		Gasket – Bowl (Sold in Kit Only)	1
★163	272653	Gasket – Air Cleaner	1
358	497316	Gasket Set	1
★524	280393	Seal – Filler Tube	1
●◆617	270344	Seal – Fuel Intake Tube	1
●◆634		Washer – Shaft (Sold in Kit Only)	1
★842	280966	Seal – O-Ring	1
★883	272253	Gasket – Exhaust	1
977	490937	Gasket Set – Carburetor	1

● Included in Carburetor Kit—Part No. 493762.

◆ Included in Carburetor Gasket Set—Part No. 490937.

★ Included in Gasket Set—Part No. 496316.

TORO PART NUMBER INDEX

3319—433

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
614578	Cover — Gearcase	5 10 1	71—8580	Spacer — Door	2 9 2
614596	Gear 34 Tooth	5 18 1	71—8830	Retainer — Shaft Assembly	2 2 2
614668	Cover — Gear Case	5 2 1	71—8920	Kicker — Front, Right	2 10 1
614696	Shaft — Intermediate	5 4 1	71—9230	Kicker — Right, Rear	2 21 1
14—9959	Wheel & Tire Assembly 8	4 15 2	71—9250	Kicker — Rear, Left	2 34 1
17—1569	Discharge Door Assembly	2 31 1	71—9260	Blade — 48cm Recycler	3 5 1
17—4319	Panel — Control	6 31 1	71—9440	Kicker — Front, Left	2 35 1
19—4050	Knob	6 28 2	71—9450	V—Belt	4 2 1
26—0672	Bolt — Blade	3 8 1	71—9460	Bag — Grass	7 5 1
27—2630	Bolt — Wheel	2 26 2	71—9470	Door — Bag	7 3 1
27—6230	Bolt — Wheel	4 13 2	71—9480	Handle — Door	7 2 1
27—6250	Bushing	4 37 2	71—9600	Gear Case Ass'y Complete	5 * 1
27—6250	Bushing	2 41 2	71—9600	Gear Case Assembly	4 30 1
36—4780	Washer — Thrust	5 17 3	71—9610	Pulley — Half	5 12 2
36—4791	Washer	5 5 2	71—9620	Shaft — Output	5 7 1
38—7820	Bearing — Ball	5 15 1	71—9630	Bracket — Traction	4 36 1
40—1940	Washer	2 28 2	71—9840	Spring — Door	2 11 2
46—1113	Wheel & Tire Assembly	2 27 2	71—9900	Frame — Bag	7 4 1
46—6290	O—Ring	2 39 1	71—9990	Plug — Recycler	2 42 1
46—6811	Screw — Hex Washer Head	2 40 2	74—1660	Cover — Wheel	4 16 2
47—2890	Bushing	4 35 2	74—1671	Spacer — Wheel	4 12 2
47—6730	Seal — Oil	4 34 2	80—0510	Stiffener — Blade	3 6 1
48—2060	Bearing — Roller	4 25 2	82—8550	Shield — Muffler	1 7 1
49—2040	Screw — Taptite	5 1 4	92—2289	Plate — Logo Toro	1 12 1
55—3760	Pinion — 15 Tooth	5 3 1	92—7663	Cover — Wheel	4 14 1
60—8750	Bushing	5 6 2	92—7729	Support — Cable	6 35 1
60—8850	Bushing — Output	5 9 2	92—7863	Decal — Deck	2 25 1
60—8890	Gear — Bevel Pinion	5 16 1	92—7865	Decal — Panel SP	6 4 1
62—6660	Spacer	5 11 1	92—9677	Arm — Pivot L.H.	4 10 1
62—7550	Pulley — Driver	3 1 1	92—9680	Arm — Pivot R.H.	4 31 1
63—8590	Screw	4 7 2	93—0243	Shroud — QT Wedge	1 4 1
65—2720	Ring — Retaining	4 17 4	93—0339	Cover — Throttle Lower	6 8 1
65—4710	Ring — Friction	4 24 2	93—1116	Cable — Brake	6 37 1
65—4720	Spring — Compression	4 18 2	93—1117	Control — Throttle	6 22 1
65—4740	Washer — Thrust Keyed	4 19 4	93—4105	Decal — Danger	2 36 1
65—4750	Gear — Pinion	4 20 2	93—4354	Decal — Engine	1 1 1
65—4760	Washer	4 23 2	93—8470	Screw — Clamp	1 10 1
65—5210	Screw — Thread Forming	2 16 2	94—4367	Handle SP	6 15 1
66—6040	Key — Rocking R.H.	4 * 1	94—6026	Decal — Instruction	6 26 1
66—6050	Key — Rocking L.H.	4 11 1	95—2740	Retainer — Belt	4 32 1
71—7630	Cap — Throttle Lower	6 7 1	95—2747	Fitting — Washout	2 38 1
71—7740	Spring — Counterbalance	4 21 1	95—4450	Bail — Traction	6 12 1
71—7770	Plate — Securing Rear	4 29 2	95—4453	Screw — Handle	6 34 1
71—7820	Pivot — Front	2 30 1	95—4454	Bail — Brake	6 19 1
71—7840	Rod — Trigger	4 3 1	95—4457	Guide — Rope	6 5 1
71—7860	Grip — Upper	2 15 1	95—6134	Housing Assembly	2 5 1
71—7870	Grip — Lower	2 20 1	95—7098	Hanger — Shield	2 44 2
71—7890	Guide — Belt, Rear	2 6 1	95—7097	Shield — Trailing	2 43 1
71—7900	Cap — Bolt, Hinge (LH)	2 12 1	95—9649	Cable — Traction	6 3 1
71—7910	Cap — Bolt, Hinge (RH)	2 17 1	2210—249	Clamp — Casing	1 11 1
71—7920	Cover — Belt	2 24 1	2210—316	Stop — Rope	1 3 1
71—7930	Trigger — Height of Cut	2 18 1	302—26	Fitting — Grease	4 33 2
71—7940	Retainer — Blade	3 4 1	322—29	Screw — Hex Head	2 13 2
71—7960	Guide — Engine Belt	3 2 1	3253—22	Washer — Lock	3 7 1
71—7970	Rod — Link	4 27 1	3256—1	Washer — Flat	6 36 1
71—7980	Indicator — H.O.C.	4 28 1	3256—24	Washer	5 13 1
71—7990	Ramp — Discharge	2 4 1	3284—5	Pin — Groove	2 19 1
71—8040	Plate — Throttle	6 14 1	3290—134	Screw — Hex Head	2 45 2
71—8060	Spring — Trigger Ret.	4 5 2	3290—378	Tie — Cable	6 2 1
71—8080	Saddle — H.O.C.	4 6 1	3290—378	Tie — Cable	1 5 1
71—8090	Mount — Handle L.H.	6 * 1	3296—2	Nut — Lock	2 46 2
71—8100	Mount — Handle R.H.	6 29 1	3296—5	Nut	5 14 1
71—8130	Bracket — Control	6 32 1	3296—5	Nut — Lock	4 9 2
71—8310	Spring — Compression	6 1 1	3296—5	Nut — Lock	2 29 2
71—8450	Cover — Spring	4 22 1	3296—73	Nut — Lock, Insert	6 20 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
32112-11	Nut - Push	2 3 1	32144-97	Screw - Phillips Pan Head	2 14 2
32112-13	Nut - Push	4 8 1	32144-98	Screw - Phillips Pan Hd.	6 13 4
32121-114	Pin - Groove	5 8 2	32144-99	Screw - Phillips Pan Hd.	6 6 2
32144-4	Screw - Hex Head	2 1 10	32144-102	Screw - Engine	1 8 3
32144-4	Screw - Tapping	4 1 6	32144-111	Screw - Phillips Pan Head	2 8 8
32144-4	Screw - Tapping	3 3 2	32144-111	Screw - Thread Forming	7 1 5
32144-31	Screw - Tapping	4 4 1	32144-121	Screw - Mounting	1 2 2
32144-70	Screw - Tap	2 22 1	32151-93	Ring - Grip	4 26 1
32144-73	Screw - Hex Washer Hd.	1 6 3			
32144-97	Screw - Phillips Pan Hd.	6 10 5			

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you

are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.