



53cm RECYCLER[®] /RB MOWER

Model No. 20776 – 7900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Housing Assembly	1	Engine Briggs & Stratton	
Engine Assembly	2	Model 12F802–0650–01	7–15
Rear Axle Assembly	3	Toro Part Number Index	16–18
Gear Case Assembly	4	Maintenance	19–21
Handle Assembly	5		
Bag Assembly	6	Note:	

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Side Discharge Chute Kit	Model No. 59113		
Dethatcher Kit	Model No. 59131		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFW	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSH	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form $X:Y$. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

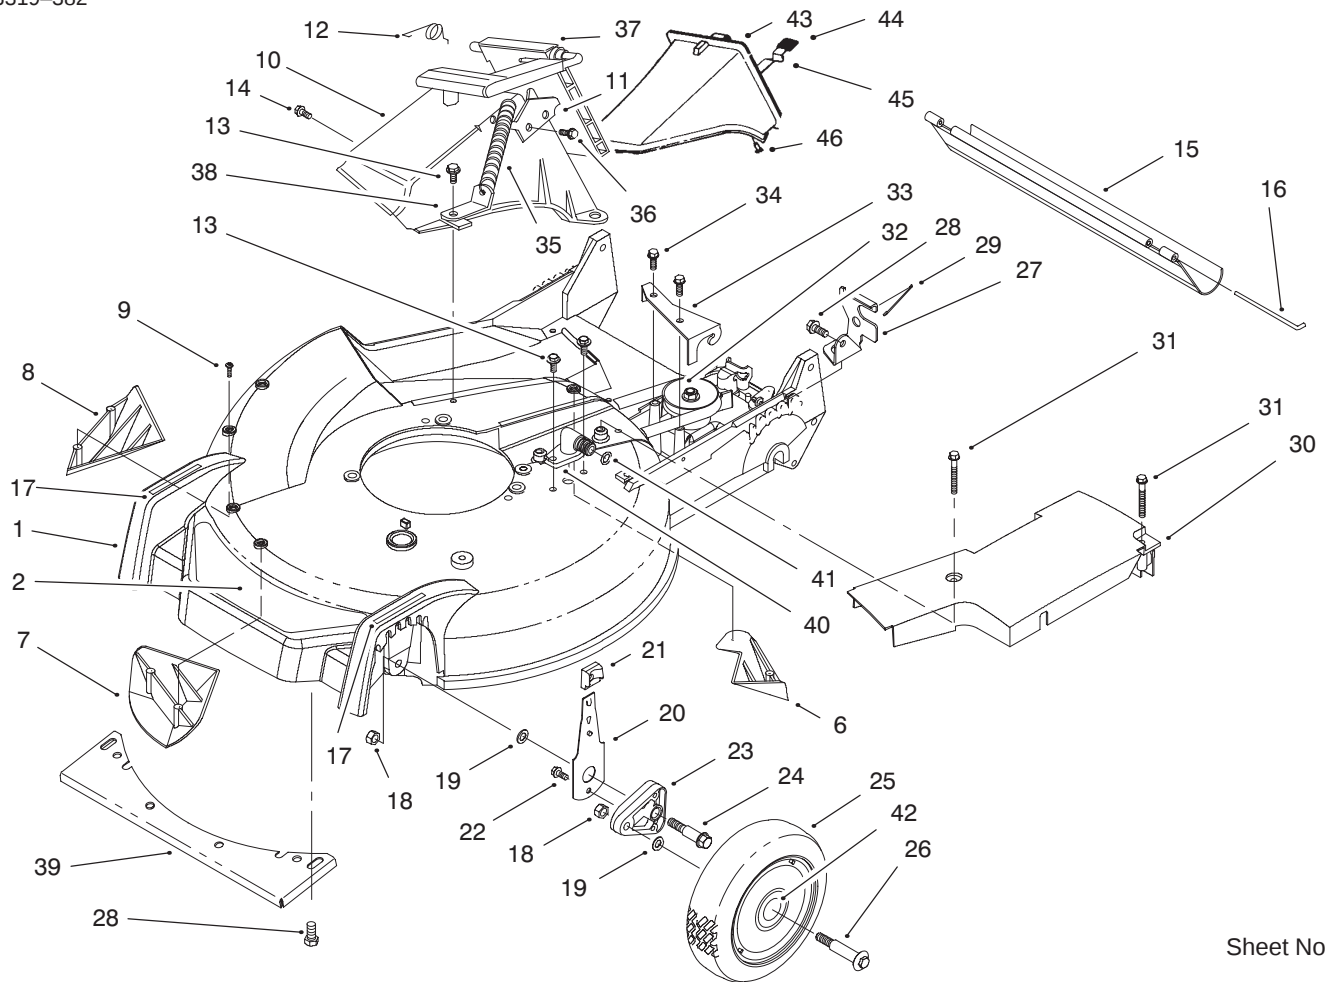


Sheet No.:2

Housing Assembly

Ref. No.	Part No.	Qty.	Description
1	95-5615	1	Housing-Rwd (Incl. Ref. #5-9, 13, 17, 28, & 39-41)
2	94-5407	1	Decal-Deck
6	92-1750	1	Plate-Kicker Rear
7	92-1720	1	Kicker-RH
8	92-1730	1	Kicker-LH
9	32144-111	6	Screw - PPH
10	82-9151	1	Tunnel-Discharge
11	93-3154	1	Plate-Latch
12	80-3770	1	Retainer-Door
13	46-6811	5	Screw-HWH
14	46-6810	1	Screw HWH
15	44-0580	1	Shield-Trailing
16	33-3208	1	Rod-Shield
17	92-7856	4	Decal-HOC
18	3296-6	4	Nut-Lock
19	40-1940	4	Washer
20	66-0541	2	ASM-Spring Arm
21	25-7740	2	Knob-Arm
22	32144-85	2	Screw-HH
23	66-0580	2	Arm-Pivot
24	66-0560	2	Screw-Shoulder
25	14-9949	2	ASM-Wheel & Tire (Incl. Ref. #42)
26	27-6232	2	Bolt-Wheel HH


Ref. No.	Part No.	Qty.	Description
27	82-5680	1	Bracket-Adjustment
28	32144-70	5	Screw-TAP
29	46-7030	1	Retainer-Cable
30	82-9910	1	Cover-Belt
31	37-7260	2	Screw-TAP
32	62-6673	1	ASM-Gearcase
33	62-4320	1	Bracket-Guide
34	49-2040	2	Screw-HH
35	76-4660	1	Spring-Extension
36	46-8090	2	Screw-Tapping
37	93-7351	1	ASM-Door
38	71-9350	1	Spring-Bracket
39	46-5400	1	Shield-Front
40	95-2747	1	Fitting-Washout
41	46-6290	1	O-Ring
42	27-6250	4	Bushing
43	77-0502	1	Plug-Discharge ASM (Incl. Ref. #44-46)
44	76-4650	1	Grip-Latch
45	76-4640	1	Latch-Discharge Plug
46	3295-35	1	Rivet-Solid

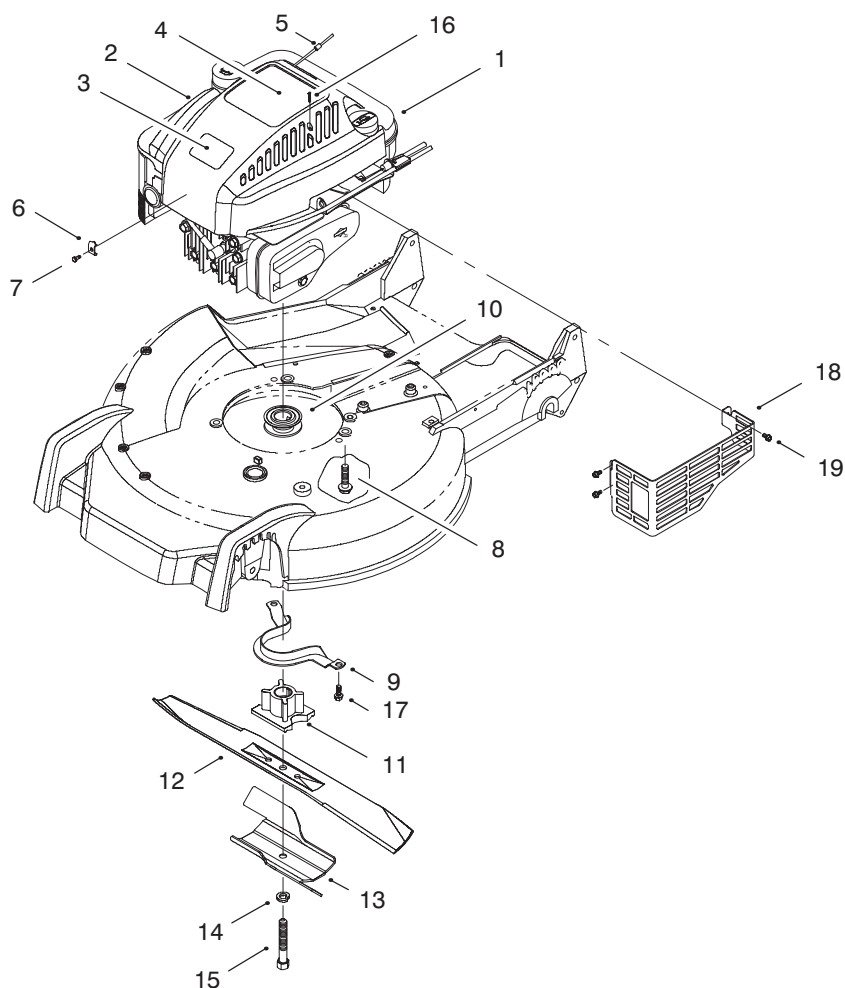

Sheet No.:3

Engine Assembly


Ref. No.	Part No.	Qty.	Description
1		1	Engine—Quantum 5.0 Hp
2	93—0243	1	Shroud—Qt Wedge
3	92—2289	1	Plate—Logo
4	93—4354	1	Decal—Engine
5	2210—316	1	Rope—Stop (P/W Eng)
6	2210—249	1	Clamp—Casing (P/W Eng)
7	93—8470	1	Screw—Clamp (P/W Eng)
8	32144—102	3	Screw
9	66—0570	1	Guide—Belt
10	62—7550	1	Pulley—Driver
11	93—4107	1	Retainer—Blade
12	93—4106	1	Blade—Generation Iii
13	94—1608	1	Stiffener—Blade
14	3253—22	1	Washer—Lock
15	26—0670	1	Bolt—Blade
16	32144—121	2	Screw
17	32144—70	2	Screw—TAP
18	82—8550	1	Shield—Muffler
19	32144—73	3	Screw—HWHTF

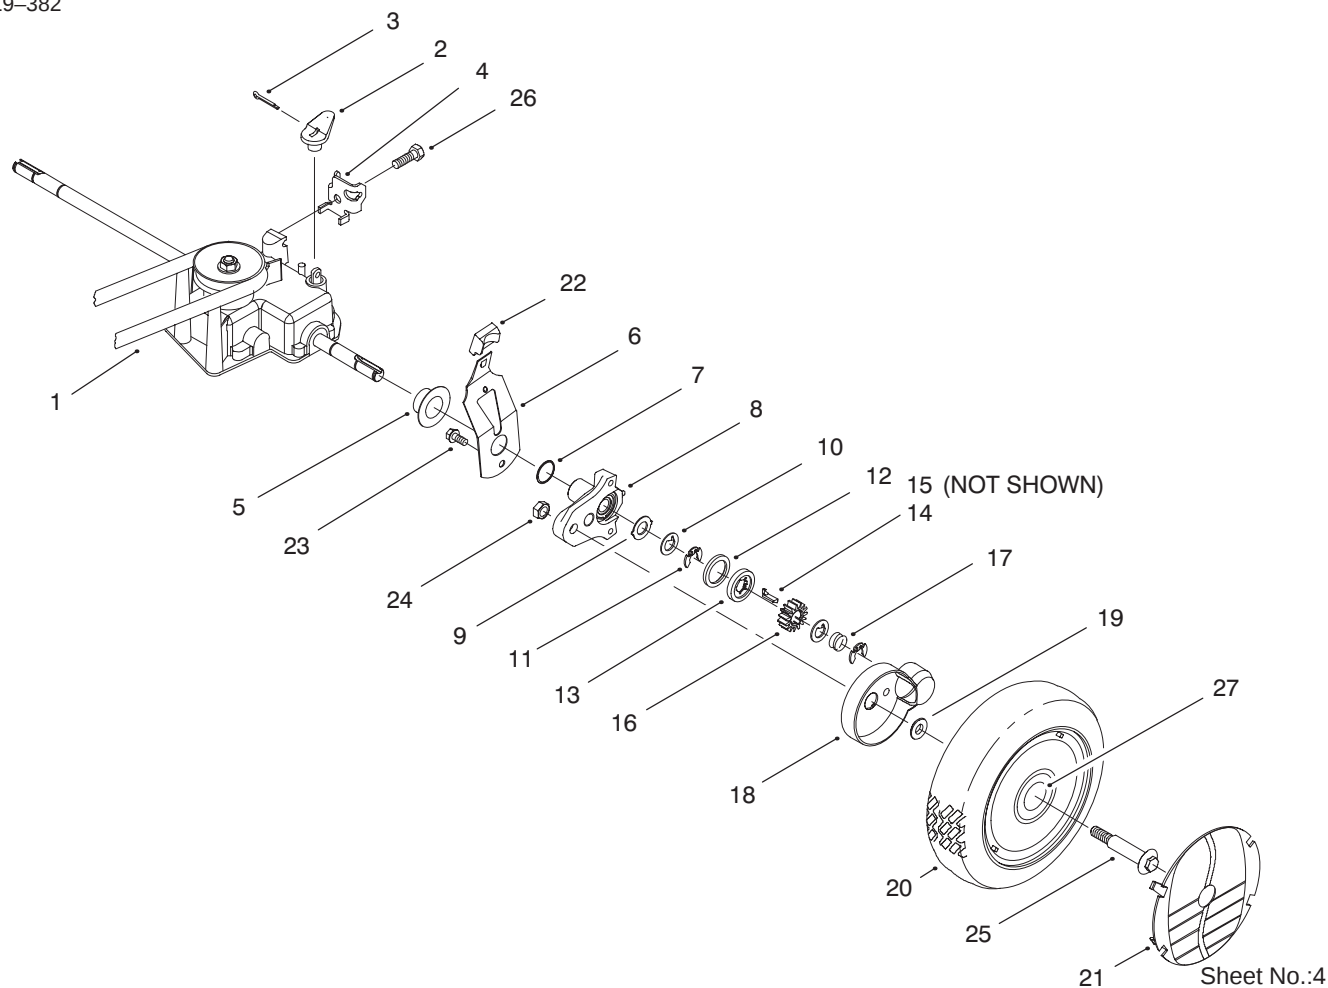

Rear Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	62-3900	1	V-Belt
2	60-8821	1	Lever-Shift
3	3272-10	1	Pin-Cotter
4	82-8780	1	Retainer-Cable
5	42-3520	2	Cap-End
6	63-8721	2	ASM-Arm
7	237-153	2	O-Ring
8	63-8701	2	ASM
9	65-4730	2	Washer-Thrust
10	65-4740	4	Washer-Thrust
11	65-2720	4	Ring-Retaining
12	65-4710	2	Ring-Friction
13	65-4760	2	Washer
14	66-6050	1	Key-Rocking
15	66-6040	1	Key-Rocking
16	65-4750	2	Gear-Pinion
17	65-4720	2	Spring-Compression
18	74-1660	2	Cover-Wheel
19	74-1671	2	Spacer-Cover
20	14-9959	2	ASM-Wheel (Incl. Ref. #27)
21	92-7663	1	Cover-Wheel
22	25-7740	2	Knob-Arm
23	32144-85	2	Screw-HH
24	3296-6	2	Nut-Lock
25	27-6232	2	Bolt-Wheel HH


Ref. No.	Part No.	Qty.	Description
26	32144-70	1	Screw-TAP
27	27-6250	4	Bushing

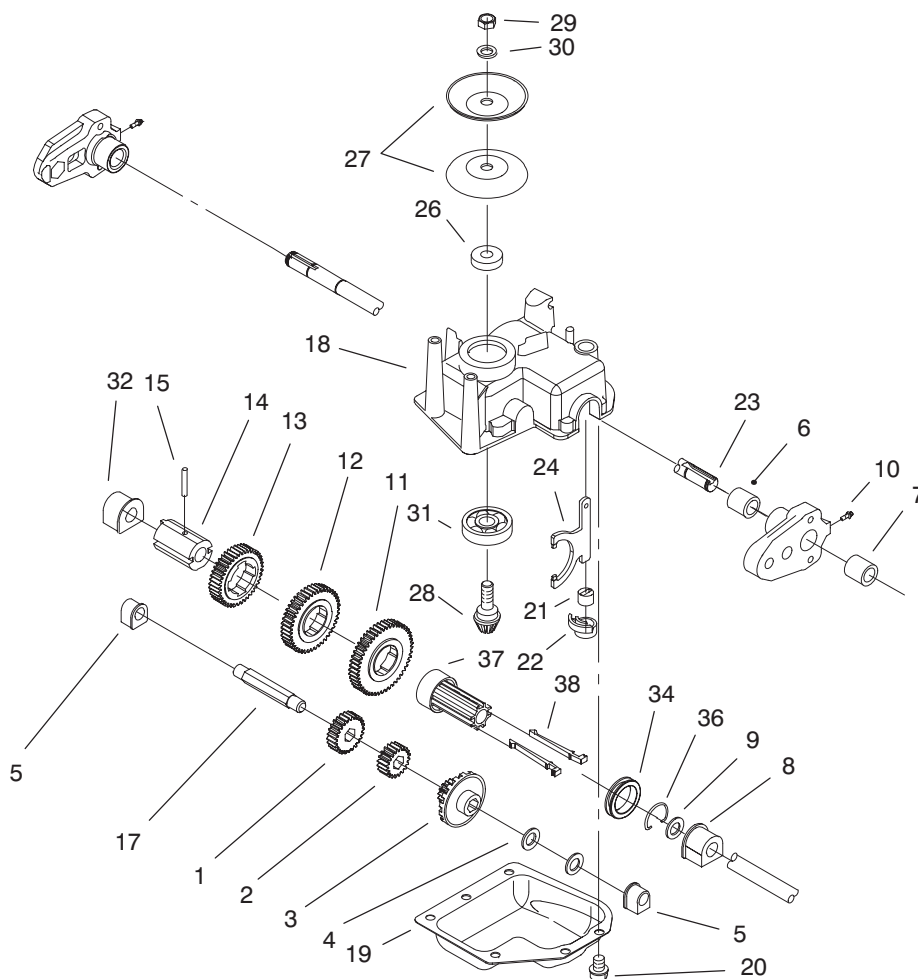

Sheet No.:1

Gear Case Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	55-3800	1	Pinion 25t 3rd Gear	32	60-8850	1	Bushing-Output
2	55-3780	1	Pinion 20t 2nd Gear	34	76-0770	1	Collar-Shift
3	55-3760	1	15 T Pinion	36	65-5250	1	Clip-Spring
4	36-4791	2	Washer-Thrust	37	76-0780	1	Sleeve-Shift Key
5	60-8750	2	Bushing	38	76-0760	2	Key-Shift
8	60-8770	1	Bushing-Output Shaft				
9	36-4780	1	Washer-Thrust				
11	55-3770	1	Gear 49t 1st Gear				
12	55-3790	1	Gear 44t 2nd Gear				
13	55-3810	1	Gear 39t 3rd Gear				
14	60-8790	1	Sleeve-Gear				
15	32121-120	1	Pin-Coil				
17	60-8800	1	Shaft-Intermediate				
18	60-8710	1	Gearcase-Upper 3 Sp				
19	60-8730	1	Cover-Gearcase				
20	49-2040	6	Screw-HH				
21	29-9570	1	Bushing-Yoke				
22	60-8810	1	Retainer-Shift-Fork				
23	65-4770	1	Shaft-Output				
24	60-8870	1	Yoke-Shift				
26	62-6660	1	Spacer-Pulley				
27	60-8840	2	Pulley-Half				
28	60-8890	1	Gear-Pinion				
29	3296-5	1	Nut-Lock				
30	3256-24	1	Washer-Flat				
31	38-7820	1	Bearing-Ball				

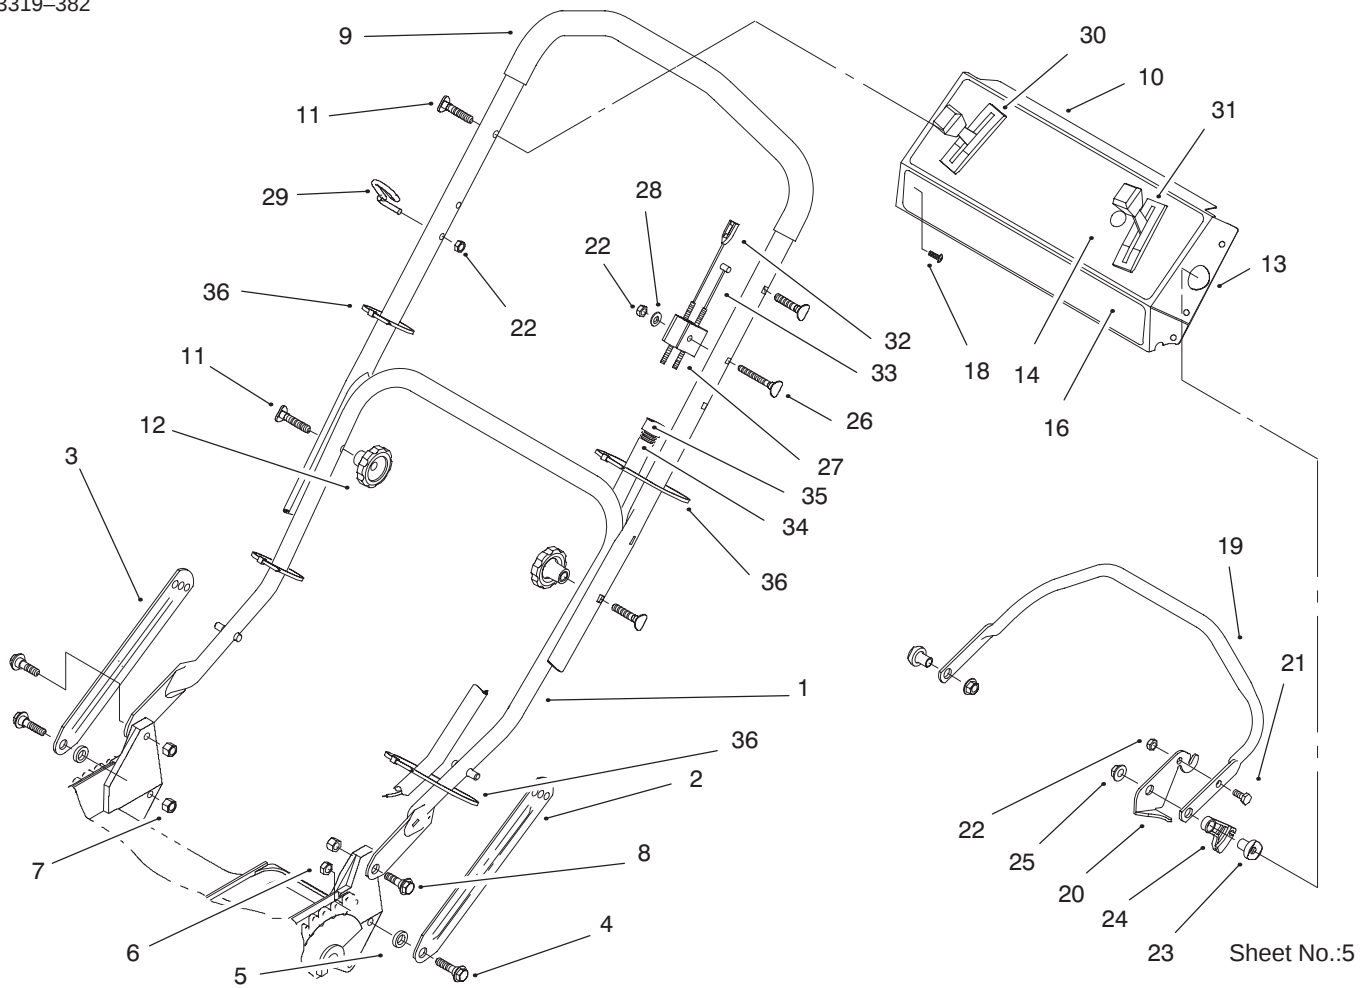

Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	43-1362	1	ASM-Handle
2	84-8361	1	Latch-Handle
3	84-8401	1	Latch-Handle
4	27-7210	2	Screw-Shoulder
5	3-3287	2	Spacer
6	3296-47	1	Nut-Lock
7	3296-72	3	Nut-Lock
8	27-7211	2	Screw-Shoulder
9	94-4922	1	ASM-Handle
10	93-6655	1	Decal-Danger
11	92-2260	4	Screw-Handle
12	19-4050	2	Knob
13	95-7078	1	Panel-Control (Incl. Ref. #10, 14, & 16)
14	95-5926	1	Decal-Instruction
16	95-7077	1	Decal-Panel
18	92-9665	5	Screw-Phil
19	52-7430	1	Bar-Control
20	66-5351	1	Lever-Control
21	321-39	1	Screw-HH
22	3296-73	3	Nut-Lock
23	49-1630	2	Spacer-Support
24	46-5520	1	Lever-Traction
25	3296-74	2	Nut-Flange
26	92-2269	1	Screw-Handle
27	46-6980	1	Support-Cable

Ref. No.	Part No.	Qty.	Description
28	3256-1	1	Washer-Flat
29	86-9671	1	Guide-Rope
30	76-2712	1	Control-Speed
31	93-4186	1	Cable-Throttle
32	93-4187	1	Cable-Brake
33	46-5481	1	Cable-Traction
34	46-6440	1	Cover-Cables
35	2412-50	4	Clip-Tubing
36	3290-378	3	Tie-Cable

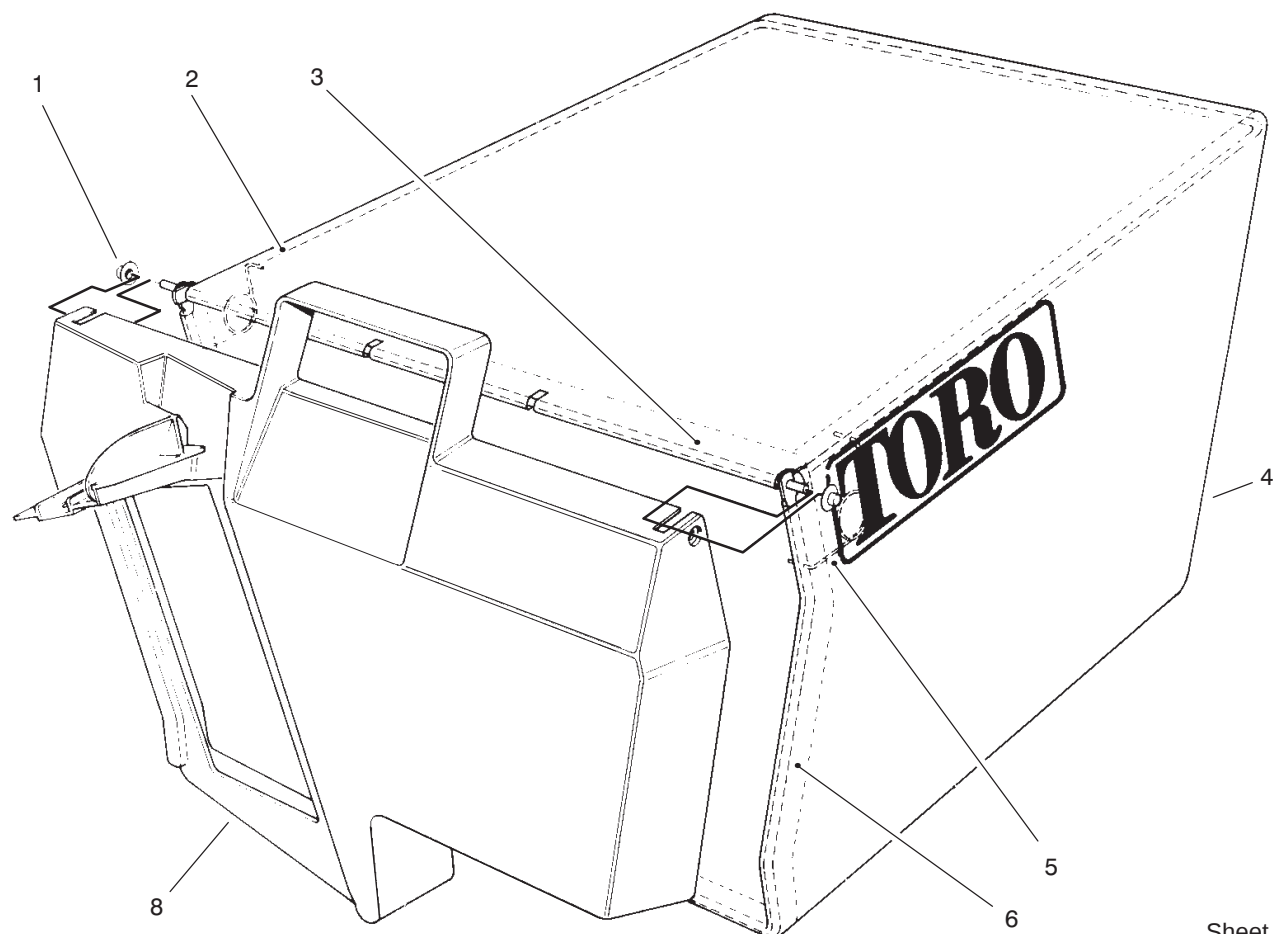


Sheet No.:6

Bag Assembly

Ref. No.	Part No.	Qty.	Description
1	3290-422	2	Nut-Push
2	42-4030	1	Bag Frame-Upper
3	33-4820	1	Hinge-Bag Door
4	8-2759	1	Bag-Grass
5	36-6910	2	Spring
6	42-4020	1	Frame-Bag
8	37-1393	1	Door-Grass Bag

Ref. No.	Part No.	Qty.	Description

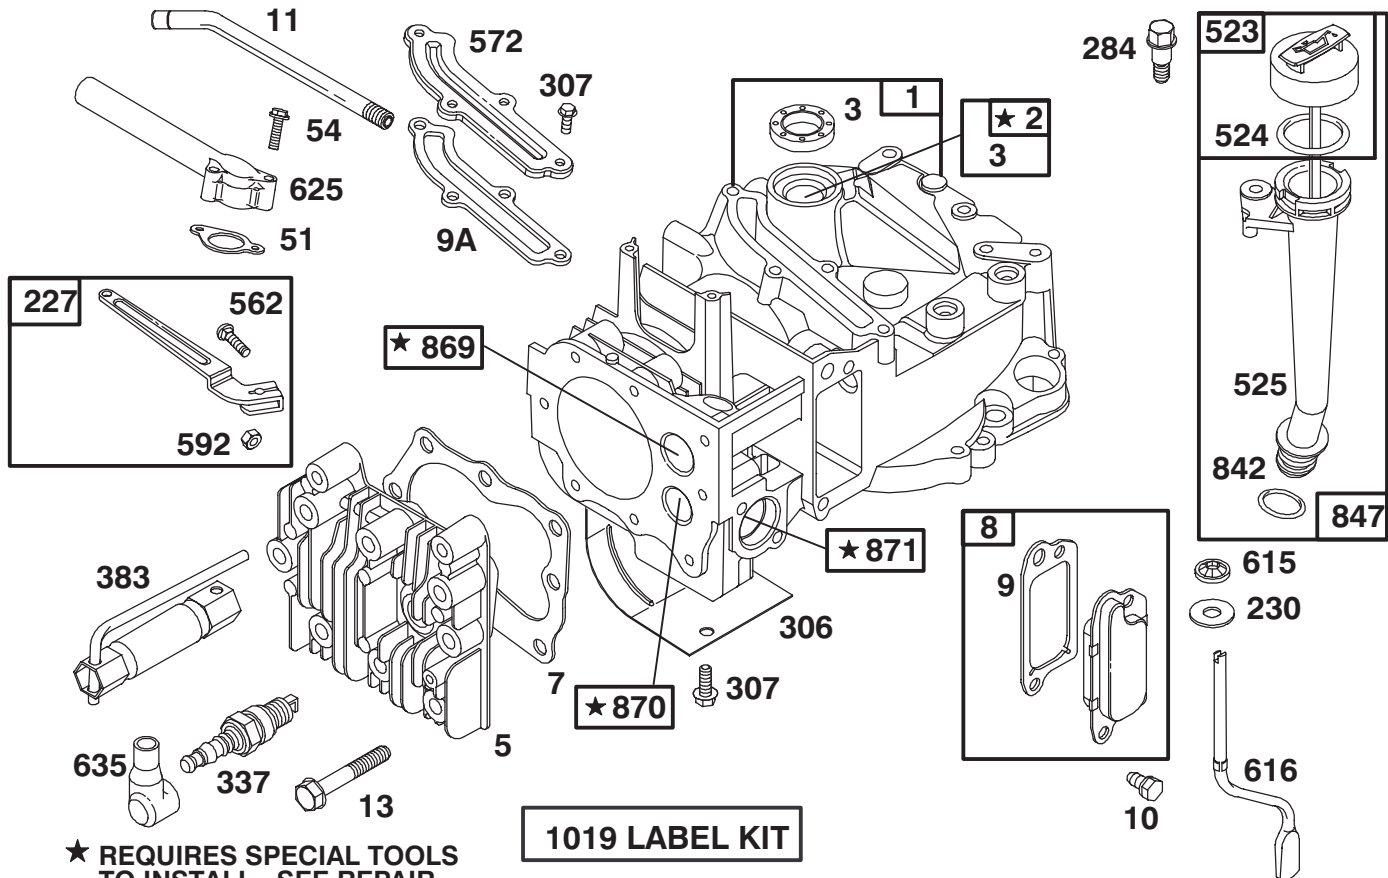


ENGINE BRIGGS & STRATTON MODEL 12F802-0650–01

Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1
2	293708	Bushing – Cylinder	1
★3	299819	Seal – Oil	1
5	214626	Head – Cylinder	1
★7	272916	Gasket – Cylinder Head	1
8	495786	Breather – Valve Chamber	1
★9	272481	Gasket – Breather	1
★9A	272238	Gasket – Baffle Plate	1
10	94650	Screw – Breather Mtg.	1
11	231933	Tube – Breather	1
13	94876	Screw – Cylinder Head	1
★51	272199	Gasket – Intake Elbow	1
54	94526	Screw – Intake Elbow Mtg.	1
227	492349	Lever Assembly – Gov.	1
230	67072	Washer – Gov. Crank	1
284	94511	Screw – Hex. Head	1
306	224324	Shield – Cylinder	1
307	94515	Screw – Hex. Head	1
337	802592	Plug – Spark	1

Ref. No.	Part No.	Description	No. Used
383	89838	Wrench – Spark Plug	1
523	495264	Cap With Dipstick – Oil Filler	1
★524	280393	Seal – Filler Tube	1
525	495265	Tube – Oil Filler	1
562	94852	Bolt – Carriage	1
572	224328	Baffle – Cylinder	1
592	231082	Nut – Hex.	1
615	94474	Fastener	1
616	263175	Crank – Governor	1
625	497465	Tube – Fuel Intake	1
635	66538	Elbow – Spark Plug	1
★842	280966	Seal – O-Ring	1
847	495263	Oil Fill Tube Assy.	1
869	213512	Seat – Intake Valve	1
870	213513	Seat – Exhaust Valve	1
871	262001	Guide – Exhaust Valve	1
1019	494256	Note: 63709 Guide – Intake Valve Label Kit	1

★ Included in Gasket Set—Part No. 497316.

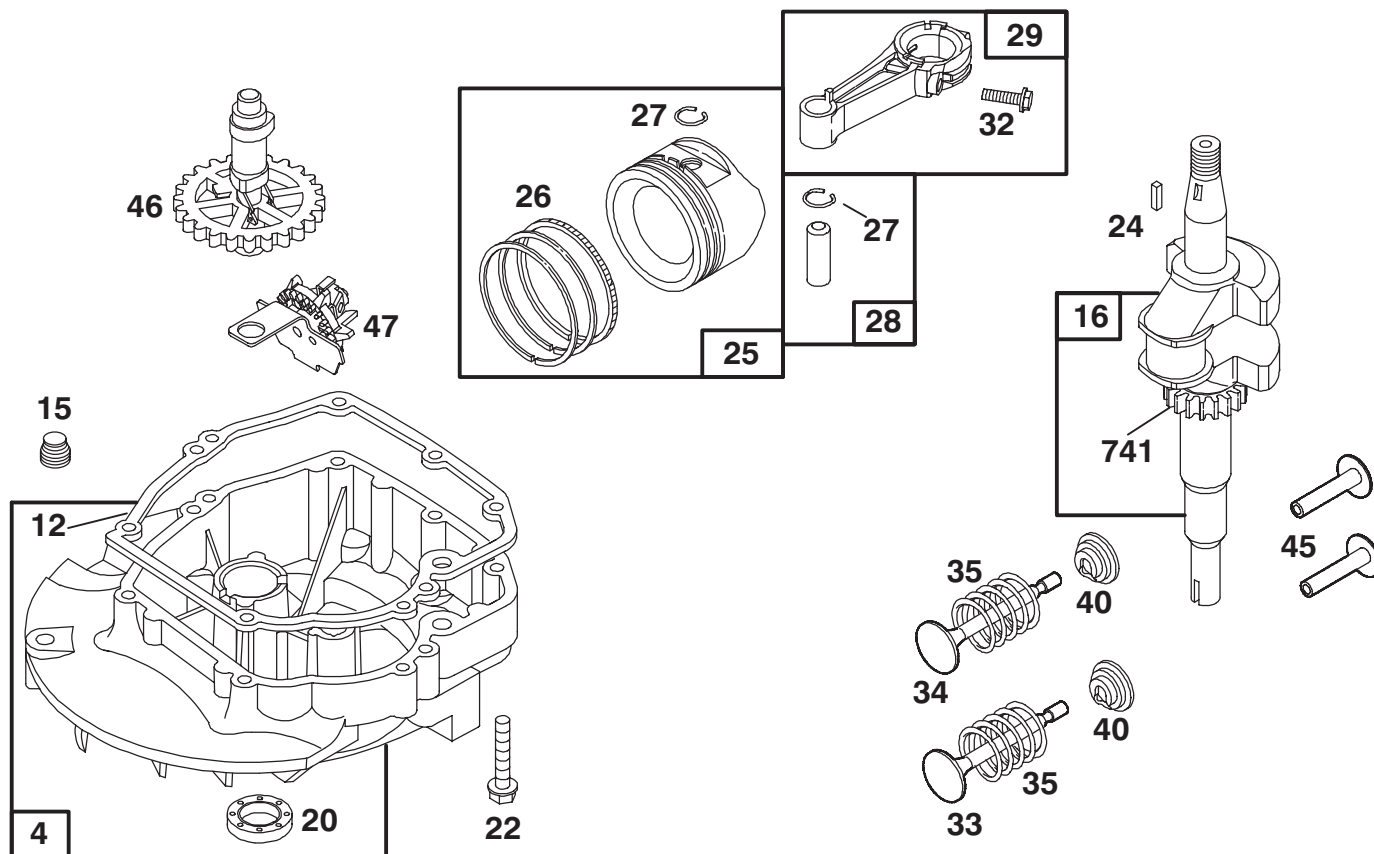


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0650—01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
4	493279	Sump — Engine	1	27	26026	Lock — Piston Pin	1
★12	272198	Gasket — Crankcase	1	28	298909	Pin — Piston (Standard)	1
15	94880	Plug — Oil Drain	1		298908	Pin — Piston (.005" O.S.)	1
16	494546	Crankshaft	1	29	490566	Rod Assembly — Connecting	1
		Note: Order 94388 For Timing Gear Key.	1			Note: For Conn. Rod With .020" Undersize Crankpin Bearing — Order No. 490743.	1
★20	399781	Seal — Oil	1	32	94699	Screw — Connecting Rod	1
22	94220	Screw — Hex. Head	1	33	262651	Valve — Exhaust	1
		Note: 94612 Screw — Hex. Head (One (1) Used in Hole Nearest Breather)	1	34	262652	Valve — Intake	1
24	222698	Key — Flywheel	1	35	262224	Spring — Valve	1
25	493262	Piston Assy. (Standard)	1	40	93312	Retainer — Valve Spring	1
	493385	Piston Assy. (.010" O.S.)	1	45	262204	Tappet — Valve	1
	493386	Piston Assy. (.020" O.S.)	1	46	498275	Gear — Cam	1
	493387	Piston Assy. (.030" O.S.)	1	47	493737	Slinger — Oil	1
26	493261	Ring Set (Standard)	1	741	262598	Gear — Timing	1
	493388	Ring Set (.010" O.S.)	1				
	493389	Ring Set (.020" O.S.)	1				
	493390	Ring Set (.030" O.S.)	1				

★ Included in Gasket Set—Part No. 497316.

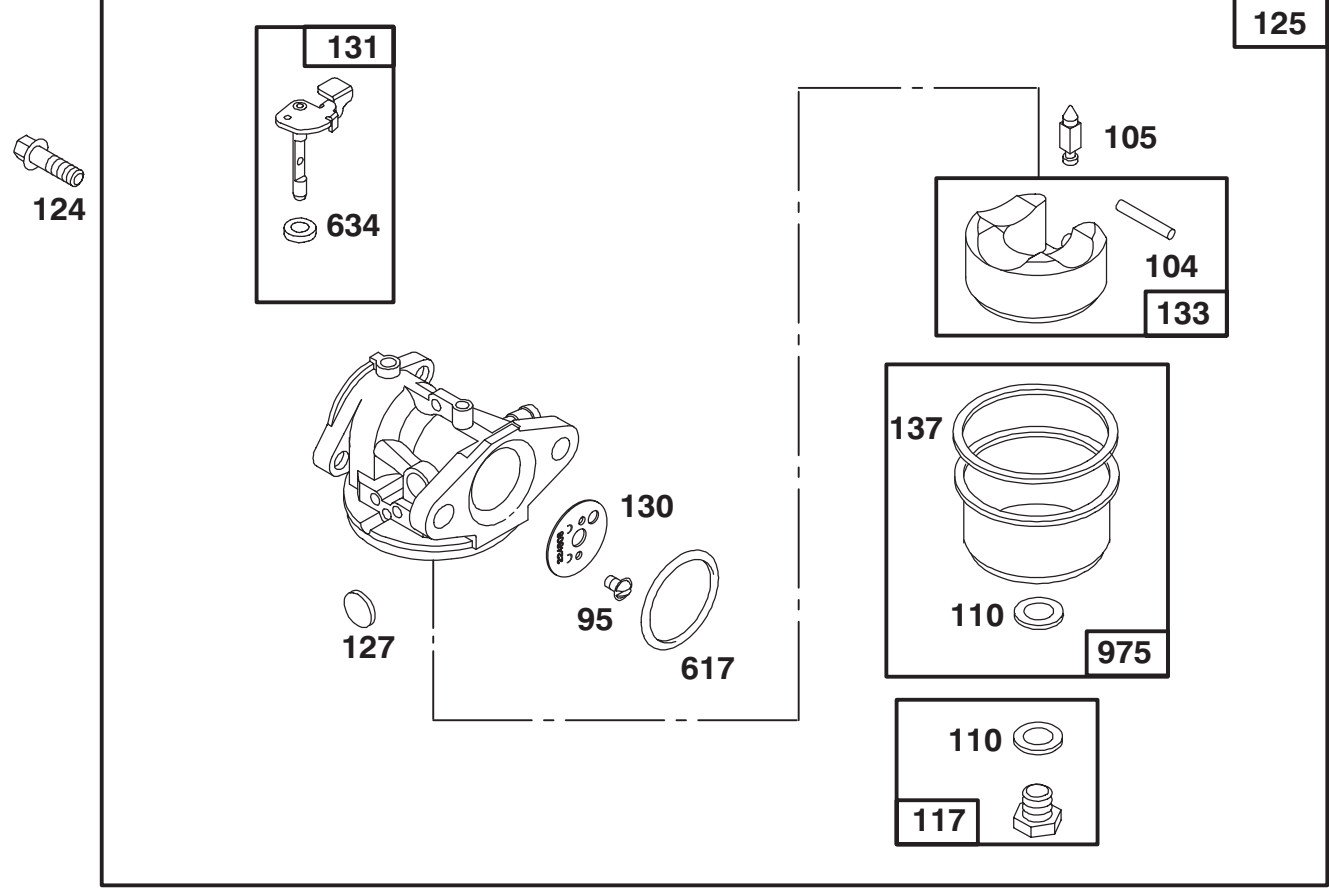

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 12F802-0650-01

Ref. No.	Part No.	Description	No. Used
95	94098	Screw – Throttle Valve Mtg.	1
●104	231371	Pin – Float Hinge	1
●105	398188	Valve – Inlet (Includes Seat)	1
◆110		Gasket–Sealing (Sold in Kit Only)	1
117	494870	Jet – Main (Std.) Note: 497315 Jet – Main (High Altitude)	1
124	94840	Screw – Carburetor Mtg.	1
125	498170	Carburetor	1

Ref. No.	Part No.	Description	No. Used
●127		Plug – Welch (Sold in Kit Only)	1
130	224908	Valve – Throttle	1
131	493267	Shaft – Throttle	1
133	398187	Float Assy. – Carburetor	1
◆137		Gasket – Bowl (Sold in Kit Only)	1
◆617	270344	Seal – Fuel Intake Tube	1
◆634		Washer–Shaft (Sold in Kit Only)	1
975	493640	Bowl Assy. – Carburetor	1

●Included in Carburetor Kit–Part No. 498260.

◆Included in Carburetor Gasket Set–Part No. 498261.

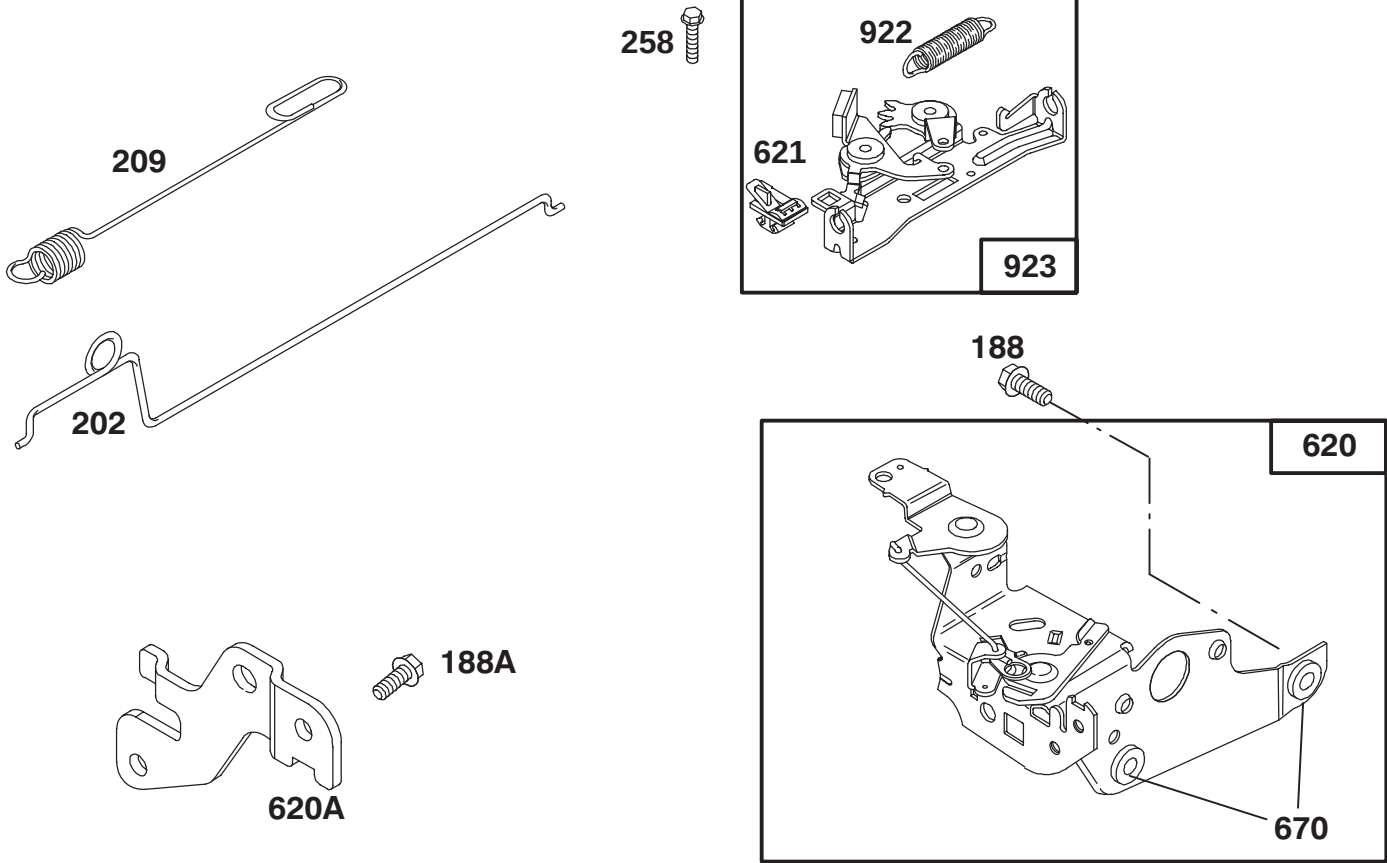


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0650-01

Ref. No.	Part No.	Description	No. Used
188	94644	Screw – Hex. Head	1
188A	94874	Screw – Hex. Head	1
202	262579	Link – Governor	1
209	263046	Spring – Governor	1
258	94512	Screw–Hex. Head	1
620	497203	Bracket – Carburetor	1

Ref. No.	Part No.	Description	No. Used
620A	225152	Bracket – Control	1
621	396847	Switch – Stop	1
★670	493823	Spacer – Bracket	1
922	262640	Spring–Brake	1
923	493442	Brake Assembly	1

★ Included in Gasket Set–Part No. 497316.

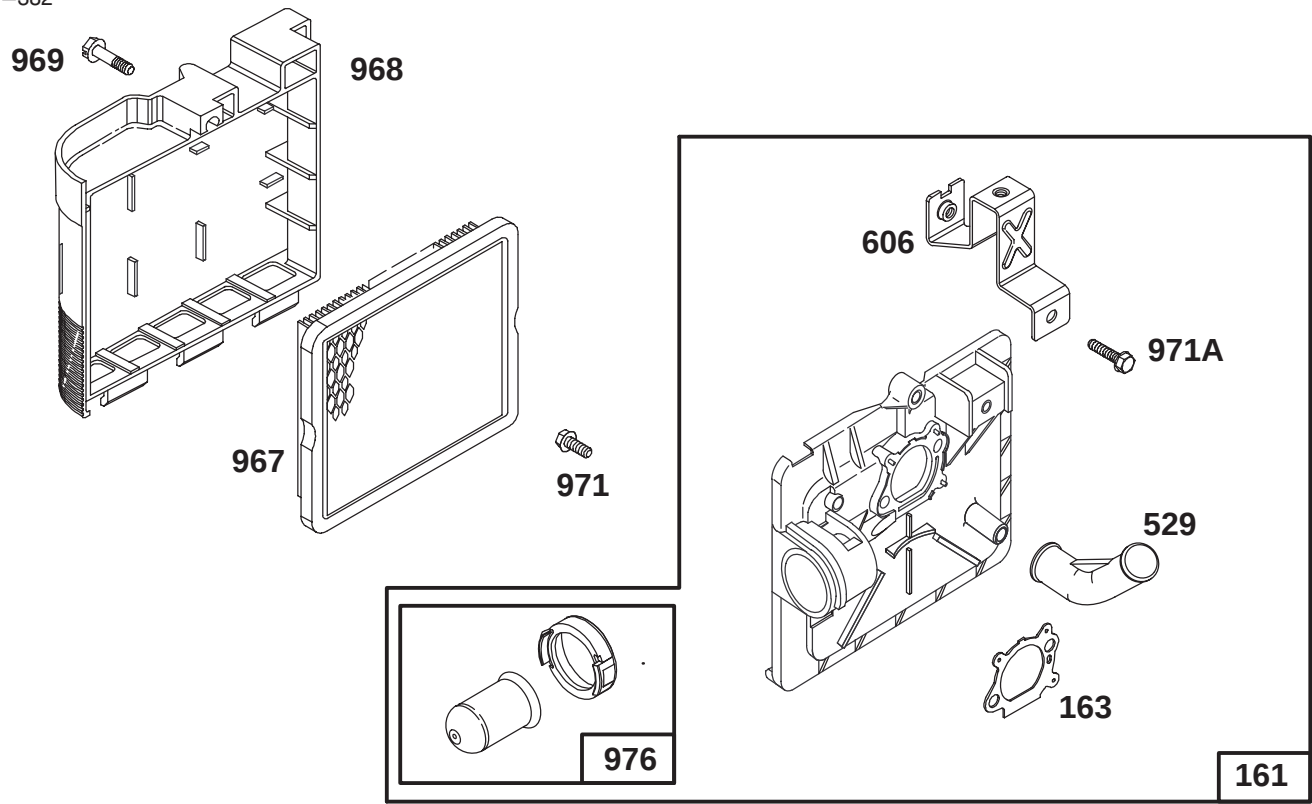


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0650-01

Ref. No.	Part No.	Description	No. Used
161	496116	Base – Air Cleaner	1
★163	272653	Gasket – Air Cleaner	1
529	281299	Grommet – Breather	1
606	224815	Strap – Bracket	1
967	491588	Filter – Air	1

Ref. No.	Part No.	Description	No. Used
968	281340	Cover – Air Cleaner	1
969	94872	Screw – Cover Mtg.	1
971	94873	Screw – Air Cleaner	1
971A	94749	Screw – Hex. Head	1
976	496115	Primer–Carburetor	1


★ Included in Gasket Set—Part No. 497316.

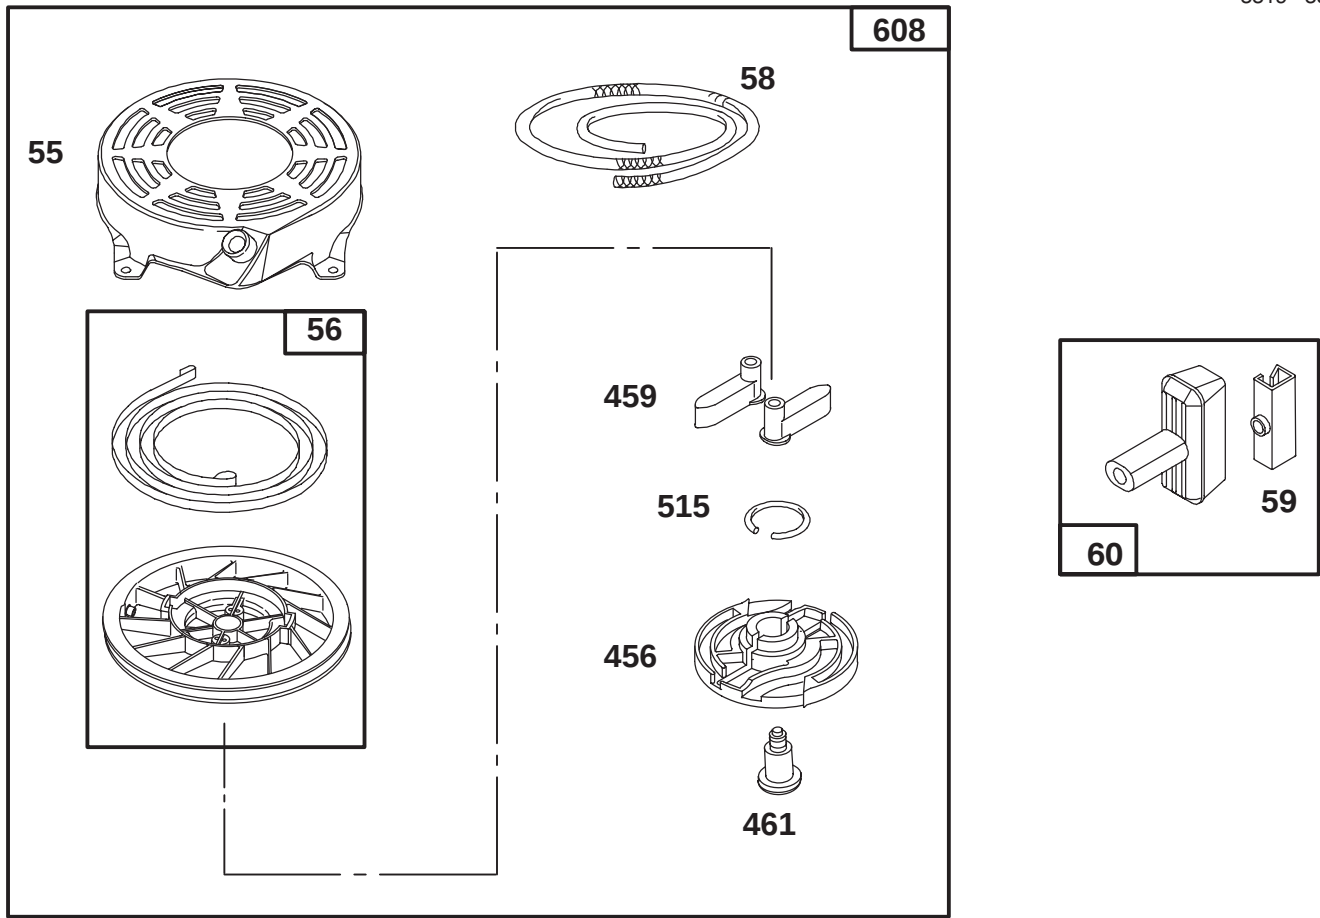

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0650—01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
55	497440	Housing — Rewind Starter	1	461	94943	Pin — Starter	1
56	498144	Pulley — Rewind Starter	1	515	263073	Spring — Torsion	1
58	280399	Rope — Rewind Starter (Cut to Required Length)	1	608	497680	Starter Assy. — Rewind	1
59	224467	Insert — Starter Grip	1			Includes:	
60	493926	Handle — Rewind Starter	1			94904 Screw — Hex. Head	1
456	281503	Retainer — Rewind Starter	1			94908 Nut — Hex.	1
459	281505	Pawl — Starter	1				




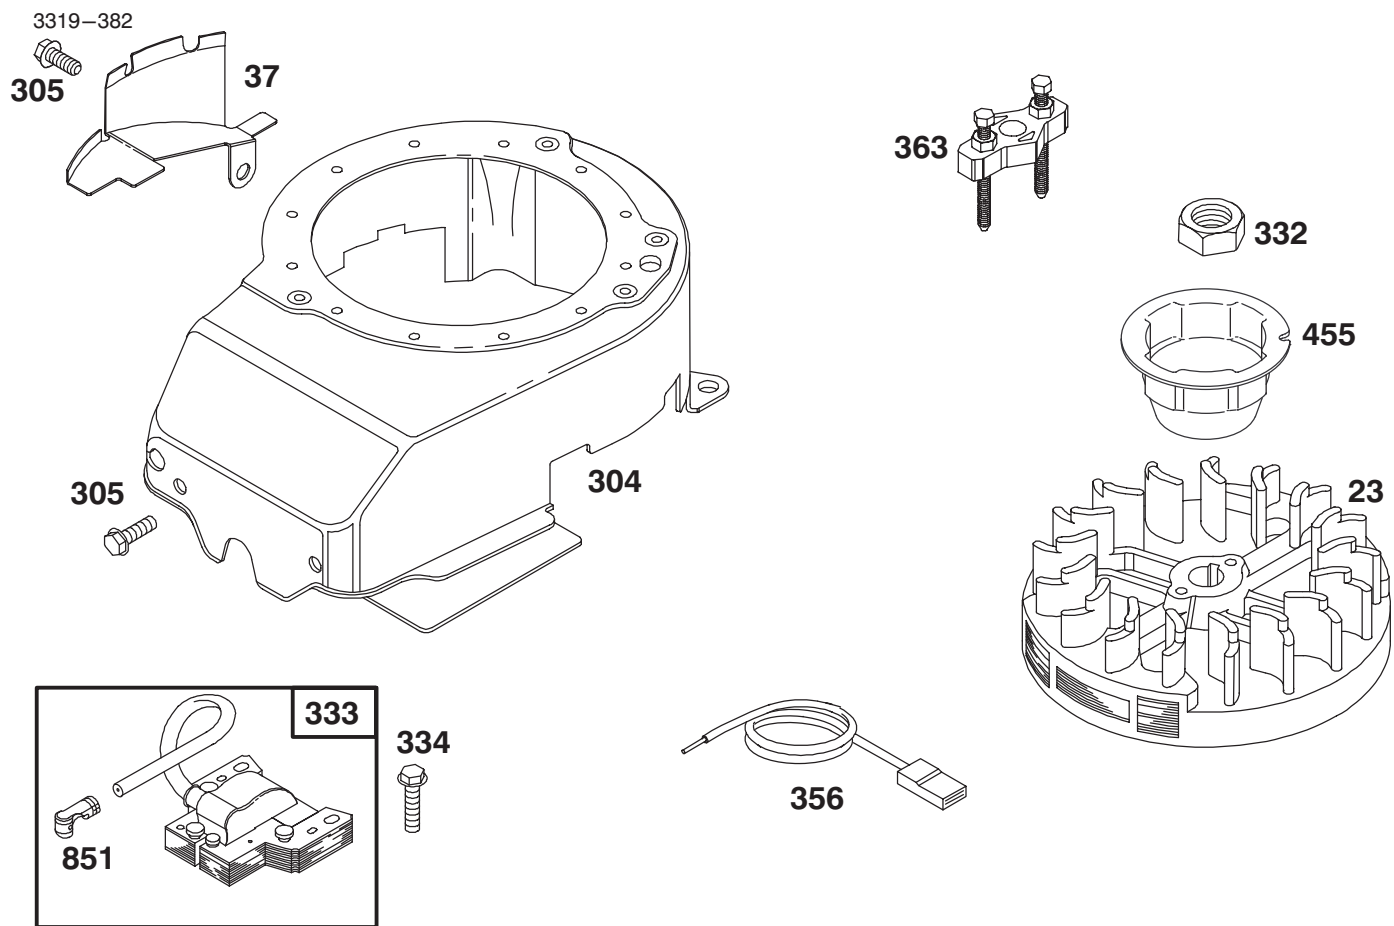


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0650-01

Ref. No.	Part No.	Description	No. Used
23	492177	Flywheel	1
37	224511	Guard - Flywheel	1
304	493293	Housing - Blower	1
305	94744	Screw - Sem	1
332	94877	Nut - Flywheel	1
333	802574	Armature - Magneto	1

Ref. No.	Part No.	Description	No. Used
334	94731	Screw - Sem	1
356	398808	Wire - Ground	1
363	19069	Flywheel Puller	1
455	225121	Cup - Starter	1
851	493880	Terminal - Ignition Cable	1

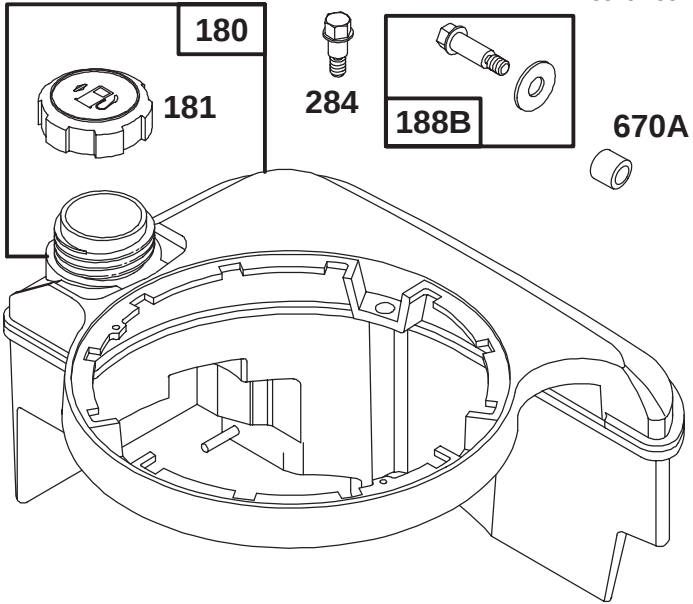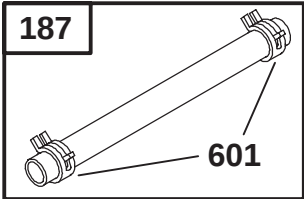
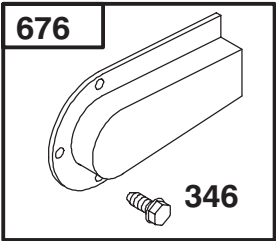
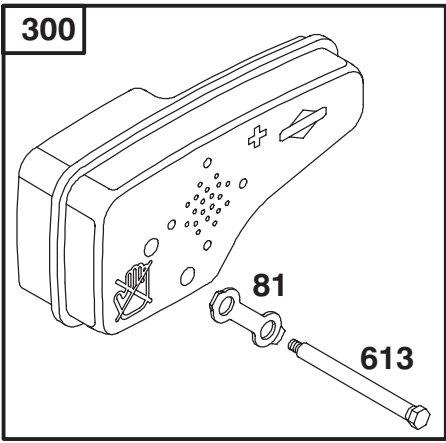


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0650—01

Ref. No.	Part No.	Description	No. Used
81	223664	Lock — Muffler Screw	1
180	495224	Tank Assembly — Fuel	1
181	397974	Cap Assy. — Fuel	1
187	492790	Hose — Fuel	1
188B	398540	Screw — Tank Mounting	1
284	94511	Screw — Shoulder	1
300	496106	Muffler — Exhaust	1

Ref. No.	Part No.	Description	No. Used
346	94896	Screw — Hex. Head	1
601	93053	Clamp — Hose	1
613	94231	Screw — Shoulder	1
670A	280512	Spacer — Fuel Tank	1
676	493871	Deflector — Muffler	1
★883	272253	Gasket — Exhaust	1

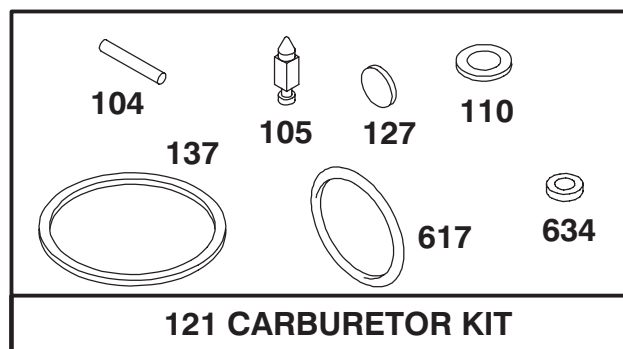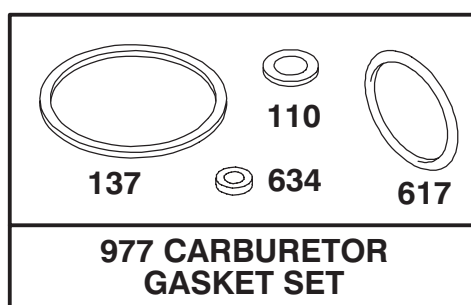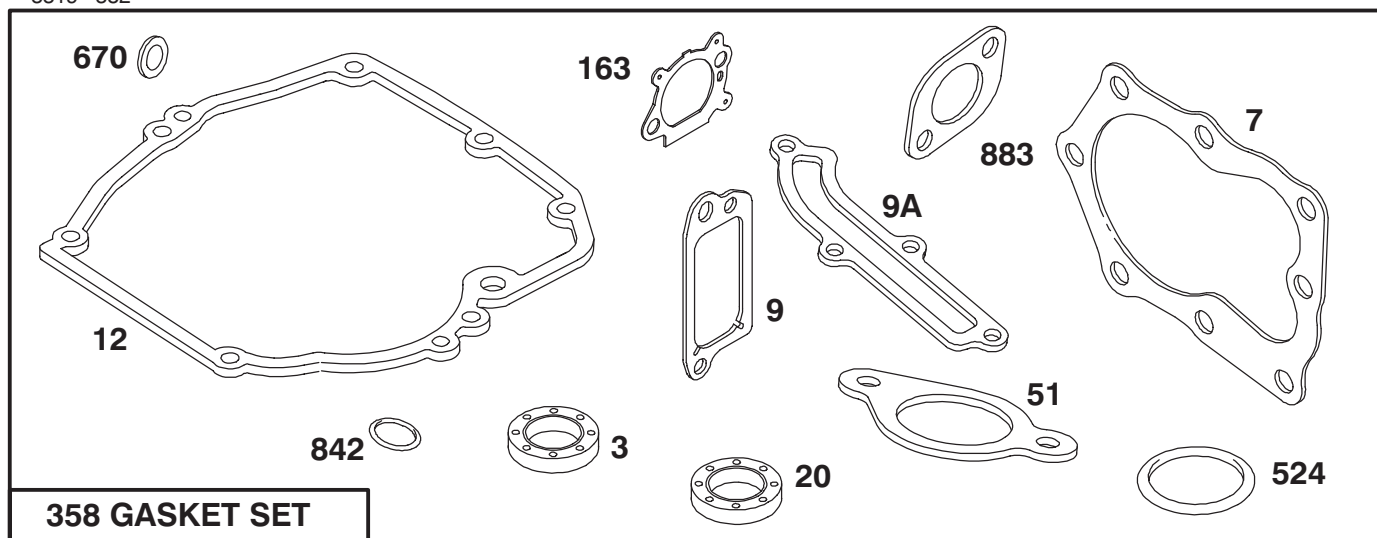

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12F802-0650-01

Ref. No.	Part No.	Description	No. Used
★3	299819	Seal – Oil	1
★7	272916	Gasket – Cylinder Hd.	1
★9	272481	Gasket – Breather	1
★9A	272238	Gasket – Baffle Plate	1
★12	272198	Gasket – Crankcase	1
★20	399781	Seal – Oil	1
★51	272199	Gasket – Intake Elbow	1
●104	231371	Pin – Float Hinge	1
●105	398188	Valve – Inlet (Includes Seat)	1
◆110		Gasket – Sealing (Sold in Kit Only)	1
121	498260	Carburetor Kit	1
●127		Plug – Welch (Sold in Kit Only)	1

Ref. No.	Part No.	Description	No. Used
◆137		Gasket – Bowl (Sold in Kit Only)	1
★163	272653	Gasket – Air Cleaner	1
358	497316	Gasket Set	1
★524	280393	Seal – Filler Tube	1
◆617	270344	Seal – Fuel Intake Tube	1
◆634		Washer – Shaft (Sold in Kit Only)	1
★670	493823	Spacer – Bracket Note: Includes Two.	1
★842	280966	Seal – O-Ring	1
★883	272253	Gasket – Exhaust	1
977	498261	Gasket Set – Carburetor	1

● Included in Carburetor Kit—Part No. 498260.

◆ Included in Carburetor Gasket Set—Part No. 498261.

★ Included in Gasket Set—Part No. 497316.

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
3-3287	5	5	2	Spacer
8-2759	6	4	1	Bag-Grass
14-9949	1	25	2	ASM-Wheel & Tire
14-9959	3	20	2	ASM-Wheel
19-4050	5	12	2	Knob
25-7740	1	21	2	Knob-Arm
25-7740	3	22	2	Knob-Arm
26-0670	2	15	1	Bolt-Blade
27-6232	1	26	2	Bolt-Wheel HH
27-6232	3	25	2	Bolt-Wheel HH
27-6250	1	42	4	Bushing
27-6250	3	27	4	Bushing
27-7210	5	4	2	Screw-Shoulder
27-7211	5	8	2	Screw-Shoulder
29-9570	4	21	1	Bushing-Yoke
33-3208	1	16	1	Rod-Shield
33-4820	6	3	1	Hinge-Bag Door
36-4780	4	9	1	Washer-Thrust
36-4791	4	4	2	Washer-Thrust
36-6910	6	5	2	Spring
37-1393	6	8	1	Door-Grass Bag
37-7260	1	31	2	Screw-TAP
38-7820	4	31	1	Bearing-Ball
40-1940	1	19	4	Washer
42-3520	3	5	2	Cap-End
42-4020	6	6	1	Frame-Bag
43-1362	5	1	1	ASM-Handle
44-0580	1	15	1	Shield-Trailing
46-5400	1	39	1	Shield-Front
46-5481	5	33	1	Cable-Traction
46-5520	5	24	1	Lever-Traction
46-6290	1	41	1	O-Ring
46-6440	5	34	1	Cover-Cables
46-6810	1	14	1	Screw HWH
46-6811	1	13	5	Screw-HWH
46-6980	5	27	1	Support-Cable
46-7030	1	29	1	Retainer-Cable
46-8090	1	36	2	Screw-Tapping
49-1630	5	23	2	Spacer-Support
49-2040	1	34	2	Screw-HH
49-2040	4	20	6	Screw-HH
52-7430	5	19	1	Bar-Control
55-3760	4	3	1	15 T Pinion
55-3770	4	11	1	Gear 49t 1st Gear
55-3780	4	2	1	Pinion 20t 2nd Gear
55-3790	4	12	1	Gear 44t 2nd Gear
55-3800	4	1	1	Pinion 25t 3rd Gear
55-3810	4	13	1	Gear 39t 3rd Gear
60-8710	4	18	1	Gearcase-Upper 3 Sp
60-8730	4	19	1	Cover-Gearcase
60-8750	4	5	2	Bushing
60-8770	4	8	1	Bushing-Output Shaft
60-8790	4	14	1	Sleeve-Gear
60-8800	4	17	1	Shaft-Intermediate
60-8810	4	22	1	Retainer-Shift-Fork
60-8821	3	2	1	Lever-Shift
60-8840	4	27	2	Pulley-Half
60-8850	4	32	1	Bushing-Output
60-8870	4	24	1	Yoke-Shift
60-8890	4	28	1	Gear-Pinion
62-3900	3	1	1	V-Belt
62-4320	1	33	1	Bracket-Guide

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
62–6660	4	26	1	Spacer–Pulley
62–6673	1	32	1	ASM–Gearcase
62–7550	2	10	1	Pulley–Driver
63–8701	3	8	2	ASM
63–8721	3	6	2	ASM–Arm
65–2720	3	11	4	Ring–Retaining
65–4710	3	12	2	Ring–Friction
65–4720	3	17	2	Spring–Compression
65–4730	3	9	2	Washer–Thrust
65–4740	3	10	4	Washer–Thrust
65–4750	3	16	2	Gear–Pinion
65–4760	3	13	2	Washer
65–4770	4	23	1	Shaft–Output
65–5250	4	36	1	Clip–Spring
66–0541	1	20	2	ASM–Spring Arm
66–0560	1	24	2	Screw–Shoulder
66–0570	2	9	1	Guide–Belt
66–0580	1	23	2	Arm–Pivot
66–5351	5	20	1	Lever–Control
66–6040	3	15	1	Key–Rocking
66–6050	3	14	1	Key–Rocking
71–9350	1	38	1	Spring–Bracket
74–1660	3	18	2	Cover–Wheel
74–1671	3	19	2	Spacer–Cover
76–0760	4	38	2	Key–Shift
76–0770	4	34	1	Collar–Shift
76–0780	4	37	1	Sleeve–Shift Key
76–2712	5	30	1	Control–Speed
76–4640	1	45	1	Latch–Discharge Plug
76–4650	1	44	1	Grip–Latch
76–4660	1	35	1	Spring–Extension
77–0502	1	43	1	Plug–Discharge ASM
80–3770	1	12	1	Retainer–Door
82–5680	1	27	1	Bracket–Adjustment
82–8550	2	18	1	Shield–Muffler
82–8780	3	4	1	Retainer–Cable
82–9151	1	10	1	Tunnel–Discharge
82–9910	1	30	1	Cover–Belt
84–8361	5	2	1	Latch–Handle
84–8401	5	3	1	Latch–Handle
86–9671	5	29	1	Guide–Rope
92–1720	1	7	1	Kicker–RH
92–1730	1	8	1	Kicker–LH
92–1750	1	6	1	Plate–Kicker Rear
92–2260	5	11	4	Screw–Handle
92–2269	5	26	1	Screw–Handle
92–2289	2	3	1	Plate–Logo
92–7663	3	21	1	Cover–Wheel
92–7856	1	17	4	Decal–HOC
92–9665	5	18	5	Screw–Phil
93–0243	2	2	1	Shroud–Qt Wedge
93–3154	1	11	1	Plate–Latch
93–4106	2	12	1	Blade–Generation Iii
93–4107	2	11	1	Retainer–Blade
93–4186	5	31	1	Cable–Throttle
93–4187	5	32	1	Cable–Brake
93–4354	2	4	1	Decal–Engine
93–6655	5	10	1	Decal–Danger
93–7351	1	37	1	ASM–Door
93–8470	2	7	1	Screw–Clamp (P/W Eng)
94–1608	2	13	1	Stiffener–Blade
94–4922	5	9	1	ASM–Handle

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
94-5407	1	2	1	Decal-Deck
95-2747	1	40	1	Fitting-Washout
95-5615	1	1	1	Housing-Rwd
95-5926	5	14	1	Decal-Instruction
95-7077	5	16	1	Decal-Panel
95-7078	5	13	1	Panel-Control
2210-249	2	6	1	Clamp-Casing (P/W Eng)
2210-316	2	5	1	Rope-Stop (P/W Eng)
237-153	3	7	2	O-Ring
2412-50	5	35	4	Clip-Tubing
321-39	5	21	1	Screw-HH
3253-22	2	14	1	Washer-Lock
3256-1	5	28	1	Washer-Flat
3256-24	4	30	1	Washer-Flat
3272-10	3	3	1	Pin-Cotter
3290-378	5	36	3	Tie-Cable
3290-422	6	1	2	Nut-Push
3295-35	1	46	1	Rivet-Solid
3296-5	4	29	1	Nut-Lock
3296-6	1	18	4	Nut-Lock
3296-6	3	24	2	Nut-Lock
3296-47	5	6	1	Nut-Lock
3296-72	5	7	3	Nut-Lock
3296-73	5	22	3	Nut-Lock
3296-74	5	25	2	Nut-Flange
32121-120	4	15	1	Pin-Coil
32144-70	1	28	5	Screw-TAP
32144-70	2	17	2	Screw-TAP
32144-70	3	26	1	Screw-TAP
32144-73	2	19	3	Screw-HWHTF
32144-85	1	22	2	Screw-HH
32144-85	3	23	2	Screw-HH
32144-102	2	8	3	Screw
32144-111	1	9	6	Screw - PPH
32144-121	2	16	2	Screw

*Not Illustrated

[illegible]

[illegible]

[illegible]