



Form No. 3378-304 Rev A

**Count on it.**

# Parts Catalog

## Chemical Pre-Mix Kit

### Multi Pro 1750 Turf Sprayer

Model No. 41210—Serial No. 314000001 and Up



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# List of Abbreviations

**AR:** as required

**ASM:** assembly

**BBC:** blade brake control

**BHTF:** button head thread forming

**CARR:** carriage

**CCW:** counter clockwise

**CW:** clockwise

**DEG:** degrees

**DPA:** Dual Point Adjustment

**ECM:** electronic control module

**EXT:** external

**FH:** flat head

**GA:** gauge

**HD:** heavy-duty

**HF:** hex flange

**HH:** hex head

**HHF:** hex head flange

**HHFTF:** hex head flange thread forming

**HJ:** hex jam

**HLH:** hex lag head

**HOC:** height-of-cut

**HSBH:** hex socket button head

**HSFH:** hex socket flat head

**HSH:** hex socket head

**HWH:** hex washer head

**HWHTF:** hex washer head thread forming

**HYD:** hydraulic

**LH:** left hand

**LP:** Liquefied Petroleum Gas

**LPG:** Liquefied Petroleum Gas

**NI:** nylon insert

**NPTF:** national pipe thread fine

**PFH:** phillips flat head

**PPH:** phillips pan head

**PPHTF:** phillips pan head thread forming

**PRH:** phillips round head

**PTH:** phillips truss head

**PTO:** power-take-off

**RH:** right hand

**ROPS:** roll-over protection system

**RRB:** rear roller brush

**SFH:** slotted fillister head

**SHH:** slotted hex head

**SHWH:** slotted hex washer head

**SPH:** slotted pan head

**SQH:** square head

**SRH:** slotted round head

**STD:** standard

**TAP:** self tapping


**TTH:** torx truss head

# Contents

Mounting Bracket Assembly ..... 4

Eductor Support Assembly ..... 5

Eductor Assembly No. 127-2949..... 6

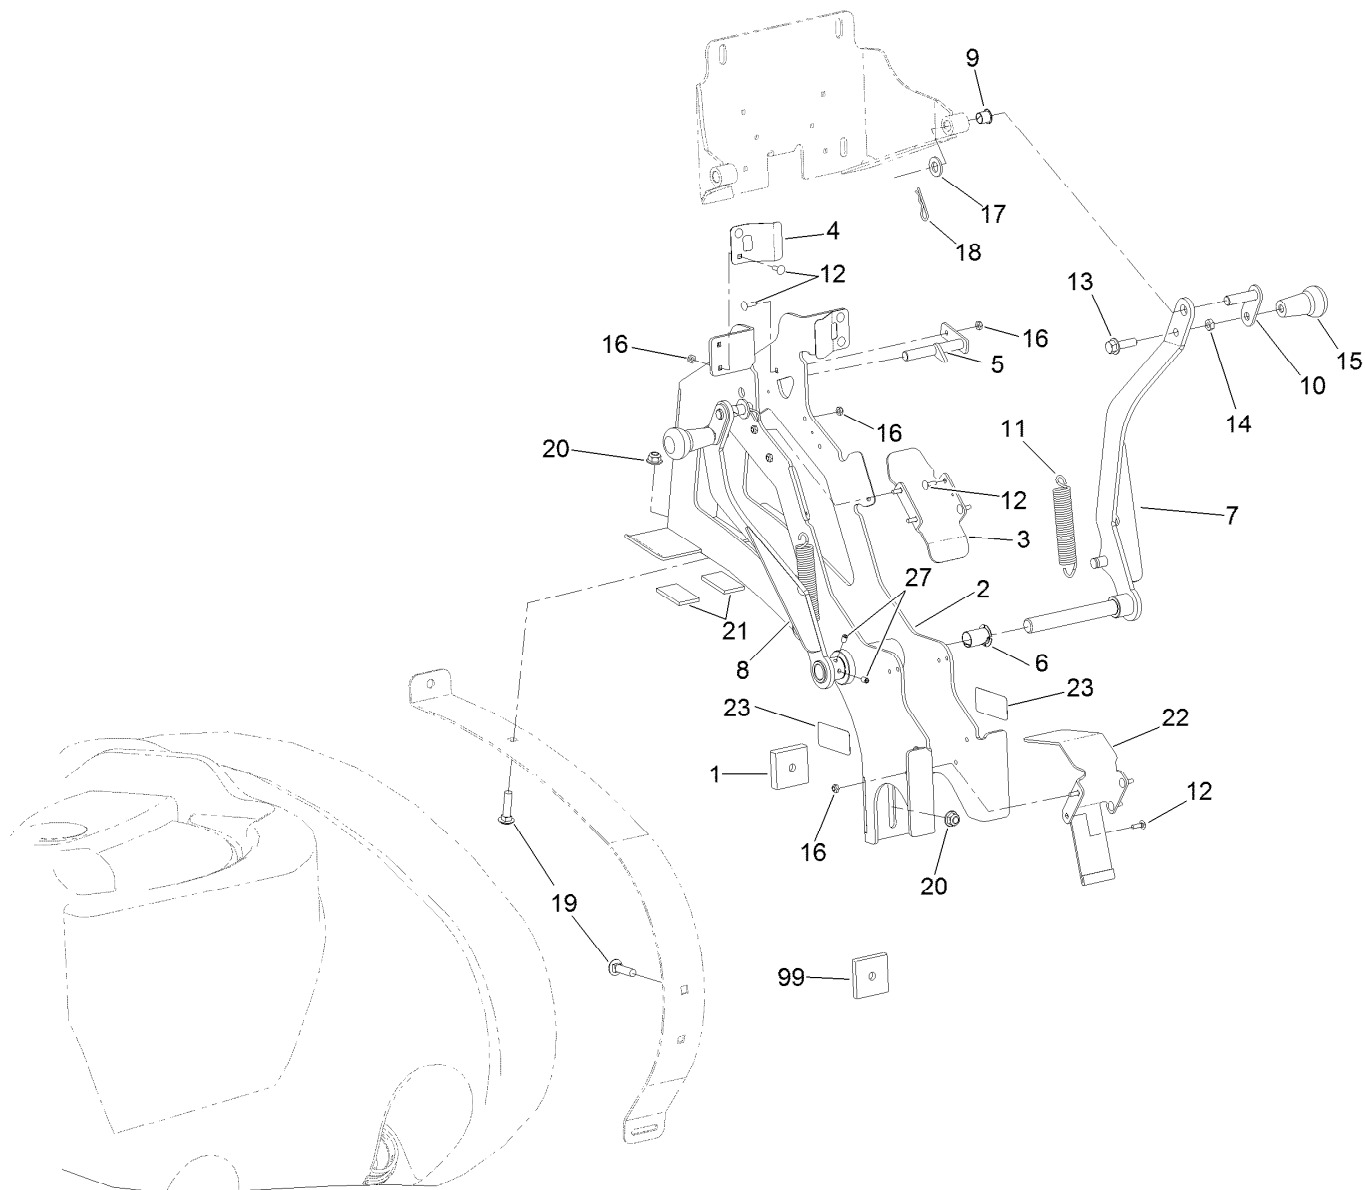


## Mounting Bracket Assembly

| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 1    | 125-0974    | 2    | Spacer-Eductor    |
| 2    | 125-0966-03 | 1    | Eductor Mount ASM |
| 3    | 119-4962    | 1    | Plate-Strike      |
| 4    | 119-4951    | 2    | Tab-Spring        |
| 5    | 120-8640    | 1    | Latch-Rod         |
| 6    | 100-8541    | 2    | Bushing-A Arm     |
| 7    | 119-4907-03 | 1    | Arm-Pivot, LH     |
| 8    | 119-4908-03 | 1    | Arm-Pivot, RH     |
| 9    | 256-257     | 2    | Bushing-Nyliner   |
| 10   | 120-0718    | 2    | Pivot-Pin         |
| 11   | 120-0722    | 2    | Spring-Extension  |
| 12   | 1-807533    | 13   | Bolt-CARR         |
| 13   | 3234-24     | 2    | Screw-HHF         |

| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 14   | 3218-3      | 2    | Nut-Jam          |
| 15   | 99-7981     | 2    | Knob-Grip, Soft  |
| 16   | 3296-12     | 13   | Nut-Lock, NI     |
| 17   | 106-9888    | 2    | Washer-Flat      |
| 18   | 3290-467    | 2    | Pin-Hair         |
| 19   | 3231-4      | 2    | Screw-CARR       |
| 20   | 104-8301    | 2    | Nut-Flange, NI   |
| 21   | 120-4944    | 2    | Pad-Foam         |
| 22   | 127-3922    | 1    | Plate-Guide      |
| 23   | 93-6674     | 2    | Decal-Warning    |
| 27   | 3245-41     | 2    | Screw-HSH        |
| 99   | 125-0960    | 2    | Spacer-Eductor ● |


● Optional Equipment

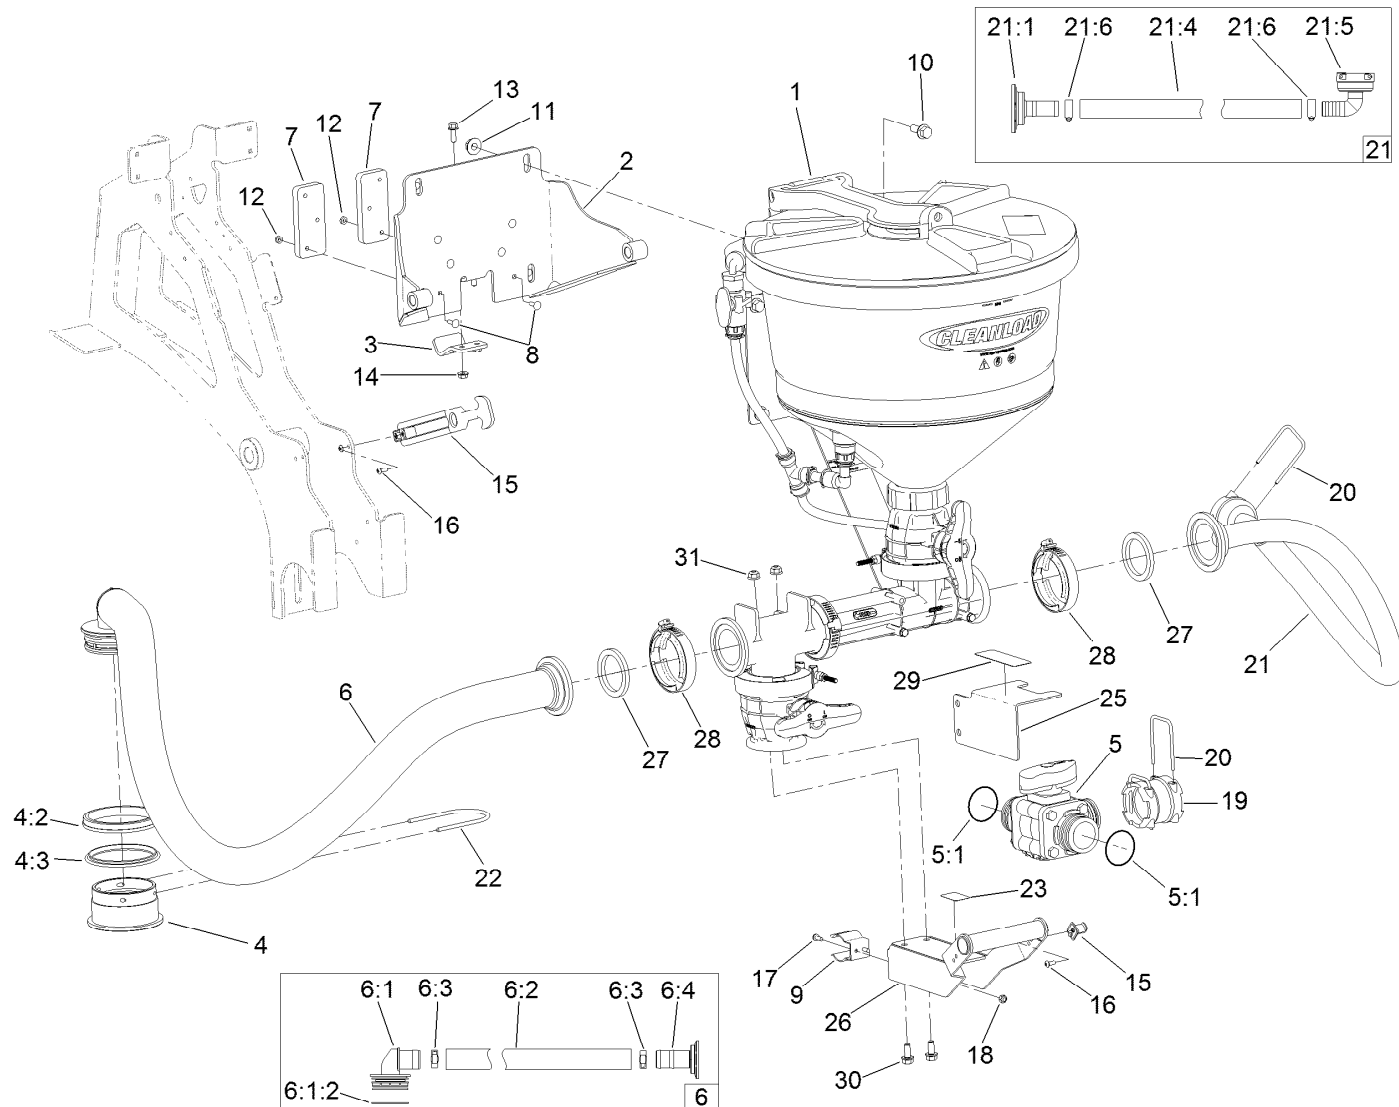

## Eductor Support Assembly

| Ref.  | Part Number | Qty. | Description        |
|-------|-------------|------|--------------------|
| 1     | 127-2949    | 1    | Eductor ASM        |
| 2     | 119-4912-03 | 1    | Pivot Plate ASM    |
| 3     | 119-4928    | 1    | Bracket-Latch      |
| 4     | 117-7851    | 1    | Bulkhead ASM       |
| 4:2   | 100-8646    | 1    | Gasket-Bulkhead    |
| 4:3   | 100-8647    | 1    | Nut-Bulkhead       |
| 5     | 125-4118    | 1    | Valve-3 Way        |
| 5:1   | 125-4117    | 3    | O-Ring             |
| 6     | 125-4162    | 1    | Eductor-Hose ASM   |
| 6:1   | 117-7870    | 1    | Hosebarb ASM       |
| 6:1:2 | 100-6989    | 1    | O-Ring             |
| 6:2   | 125-4161    | 1    | Hose-Main, Eductor |
| 6:3   | 41327       | 2    | Clamp-Hose         |
| 6:4   | 125-5895    | 1    | Fitting-Hose Barb  |
| 7     | 119-4963    | 2    | Pad-Wear           |
| 8     | 1-807533    | 6    | Bolt-CARR          |
| 9     | 119-4937    | 1    | Clip-Spring        |
| 10    | 3234-11     | 4    | Screw-HHF          |
| 11    | 32128-43    | 4    | Nut-Flange         |
| 12    | 3296-12     | 6    | Nut-Lock, NI       |
| 13    | 3234-4      | 2    | Screw-HHF          |

| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 14   | 32128-33    | 2    | Nut-HF               |
| 15   | 115-8215    | 1    | Draw Latch ASM       |
| 16   | 115-9830    | 3    | Screw-HSBH           |
| 17   | 3250-12     | 2    | Screw-PPH            |
| 18   | 3296-2      | 2    | Nut-Lock, NI         |
| 19   | 125-8037    | 1    | Adapter              |
| 20   | 125-4000    | 3    | Fork                 |
| 21   | 125-4160    | 1    | Supply Hose ASM      |
| 21:1 | 125-5894    | 1    | Fitting-Hose Barb    |
| 21:4 | 125-8074    | 1    | Hose-Supply, Eductor |
| 21:5 | 125-0618    | 1    | Hosebarb-Elbow       |
| 21:6 | 2412-34     | 2    | Clamp-Hose           |
| 22   | 117-7996    | 1    | Fork                 |
| 23   | 119-4988    | 1    | Decal-Lock, Mp       |
| 25   | 127-3948-03 | 1    | Bracket-Valve        |
| 26   | 127-5000-03 | 1    | Handle-Eductor       |
| 27   | 127-5004    | 2    | Gasket               |
| 28   | 127-5005    | 2    | Clamp-Worm Screw     |
| 29   | 127-3954    | 1    | Decal-Eductor        |
| 30   | 3234-47     | 2    | Screw-HHF            |
| 31   | 104-8300    | 2    | Nut-Flange, NI       |

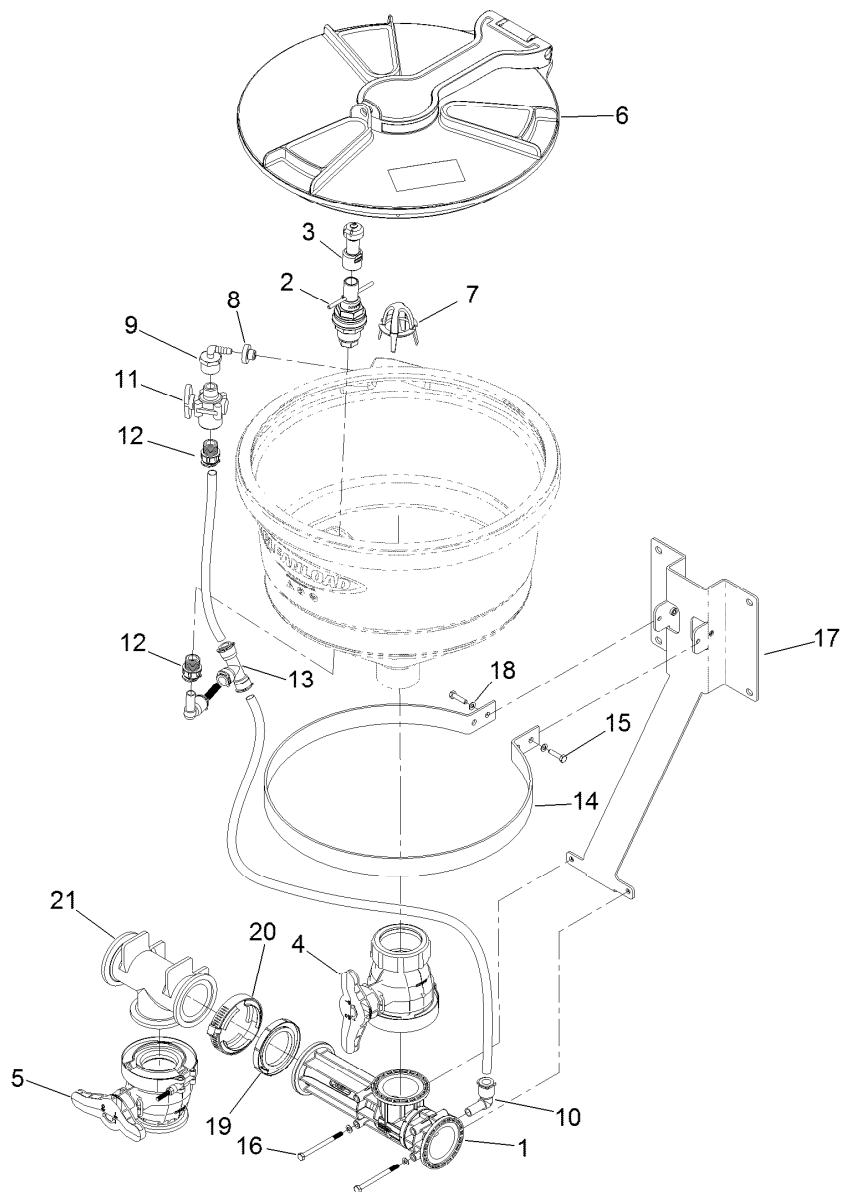

## Eductor Assembly No. 127-2949

| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 1    | 127-5027    | 1    | Eductor                |
| 2    | 127-5042    | 1    | Container-Rinse        |
| 3    | 127-5048    | 1    | Nozzle-Rinse Container |
| 4    | 127-6934    | 1    | Tank Valve             |
| 5    | 127-6923    | 1    | Drain Valve            |
| 6    | 127-6916    | 1    | Lid                    |
| 7    | 127-6939    | 1    | Strainer               |
| 8    | 127-6900    | 1    | Grommet                |
| 9    | 127-6904    | 1    | Elbow-Fitting          |
| 10   | 127-6903    | 2    | Elbow-Fitting          |
| 11   | 127-6905    | 1    | Valve-Two Way          |

| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 12   | 127-5049    | 2    | Fitting          |
| 13   | 127-6906    | 1    | Tee Fitting      |
| 14   | 127-5030    | 1    | Mounting Ring    |
| 15   | 127-6922    | 2    | Screw-HH         |
| 16   | 127-5031    | 2    | Screw-HH         |
| 17   | 127-5029    | 1    | Bracket          |
| 18   | 127-6938    | 4    | Washer           |
| 19   | 127-6932    | 1    | Gasket           |
| 20   | 127-5005    | 1    | Clamp-Worm Screw |
| 21   | 127-6941    | 1    | Fitting-Tee      |

**Notes:**



**Count on it.**