



Jackstand Kit

Multi Pro WM Turf Sprayer

Model No. 41216

Form No. 3378-422 Rev A

Installation Instructions

Installation

⚠ WARNING

CALIFORNIA Proposition 65 Warning

This product contains a chemical or chemicals known to the State of California to cause cancer, birth defects, or reproductive harm.

Note: Ensure that the booms are in the transport position before installing this kit.

1. Disconnect the boom hydraulics and connect the bed lift hoses; refer to your sprayer and Workman *Operator's Manual*.
2. Disconnect the PTO driveshaft from the Workman; refer to your PTO kit *Installation Instructions*.
3. Disconnect the sprayer fuse block from the Workman fuse block; refer to your sprayer's *Operator's Manual*.
4. Disconnect the control console from the Workman and mount it to the tank storage bracket.
5. Mount the jack stand legs to the machine as shown in Figure 1.
6. Remove the bolts from the hold-down brackets; refer to your sprayer's *Operator's Manual*.
7. Disconnect the sprayer harness lead from the battery.
8. Connect the jacks to the rear jack stands (Figure 1).
Note: Discard the jack collar insert.
9. Tilt the tank skid back until the rear jack stands touch the ground.
10. Attach the front jack stand extensions (Figure 1) and lower the tank skid until they touch the ground.
Note: If the jack stand feet are not all level on the ground, adjust the rear jacks until they are.
11. Disconnect the sprayer's speed sensor and connect the Workman speed sensor; refer to your sprayer's *Operator's Manual*.
12. Release the hydraulic cylinder pressure.
13. Remove the lift cylinder pins and retract the lift cylinders; refer to your sprayer's *Operator Manual*.
14. Adjust the jack stands using the jacks until the back tank skid pins are loose and can be removed; refer to your sprayer's *Operator's Manual*.
15. Slowly drive the Workman out from under the sprayer tank.
Note: When mounting a sprayer that is elevated on jack stands, push the Workman under the sprayer. Don't reverse under the tank.



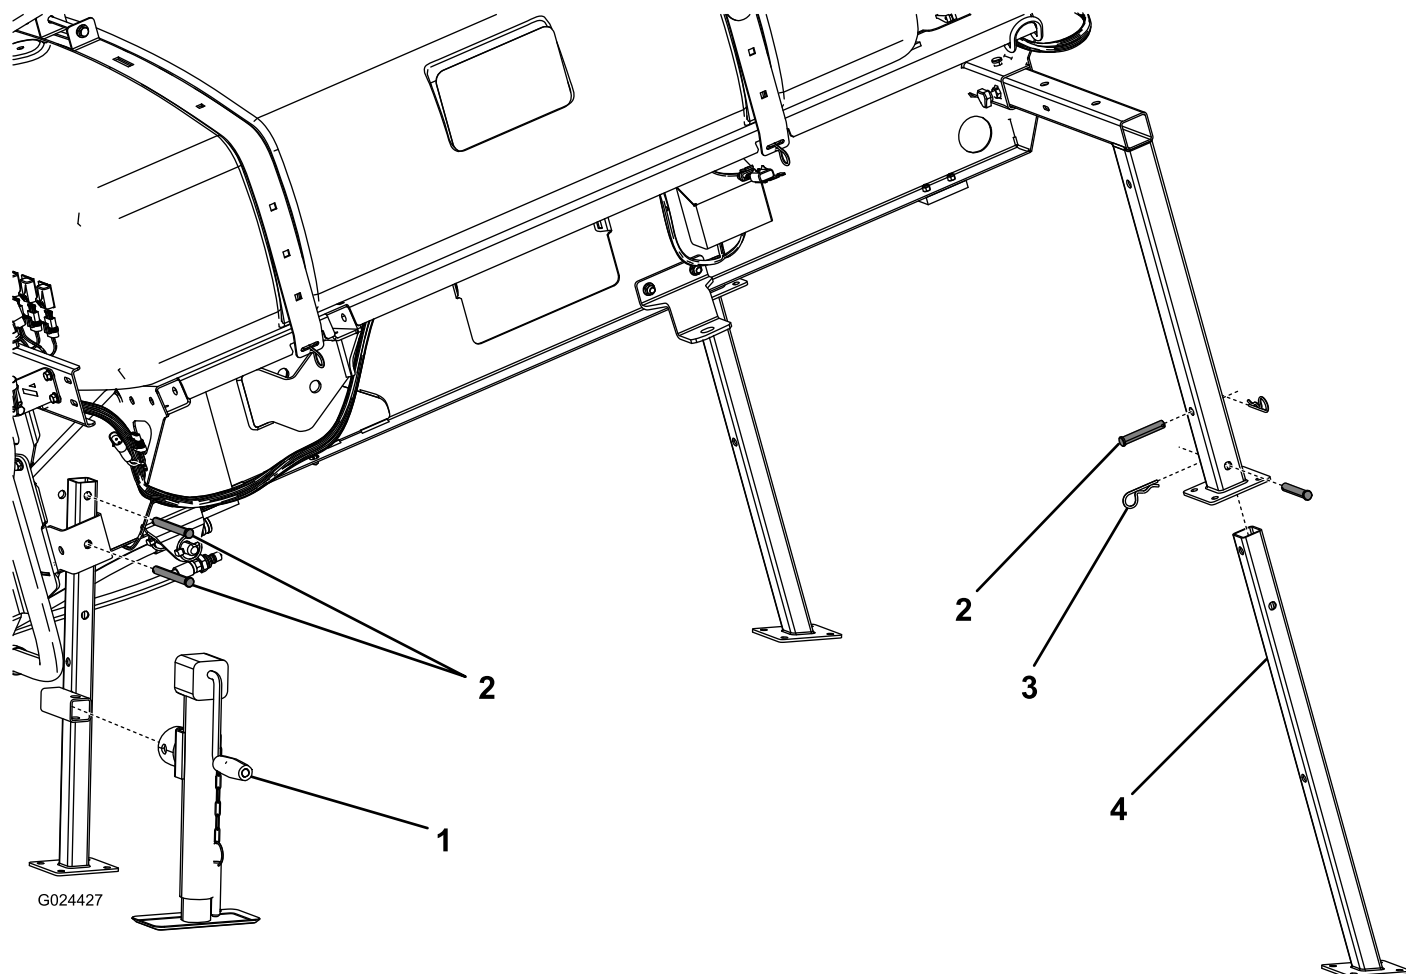


Figure 1

1. Jack
2. Clevis pins

3. Cotter pin
4. Front jack stand extension