

38” ANTI-SCALP KIT for Lawn Tractor	
MODEL NO. 79181	INSTALLATION INSTRUCTIONS

Loose Parts

DESCRIPTION	QTY.	USE
Wheel Bracket, LH	1	Install wheel brackets.
Wheel Bracket, RH	1	
Nut Lock 5/16-18	5	
Screw 5/16-18 x 3/4	5	
Wheel	2	Install wheels.
Wheel Bolt	2	
Nut Lock 3/8-16	2	

Installation

CAUTION

POTENTIAL HAZARD

- A blade that is worn or damaged could break apart and pieces could be thrown at bystanders or at you as you use the mower.

WHAT CAN HAPPEN

- Pieces of blade that may be thrown could seriously injure or kill you or bystanders.

HOW TO AVOID THE HAZARD

- Periodically inspect the blade for wear and damage. Immediately install a new blade if it is worn or damaged.

Remove the mower from the tractor; refer to the operator's manual.

Turn the mower upside down.

1. Mount the wheel brackets to the mower deck with $\frac{5}{16}$ – 18 x $\frac{3}{4}$ " screws and $\frac{5}{16}$ – 18 lock nuts (Fig. 1).

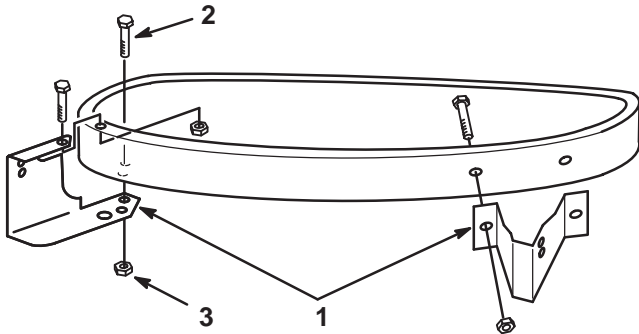


Figure 1

- | | |
|------------------|-------------|
| 1. Wheel bracket | 3. Lock nut |
| 2. Screw | |

2. Mount the wheels onto the wheel brackets with wheel bolts and $\frac{3}{8}$ –16 lock nuts (Fig. 2). Use the same hole height on both sides. Refer to adjusting mower wheels.

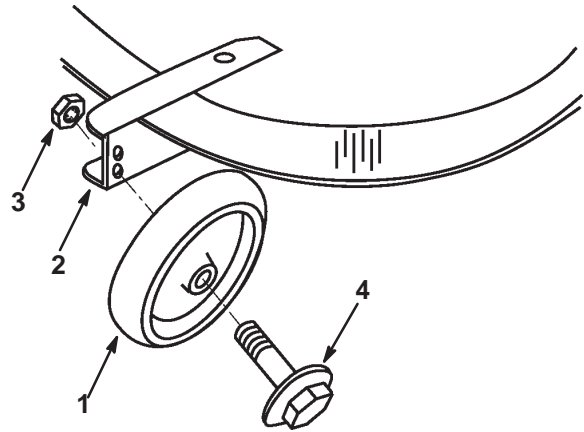


Figure 2

- | | |
|------------------|---------------|
| 1. Wheel | 3. Locknut |
| 2. Wheel bracket | 4. Wheel bolt |

Install the mower onto the tractor; refer to the tractor operator's manual.

Adjusting Mower Wheels

The mower front wheels are to guide it over uneven ground. The height of these wheels can be changed to closer match the height-of-cut selected for the mower.

1. To change the height of mower wheels remove wheel mounting bolt and change hole into which it is mounted (Fig. 2).
2. Use the top hole for low height-of-cut and the bottom hole for high height-of-cut (Fig. 2).