



MODEL NO. 30136 — 00001
THRU 20001 & UP

OPERATOR'S MANUAL

36" CUTTING DECK
FOR COMMERCIAL WALK MOWER



To assure maximum safety, optimum performance, and to gain knowledge of the product, it is essential that you or any other operator of the mower read and understand the contents of this manual before the engine is ever started. Pay particular attention to the SAFETY INSTRUCTIONS highlighted by this symbol —



The safety alert symbol means CAUTION, WARNING or DANGER — personal safety instruction. Failure to comply with the instruction may result in personal injury.



FOREWORD

The 36" cutting deck has advanced concepts in engineering, design and safety; and if maintained properly, will give excellent service.

Since it is a high-quality product, Toro is concerned about the future use of the machine and safety of the user. Therefore, read this manual to familiarize yourself with proper set-up, operation and maintenance instructions. The major sections of the manual are:


- | | | |
|------------------------|---------------------|----------------|
| 1. Safety Instructions | 3. Before Operating | 5. Maintenance |
| 2. Set-up Instructions | 4. Lubrication | |

Certain information in this manual is emphasized. DANGER, WARNING and CAUTION identify personal safety-related information. IMPORTANT identifies mechanical information demanding special attention. Be sure to read this directive because it deals with the possibility of damaging a part or parts of the machine. NOTE identifies general information worthy of special attention.

TABLE OF CONTENTS

	Page		Page
SAFETY INSTRUCTIONS	2-4	Checking for Bent Blade	9
SAFETY AND INSTRUCTION DECALS	4	Removing Cutter Blade	9
SPECIFICATIONS	4	Checking Sail and Sharpening Cutter Blade	10
LOOSE PARTS	5	Correcting Cutting Unit Mismatch	10
SET-UP INSTRUCTIONS	5-6	Replacing Grass Deflector	11
Install Castor Wheels	5	Replacing Drive Belt	11
Mount Carrier Frame to Traction Frame	5	Replacing Drive Spindle Pulley	12
Install Drive Belt	5	Replacing Pulley Assembly	13
BEFORE OPERATING	6	Removing Spindle and Bearings	
Adjusting Height-of-Cut	6	from Spindle Housing	13
OPERATING INSTRUCTIONS	7	Removing Drive Spindle and Bearings	
Grass Deflector	7	from Spindle Housing	14
LUBRICATION MAINTENANCE	7	Installing Spindle, Bearings and Seals	
CUTTING UNIT MAINTENANCE	8-15	Into Spindle Housing	14
Troubleshooting	8	IDENTIFICATION AND ORDERING	15
Servicing Bushings in Castor Arms	8	THE TORO PROMISE	16
Servicing Castor Wheel and Bearing	9		

SAFETY INSTRUCTIONS

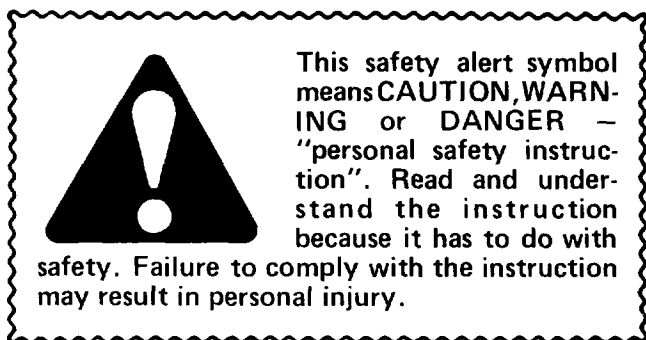

The Commercial Walk Mower was tested and certified by TORO for compliance with the B71.4 — 1984 specifications of the American National Standards Institute. Although hazard control and accident prevention partially are dependent upon the design and configuration of the machine, these factors are also dependent upon the awareness, concern, and proper

training of the personnel involved in the operation, transport, maintenance, and storage of the machine. Improper use or maintenance of the machine can result in injury or death. To reduce the potential for injury or death, comply with the following safety instructions.

BEFORE OPERATING

1. Read and understand the contents of this Operator's Manual before operating the machine.

Become familiar with all controls and know how to stop quickly. A free replacement manual is available by sending complete Model and Serial Number to:

The Toro Company
8111 Lyndale Avenue South
Minneapolis, Minnesota 55420

SAFETY INSTRUCTIONS

2. Do not allow children to operate the machine. Do not allow adults to operate the machine without proper instruction.
3. Never operate machine when under the influence of drugs or alcohol.
4. Before attempting to start engine, shift into neutral, move deck engagement switch into DIS-ENGAGE position and lock parking brake.
5. Remove all debris or other objects that might be picked up and thrown by the cutter blades. Keep all bystanders away from the mowing area.
6. Keep all shields and safety devices in place. If a shield, safety device or decal is illegible or damaged, repair or replace it before operation is commenced. Also tighten any loose nuts, bolts and screws to assure machine is in safe operating condition.
7. Do not operate machine while wearing sandals, tennis shoes, sneakers or shorts. Also, do not wear loose fitting clothing which could get caught in moving parts. Always wear long pants and substantial shoes. Wearing safety glasses, safety shoes and a helmet is advisable and required by some local ordinances and insurance regulations.
8. Fill fuel tank with gasoline before starting the engine. Avoid spilling gasoline. Since gasoline is flammable, handle it carefully.
 - A. Use an approved gasoline container.
 - B. Do not fill tank while engine is hot or running.
 - C. Do not smoke while handling gasoline.
 - D. Fill fuel tank outdoors and up to about one inch (25 mm) from top of the tank, not the filler neck.
 - E. Wipe up any spilled gasoline.
12. The grass deflector must always be installed and in down position on the side discharge cutting unit, except when using optional grass catcher. This product is designed to drive objects into the ground where they lose energy quickly in grassy areas. However, don't take an injury risk!! When a person or pet appears unexpectedly in or near the mowing area, STOP MOWING. Careless operation, combined with terrain angles, ricochets, or improperly positioned guards, can lead to thrown object injuries. Do not resume mowing until area is cleared.
13. Never raise the cutting unit while the blades are rotating.
14. If the cutting blades strike a solid object or the machine vibrates abnormally, shut the engine off. Remove spark plug wire(s) from spark plug(s) to prevent possibility of accidental starting. Check cutting unit and traction unit for damage and malfunctioning parts. Repair any damage before re-starting the engine and operating the cutting unit. Be sure blades are in good condition and blade bolts are tight.
15. Cut grass slopes carefully. Do not start, stop, or turn suddenly.
16. Do not touch engine or muffler while engine is running or soon after it is stopped. These areas could be hot enough to cause a burn.
17. Before leaving the operator's position — behind handle or leaving mower unattended, shift transmission into NEUTRAL, apply parking brake, move deck engagement switch to OFF, and shut OFF engine.

WHILE OPERATING

9. Start engine when parking brake is set, blade is disengaged, and transmission is in neutral.
10. Do not run the engine in a confined area without adequate ventilation. Exhaust fumes are hazardous and could possibly be deadly.
11. Using the machine demands attention, and to prevent loss of control:
 - A. Mow only in daylight or when there is good artificial light.
 - B. Watch for holes or other hidden hazards.
 - C. Do not drive close to a sand trap, ditch, creek or other hazard.
 - D. Reduce speed when making sharp turns and when turning on hillsides.
18. Disconnect spark plug wire(s) from spark plugs to prevent accidental starting of the engine when servicing, adjusting or storing the machine.
19. If tractor and mower must be tipped to perform maintenance or an adjustment, drain gasoline from fuel tank and oil from crankcase.
20. When driving unit forward, always use upper "Forward" traction drive handle. When backing up, always use lower "Reverse" traction drive handle.
21. To reduce potential fire hazard, keep the engine free of excessive grease, grass, leaves and accumulations of dirt.
22. Be sure machine is in safe operating condition by keeping nuts, bolts and screws tight. Check the blade mounting bolts and nuts frequently to be sure they are tightened to specification.

SAFETY INSTRUCTIONS

23. If the engine must be running to perform a maintenance adjustment, keep hands, feet, clothing and other parts of the body away from the cutting unit blades and other moving parts.

24. Do not overspeed the engine by changing governor settings. To be sure of safety and accuracy, have an Authorized TORO Proline Service Dealer check maximum engine speed with a tachometer.

25. Engine must be shut off before checking oil or adding oil to the crankcase.

26. Allow engine to cool before storing mower in any enclosure such as a garage or storage shed. Make sure the mower fuel tank is empty if machine is to be stored in excess of 30 days. Do not store mower near any open flame or where gasoline fumes may be ignited by a spark. Always store gasoline in a safety-approved, red metal container.

27. Perform only those maintenance instructions described in this manual. If major repairs are ever

needed or assistance is desired, contact an Authorized Toro Proline Service Dealer. To ensure optimum performance and safety, always purchase genuine TORO replacement parts and accessories to keep the Toro all TORO. NEVER USE "WILL-FIT" REPLACEMENT PARTS AND ACCESSORIES MADE BY OTHER MANUFACTURERS. Look for the TORO logo to assure genuineness. Using unapproved replacement parts and accessories could void the warranty of The Toro Company.


CAUTION

1. KEEP ALL SHIELDS IN PLACE.
2. BEFORE LEAVING OPERATOR'S POSITION.
 - A. MOVE TRANSMISSION TO NEUTRAL.
 - B. SET PARKING BRAKE.
 - C. DISENGAGE DECK ENGAGEMENT CLUTCH.
 - D. SHUT OFF ENGINE.
3. WAIT FOR ALL MOVEMENT TO STOP BEFORE SERVICING MACHINE.
4. KEEP BYSTANDERS FROM AREAS BEING MOWED.

SAFETY AND INSTRUCTION DECALS



The following decals are installed on the machine. If any become damaged or illegible, replace it. The decal part number is listed in your parts catalog. Replacement can be ordered from your Authorized Toro Distributor.

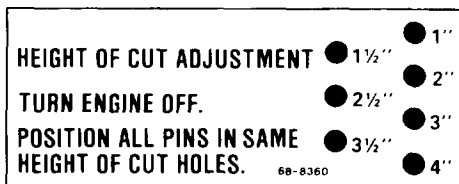

ON BOTH SIDES OF
CUTTING UNIT
(Part No. 68-8360, Left Side)
(Part No. 74-0940, Right Side)




ON RIGHT SIDE OF
CUTTING UNIT &
ON DEFLECTOR
(Part No. 54-9220)



ON FRONT OF CUTTING UNIT
(Part No. 66-1340)



ON CENTER OF DECK,
UNDER COVERS
(Part No. 67-5360)

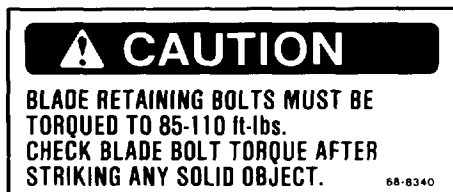

ON REAR OF CUTTING UNIT
(Part No. 66-8340)

SPECIFICATIONS

CUTTING UNIT

Width of Cut: 36 in. (.914 m).

Height-of-Cut: Adjustable from 1" to 4" (25 to 102 mm) in 1/2" (13 mm) increments.

Cutter Blades: Two heat treated steel blades, each 3/16 in. (4.8 mm) thick and 18 in. (457 mm) long.

Pneumatic Wheels: 8 in. (203 mm) dia. with greaseable roller bearings. (Inflation 15-35 P.S.I.).

Weight: 150 lb. (68 kg)

LOOSE PARTS

Note: Use this chart as a checklist to assure all parts have been received. Without these parts, total set-up cannot be completed.

DESCRIPTION	QTY	USE
Flange Screws	6	Mount carrier frame to traction frame.
Flange Locknuts	6	
Castor Wheel Assembly	2	Install in frame.
Thrust Washer	8	Install on castor fork shafts
Klip Ring	2	Install on top of castor shafts.
Frame	1	Install on traction unit.
Adjusting Shaft	2	Mount Adjusting Shafts
Jam Nuts	4	
Washer	2	
Spring	2	
Bushing	2	
Operator's Manual	1	
Registration Card	1	

Specifications and design subject to change without notice.

SET-UP INSTRUCTIONS

INSTALL CASTOR WHEELS

1. Place two thrust washers on each castor wheel shaft (Fig. 1).

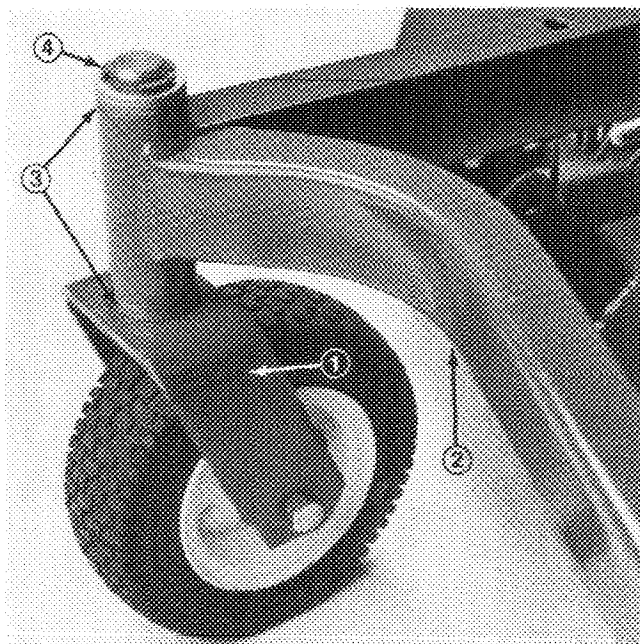


Figure 1

1. Castor wheel assembly
2. Frame
3. Thrust washers
4. Klip ring

2. Insert shafts into carrier frame. Install two more thrust washers and secure with Klip rings (Fig. 1).

MOUNT CARRIER FRAME TO TRACTION FRAME

1. Align carrier frame mounting holes with mounting holes in traction frame. Secure each side with three flange screws and locknuts (Fig. 2). Torque fasteners to 60-80 ft.-lb. (81-109 N·m).

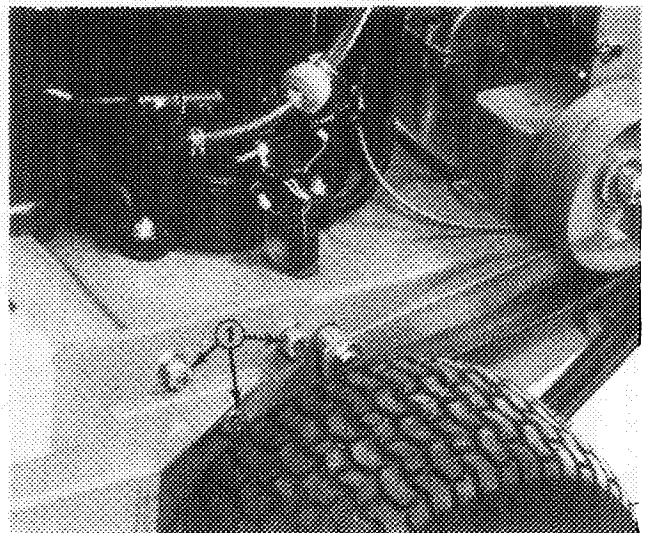


Figure 2

1. Flange screws and nuts

INSTALL DRIVE BELT

Note: To ease the installation of drive belt, belt cover may be removed.

SET-UP INSTRUCTIONS

1. Route belt around deck drive pulley and engine clutch pulley (Fig. 3).
2. Thread (2) jam nuts onto each adjusting shaft. (approximately 7 inches) (Fig. 4).
3. Slide a washer, spring and bushing onto each adjusting shaft. Bushing to be positioned so flange end is against spring (Fig. 4).
4. Insert spring end of each adjusting shaft into hole in deck mounting bracket and other end of shaft into hole in carrier frame mounting tab. Small end of bushing to fit into hole in deck bracket (Fig. 4).

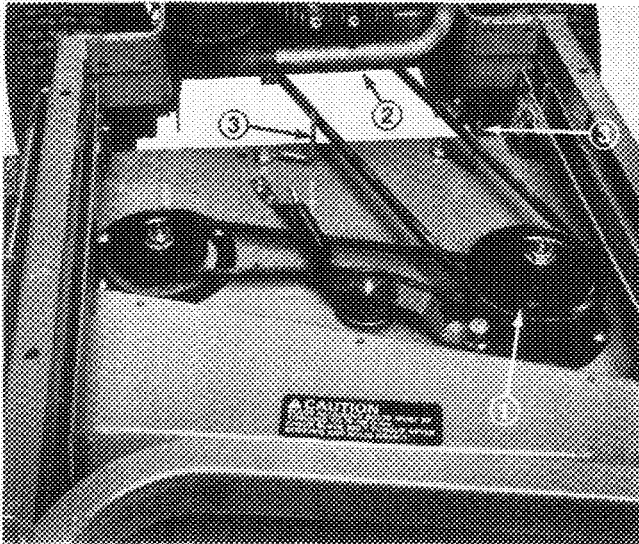


Figure 3

1. Drive pulley 2. Clutch pulley (not shown) 3. Belt guide

5. To tension belt, tighten front jam nut on each adjusting shaft until springs are compressed to a length of 5", measured between washer and bushing (Fig. 4). Secure rear jam nuts.

6. Check position of belt guides. Guides should be positioned so rod edge is approximately .10 inch from back side of belts (Fig. 3).

7. Reinstall cover if previously removed.

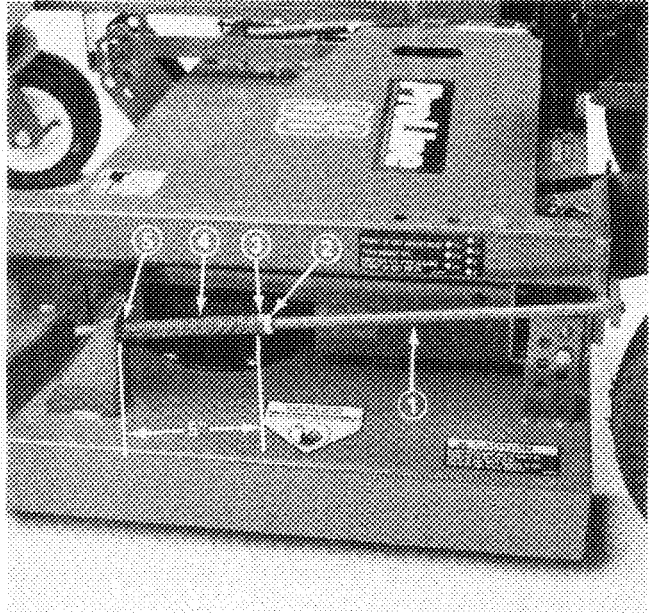


Figure 4

1. Adjusting shaft 4. Spring
2. Jam nuts 5. Bushing
3. Washer

BEFORE OPERATING

ADJUSTING HEIGHT-OF-CUT

The height-of-cut is adjustable from 1 to 4 inches (25 to 102 mm) in 1/2 inch (13 mm) increments by relocating four clevis pins in different hole locations in brackets at each corner of the cutting unit (Fig. 5).

Note: All four pins should be in identical hole locations to prevent any operating and cutting difficulties.

Note: If cutting unit is to be used in 1 in. (25 mm) or 1-1/2 in. (38 mm) height-of-cut setting, rear cutting unit rollers must be repositioned in the top bracket holes.

1. Remove cotter pins from roller shafts.
2. Slide shafts out of lower bracket holes, align rollers with top holes and install shafts.
3. Install cotter pins to secure assemblies.

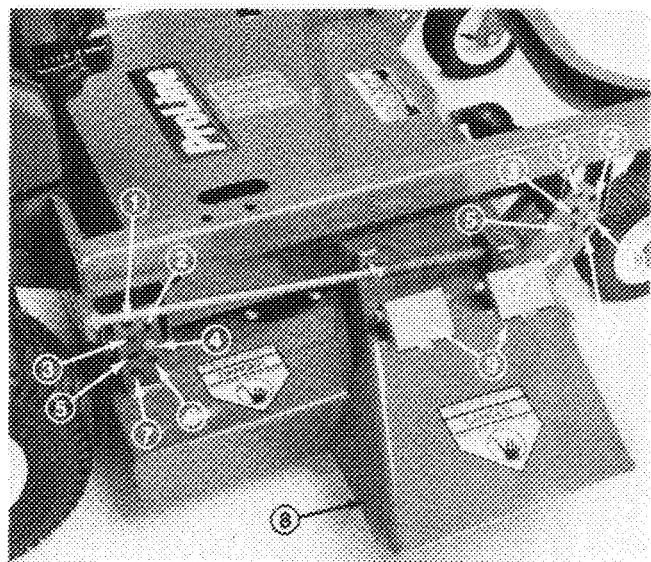


Figure 5

1. 1 in. (25 mm) 4. 2-1/2 in. (64 mm) 7. 4 in. (102 mm)
2. 1-1/2 in. (38 mm) 5. 3 in. (76 mm) 8. Grass deflector
3. 2 in. (51 mm) 6. 3-1/2 in. (89 mm) 9. Spring hinges

OPERATING INSTRUCTIONS

GRASS DEFLECTOR



WARNING

The grass deflector (Fig. 5) is a safety device that diverts grass and other foreign objects being discharged downwardly. WE STRONGLY RECOMMEND THAT THE DEFLECTOR BE IN THE LOWEST POSITION WHENEVER THE MACHINE IS USED NEAR BUILDINGS OR WHEN THERE ARE PEOPLE OR ANIMALS IN THE AREA. THE BLADES CAN THROW DEBRIS A CONSIDERABLE DISTANCE WITH SUFFICIENT FORCE TO CAUSE PERSONAL INJURY OR DAMAGE TO PROPERTY. THE ONLY TIME THE DEFLECTOR SHOULD BE IN THE UPPER POSITION IS WHEN THERE IS NO POSSIBILITY OF INJURY OR DAMAGE. NEVER OPERATE CUTTING UNIT WITH DEFLECTOR REMOVED FROM CUTTING UNIT OR MOVED TO MORE OPEN POSITION. NEVER CHANGE DEFLECTOR HEIGHT WHEN THE BLADES ARE TURNING. If the grass deflector is damaged, repair or replace the affected part(s).

LUBRICATION MAINTENANCE

GREASE BEARINGS AND BUSHINGS

The cutting unit must be lubricated regularly. If machine is operated under normal conditions, lubricate castor bearings, bushings and blade spindle bearings with No. 2 general purpose lithium grease or molybdenum base grease, after every 8 hours of operation or daily, whichever comes first (Fig. 6).


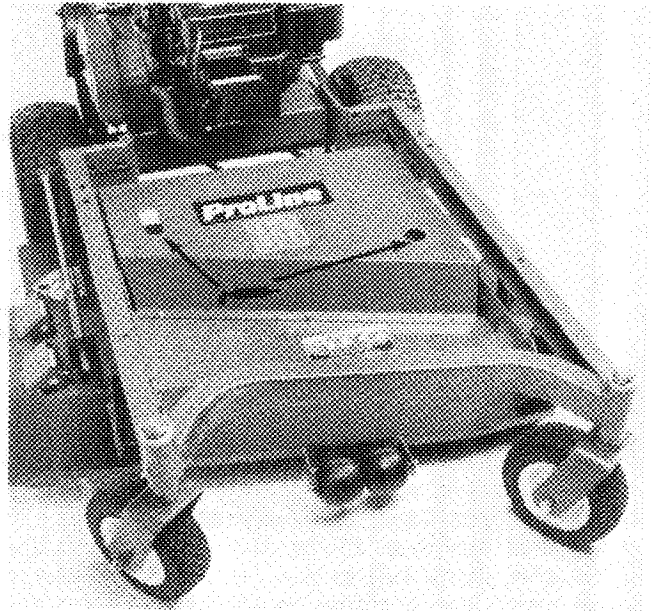


Figure 6

CUTTING UNIT MAINTENANCE TROUBLESHOOTING

UNIT WILL NOT CUT OR CUTS POORLY

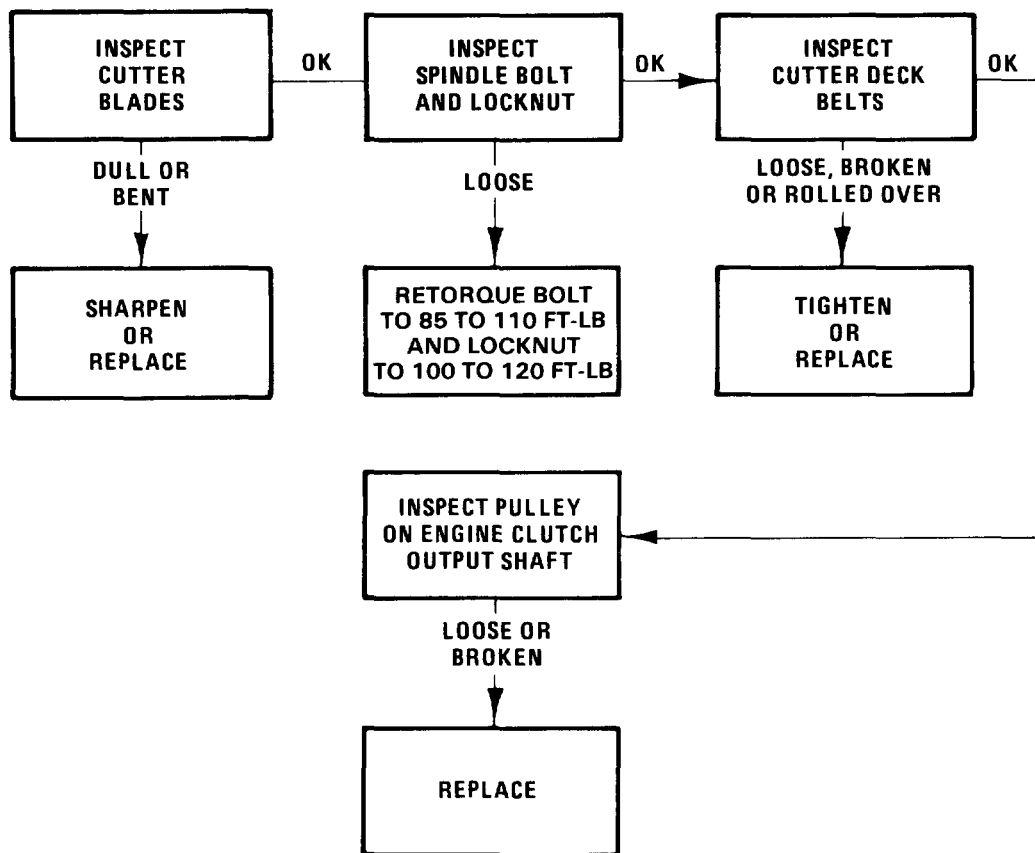

CUTTING UNIT MAINTENANCE

SERVICING BUSHINGS IN CASTOR ARMS

The castor arms have bushings pressed into the top and bottom portion of the tube and after many hours of operation, the bushings will wear. To check the bushings, move castor fork back and forth and from side-to-side. If castor spindle is loose inside the bushings, bushings are worn and must be replaced.

1. Raise cutting unit so wheels are off floor and block it so it cannot fall accidentally.
2. Remove Klip ring and thrust washers from top of castor spindle.
3. Pull castor spindle out of mounting tube. Allow thrust washers to remain on bottom of spindle.
4. Insert pin punch into top or bottom of mounting tube and drive bushing out of tube (Fig. 7).

Also drive other bushing out of tube. Clean inside of tubes to remove dirt.

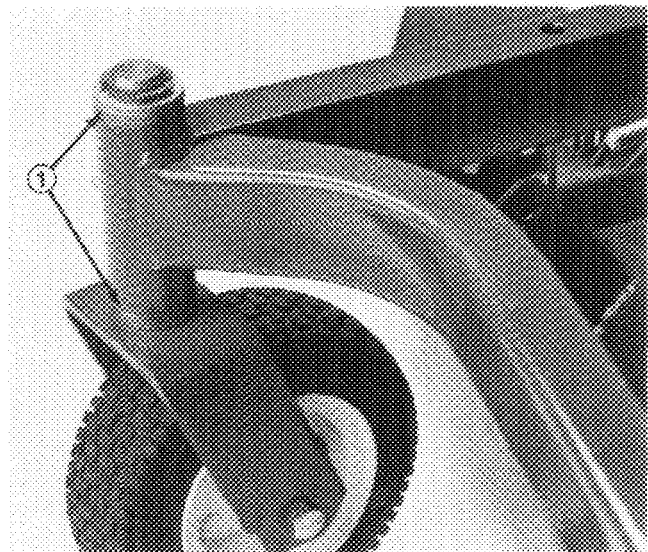


Figure 7
1. Bushings

CUTTING UNIT MAINTENANCE

5. Apply grease to inside and outside of new bushings. Using a hammer and flat plate, drive bushings into mounting tube.

6. Inspect castor spindle for wear and replace it if damaged.

7. Push castor spindle through bushings and mounting tube. Slide spacers onto spindle. Install Klip ring through castor spindle to retain all parts in place.

IMPORTANT: When bushings are installed, the inside diameter may collapse slightly, and this may not allow castor spindle to be installed. If castor spindle does not slide through new bushings and mounting tube, ream both bushings to inside diameter of 1.126 inches (28.6 mm).

SERVICING CASTOR WHEEL AND BEARING

The castor wheel rotates on a high-quality roller bearing and is supported by a spanner bushing. Even after many hours of use, provided that the bearing was kept well-lubricated, bearing wear will be minimal. However, failure to keep bearing lubricated will cause rapid wear. A wobbly castor wheel usually indicates a worn bearing.

1. Remove locknut from capscrew holding castor wheel assembly between castor fork (Fig. 8). Grasp castor wheel and slide capscrew out of fork.

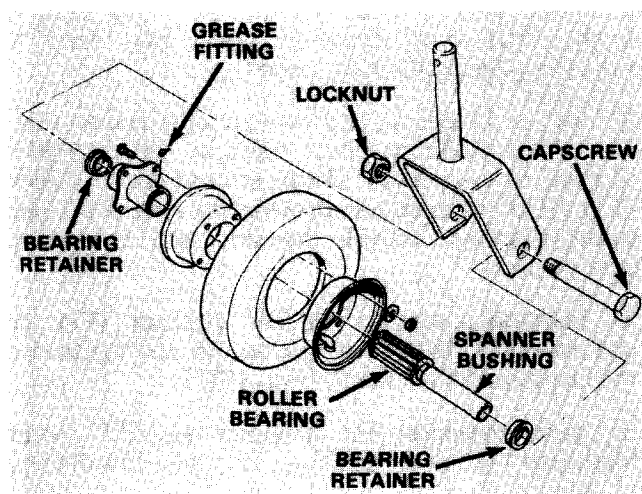


Figure 8

Note: Account for the two bearing retainers (Fig. 8).

2. Tip wheel to the side and allow roller bearing and spanner bushing to fall out (Fig. 8).

3. Inspect bearing, spanner bushing and inside diameter of wheel for wear. Replace defective parts.

4. To reassemble parts, slide spanner bushing through roller bearing. Pack bearing with no. 2 grease; then insert bearing w/spanner bushing into wheel.

5. Slide bearing retainer onto spanner bushing, and mount castor wheel assembly between the fork and capscrew and locknut. Tighten capscrew and locknut until spanner bushing bottoms against inside of castor fork.

6. Pump more grease through grease fitting on wheel (Fig. 8) until bearing is greased thoroughly.

CHECKING FOR BENT BLADE

1. Rotate blade until the ends face forward and backward (Fig. 9). Measure from inside of cutting unit to cutting edge at front of blade (Fig. 9), and remember this dimension.



Figure 9

2. Rotate opposite end of blade forward. Measure between the cutting unit and cutting edge of blade at the same position as in step 1. The difference between dimensions obtained in steps 1 and 2 must not exceed 1/8 of an inch (3 mm). If dimension exceeds 1/8 of an inch (3 mm), replace the blade because it is bent: refer to Removing Cutter Blade, page 9.

REMOVING CUTTER BLADE

The blade must be replaced if a solid object is hit, the blade is out-of-balance or if the blade is bent. Always use genuine TORO replacement blades to be sure of safety and optimum performance. Never use replacement blades made by other manufacturers because they could be dangerous.



WARNING

Do not try to straighten a blade that is bent, and never weld a broken or cracked blade. Always use a new blade to assure safety.

1. Grasp end of blade using a rag or thickly padded glove. Remove bladebolt, lockwasher, anti-scalp cup and blade from spindle shaft.

2. Install blade — sail facing toward cutting unit with anti-scalp cup, lockwasher and bladebolt. Tighten to 85-110 ft-lb.

CUTTING UNIT MAINTENANCE

CHECKING SAIL AND SHARPENING CUTTER BLADE

Two areas must be considered when checking and servicing the cutter blade: one area is the sail, the other is the cutting edge. Both cutting edges and the sail, which is the turned up metal opposite the cutting edge, contribute to a good quality-of-cut. The sail is important because it pulls grass up straight, thereby producing an even cut. However, the sail will gradually wear down during operation, and this condition is normal. As the sail wears down, the quality-of-cut will degrade somewhat, although the cutting edges are sharp. The cutting edges of the blade must be sharp so the grass is cut rather than torn. A dull cutting edge is evident when tips of the grass appear brown and shredded. Sharpen the cutting edges to correct this condition.

1. Examine cutting ends of the blade carefully, especially where the flat and curved parts of the blade meet (Fig. 10-1). Since sand and abrasive material can wear away the metal that connects the flat and curved parts of the blade, check the blade before using the mower. If wear is noticed (Fig. 10-2), replace the blade.

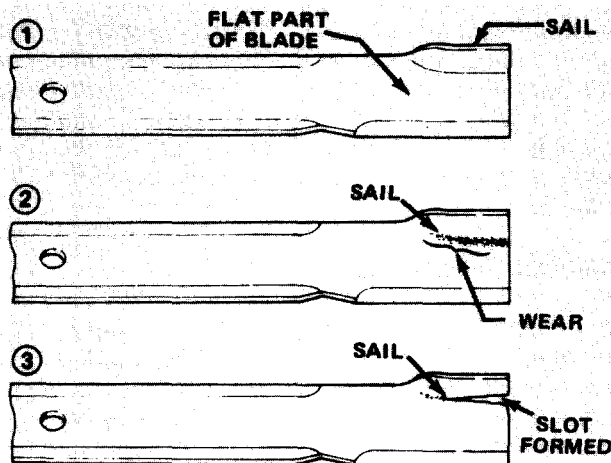


Figure 10



DANGER

If blade is allowed to wear, a slot will form between the sail and flat part of the blade (Fig. 10-3). Eventually a piece of the blade may break off and be thrown from under the housing, possibly resulting in serious injury to yourself or bystander.

2. Inspect cutting edges of all blades. Sharpen the cutting edges if they are dull or nicked. Sharpen only the top of the cutting edge and maintain the original cutting angle to make sure of sharpness (Fig. 11). The blade will remain balanced if same amount of metal is removed from both cutting edges.

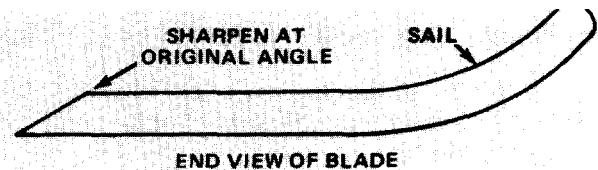


Figure 11

Note: Remove the blades and sharpen them on a grinder: refer to Removing Cutter Blade, steps 1 and 2, page 9. After sharpening the cutting edges, reinstall blade with anti-scalp cup, lockwasher and bladebolt. Blade sails must be on top of blade. Tighten to 85-110 ft-lb.

CORRECTING CUTTING UNIT MISMATCH

If one cutter blade cuts lower than the other, correct as follows:

1. Check to make sure front height-of-cut pins are resting properly on frame cushions (Fig. 14).
2. Raise height-of-cut to the 3½" (89 mm) or 4 in. (102 mm) position (Fig. 14): refer to Adjusting Height-Of-Cut, page 6.
3. Rotate blades so tips line up with one another. Tip of the adjacent blade must be within 1/8 in. (3 mm) of each other. If tips are not within 1/8 in. (3 mm) of each other, proceed to step 7 and add shims between spindle housing and bottom of cutting unit.
4. Position blades in the "A" position (Fig. 13) and measure from level surface to the bottom of the tip end of each blade (Fig. 13).
5. Note measurement attained at "A", rotate blades to "B" position (Fig. 12), measure distance of blades to level surface and note dimensions (Fig. 13).
6. Rotate blades to "C" position, measure and note distance measured (Fig. 12, 13).
7. Compare measurements at various positions. All dimensions must be equal within 3/16 in. (5 mm) from one another. The difference between dimensions must not exceed 3/16 in. (5 mm). If difference exceeds 3/16 in. (5 mm), proceed to step 8 and 9 and add shims between spindle housing and bottom of cutting unit.

CUTTING UNIT MAINTENANCE

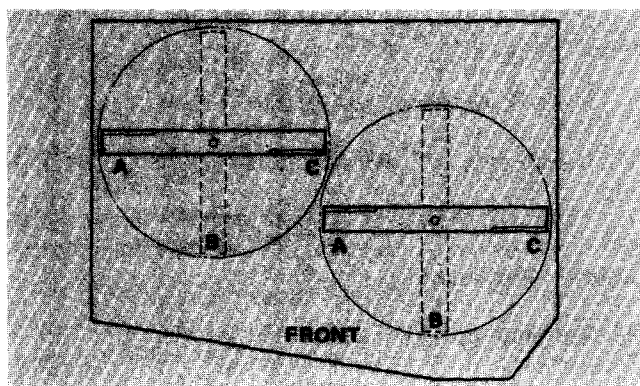


Figure 12

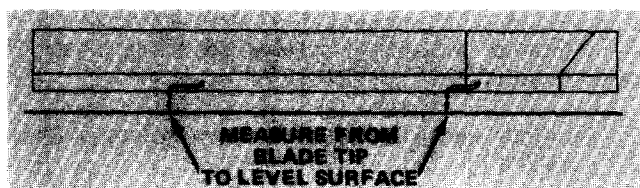


Figure 13

8. Remove capscrews, flatwashers, lockwashers and nuts from outer spindle in the area where shims must be added. To raise or lower the blade, add a shim, Part No. 3256-24, between spindle housing and bottom of cutting unit. Continue checking alignment of blades and adding shims until tips of blades are within the required dimension.

9. Equalize side to side measurements as follows:

- A. Cutting units usually operated at 1 to 2 in. (25 to 51 mm) height-of-cut should have the low side of the cutting unit raised. Remove the Klip ring securing castor wheel on low end (Fig. 14) and remove castor assembly.

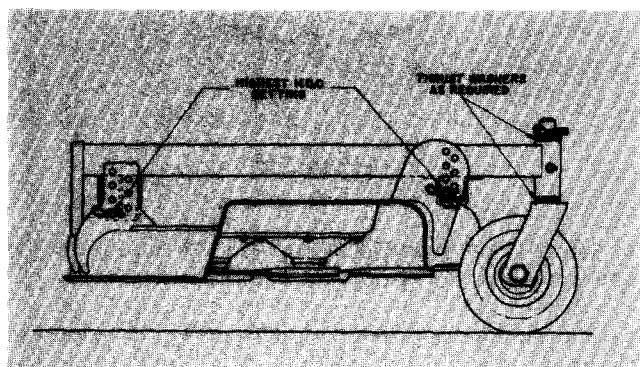


Figure 14

- B. Transfer one thrust washer from top side of castor shaft to lower side, install castor assembly and compare blade height of all blades; refer to items 3 through 7. Continue adding thrust washers if height still does not meet requirements.

- C. If cutting unit is operated at 2 to 4 in. (51 to 102 mm) height-of-cut, lower the high side of cutting unit. Remove Klip ring of castor at high end of unit and remove castor assembly (Fig. 14).
- D. Transfer one thrust washer from lower side of castor shaft to top side, install assembly and compare blade height of all blades; refer to items 3 through 7. Repeat procedure if height still does not meet requirements.
- E. If height is within specified dimension, install Klip ring, set height-of-cut to proper height and resume operation.

REPLACING GRASS DEFLECTOR

1. Remove two capscrews, locknuts and springs securing deflector mounts to pivot brackets (Fig. 15).

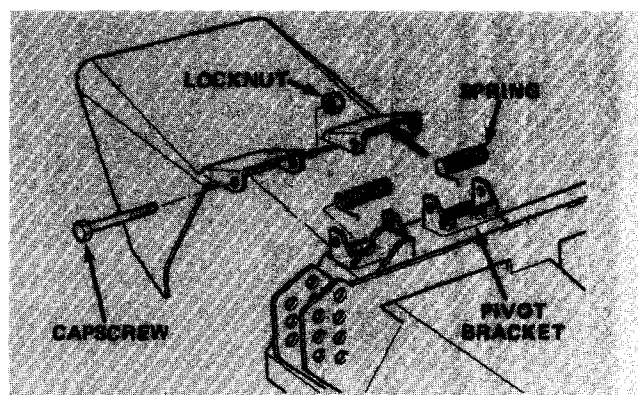


Figure 15

2. To remove the pivot brackets, remove carriage bolts, lockwashers and nuts (Fig. 15).
3. Reinstall pivot brackets on top of discharge opening with carriage bolts, lockwashers and nuts. Head of carriage bolts must be on inside of cutting unit.
4. Position deflector mounts on outside of pivot brackets and secure parts together with capscrews, locknuts and springs. Both locknuts must face each other. Tighten locknuts until they are flush against deflector pivots. Lift deflector and allow it to drop to check spring tension. Deflector must be held firmly in full downward position by spring tension. Correct if necessary.

REPLACING DRIVE BELT

The blade drive belt, tensioned by the spring loaded idler, is very durable. However, after many

CUTTING UNIT MAINTENANCE

hours of use, the belt will show signs of wear. Signs of a worn belt are: squealing when belt is rotating, blades slipping when cutting grass, frayed edges, burn marks and cracks. Replace the belt if any of these conditions are evident.

1. Remove mounting screws securing cover to top of cutting unit.
2. Loosen jam nuts on each adjusting shaft and remove engine to deck drive belt (Fig. 16).

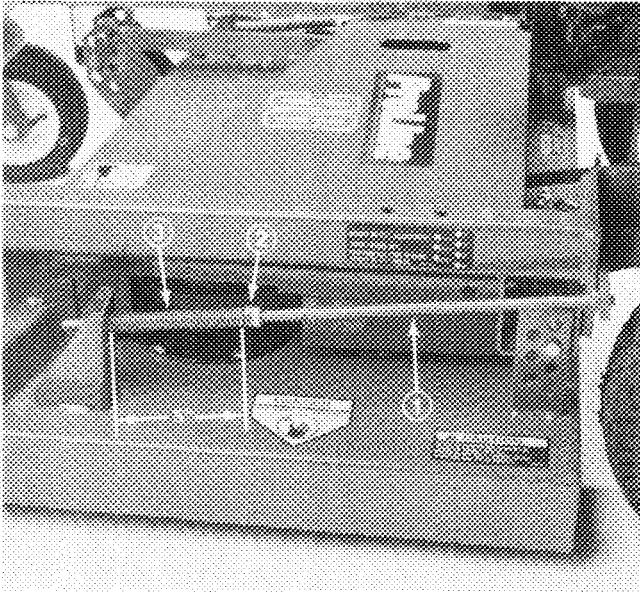


Figure 16

1. Adjusting shaft
2. Jam nuts
3. Spring

3. Unhook idler arm spring to relieve deck belt tension (Fig. 17) and remove worn belt from pulleys.

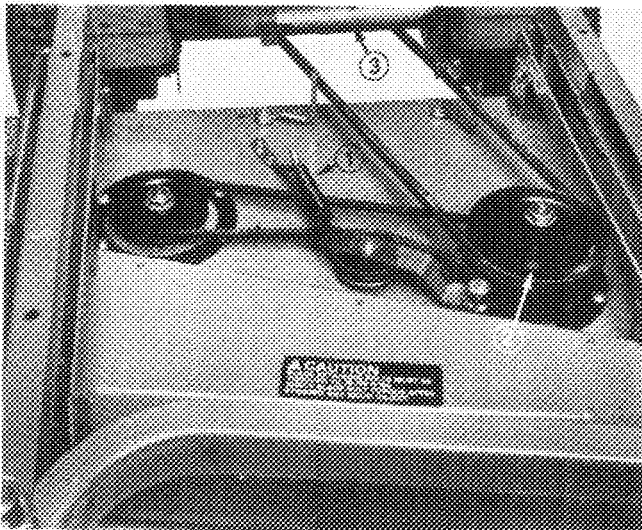


Figure 17

1. Idler spring
2. Drive pulley
3. Clutch pulley (not shown)

4. Install new belt around spindle pulleys and idler pulley (Fig. 17).
5. Rehook idler arm spring (Fig. 17).
6. Install belt to drive and clutch pulley (Fig. 17).
7. Tighten jam nuts on adjusting shafts until springs are compressed to a length of 5", measured between washer and bushing.
8. Reinstall cover.

REPLACING SPINDLE PULLEY

1. Remove mounting screws securing cover to cutting unit.
2. Remove drive belts, refer to Replacing Drive Belt, page 11.
3. Remove six carriage bolts and flange nuts holding spindle housing assembly and support ring against cutting unit (Fig. 18). Slide spindle housing assembly out bottom of cutting unit.

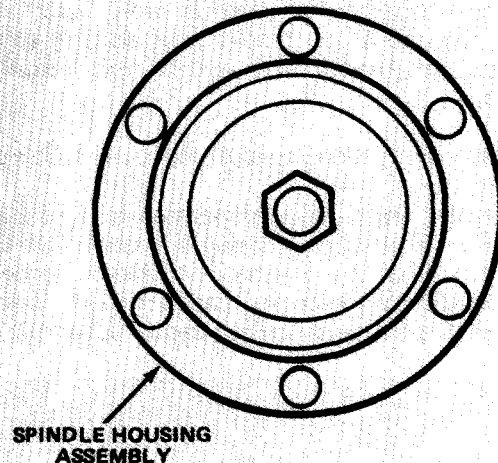


Figure 18

4. Remove nut and flatwasher retaining pulley on spindle shaft. Pull pulley off shaft.
5. Check splines on inside of pulley. If splines are damaged, replace the pulley. When installing a new pulley, check the splines on end of spindle shaft. Splines on the spindle shaft must not be damaged. If splines are damaged, the spindle shaft must be replaced before a new pulley is installed.
6. Install new pulley on spindle shaft with flatwasher and locknut. Tighten nut to 100-120 ft-lb. Periodically check to maintain proper torque.

CUTTING UNIT MAINTENANCE

7. Slide pulley end of spindle housing assembly through hole in cutting unit, and loop belt around pulley and idler. Mount spindle assembly in place with support ring and six carriage bolts and flange nuts.

8. Install belts and cover.

REMOVING SPINDLE AND BEARINGS FROM SPINDLE HOUSING

1. Remove mounting screws securing cover to cutting unit.

2. Remove drive belts, refer to Replacing Drive Belt, page 11.

3. Remove six carriage bolts and flange nuts holding spindle housing assembly and support ring against cutting unit (Fig. 19). Slide spindle housing assembly out bottom of cutting unit.

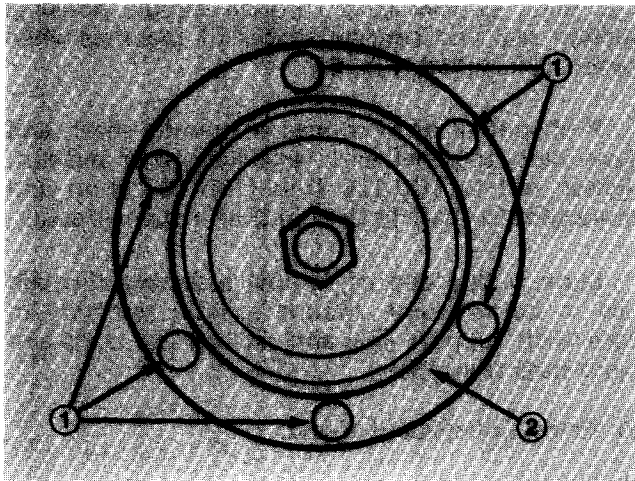


Figure 19

1. Carriage bolts 2. Support ring

4. Remove nut and flatwasher retaining spindle pulley on spindle shaft. Slide pulley off shaft.

5. If spindle shaft will be replaced, remove blade-bolt, lockwasher, anti-scalp cup, and blade from spindle shaft (Fig. 20). Otherwise, the blade and its other associated parts may be left on the spindle shaft.

6. Press spindle shaft out of spindle housing (Fig. 20), using an arbor press. Bearing spacer (Fig. 20) remains on spindle shaft as shaft is being removed.

7. The seals (Fig. 20) will be removed next; however, notice the lip of the seal. The lip of the upper seal faces inward, and the lip of the lower seal faces outward. Therefore, new seals must always be installed with the lip facing in the proper direction. Now remove the seals from spindle housing.

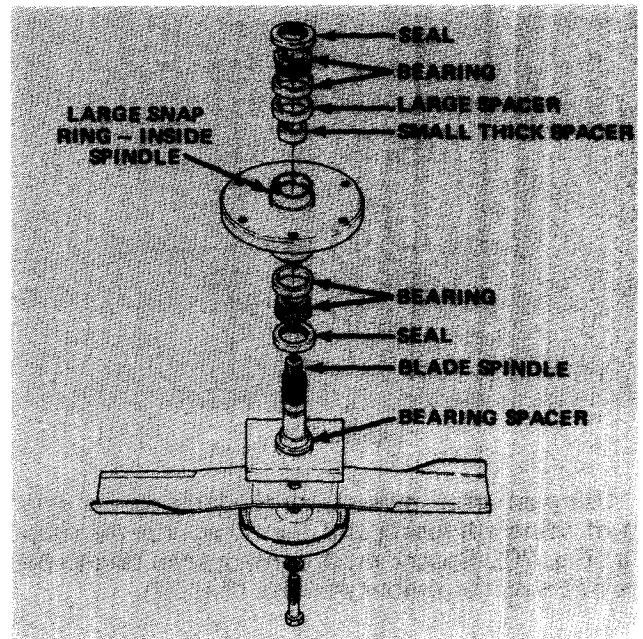


Figure 20

8. Allow bearings and small thick spacer to fall out of spindle housing (Fig. 21).

9. Using a punch and hammer, drive both bearing cups (Fig. 20) out of spindle housing. Also drive large spacer (Fig. 20) out of housing.

10. A large snap ring is still inside the spindle housing and it should remain there because it cannot be easily removed.

IMPORTANT: If new bearings will be installed into a used spindle housing that has original snap ring installed, discard the large snap ring that came with the bearings because it is not needed. However, new bearings with matched spacer and snap ring must always be installed when spindle housing is being replaced. Replacement bearings are sold only with a matched snap ring and spacers set. The parts cannot be purchased separately.

INSTALLING SPINDLE, BEARINGS AND SEALS INTO SPINDLE HOUSING

IMPORTANT: If a new spindle housing is being used, new bearings and the matched snap ring set must be installed: refer to step 1. Never use old bearings, spacer and snap ring with a new spindle housing. By contrast, use only new bearings w/cups and spacer — not large snap ring because it is not required — when installing bearings into a used spindle housing that still has snap ring installed: refer to step 2.

1. Install large snap ring into groove in bore of spindle housing (Fig. 21). Assure snap ring is seated in the groove.

CUTTING UNIT MAINTENANCE

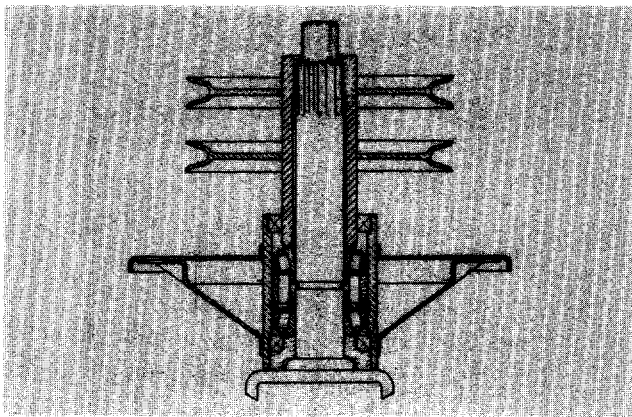


Figure 21

2. Using an arbor press, push the large spacer into top of spindle housing and tightly against the snap ring (Fig. 20). Spacer must contact snap ring to be sure of correct assembly of parts (Fig. 21).

3. Thoroughly oil cups and using an arbor press, push bearing cups — smallest ID first — into top and bottom of spindle housing (Fig. 20). Top bearing cup must contact spacer that was installed in step 2, and bottom bearing cup must contact snap ring to be sure of correct assembly of parts (Fig. 21). Insure assembly is correct by supporting the first cup and pressing the second against it (Fig. 22).

4. Apply a film of grease on lip of both seals; then install bearing and seal into bottom of spindle housing (Fig. 21). Remember though, the bottom seal must have the lip facing outward (Fig. 20) not toward inside of spindle housing.

5. Slide small, thick spacer into spindle housing (Fig. 20). Then, install bearing and seal into top of spindle housing. Lip of the seal must face outward.

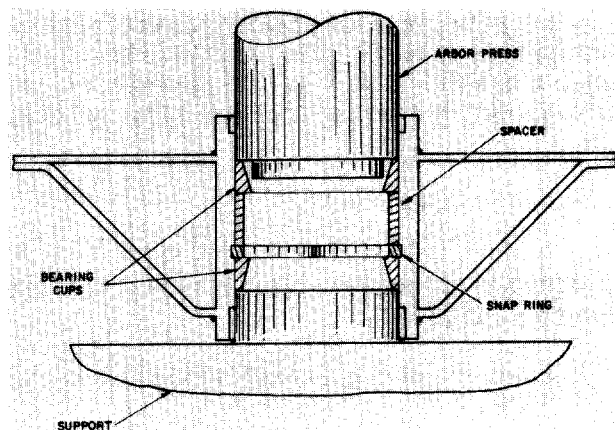


Figure 22

6. Check spindle shaft, make sure it is free of burrs and nicks that could possibly cut the seals and thoroughly lubricate shaft and seal lips.

7. Slide bearing spacer onto spindle shaft. Carefully slide spindle shaft through spindle housing. Bottom seal and bearing spacer fit together when spindle is installed (Fig. 21).

8. Push pulley onto splines of spindle shaft, and retain parts together with large flatwasher and nut. Tighten nut to 100-120 ft-lb (136-163 N·m) and rotate spindle shaft to be sure shaft rotates freely.

9. Slide pulley end of spindle assembly through hole in cutting unit. Mount spindle assembly in place with support ring and six carriage bolts and flange nuts (Fig. 19).

10. Reinstall belts and adjust.

11. Reinstall cover.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The cutting unit has two identification numbers: a model number and a serial number. These numbers are stamped into a plate. The cutting unit identification plate is located behind the right front caster wheel (Fig. 23). In any correspondence concerning the cutting unit, supply the model and serial numbers to assure correct information and replacement parts are obtained.

To order replacement parts from an authorized TORO Distributor, supply the following information:

1. Model and serial numbers of the cutting unit.
2. Part number, description and quantity of parts desired.

Note: Do not order by reference number if a parts catalog is being used; use the part number.



Figure 23

1. Model and serial number

MAINTENANCE RECORD

[illegible]

The Toro Promise

A ONE YEAR LIMITED WARRANTY

The Toro Company promises to repair your TORO Product if defective in materials or workmanship. The following time periods from the date of purchase apply:

Commercial Products 1 Year

The cost of parts and labor are included, but the customer pays the transportation costs on walk rotary mowers with cutting unit widths of less than 25".

If you feel your TORO product is defective and wish to rely on The Toro Promise, the following procedure is recommended:

1. Contact your Authorized TORO ProLine Service Dealer (the Yellow Pages of your telephone directory is a good reference source).
2. The TORO ProLine Service Dealer will advise you on the arrangements that can be made to inspect and repair your product.
3. The TORO ProLine Service Dealer will inspect the product and advise you whether the product is defective and, if so, make all repairs necessary to correct the defect without an extra charge to you.

If for any reason you are dissatisfied with the distributor's analysis of the defect or the service performed, you may contact us.

Write:

TORO Consumer Products Service Department
8111 Lyndale Avenue South
Minneapolis, Minnesota 55420

The above remedy of product defects through repair by an Authorized TORO ProLine Service Dealer is the purchaser's sole remedy for any defect.

THERE IS NO OTHER EXPRESS WARRANTY. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This Warranty applies only to parts or components which are defective and does not cover repairs necessary due to normal wear, misuse, accidents, or lack of proper maintenance. Regular, routine maintenance of the unit to keep it in proper condition is the responsibility of the owner.

All warranty repairs reimbursable under the Toro Promise must be performed by an Authorized TORO ProLine Service Dealer using Toro approved replacement parts.

Repairs or attempted repairs by anyone other than an Authorized TORO ProLine Service Dealer are not reimbursable under the Toro Promise. In addition, these unauthorized repair attempts may result in additional malfunctions, the correction of which is not covered by warranty.

THE TORO COMPANY IS NOT LIABLE FOR INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE USE OF THE PRODUCT INCLUDING ANY COST OR EXPENSE OF PROVIDING SUBSTITUTE EQUIPMENT OR SERVICE DURING PERIODS OF MALFUNCTION OR NON-USE.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their TORO Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason

you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.