



Form No. 3375-262 Rev C

Count on it.

Parts Catalog

TimeMaster 76cm Lawn Mower

Model No. 20975—Serial No. 313000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquefied Petroleum Gas

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head

Contents

Deck and Frame Assembly 4

Belt, Spindle and Blade Assembly 5

Side Discharge Chute Assembly 6


Bag Assembly 7

Engine and Pulley Assembly 8

Front Wheel and Axle Assembly 9

Transmission, Rear Wheel and Height-of-Cut Assembly 10


Handle Assembly 11

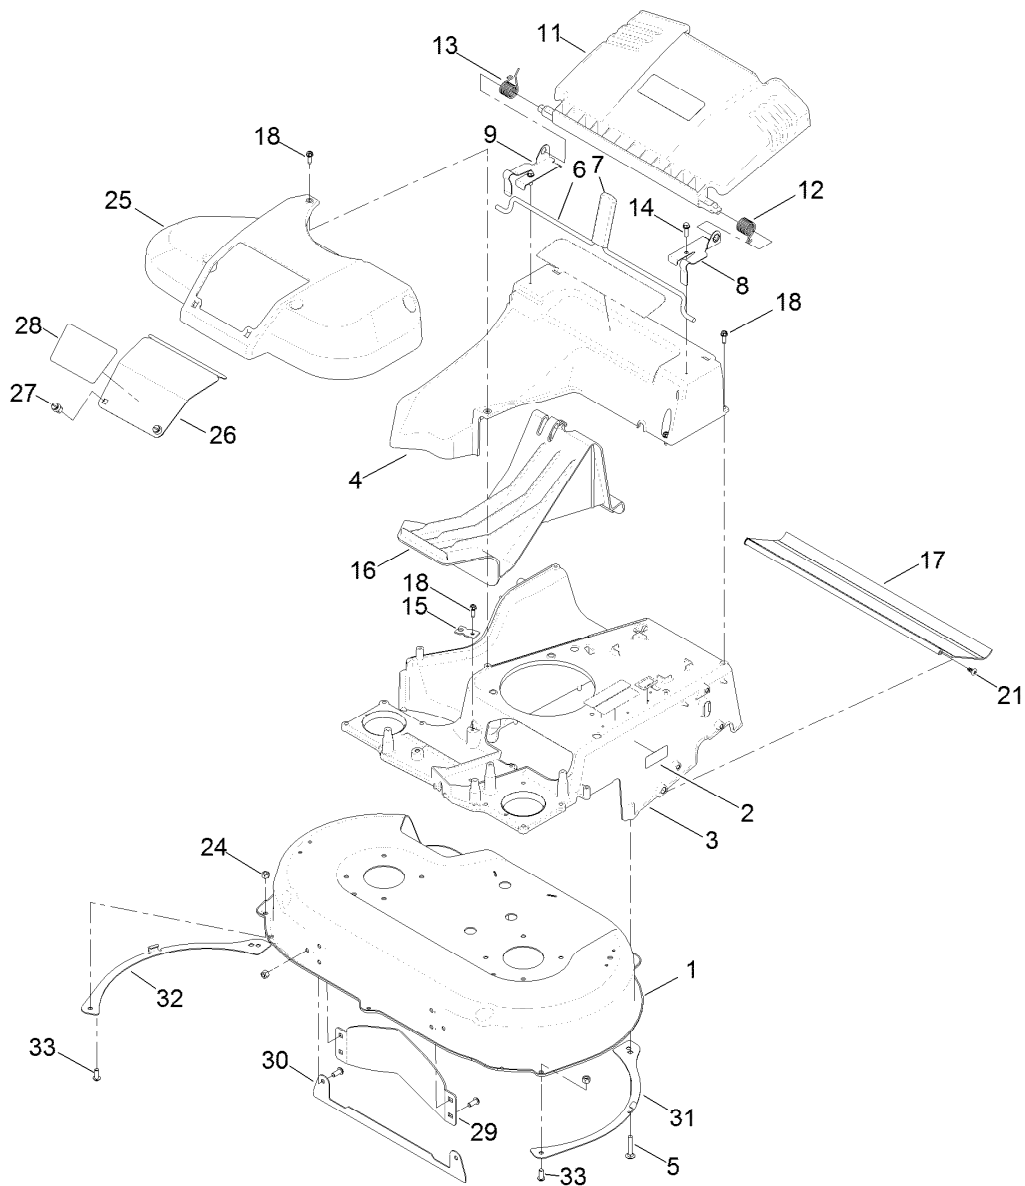

Deck and Frame Assembly


Ref.	Part Number	Qty.	Description
1	125-2534	1	Housing ASM
2	121-5684	1	Decal-Location, Service Dealer
3	121-9198-01	1	Frame
4	120-3336	1	Chute
5	3230-5	2	Screw-CARR
6	120-3344	1	Rod-Release, Handle
7	120-7018	1	Grip-Lever
8	121-9114	1	Bracket-Door, LH
9	121-9115	1	Bracket-Door, RH
11	120-7048	1	Rear Deflector ASM
12	115-2859	1	Spring-Torsion
13	114-7924	1	Spring-Torsion
14	46-8091	2	Screw-HWH
15	107-7497	1	Bracket-Cable, Traction

Ref.	Part Number	Qty.	Description
16	120-5225	1	Plug-Mulch
17	120-6241	1	Shield-Trailing
18	49-2040	9	Screw-HWHTF
21	117-1092	2	Screw-PTH
24	3296-29	4	Nut-Lock, NI
25	121-5810	1	Cover-Belt
26	121-5793-03	1	Door-Access
27	121-5840	2	Fastener-Quarter Turn
28	125-2507	1	Decal-Access Panel
29	116-5588-01	1	Baffle-Flow Control
30	125-5081-01	1	Plate-Deck
31	120-7085-03	1	Skid-LH
32	120-9488-03	1	Skid-RH
33	3274-55	2	Screw-HSBH

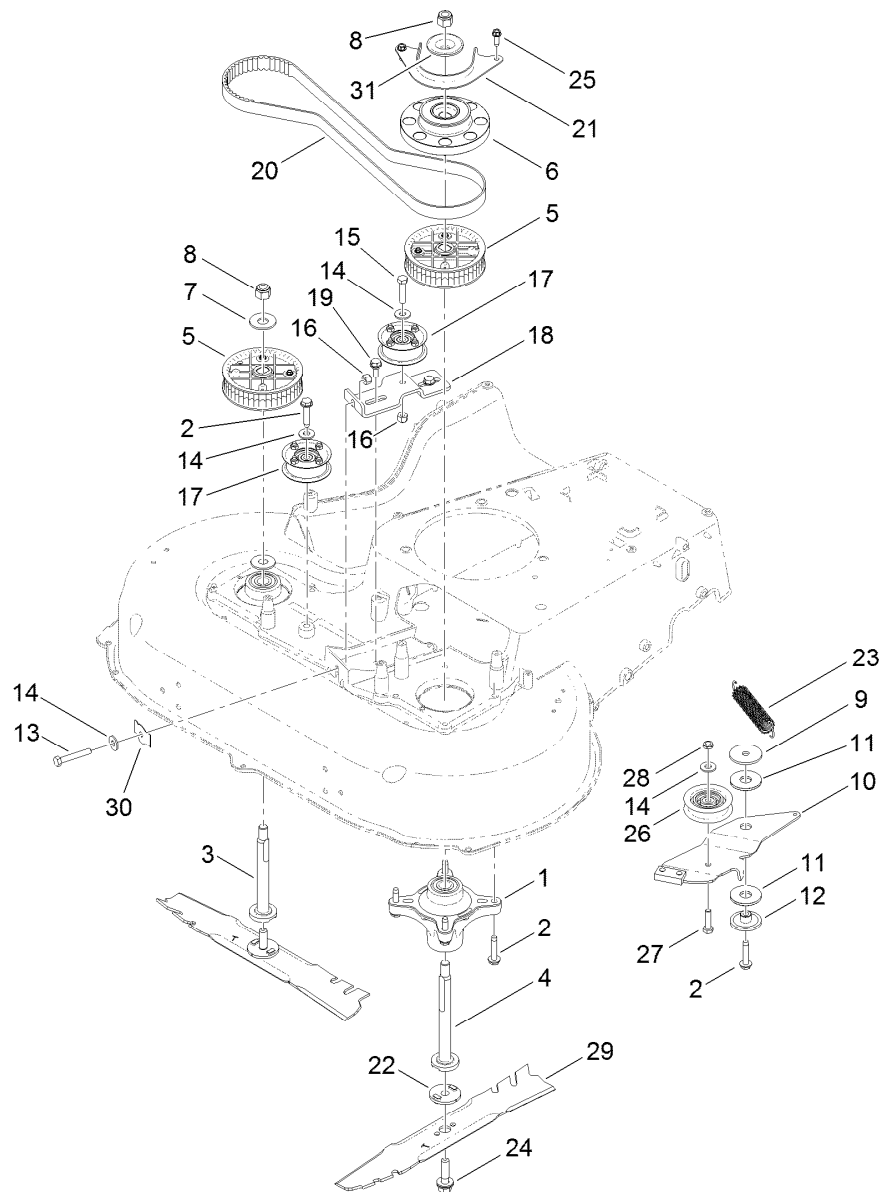


Belt, Spindle and Blade Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	120-6234	2	Spindle ASM	17	121-5763	2	Pulley
2	32144-57	10	Screw	18	120-3348	1	Bracket-Idler
3	120-5234	1	Shaft-Spindle	19	120-7024	2	Screw-Shoulder, HHF
4	120-5235	1	Shaft-Spindle	20	120-3335	1	Belt-Synchronous
5	121-9100	2	Sprocket	21	120-5245-03	1	Guide-Belt, Spindle
6	120-3334	1	Pulley-Brake, Spindle	22	120-5236	2	Adapter-Blade
7	109-9505	1	Washer-Spring	23	121-5808	1	Spring-Extension, Brake
8	3296-19	2	Nut-Hex	24	125-2466	2	Bolt-Blade
9	63-7400	1	Washer-Rebound	25	49-2040	2	Screw-HWHTF
10	120-6242	1	Arm-Brake	26	120-7082	1	Pulley-Idler
11	121-2305	2	Washer-Friction, Composite	27	322-6	1	Screw-HH
12	120-9490	1	Spacer	28	3296-47	1	Nut-Lock, NI
13	9114524	1	Bolt-TAP, HH	29	120-9500-03	2	Blade-15.4
14	3256-3	4	Washer-Flat	30	121-2336	1	Spring-Flat
15	322-7	1	Screw-HH	31	125-2544	1	Washer-Cup
16	3296-29	2	Nut-Lock, NI				

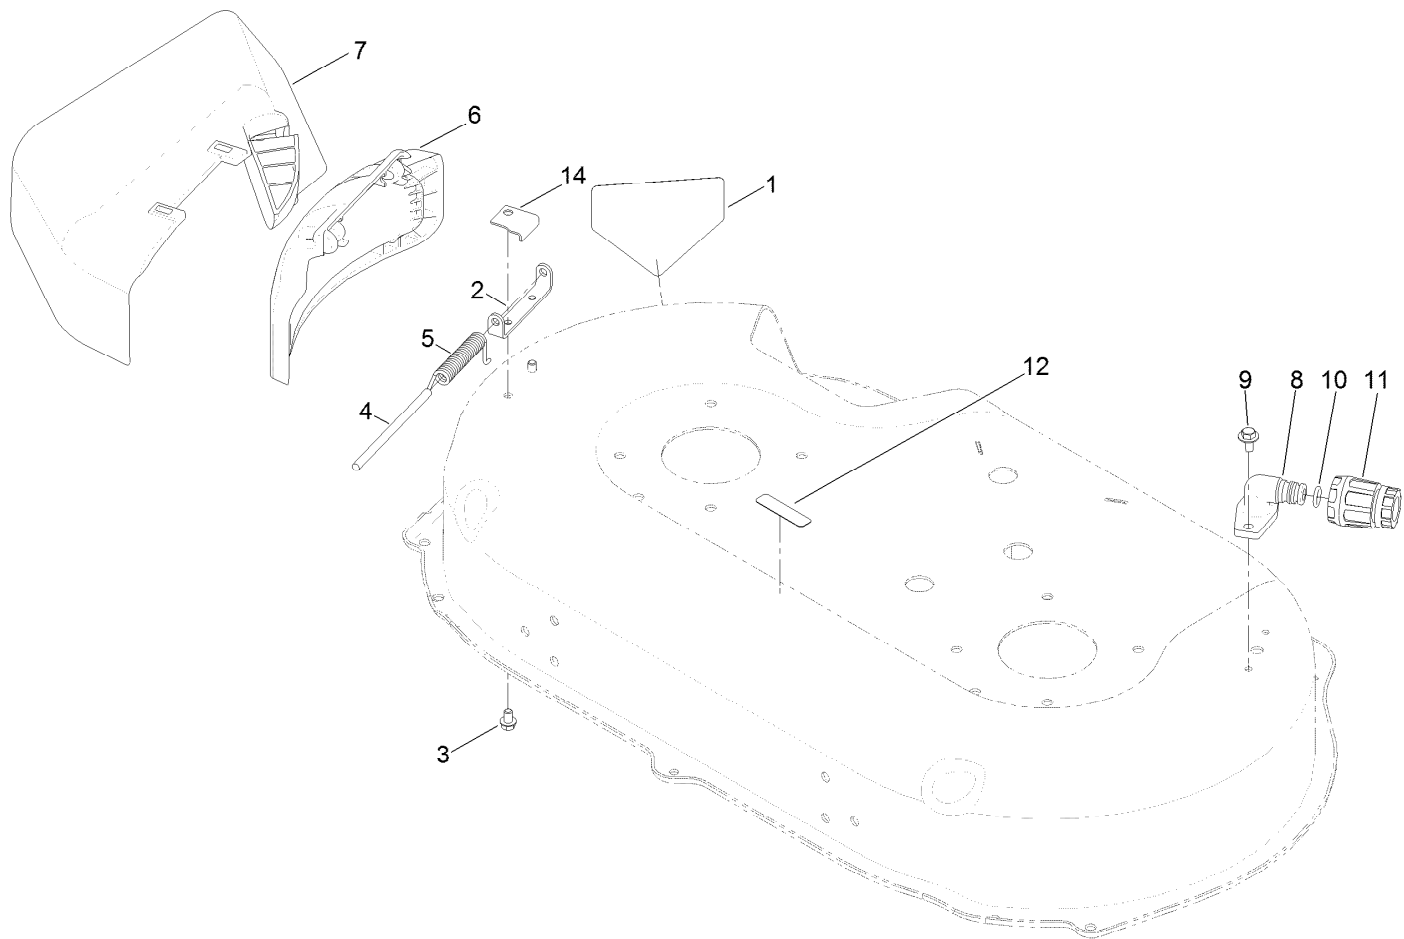


Side Discharge Chute Assembly

Ref.	Part Number	Qty.	Description
1	112-8760	1	Decal-Danger
2	112-6416	1	Bracket-Cover
3	99-8445	2	Screw-HWH
4	99-5291	1	Rod-Cover
5	121-5843	1	Spring-Torsion, Cover
6	121-9197	1	Deflector-Side
7	125-5084	1	Side Discharge Chute ASM
8	95-2747	1	Fitting-Washout
9	46-8560	2	Screw-HHFTF
10	46-6290	1	O-Ring, Seal
11	95-3270	1	Connector-Hose
12	120-9570	1	Decal-Warning
14	121-5842	1	Plate-Spring

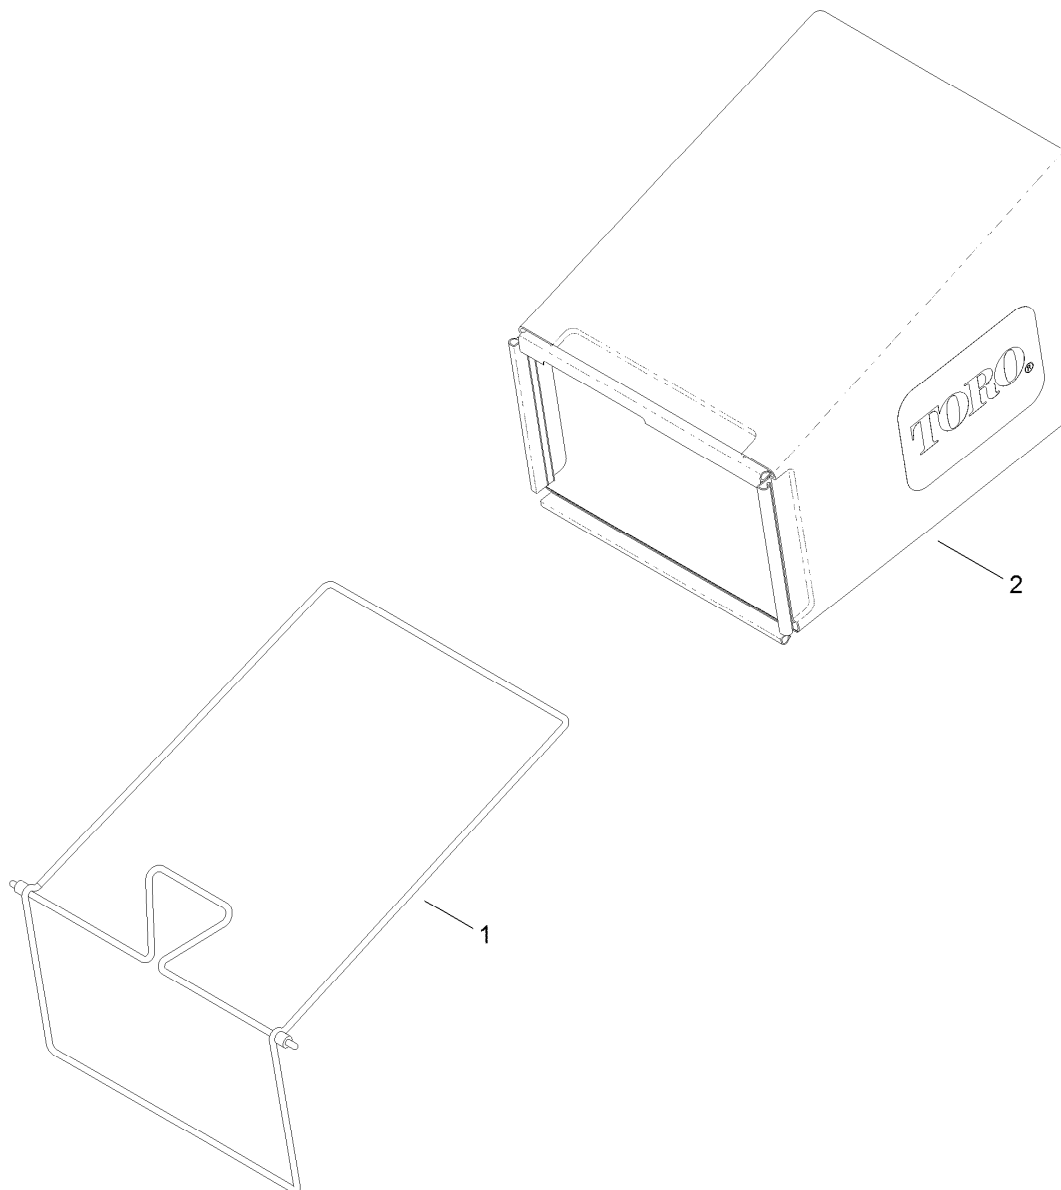

Bag Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-5766-03	1	Frame-Bag
2	121-5770	1	Bag-Grass

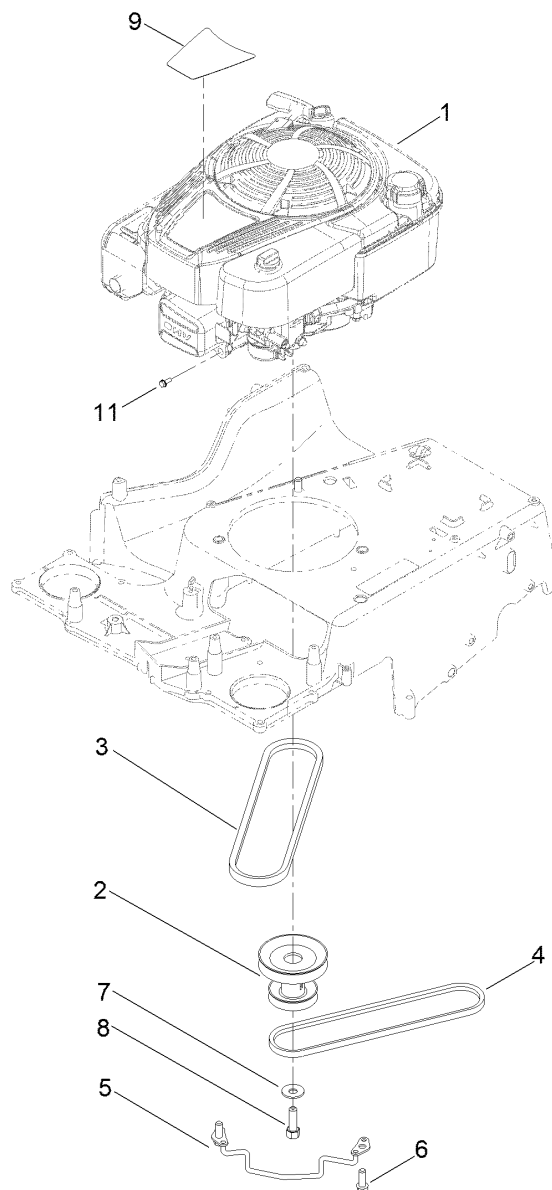


Engine and Pulley Assembly

Ref.	Part Number	Qty.	Description
1		1	Engine-Briggs, 121S020001F1 ●■
2	120-3333	1	Pulley-Engine
3	121-5765	1	V-Belt
4	120-9470	1	V-Belt, Traction
5	120-7077	1	Guide-Belt
6	95-1726	3	Screw-Taptite
7	3290-465	1	Washer-Belleville
8	26-0671	1	Screw-HH
9	125-2506	1	Decal-Shroud
11	32144-1	1	Screw-Taptite


● Not serviced separately

■ Obtain parts from www.briggsandstratton.com

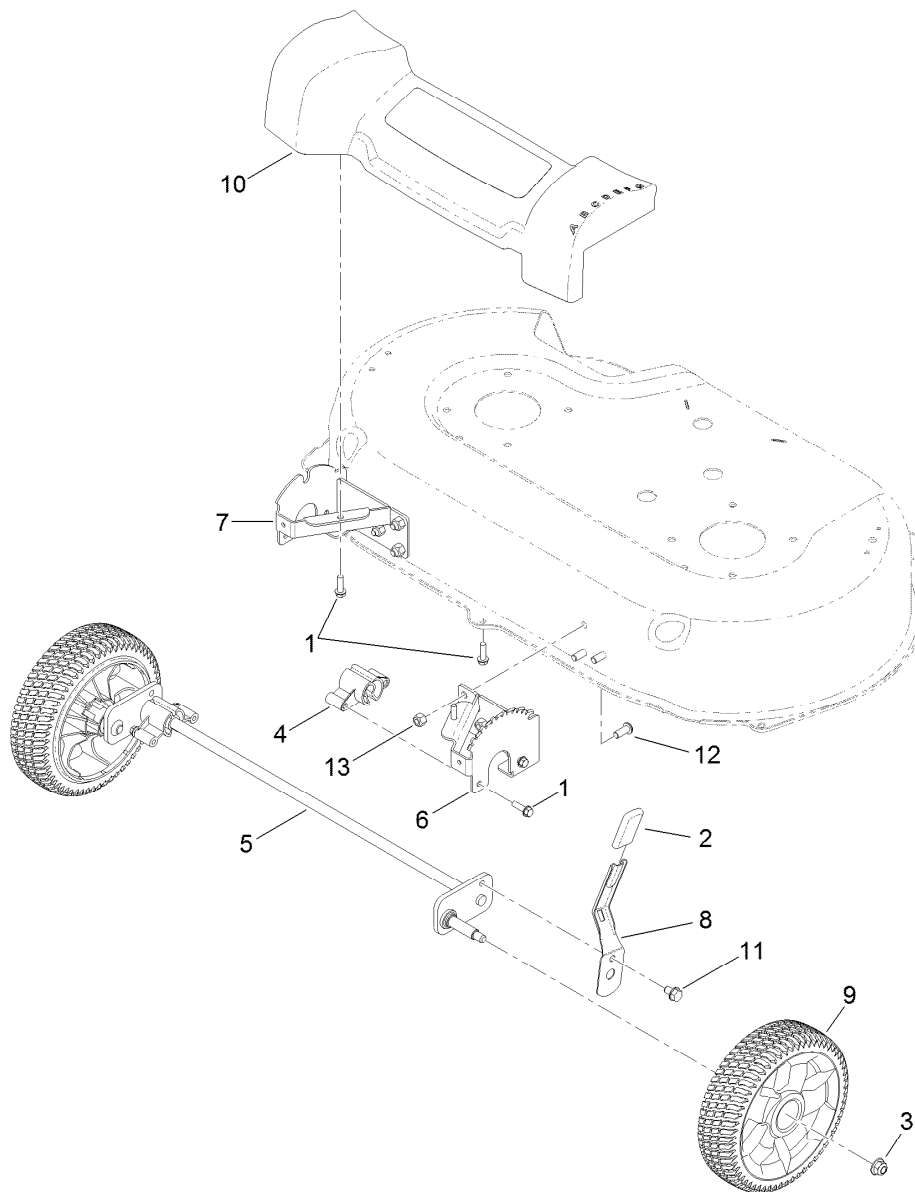

Front Wheel and Axle Assembly


Ref.	Part Number	Qty.	Description
1	46-8091	7	Screw-HWH
2	120-9535	1	Grip-Lever
3	104-8301	2	Nut-Flange, NI
4	125-2495	2	Bushing-Pivot, Front
5	125-5061	1	Axle-Front
6	120-7037-03	1	Plate-HOC, LH
7	120-7038-03	1	Plate-HOC, RH
8	120-7043	1	Arm-Spring
9	125-2510	2	8 Inch Wheel ASM
10	125-5027	1	Front Cover ASM
11	700057	1	Screw-HWH
12	3274-55	6	Screw-HSBH
13	3296-29	6	Nut-Lock, NI

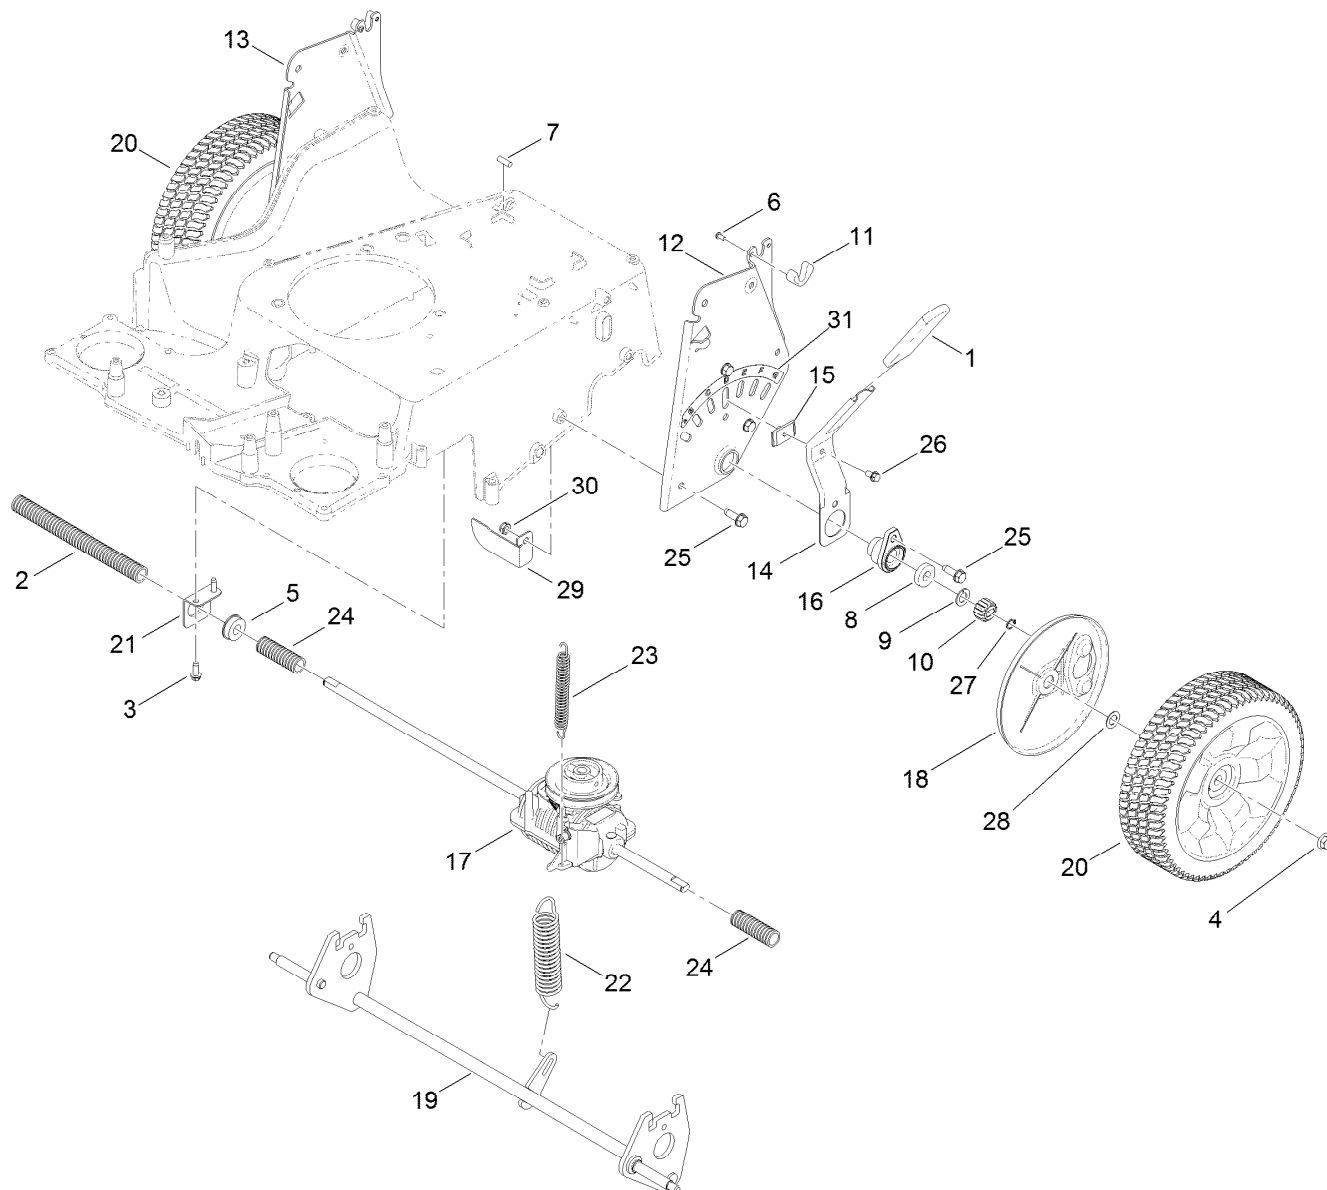

Transmission, Rear Wheel and Height-of-Cut Assembly

Ref.	Part Number	Qty.	Description
1	1-633295	1	Grip-Lever, Lift
2	121-5799	1	Conduit-Convolute
3	49-2040	2	Screw-HWHTF
4	104-8301	2	Nut-Flange, NI
5	104-8699	1	Bearing-Ball
6	105-9437	2	Screw-PPH
7	106-5681	1	Pin-Stop
8	109-8020	2	Bearing-Ball
9	110-7191	2	Washer-Thrust
10	110-9417	2	Gear-Pinion, 15T
11	115-8406	2	Anchor-Bag
12	120-3342-03	1	Plate-HOC, LH
13	120-3343-03	1	Plate-HOC, RH
14	120-5208	1	Arm-Spring, Rear
15	120-5209	1	Key-Springarm
16	120-5210	2	Retainer-Bearing

Ref.	Part Number	Qty.	Description
17	120-5211	1	Transmission-Msv2 Gt
18	120-6233	2	Cover-Gear
19	125-5062	1	Axle-Rear
20	125-2509	2	10 Inch Wheel Gear ASM
21	120-7008	1	Mount-Bearing
22	120-7026	1	Spring-Extension
23	120-7027	1	Spring-Extension
24	121-5800	2	Conduit-Convolute
25	701243	8	Screw-HWHTF
26	32144-4	1	Screw-HWH
27	32151-61	2	Ring-Retaining
28	36-4780	2	Washer-Plain
29	121-5821	1	Bracket-Stop
30	3296-47	1	Nut-Lock, NI
31	125-2497	1	Decal-HOC, Rear

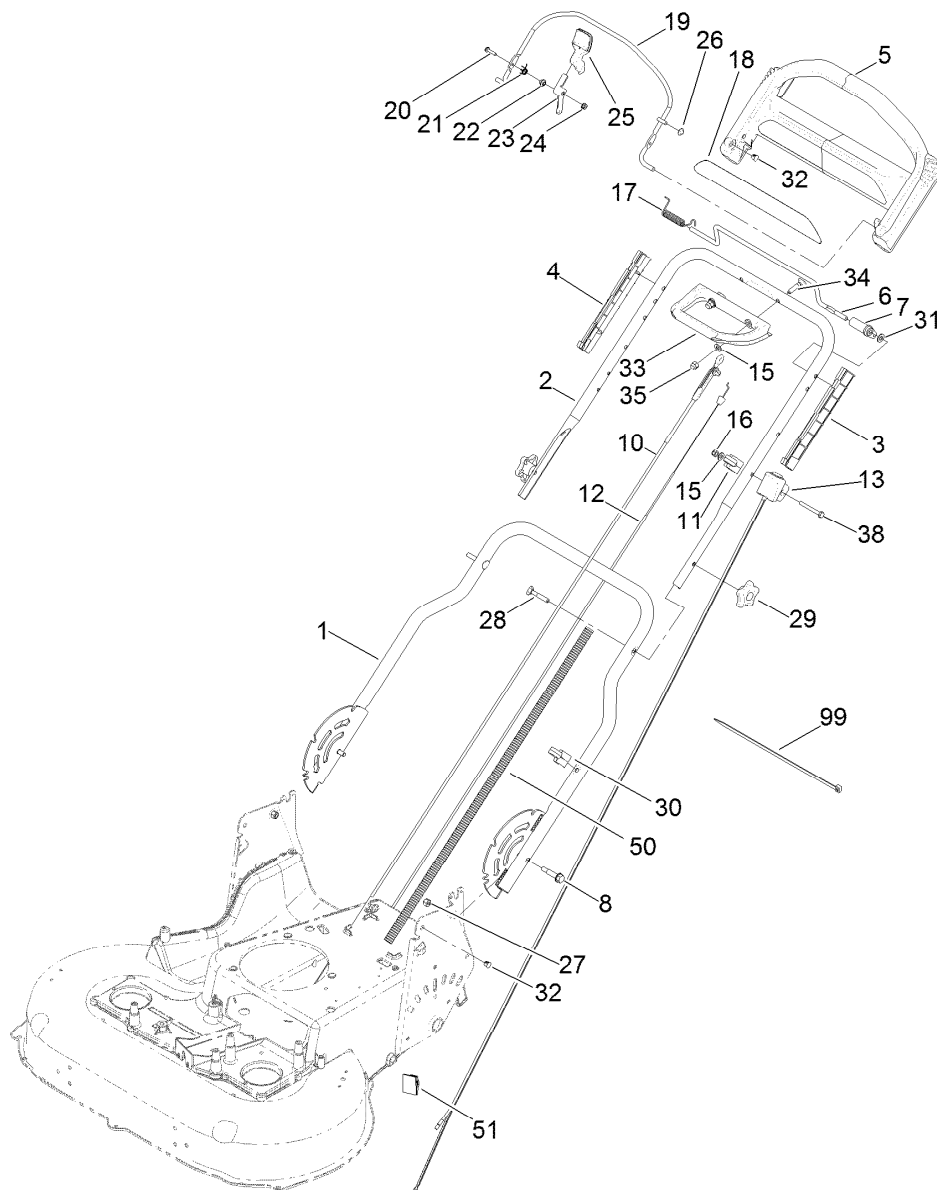

Handle Assembly

Ref.	Part Number	Qty.	Description
1	125-5058-05	1	Handle-Lower
2	121-5783-05	1	Handle-Upper
3	105-6842	1	Guide-LH
4	105-6841	1	Guide-RH
5	104-8678	1	Handle-Control
6	99-1588	1	Bar-Control, Traction
7	99-1589	1	Lever-Traction
8	120-7025	2	Bolt-Shoulder, HHF
10	120-6243	1	Cable-Brake, BBC
11	99-5239	1	Anchor-Cable
12	120-6244	1	Cable-Traction
13	117-5975	1	Switch Housing ASM
15	3256-1	1	Washer-Flat
16	3296-73	1	Nut-Lock, NI
17	121-9118	1	Spring-Torsion
18	120-3911	1	Decal-Ads, Handle
19	108-3788-03	1	Bail-Brake
20	106-9169	1	Screw-HWH
21	107-7462	1	Spring-Torsion

Ref.	Part Number	Qty.	Description
22	107-7463	1	Spacer
23	106-6802	1	Lever
24	32128-17	1	Nut-Lock, Flange
25	112-8884	1	Knob-BBC
26	3290-337	1	Nut-Speed
27	3296-29	2	Nut-Lock, NI
28	92-2260	2	Screw-Handle
29	117-5976	2	Knob-Handle
30	114-7988	1	Guide-Cable
31	3256-23	1	Washer-Flat
32	104-9368	3	Plug-Dome
33	120-7087	1	Handle-Assist, Traction
34	92-4095	2	Screw-Handle
35	125-5028	2	Nut-Hex, Nylon Cap
38	321-50	1	Screw-HH
50	121-5801	1	Conduit-Convolute
51	125-2545	1	Clip-Conduit
99	614249	2	Tie-Cable



Count on it.