



Count on it.

Parts Catalog

Forward Rotating Groomer Drive System-Greensmaster Flex™ 1800/2100 and eFlex® 1800/2100 Mower

Model No. 04259



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquefied Petroleum Gas

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head

Contents


Right Hand Groomer Drive Assembly 4

Right Hand Drive Sideplate Assembly 5

Right Hand Groomer Arm Assembly 6

Left Hand Support Plate Assembly No. 121-4686 7

Left Hand Groomer Arm Assembly 8

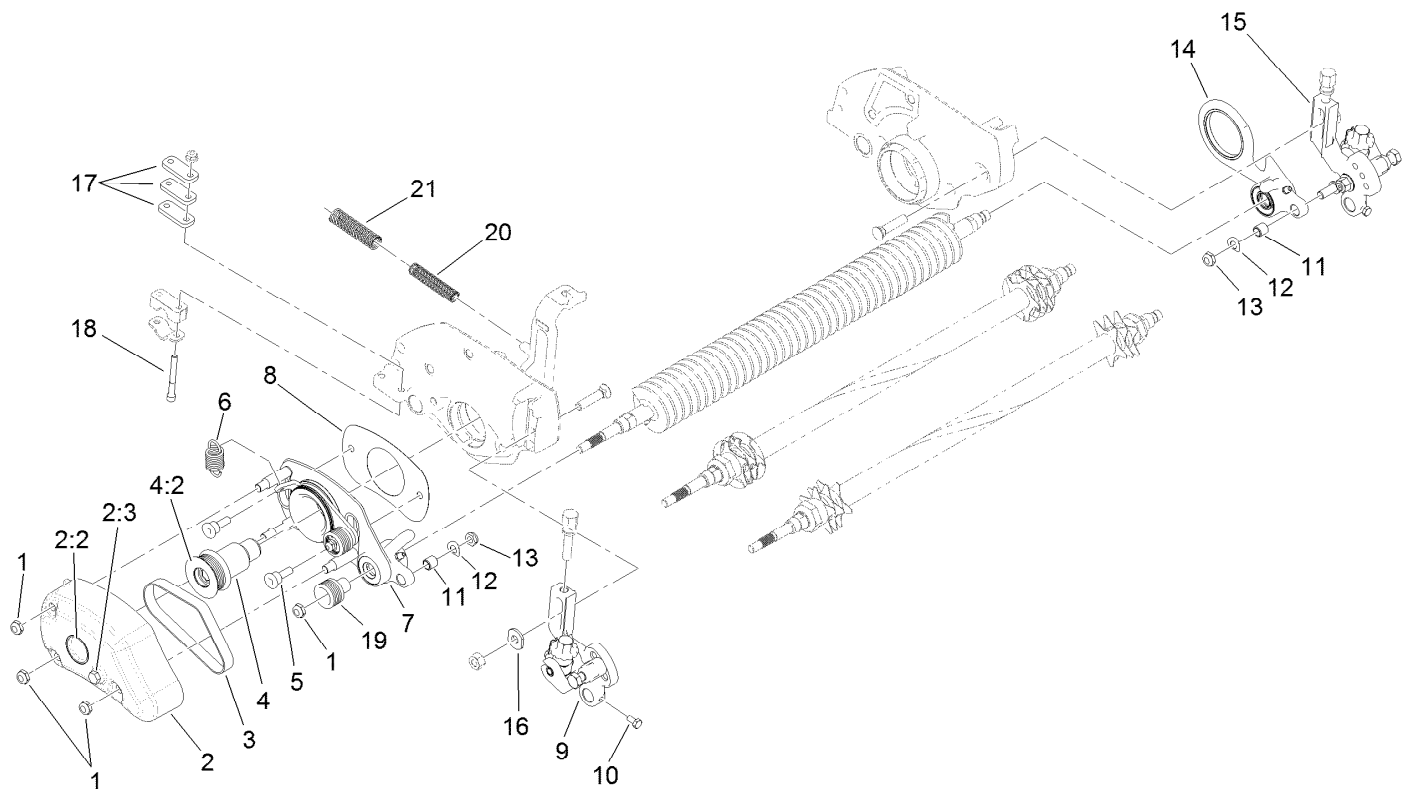


Right Hand Groomer Drive Assembly

Ref.	Part Number	Qty.	Description
1	121-4600	4	Nut-Lock, NI
2	121-4601	1	RH Drive Cover ASM
2:2	121-4609	1	Plug-Expansion
2:3	121-4610	1	Screw-HH
3	104-4705	1	Belt-Groomer
4	120-3234	1	Drive-Groomer
4:2	106-8521	1	Decal-Warning
5	119-4073	2	Bolt-Shoulder, Groomer
6	110-1700	1	Spring-Extension
7		1	RH Drive Sideplate ASM ●
8	106-8463	1	Shim-Groomer
9		1	RH Groomer Arm ASM ●


Ref.	Part Number	Qty.	Description
10	121-4604	2	Screw-HH
11	256-2	2	Bushing
12	121-4605	2	Washer-Spring
13	121-4606	2	Nut-Lock
14	121-4686	1	LH Support Plate ASM
15		1	LH Groomer Arm ASM ●
16	121-4608	2	Washer-Special
17	119-4165	6	Shim-Height, Roller
18	3274-54	4	Screw-HSH
19	115-5219	1	Pulley-Driven, Splined
20	121-4677	2	Spring-Compression
21	121-4678	2	Spring-Compression

● Not serviced separately

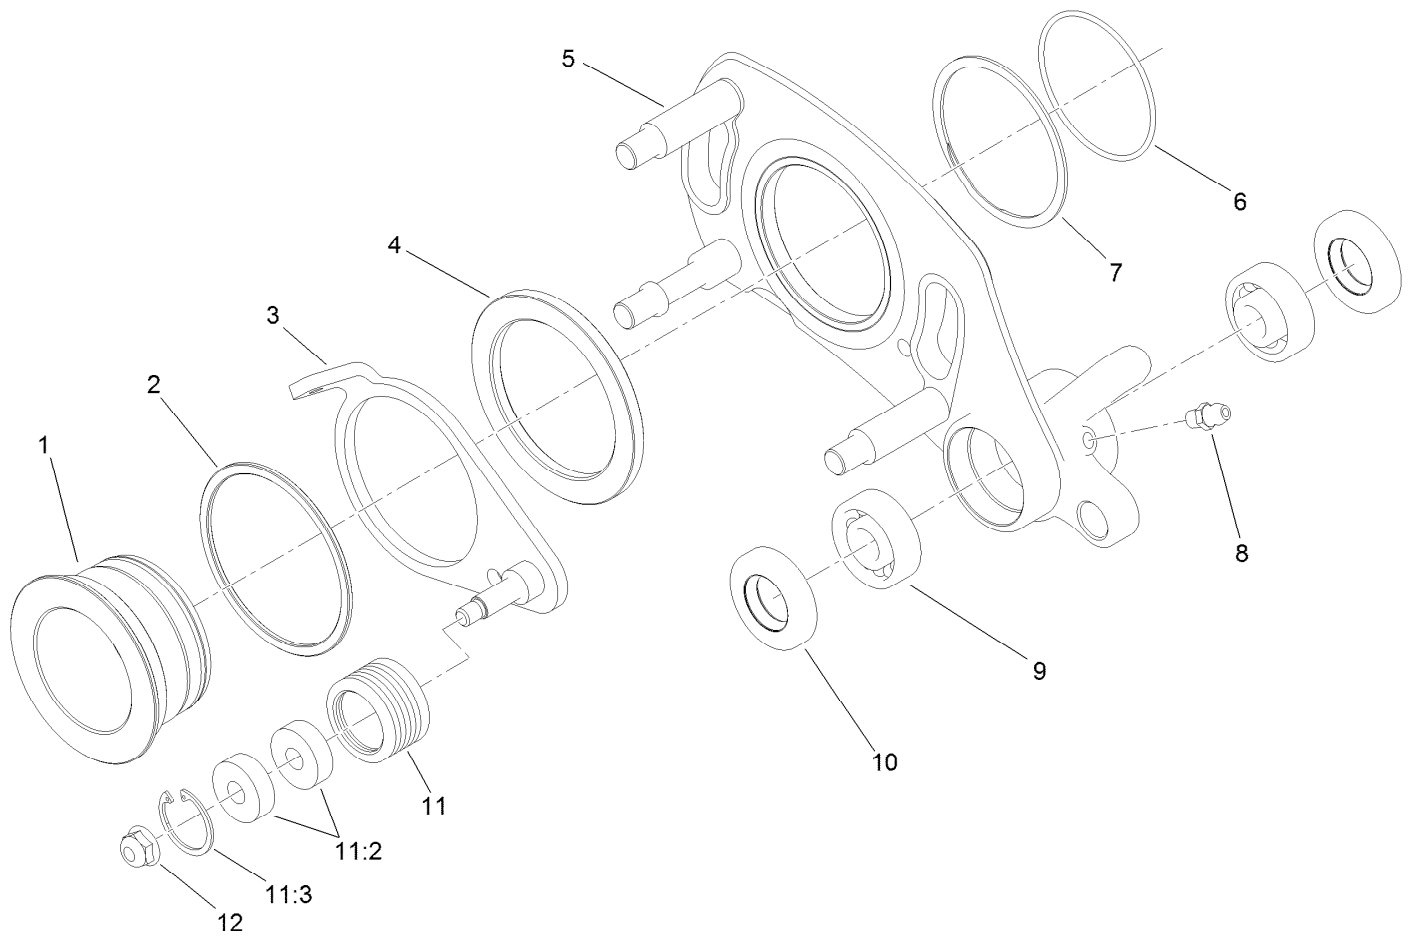


Right Hand Drive Sideplate Assembly

Ref.	Part Number	Qty.	Description
1	117-6818	1	Hub-Reel ASM
2	117-6816	1	Spacer
3	121-4611	1	RH Idler ASM
4	117-6815	1	Spacer
5	117-6788	1	RH Drive Plate ASM
6	360-0398	1	O-Ring
7	120-3231	1	Ring-Retaining, External
8	302-5	1	Fitting-Grease
9	107-8105	2	Bearing-Ball, Extended Race
10	106-8530	2	Seal-Grease
11	106-2630	1	Idler Bearing ASM
11:2	251-259	2	Bearing-Ball
11:3	104-4727	1	Ring-Retaining
12	119-4040	1	Nut-Flange, NI

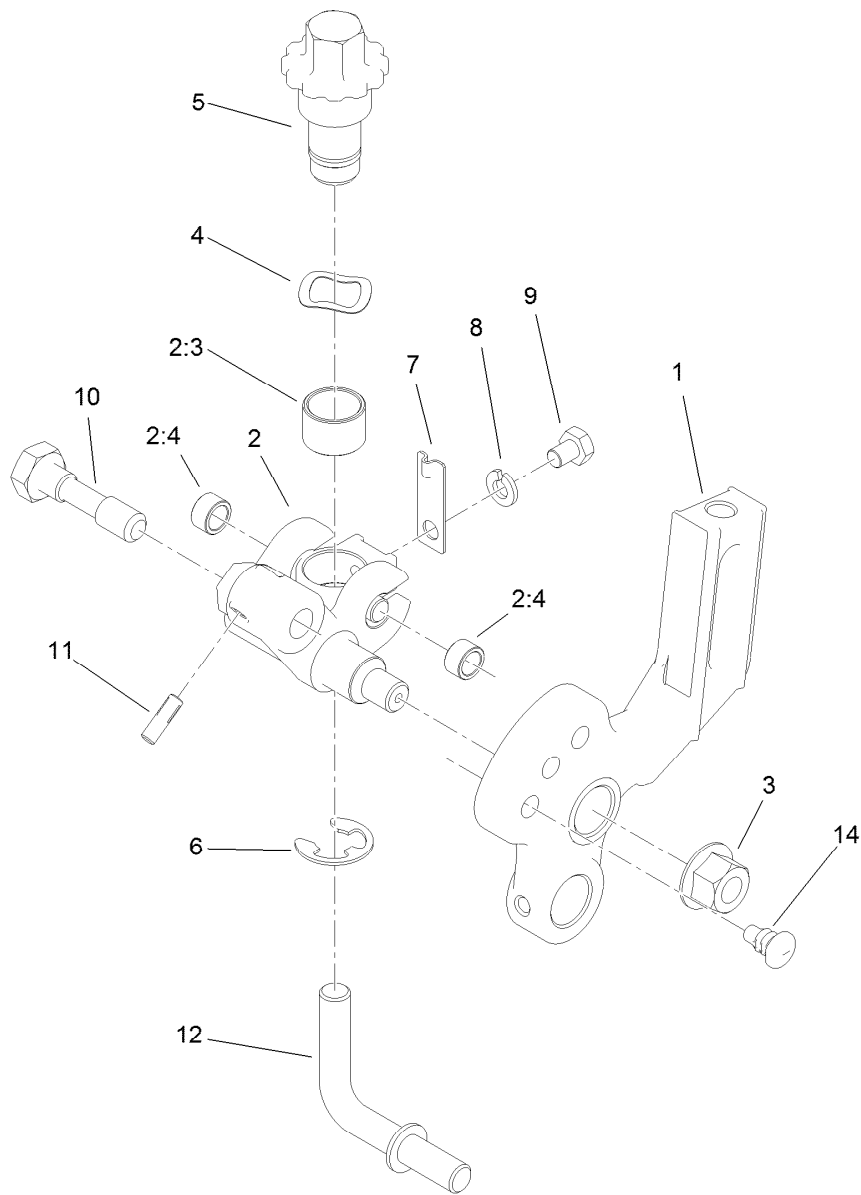


Right Hand Groomer Arm Assembly

Ref.	Part Number	Qty.	Description
1	121-4618	1	Arm-HOC, RH
2	106-8535	1	RH Lift Arm ASM
2:3	256-42	1	Bushing
2:4	106-8489	2	Bushing-Sleeve
3	121-4614	1	Nut-HF
4	107-8107	1	Washer-Wave
5	106-8482	1	Adjuster
6	32120-19	1	E-Ring
7	104-4754	1	Spring-Detent
8	43-5930	1	Washer-Lock, Spring
9	121-4615	1	Screw-HH
10	106-8528	1	Screw-Lock
11	121-4616	1	Pin-Grooved
12	121-4617	1	Rod-Lift
14	121-4729	1	Plug

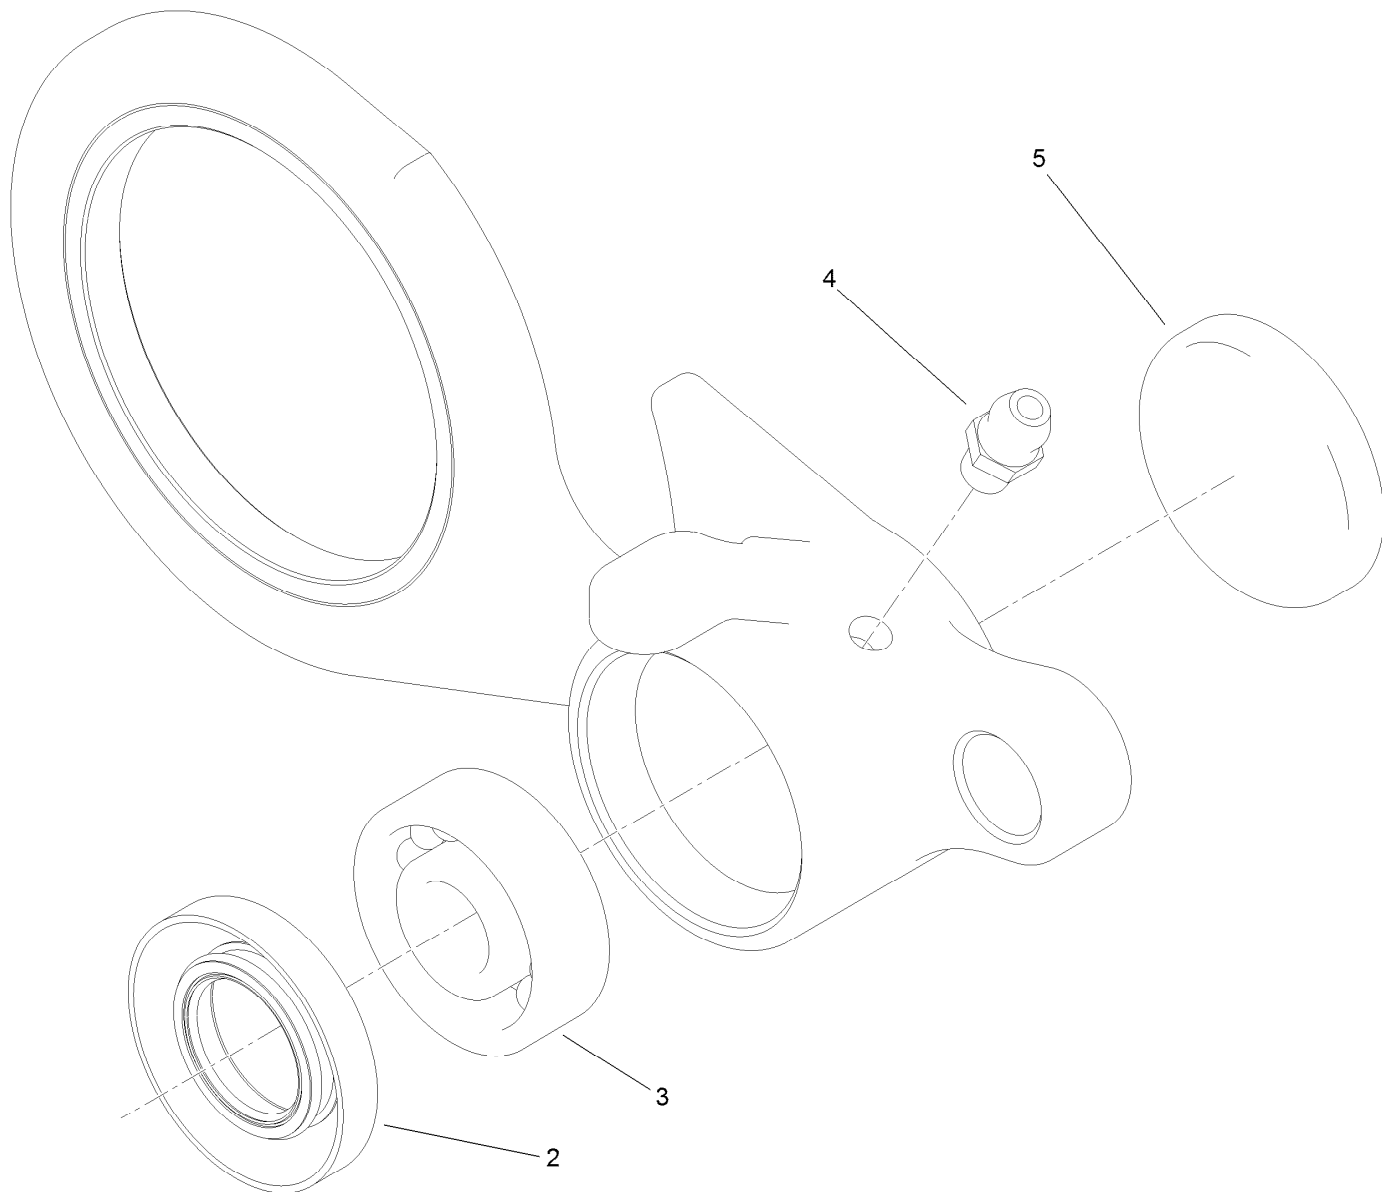

Left Hand Support Plate Assembly No. 121-4686

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	106-8530	1	Seal-Grease
3	107-8105	1	Bearing-Ball, Extended Race
4	302-5	1	Fitting-Grease
5	121-4609	1	Plug-Expansion

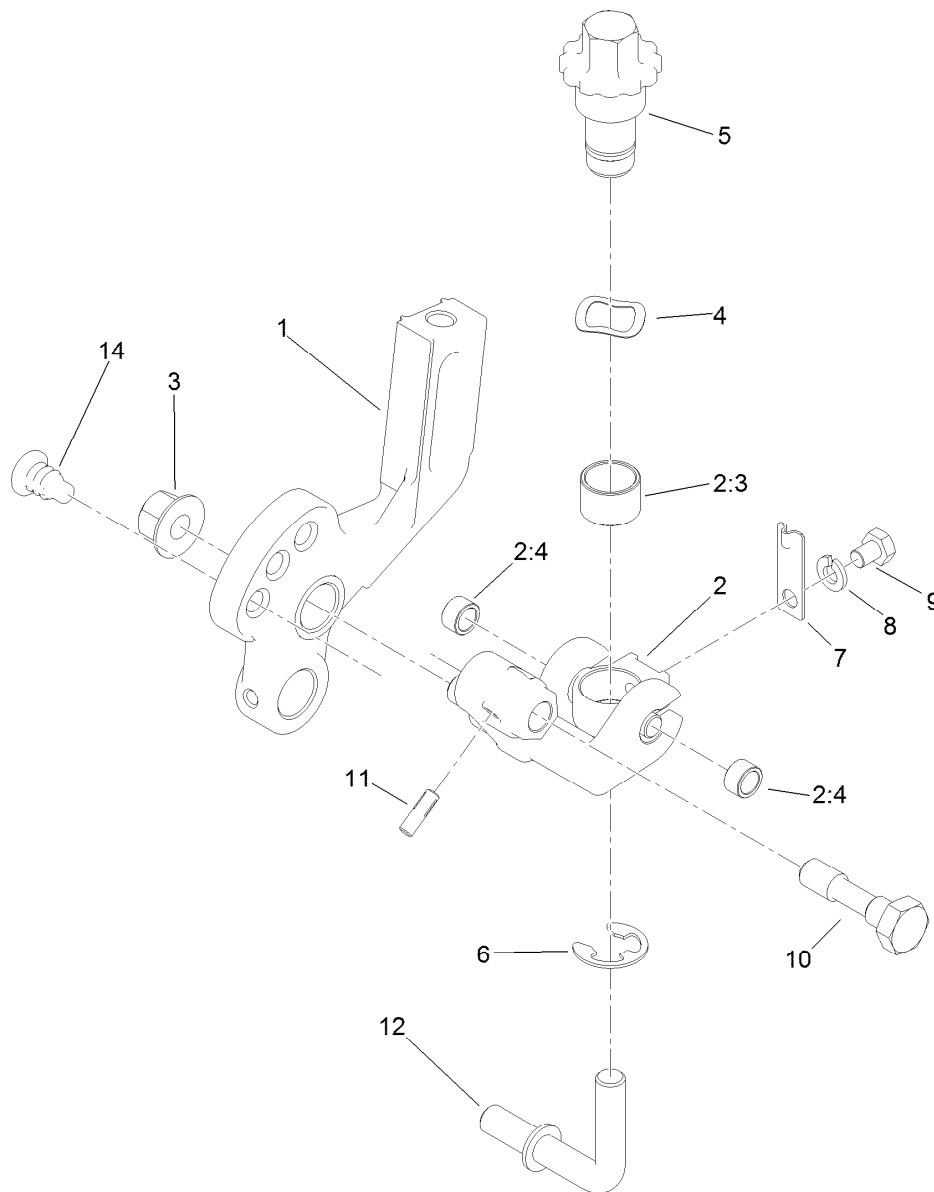

Left Hand Groomer Arm Assembly

Ref.	Part Number	Qty.	Description
1	121-4613	1	Arm-HOC, LH
2	106-8536	1	LH Lift Arm ASM
2:3	256-42	1	Bushing
2:4	106-8489	2	Bushing-Sleeve
3	121-4614	1	Nut-HF
4	107-8107	1	Washer-Wave
5	106-8482	1	Adjuster
6	32120-19	1	E-Ring
7	104-4754	1	Spring-Detent
8	43-5930	1	Washer-Lock, Spring
9	121-4615	1	Screw-HH
10	106-8528	1	Screw-Lock
11	121-4616	1	Pin-Grooved
12	121-4617	1	Rod-Lift
14	121-4729	1	Plug

Notes:

Notes:

Notes:



Count on it.