



53cm Side Discharge Rear Bagging Mower

Model No. 20714 – 7900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Housing Assembly	1	Engine Briggs & Stratton	
Rear Axle Assembly	2	Model 12U802-0639-01	7-15
Gear Case Assembly	3	Toro Part Number Index	16-17
Engine Assembly	4		
Handle Assembly	5		
Rear Catcher Assembly	6		

Note:

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
-------------	-------------------	-------------	-------------------

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFW	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSH	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form $X:Y$. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.

 
For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

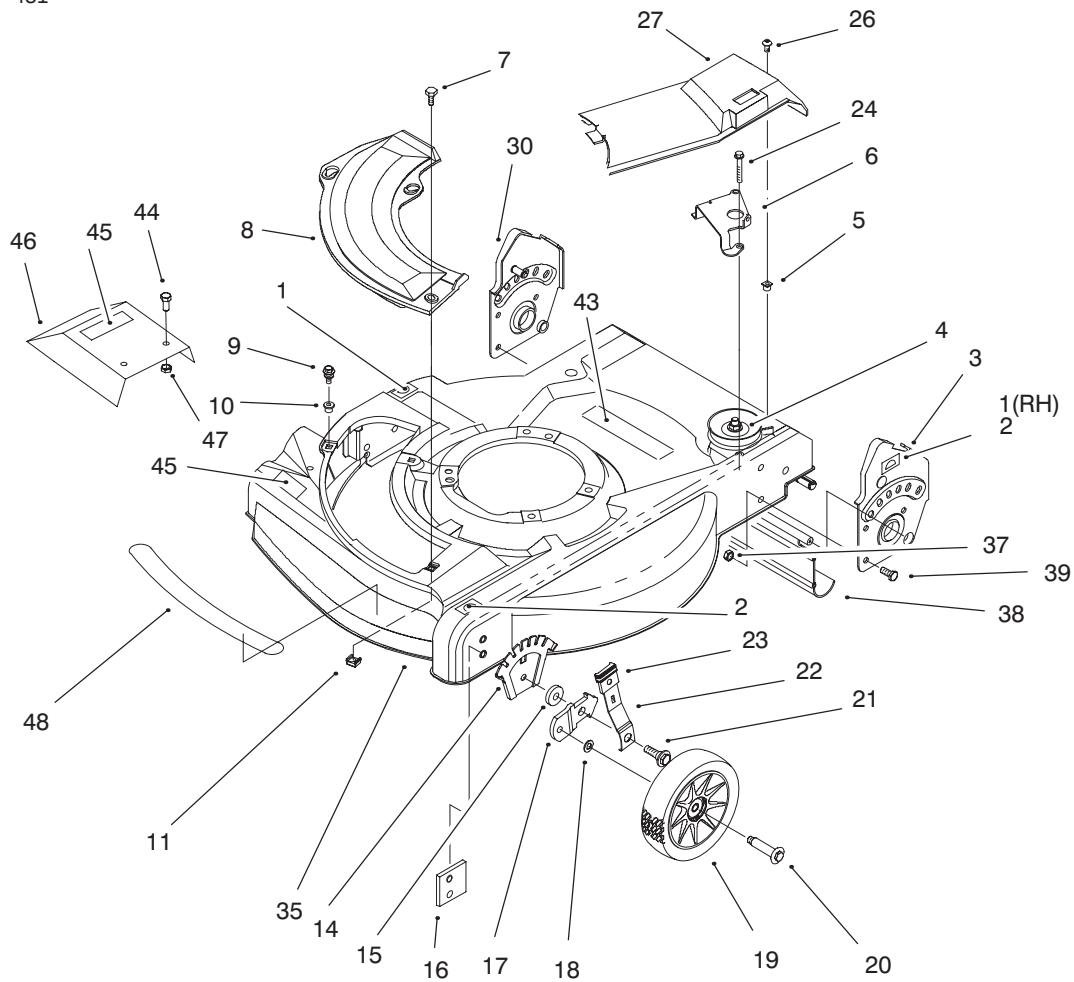


Sheet No.:2

Housing Assembly

Ref. No.	Part No.	Qty.	Description
1	93-6671	2	Decal-HOC
2	93-6670	2	Decal-HOC
3	92-7724	1	ASM-Handle Bracket
4	92-7735	1	ASM-Gear Case
5	605120	1	Grommet
6	92-7728	1	Guide-Transmission
7	46-6811	1	Screw-HWH
8	95-7052	1	Plate-Cover
9	614677	2	Screw-Sems
10	94-1610	2	Grommet-Plastic
11	613765	1	Nut-Cage
14	92-4881	2	Plate-Height Adjust
15	92-4890	2	Washer
16	92-7731	2	Plate-Baffle
17	614637	2	Bracket-Wheel Height Adj
18	40-1940	2	Washer
19	684776	2	ASM-Wheel & Tire 6"
20	92-1099	2	Bolt-Shoulder 6" Wheel
21	614672	2	Bolt-Shoulder
22	614687	2	Spring Arm-Front
23	92-1008	2	Knob-Height Adjust
24	49-2040	2	Screw-HH
26	92-9665	1	Screw-Phil
27	95-7068	1	Cover-Drive


Ref. No.	Part No.	Qty.	Description
30	92-7723	1	ASM-Handle Bracket
35	95-7088	1	Housing & Baffle ASM (Incl. Ref. #1-2, 10-11, 43, 45, & 48)
37	3296-29	6	Nut-Lock
38	92-8647	1	Shield-Trailing
39	322-3	6	Screw-HH
43	93-6657	1	Decal-Danger
44	32105-15	2	Screw-HH
45	93-6667	2	Decal-Danger
46	94-1697	1	Guard-Plate (Incl. Ref. #45)
47	3296-42	2	Nut-Lock
48	95-7051	1	Decal-Deck

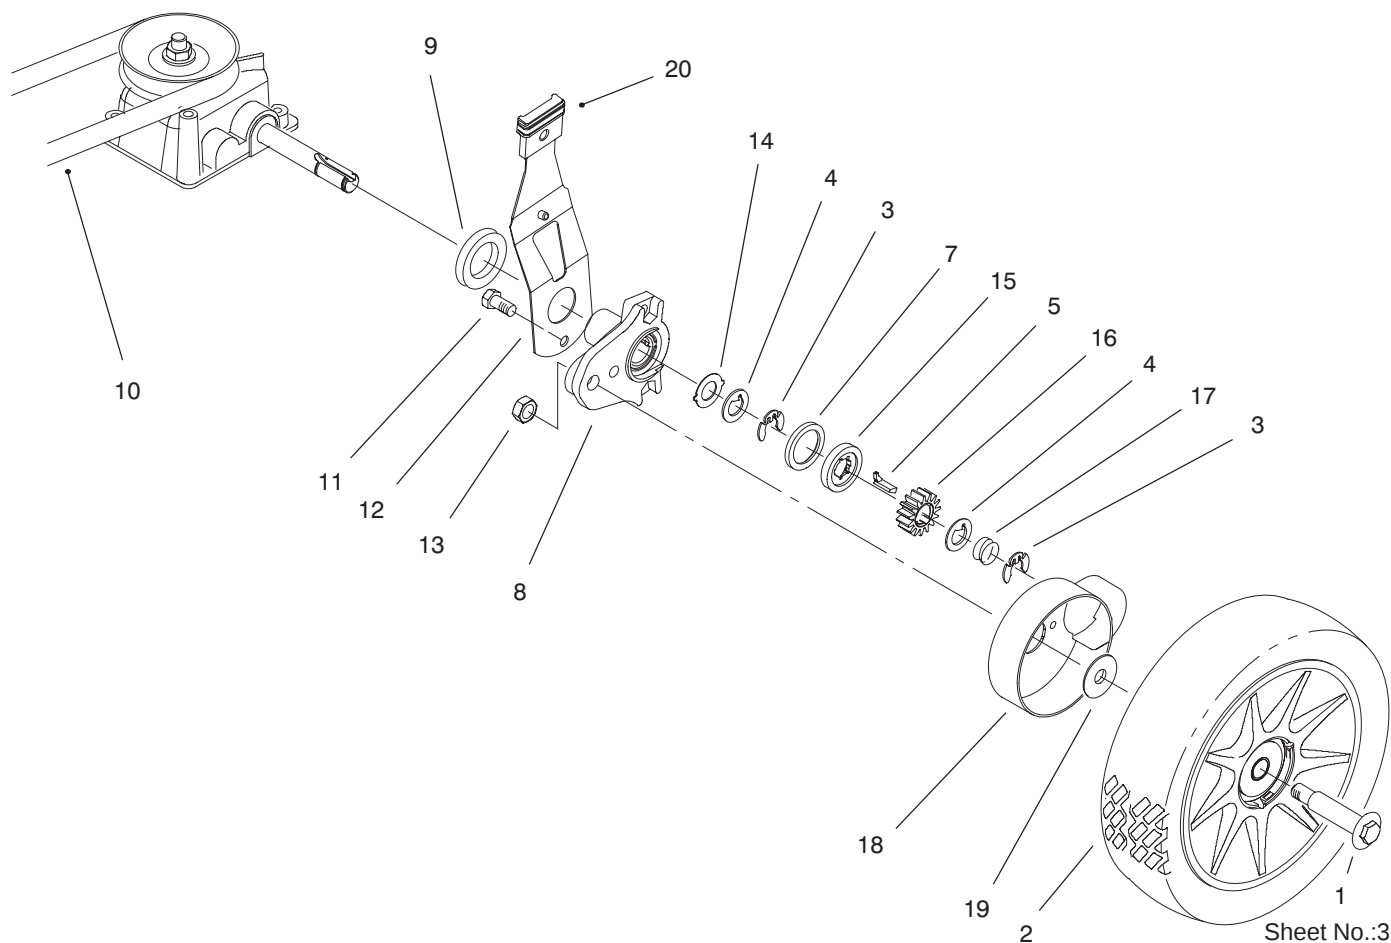 

Rear Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	92-1042	2	ASM-Whl
3	65-2720	4	Ring-Retaining
4	65-4740	4	Washer-Thrust
5	66-6050	1	Key-Rocking
6	66-6040	1	Key-Rocking
7	65-4710	2	Ring-Friction
8	92-7746	2	ASM-Hgt Adj Arm
9	614447	2	Spacer-Axle Shaft
10	93-7381	1	V-Belt
11	32144-85	2	Screw-HH
12	92-1004	2	ASM-Spring Arm
13	610358	2	Nut-Lock
14	65-4730	2	Washer-Thrust
15	65-4760	2	Washer
16	65-4750	2	Gear-Pinion
17	65-4720	2	Spring-Compression
18	94-1609	2	Cover-Wheel
19	614426	2	Washer-Stepped
20	92-1008	2	Knob-Height Adjust

Ref. No.	Part No.	Qty.	Description

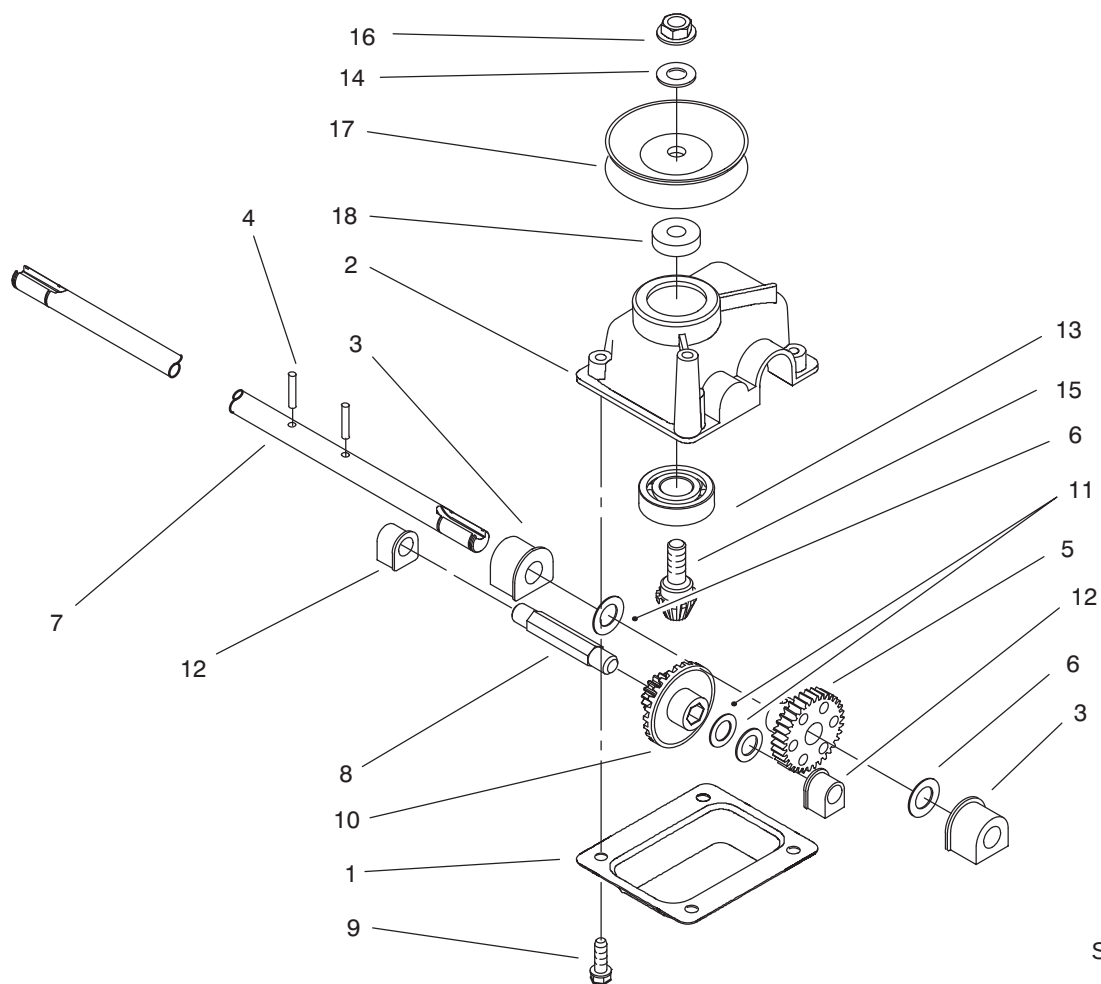 


Sheet No.:100

Gear Case Assembly

Ref. No.	Part No.	Qty.	Description
1	614668	1	Cover—Gear Case
2	92—7727	1	Gearcase—Upper Ss
3	60—8850	2	Bushing—Output
4	3285—19	2	Pin—Spirol
5	614596	1	Gear—34t
6	36—4780	2	Washer—Thrust
7	93—0239	1	Shaft—Output
8	614696	1	Shaft—Intermediate
9	32144—4	4	Screw—TAP
10	55—3760	1	15 T Pinion
11	36—4791	2	Washer—Thrust
12	60—8750	2	Bushing
13	38—7820	1	Bearing—Ball
14	3256—24	1	Washer—Flat
15	60—8890	1	Gear—Pinnion
16	3296—5	1	Nut—Lock
17	614669	2	Pulley—Half
18	62—6660	1	Spacer—Pulley


Ref. No.	Part No.	Qty.	Description

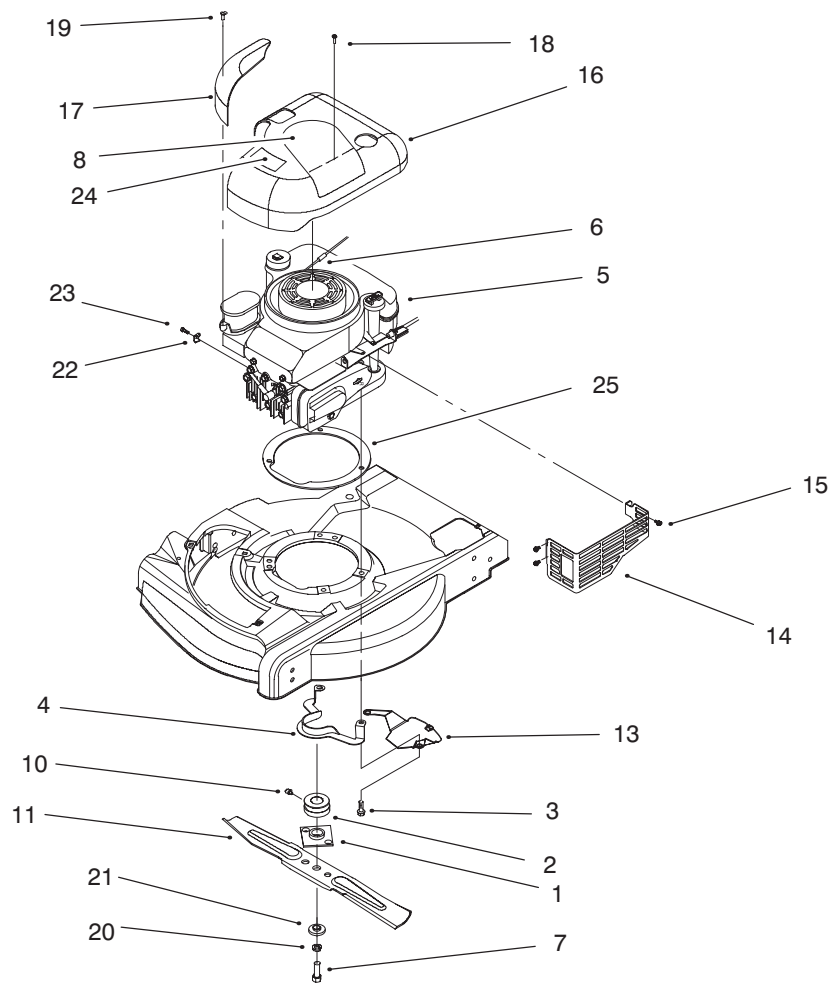 

Sheet No.:4

Engine Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	677525	1	ASM-Plate & Collar	24	95-7061	1	Nameplate-Shroud
2	92-6542	1	Pulley-Engine	25	93-7152	1	Plate-Engine
3	95-1726	3	Screw-Engine Mount				
4	92-1024	1	Guide-Belt				
5		1	Engine ASM 4-Cyc				
6	2210-316	1	Rope-Stop (P/W Eng)				
7	95-1748	1	Bolt-Blade				
8	95-7053	1	Decal-Recoil				
10	613227	1	Screw-Set				
11	612543	1	Blade-21" Whirl				
13	93-4196	1	Shield-Grass				
14	82-8550	1	Shield-Muffler				
15	32144-73	3	Screw-HWHTF				
16	95-1704	1	Shroud-Engine				
17	95-1709	1	Cover A/C				
18	95-1706	2	Screw-Shroud (P/W Eng)				
19	95-1707	2	Screw-Air Cleaner (P/W)				
20	3253-22	1	Washer-Lock				
21	92-8626	1	Spacer-Blade				
22	2210-249	1	Clamp-Casing (P/W Eng)				
23	93-8470	1	Screw-Clamp (P/W Eng)				

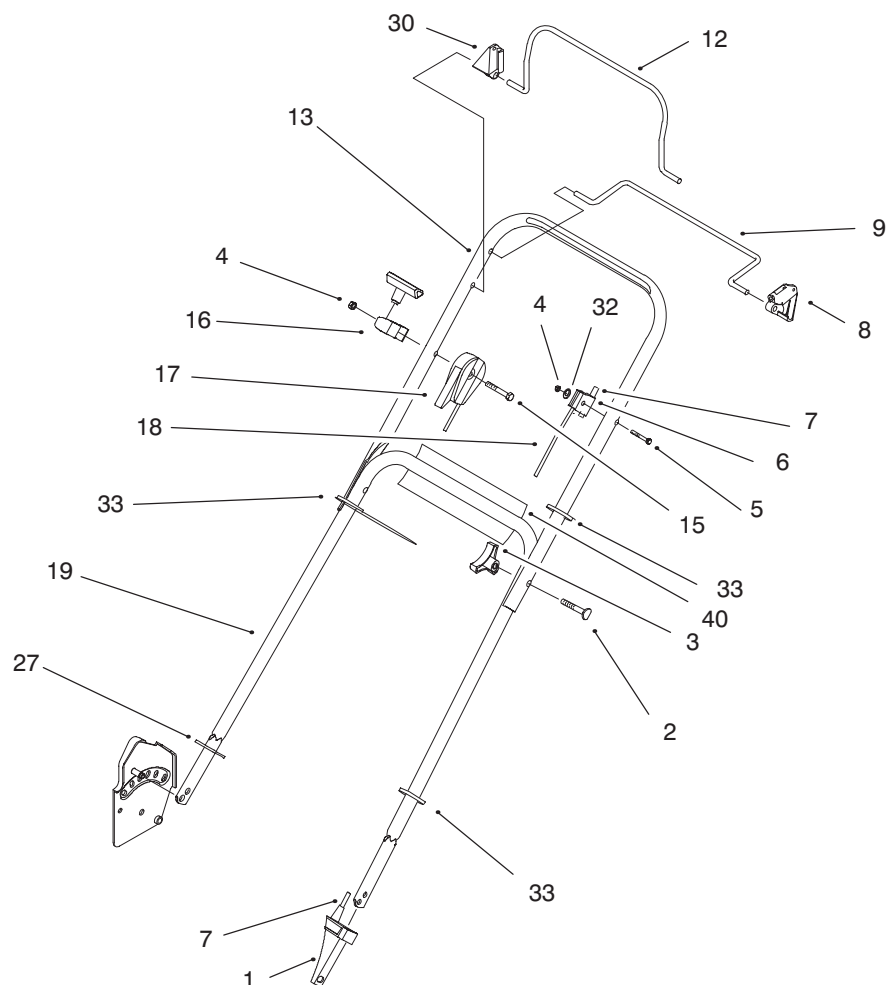 


Sheet No.:5

Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	93-7380	1	Anchor-Cable
2	614697	2	Screw-Handle
3	614243	2	Knob
4	3296-73	2	Nut-Lock
5	92-2269	1	Screw-Handle
6	94-6096	1	Anchor-Cable
7	95-5590	1	Cable-Traction
8	92-5412	1	Stop-Pivot
9	92-1001	1	Bail-Sp Control
12	94-6099	1	Bail-Flywheel Brake
13	95-1713	1	Handle Section-Upper
15	321-50	1	Screw
16	93-7383	1	Guide-Rope
17	95-7064	1	Cable-Throttle
18	95-1718	1	ASM-Brake Cable
19	614643	1	Handle Section-Lower
27	93-3653	1	Handle-Guard
30	94-6097	1	Stop-Bail
32	3256-1	1	Washer-Flat
33	3290-378	3	Tie-Cable
40	93-7266	1	Decal-Operation

Ref. No.	Part No.	Qty.	Description

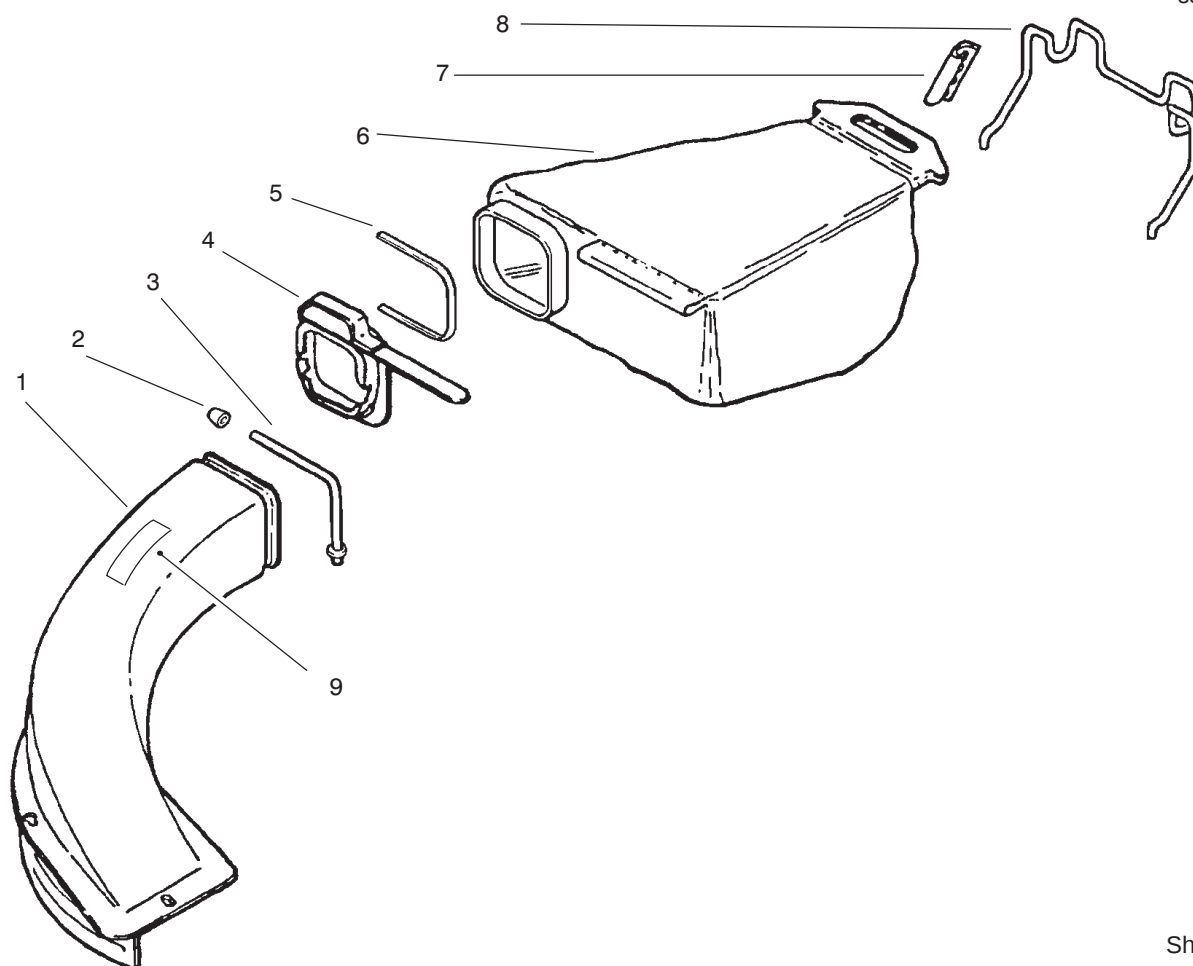 


Sheet No.:6

Rear Catcher Assembly

Ref. No.	Part No.	Qty.	Description
1	95-7081	1	Chute & Support Assembly (Incl. Ref. #2, 3, & 9)
2	614589	1	Nut-Cap
3	614591	1	Chute Support
4	684727	1	Adapter Assembly
5	614700	1	Tie Strap
6	95-7050	1	Bag Assembly
7	613462	2	Hanger Clamp
8	613455	1	Wide Hanger
9	95-7079	1	Decal-Danger

Ref. No.	Part No.	Qty.	Description

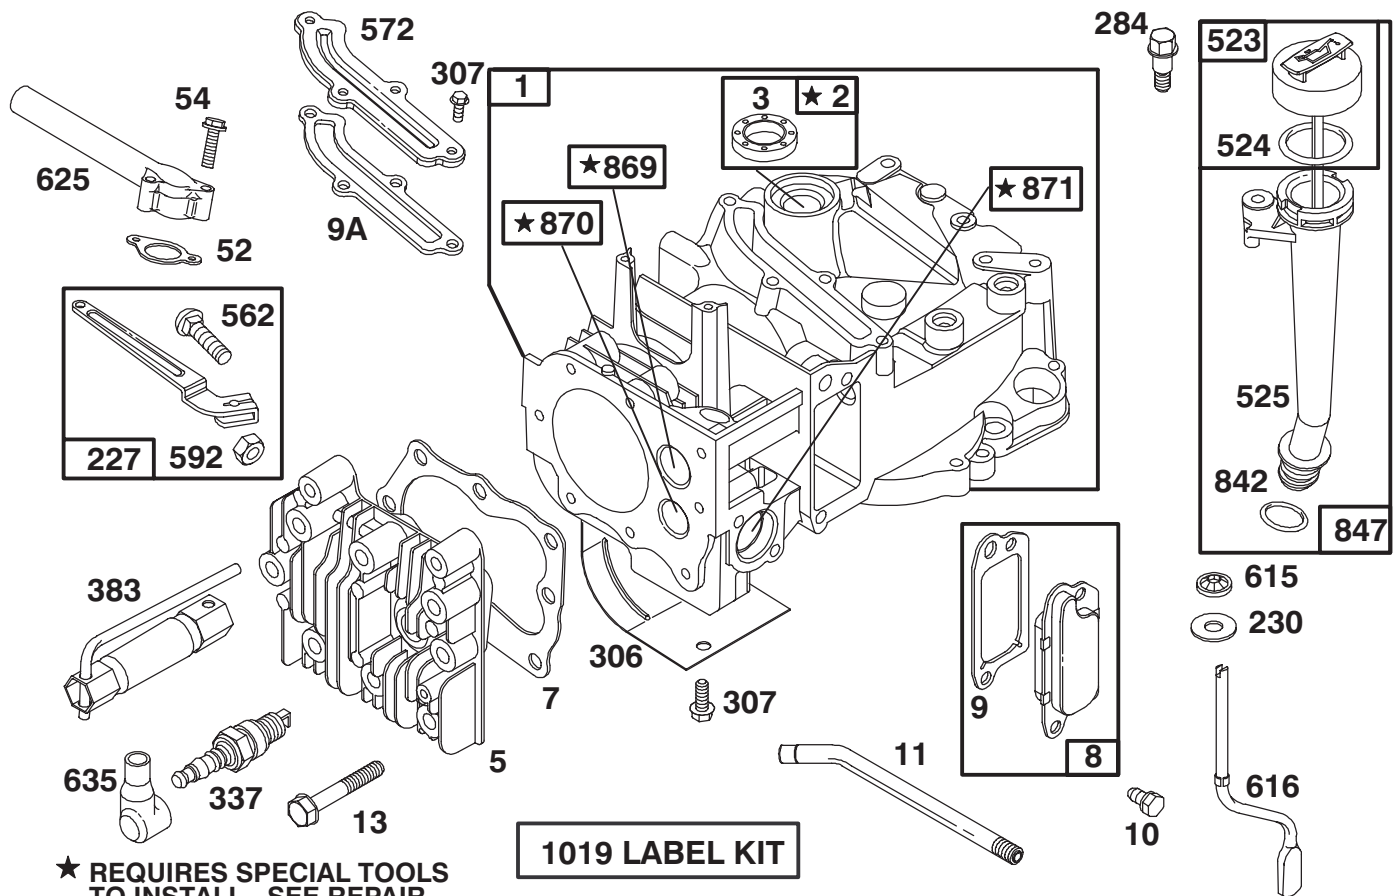 

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 12U802-0639-01

Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1
2	293708	Bushing – Cylinder	1
★3	299819	Seal – Oil	1
5	214626	Head – Cylinder	1
★Ø7	272916	Gasket – Cylinder Head	1
8	495786	Breather – Valve Chamber	1
★Ø9	272481	Gasket – Breather	1
★9A	272238	Gasket – Baffle Plate	1
10	94650	Screw – Breather Mtg.	1
11	231933	Tube – Breather	1
13	94547	Screw – Cylinder Head	1
★52	272199	Gasket – Intake Elbow	1
54	94526	Screw – Intake Elbow Mtg.	1
227	492349	Lever Assembly – Gov.	1
230	67072	Washer – Gov. Crank	1
284	94511	Screw – Hex. Head	1
306	224324	Shield – Cylinder	1
307	94515	Screw – Hex. Head	1
337	802592	Plug – Spark	1

★ Included in Gasket Set—Part No. 497316.

Ref. No.	Part No.	Description	No. Used
383	89838	Wrench – Spark Plug	1
523	495264	Cap With Dipstick – Oil Filler	1
★524	280393	Seal – Filler Tube	1
525	495265	Tube – Oil Filler	1
562	94852	Bolt – Carriage	1
572	224328	Baffle – Cylinder	1
592	231082	Nut – Hex.	1
615	94474	Fastener	1
616	263175	Crank – Governor	1
625	497465	Tube – Fuel Intake	1
635	66538	Elbow – Spark Plug	1
★842	280966	Seal – O-Ring	1
847	495263	Oil Fill Tube Assy.	1
869	213512	Seat – Intake Valve	1
870	213513	Seat – Exhaust Valve	1
871	262001	Guide – Exhaust Valve	1
1019	494256	Note: 63709 Guide – Intake Valve	1
		Label Kit	1

 Ø Included in Valve Overhaul Gasket Set—Part No. 498528.

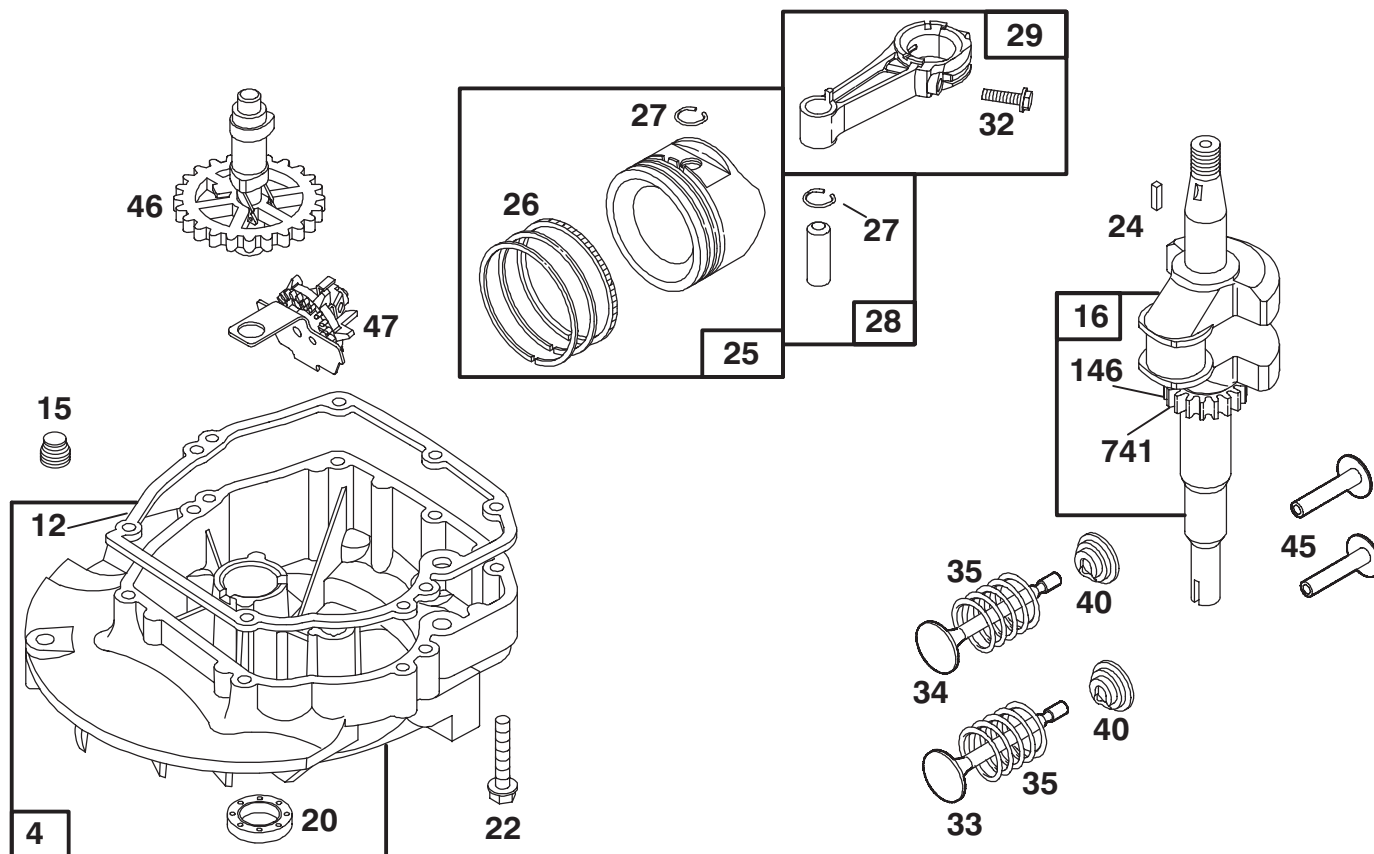


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12U802-0639—01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
4	493279	Sump — Engine	1	27	263190	Lock — Piston Pin	1
★12	272198	Gasket — Crankcase	1	28	499423	Pin — Piston (Standard)	1
15	94720	Plug — Oil Drain	1	29	499424	Rod Assembly — Connecting	1
16	499147	Crankshaft	1	32	94699	Screw — Connecting Rod	1
★20	399781	Seal — Oil	1	33	262651	Valve — Exhaust	1
22	94220	Screw — Hex. Head	1	34	262652	Valve — Intake	1
		Note: 94612 Screw — Hex. Head (One Used in Hole Nearest Breather)	1	35	262224	Spring — Valve	1
24	222698	Key — Flywheel	1	40	93312	Retainer — Valve Spring	1
25	499429	Piston Assy. (Standard)	1	45	262204	Tappet — Valve	1
	499430	Piston Assy. (.010" O.S.)	1	46	498275	Gear — Cam	1
	499431	Piston Assy. (.020" O.S.)	1	47	493737	Slinger — Oil	1
	499432	Piston Assy. (.030" O.S.)	1	146	94388	Key — Timing	1
26	499425	Ring Set (Standard)	1	741	262598	Gear — Timing	1
	499426	Ring Set (.010" O.S.)	1				
	499427	Ring Set (.020" O.S.)	1				
	499428	Ring Set (.030" O.S.)	1				

 ★ Included in Gasket Set—Part No. 497316.

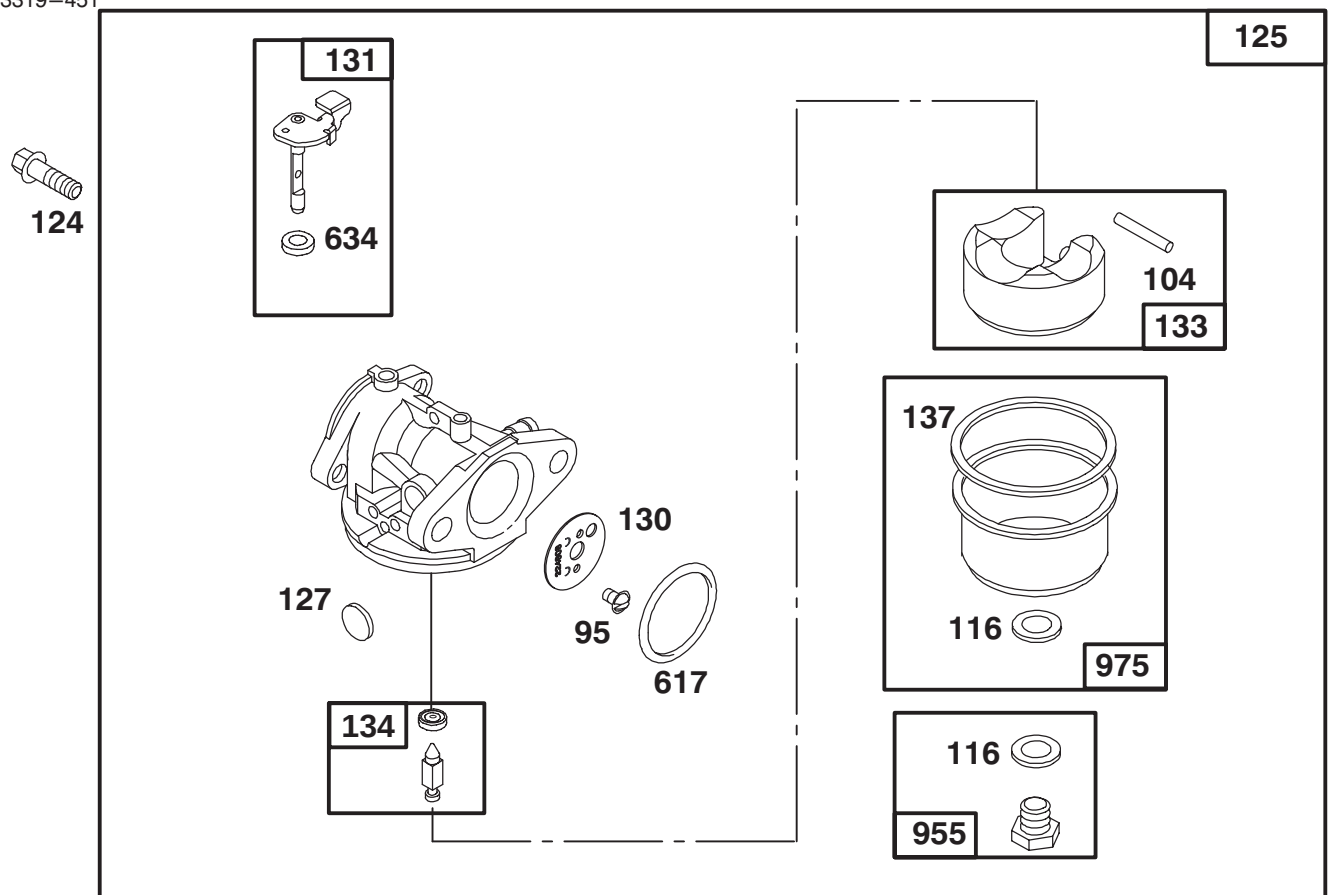

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 12U802-0639-01

Ref. No.	Part No.	Description	No. Used
95	T94098	Screw — Throttle Valve Mtg.	1
●104	T231371	Pin — Float Hinge	1
●◆116		Gasket—Sealing (Sold in Kit Only)	1
124	94525	Screw — Carburetor Mtg.	1
125	498966	Carburetor	1
●127		Plug — Welch (Sold in Kit Only)	1
130	224908	Valve — Throttle	1
131	T493267	Shaft — Throttle	1
133	398187	Float Assy. — Carburetor	1

Ref. No.	Part No.	Description	No. Used
●134	T398188	Valve — Inlet (Includes Seat)	1
●◆137		Gasket — Bowl (Sold in Kit Only)	1
●◆617	270344	Seal — Fuel Intake Tube	1
●◆634		Washer — Shaft (Sold in Kit Only)	1
955	498975	Screw — Bowl Mtg. (Std.) Note: 496495 Screw — Bowl Mtg. (High Altitude)	1
975	493640	Bowl Assy. — Carburetor	1

●Included in Carburetor Kit—Part No. 498260.

 ◆ Included in Carburetor Gasket Set—Part No. 498261.

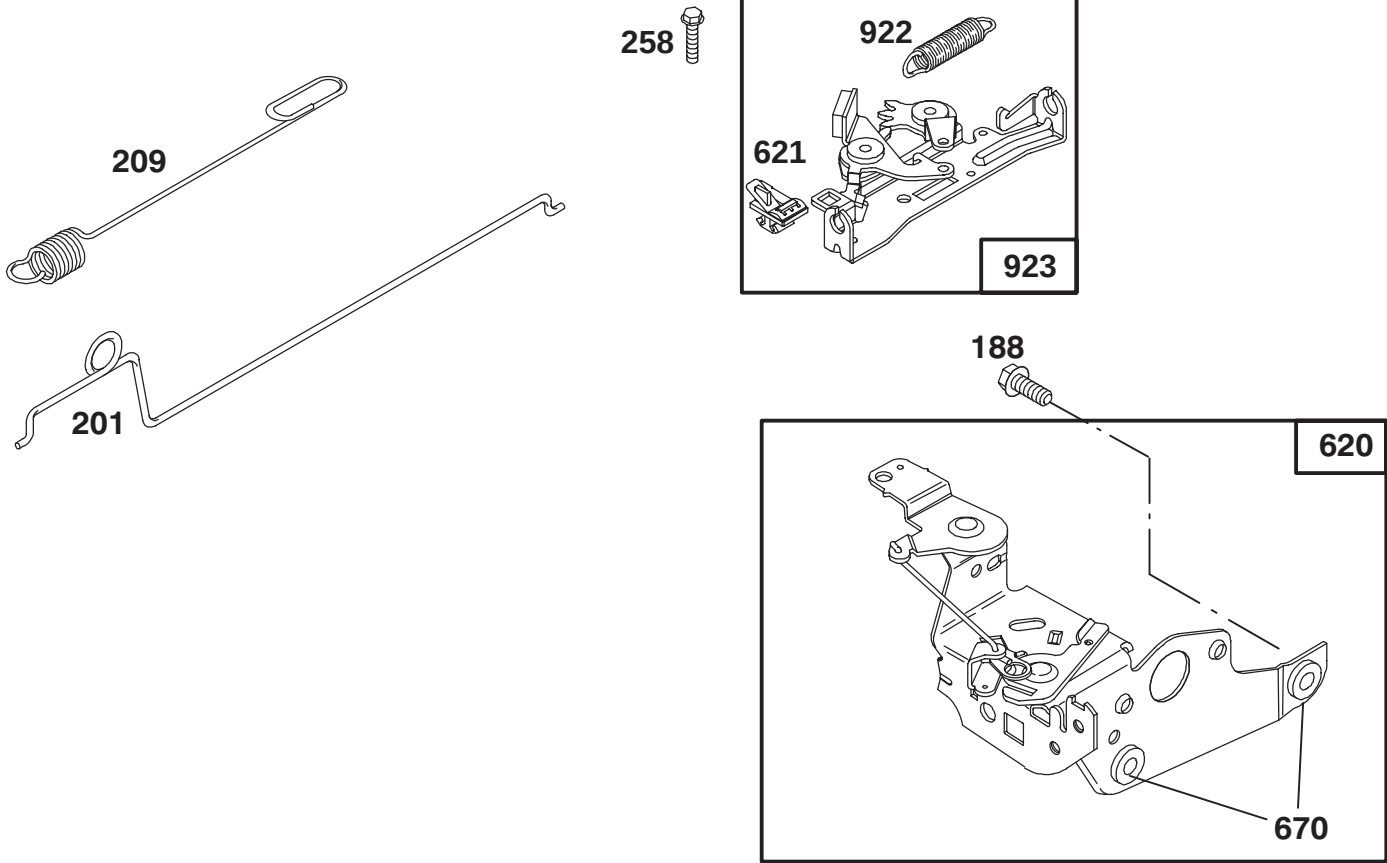


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12U802-0639-01

Ref. No.	Part No.	Description	No. Used
188	94644	Screw – Hex. Head	1
201	262579	Link – Governor	1
209	263044	Spring – Governor	1
258	94512	Screw–Hex. Head	1
620	497837	Bracket – Carburetor	1

Ref. No.	Part No.	Description	No. Used
621	396847	Switch – Stop	1
★670	493823	Spacer – Bracket (Includes 2)	1
922	262640	Spring–Brake	1
923	493442	Brake Assembly	1

 ★ Included in Gasket Set–Part No. 497316.

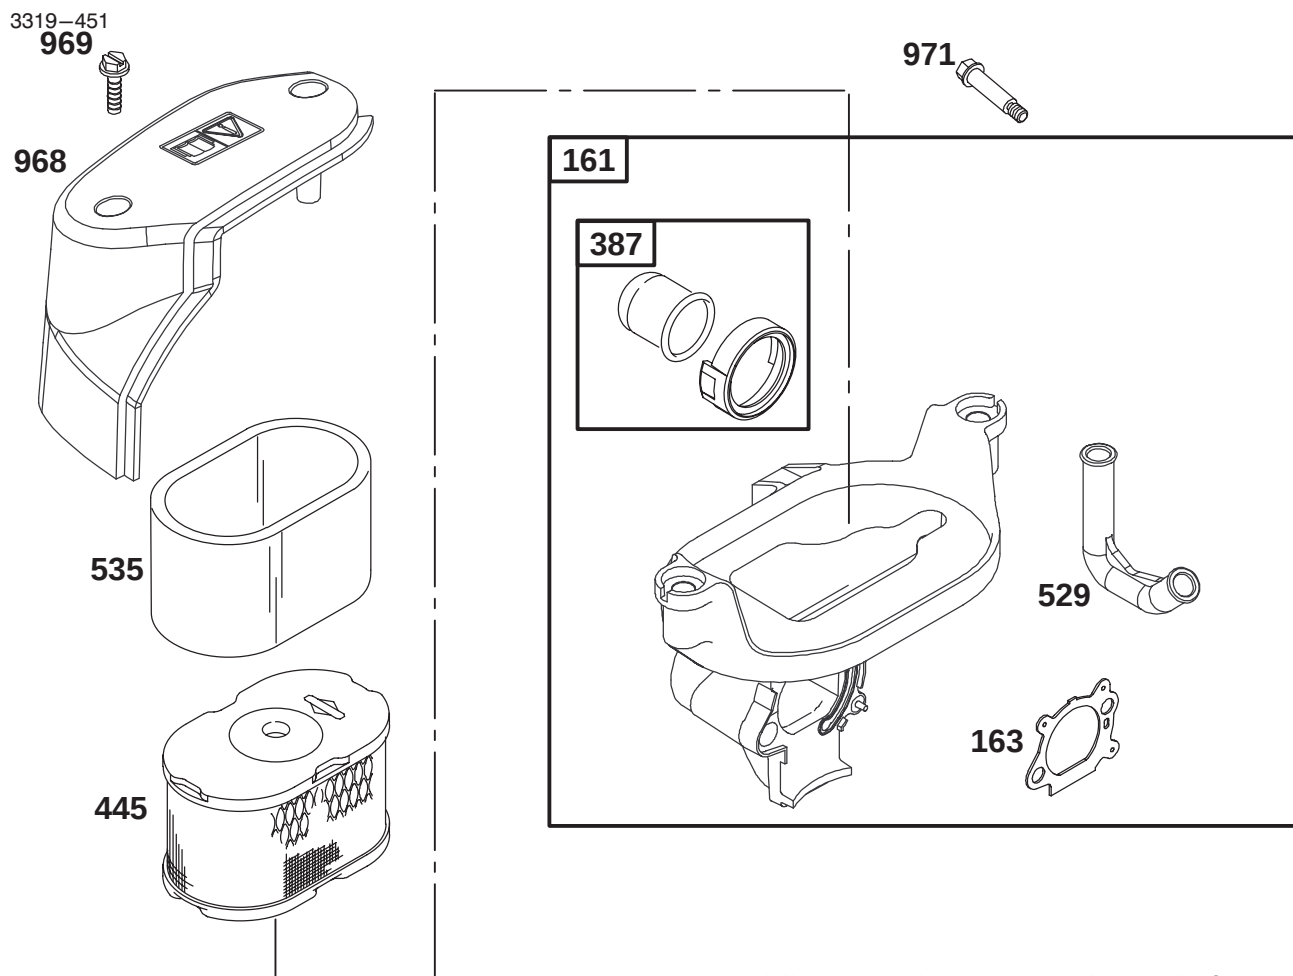

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 12U802-0639-01

Ref. No.	Part No.	Description	No. Used
161	497915	Base – Air Cleaner	1
★●163	272653	Gasket – Air Cleaner	1
387	496115	Primer–Carburetor	1
445	497725	Filter – Air	1
529	281556	Grommet – Breather	1

Ref. No.	Part No.	Description	No. Used
535	273185	Filter – Air	1
968	281535	Cover – Air Cleaner	1
969	94777	Screw – Cover Mtg.	1
971	94655	Screw – Air Cleaner	1

★ Included in Gasket Set—Part No. 497316.

 ● Included in Carburetor Kit—Part No. 498260.




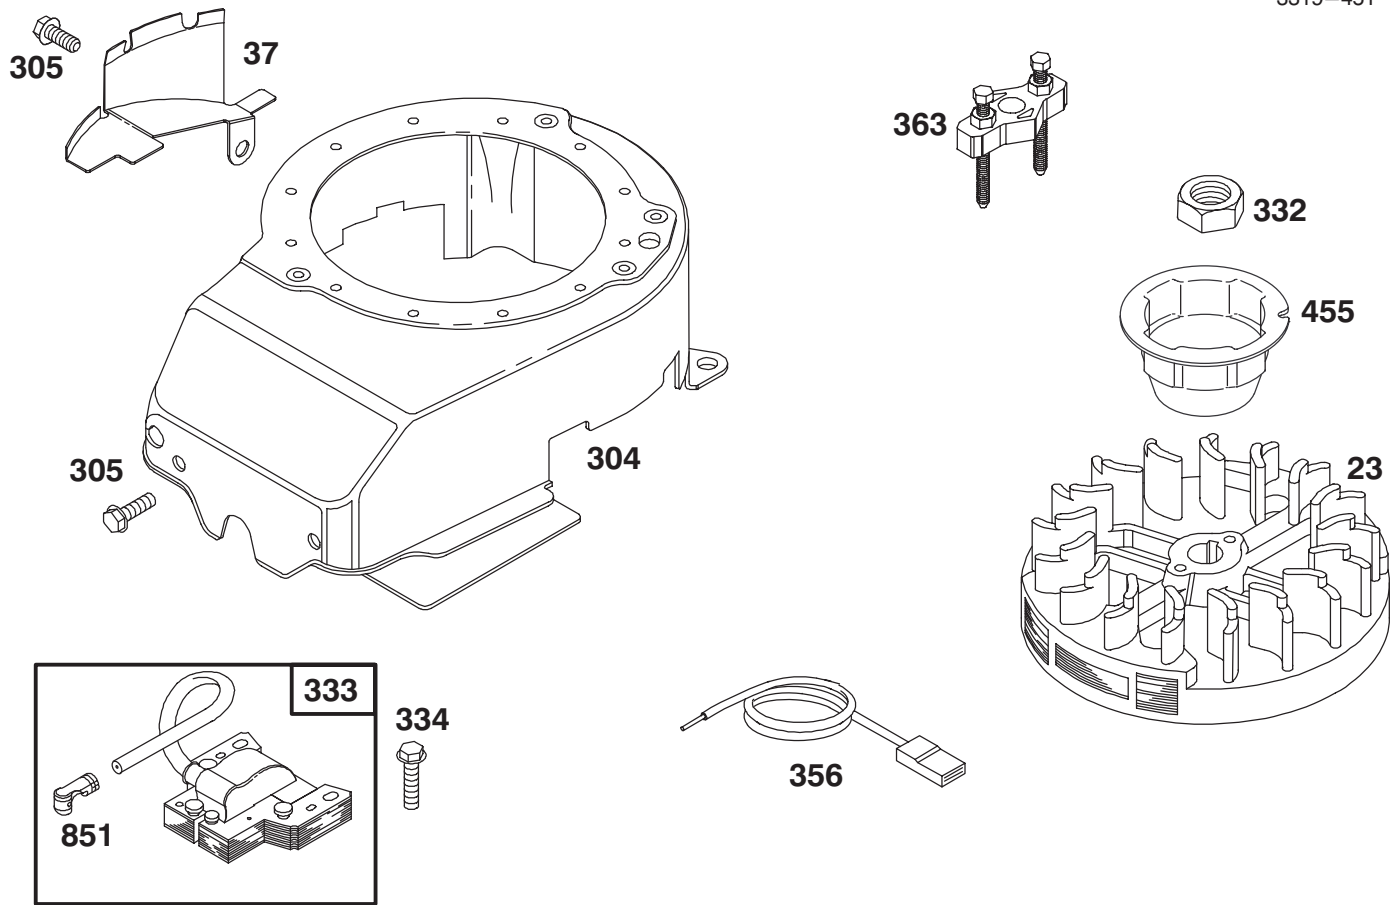


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12U802-0639—01

Ref. No.	Part No.	Description	No. Used
23	492177	Flywheel	1
37	224511	Guard — Flywheel	1
304	493293	Housing — Blower	1
305	94744	Screw — Sem	1
332	92284	Nut — Flywheel	1
333	802574	Armature — Magneto	1

Ref. No.	Part No.	Description	No. Used
334	94731	Screw — Sem	1
356	398808	Wire — Ground	1
363	19069	Flywheel Puller	1
455	225121	Cup — Starter	1
851	493880	Terminal — Ignition Cable	1

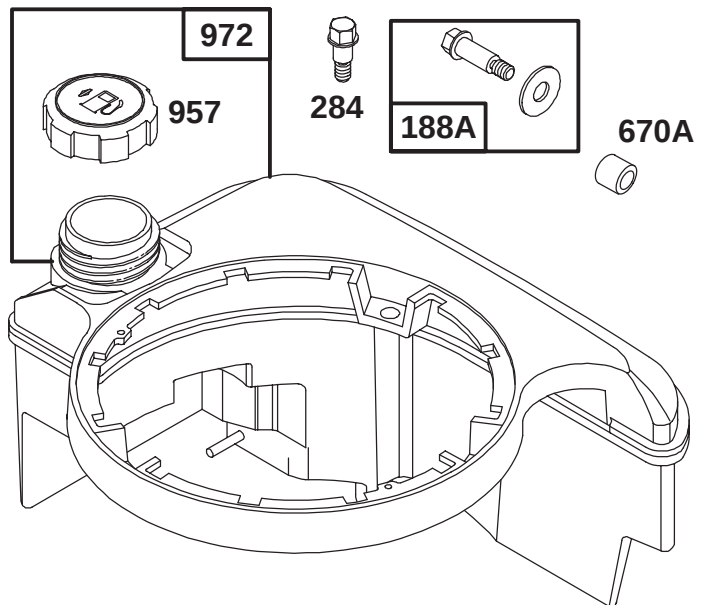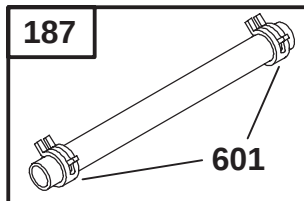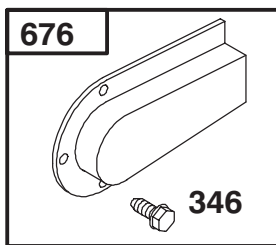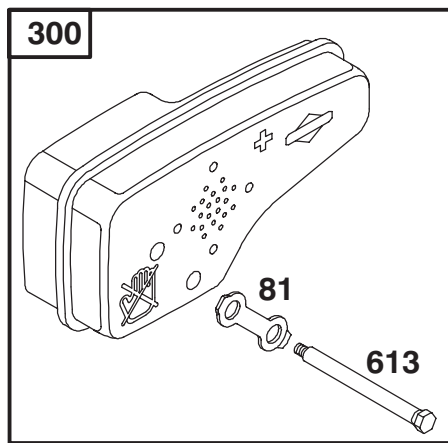    

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 12U802-0639-01

Ref. No.	Part No.	Description	No. Used
81	223664	Lock – Muffler Screw	1
187	492790	Hose – Fuel	1
188A	398540	Screw – Tank Mounting	1
284	94511	Screw – Shoulder	1
300	496106	Muffler – Exhaust	1
346	94896	Screw – Hex. Head	1
601	93053	Clamp – Hose	

★ Included in Gasket Set—Part No. 497316.

Ref. No.	Part No.	Description	No. Used
613	94231	Screw – Shoulder	1
670A	280512	Spacer – Fuel Tank	1
676	493871	Deflector – Muffler	1
★Ø883	272253	Gasket – Exhaust	1
957	397974	Cap Assy. – Fuel	1
972	495224	Tank Assembly – Fuel	1

 
Ø Included in Valve Overhaul Gasket Set—Part No. 498528.

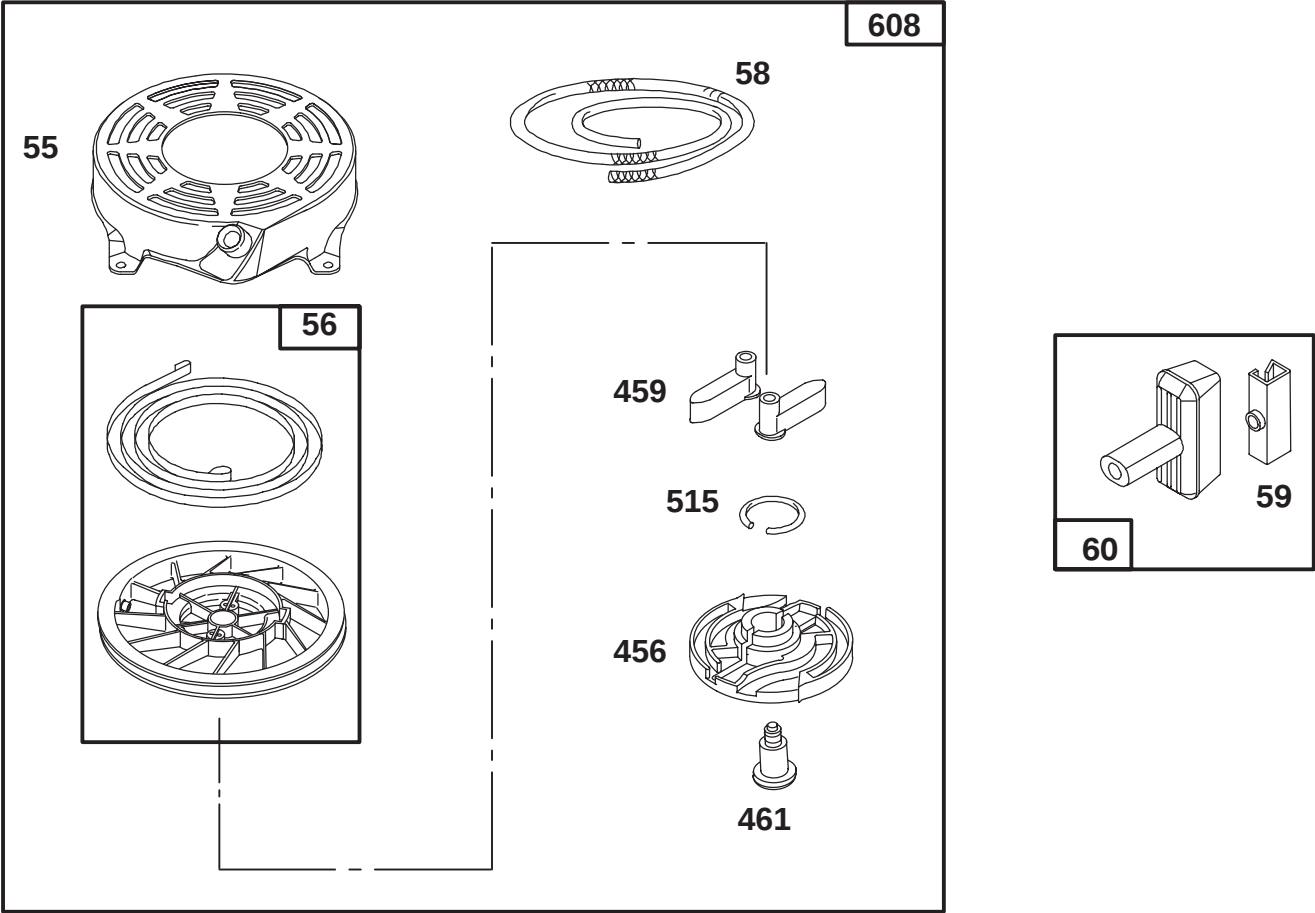

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12U802-0639—01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
55	497440	Housing — Rewind Starter	1	461	94943	Pin — Starter	1
56	498144	Pulley — Rewind Starter	1	515	263073	Spring — Torsion	1
58	280399	Rope — Rewind Starter (Cut to Required Length)	1	608	497680	Starter Assy. — Rewind	1
59	T224467	Insert — Starter Grip	1			Includes:	
60	T494212	Handle — Rewind Starter	1			94904 Screw — Hex. Head	1
456	281503	Retainer — Rewind Starter	1			94908 Nut — Hex.	1
459	281505	Pawl — Starter	1				

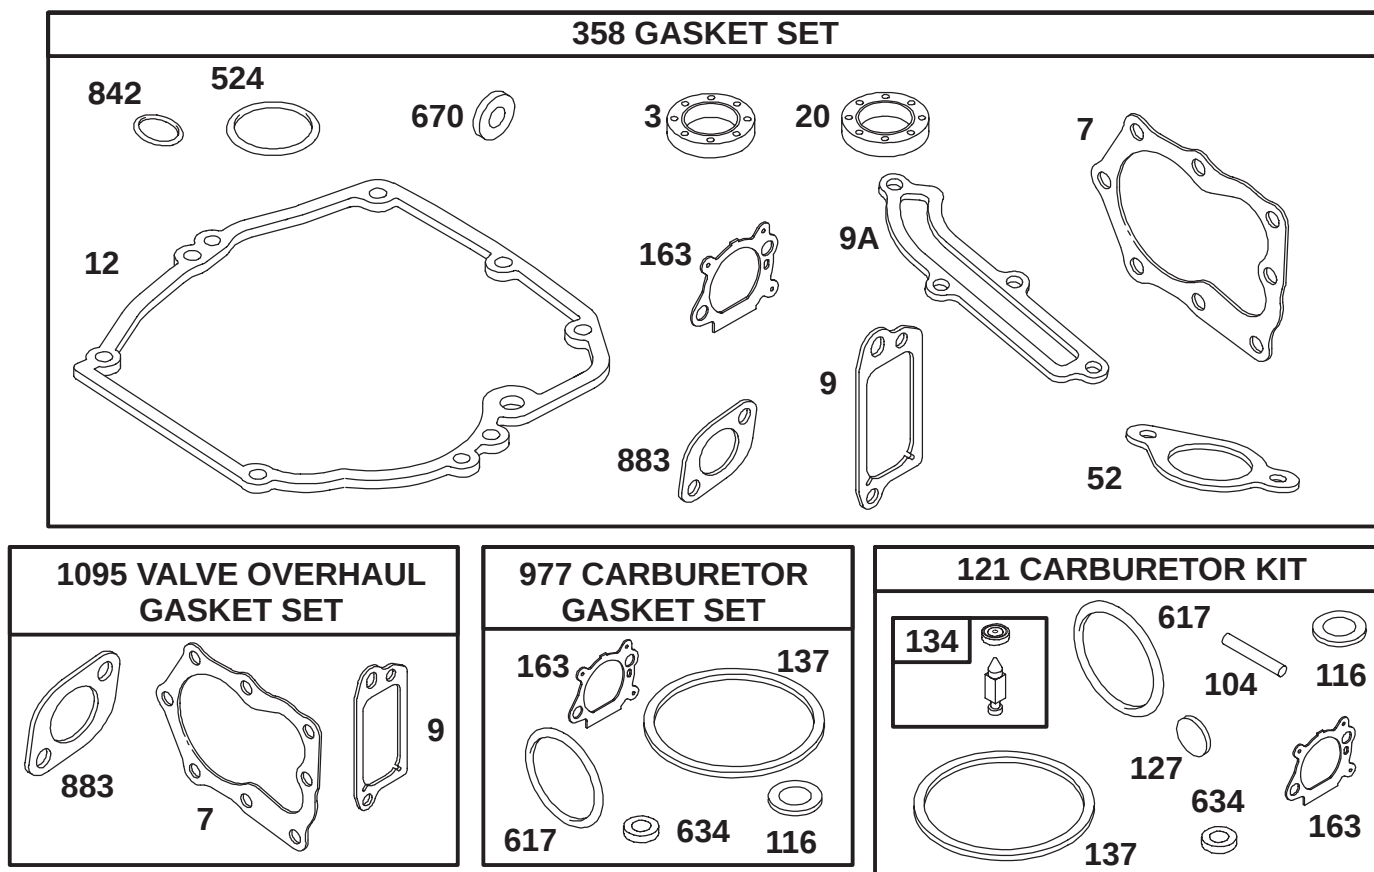 

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12U802-0639-01

Ref. No.	Part No.	Description	No. Used
★3	299819	Seal – Oil	1
★Ø7	272916	Gasket – Cylinder Hd.	1
★Ø9	272481	Gasket – Breather	1
★9A	272238	Gasket – Baffle Plate	1
★12	272198	Gasket – Crankcase	1
★20	399781	Seal – Oil	1
★52	272199	Gasket – Intake Elbow	1
●104	231371	Pin – Float Hinge	1
●◆116		Gasket – Sealing (Sold in Kit Only)	1
121	498260	Carburetor Kit	1
●127		Plug – Welch (Sold in Kit Only)	1
●134	T398188	Valve – Inlet (Includes Seat)	1

Ref. No.	Part No.	Description	No. Used
●◆137		Gasket – Bowl (Sold in Kit Only)	1
★◆163	272653	Gasket – Air Cleaner	1
358	497316	Gasket Set	1
★524	280393	Seal – Filler Tube	1
●◆617	270344	Seal – Fuel Intake Tube	1
●◆634		Washer – Shaft (Sold in Kit Only)	1
★670	493823	Spacer – Bracket (Includes 2)	1
★842	280966	Seal – O-Ring	1
★Ø883	272253	Gasket – Exhaust	1
977	498261	Gasket Set – Carburetor	1
1095	498528	Gasket Set – Valve Overhaul	1

● Included in Carburetor Kit—Part No. 498260.

◆ Included in Carburetor Gasket Set—Part No. 498261.

★ Included in Gasket Set—Part No. 497316.

Ø Included in Valve Overhaul Gasket Set—Part No. 498528.

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
605120	1	5	1	Grommet
610358	2	13	2	Nut—Lock
612543	4	11	1	Blade—21" Whirl
613227	4	10	1	Screw—Set
613455	6	8	1	Wide Hanger
613462	6	7	2	Hanger Clamp
613765	1	11	1	Nut—Cage
614243	5	3	2	Knob
614426	2	19	2	Washer—Stepped
614447	2	9	2	Spacer—Axle Shaft
614589	6	2	1	Nut—Cap
614591	6	3	1	Chute Support
614596	3	5	1	Gear—34t
614637	1	17	2	Bracket—Wheel Height Adj
614643	5	19	1	Handle Section—Lower
614668	3	1	1	Cover—Gear Case
614669	3	17	2	Pulley—Half
614672	1	21	2	Bolt—Shoulder
614677	1	9	2	Screw—Sems
614687	1	22	2	Spring Arm—Front
614696	3	8	1	Shaft—Intermediate
614697	5	2	2	Screw—Handle
614700	6	5	1	Tie Strap
677525	4	1	1	ASM—Plate & Collar
684727	6	4	1	Adapter Assembly
684776	1	19	2	ASM—Wheel & Tire 6"
36-4780	3	6	2	Washer—Thrust
36-4791	3	11	2	Washer—Thrust
38-7820	3	13	1	Bearing—Ball
40-1940	1	18	2	Washer
46-6811	1	7	1	Screw—HWH
49-2040	1	24	2	Screw—HH
55-3760	3	10	1	15 T Pinion
60-8750	3	12	2	Bushing
60-8850	3	3	2	Bushing—Output
60-8890	3	15	1	Gear—Pinnion
62-6660	3	18	1	Spacer—Pulley
65-2720	2	3	4	Ring—Retaining
65-4710	2	7	2	Ring—Friction
65-4720	2	17	2	Spring—Compression
65-4730	2	14	2	Washer—Thrust
65-4740	2	4	4	Washer—Thrust
65-4750	2	16	2	Gear—Pinion
65-4760	2	15	2	Washer
66-6040	2	6	1	Key—Rocking
66-6050	2	5	1	Key—Rocking
82-8550	4	14	1	Shield—Muffler
92-1001	5	9	1	Bail—Sp Control
92-1004	2	12	2	ASM—Spring Arm
92-1008	1	23	2	Knob—Height Adjust
92-1008	2	20	2	Knob—Height Adjust
92-1024	4	4	1	Guide—Belt
92-1042	2	2	2	ASM—Whl
92-1057	2	1	2	Bolt—Shoulder
92-1099	1	20	2	Bolt—Shoulder 6" Wheel
92-2269	5	5	1	Screw—Handle
92-4881	1	14	2	Plate—Height Adjust
92-4890	1	15	2	Washer
92-5412	5	8	1	Stop—Pivot
92-6542	4	2	1	Pulley—Engine
92-7723	1	30	1	ASM—Handle Bracket
92-7724	1	3	1	ASM—Handle Bracket
92-7727	3	2	1	Gearcase—Upper Ss

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
92–7728	1	6	1	Guide—Transmission
92–7731	1	16	2	Plate—Baffle
92–7735	1	4	1	ASM—Gear Case
92–7746	2	8	2	ASM—Hgt Adj Arm
92–8626	4	21	1	Spacer—Blade
92–8647	1	38	1	Shield—Trailing
92–9665	1	26	1	Screw—Phil
93–0239	3	7	1	Shaft—Output
93–3653	5	27	1	Handle—Guard
93–4196	4	13	1	Shield—Grass
93–6657	1	43	1	Decal—Danger
93–6667	1	45	2	Decal—Danger
93–6670	1	2	2	Decal—HOC
93–6671	1	1	2	Decal—HOC
93–7152	4	25	1	Plate—Engine
93–7266	5	40	1	Decal—Operation
93–7380	5	1	1	Anchor—Cable
93–7381	2	10	1	V—Belt
93–7383	5	16	1	Guide—Rope
93–8470	4	23	1	Screw—Clamp (P/W Eng)
94–1609	2	18	2	Cover—Wheel
94–1610	1	10	2	Grommet—Plastic
94–1697	1	46	1	Guard—Plate
94–6096	5	6	1	Anchor—Cable
94–6097	5	30	1	Stop—Bail
94–6099	5	12	1	Bail—Flywheel Brake
95–1704	4	16	1	Shroud—Engine
95–1706	4	18	2	Screw—Shroud (P/W Eng)
95–1707	4	19	2	Screw—Air Cleaner (P/W)
95–1709	4	17	1	Cover A/C
95–1713	5	13	1	Handle Section—Upper
95–1718	5	18	1	ASM—Brake Cable
95–1726	4	3	3	Screw—Engine Mount
95–1748	4	7	1	Bolt—Blade
95–5590	5	7	1	Cable—Traction
95–7050	6	6	1	Bag Assembly
95–7051	1	48	1	Decal—Deck
95–7052	1	8	1	Plate—Cover
95–7053	4	8	1	Decal—Recoil
95–7061	4	24	1	Nameplate—Shroud
95–7064	5	17	1	Cable—Throttle
95–7068	1	27	1	Cover—Drive
95–7079	6	9	1	Decal—Danger
95–7081	6	1	1	Chute & Support Assembly
95–7088	1	35	1	Housing & Baffle ASM
2210–249	4	22	1	Clamp—Casing (P/W Eng)
2210–316	4	6	1	Rope—Stop (P/W Eng)
321–50	5	15	1	Screw
322–3	1	39	6	Screw—HH
3253–22	4	20	1	Washer—Lock
3256–1	5	32	1	Washer—Flat
3256–24	3	14	1	Washer—Flat
3285–19	3	4	2	Pin—Spirol
3290–378	5	33	3	Tie—Cable
3296–5	3	16	1	Nut—Lock
3296–29	1	37	6	Nut—Lock
3296–42	1	47	2	Nut—Lock
3296–73	5	4	2	Nut—Lock
32105–15	1	44	2	Screw—HH
32144–4	3	9	4	Screw—TAP
32144–73	4	15	3	Screw—HWHTF
32144–85	2	11	2	Screw—HH

*Not Illustrated