



Count on it.

Operator's Manual

**Industrial Workman® HDX-D
Utility Vehicle with Bed**

Model No. 07379—Serial No. 313000001 and Up



This machine is a utility vehicle intended to be used by professional, hired operators in commercial applications. It is primarily designed for the transport of implements used in such applications. This vehicle allows for the safe transport of an operator and one passenger in the identified seats. The bed of this vehicle is not suitable for any riders.

Introduction

⚠ WARNING

CALIFORNIA Proposition 65 Warning

This product contains a chemical or chemicals known to the State of California to cause cancer, birth defects, or reproductive harm.


Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

Use of this product may cause exposure to chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.

Read this information carefully to learn how to operate and maintain your product properly and to avoid injury and product damage. You are responsible for operating the product properly and safely.

You may contact Toro directly at www.Toro.com for product and accessory information, help finding a dealer, or to register your product.

Whenever you need service, genuine Toro parts, or additional information, contact an Authorized Service Dealer or Toro Customer Service and have the model and serial numbers of your product ready. Figure 1 identifies the location of the model and serial numbers on the product. Write the numbers in the space provided.

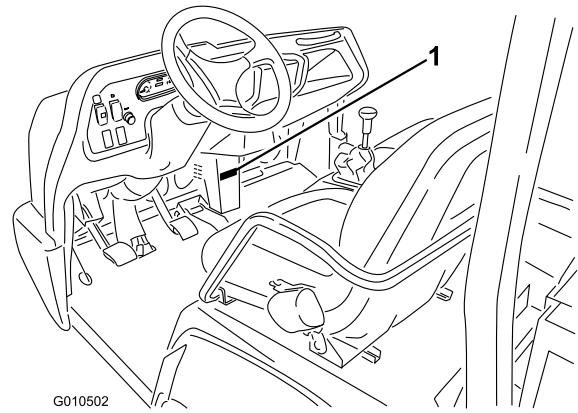

G010502

Figure 1

1. Model and serial number location

Model No. _____

Serial No. _____

This manual identifies potential hazards and has safety messages identified by the safety alert symbol (Figure 2), which signals a hazard that may cause serious injury or death if you do not follow the recommended precautions.



Figure 2

1. Safety alert symbol
-

This manual uses 2 other words to highlight information. **Important** calls attention to special mechanical information and **Note** emphasizes general information worthy of special attention.

Contents

Introduction	2	Installing the Full Bed	30
Safety	5	Jacking Up the Vehicle	31
Safe Operating Practices	5	Removing the Hood	31
Supervisor's Responsibilities	5	Lubrication	32
Before Operating	5	Greasing Bearings and Bushings	32
Operation	6	Engine Maintenance	35
Maintenance	7	Servicing the Air Cleaner	35
Sound Pressure	7	Changing the Engine Oil and Filter	35
Vibration	7	Fuel System Maintenance	36
Sound Level Certification	7	Fuel Lines and Connections	36
Safety and Instructional Decals	8	Servicing the Water Separator/Fuel Filter	36
Setup	13	Electrical System Maintenance	37
1 Checking the Fluid Levels	13	Fuses	37
Product Overview	14	Jump Starting the Vehicle	38
Controls	14	Servicing the Battery	38
Specifications	17	Drive System Maintenance	39
Attachments/Accessories	17	Changing the Front Differential Oil	
Operation	17	(Four-wheel-drive Models Only)	39
Checking the Engine-oil Level	17	Inspecting the Constant Velocity Boot	
Adding Fuel	18	(Four-wheel-drive Models Only)	39
Checking the Coolant Level	19	Adjusting the Shift Cables	40
Checking the Transaxle/Hydraulic Fluid		Adjusting the High-Low Cable	40
Level	19	Inspecting the Tires	40
Checking the High-flow Hydraulic Fluid (If so		Checking the Front Wheel Alignment	40
equipped)	20	Cooling System Maintenance	41
Checking the Front-differential-oil Level		Removing Debris from the Cooling System	41
(Four-wheel-drive Models Only)	20	Changing the Engine Coolant	42
Checking the Torque of the Wheel Nuts	21	Brake Maintenance	43
Checking the Tire Pressure	21	Adjusting the Parking Brake	43
Checking the Brake Fluid	21	Adjusting the Brake Pedal	44
Pre-starting Checks	22	Belt Maintenance	44
Starting the Engine	22	Adjusting Belts	44
Driving the Vehicle	22	Controls System Maintenance	45
Stopping the Vehicle	23	Adjusting the Accelerator Pedal	45
Stopping the Engine	23	Adjusting the Clutch Pedal	45
Break-in New Vehicle	23	Converting the Speedometer	46
Checking the Interlock System	23	Hydraulic System Maintenance	46
Operating Characteristics	23	Changing the Hydraulic Fluid and Cleaning the	
Passengers	24	Strainer	46
Speed	24	Replacing the Hydraulic Filter	47
Turning the Vehicle	25	Changing the High-flow Hydraulic Oil and Filter	
Braking the Vehicle	25	(If so equipped)	47
Preventing Tip Overs	25	Storage	49
Operating the Vehicle on Hills	25	Schematics	50
Loading onto and Dumping From the			
Vehicle	26		
Four Wheel Drive (Four-wheel-drive Models			
Only)	26		
Transporting the Vehicle	26		
Towing the Vehicle	27		
Towing a Trailer with the Vehicle	27		
Maintenance	28		
Recommended Maintenance Schedule(s)	28		
Heavy-duty Operation	30		
Pre-maintenance Procedures	30		
Removing the Full Bed	30		

Safety

This machine meets the requirements of SAE J2258.

Supervisors, operators and service persons should be familiar with the following standards and publications: (The material may be obtained from the address shown).

- Flammable and Combustible Liquids Code:
ANSI/NFPA 30
- National Fire Protection Association:
ANSI/NFPA #505; Powered Industrial Trucks
ADDRESS:
National Fire Prevention Association
Barrymarch Park
Quincy, Massachusetts 02269 U.S.A
- ANSI/ASME B56.8 Personal Burden Carriers
ADDRESS:
American National Standards Institute, Inc.
1430 Broadway
New York, New York 10018 U.S.A.
- ANSI/UL 558; Internal Combustion Engine Powered Industrial Trucks
ADDRESS:
American National Standards Institute, Inc.
1430 Broadway
New York, New York 10018 U.S.A.
or
Underwriters Laboratories
333 Pfingsten Road
Northbrook, Illinois 60062 U.S.A.

Safe Operating Practices

WARNING

The Workman is an off-highway vehicle only, and is not designed, equipped, or manufactured for use on public streets, roads, or highways.

This machine was designed and tested to offer safe service when operated and maintained properly. Although hazard control and accident prevention partially depend upon the design and configuration of the machine, these factors also depend upon the awareness, concern, and proper training of the personnel involved in the operation, maintenance and storage of the machine. Improper use or maintenance of the machine can result in injury or death.

This is a specialized utility vehicle designed for off-road use only. Its ride and handling will have a different feel than what drivers experience with passenger cars or trucks. So take time to become familiar with this vehicle.

Not all the attachments that adapt to the Workman are covered in this manual. See the specific *Operator's Manual* provided with each attachment for additional safety instructions. **Read these manuals.**

To reduce the potential for injury or death, comply with the following safety instructions.

Supervisor's Responsibilities

- Make sure that all operators are thoroughly trained and familiar with the *Operator's Manual* and all labels on the vehicle.
- Be sure to establish your own special procedures and work rules for unusual operating conditions (e.g., slopes too steep for vehicle operation). Use the 3rd high lockout switch if driving at high speed could endanger you and others or damage the vehicle.

Before Operating

- Operate the machine only after reading and understanding the contents of this manual. A replacement manual is available by sending complete model and serial number to: The Toro Company, 8111 Lyndale Avenue South, Minneapolis, Minnesota 55420.
- **Never** allow children to operate the vehicle. **Never** allow adults to operate it without proper instructions. Only trained and authorized persons should operate this vehicle. Make sure that all operators are physically and mentally capable of operating the vehicle.
- This vehicle is designed to carry **only you**, the operator, and **1 passenger** in the seat provided by the manufacturer. **Never** carry any other passengers on the vehicle.
- **Never** operate the vehicle when under the influence of drugs or alcohol.
- Become familiar with the controls and know how to stop the engine quickly.
- Keep all shields, safety devices, and decals in place. If a shield, a safety device, or a decal is malfunctioning, illegible, or damaged, repair or replace it before operating the machine.
- Always wear substantial shoes. Do not operate the machine while wearing sandals, tennis shoes, or sneakers. Do not wear loose fitting clothing or jewelry which could get caught in moving parts and cause personal injury.
- Wearing safety glasses, safety shoes, long pants, and a helmet is advisable and required by some local safety and insurance regulations.
- Keep everyone, especially children and pets, away from the areas of operation.
- Before operating the vehicle, always check all parts of the vehicle and any attachments. If something is wrong,

- **stop using the vehicle.** Make sure that the problem is corrected before operating the vehicle or the attachment.
- Since diesel fuel is highly flammable, handle it carefully.
 - Use an approved fuel container.
 - Do not remove the cap from the fuel tank when the engine is hot or running.
 - Do not smoke while handling fuel.
 - Fill the fuel tank outdoors and to about 1 inch below the top of tank (bottom of filler neck). **Do not overfill the tank.**
 - Wipe up any spilled fuel.
- Operate the vehicle only outdoors or in a well-ventilated area.
- Use only an approved nonmetal, portable fuel container. Static electric discharge can ignite fuel vapors in a ungrounded fuel container. Remove the fuel container from the bed of the vehicle and place it on the ground away from the vehicle before filling. Keep the nozzle in contact with the container while filling. Remove the equipment from vehicle bed before filling the tank.
- Check the safety interlock system daily for proper operation. If a switch malfunctions, replace the switch before operating the machine.

Operation

- The operator and passenger should use seat belts and remain seated whenever the vehicle is in motion. The operator should keep both hands on the steering wheel whenever possible, and the passenger should use the hand holds provided. Keep arms and legs within the vehicle body at all times. Never carry passengers in the box or on attachments. Remember that your passenger may not be expecting you to brake or turn and may not be ready.
- Never overload your vehicle. The name plate (located under the middle of the dash) shows the load limits for the vehicle. Never overfill attachments or exceed the vehicle maximum gross vehicle weight (GVW).
- When starting the engine:
 - Sit on operator's seat and ensure that the parking brake is engaged.
 - Disengage the PTO (if so equipped) and return the hand throttle lever to the Off position (if so equipped).
 - Move the shift lever to the Neutral position and press the clutch pedal.
 - Keep your foot off the accelerator pedal.
 - Turn the ignition switch to the On position. When the glow plug indicator goes off, the engine is ready to start.
 - Turn the ignition key to the Start position.
- **Note:** The glow plug indicator will turn on for an additional 15 seconds when you return the switch to the On position.
- Using the machine demands attention. Failure to operate vehicle safely may result in an accident, tipping over of the vehicle, and serious injury or death. Drive carefully. To prevent tipping or loss of control, take the following precautions:
 - Use extreme caution, reduce speed, and maintain a safe distance around sand traps, ditches, creeks, ramps, any unfamiliar areas, or other hazards.
 - Watch for holes or other hidden hazards.
 - Use caution when operating the vehicle on a steep slope. Normally, travel straight up and down slopes. Reduce speed when making sharp turns or when turning on hillsides. Avoid turning on hillsides whenever possible.
 - Use extra caution when operating the vehicle on wet surfaces, at higher speeds, or with a full load. Stopping time will increase with a full load. Shift into a lower gear before starting up or down a hill.
 - When loading the bed, distribute the load evenly. Use extra caution if the load exceeds the dimensions of the vehicle/bed. Operate the vehicle with extra caution when handling off-center loads that cannot be centered. Keep loads balanced and secure to prevent them from shifting.
 - Avoid sudden stops and starts. Do not go from reverse to forward or forward to reverse without first coming to a complete stop.
 - Do not attempt sharp turns or abrupt maneuvers or other unsafe driving actions that may cause a loss of vehicle control.
 - Do not pass another vehicle traveling in the same direction at intersections, blind spots, or at other dangerous locations.
 - Keep all bystanders away. Before backing up, look to the rear and ensure that no one is behind the vehicle. Back up slowly.
 - Watch out for traffic when near or crossing roads. Always yield the right of way to pedestrians and other vehicles. This vehicle is not designed for use on streets or highways. Always signal your turns or stop early enough so that other persons know what you plan to do. Obey all traffic rules and regulations.
 - Never operate the vehicle in or near an area where there is dust or fumes in the air, which are explosive. The electrical and exhaust systems of the vehicle can produce sparks capable of igniting explosive materials.
 - Always watch out for and avoid low overhangs, such as tree limbs, door jambs, over head walkways, etc. Make sure that there is enough room over-head to easily clear the vehicle and your head.
 - If you are ever unsure about safe operation, **stop work** and ask your supervisor.
- Do not touch the engine, transaxle, radiator, muffler or muffler manifold while the engine is running or soon

after it has stopped, because these areas may be hot enough to cause burns.

- If the machine ever vibrates abnormally, stop immediately, turn engine off, wait for all motion to stop and inspect for damage. Repair all damage before resuming operation.
- Before getting off the seat:
 - Stop the machine.
 - Shut off the engine and wait for all movement to stop.
 - Set the parking brake.
 - Remove the key from the ignition.
- Lightning can cause severe injury or death. If lightning is seen or thunder is heard in the area, do not operate the machine; seek shelter.

Maintenance

- Before servicing or making adjustments to the machine, stop the engine, set the parking brake, and remove the key from the ignition to prevent accidental starting of the engine.
- Make sure that all hydraulic line connectors are tight and all hydraulic hoses and lines are in good condition before applying pressure to the system.
- Keep your body and hands away from pin-hole leaks or nozzles that eject hydraulic fluid under high pressure. Use paper or cardboard, not your hands, to search for leaks. Hydraulic fluid escaping under pressure can have sufficient force to penetrate skin and do serious damage. If fluid is injected into the skin, it must be surgically removed within a few hours by a doctor familiar with this form of injury; otherwise, gangrene may result.
- To make sure that the entire machine is in good condition, keep all nuts, bolts, and screws properly tightened.
- To reduce the potential fire hazard, keep the engine area free of excessive grease, grass, leaves, and dirt.
- If the engine must be running to perform a maintenance adjustment, keep your hands, feet, clothing, and any parts of your body away from the engine and from any moving parts. Keep everyone away.
- Do not overspeed the engine by changing the governor settings. The maximum engine speed is 3650 rpm. To ensure safety and accuracy, have an Authorized Toro Distributor check the maximum engine speed with a tachometer.
- If major repairs are ever needed or if assistance is required, contact an Authorized Toro Distributor.
- To be sure of optimum performance and safety, always purchase genuine Toro replacement parts and accessories. Replacement parts and accessories made by other manufacturers could be dangerous. Altering this vehicle in any manner may affect the vehicle's operation,

performance, durability or its use may result in injury or death. Such use could void the product warranty of The Toro Company.

- This vehicle should not be modified without The Toro Company's authorization. Direct any inquiries to The Toro Company, Commercial Division, Vehicle Engineering Dept., 8111 Lyndale Ave. So., Bloomington, Minnesota 55420-1196 USA

Sound Pressure

This unit has a sound pressure level at the operator's ear of 82 dBA, which includes an Uncertainty Value (K) of 1 dBA.

The sound pressure level was determined according to the procedures outlined in EN ISO 11201.

Vibration

Hand-Arm

- Measured vibration level for right hand = 0.41 m/s²
- Measured vibration level for left hand = 0.2 m/s²
- Uncertainty Value (K) = 0.5 m/s²

Measured values were determined according to the procedures outlined in EN 1032.

Whole Body

- Measured vibration level = 0.3 m/s²
- Uncertainty Value (K) = 0.5 m/s²

Measured values were determined according to the procedures outlined in EN 1032.

Sound Level Certification

When tested per ITSDF B56-11-5-2005 the vehicle meets Alcoa 30.3.2 Section 4.1.2a for engine speeds up to:

- 3650 without cab @ 80 dBA
- 2850 with cab @ 80 dBA

Safety and Instructional Decals




Safety decals and instructions are easily visible to the operator and are located near any area of potential danger. Replace any decal that is damaged or lost.



93-9852


1. Warning—read the *Operator's Manual*.

2. Crushing hazard—install the cylinder lock.

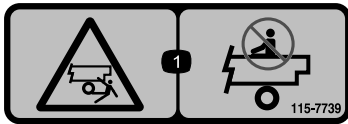


115-7739

1. Falling, crushing hazard, bystanders—no riders on machine.

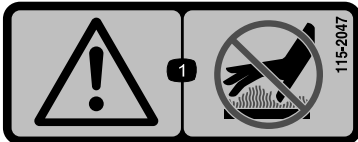

115-2047


1. Warning—do not touch the hot surface.

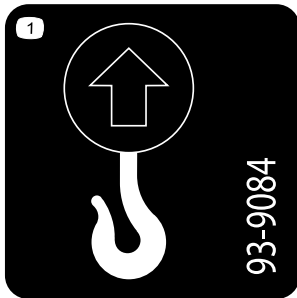

93-9084

1. Lift point

2. Tie-down point

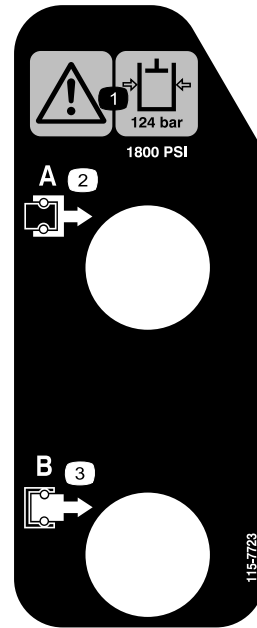


115-7723

1. Warning—the hydraulic oil pressure is 124 bar (1800 psi).

2. Coupler A


3. Coupler B

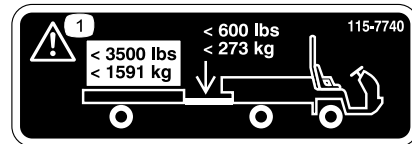

115-7740

1. Warning—maximum trailer weight is 680 kg (1500 lb), maximum tongue weight is 90 kg (200 lb).

2. Warning—trailer brakes are required when towing greater than 680 kg (1500 lb), maximum trailer weight with trailer brakes is 1591 kg (3500 lb), maximum tongue weight with trailer brakes is 273 kg (600 lb).

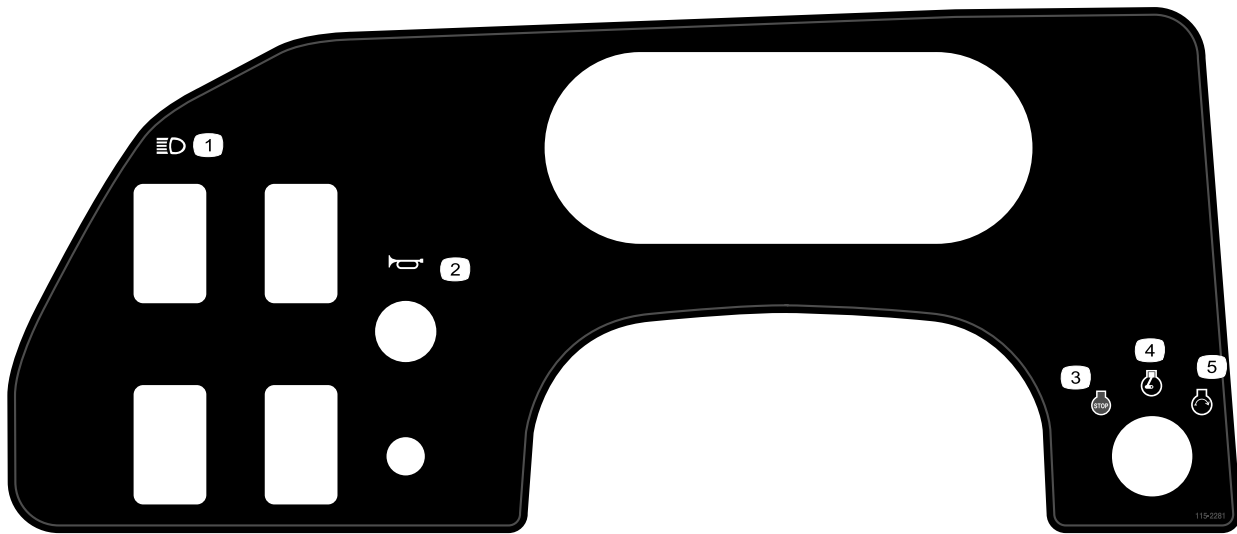

115-2281

1. Headlights
2. Horn
3. Engine—stop
4. Engine—run
5. Engine—start




115-7746

1. Warning—do not operate this machine unless you are trained.
2. Warning—lock the parking brake, stop the engine, and remove the ignition key before leaving the machine.
3. Fire hazard—stop the engine before fueling.
4. Tipping hazard—slow down and turn gradually, use caution and drive slowly when driving on slopes, do not exceed 32 kph (20 mph), and drive slowly over rough terrain or when carrying a full or heavy load.




115-2282

1. Warning—read the *Operator's Manual*.
2. Warning—stay away from moving parts, keep all guards and shields in place.
3. Crushing/dismemberment hazard of bystanders—keep bystanders a safe distance from the vehicle, do not carry passengers in the cargo bed, keep arms and legs inside of the vehicle at all times, and use seat belts and handholds.

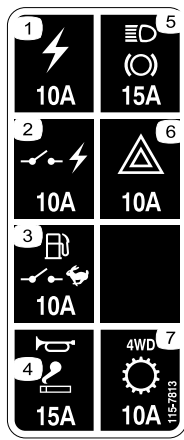

115-7813

1. Power outlet 10A
2. Switched power 10A
3. Fuel pump, supervisor switch 10A
4. Horn, power point 15A
5. Lights, brake 15A
6. Hazard 10A
7. 4WD, Transmission 10A

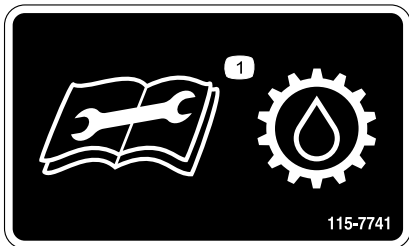


115-7741

1. Read the *Operator's Manual* before servicing transmission fluid.




106-6755

 1. Engine coolant under pressure.
2. Explosion hazard—read the *Operator's Manual*.
3. Warning—do not touch the hot surface.
4. Warning—read the *Operator's Manual*.




93-9879

1. Stored energy hazard—read the *Operator's Manual*.

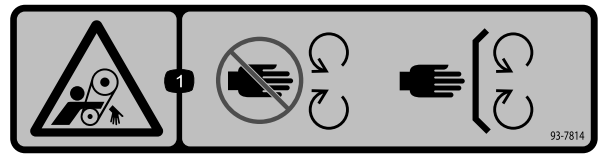


93-7814

 1. Entanglement hazard, belt—stay away from moving parts.




93-9868

1. Crushing hazard of hand—read the *Operator's Manual*.

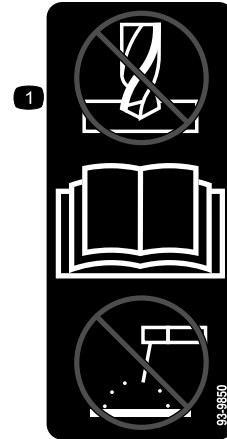


93-9850

1. Do not repair or revise—read the *Operator's Manual*.

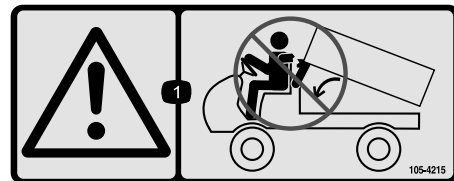


105-4215

1. Warning—avoid pinch points.

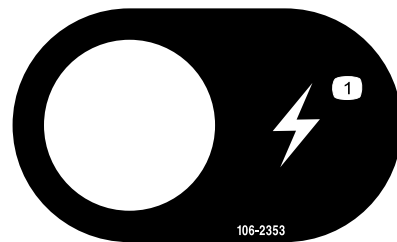

106-2353

1. Electrical power point

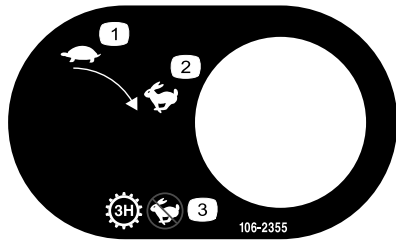

106-2355

1. Slow
2. Fast
3. Transmission—third high; no fast speed



93-9899

1. Crushing hazard—install the cylinder lock.




106-7767

1. Warning—read the *Operator's Manual*; avoid tipping the machine; wear the seat belt; lean away from the direction the machine is tipping.



115-7756

1. High flow hydraulics—engaged

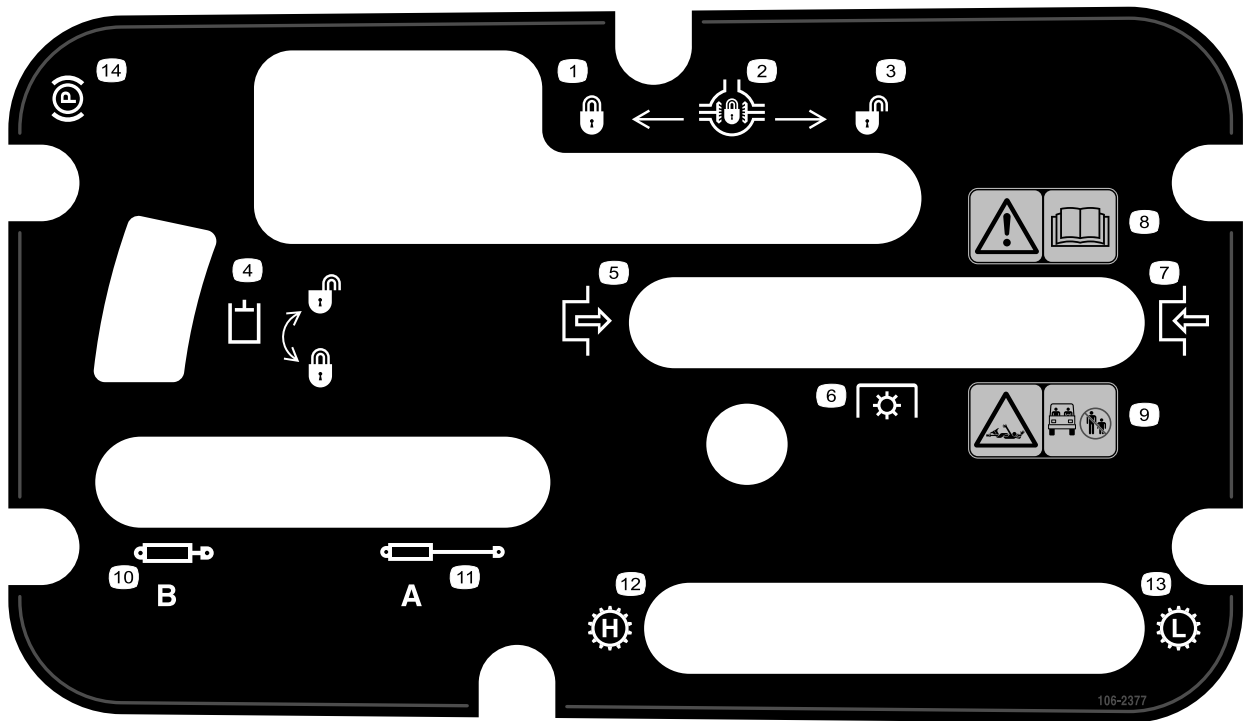

106-2377

- | | |
|-------------------------|--|
| 1. Locked | 8. Warning—read the <i>Operator's Manual</i> . |
| 2. Differential lock | 9. Entanglement hazard, shaft—keep bystander's a safe distance from the vehicle. |
| 3. Unlocked | 10. Retract hydraulics |
| 4. Hydraulic lock | 11. Extend hydraulics |
| 5. Engage | 12. Transmission—high speed |
| 6. Power take-off (PTO) | 13. Transmission—low speed |
| 7. Disengage | 14. Parking brake |



Battery Symbols

Some or all of these symbols are on your battery

- | | |
|--|--|
| 1. Explosion hazard | 6. Keep bystanders a safe distance from the battery. |
| 2. No fire, open flame, or smoking. | 7. Wear eye protection; explosive gases can cause blindness and other injuries |
| 3. Caustic liquid/chemical burn hazard | 8. Battery acid can cause blindness or severe burns. |
| 4. Wear eye protection | 9. Flush eyes immediately with water and get medical help fast. |
| 5. Read the <i>Operator's Manual</i> . | 10. Contains lead; do not discard. |

Setup

Loose Parts

Use the chart below to verify that all parts have been shipped.

Procedure	Description	Qty.	Use
1	No parts required	–	Check the fluid levels

Media and Additional Parts

Description	Qty.	Use
Operator's Manual	1	Read the manual before operating the vehicle.
Parts Manual	1	Use the manual to reference the part numbers.
Operator Training Material	1	View the manual before operating themachine.

Note: Determine the left and right side of the machine from the normal operating position.



Checking the Fluid Levels

No Parts Required

Procedure

1. Check the engine oil level before and after the engine is first started; refer to Checking the Engine-oil Level (page 17).
2. Check the transaxle/hydraulic fluid level before the engine is first started; refer to Checking the Transaxle/Hydraulic Fluid Level (page 19).
3. Check the brake fluid level before the engine is first started; refer to Checking the Brake Fluid (page 21).

Product Overview

Controls

Note: Determine the left and right sides of the machine from the normal operating position.

Accelerator Pedal

The accelerator pedal (Figure 3) gives you the ability to vary the engine and ground speed of the vehicle when the transmission is in gear. Pressing the pedal increases engine speed and the ground speed. Releasing the pedal decreases the engine speed and the ground speed of the machine.

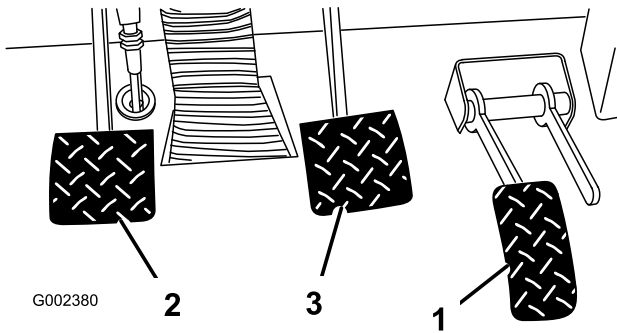


Figure 3

1. Accelerator pedal
2. Clutch pedal
3. Brake pedal

Clutch Pedal

Press the clutch pedal (Figure 3) fully to disengage the clutch when starting the engine or shifting the transmission gears. Release the pedal smoothly when the transmission is in gear to prevent unnecessary wear on the transmission and other related parts.

Important: Do not ride the clutch pedal during operation. The clutch pedal must be fully out or the clutch will slip causing heat and wear. Never hold the vehicle stopped on a hill using the clutch pedal. Damage to the clutch may occur.

Brake Pedal

Use the brake pedal (Figure 3) to apply the service brakes to stop or slow the vehicle.

⚠ CAUTION

Worn or maladjusted brakes may result in personal injury. If the brake pedal travels to within 3.8 cm (1-1/2 inches) of the vehicle floor board, the brakes must be adjusted or repaired.

Gear Shift Lever

Fully press the clutch pedal and move the shift lever (Figure 4) into the desired gear selection. A diagram of the shift pattern is indicated below.

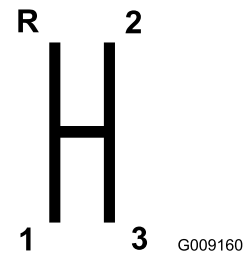


Figure 4

Important: Do not shift the transaxle to the reverse or forward gear unless the vehicle is standing still. Damage to the transaxle may occur.

⚠ CAUTION

Down shifting from too high a speed can cause the rear wheels to skid resulting in loss of vehicle control as well as clutch and/or transmission damage. Shift smoothly to avoid grinding gears.

Parking Brake

Whenever the engine is shut off, the parking brake (Figure 5) must be engaged to prevent accidental movement of the vehicle. To engage the parking brake, pull back on the lever. To disengage, push the lever forward. Release the parking brake before moving the vehicle. If you park the vehicle on a steep grade, apply the parking brake. Also, shift the transmission into 1st gear on an uphill grade or reverse on a downhill grade. Place chocks at the downhill side of the wheels.

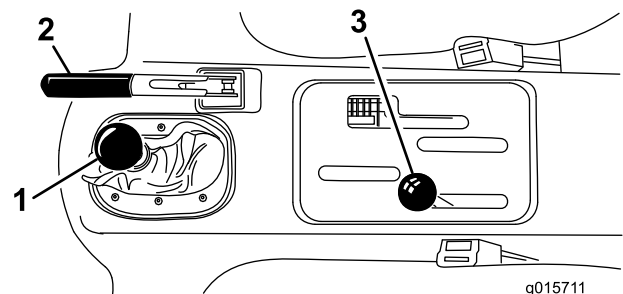


Figure 5

1. Gear shift lever
2. Parking brake
3. High-low range shifter

High-Low Range Shifter

The high-low range shifter adds three additional speeds for precise speed control (Figure 5).

- The vehicle must be completely stopped before shifting between High and Low range.

- Shift only on level ground.
- Press clutch pedal fully.
- Move the lever fully forward for High and fully rearward for Low.

High is for higher speed driving on level, dry surfaces with light loads.

Low is for low speed driving. Use this range when greater than normal power or control is required. For example, steep grades, difficult terrain, heavy loads, slow speed but high engine speed (spraying).

Important: There is a location between High and Low in which the transaxle is in neither range. Do not use this position as a neutral position because the vehicle could move unexpectedly if the High–Low shifter is bumped and the gear shift lever is in gear.

Ignition Switch

Use the ignition switch (Figure 6) to start and stop the engine. It has three positions: Off, On/Preheat, and Start. Rotate the key clockwise to the Start position to engage the starter motor. Release the key when the engine starts. The key will move automatically to the On position. To shut the engine off, rotate the key counterclockwise to the Off position.

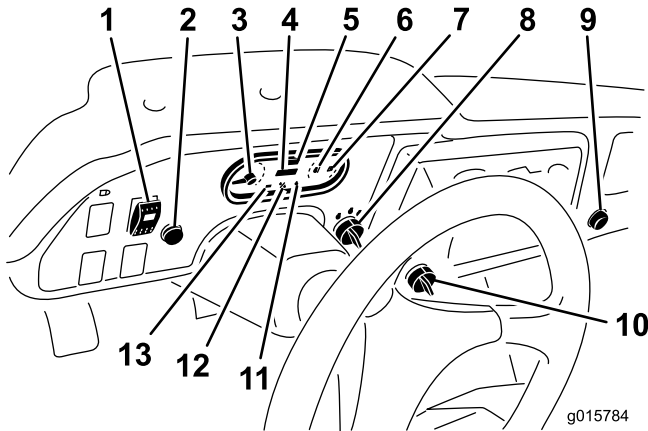


Figure 6

- | | |
|---|--------------------------------|
| 1. High flow hydraulics switch (Optional) | 8. Ignition switch |
| 2. Horn | 9. Power point |
| 3. Tachometer | 10. 3rd high lockout switch |
| 4. Hour meter | 11. Oil pressure warning light |
| 5. Speedometer | 12. Glow plug indicator |
| 6. Coolant temperature gauge and light | 13. Charge indicator |
| 7. Fuel gauge | |

Hour Meter

Indicates the total hours of machine operation. The hour meter (Figure 6) starts to function whenever the key switch is rotated to the On position or if the engine is running.

Third High Lockout Switch

Move the 3rd high lockout switch (Figure 6) to the slow position and remove the key to prevent the use of third gear when in the High range. The engine will shut off if the shift lever is moved to third gear when in High range. The key is removable in either position.

Oil Pressure Warning Light

The oil pressure warning light glows (Figure 6) if the engine oil pressure drops below a safe level while the engine is running. If the light flickers or remains on, stop the vehicle, turn off the engine, and check the oil level. If the oil level was low, but adding oil does not cause the light to go out when the engine is restarted, turn the engine off immediately and contact your local Toro distributor for assistance.

Check the operation of warning lights as follows:

1. Apply the parking brake.
2. Turn the ignition key to the On/Preheat position, but do not start the engine. The oil pressure light should glow red. If the light does not function, either a bulb is burned out or there is a malfunction in the system which must be repaired.

Note: If engine was just turned off, it may take 1 to 2 minutes for the light to come on.

Low Oil Pressure Shut Down

If the engine oil pressure drops below a safe level, for more than 10 seconds, the engine will shut down. Contact your local Toro distributor for assistance.

Glow Plug Indicator

Glow plug indicator (Figure 6) will glow red when the glow plugs are activated.

Important: The glow plug indicator will turn on, for an additional 15 seconds, when the switch returns to the On position.

Coolant Temperature Gauge and Light

Registers the coolant temperature in the engine. Operates only when the ignition switch is in On position (Figure 6). The indicator light will illuminate blinking red if the engine overheats.

Charge Indicator

The charge indicator illuminates when the battery is being discharged. If the light illuminates during operation, stop the vehicle, turn off the engine and check for possible causes, such as the alternator belt (Figure 6).

Important: If the alternator belt is loose or broken, do not operate the vehicle until adjustment or repair is

complete. Failure to observe this precaution may result in damage to the engine.

Check the operation of warning lights as follows:

- Apply the parking brake.
- Turn the ignition key to the On/Preheat position, but do not start the engine. The coolant temperature, charge indicator, and oil pressure lights should glow. If any light does not function, either a bulb is burned out or there is a malfunction in the system which must be repaired.

Fuel Gauge

The fuel gauge shows the amount of fuel in the tank. It operates only when the ignition switch is in the On/Preheat position (Figure 6). Red indicates low fuel level and blinking red indicates near empty.

High-flow Hydraulics Switch (If so equipped)

Turn on the switch to activate the high flow hydraulics (Figure 6).

Horn Button

Pressing the horn button activates the horn (Figure 6).

Tachometer

Registers the rpm of the engine (Figure 6 & Figure 7). White triangle indicates the desired rpm for PTO operation (Figure 7).

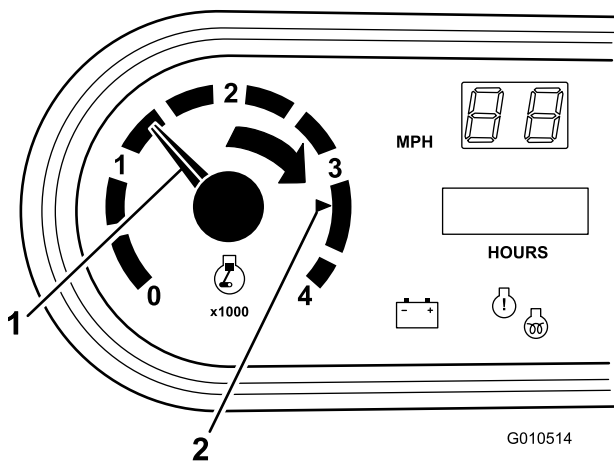


Figure 7

1. Rpm of the engine
2. 3300 rpm for 540 rpm PTO operation

Speedometer

Registers the ground speed of the vehicle (Figure 6). The speedometer is in mph but can easily be converted to kph. Refer to Converting the Speedometer (page 46).

Power Point

Use the power point (Figure 6) to power optional 12 volt electrical accessories.

Passenger Hand Hold

The passenger hand hold is located on the dashboard (Figure 8).

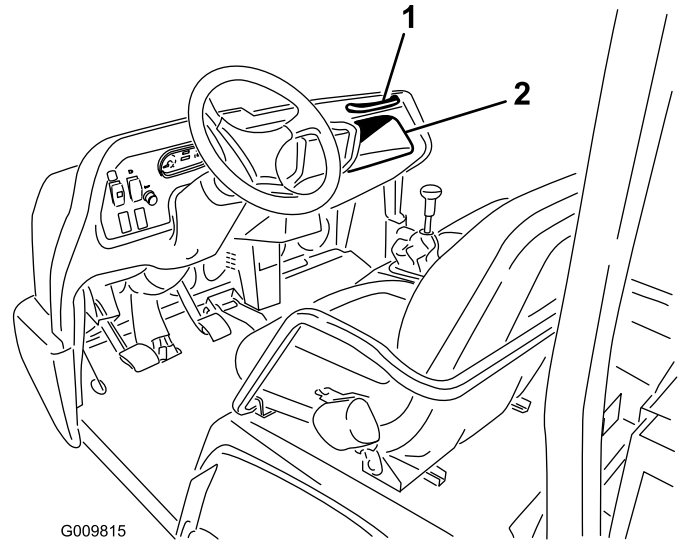


Figure 8

1. Passenger hand hold
2. Storage compartment

Seat Adjusting Lever

The seats can be adjusted fore and aft for operator comfort (Figure 9).

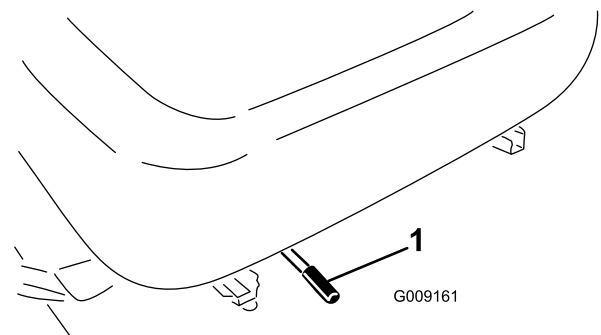


Figure 9

1. Seat adjusting lever

Specifications

Note: Specifications and design are subject to change without notice.

Dimensions

Overall Width	160 cm (63 inches)
Overall Length	w/o bed: 326 cm (128.25 inches) w/full bed: 331 cm (130.38 inches) w/2/3 bed in rear mounting location: 346 cm (136.38 inches)
Base Weight (Dry)	819 kg (1806 lb)
Rated Capacity (includes 200 lb. operator, 200 lb. passenger and loaded attachment).	1381 kg (3044 lb)
Maximum. Gross Vehicle Weight	2200 kg (4,850 lb)
Tow Capacity	Tongue weight 272 kg (600 lb) Maximum trailer weight 1587 kg (3,500 lb)
Ground Clearance	18 cm (7 inches) w/ no load
Wheel Base	118 cm (70 inches)
Wheel Tread (center line to center line)	Front: 117 cm (46 inches) Rear: 121 cm (47.7 inches)
Height	190.5 cm (75 inches) to top of ROPS

Attachments/Accessories

A selection of Toro approved attachments and accessories is available for use with the machine to enhance and expand its capabilities. Contact your Authorized Service Dealer or Distributor or go to www.Toro.com for a list of all approved attachments and accessories.

Operation

Note: Determine the left and right sides of the machine from the normal operating position.

⚠ CAUTION

Before servicing or making adjustments to the machine, stop the engine, set the parking brake, and remove the key from the switch.


Checking the Engine-oil Level

Service Interval: Before each use or daily

Note: The best time to check the engine oil is when the engine is cool before it has been started for the day. If it has already been run, allow the oil to drain back down to the sump for at least 10 minutes before checking. If the oil level is at or below the Add mark on the dipstick, add oil to bring the oil level to the Full mark. **Do not overfill.** If the oil level is between the Full and Add marks, no additional oil is required.

The engine uses any Detergent diesel engine oil (API service CH-4 or higher). Choose a viscosity according to the table in Figure 10.

USE THESE SAE VISCOSITY OILS

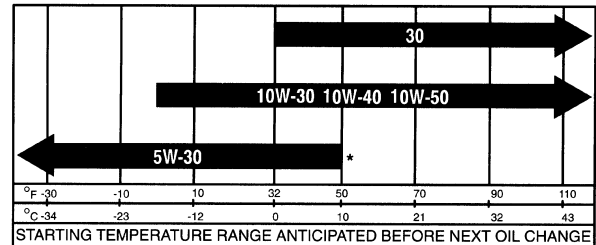

* A synthetic 5W-30 oil may be used.

G001902

Figure 10

1. Position the machine on a level surface.
2. Remove the dipstick and wipe it with a clean rag. Insert the dipstick into the tube and make sure it is seated fully. Remove the dipstick and check the level of the oil.
3. If the oil level is low, remove the filler cap (Figure 11) and add enough oil to raise the level to the Full mark on the dipstick.

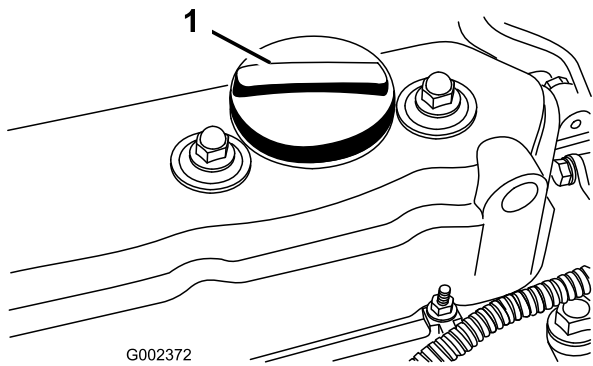


Figure 11

1. Filler cap

4. Install the dipstick firmly in place.

Adding Fuel

Use only clean, fresh diesel fuel or biodiesel fuels with low (<500 ppm) or ultra low (<15 ppm) sulfur content. The minimum cetane rating should be 40. Purchase fuel in quantities that can be used within 180 days to ensure fuel freshness.

Fuel tank capacity: 22 l (5.85 gallons).

Use summer grade diesel fuel (No. 2-D) at temperatures above -7°C (20°F) and winter grade (No. 1-D or No. 1-D/2-D blend) below that temperature. Use of winter grade fuel at lower temperatures provides lower flash point and cold flow characteristics which will ease starting and reduce fuel filter plugging.

Use of summer grade fuel above -7°C (20°F) will contribute toward longer fuel pump life and increased power compared to winter grade fuel.

Important: Do not use kerosene or gasoline instead of diesel fuel. Failure to observe this caution will damage the engine.

⚠ WARNING

Fuel is harmful or fatal if swallowed. Long-term exposure to vapors can cause serious injury and illness.

- Avoid prolonged breathing of vapors.
- Keep your face away from the nozzle and gas tank or conditioner opening.
- Keep fuel away from your eyes and skin.

⚠ DANGER

Under certain conditions, diesel fuel and fuel vapors are highly flammable and explosive. A fire or explosion from fuel can burn you and others and can cause property damage.

- Before removing the fuel tank cap, make sure the vehicle is positioned on a level surface. Open the fuel tank cap slowly.
- Use a funnel and fill the fuel tank outdoors, in an open area, when the engine is off and is cold. Wipe up any fuel that spills.
- Do not fill the fuel tank completely full. Add fuel to the fuel tank until the level is 25 mm (1 inch) below the bottom of the filler neck. This empty space in the tank allows the fuel to expand.
- Never smoke when handling fuel, and stay away from an open flame or where fuel fumes may be ignited by a spark.
- Store fuel in a clean, safety-approved container and keep the cap in place.

Biodiesel Ready

This machine can also use a biodiesel blended fuel of up to B20 (20% biodiesel, 80% petrodiesel). The petrodiesel portion should be low or ultra low sulfur. Observe the following precautions:

- The biodiesel portion of the fuel must meet specification ASTM D6751 or EN14214.
 - The blended fuel composition should meet ASTM D975 or EN590.
 - Painted surfaces may be damaged by biodiesel blends.
 - Use B5 (biodiesel content of 5%) or lesser blends in cold weather.
 - Monitor seals, hoses, gaskets in contact with fuel as they may be degraded over time.
 - Fuel filter plugging may be expected for a time after converting to biodiesel blends.
 - Contact your distributor if you wish for more information on biodiesel.
1. Clean the area around the fuel tank cap.
 2. Remove the fuel tank cap (Figure 12).

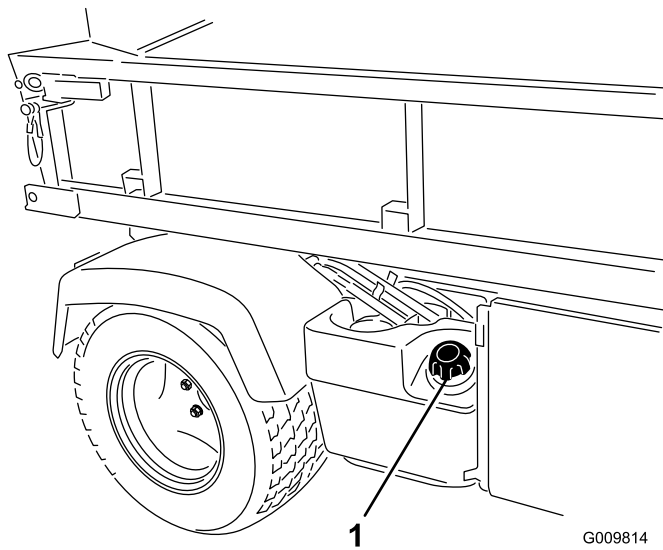


Figure 12

1. Fuel tank cap

3. Fill the tank to about one inch below the top of the tank, (bottom of the filler neck), then install the cap. **Do not overfill.**
4. Wipe up any fuel that may have spilled to prevent a fire hazard.

Checking the Coolant Level

Service Interval: Before each use or daily

Cooling system capacity: 3.7 l (4 qt)

The cooling system is filled with a 50/50 solution of water and permanent ethylene glycol antifreeze.

1. Park the machine on a level surface.

CAUTION

If the engine has been running, the pressurized, hot coolant can escape and cause burns.

- Do not open the radiator cap.
 - Allow the engine to cool at least 15 minutes or until the radiator cap is cool enough to touch without burning your hand.
 - Use a rag when opening the reserve tank cap, and open the cap slowly to allow steam to escape.
 - Do not check the coolant level at the radiator; only check the coolant level at the reserve tank.
2. Check the coolant level at the reserve tank (Figure 13). The coolant should be up to the bottom of the filler neck.

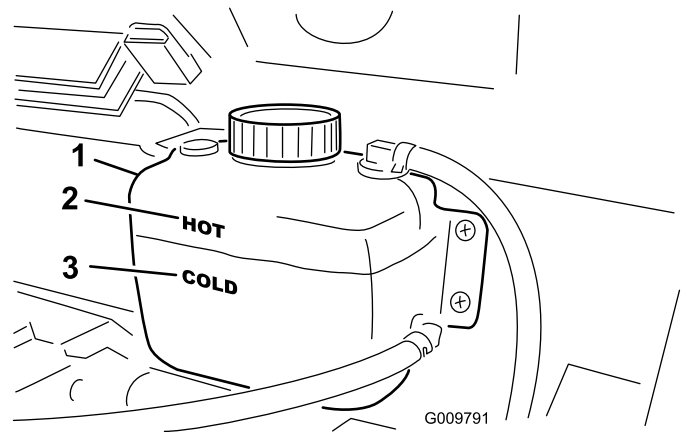


Figure 13

1. Coolant reserve tank

3. If the coolant is low, remove the reserve tank cap and add a 50/50 mixture of water and permanent ethylene glycol antifreeze. **Do not overfill.**
4. Install the reserve tank cap.

Checking the Transaxle/Hydraulic Fluid Level

Service Interval: Before each use or daily

The transaxle reservoir is filled with Dexron III ATF. Check the level before the engine is first started and every 8 hours or daily, thereafter. Capacity of system is .

Transaxle reservoir capacity: 7.5 qt (7 l).

1. Position the vehicle on a level surface.
2. Clean the area around the dipstick (Figure 14).

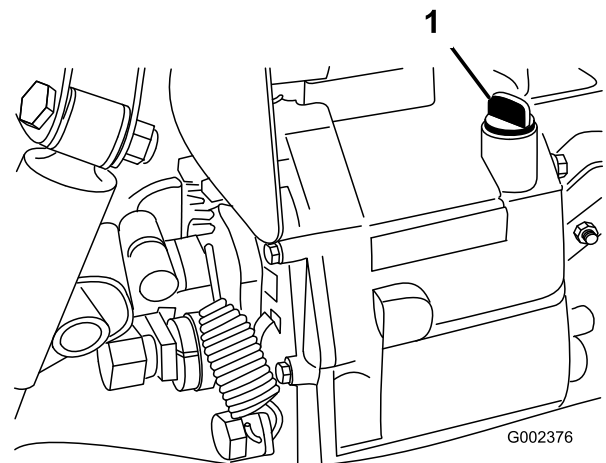


Figure 14

1. Dipstick

3. Unscrew the dipstick from the top of the transaxle and wipe it with a clean rag.

4. Screw the dipstick into the transaxle and ensure that it is fully seated.
5. Unscrew the dipstick and check the fluid level.
The fluid should be up to top of the flat portion of the dipstick.
6. If the level is low, add enough fluid to achieve the proper level.

Checking the High-flow Hydraulic Fluid (If so equipped)

Service Interval: Before each use or daily

The high flow hydraulics reservoir is filled with approximately 15 l (4 US gallons) of high quality hydraulic fluid. **Check the level of hydraulic fluid before the engine is first started and daily thereafter.**

1. Clean the area around the filler neck and the cap of the hydraulic tank (Figure 15). Remove the cap from the filler neck.

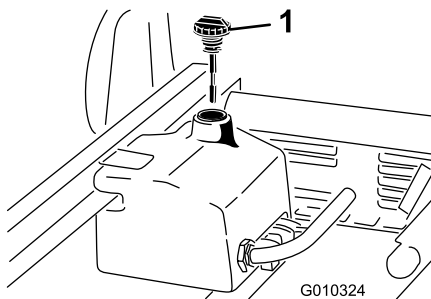


Figure 15

1. Cap

2. Remove the dipstick (Figure 15) from the filler neck and wipe it with a clean rag. Insert the dipstick into the filler neck; then remove it and check the fluid level. The fluid level should be between the two marks on the dipstick.
3. If the level is low, add the appropriate fluid to raise the level to the upper mark. Refer to Changing the Hydraulic Fluid and Cleaning the Strainer (page 46)
4. Install the dipstick and cap onto the filler neck.
5. Start the engine and turn on the attachment. Let them run for about two minutes to purge air from the system. Stop the engine and attachment and check for leaks.

Important: The vehicle must be running before starting the high flow hydraulics.

⚠ WARNING

Hydraulic fluid escaping under pressure can penetrate skin and cause injury.

- Make sure all hydraulic fluid hoses and lines are in good condition and all hydraulic connections and fittings are tight before applying pressure to the hydraulic system.
- Keep your body and hands away from pin hole leaks or nozzles that eject high pressure hydraulic fluid.
- Use cardboard or paper to find hydraulic leaks.
- Safely relieve all pressure in the hydraulic system before performing any work on the hydraulic system.
- Seek immediate medical attention if fluid is injected into your skin.

Checking the Front-differential-oil Level (Four-wheel-drive Models Only)

Service Interval: Every 100 hours/Monthly (whichever comes first)

The differential is filled with Mobil 424 hydraulic oil.

1. Position the vehicle on a level surface.
2. Clean the area around the fill/check plug on side of the differential (Figure 16).

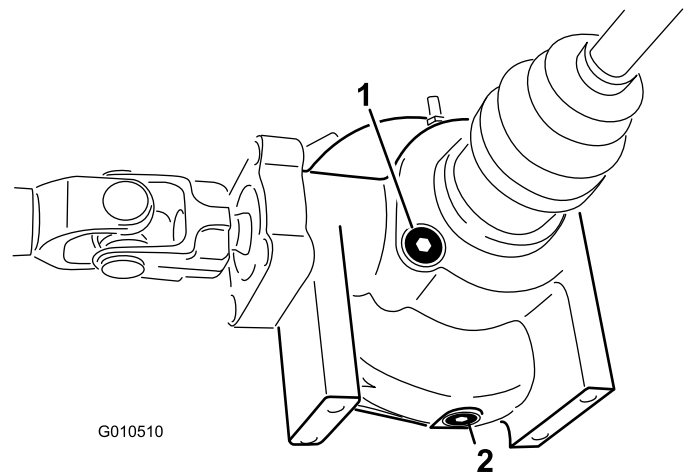


Figure 16

1. Fill/check plug
2. Drain plug

3. Remove the fill/check plug and check the level of the oil. The oil should be up to hole. If the oil is low, add Mobil 424 hydraulic oil.
4. Install the fill/check plug.

Checking the Torque of the Wheel Nuts

Service Interval: After the first 2 hours
After the first 10 hours
Every 200 hours

⚠ WARNING

Failure to maintain proper torque of the wheel nuts could result in failure or loss of a wheel and may result in personal injury.

Torque the front and rear wheel nuts to 109 to 122 N-m (80 to 90 ft-lb) after 1 to 4 hours of operation and again after 10 hours of operation. Torque every 200 hours thereafter.

Checking the Tire Pressure

Service Interval: Before each use or daily

The maximum air pressure in the front tires is 220 kPa (32 psi) and the rear tires is 138 kPa (20 psi).

Check the tire pressure frequently to ensure proper inflation. If the tires are not inflated to the correct pressure, the tires will wear prematurely.

Figure 17 is an example of tire wear caused by under inflation.

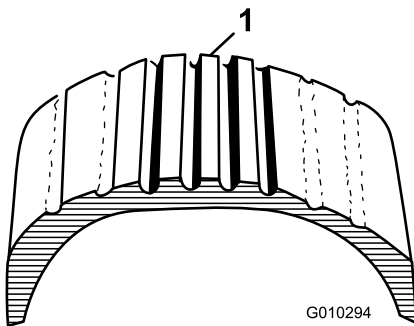


Figure 17

1. Under inflated tire

Figure 18 is an example of tire wear caused by over inflation.

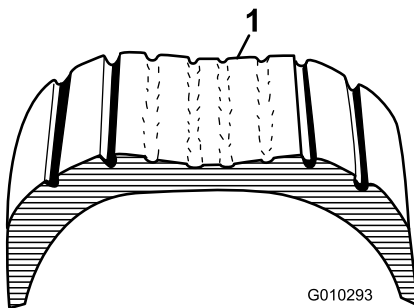


Figure 18

1. Over inflated tire

Checking the Brake Fluid

Service Interval: Before each use or daily—Check the brake fluid level.

Every 1,000 hours/Every 2 years (whichever comes first)—Change the brake fluid.

The brake fluid reservoir is shipped from the factory filled with DOT 3 brake fluid. Check the level before the engine is first started and every 8 hours or daily, thereafter.

The brake fluid reservoir is located under the dash.

1. Park the machine on a level surface.
2. The fluid level should be up to the Full line on the reservoir (Figure 19).

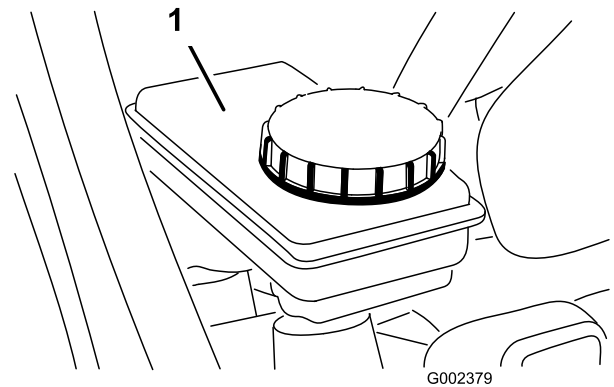


Figure 19

1. Brake fluid reservoir

3. If the fluid level is low, clean the area around the cap, remove the reservoir cap, and fill the reservoir to the proper level. **Do not overfill.**

Note: You can remove the hood access to the reservoir from the front of the machine (Figure 20).

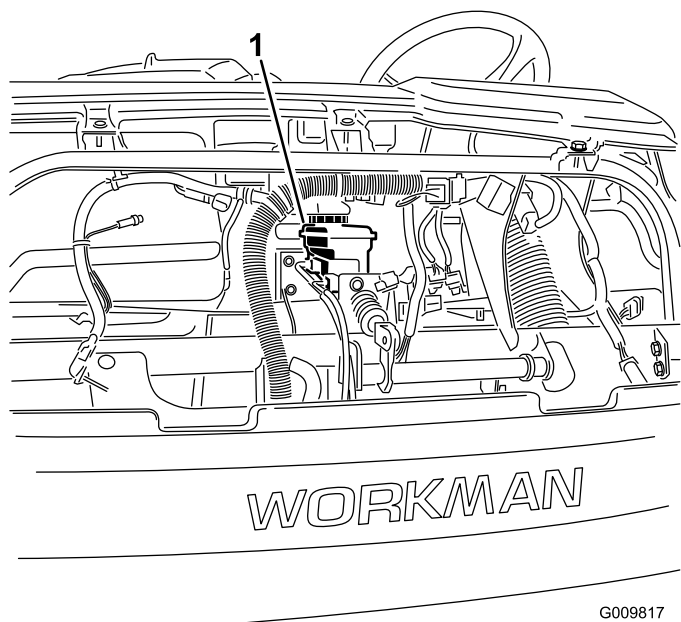


Figure 20

1. Brake fluid reservoir

Pre-starting Checks

Safe operation begins before taking the vehicle out for a day's work. You should check these items each time:

- Check the tire pressure.
- Check all fluid levels and add the appropriate amount of Toro specified fluids, if any are found to be low.
- Check the radiator. Remove any debris and clean the radiator screen.
- Check the brake pedal operation.
- Check to see that the lights and horn are working.
- Turn the steering wheel to the left and right to check the steering response.
- Stop the engine and wait for moving parts to stop, then check for oil leaks, loose parts, and any other noticeable malfunctions.

If any of the above items are not correct, notify your mechanic or check with your supervisor before taking the vehicle out for the day. Your supervisor may want you to check other items on a daily basis, so ask what your responsibilities are.

Starting the Engine

1. Sit on the operator's seat and engage the parking brake.

2. Disengage the PTO and high flow hydraulics (if so equipped) and move the hand throttle lever to the Off position (if so equipped).
3. Move the shift lever to the Neutral position and press the clutch pedal.
4. Ensure that the hydraulic lift lever is in the center position.
5. Keep your foot off of the accelerator pedal.
6. Turn the ignition switch to the On position. When the glow plug indicator light goes off, the engine is ready to start.
7. Rotate the ignition key switch to the Start position. Release the key immediately when the engine starts and allow it to return to the Run position.

Note: The glow plug indicator will turn on for an additional 15 seconds, when the switch returns to the Run position.

Note: Do not run the starter motor more than 10 seconds at a time or premature starter failure may result. If engine fails to start after 10 seconds, turn the key to the Off position. Check the controls and starting procedure, wait 10 additional seconds, and repeat the starting operation.

Driving the Vehicle

1. Release the parking brake.
2. Fully press the clutch pedal.
3. Move the gear shift lever to 1st gear.
4. Release the clutch pedal smoothly while pressing the accelerator pedal.
5. When the vehicle gains enough speed, remove your foot from the accelerator pedal, fully press the clutch pedal, move the gear shift lever to the next gear and release the clutch pedal while pressing the accelerator pedal. Repeat the procedure until the desired speed is attained.

Important: Always stop the vehicle before shifting to reverse from a forward gear or to a forward gear from reverse.

Note: Avoid long periods of engine idling.

Important: Do not attempt to push or tow vehicle to get it started. Damage to the drive train could result.

Use the chart below to determine the ground speed of the vehicle.

Gear	Range	Ratio	Speed (mph) @ 3600	Speed (kmh) @ 3600	Speed (mph) @ 2300	Speed (kmh) @ 2300
1	L	82.83 : 1	2.9	4.7	1.9	3.0
2	L	54.52 : 1	4.5	7.2	2.9	4.6
3	L	31.56 : 1	7.7	12.4	4.9	7.9
1	H	32.31 : 1	7.6	12.2	4.9	7.8

Gear	Range	Ratio	Speed (mph) @ 3600	Speed (kmh) @ 3600	Speed (mph) @ 2300	Speed (kmh) @ 2300
2	H	21.27 : 1	11.5	18.5	7.3	11.8
3	H	12.31 : 1	19.8	31.9	12.7	20.4
R	L	86.94 : 1	2.8	4.5	1.8	2.9
R	H	33.91 : 1	7.1	11.4	4.5	7.3

Stopping the Vehicle

To stop the vehicle, remove your foot from the accelerator pedal, press the clutch pedal, then press the brake pedal.

Stopping the Engine

To stop the engine, rotate the ignition key to the Off position and engage the parking brake. Remove the key from the switch to prevent accidental starting.

Break-in New Vehicle

Your Workman is ready for work. To provide proper performance and long vehicle life, follow these guidelines for the first 100 operating hours.

- Check the fluid and engine oil levels regularly and be alert for indications of overheating in any component of the vehicle.
- After starting a cold engine, let it warm up for about 15 seconds before shifting into gear.
- Avoid racing the engine.
- To ensure optimum performance of the brake system, burnish (break-in) the brakes before use. To burnish the brakes, bring the vehicle up to full speed, apply the brakes to rapidly stop the vehicle without locking up the tires. Repeat this 10 times, waiting 1 minute between stops to avoid overheating the brakes. This is most effective if the vehicle is loaded with 454 kg (1000 lb).
- Vary vehicle speeds during operation. Avoid excessive idling. Avoid fast starts and quick stops.
- A break-in oil for the engine is not required. The original engine oil is the same type specified for regular oil changes.
- Refer to the Maintenance section for any special low hour checks.

Checking the Interlock System

Service Interval: Before each use or daily

The purpose of the interlock system is to prevent the engine from cranking or starting unless the clutch pedal is pressed.

▲ CAUTION

If safety interlock switches are disconnected or damaged the machine could operate unexpectedly causing personal injury.

- Do not tamper with the interlock switches.
- Check the operation of the interlock switches daily and replace any damaged switches before operating the machine.

Note: Refer to *Attachment Operator's Manual* for procedures on checking the attachment interlock system.

Verifying the Clutch Interlock Switch

1. Sit on the operator's seat and engage the parking brake. Move the shift lever to the Neutral position.
2. Without pressing the clutch pedal, rotate the ignition key clockwise to the Start position.

If the engine cranks or starts, there is a malfunction in the interlock system that must be repaired before operating the vehicle.

Operating Characteristics

The vehicle is designed with safety in mind. It has 4 wheels for added stability. It uses familiar automotive style controls, including the steering wheel, brake pedal, clutch pedal, accelerator pedal, and gear shifter. It is important to remember, however, that this vehicle is not a passenger car. It is a work vehicle and is designed for off road use only.

▲ WARNING

The Workman vehicle is an off-highway vehicle only, and is not designed, equipped, or manufactured for use on public streets, roads or highways.

The vehicle has special tires, low gear ratios and other features that give it extra traction. These features add to the versatility of the vehicle but, they can also get you into dangerous situations. You must keep in mind that the vehicle is not a recreation vehicle, it is not an all terrain vehicle, and, it is definitely not meant for stunt driving or horsing around. It is a work vehicle, not a play vehicle. Children should not be allowed to operate the vehicle. Anyone who operates the vehicle should have a motor vehicle license.

The driver and passenger should always use the seat belts.

If you are not experienced at driving the vehicle, practice driving it in a safe area away from other people. Be sure you are familiar with all the vehicle's controls, particularly those used for braking, steering, and transmission shifting. Learn how your vehicle handles on different surfaces. Your operating skills will improve with experience, but as in operating any vehicle, take it easy as you begin. Be sure you know how to stop quickly in an emergency. If you need help, ask your supervisor for assistance.

Many factors contribute to accidents. You have control over several of the most important. Your actions, such as driving too fast for conditions, braking too fast, turning too sharp, and combinations of these, are frequent cause of accidents.

One of the major causes of accidents is fatigue. Be sure to take occasional breaks. It is very important that you stay alert at all times.

Never operate the vehicle, or any equipment, if you are under the influence of alcohol or other drugs. Even prescription drugs and cold medicines can cause drowsiness. Read the label on the medicine or check with your doctor or pharmacist if you are unsure about a certain medication.

One of the most important rules to follow is to go slower in unfamiliar areas. It is surprising how much damage and injury common things can cause. Tree branches, fences, wires, other vehicles, tree stumps, ditches, sand traps, streams, and other things found in most parks and golf courses can be hazardous to the operator and passenger.

Avoid driving when it is dark, especially in unfamiliar areas. If you must drive when it is dark, be sure to drive cautiously, use the head lights, and even consider adding additional lights.

Passengers

Whenever you have a passenger riding in the vehicle make sure he or she is wearing the seat belt and holding on securely. Drive slower and turn less sharply because your passenger does not know what you are going to do next and may not be prepared for turning, stopping, accelerating, and bumps.

You and your passenger should remain seated at all times, keeping arms and legs inside the vehicle. The operator should keep both hands on steering wheel, whenever possible, and the passenger should use the hand holds provided (Figure 21 & Figure 22).

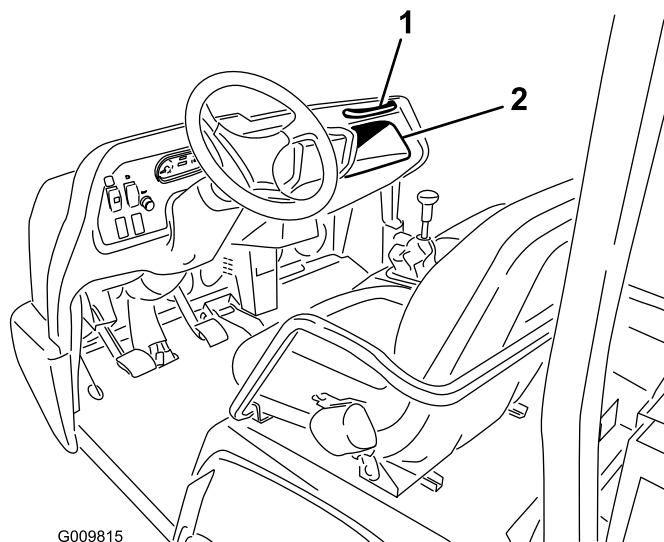


Figure 21

1. Passenger hand hold
2. Storage compartment

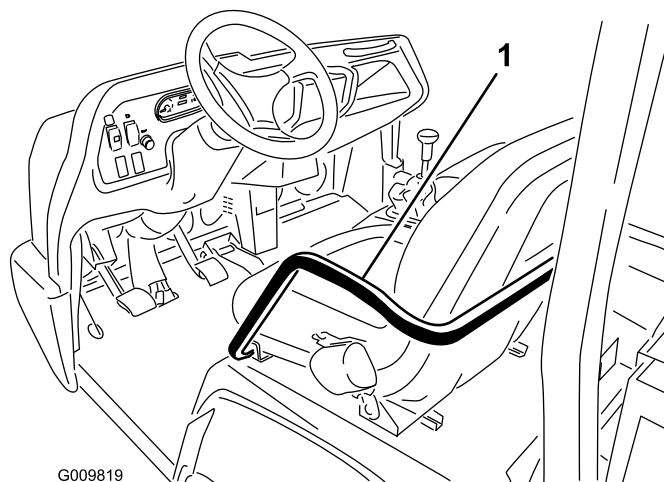


Figure 22

1. Hand hold & hip restraint

Never allow passengers in the dump box or on any attachments. The vehicle is meant to have one driver and only one passenger—no more.

Speed

Speed is one of the most important variables leading to accidents. Driving too fast for the conditions can cause you to lose control and have an accident. Speed can also make a minor accident worse. Driving head-on into a tree at slow speed can cause injury and damage, but, driving into a tree at high speed can destroy the vehicle and kill you and your passenger.

Never drive too fast for the conditions. If there is any doubt about how fast to drive, slow down.

When using heavy attachments, more than 454 kg (1000 lb), such as sprayers, top dressers, or spreaders, etc., restrict your

operating speed by moving the 3rd high lockout switch to the slow position.

Turning the Vehicle

Turning is another important variable leading to accidents. Turning too sharply for the conditions can cause the vehicle to lose traction and skid, or even tip over.

Wet, sandy, and slippery surfaces make turning more difficult and risky. The faster you are going, the worse this situation becomes so, slow down before turning.

During a sharp turn at higher speeds, the inside rear wheel may lift off of the ground. This is not a flaw in the design, it happens with most four wheel vehicles including passenger cars. If this happens, you are turning too sharply for the speed at which you are traveling. **Slow down!**

Braking the Vehicle

It is good practice to slow down before you get near an obstacle. This gives you extra time to stop or turn away. Hitting an obstacle can damage the vehicle and its contents. More important, it can injure you and your passenger. Gross vehicle weight has a major impact on your ability to stop and/or turn. Heavier loads and heavier attachments make a vehicle harder to stop or turn. The heavier the load, the longer it takes to stop

The braking characteristics also change with no bed or attachment on the vehicle. Fast stops may cause the rear wheels to lock up before the front wheels lock up, which may affect the control of the vehicle. It is a good idea to decrease vehicle speed with no bed or attachment.

Turf and pavement are much slipperier when they are wet. It can take 2 to 4 times as long to stop on wet surfaces as on dry surfaces.

If you drive through standing water deep enough to get the brakes wet, they will not work well until they are dry. After driving through water, you should test the brakes to make sure they work properly. If they do not, drive slowly in first gear while putting light pressure on the brake pedal. This will dry the brakes out.

Do not downshift for braking on icy or slippery surfaces (wet grass) or while going down a hill because engine braking may cause skidding and loss of control. Shift to a lower gear before starting down a hill.

Preventing Tip Overs

The vehicle is equipped with a roll bar, hip restraints, seat belts, and hand hold. The ROPS system (Rollover Protection System) used on the vehicle will reduce the risk of serious or fatal injury in the unlikely event of a tip over, although the system cannot protect the operator from all possible injuries.

Replace a damaged ROPS, do not repair or revise. Any alteration of the ROPS must be approved by the manufacturer.

The best way to prevent accidents involving utility vehicles is through continuous supervision and training of operators and paying constant attention to the area in which vehicle is being operated.

The best way for operators to prevent serious injury or death to themselves or others, is to familiarize themselves with the proper operation of the utility vehicle, to stay alert and to avoid actions or conditions which could result in an accident. In the event of a tip over, the risk of serious injury or death will be reduced if the operator is using the ROPS system and seat belts and is following the instructions provided.

Operating the Vehicle on Hills

▲ WARNING

Tippling or rolling the vehicle on a hill will cause serious personal injury.

- **Do not operate the vehicle on steep slopes.**
- **If engine stalls or you lose headway on a hill, never attempt to turn vehicle around.**
- **Always back straight down a hill in reverse gear.**
- **Never back down in neutral or with the clutch depressed, using only the brakes.**
- **Never drive across a steep hill, always drive straight up or down.**
- **Avoid turning on a hill.**
- **Don't "drop the clutch" or slam on the brakes. Sudden speed change can initiate a tip over.**

Use extra care when on hills. Never go on hills that are extremely steep. Stopping while going down a hill will take longer than on level ground. Turning while going up or down a hill is more dangerous than turning on the level. Turns while going down hill, especially with the brakes on, and, turning up hill while traversing a hill are particularly dangerous. Even at a slow speed and without a load, tip overs are more likely if you turn on a hill.

Slow down and shift into a lower gear before starting up or down a hill. If you have to turn while on a hill, do it as slowly and cautiously as possible. Never make sharp or fast turns on a hill.

If you stall or begin to lose headway while climbing a steep hill, quickly apply the brakes, shift to neutral, restart the engine and shift to reverse. At idle speed, the engine and transaxle drag will aid the brakes in controlling the vehicle on the hill and help you back down the hill more safely.

Reduce the weight of the load if it is a steep hill or if the load has high center of gravity. Remember, loads can shift, secure them.

Note: The vehicle has excellent hill climbing ability. Hill climbing traction can also be increased by adding weight to the rear of the vehicle in one of the following ways:

- Adding weight to bed, making sure it is secured.
- Mounting wheel weights to rear wheels.
- Adding liquid ballast (calcium chloride) to rear tires.
- Traction will increase with no passenger in front seat.

Loading onto and Dumping From the Vehicle

The weight and position of the cargo and passenger can change the vehicle center of gravity and vehicle handling. To avoid loss of control resulting in personal injury, follow these guidelines.

Do not carry loads which exceed the load limits described on the vehicle weight label.

The vehicle has several combinations of boxes, platforms, and attachments available. These can be used in various combinations that allow for maximum capacity and versatility. The full sized box is 140 cm (55 inches) wide by 165 cm (65 inches) long and can hold up to 1381 kg (3044 lb) of evenly distributed cargo.

Loads vary in how they are distributed. Sand spreads out evenly and quite low. Other items, such as bricks, fertilizer or landscape timbers, stack higher in the box.

The height and weight of the load has a significant influence on tip overs. The higher a load is stacked, the more likely the vehicle is to tip over. You may find that 1381 kg (3044 lb) stacks too high for safe operation. Reducing the total weight is one way to reduce the risk of a tip over. Distributing the load as low as possible is another way to reduce the risk of a tip over.

If the load is positioned toward one of the sides, it will make the vehicle much more likely to tip over on that side. This is especially true when turning if the load is on the outside of the turn.

Never position heavy loads behind the rear axle. If the load is positioned so far to the rear that it is behind the rear axle, it will reduce the weight on the front wheels and this will reduce steering traction. With the load all the way to the back, the front wheels can even come off of the ground when going over bumps or up a hill. This will result in a loss of steering and may lead to the vehicle tipping over.

As a general rule, position the weight of the load evenly from front to rear and evenly from side to side.

If a load is not secured, or you are transporting a liquid in a large container such as a sprayer, it can shift. This shifting happens most often while turning, going up or down hills, suddenly changing speeds, or while driving over rough surfaces. Shifting loads can lead to tip overs. Always secure loads so that they do not shift. Never dump the load while the vehicle is sideways on the hill.

Heavy loads increase stopping distance and reduce your ability to turn quickly without tipping over.

The rear cargo space is intended for load carrying purposes only, not for passengers.

Four Wheel Drive (Four-wheel-drive Models Only)

The Automatic on Demand four wheel drive feature, on this vehicle does not require operator activation. The front wheel drive is not engaged (no power delivered to front wheels) until the rear wheels begin to lose traction. The bidirectional clutch senses the rear wheels slipping, engages the front wheel drive, and delivers power to the front wheels. The four wheel drive system continues to deliver power to the front wheels until the rear wheels have enough traction to move the vehicle without slipping. Once this occurs, the system stops delivering power to the front wheels and the handling characteristics become similar to that of a two wheel drive vehicle. The four wheel drive system functions in both forward and reverse, however, when turning the rear wheels will slip slightly more before power is delivered to the front wheels.

▲ WARNING

Tipping or rolling the vehicle on a hill will cause serious injury.

The extra traction available with the four wheel drive feature can be enough to get you into dangerous situations such as climbing slopes that are too steep to turn around. Be careful when operating, especially on steeper slopes.

Transporting the Vehicle

For moving the vehicle long distances, use a trailer. Make sure the vehicle is secured to the trailer. Refer to Figure 23 & Figure 24 for the location of the tie down points.

Important: Trailers weighing over 680 kg (1500 lb) are required to be equipped with trailer brakes.

Note: Load the vehicle on the trailer with the front of the vehicle facing forward. If that is not possible, secure the vehicle hood to the frame with a strap, or remove the hood and transport and secure it separately or the hood may blow off during transport.

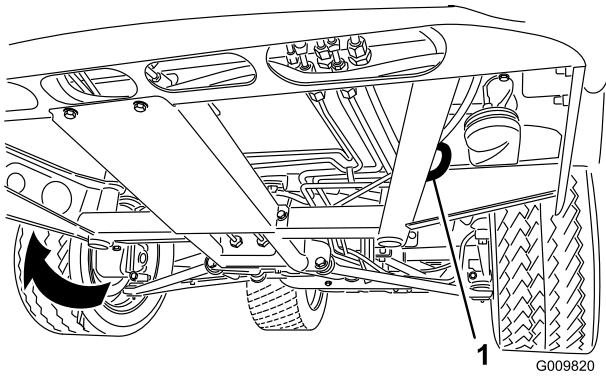


Figure 23

1. Eye hole in frame (each side)

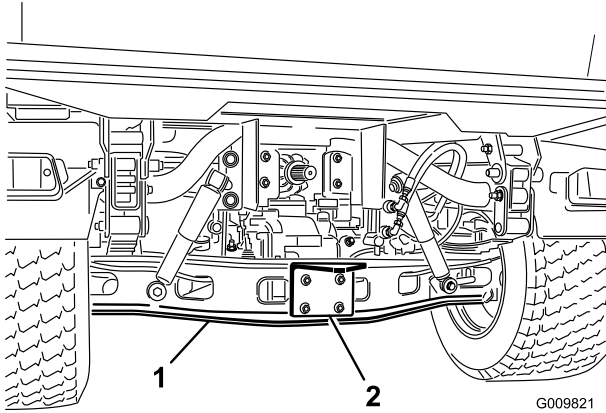


Figure 24

1. Axle
2. Hitch plate

Several types of tow hitches are available for the Workman, depending on your application. Contact your Authorized Toro Distributor for details.

When equipped with a tow hitch bolted onto the rear axle tube, your Workman can tow trailers or attachments with a Gross Trailer Weight (GTW) up to 1587 kg (3500 lb). Always load a trailer with 60% of the cargo weight in the front of the trailer. This places approximately 10% (272 kg (600 lb) max.) of the Gross Trailer Weight (GTW) on the tow hitch of the vehicle.

Trailer brakes are required whenever you tow a trailer over 680 kg (1500 lb) GTW is towed behind a Workman vehicle.

When hauling cargo or towing a trailer (attachment), do not overload your vehicle or trailer. Overloading can cause poor performance or damage to the brakes, axle, engine, transaxle, steering, suspension, body structure, or tires.

Important: To reduce potential for drive line damage, use low range.

When towing 5th wheel attachments, always install the wheely bar (included with the 5th wheel kit) to prevent the front wheels from lifting off the ground if the towed attachments movement is suddenly impaired.

Towing the Vehicle

In case of an emergency, the vehicle can be towed for a short distance. However, Toro does not recommend this as a standard procedure.

⚠ WARNING

Towing at excessive speeds could cause vehicle to lose steering control. Never tow vehicle faster than 8 kph (5 mph).

Towing the vehicle is a two person job. Affix a tow line to holes in the front frame member. Move the shifter to Neutral and release the parking brake. If the machine must be moved a considerable distance, transport it on a truck or trailer.

Note: The power steering will not function, making it difficult (increased effort) to steer.

Towing a Trailer with the Vehicle

The Workman is capable of pulling trailers and attachments of greater weight than the vehicle itself.

Maintenance

Recommended Maintenance Schedule(s)

Maintenance Service Interval	Maintenance Procedure
After the first 2 hours	<ul style="list-style-type: none"> • Torque the front and rear wheel nuts.
After the first 8 hours	<ul style="list-style-type: none"> • Check condition and tension of the alternator belt.
After the first 10 hours	<ul style="list-style-type: none"> • Torque the front and rear wheel nuts. • Check the adjustment of the shift cables. • Check the adjustment of the parking brake. • Replace the hydraulic filter. • Change the high flow hydraulic oil filter (if so equipped).
After the first 50 hours	<ul style="list-style-type: none"> • Change the engine oil and filter. • Adjust the engine valve clearance.
Before each use or daily	<ul style="list-style-type: none"> • Check the engine oil level. • Check the level of the coolant. • Check the transaxle/hydraulic fluid level. • Check the high flow hydraulic fluid level (if so equipped). • Check the tire pressure. • Check the brake fluid level. • Check the operation of the interlock system. • Check the air filter service indicator. • Drain water or other contaminants from the water separator. • Remove debris from the engine area and radiator. (Clean more frequently in dirty conditions.)
Every 25 hours	<ul style="list-style-type: none"> • Remove the air cleaner cover, clean out debris, and check the air filter service indicator.
Every 50 hours	<ul style="list-style-type: none"> • Check the battery fluid level. (Every 30 days if in storage) • Check the battery cable connections.
Every 100 hours	<ul style="list-style-type: none"> • Check the level of front differential oil (four wheel drive models only). • Grease all bearings and bushings. (Lubricate more frequently in heavy duty applications) • Change the engine oil and filter. • Check the condition of the tires.
Every 200 hours	<ul style="list-style-type: none"> • Torque the front and rear wheel nuts • Inspect the constant velocity boot for cracks, holes, or a loose clamp. • Check the adjustment of the shift cables. • Check the adjustment of the high–low cable. • Check the adjustment of the parking brake. • Check the adjustment of the brake pedal. • Check condition and tension of the alternator belt. • Check the adjustment of the clutch pedal. • Inspect the service and parking brakes.
Every 400 hours	<ul style="list-style-type: none"> • Check the fuel lines and connections. • Replace the fuel filter canister. • Check the front wheel alignment. • Visually inspect the brakes for worn brake shoes.
Every 600 hours	<ul style="list-style-type: none"> • Change the safety air filter (more frequently in dusty or dirty conditions). • Adjust the engine valve clearance.

Maintenance Service Interval	Maintenance Procedure
Every 800 hours	<ul style="list-style-type: none"> • Change the front differential oil. • Change the hydraulic fluid and clean the strainer. • Replace the hydraulic filter. • Change the high flow hydraulic oil and filter (if so equipped).
Every 1,000 hours	<ul style="list-style-type: none"> • Change the brake fluid. • Drain/flush the fuel tank. • Flush/replace the coolant system fluid.

Note: Determine the left and right sides of the machine from the normal operating position.

⚠ DANGER

Only qualified and authorized personnel shall be permitted to maintain, repair, adjust, or inspect the vehicle.

Avoid fire hazards and have fire protection equipment present in the work area. Do not use an open flame to check level or leakage of fuel, battery electrolyte, or coolant. Do not use open pans of fuel or flammable cleaning fluids for cleaning parts.

⚠ CAUTION

If you leave the key in the ignition switch, someone could accidentally start the engine and seriously injure you or other bystanders.

Remove the key from the ignition before you do any maintenance.

Heavy-duty Operation

Important: If the vehicle is subjected to any of the conditions listed below, maintenance should be performed twice as frequently:

- Desert operation
- Cold climate operation below 0 degrees C (32 degrees F)
- Trailer towing
- Frequent operation on dusty roads
- Construction work
- After extended operation in mud, sand, water, or similar dirty conditions, have your brakes inspected and cleaned as soon as possible. This will prevent any abrasive material from causing excessive wear.

Premaintenance Procedures

Removing the Full Bed

1. On each side of the machine, remove the flange head bolt and flange nut securing the bed mounting bracket to the frame bracket (Figure 25).

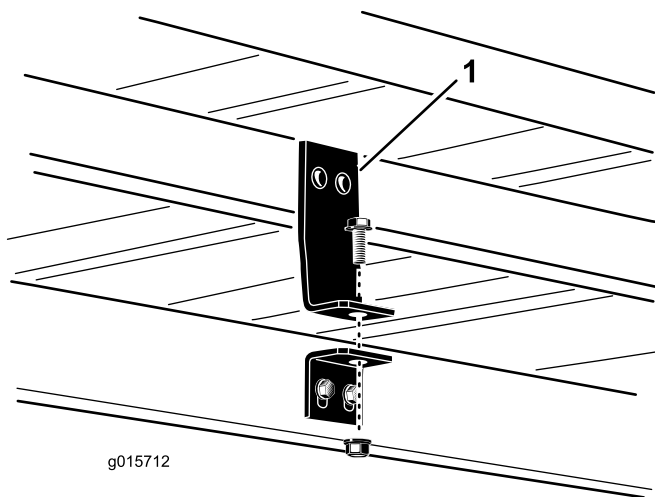


Figure 25

1. Bed mounting bracket

2. Remove the lynch pins and clevis pins securing the pivot brackets to the frame channels (Figure 26).

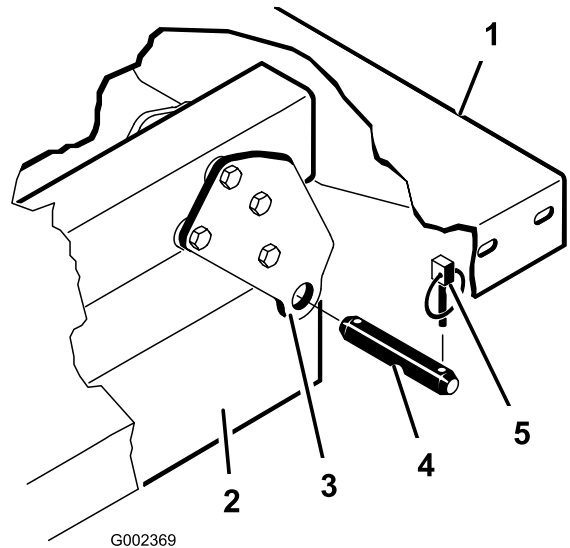


Figure 26

1. Left rear corner of bed
2. Vehicle frame channel
3. Pivot plate
4. Clevis pin
5. Lynch pin

3. Lift the bed off of the vehicle.

CAUTION

The full bed weighs approximately 147.5 kg (325 lb), so do not try to install or remove it by yourself. Use an overhead hoist or get the help of two or three other people.

Installing the Full Bed

Note: If the bed sides will be installed on the flat bed, it is easier to install them before installing the bed on the vehicle.

CAUTION

The full bed weighs approximately 147.5 kg (325 lb), so do not try to install or remove it by yourself. Use an overhead hoist or get the help of two or three other people.

1. Carefully set the bed onto the vehicle frame aligning the rear bed pivot plate holes with the holes in the rear

frame channel and install 2 clevis pins and lynch pins (Figure 26).

2. On each side of the machine, secure the bed mounting bracket to the frame bracket with the flange head bolt and flange nut previously removed (Figure 25)

Jacking Up the Vehicle

⚠ DANGER

A vehicle on a jack may be unstable and slip off of the jack, injuring anyone beneath it.

- Do not start the vehicle while the vehicle is on a jack.
- Always remove the key from the switch before getting off of the vehicle.
- Block the tires when the vehicle is on a jack.
- Do not start the engine while the vehicle is on a jack, because the engine vibration or wheel movement could cause the vehicle to slip off of the jack.
- Do not work under the vehicle without jack stands supporting it. The vehicle could slip off a jack, injuring any one beneath it.
- When jacking up the front of the vehicle, always place a 2 x 4 block (or similar material) between the jack and the vehicle frame.
- The jacking point at the front of the vehicle is under the front center frame support (Figure 27) and at the rear it is under the axle (Figure 28).

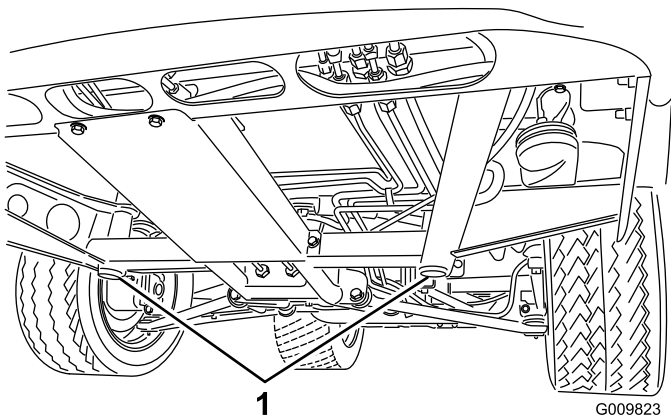


Figure 27

1. Front jacking points

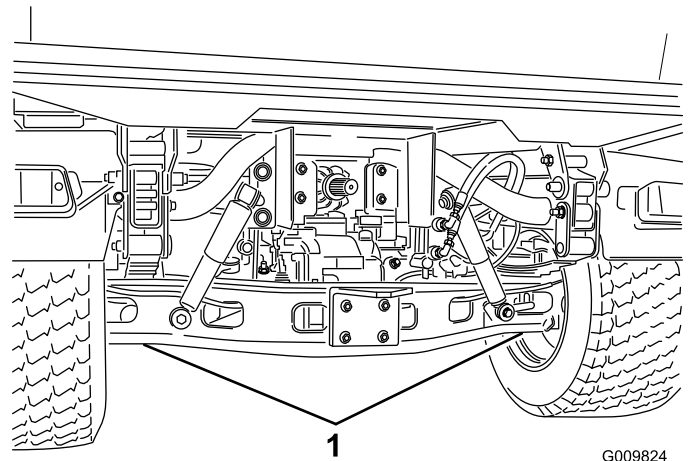


Figure 28

1. Rear jacking points

Removing the Hood

1. While grasping the hood in the headlight openings, lift up on the hood to release the lower mounting tabs from the frame slots (Figure 29).

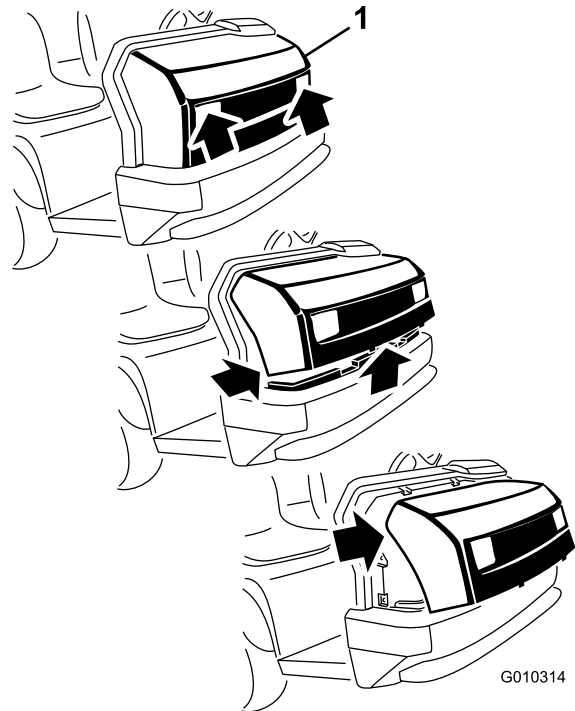


Figure 29

1. Hood
2. Pivot the bottom of the hood upward until the top mounting tabs can be pulled from the frame slots (Figure 29).
3. Pivot the top of hood forward and unplug the wire connectors from the head lights (Figure 29).
4. Remove the hood.

To install the hood, complete the following:

1. Connect the lights.
2. Insert the top mounting tabs into the frame slots.
3. Insert the lower mounting tabs into the frame slots.
4. Ensure that the hood is fully engaged in the top, sides and bottom grooves.

Lubrication

Greasing Bearings and Bushings

Service Interval: Every 100 hours (Lubricate more frequently in heavy duty applications)

The vehicle has grease fittings that must be lubricated regularly with No. 2 general-purpose, lithium-base grease.

The grease fitting locations and quantities are as follows:

- Ball joints (4), tie rods (2), pivot mounts (2) and steering cylinder (2) (Figure 30)
- Spring tower (2) (Figure 31)
- Clutch (1), accelerator (1), brake (qty. 1) (Figure 32)
- Accelerator arm (1) (Figure 33)
- U-joint (18) and 4 wheel drive shaft (3) (Figure 34)

Important: When greasing the drive shaft universal shaft bearing crosses, pump grease until it comes out of all 4 cups at each cross.

1. Wipe each grease fitting clean so foreign matter cannot be forced into the bearing or bushing.
2. Pump the grease into each bearing or bushing.
3. Wipe off the excess grease.

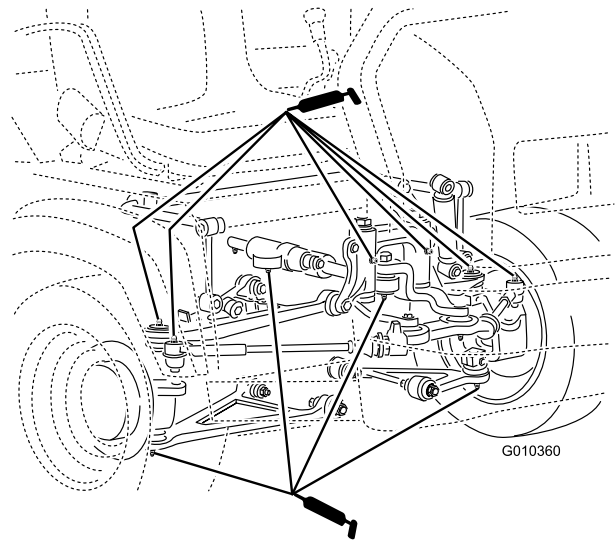


Figure 30

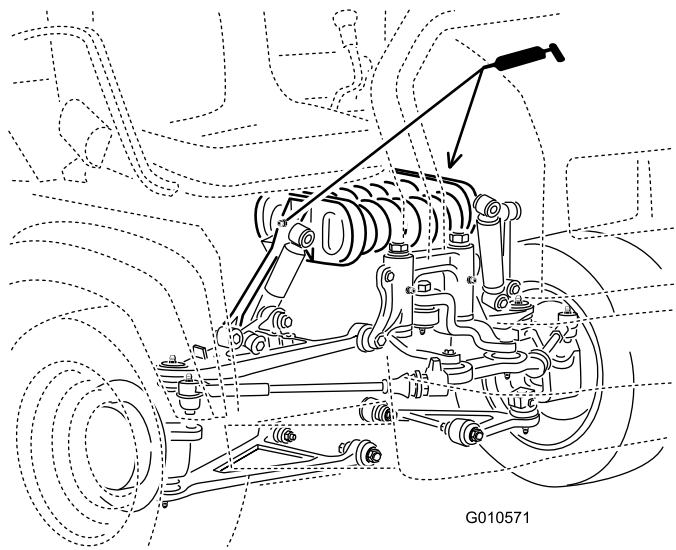


Figure 31

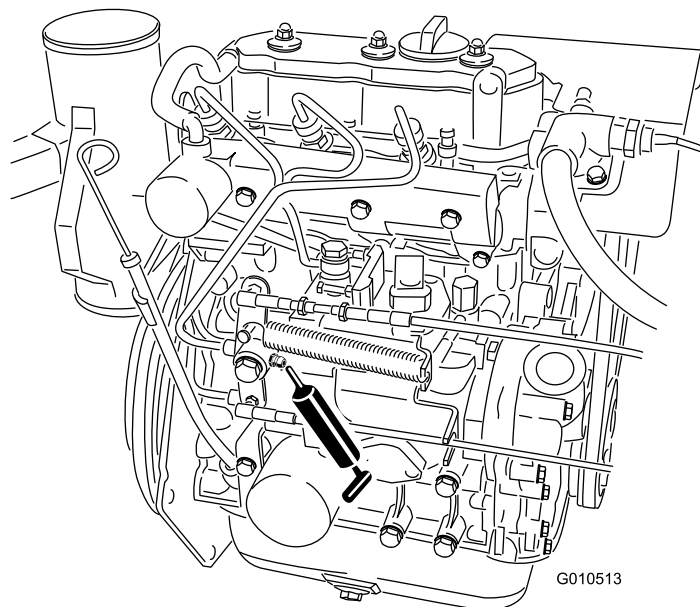


Figure 33


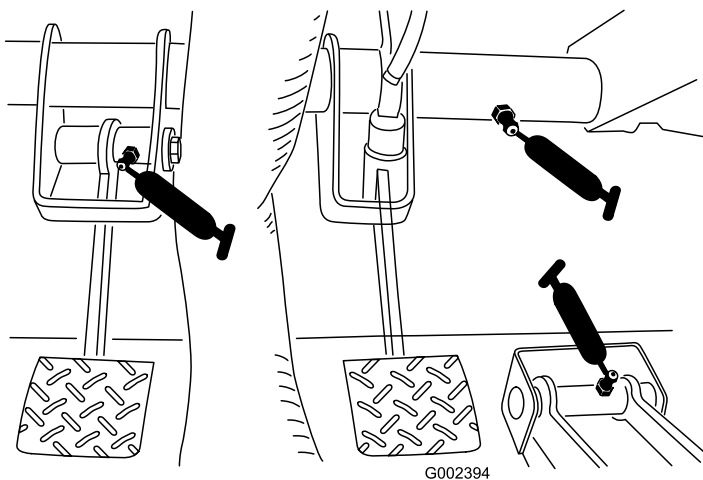


Figure 32

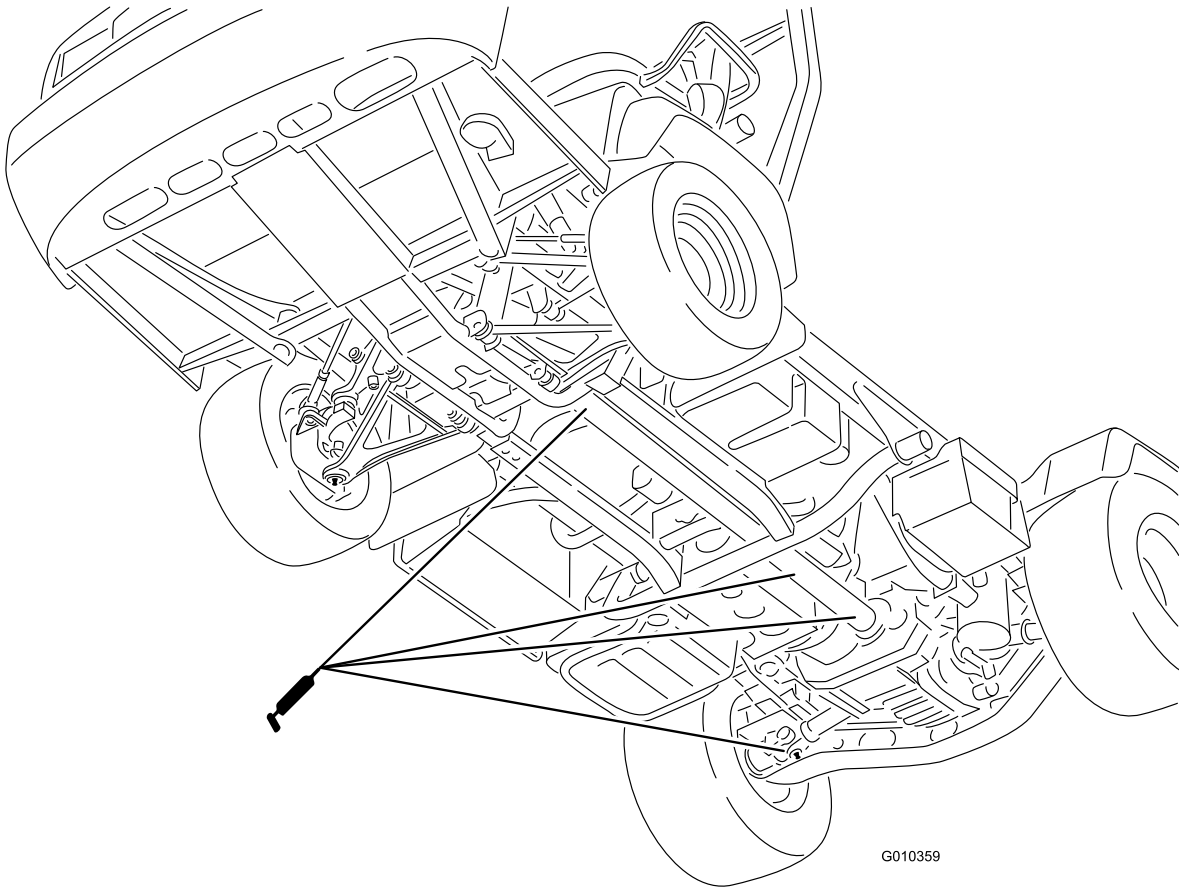

G010359

Figure 34

Engine Maintenance

Servicing the Air Cleaner

Service Interval: Before each use or daily—Check the air filter service indicator.

Every 25 hours

Every 600 hours—Change the safety air filter (more frequently in dusty or dirty conditions).

Inspect the air cleaner and hoses periodically to maintain maximum engine protection and to ensure maximum service life. Check the air cleaner body for damage which could possibly cause an air leak. Replace a damaged air cleaner body.

Inspect and change the air cleaner filter as described in the following procedure:

1. Release the latches on the air cleaner and pull the air cleaner cover off of the air cleaner body (Figure 35).

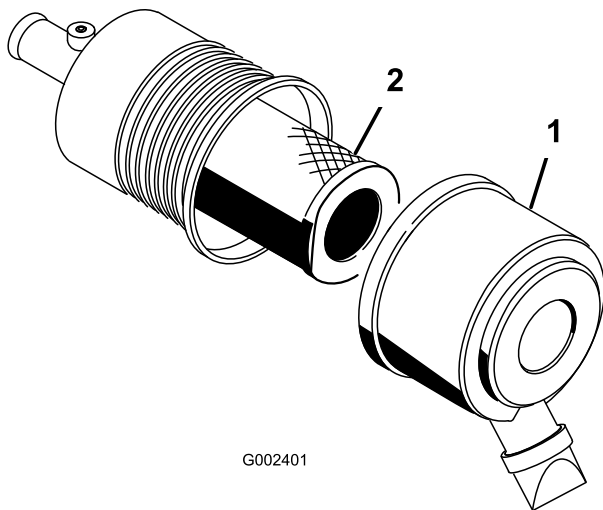


Figure 35

1. Air cleaner cover
2. Filter

2. Squeeze the dust cap sides to open it and knock the dust out.
3. Before removing the filter, use low pressure air (40 psi, clean and dry) to help remove large accumulations of debris packed between the outside of the primary filter and the canister.

Important: Avoid using high pressure air which could force dirt through the filter into the intake tract. This cleaning process prevents debris from migrating into the intake when the primary filter is removed.

4. Gently slide the primary filter out of the air cleaner body (Figure 35). Avoid knocking the filter into the side of the body.

Note: Do not attempt to clean the primary filter.

5. Remove the safety filter only if you intend to replace it.

Important: Never attempt to clean the safety filter. If the safety filter is dirty, then the primary filter is damaged and both filters should be replaced.

6. Inspect the new filter(s) for damage by looking into the filter while shining a bright light on the outside of the filter. Holes in the filter will appear as bright spots. Inspect the element for tears, an oily film, or damage to the rubber seal. If the filter is damaged do not use it.
7. If you are replacing the safety filter, carefully slide the new filter into the filter body (Figure 35).

Note: To prevent engine damage, always operate the engine with both air filters and cover installed.

8. Carefully slide the primary filter over the safety filter (Figure 35). Ensure that it is fully seated by pushing on the outer rim of the filter while installing it.
9. Install the air cleaner cover with the side indicated as UP facing up and secure the latches (Figure 35).

Changing the Engine Oil and Filter

Service Interval: After the first 50 hours

Every 100 hours

1. Raise the bed (if so equipped) and place the safety support on the extended lift cylinder to hold up the bed.
2. Remove the drain plug and let oil flow into a drain pan (Figure 36). When the oil stops, install the drain plug.

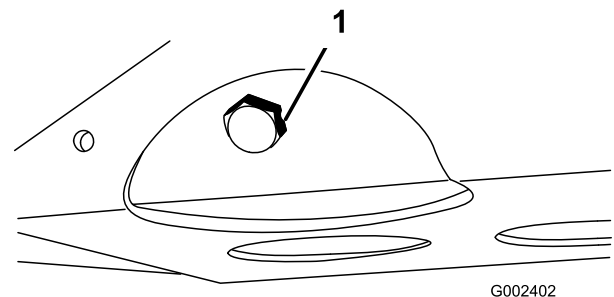


Figure 36

1. Engine-oil drain plug

3. Remove the oil filter (Figure 37).

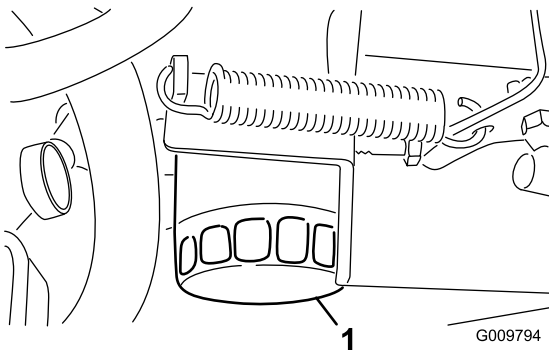


Figure 37

1. Engine-oil filter

4. Apply a light coat of clean oil to the new filter seal before screwing it on.
5. Screw the filter on until the gasket contacts the mounting plate, then tighten the filter 1/2 to 2/3 of a turn. **Do not overtighten.**
6. Add oil to the crankcase; refer to Changing the Engine Oil and Filter (page 35).

Fuel System Maintenance

Fuel Lines and Connections

Service Interval: Every 400 hours/Yearly (whichever comes first)

Every 1,000 hours/Every 2 years (whichever comes first)

Inspect the fuel lines and connections for deterioration, damage, or loose connections.

Servicing the Water Separator/Fuel Filter

Draining the Fuel Filter/Water Separator

Service Interval: Before each use or daily—Drain water or other contaminants from the water separator.

1. Place a clean container under the fuel filter (Figure 38).
2. Loosen the drain plug on the bottom of the filter canister.

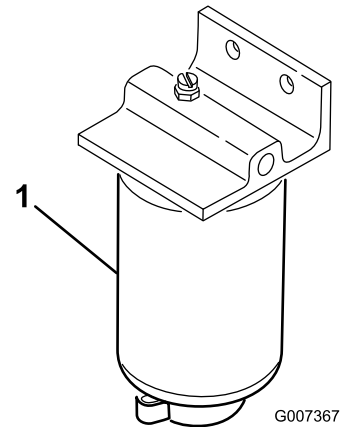


Figure 38

1. Water separator filter canister

3. Tighten the drain plug on the bottom of the filter canister.

Changing the Fuel-filter Canister

Service Interval: Every 400 hours—Replace the fuel filter canister.

1. Drain the water from the water separator; refer to Draining the Fuel Filter/Water Separator (page 36).
2. Clean the area where the filter canister mounts (Figure 38).
3. Remove the filter canister and clean the mounting surface.

4. Lubricate the gasket on the filter canister with clean oil.
5. Install the filter canister by hand until the gasket contacts mounting surface, then rotate it an additional 1/2 turn.
6. Tighten the drain plug on the bottom of the filter canister.

Electrical System Maintenance

Fuses

The fuses for the machine's electrical system are located under the center of the dash panel (Figure 39 & Figure 40).

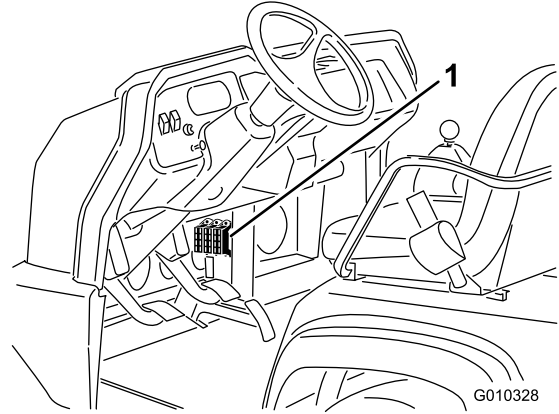


Figure 39

1. Fuses

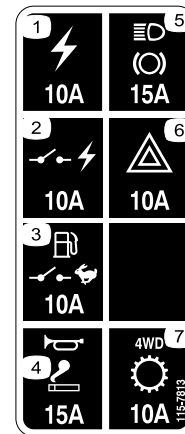


Figure 40

Jump Starting the Vehicle

⚠ WARNING

Jump starting can be dangerous. To avoid personal injury or damage to electrical components in vehicle, observe the following warnings:

- Never jump start with a voltage source greater than 15 volts D.C. This will damage the electrical system.
- Never attempt to jump start a discharged battery that is frozen. It could rupture or explode during jump starting.
- Observe all battery warnings while jump starting your vehicle.
- Be sure your vehicle is not touching the jump start vehicle.
- Connecting cables to the wrong post could result in personal injury and/or damage to the electrical system.

1. Squeeze the battery cover to release the tabs from battery base. Remove the battery cover from the battery base (Figure 41).

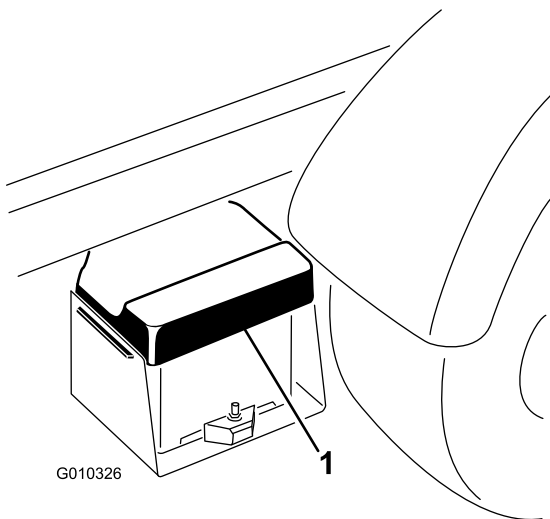


Figure 41

1. Battery cover

2. Connect a jumper cable between the positive posts of the two batteries (Figure 42). The positive post may be identified by a + sign on top of the battery cover.
3. Connect one end of the other jumper cable to the negative terminal of the battery in the other vehicle. The negative terminal has NEG on the battery cover. Do not connect the other end of the jumper cable to the negative post of the discharged battery. Connect it to the engine or frame. Do not connect the jumper cable to the fuel system.

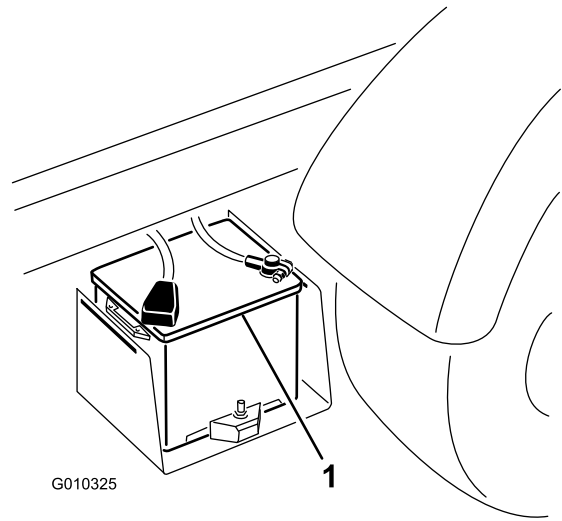


Figure 42

1. Battery

4. Start the engine in the vehicle providing the jump start. Let it run a few minutes, then start your engine.
5. Remove the negative jumper cable first from your engine, then the battery in the other vehicle.
6. Install the battery cover to the battery base.

Servicing the Battery

Service Interval: Every 50 hours—Check the battery fluid level. (Every 30 days if in storage)

Every 50 hours—Check the battery cable connections.

WARNING

CALIFORNIA Proposition 65 Warning

Battery posts, terminals, and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm.
Wash hands after handling.

⚠ DANGER

Battery electrolyte contains sulfuric acid which is a deadly poison and causes severe burns.

- Do not drink electrolyte and avoid contact with skin, eyes or clothing. Wear safety glasses to shield your eyes and rubber gloves to protect your hands.
- Fill the battery where clean water is always available for flushing the skin.

- Keep the battery electrolyte level properly maintained.
- Keep the top of the battery clean by washing it periodically with a brush dipped in ammonia or bicarbonate of soda solution. Flush the top surface with water after cleaning. Do not remove the fill cap while cleaning.
- Ensure that the battery cables are kept tight on the terminals to provide good electrical contact.
- If corrosion occurs at terminals, remove the battery cover, disconnect the cables (negative (-) cable first), and scrape the clamps and terminals separately. Reconnect the cables (positive (+) cable first) and coat the terminals with petroleum jelly.
- Maintain cell electrolyte level with distilled or demineralized water. Do not fill the cells above the bottom of the fill ring inside each cell.
- If you store the machine in a location where temperatures are extremely high, the battery will run down more rapidly than if the machine is stored in a location where temperatures are cool.

Drive System Maintenance

Changing the Front Differential Oil (Four-wheel-drive Models Only)

Service Interval: Every 800 hours

1. Position the vehicle on a level surface, stop the engine, engage the parking brake and remove the key from the ignition switch.
2. Clean the area around the drain plug on the side of the differential (Figure 43). Place a drain pan under the drain plug.

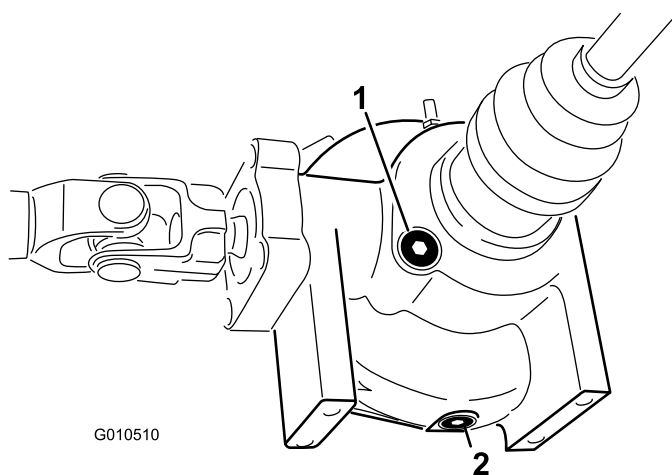


Figure 43

1. Fill/check plug
2. Drain plug

3. Remove the drain plug and let the oil flow into the drain pan. Install and tighten the plug when the oil stops draining.
4. Clean the area around the fill/check plug on the bottom of the differential.
5. Remove the fill/check plug and add Mobil 424 hydraulic oil until the oil is up to the hole.
6. Install the fill/check plug.

Inspecting the Constant Velocity Boot (Four-wheel-drive Models Only)

Service Interval: Every 200 hours

Inspect the constant velocity boot for cracks, holes, or a loose clamp. Contact your Authorized Toro Distributor for repair if you find any damage.

Adjusting the Shift Cables

Service Interval: After the first 10 hours

Every 200 hours

1. Move the shift lever to the Neutral position.
2. Remove the clevis pins securing the shift cables to the transaxle shift arms (Figure 44).

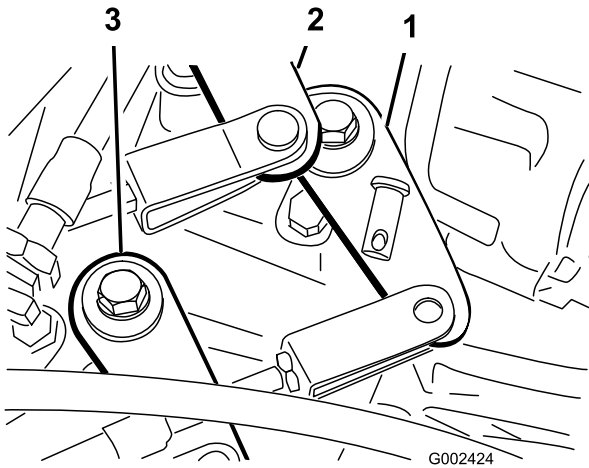


Figure 44

1. Shift arm (1st—Rev.)
2. Shift arm (2nd—3rd)
3. Shift arm (High—low)

3. Loosen the clevis jam nuts and adjust each clevis so cable free play is equal forward and backward relative to the hole in the transaxle shift arm (with the transaxle lever free play taken up in the same direction).
4. Install the clevis pins and tighten the jam nuts when finished.

Adjusting the High—Low Cable

Service Interval: Every 200 hours

1. Remove the clevis pin securing the high—low cable to the transaxle (Figure 44).
2. Loosen the clevis jam nut and adjust the clevis so that the clevis hole aligns with the hole in the transaxle bracket.
3. Install the clevis pin and tighten the jam nut when finished.

Inspecting the Tires

Service Interval: Every 100 hours

Operating accidents, such as hitting curbs, can damage a tire or rim and also disrupt wheel alignment, so inspect the tire condition after an accident.

Check the tire pressure frequently to ensure proper inflation. If the tires are not inflated to the correct pressure, the tires will wear prematurely.

Figure 45 is an example of tire wear caused by under inflation.

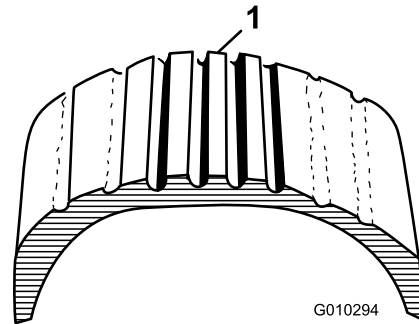


Figure 45

1. Under inflated tire

Figure 46 is an example of tire wear caused by over inflation.

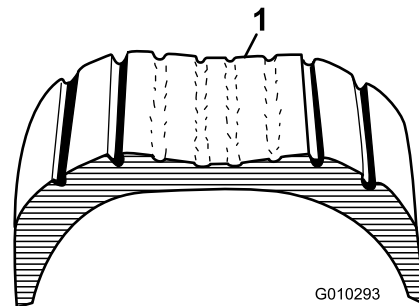


Figure 46

1. Over inflated tire

Checking the Front Wheel Alignment

Service Interval: Every 400 hours/Yearly (whichever comes first)

1. Make sure the tires are facing straight ahead.
2. Measure the center-to-center distance (at axle height) at the front and rear of the steering tires (Figure 47). The measurement must be within 0 ± 3 mm (0 ± 0.12 inch) at the front of the tire then at the rear of the tire. Rotate the tire 90 degrees and recheck the measurement.

Important: Check the measurements at consistent locations on the tire. The vehicle should be on a flat surface with the tires facing straight ahead.

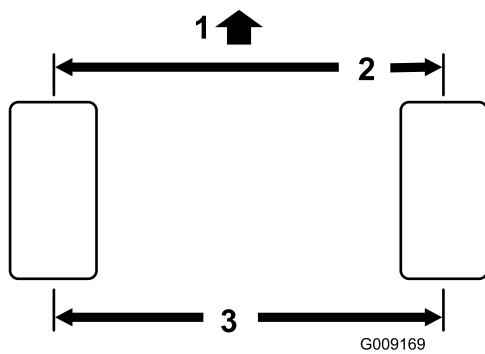


Figure 47

1. Front of vehicle
2. 0 ± 3 mm (0 ± 0.12 inch) front to rear of tire
3. Center to center distance

3. Adjust the center-to-center distance as follows:
 - A. Loosen the jam nut at the center of the tie rod (Figure 48).

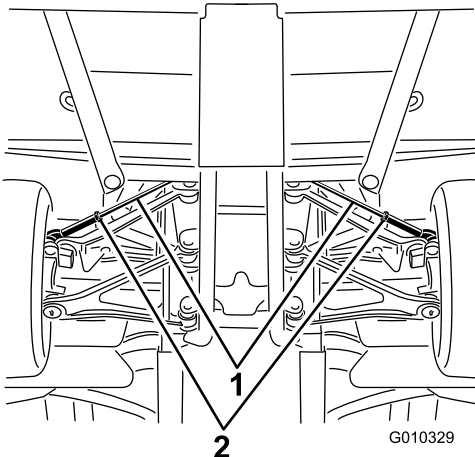


Figure 48

1. Tie rods
2. Jam nuts

- B. Rotate the tie rod to move the front of the tire inward or outward to achieve the center to center distances from front to back.
- C. Tighten the tie rod jam nut when the adjustment is correct.
- D. Check to ensure that the tires turn an equal amount to the right and to the left. If the tires do not turn equally, refer to the Workman Service Manual for the adjustment procedure

Cooling System Maintenance

Removing Debris from the Cooling System

Service Interval: Before each use or daily (Clean more frequently in dirty conditions.)

1. Turn the engine off. Clean the engine area thoroughly of all debris.
2. Remove the (5) bolts securing radiator screen/guard to the radiator. The guard is not shown in the figure. (Figure 49). Remove the screen/guard.

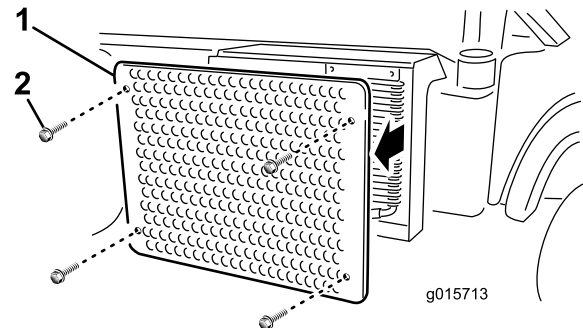


Figure 49

1. Radiator screen
2. Mounting bolts

3. If equipped with a high flow hydraulic kit, rotate the latches and pivot the oil cooler away from the radiator (Figure 50).

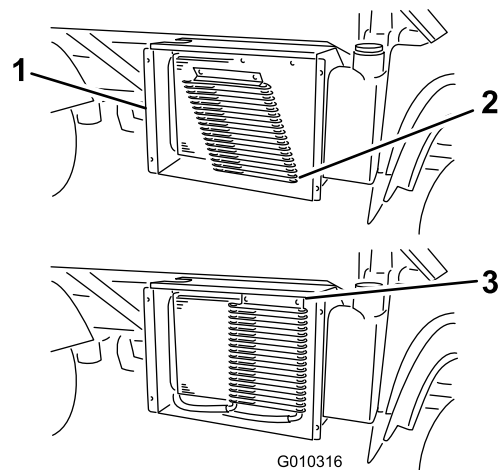


Figure 50

1. Radiator housing
2. Oil cooler
3. Latches

4. Clean the radiator, oil cooler, and screen thoroughly with compressed air.

Note: Blow debris away from the radiator.

5. Install the cooler and screen to the radiator.

Changing the Engine Coolant

Service Interval: Every 1,000 hours/Every 2 years
(whichever comes first)

1. Park the machine on a level surface.
2. Remove the radiator cap.

CAUTION

If the engine has been running, the pressurized, hot coolant can escape and cause burns.

- Do not open the radiator cap when the engine is running.
- Allow engine to cool at least 15 minutes or until the radiator cap is cool enough to touch without burning your hand.
- Use a rag when opening the radiator cap, and open the cap slowly to allow steam to escape.

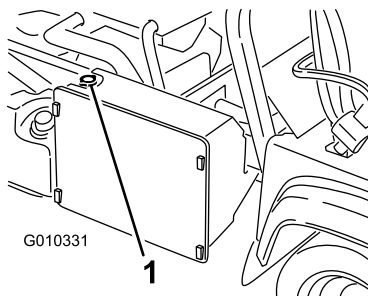


Figure 51

1. Radiator cap

-
3. Remove the reserve tank cap.

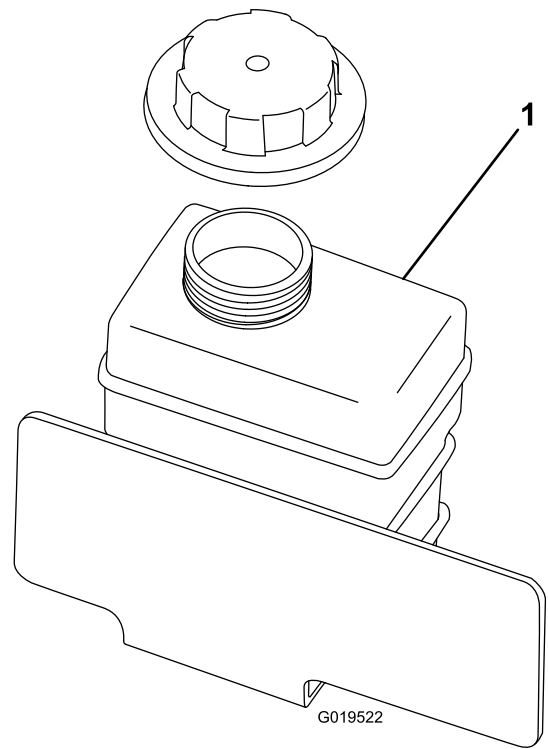


Figure 52

1. Reserve tank cap

-
4. Disconnect the lower radiator hose and allow coolant to flow into a drain pan. When coolant stops, connect the lower radiator hose.
 5. Open the bleed screw on top of the water pump (Figure 53).

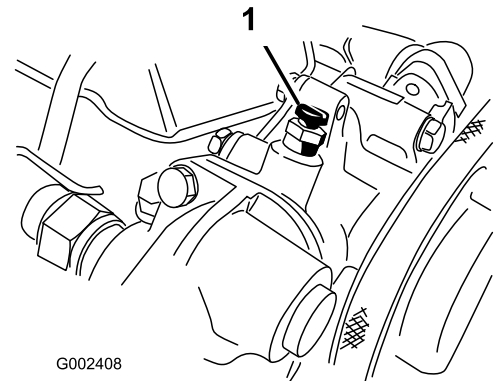


Figure 53

1. Bleed screw

-
6. Open the coolant drain petcock on the engine and allow the coolant to flow into a drain pan. When the coolant stops, close the petcock.
 7. Slowly fill the radiator with a 50/50 mixture of water and permanent ethylene glycol anti-freeze
 8. Top off the radiator and install the cap.

9. Slowly fill the reserve tank until level reaches the bottom of the filler neck. **Do not overfill.** Install the reserve tank cap.
10. Start the engine and operate it until warm.
11. Stop the engine. Check the coolant level and replenish it, if required.

Brake Maintenance

Adjusting the Parking Brake

Service Interval: After the first 10 hours

Every 200 hours

1. Remove the rubber grip from the parking brake lever (Figure 54).

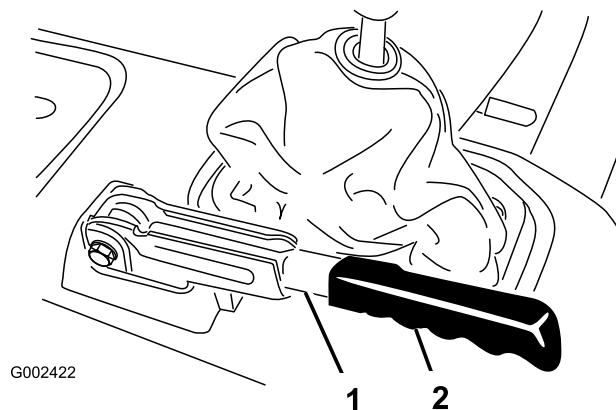


Figure 54

1. Parking brake lever
2. Grip

2. Loosen the set screw securing the knob to the parking brake lever (Figure 55).
3. Rotate the knob until a force of 200 to 222 N (45 to 50 lb) is required to actuate the lever.

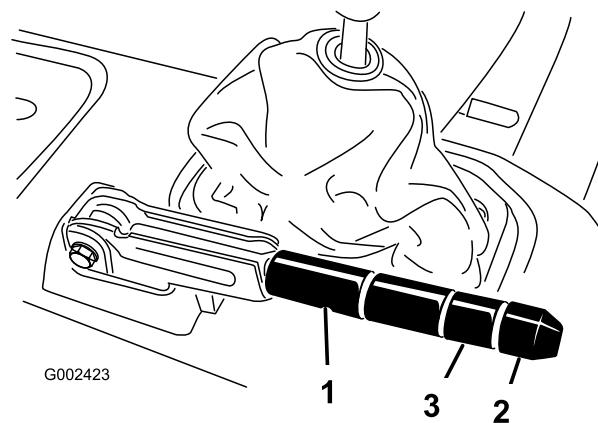


Figure 55

1. Parking brake lever
2. Knob
3. Set screw

4. Tighten the set screw when finished.

Note: If no adjustment is left at the handle, loosen the handle to the middle of the adjustment and adjust the cable at the rear, then repeat step 3.

5. Install the rubber grip onto the parking brake lever.

Adjusting the Brake Pedal

Service Interval: Every 200 hours

Note: Remove the front hood to ease the adjustment procedure.

1. Remove the cotter pin and clevis pin securing the master cylinder yoke to the brake pedal pivot (Figure 56).

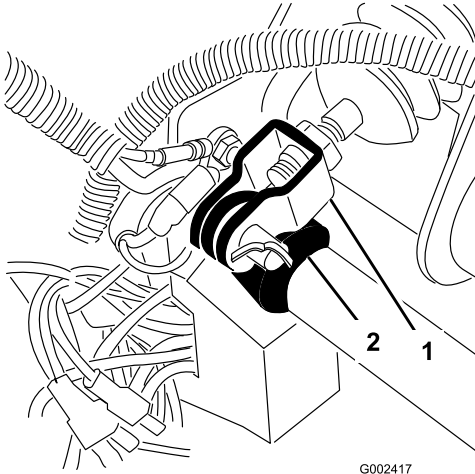


Figure 56

1. Master cylinder yoke
2. Brake pedal pivot

2. Lift up on the brake pedal (Figure 57) until it contacts the frame.
3. Loosen the jam nuts securing the yoke to the master cylinder shaft (Figure 56).
4. Adjust the yoke until its holes align with the hole in the brake pedal pivot. Secure the yoke to the pedal pivot with the clevis pin and cotter pin.
5. Tighten the jam nuts securing the yoke to the master cylinder shaft.

Note: The brake master cylinder must relieve pressure when properly adjusted.

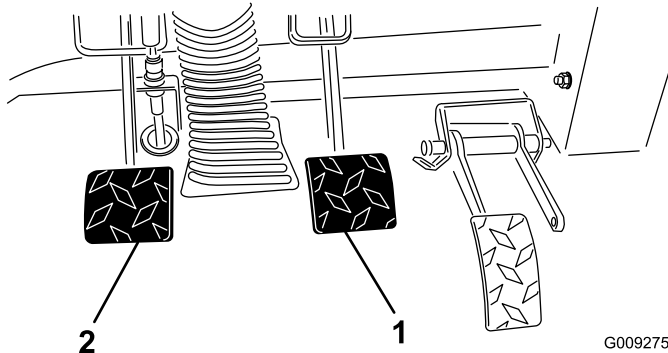


Figure 57

1. Brake pedal
2. Clutch pedal

Belt Maintenance

Adjusting Belts

Adjusting the Alternator Belt

Service Interval: After the first 8 hours—Check condition and tension of the alternator belt.

Every 200 hours—Check condition and tension of the alternator belt.

1. Check the tension by pressing the belt at mid span between the crankshaft and alternator pulleys with 98 N (22 lb) of force. A new belt should deflect 8 to 12 mm (0.3 to 0.5 inch). A used belt should deflect 10 to 14 mm (0.4 to 0.55 inch). If the deflection is incorrect, proceed to the next step. If correct, continue operation.
2. To adjust belt tension, complete the following:
 - Loosen the 2 alternator mounting bolts.

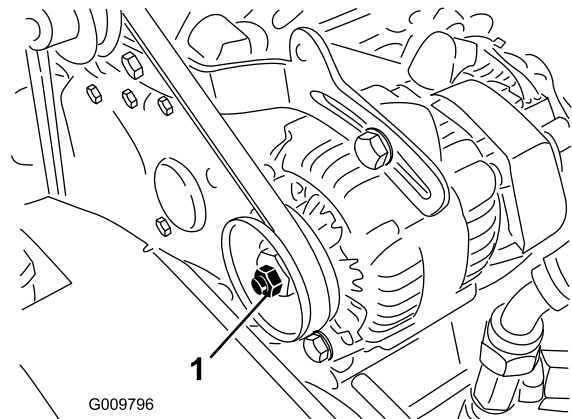


Figure 58

1. Alternator belt
2. Alternator brace

- Using a bar, rotate the alternator until the proper belt tension is attained, then tighten the mounting bolts.

Controls System Maintenance

Adjusting the Accelerator Pedal

1. Position the vehicle on a level surface, stop the engine, and engage the parking brake.
2. Adjust the ball joint on the accelerator cable (Figure 59) to allow 2.54 to 6.35 mm (0.100 to 0.250 inch) of clearance between the accelerator pedal arm and the top of the diamond tread floor plate (Figure 60), when a 111 N (25 lb) force is applied to the center of the pedal. Tighten the locknut.

Note: The engine must not be running and the return spring must be attached.

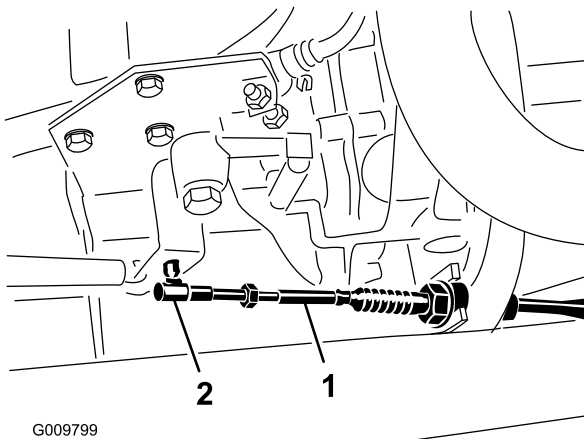


Figure 59

1. Accelerator cable
2. Ball joint

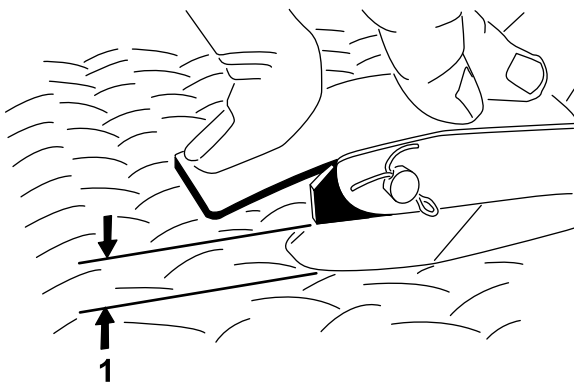


Figure 60

1. 2.54 to 6.35 mm (0.100 to 0.250 inch) clearance

Important: The maximum high idle speed is 3650 rpm. The high idle stop should not be adjusted.

Adjusting the Clutch Pedal

Service Interval: Every 200 hours

Note: You can adjust the clutch pedal cable at the bell housing or at the clutch pedal pivot. The front hood can be removed to ease the access to pedal pivot.

1. Loosen the jam nuts securing the clutch cable to the bracket on the bell housing (Figure 61).

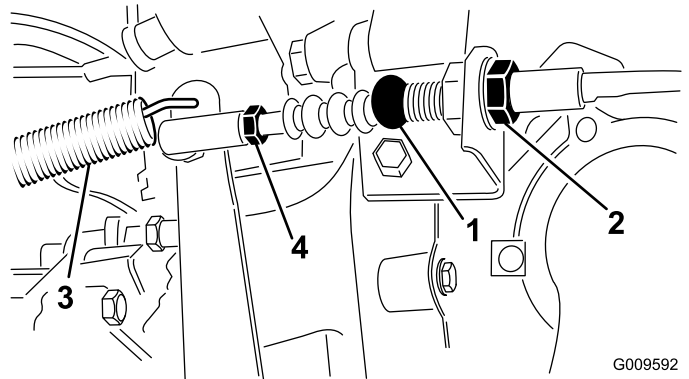


Figure 61

1. Clutch cable
2. Jam nuts
3. Return spring
4. Ball joint

Note: You may remove and rotate the ball joint, if additional adjustment is required.

2. Disconnect the return spring from the clutch lever.
3. Adjust the jam nuts or ball joint until the back, rear edge of the clutch pedal is 9.5 ± 0.3 cm (3.75 ± 0.12 inch) from the top of the floor plate diamond pattern, when an 18 N (4 lb) force is applied to the pedal (Figure 62).

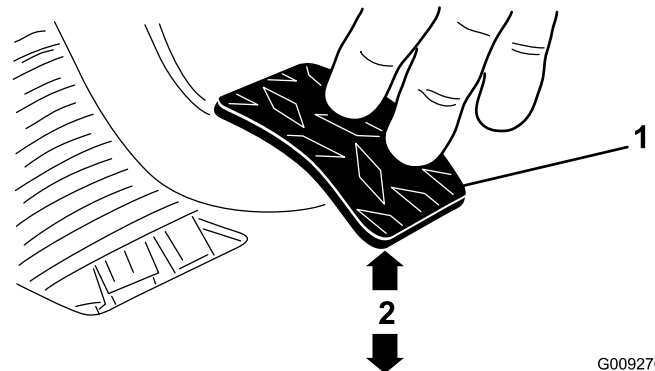


Figure 62

1. Clutch pedal
2. 9.5 ± 0.3 cm (3.75 ± 0.12 inch)

Note: Force is applied so the clutch release bearing lightly contacts the pressure plate fingers.

4. Tighten the jam nuts after the adjustment has been attained.
5. Recheck the 9.5 ± 0.3 cm (3.75 ± 0.12 inch) dimension after the jam nuts have been tightened to ensure proper adjustment. Readjust, if necessary.

- Connect the return spring to the clutch lever.

Important: Ensure that the rod end is positioned squarely on the ball, not twisted, and remains parallel to the clutch pedal after the jam nut is tightened (Figure 63).

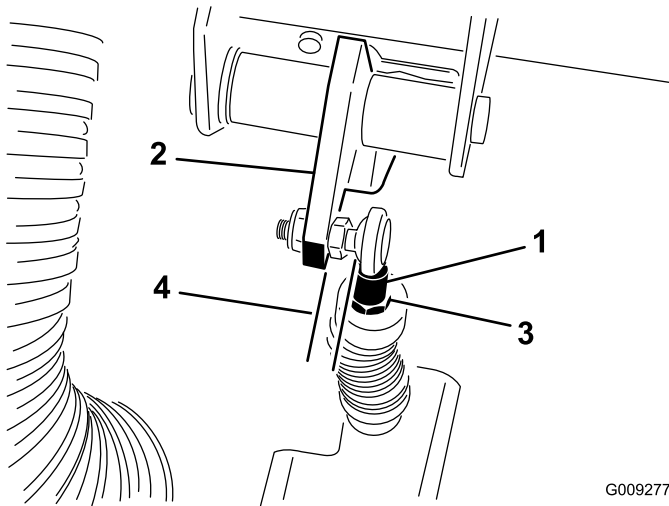


Figure 63

- | | |
|-------------------------|--------------------|
| 1. Clutch cable rod end | 3. Rod end jam nut |
| 2. Clutch pedal | 4. Parallel |

Note: The clutch free play should never be less than 19 mm (0.75 inch).

Converting the Speedometer

You can convert the speedometer from mph to kpm or kph to mph.

- Position the vehicle on a level surface, stop the engine, engage the parking brake, and remove the key from the ignition switch.
- Remove the hood. Refer to Removing the Hood in the Pre-maintenance Procedures.
- Locate the two loose wires next to the speedometer.
- Remove the connector plug from the harness wire and connect the wires together.
The speedometer will switch to kpm or mph.
- Install the hood.

Hydraulic System Maintenance

Changing the Hydraulic Fluid and Cleaning the Strainer

Service Interval: Every 800 hours

- Position the vehicle on a level surface, stop the engine, engage the parking brake, and remove the key from the ignition switch.
- Remove the drain plug from the side of the reservoir and let the hydraulic fluid flow into a drain pan (Figure 64).

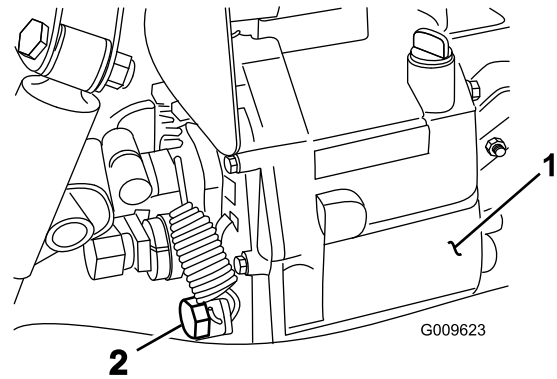


Figure 64

- | | |
|------------------------|---------------|
| 1. Hydraulic reservoir | 2. Drain plug |
|------------------------|---------------|

- Note the orientation of the hydraulic hose and 90 degree fitting connected to the strainer on the side of the reservoir (Figure 65). Remove the hydraulic hose and 90 degree fitting.
- Remove the strainer and clean it by back flushing it with a clean de-greaser. Allow it to air dry before installing.

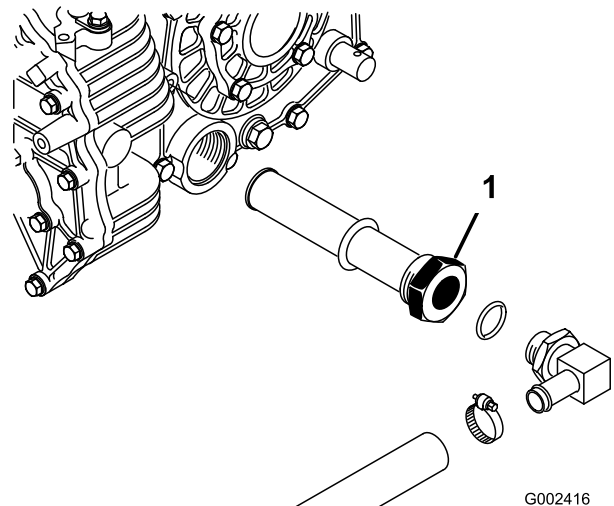


Figure 65

- | |
|-----------------------|
| 1. Hydraulic strainer |
|-----------------------|

5. Install the strainer.
6. Install the hydraulic hose and 90 degree fitting to the strainer in the same orientation.
7. Install and tighten the drain plug.
8. Fill the reservoir with approximately 7 l (7.5 qt) of Dexron III ATF. Refer to Checking the High-flow Hydraulic Fluid (If so equipped) (page 20).
9. Start the engine and operate the vehicle to fill the hydraulic system. Check the hydraulic oil level and replenish it, if required.

Important: Use only the hydraulic fluids specified. Other fluids could cause system damage.

Replacing the Hydraulic Filter

Service Interval: After the first 10 hours

Every 800 hours

Important: Use of any other filter may void the warranty on some components.

1. Position the vehicle on a level surface, stop the engine, engage the parking brake, and remove the key from ignition switch.
2. Clean the area around filter mounting area. Place a drain pan under the filter and remove the filter (Figure 66).

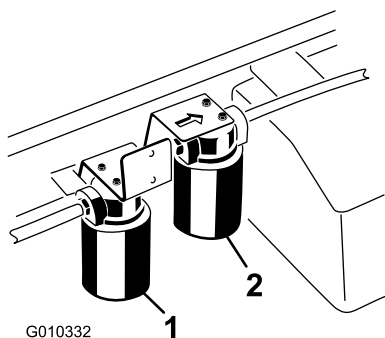


Figure 66

- | | |
|---------------------|--------------------------------|
| 1. Hydraulic filter | 2. High flow hydraulics filter |
|---------------------|--------------------------------|

3. Lubricate the gasket on the new filter.
4. Ensure that the filter mounting area is clean. Screw the filter on until the gasket contacts the mounting plate. Then tighten the filter one-half turn.
5. Start the engine and let it run for about two minutes to purge air from the system. Stop the engine and check the hydraulic oil level and for leaks.

Changing the High-flow Hydraulic Oil and Filter (If so equipped)

Service Interval: After the first 10 hours—Change the high flow hydraulic oil filter (if so equipped).

Every 800 hours—Change the high flow hydraulic oil and filter (if so equipped).

The reservoir is filled with approximately 15 l (4 US gallons) of high quality hydraulic fluid. Appropriate hydraulic oils are listed below.

Toro Premium All Season Hydraulic Fluid (Available in 5 gallon pails or 55 gallon drums. See parts catalog or Toro distributor for part numbers.)

Alternate fluids: If the Toro fluid is not available, another conventional petroleum-based fluid may be used provided it meets the following material properties and industry specifications. Consult with your lubricant distributor to identify a satisfactory product. Note: Toro will not assume responsibility for damage caused by improper substitutions, so use only products from reputable manufacturers who will stand behind their recommendation.

High Viscosity Index/Low Pour Point Antiwear Hydraulic Fluid, ISO VG 46

Material Properties:

- Viscosity—ASTM D445 cSt @ 40°C: 44 to 48/cSt @ 100°C: 7.9 to 8.5
- Viscosity Index, ASTM D2270—140 to 152
- Pour Point, ASTM D97— -35°F to -46°F
- FZG, Fail stage—11 or better
- Water content (new fluid)—500 ppm (maximum)

Industry Specifications:

Vickers I-286-S, Vickers M-2950-S, Denison HF-0, Vickers 35 VQ 25 (Eaton ATS373-C)

Note: Many hydraulic fluids are almost colorless, making it difficult to spot leaks. A red dye additive for the hydraulic system oil is available in 2/3 oz. (20 ml) bottles. One bottle is sufficient for 4–6 gal (15–22 l) of hydraulic oil. Order part no. 44-2500 from your authorized Toro distributor.

Note: If the oil becomes contaminated, contact your local Toro distributor because the system must be flushed. Contaminated oil may look milky or black when compared to clean oil. The service interval may need to be increased if using multiple attachments as the oil may become contaminated quicker with the mixing of different hydraulic oils.

1. Clean the area around the high flow filter mounting area (Figure 66). Place a drain pan under the filter and remove the filter.

Note: If the oil is not going to be drained, disconnect and plug the hydraulic line going to the filter.

2. Lubricate the new filter sealing gasket and hand turn the filter onto the filter head until the gasket contacts the filter head. Then tighten it 3/4 turn further. The filter should now be sealed.
3. Fill the hydraulic reservoir with approximately 15 l (4 US gallons) of hydraulic oil.
4. Start the machine and run it at idle for about two minutes to circulate the fluid and remove any air trapped in the system. Stop the machine and recheck the fluid level.
5. Verify the oil level.
6. Dispose of the oil properly.

Storage

1. Position the machine on a level surface, set the parking brake, stop the engine, and remove the ignition key.
2. Clean dirt and grime from the entire machine, including the outside of the engine cylinder head fins and blower housing.

Important: You can wash the machine with mild detergent and water. Do not use high pressure water to wash the machine. Pressure washing may damage the electrical system or wash away necessary grease at friction points. Avoid excessive use of water, especially near the control panel, lights, engine, and the battery.

3. Inspect the brakes; refer to Checking the Brake Fluid (page 21).
4. Service the air cleaner; refer to Servicing the Air Cleaner (page 35).
5. Seal the air cleaner inlet and the exhaust outlet with weatherproof tape.
6. Grease the machine.
7. Change the engine oil; refer to Changing the Engine Oil and Filter (page 35).
8. Flush the fuel tank with fresh, clean diesel fuel.
9. Secure all fuel system fittings.
10. Check the tire pressure; refer to Checking the Tire Pressure (page 21).
11. Check anti freeze protection and add a 50/50 solution of water and anti freeze as needed for expected minimum temperature in your area.
12. Remove the battery from the chassis, check the electrolyte level, and charge it fully; refer to Servicing the Battery (page 38).


Note: Do not connect the battery cables to the battery posts during storage.

Important: The battery must be fully charged to prevent it from freezing and being damaged at temperatures below 0°C (32°F). A fully charged battery maintains its charge for about 50 days at temperatures lower than 4°C (40°F). If the temperatures will be above 4°C (40°F), check the water level in the battery and charge it every 30 days.


13. Check and tighten all the bolts, nuts, and screws. Repair or replace any part that is damaged.
14. Paint all the scratched or bare metal surfaces.
Paint is available from your Authorized Service Distributor.
15. Store the machine in a clean, dry garage or storage area.

16. Remove the ignition key and put it in a safe place out of the reach of children.
17. Cover the machine to protect it and keep it clean.


Schematics

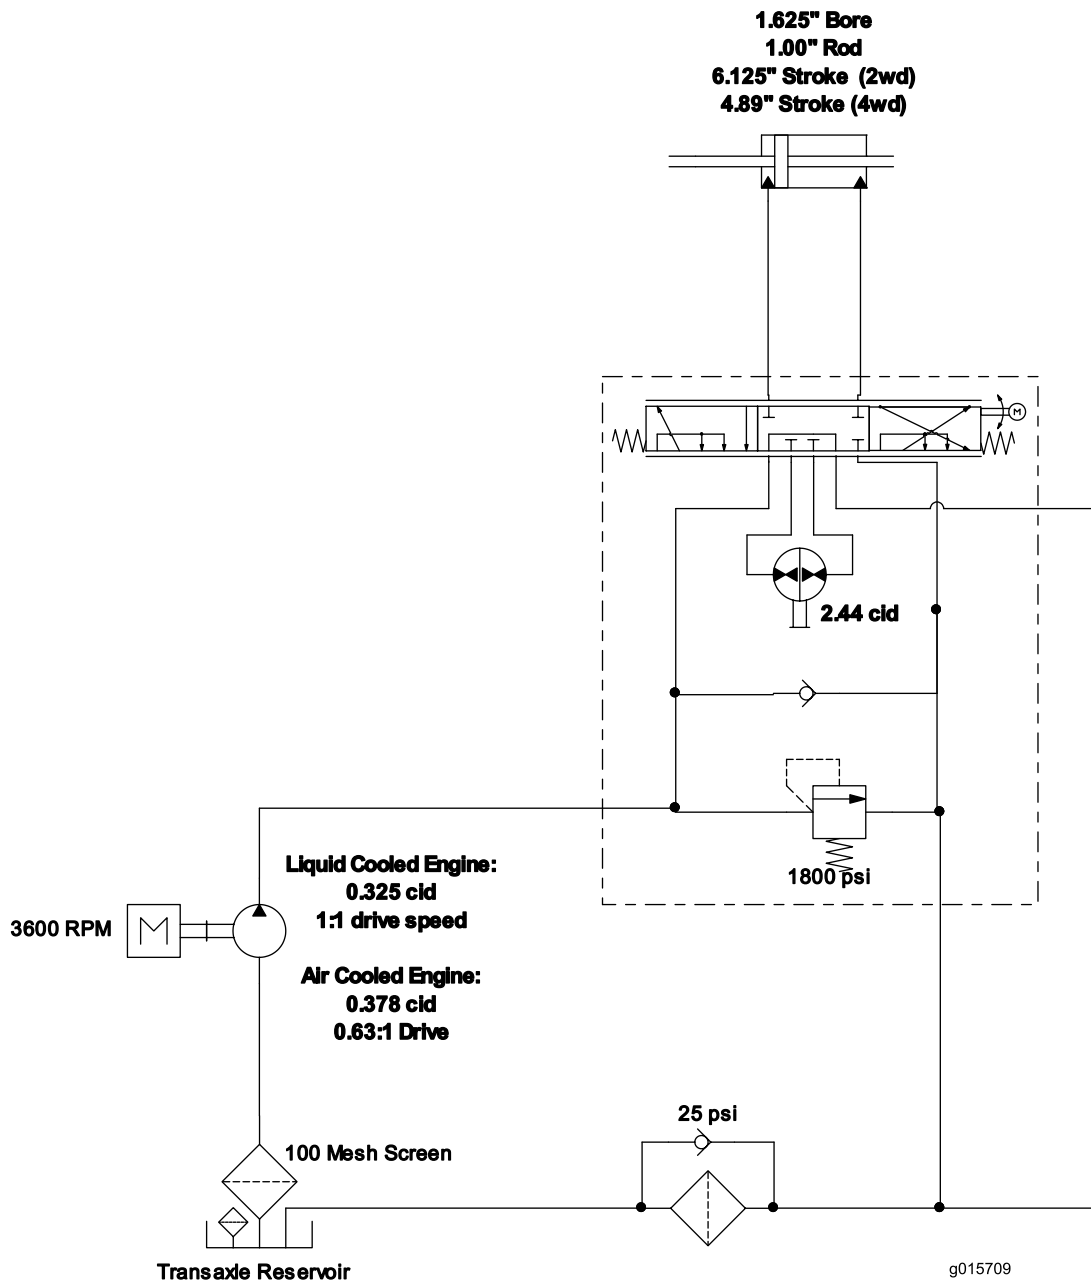

Hydraulic Schematic (Rev. A)

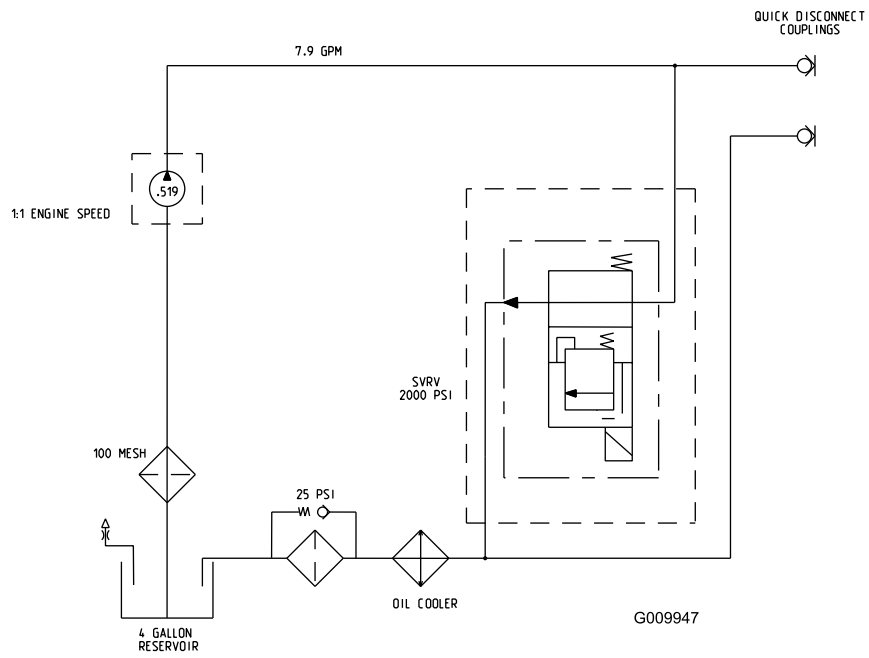

High Flow Hydraulics Schematic (Optional) (Rev. A)

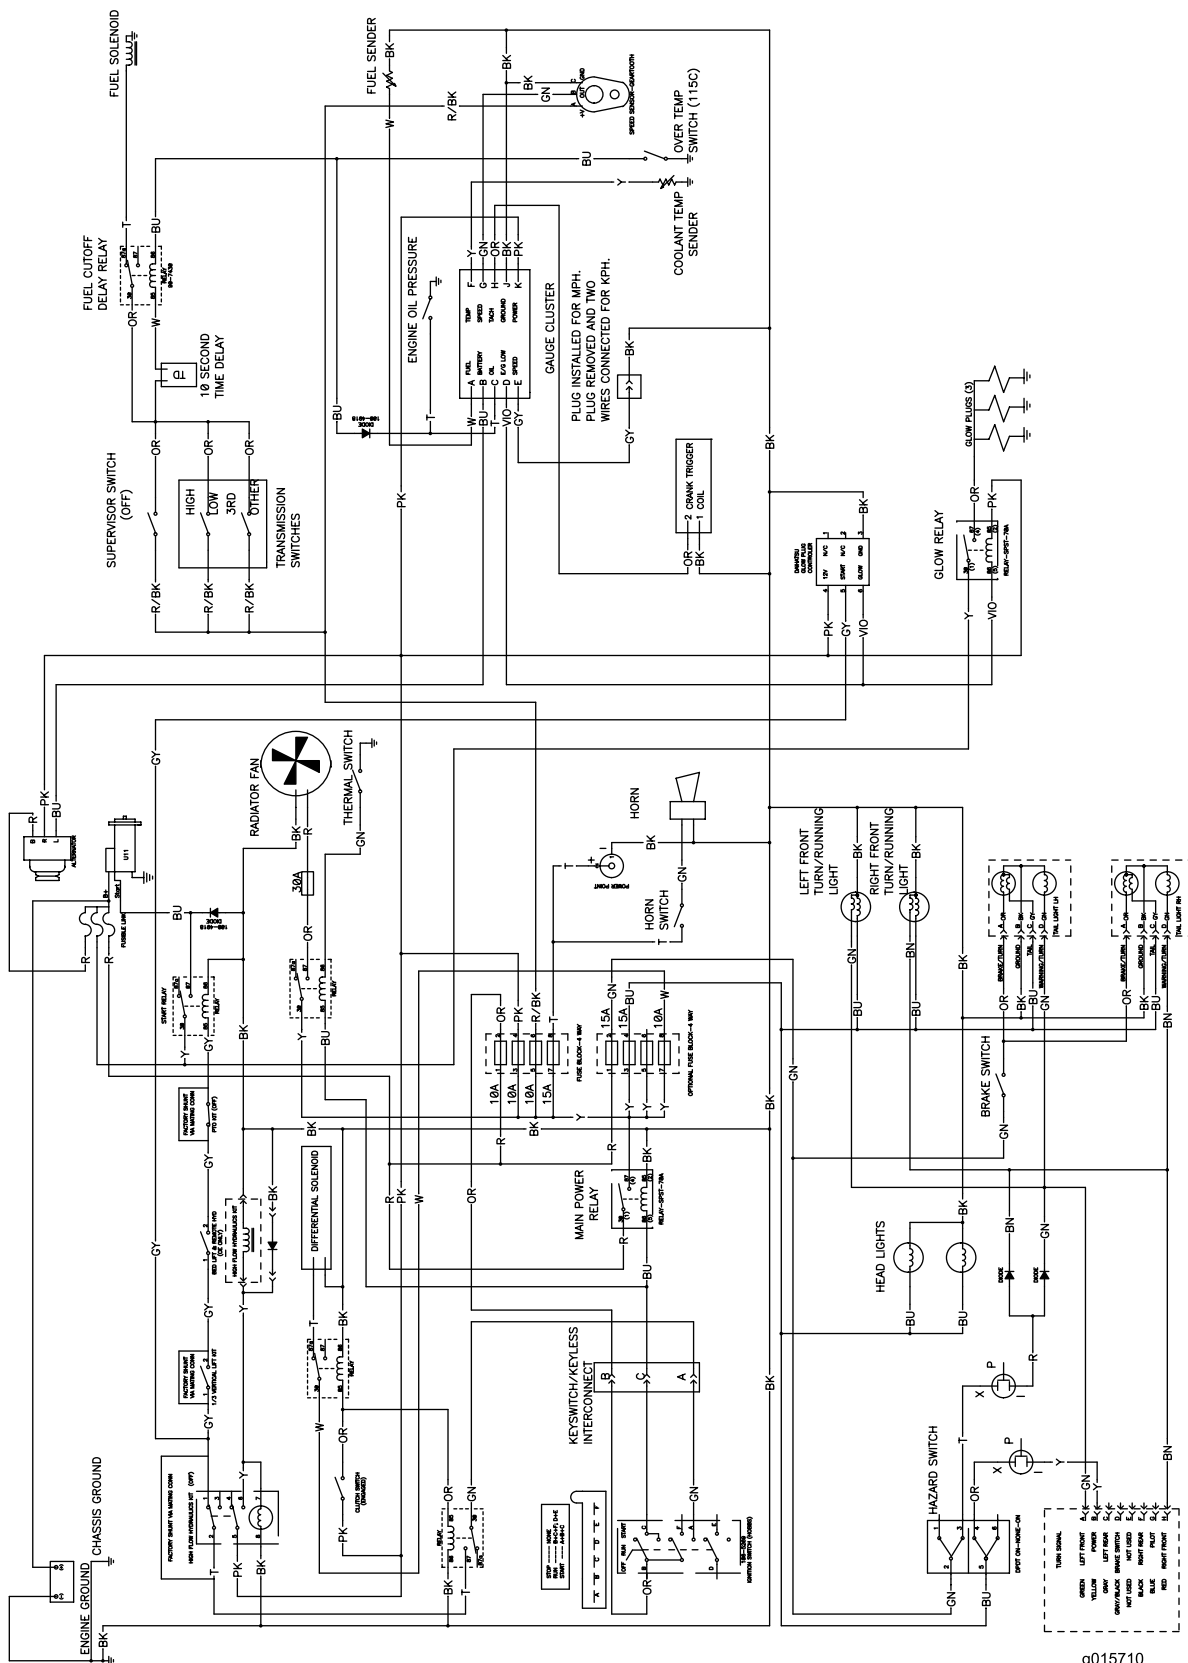

g015710

Electrical Schematic (Rev. A)

Notes:

Notes:

Notes:



The Toro Total Coverage Guarantee

A Limited Warranty

Conditions and Products Covered

The Toro® Company and its affiliate, Toro Warranty Company, pursuant to an agreement between them, jointly warrant your Toro Commercial product ("Product") to be free from defects in materials or workmanship for two years or 1500 operational hours*, whichever occurs first. This warranty is applicable to all products with the exception of Aerators (refer to separate warranty statements for these products). Where a warrantable condition exists, we will repair the Product at no cost to you including diagnostics, labor, parts, and transportation. This warranty begins on the date the Product is delivered to the original retail purchaser.

* Product equipped with an hour meter.

Instructions for Obtaining Warranty Service

You are responsible for notifying the Commercial Products Distributor or Authorized Commercial Products Dealer from whom you purchased the Product as soon as you believe a warrantable condition exists. If you need help locating a Commercial Products Distributor or Authorized Dealer, or if you have questions regarding your warranty rights or responsibilities, you may contact us at:

Commercial Products Service Department
Toro Warranty Company
8111 Lyndale Avenue South
Bloomington, MN 55420-1196
E-mail: commercial.warranty@toro.com

Owner Responsibilities

As the Product owner, you are responsible for required maintenance and adjustments stated in your Operator's Manual. Failure to perform required maintenance and adjustments can be grounds for disallowing a warranty claim.

Items and Conditions Not Covered

Not all product failures or malfunctions that occur during the warranty period are defects in materials or workmanship. This warranty does not cover the following:

- Product failures which result from the use of non-Toro replacement parts, or from installation and use of add-on, or modified non-Toro branded accessories and products. A separate warranty may be provided by the manufacturer of these items.
- Product failures which result from failure to perform recommended maintenance and/or adjustments. Failure to properly maintain your Toro product per the Recommended Maintenance listed in the *Operator's Manual* can result in claims for warranty being denied.
- Product failures which result from operating the Product in an abusive, negligent or reckless manner.
- Parts subject to consumption through use unless found to be defective. Examples of parts which are consumed, or used up, during normal Product operation include, but are not limited to, brakes pads and linings, clutch linings, blades, reels, bed knives, tines, spark plugs, castor wheels, tires, filters, belts, and certain sprayer components such as diaphragms, nozzles, and check valves, etc.
- Failures caused by outside influence. Items considered to be outside influence include, but are not limited to, weather, storage practices, contamination, use of unapproved coolants, lubricants, additives, fertilizers, water, or chemicals, etc.

- Normal noise, vibration, wear and tear, and deterioration.
- Normal "wear and tear" includes, but is not limited to, damage to seats due to wear or abrasion, worn painted surfaces, scratched decals or windows, etc.

Parts

Parts scheduled for replacement as required maintenance are warranted for the period of time up to the scheduled replacement time for that part. Parts replaced under this warranty are covered for the duration of the original product warranty and become the property of Toro. Toro will make the final decision whether to repair any existing part or assembly or replace it. Toro may use remanufactured parts for warranty repairs.

Note Regarding Deep Cycle Battery Warranty:

Deep cycle batteries have a specified total number of kilowatt-hours they can deliver during their lifetime. Operating, recharging, and maintenance techniques can extend or reduce total battery life. As the batteries in this product are consumed, the amount of useful work between charging intervals will slowly decrease until the battery is completely worn out. Replacement of worn out batteries, due to normal consumption, is the responsibility of the product owner. Battery replacement may be required during the normal product warranty period at owner's expense.

Maintenance is at Owner's Expense

Engine tune-up, lubrication cleaning and polishing, replacement of Items and Conditions Not Covered filters, coolant, and completing Recommended Maintenance are some of the normal services Toro products require that are at the owner's expense.

General Conditions

Repair by an Authorized Toro Distributor or Dealer is your sole remedy under this warranty.

Neither The Toro Company nor Toro Warranty Company is liable for indirect, incidental or consequential damages in connection with the use of the Toro Products covered by this warranty, including any cost or expense of providing substitute equipment or service during reasonable periods of malfunction or non-use pending completion of repairs under this warranty. Except for the Emissions warranty referenced below, if applicable, there is no other express warranty.

All implied warranties of merchantability and fitness for use are limited to the duration of this express warranty. Some states do not allow exclusions of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions and limitations may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Note regarding engine warranty:

The Emissions Control System on your Product may be covered by a separate warranty meeting requirements established by the U.S. Environmental Protection Agency (EPA) and/or the California Air Resources Board (CARB). The hour limitations set forth above do not apply to the Emissions Control System Warranty. Refer to the Engine Emission Control Warranty Statement printed in your *Operator's Manual* or contained in the engine manufacturer's documentation for details

Countries Other than the United States or Canada

Customers who have purchased Toro products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province, or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the Toro importer. If all other remedies fail, you may contact us at Toro Warranty Company.