



Count on it.

Parts Catalog

**Commercial Walk-Behind Mower
Fixed Deck, Pistol Grip, Gear Drive with 36in
TURBO FORCE® Cutting Unit**

Model No. 30634—Serial No. 314000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.


For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

| | | |
|--|--|--|
| AR: as required | HLH: hex lag head | PTO: power-take-off |
| ASM: assembly | HOC: height-of-cut | RH: right hand |
| BBC: blade brake control | HSBH: hex socket button head | ROPS: roll-over protection system |
| BHTF: button head thread forming | HSFH: hex socket flat head | RRB: rear roller brush |
| CARR: carriage | HSH: hex socket head | SFH: slotted fillister head |
| CCW: counter clockwise | HWH: hex washer head | SHH: slotted hex head |
| CW: clockwise | HWHTF: hex washer head thread forming | SHWH: slotted hex washer head |
| DEG: degrees | HYD: hydraulic | SPH: slotted pan head |
| DPA: Dual Point Adjustment | LH: left hand | SQH: square head |
| ECM: electronic control module | LP: Liquefied Petroleum Gas | SRH: slotted round head |
| EXT: external | LPG: Liquefied Petroleum Gas | STD: standard |
| FH: flat head | NI: nylon insert | TAP: self tapping |
| GA: gauge | NPTF: national pipe thread fine | TTH: torx truss head |
| HD: heavy-duty | PFH: phillips flat head | |
| HF: hex flange | PPH: phillips pan head | |
| HH: hex head | PPHTF: phillips pan head thread forming | |
| HHF: hex head flange | PRH: phillips round head | |
| HHFTF: hex head flange thread forming | PTH: phillips truss head | |
| HJ: hex jam | | |

Contents

| | |
|--|----|
| Engine and Exhaust Assembly..... | 4 |
| Fuel System Assembly | 6 |
| Frame and Transmission Assembly | 7 |
| Drive Wheel and Brake Assembly | 9 |
| Handle Control Assembly | 11 |
| Handle Assembly | 12 |
| Deck Assembly | 13 |
| Deck Decal Assembly No. 110-4907..... | 14 |
| Deflector Assembly No. 119-6530..... | 15 |
| Sheave, Spindle and Blade Assembly | 16 |
| Idler Assembly | 17 |
| Caster Assembly | 18 |
| Attachments and Accessories | 19 |

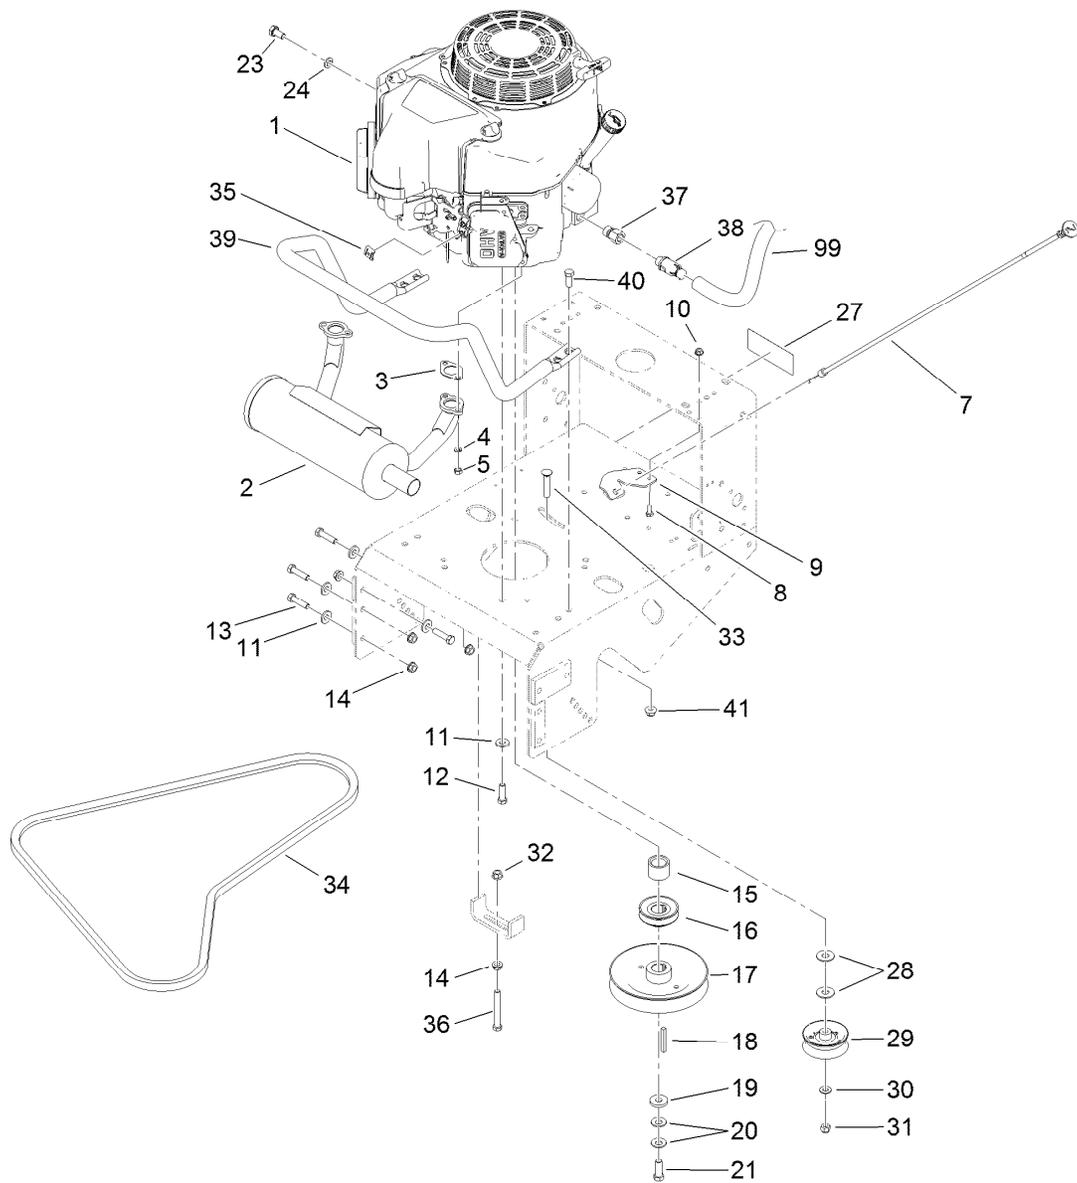


Engine and Exhaust Assembly

| Ref. | Part Number | Qty. | Description |
|------|-------------|------|---------------------------------|
| 1 | | 1 | Engine-Kawasaki, Fs481V-As06 ●■ |
| 2 | 116-3734 | 1 | Muffler-Horizontal, Offset |
| 3 | 1-653313 | 2 | Gasket-Exhaust |
| 4 | 114-3550 | 4 | Washer-Lock, Spring |
| 5 | 114-3549 | 4 | Nut |
| 7 | 103-1796 | 1 | Cable-Choke |
| 8 | 321-3 | 2 | Screw-HH |
| 9 | 103-1797-01 | 1 | Bracket-Cable, Choke |
| 10 | 32128-33 | 2 | Nut-HF |
| 11 | 98-5975 | 12 | Washer-Belleville |
| 12 | 323-7 | 4 | Screw-HH |
| 13 | 323-8 | 8 | Screw-HH |
| 14 | 3290-357 | 9 | Nut-HHF, Whiz |
| 15 | 1-633453 | 1 | Spacer-Clutch |
| 16 | 103-1666 | 1 | Spave-Transmission |
| 17 | 110-4891 | 1 | Pulley |
| 18 | 103-4177 | 1 | Key |

| Ref. | Part Number | Qty. | Description |
|------|-------------|------|--------------------|
| 19 | 1-373034 | 1 | Washer |
| 20 | 1-603610 | 2 | Washer-Spring |
| 21 | 116-3702 | 1 | Screw-HH |
| 23 | 33114-016 | 1 | Screw-HH |
| 24 | 3253-4 | 1 | Washer-Lock |
| 27 | 98-0776 | 1 | Decal-Caution |
| 28 | 3256-5 | 2 | Washer-Flat |
| 29 | 1-323285 | 1 | Pulley-Idler, Flat |
| 30 | 3256-24 | 1 | Washer-Flat |
| 31 | 3296-39 | 1 | Nut-Lock, NI |
| 32 | 32128-21 | 1 | Nut-HF |
| 33 | 3231-6 | 1 | Screw-CARR |
| 34 | 110-4886 | 1 | Belt-V |
| 35 | 81-1690 | 1 | Clamp-Cable |
| 36 | 323-14 | 1 | Screw-HH |
| 37 | 103-1966 | 1 | Adapter |
| 38 | 120-4321 | 1 | Valve-Drain, Oil |
| 39 | 116-6278-03 | 1 | Guard-Muffler |

● Not serviced separately

■ Obtain parts from www.kawpowerpc.com

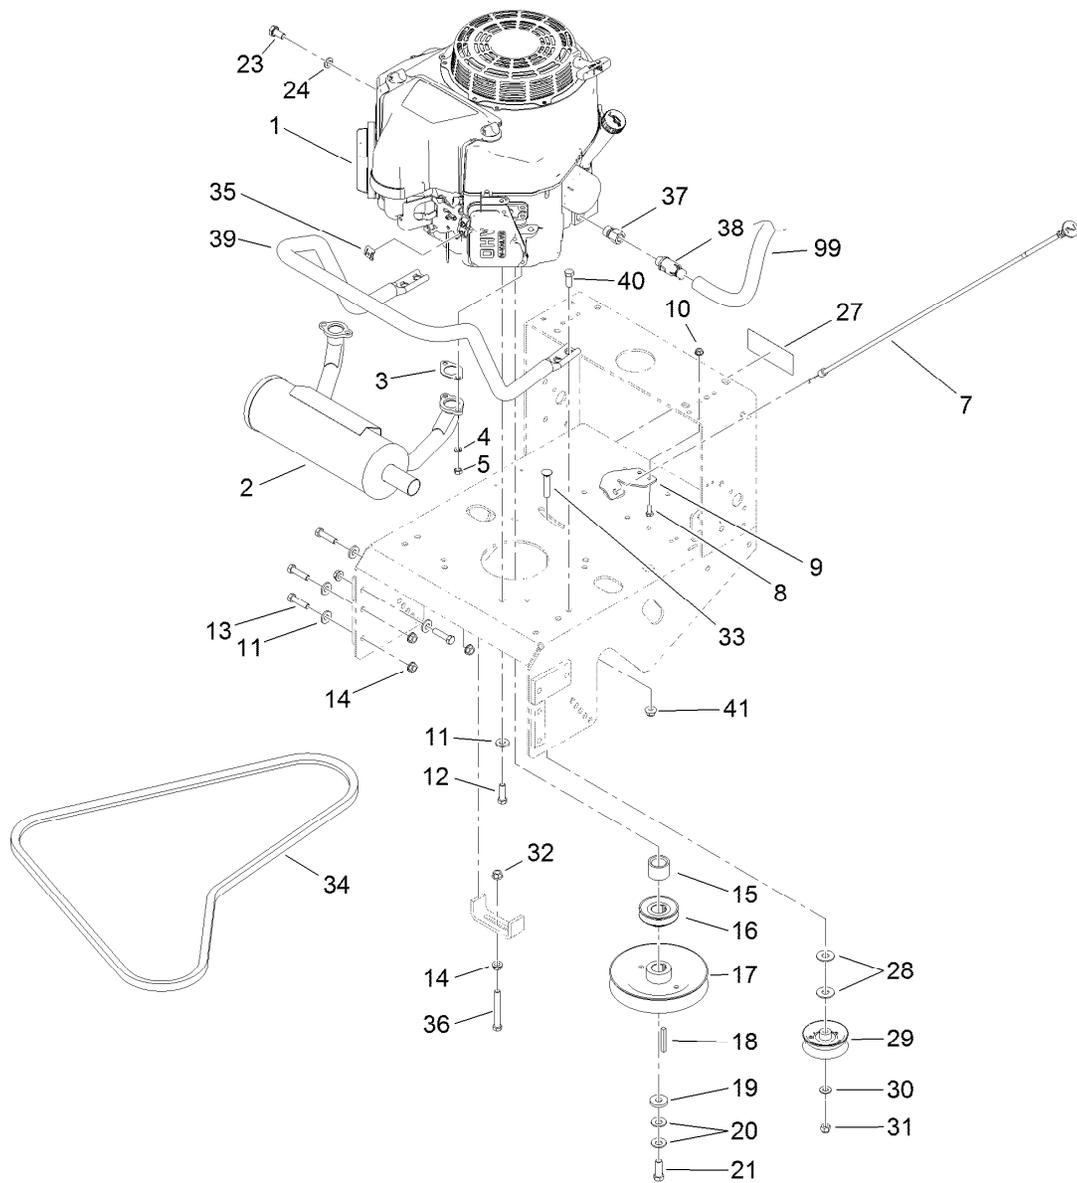


Engine and Exhaust Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|------|-------------|------|-------------|
| 40 | 323-6 | 4 | Screw-HH |

| Ref. | Part Number | Qty. | Description |
|------|-------------|------|-----------------|
| 41 | 104-8301 | 4 | Nut-Flange, NI |
| 99 | 103-1964 | 1 | Hose-Drain, Oil |

● Not serviced separately


■ Obtain parts from www.kawpowerpc.com

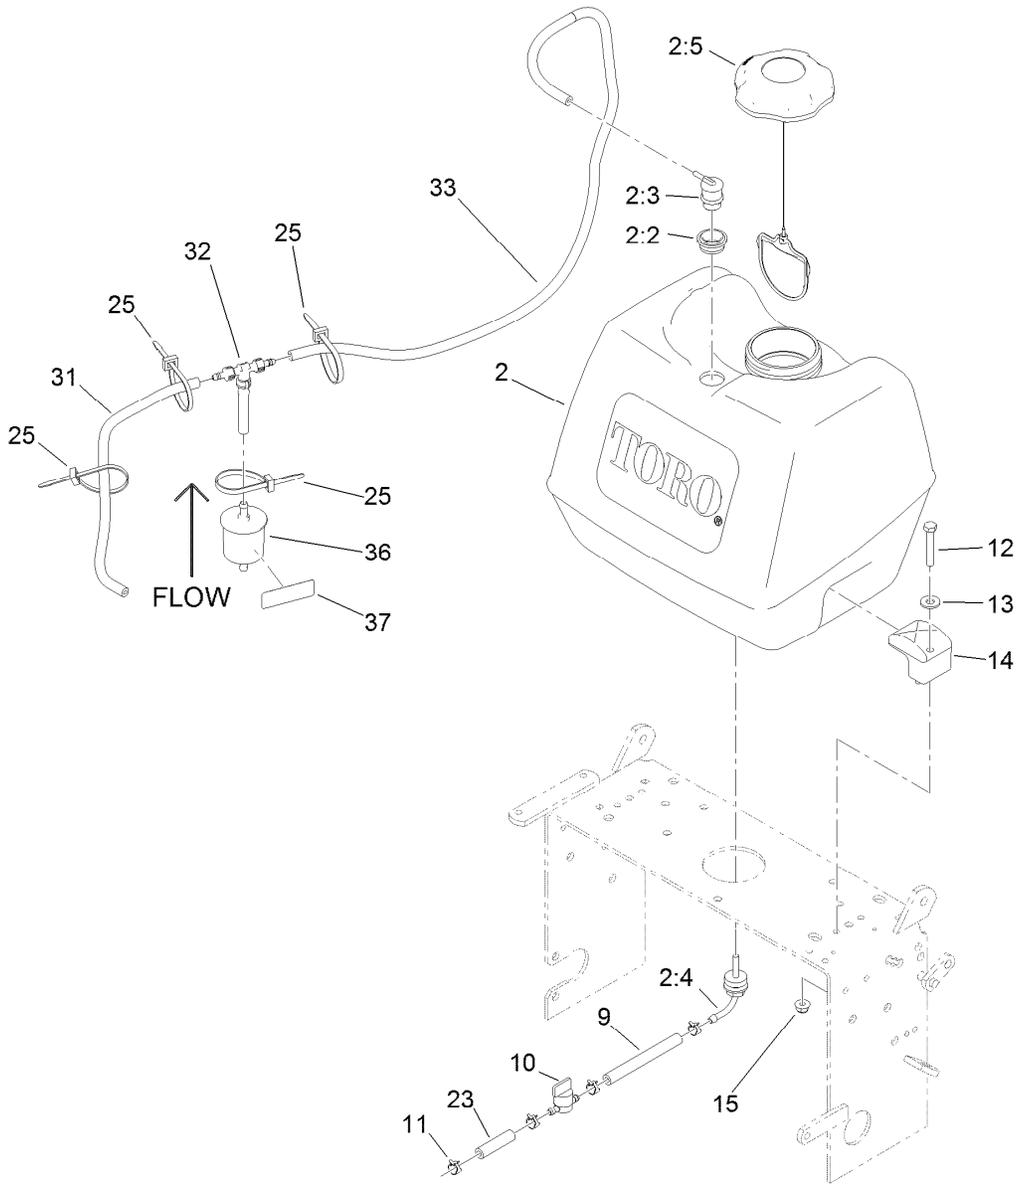

Fuel System Assembly


| Ref. | Part Number | Qty. | Description |
|------|-------------|------|------------------------|
| 2 | 126-1526 | 1 | Fuel Tank ASM |
| 2:2 | 114-0284 | 1 | Grommet |
| 2:3 | 119-3547 | 1 | Valve-Vent, Fuel |
| 2:4 | 103-2605 | 1 | Fitting-Fuel, Bulkhead |
| 2:5 | 120-5461 | 1 | Cap-Fuel, Ratcheting |
| 9 | 109-0650 | 1 | Hose-Fuel |
| 10 | 1-603770 | 1 | Valve-Fuel |
| 11 | 2412-98 | 4 | Clamp-Hose |
| 12 | 322-10 | 2 | Screw-HH |
| 13 | 3256-3 | 2 | Washer-Flat |

| Ref. | Part Number | Qty. | Description |
|------|-------------|------|-------------------------|
| 14 | 107-4543 | 2 | Clamp |
| 15 | 104-8300 | 2 | Nut-Flange, NI |
| 23 | 99-9415 | 1 | Hose-Fuel |
| 25 | 3290-378 | 4 | Tie-Cable |
| 31 | 115-7872 | 1 | Hose-Fuel |
| 32 | 116-5464 | 1 | Tee And Check |
| 33 | 116-4346 | 1 | Hose-Emissions |
| 36 | 120-2235 | 1 | Filter-Fuel |
| 37 | 116-4769 | 1 | Decal-Filter, Emissions |

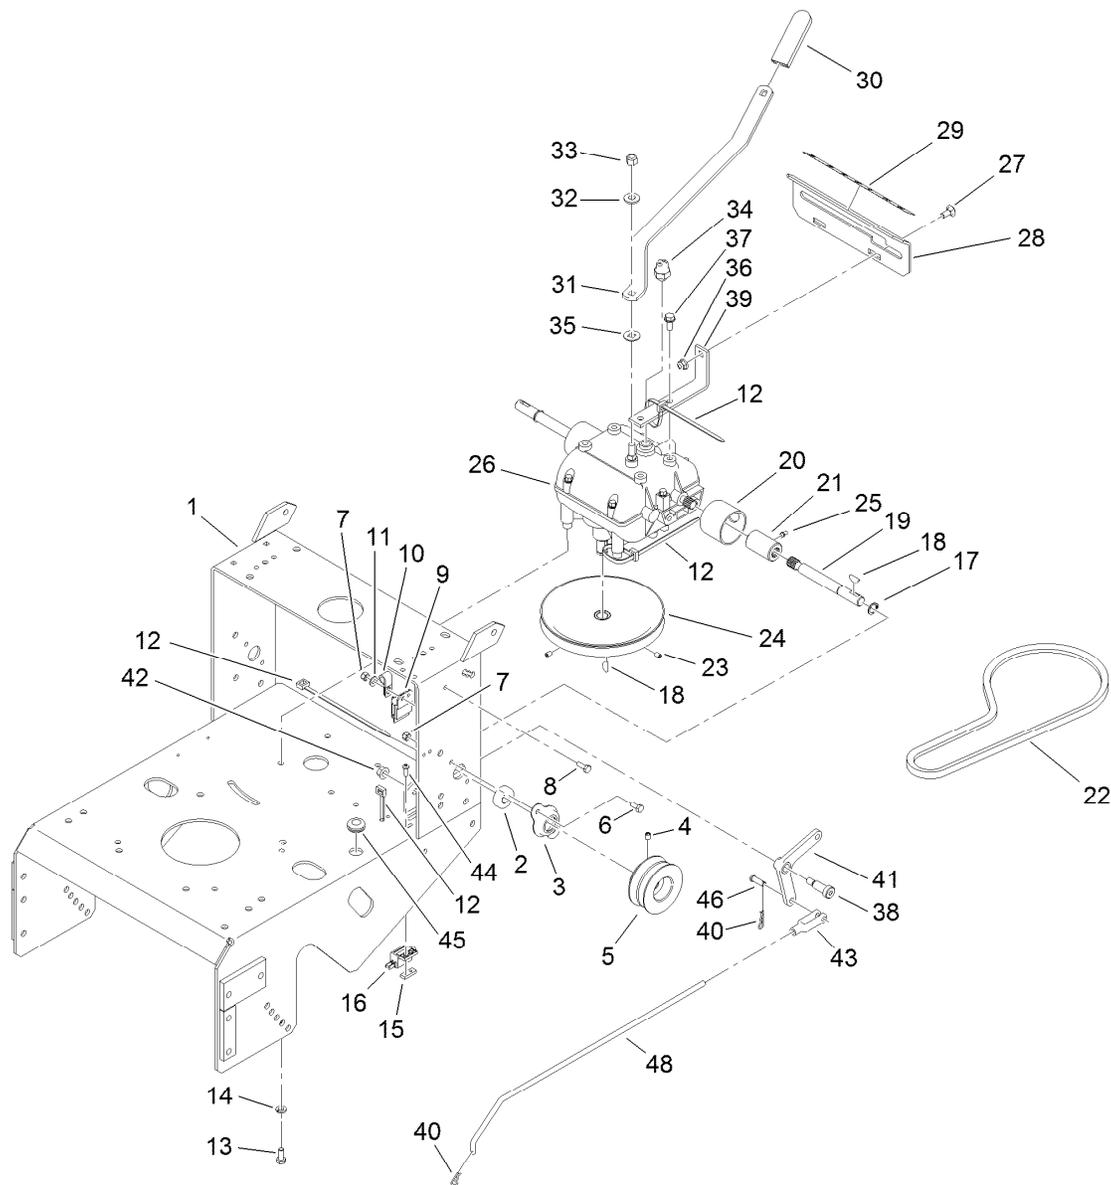


Frame and Transmission Assembly

| Ref. | Part Number | Qty. | Description | Ref. | Part Number | Qty. | Description |
|------|-------------|------|-----------------------|------|-------------|------|-----------------------|
| 1 | 116-6084-01 | 1 | Frame-Gear | 22 | 1-323630 | 1 | V-Belt |
| 2 | 1-323252 | 2 | Bearing-Shaft | 23 | 3245-41 | 2 | Screw-HSH |
| 3 | 1-323254 | 2 | Flange-Output | 24 | 1-323278 | 1 | Sheave-Transmission |
| 4 | 3246-18 | 2 | Setscrew | 25 | 302-19 | 2 | Fitting-Grease |
| 5 | 103-6511 | 2 | Sheave-Transmission | 26 | 1-323500 | 1 | Transmission |
| 6 | 321-3 | 4 | Screw-HH | 27 | 3230-1 | 2 | Bolt-CARR |
| 7 | 3296-42 | 5 | Nut-Lock, NI | 28 | 1-323387-03 | 1 | Plate-Shift |
| 8 | 321-4 | 1 | Screw-HH | 29 | 105-4104 | 1 | Decal-Speed, Ground |
| 9 | 1-323430 | 1 | Module-Interlock | 30 | 1-303020 | 1 | Grip-Lever |
| 10 | 1-513762 | 1 | Clip-Loom | 31 | 98-3274-03 | 1 | Lever-Shift |
| 11 | 3256-22 | 1 | Washer-Flat | 32 | 98-5975 | 1 | Washer-Belleville |
| 12 | 1-303335 | 3 | Tie-Plastic | 33 | 3296-6 | 1 | Nut-Lock |
| 13 | 322-3 | 4 | Screw-HH | 34 | 1-303282 | 1 | Switch-Start, Neutral |
| 14 | 1-805005 | 4 | Washer-Lock | 35 | 1-323379 | 1 | Washer |
| 15 | 1-633181 | 1 | Plate-Tapped | 36 | 104-8300 | 2 | Nut-Flange, NI |
| 16 | 1-513051 | 1 | Switch-Open, Normally | 37 | 32144-11 | 4 | Screw-HWHTF |
| 17 | 32151-62 | 2 | Ring-Retaining | 38 | 1-603403 | 1 | Bolt-Shoulder |
| 18 | 3257-5 | 3 | Key-Woodruff | 39 | 1-323389-03 | 2 | Bracket-Plate, Shift |
| 19 | 1-323502 | 2 | Shaft-Transmission | 40 | 1-806003 | 2 | Pin-Cotter, Hair |
| 20 | 51-4220 | 2 | Guard-Coupler | 41 | 1-303186 | 1 | Bellcrank |
| 21 | 1-323680 | 2 | Coupler | 42 | 3290-357 | 1 | Nut-HHF, Whiz |

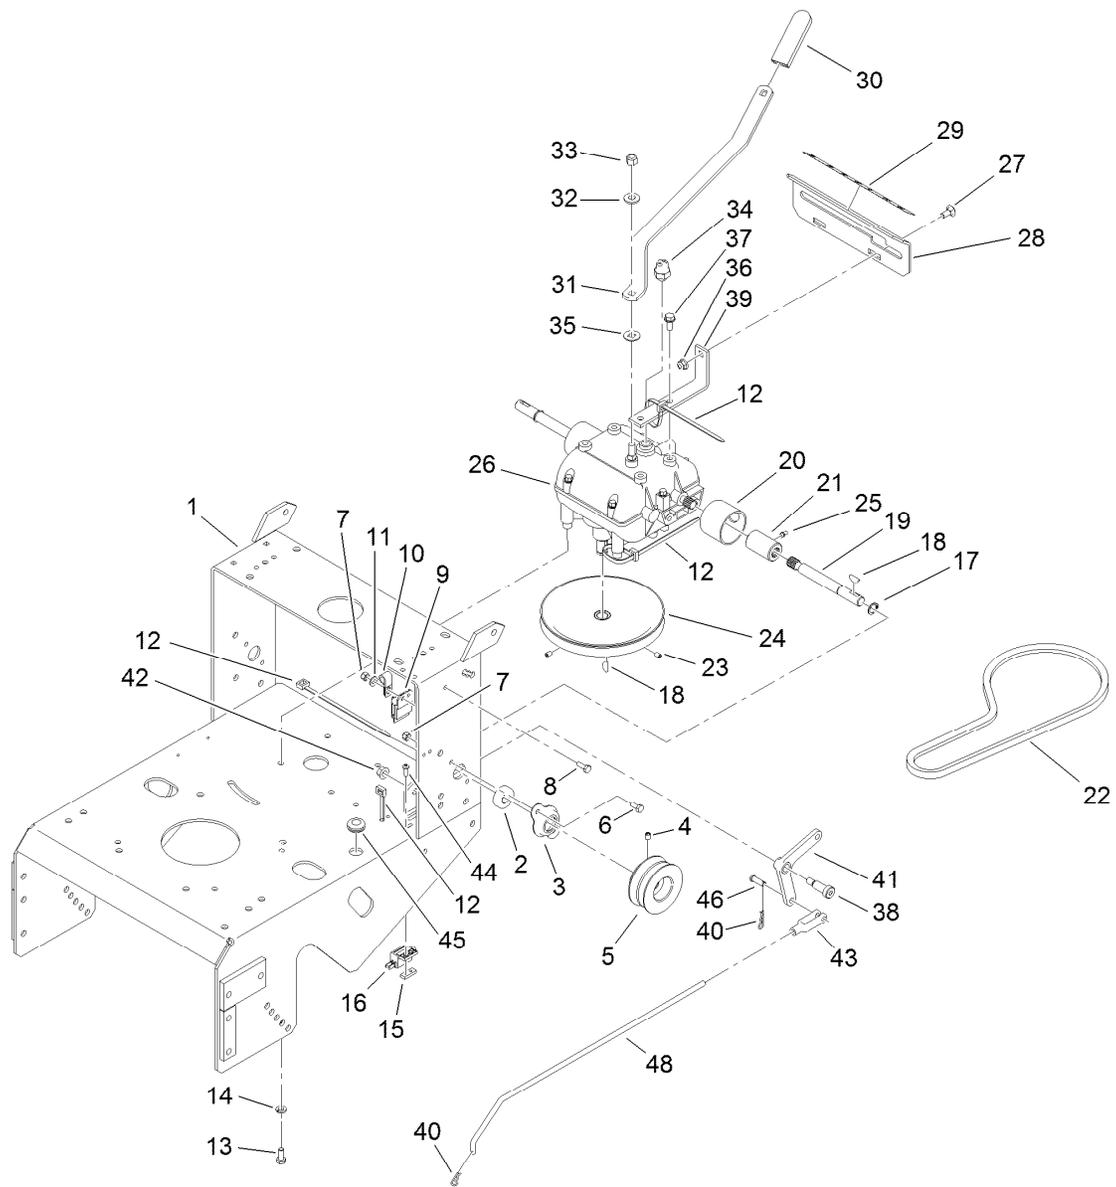

Frame and Transmission Assembly (continued)


| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|---------------------|
| 43 | 1-303105 | 1 | Yoke-Adjustable | 46 | 1-808280 | 1 | Pin-Clevis |
| 44 | 3290-500 | 2 | Screw-PPH | 48 | 1-323303 | 1 | Arm-Assist, Linkage |
| 45 | 1-543296 | 1 | Grommet | | | | |

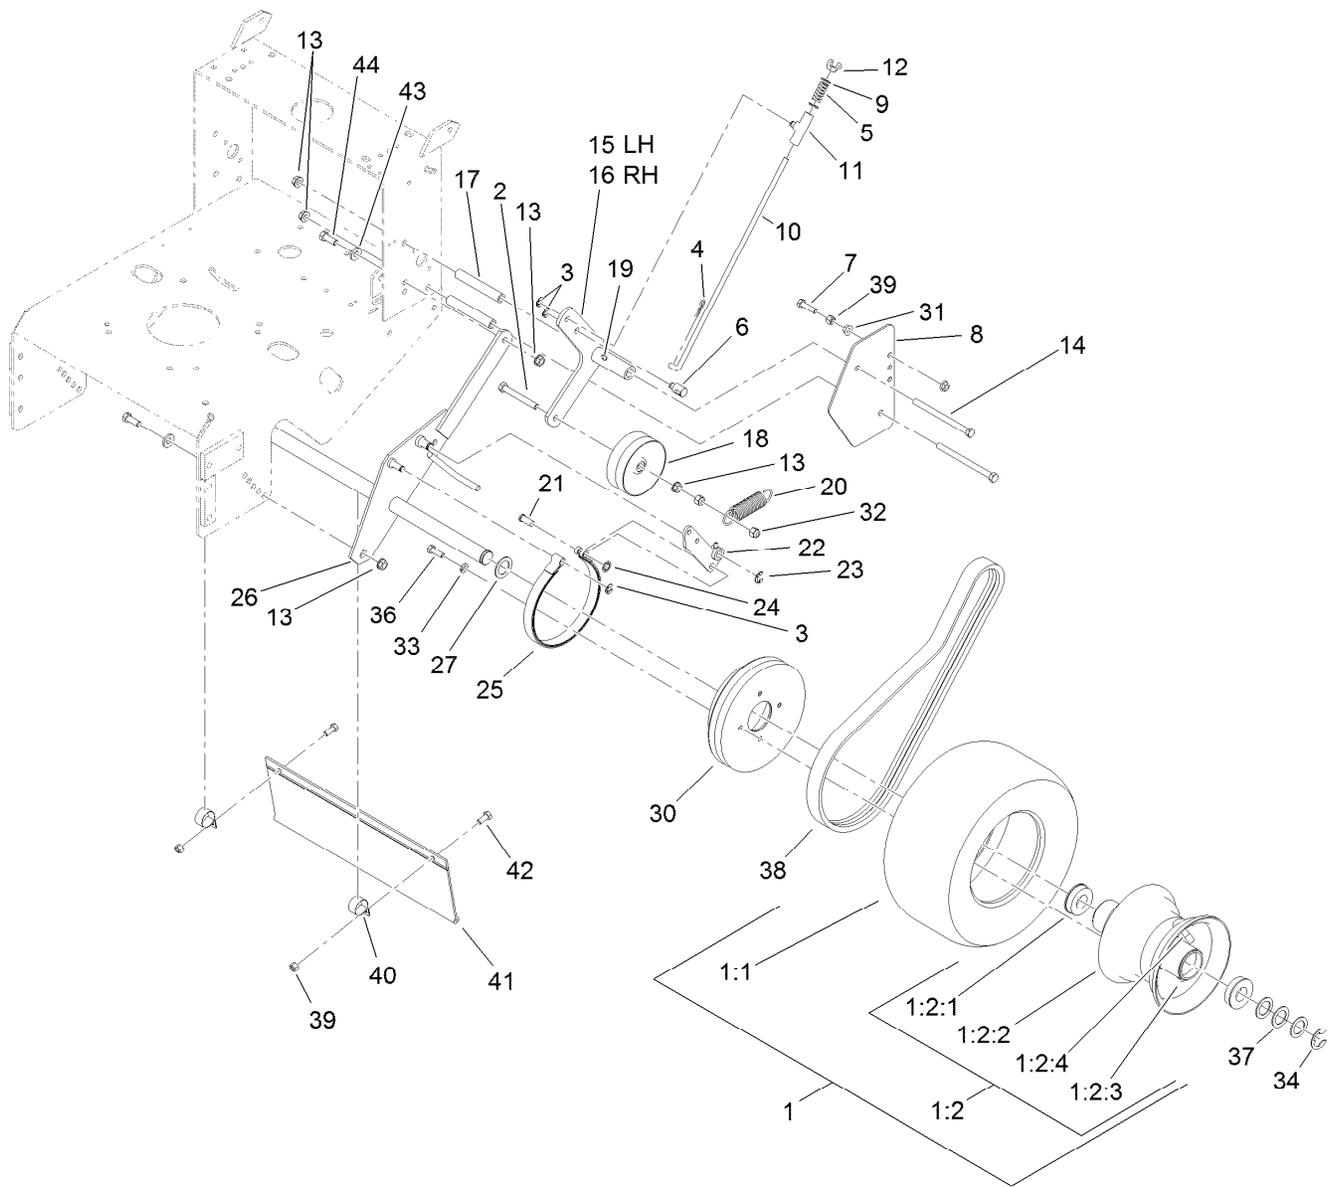

Drive Wheel and Brake Assembly

| Ref. | Part Number | Qty. | Description | Ref. | Part Number | Qty. | Description |
|-------|-------------|------|---------------------|------|-------------|------|--------------------------|
| 1 | 130-4550 | 2 | Wheel And Tire ASM | 13 | 3290-357 | 10 | Nut-HHF, Whiz |
| 1:1 | 1-323720 | 1 | Tire-Turfmaster | 14 | 323-39 | 4 | Screw-HH |
| 1:2 | 130-4565 | 1 | Wheel And Hub ASM | 15 | 116-7542-03 | 1 | Arm-Idler, LH |
| 1:2:1 | 1-323329 | 2 | Bearing-Flanged | 16 | 116-7543-03 | 1 | Arm-Idler, RH |
| 1:2:2 | | 1 | Rim ASM ● | 17 | 1-323283 | 4 | Spacer-Shield |
| 1:2:3 | | 1 | Fitting-Grease ● | 18 | 119-7887 | 2 | Pulley-Idler |
| 1:2:4 | | 1 | Stem-Valve ● | 19 | 302-19 | 2 | Fitting-Grease |
| 2 | 99-8664 | 2 | Screw-HH | 20 | 1-603402 | 2 | Spring-Extension |
| 3 | 32151-47 | 6 | Ring-Retaining | 21 | 1-323307 | 2 | Pin-Clevis |
| 4 | 1-806003 | 2 | Pin-Cotter, Hair | 22 | 103-1611-03 | 2 | Arm-Brake |
| 5 | 1-323245 | 2 | Spring-Compression | 23 | 32120-47 | 2 | Ring-Retaining, External |
| 6 | 103-1864 | 2 | Swivel-Lever, Drive | 24 | 1-803051 | 2 | Nut-Push |
| 7 | 116-3515 | 2 | Screw-HH, Special | 25 | 1-323262 | 2 | Band-Brake |
| 8 | 1-323287-01 | 2 | Shield-Wheel, Drive | 26 | 1-322117-03 | 1 | Axle |
| 9 | 3256-23 | 4 | Washer-Flat | 27 | 1-543436 | 2 | Washer-Spacer |
| 10 | 1-323548 | 2 | Linkage-Brake | 30 | 109-4359 | 2 | Drum And Sheave ASM |
| 11 | 110-5866 | 2 | Swivel-Brake | 31 | 32128-20 | 4 | Nut-HF |
| 12 | 1-513959 | 2 | Wingnut-Nylock | 32 | 3296-39 | 4 | Nut-Lock, NI |


● Not serviced separately

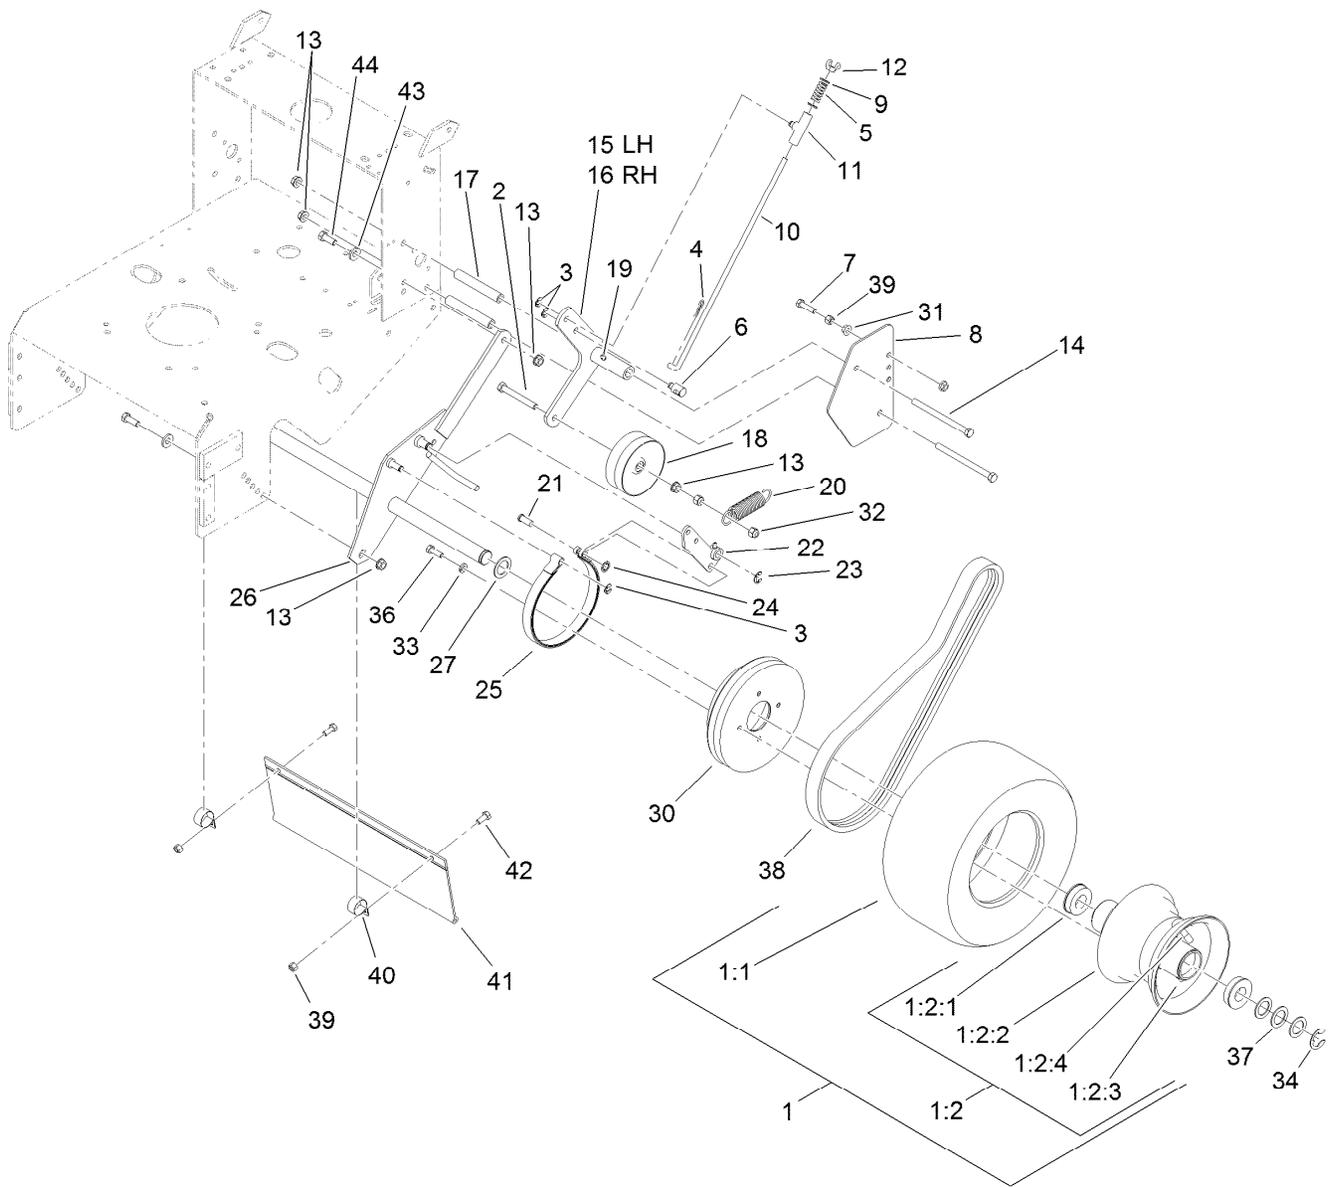

Drive Wheel and Brake Assembly (continued)


| Ref. | Part Number | Qty. | Description | Ref. | Part Number | Qty. | Description |
|------|-------------|------|---------------|------|-------------|------|-------------------|
| 33 | 1-805005 | 8 | Washer-Lock | 40 | 2412-104 | 2 | Clamp-R |
| 34 | 1-808519 | 2 | Ring-Snap | 41 | 98-3259 | 1 | Shield-Trailing |
| 36 | 322-5 | 8 | Screw-HH | 42 | 322-3 | 2 | Screw-HH |
| 37 | 1-523157 | 6 | Washer-Spacer | 43 | 98-5975 | 4 | Washer-Belleville |
| 38 | 1-323631 | 2 | V-Belt | 44 | 323-6 | 4 | Screw-HH |
| 39 | 3296-29 | 4 | Nut-Lock, NI | | | | |

● Not serviced separately

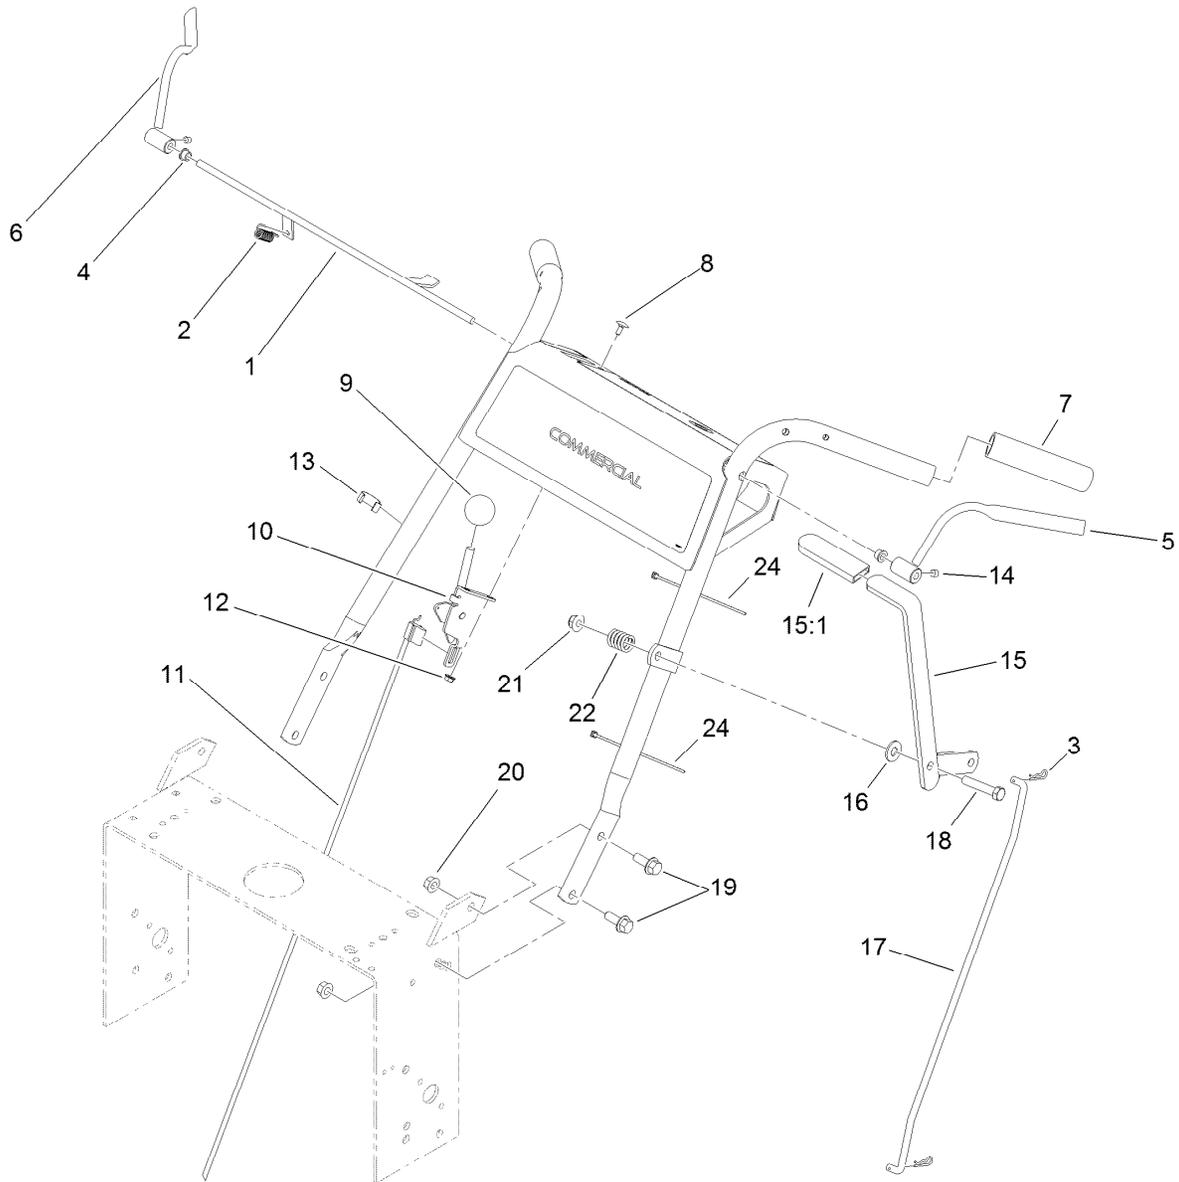

Handle Control Assembly


| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--|-------------|--------------------|-------------|----------------------|
| 1 | 106-2717-03 | 1 | Rod-CONTROL, Operator Presence | 12 | 32128-17 | 2 | Nut-Lock, Flange |
| 2 | 1-303363 | 1 | Spring-Extension | 13 | 1-303088 | 1 | Clip-Cable |
| 3 | 1-806003 | 2 | Pin-Cotter, Hair | 14 | 1-803322 | 2 | Screw-Set |
| 4 | 1-303365 | 2 | Bushing-Nylon | 15 | 116-6331 | 1 | Lever ASM |
| 5 | 106-5485 | 1 | LH Operator Presence Control Lever ASM | 15:1 | 1-303020 | 1 | Grip-Lever |
| 6 | 106-5486 | 1 | RH Operator Presence Control Lever ASM | 16 | 3256-4 | 1 | Washer-Flat |
| 7 | 104-9838 | 2 | Grip-Foam | 17 | 1-323298 | 1 | Linkage-Blade, Upper |
| 8 | 1-807513 | 2 | Bolt-CARR | 18 | 323-10 | 1 | Screw-HH |
| 9 | 1-603175 | 1 | Knob-Ball | 19 | 32128-21 | 4 | Nut-HF |
| 10 | 110-5547 | 1 | Lever-Control | 20 | 3234-11 | 4 | Screw-HHF |
| 11 | 119-1823 | 1 | Cable-Control, Throttle | 21 | 104-8301 | 1 | Nut-Flange, NI |
| | | | | 22 | 1-303160 | 1 | Spring-Compression |
| | | | | 24 | 1-303287 | 2 | Tie-Cable |

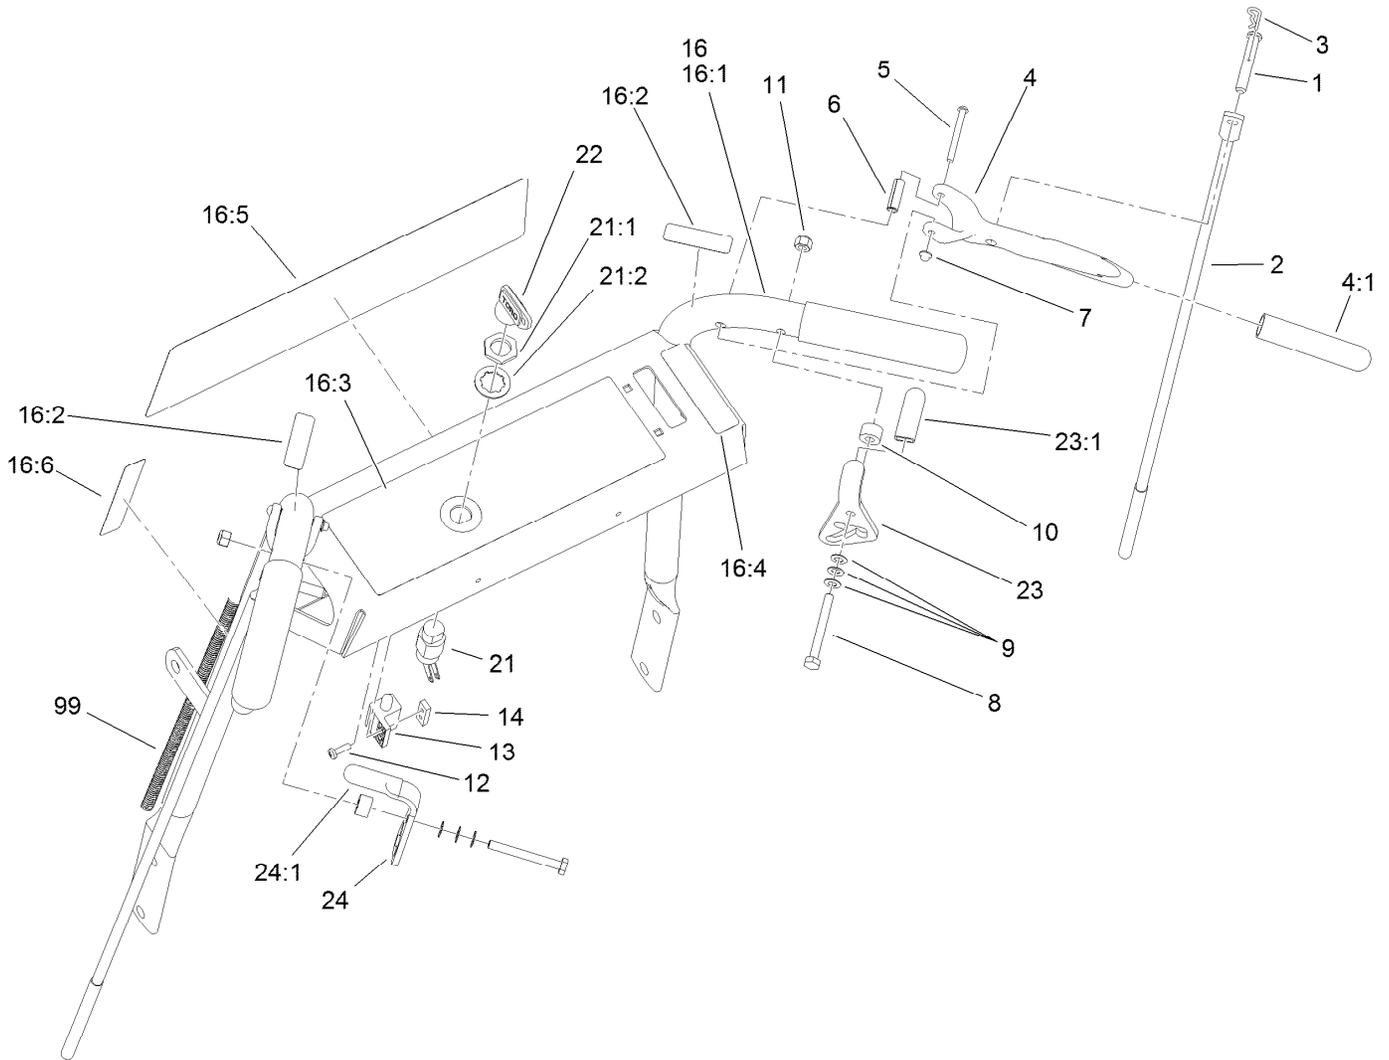

Handle Assembly


| Ref. | Part Number | Qty. | Description | Ref. | Part Number | Qty. | Description |
|------|-------------|------|-----------------------|------|-------------|------|--------------------------|
| 1 | 1-808286 | 2 | Pin-Clevis | 16:1 | | 1 | Pistol Grip Handle ASM ● |
| 2 | 1-323359 | 2 | Linkage-Wheel, Drive | 16:2 | 105-4111 | 2 | Decal-Lock, Neutral |
| 3 | 1-806003 | 2 | Pin-Cotter, Hair | 16:3 | 106-2737 | 1 | Decal-Warning |
| 4 | 1-302006 | 2 | Drive Lever ASM | 16:4 | 106-2733 | 1 | Decal-Throttle |
| 4:1 | 1-303021 | 1 | Grip-Lever, Drive | 16:5 | 110-6917 | 1 | Decal |
| 5 | 1-808250 | 2 | Pin-Lever, Drive | 16:6 | 95-5537 | 1 | Decal-Engage, Deck |
| 6 | 1-806340 | 2 | Pin-Roll | 21 | 29-5560 | 1 | Switch-On / Off |
| 7 | 1-803001 | 2 | Nut | 21:1 | 218-461 | 1 | Nut-HH |
| 8 | 321-18 | 2 | Screw-HH | 21:2 | 3254-5 | 1 | Washer-Tooth, Internal |
| 9 | 1-303435 | 6 | Washer-Spring | 22 | 63-8360 | 1 | Key-Ignition (W/Shield) |
| 10 | 1-323549 | 2 | Spacer | 23 | 1-324280 | 1 | RH Thumb Latch ASM |
| 11 | 3296-42 | 2 | Nut-Lock, NI | 23:1 | 1-303019 | 1 | Grip-Latch |
| 12 | 3290-500 | 2 | Screw-PPH | 24 | 1-324279 | 1 | LH Thumb Latch ASM |
| 13 | 1-513051 | 1 | Switch-Open, Normally | 24:1 | 1-303019 | 1 | Grip-Latch |
| 14 | 1-633181 | 1 | Plate-Tapped | 99 | 116-2661 | 1 | Harness-Wire |
| 16 | 119-3638 | 1 | Handle ASM | | | | |

● Not serviced separately

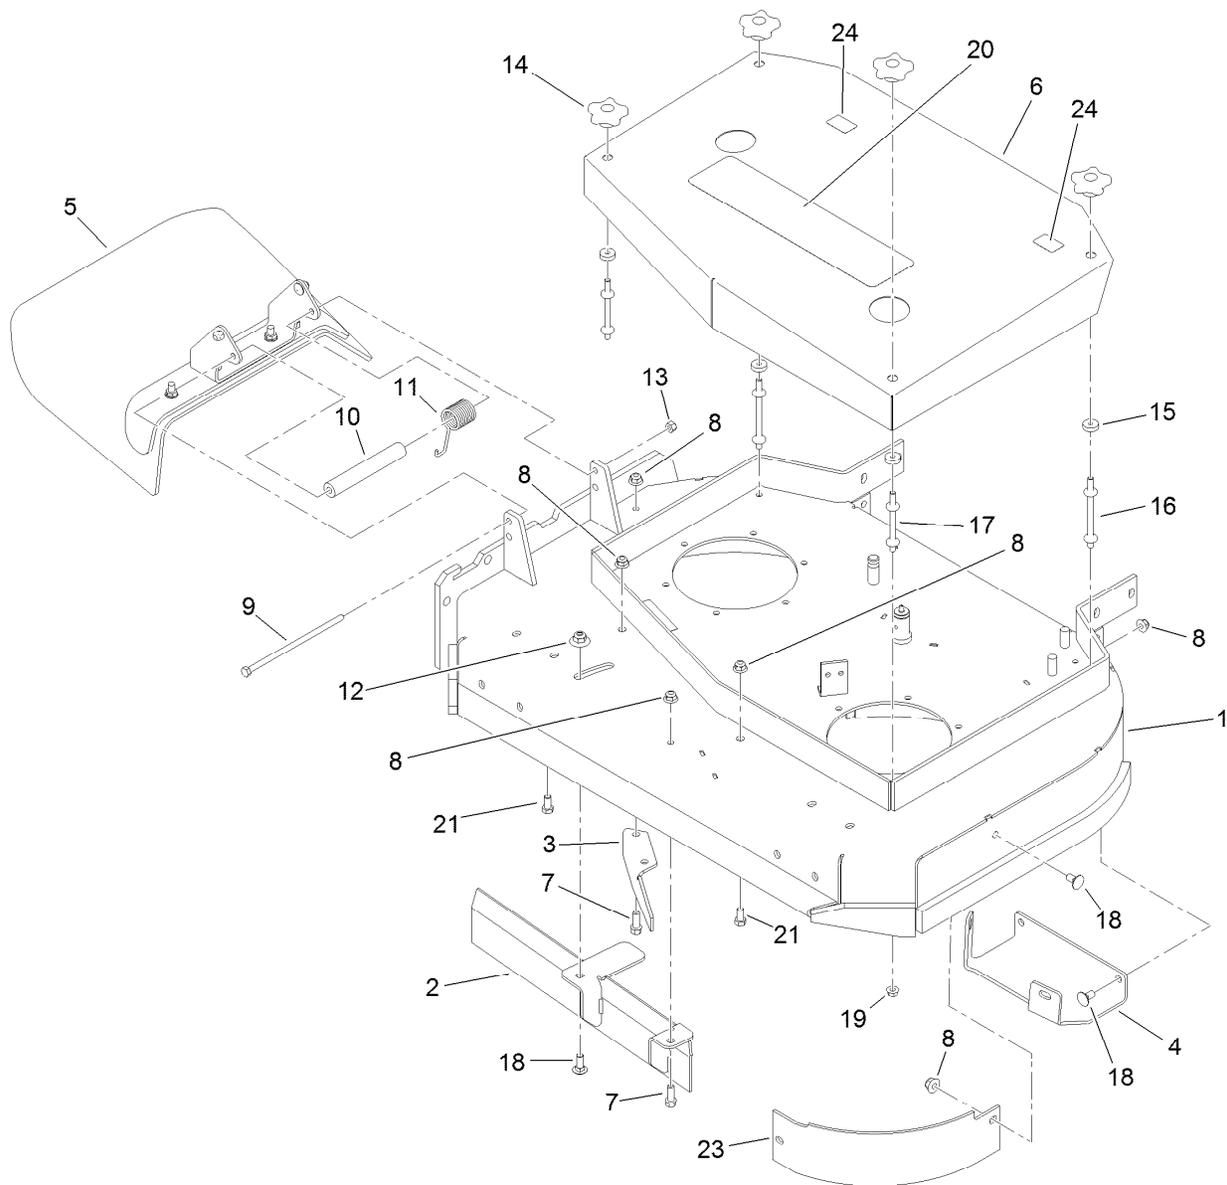

Deck Assembly


| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|---------------------------|
| 1 | 110-4907 | 1 | Deck ASM | 13 | 3296-47 | 1 | Nut-Lock, NI |
| 2 | 121-1777-03 | 1 | Baffle | 14 | 106-4161 | 4 | Knob-Handle |
| 3 | 110-0754-01 | 1 | Baffle-Discharge | 15 | 1-323417 | 4 | Washer |
| 4 | 110-2037-01 | 1 | Plate-Skid | 16 | 1-303536 | 2 | Stud-Shield, Belt (Long) |
| 5 | 119-6530 | 1 | Deflector ASM | 17 | 1-303537 | 2 | Stud-Shield, Belt (Short) |
| 6 | 110-2036-01 | 1 | Cover-Deck | 18 | 3231-2 | 6 | Bolt-CARR |
| 7 | 92-1624 | 3 | Screw-HWH | 19 | 32128-20 | 4 | Nut-HF |
| 8 | 104-8301 | 10 | Nut-Flange, NI | 20 | 112-9710 | 1 | Decal |
| 9 | 322-50 | 1 | Screw-HH | 21 | 323-4 | 2 | Screw-HH |
| 10 | 105-4622 | 1 | Spacer | 23 | 110-6903-03 | 1 | Baffle-Front, LH |
| 11 | 108-4052 | 1 | Spring-Torsion | 24 | 103-2076 | 2 | Decal-Caution |
| 12 | 109-6658 | 1 | Nut-Flange, NI | | | | |

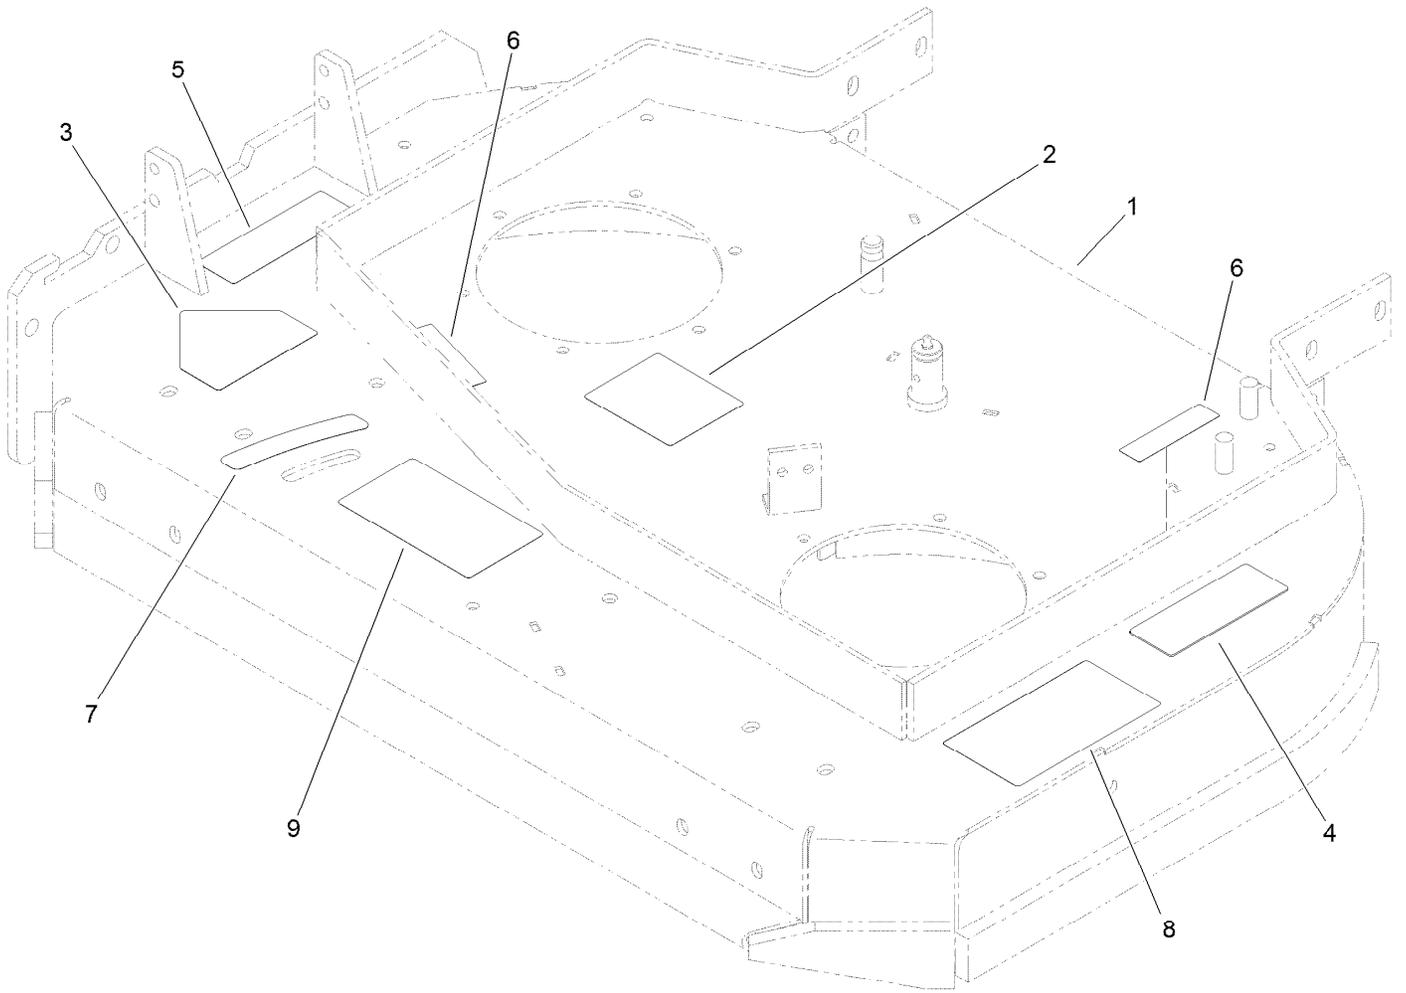

Deck Decal Assembly No. 110-4907


| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|-----------------------------|
| 1 | | 1 | 36 Inch Deck ASM ● |
| 2 | 98-3296 | 1 | Decal-Routing, Belt |
| 3 | 1-403005 | 1 | Decal-Danger |
| 4 | 98-5130 | 1 | Decal-Torque, Bolt |
| 5 | 104-8569 | 1 | Decal-Warning |
| 6 | 98-5954 | 2 | Decal-Cover, Missing |
| 7 | 110-2067 | 1 | Decal-Setting, Baffle |
| 8 | 66-1340 | 1 | Decal-Danger, Thrown Object |
| 9 | 110-2068 | 1 | Decal-Adjustment, Baffle |

● Not serviced separately

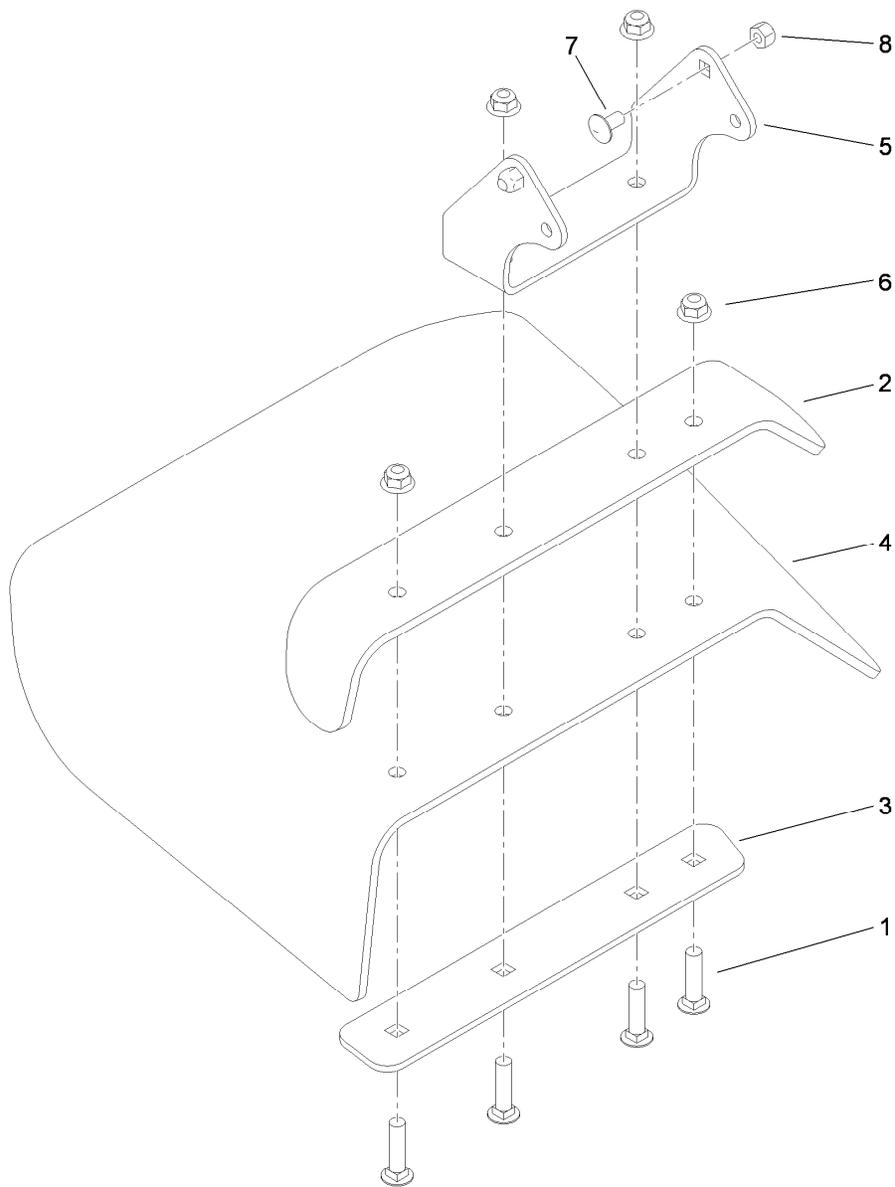


Deflector Assembly No. 119-6530

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|-----------------------------|
| 1 | 3231-4 | 4 | Screw-CARR |
| 2 | 110-0792-01 | 1 | Deflector |
| 3 | 110-0793-03 | 1 | Strap-Discharge |
| 4 | 110-0791 | 1 | Deflector-Rubber |
| 5 | 119-6532-01 | 1 | Bracket-Mounting, Deflector |
| 6 | 104-8301 | 4 | Nut-Flange, NI |
| 7 | 3230-18 | 2 | Screw-CARR |
| 8 | 3296-29 | 2 | Nut-Lock, NI |

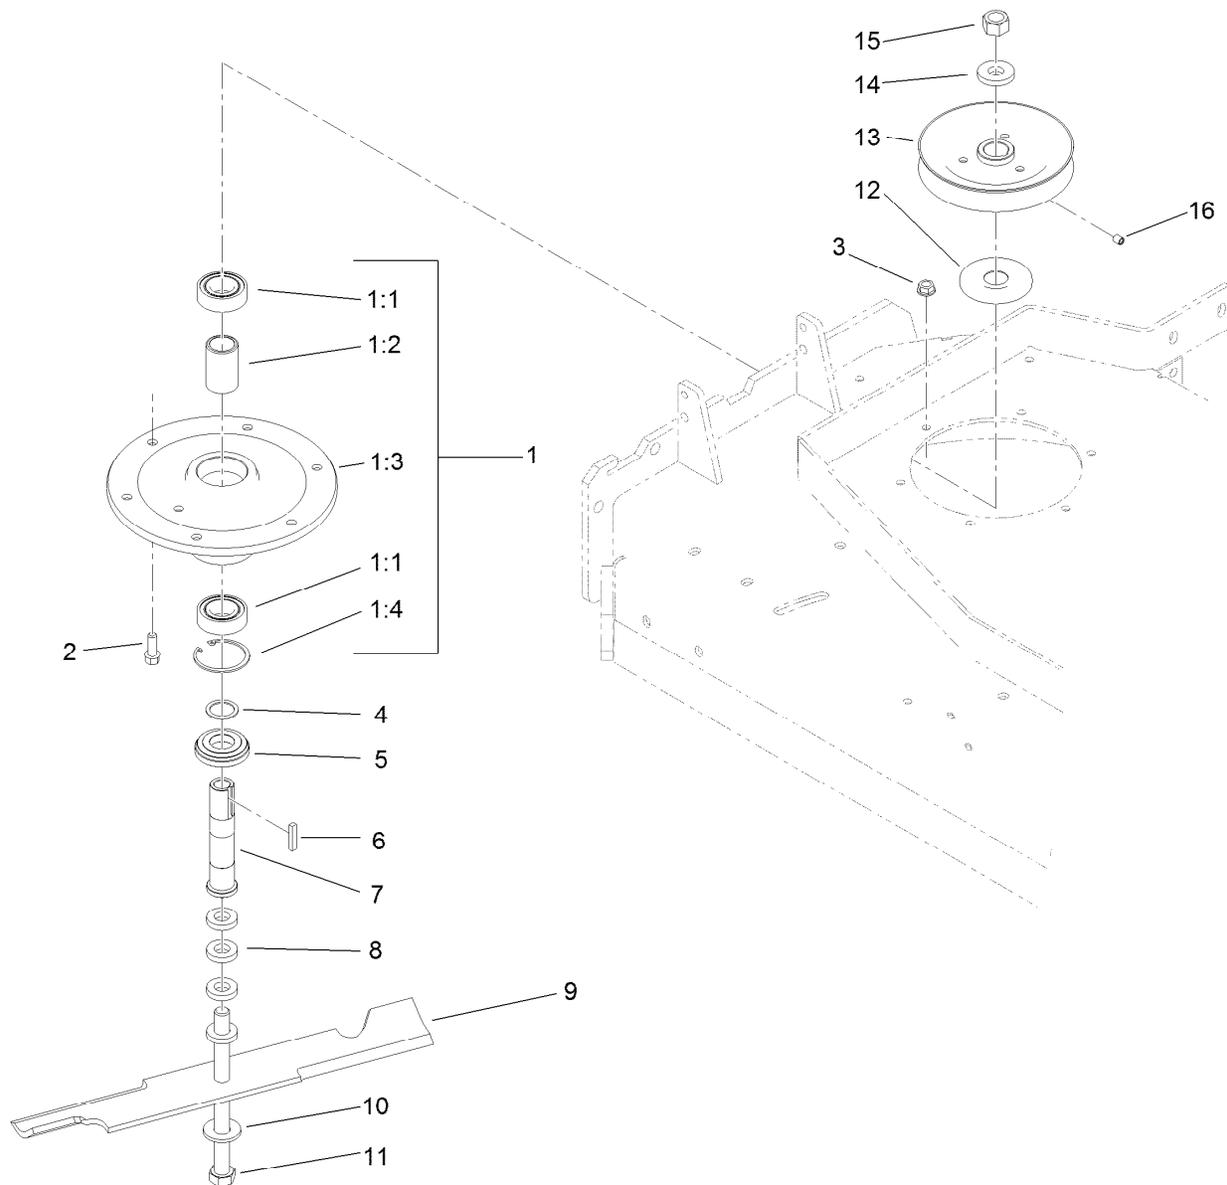


Sheave, Spindle and Blade Assembly

| Ref. | Part Number | Qty. | Description | Ref. | Part Number | Qty. | Description |
|------|-------------|------|----------------------|------|-------------|------|-------------------------|
| 1 | 108-6697 | 2 | Spindle Housing ASM | 7 | 1-323529 | 2 | Tube-Spindle, Short |
| 1:1 | 119-7857 | 2 | Bearing-Ball, 1 Inch | 8 | 1-323539 | 8 | Spacer |
| 1:2 | 110-2116 | 1 | Spacer-Bearing | 9 | 105-7781-03 | 2 | Blade-18 Inch, Hi Flow |
| 1:3 | 108-6694 | 1 | Housing-Spindle | 10 | 1-513208 | 2 | Washer-Spring |
| 1:4 | 32120-8 | 1 | Ring-Snap | 11 | 1-800861 | 2 | Screw-Cap, HH |
| 2 | 92-1624 | 12 | Screw-HWH | 12 | 103-1330 | 2 | Guard-Bearing, Top |
| 3 | 104-8301 | 12 | Nut-Flange, NI | 13 | 1-403183 | 2 | Sheave |
| 4 | 110-4888 | 2 | Washer-Spacer | 14 | 1-323339 | 2 | Washer-Retainer, Sheave |
| 5 | 103-2535 | 2 | Spacer-Guard, Bottom | 15 | 3219-6 | 2 | Nut-Hex |
| 6 | 1-807267 | 2 | Key | 16 | 3246-18 | 2 | Setscrew |

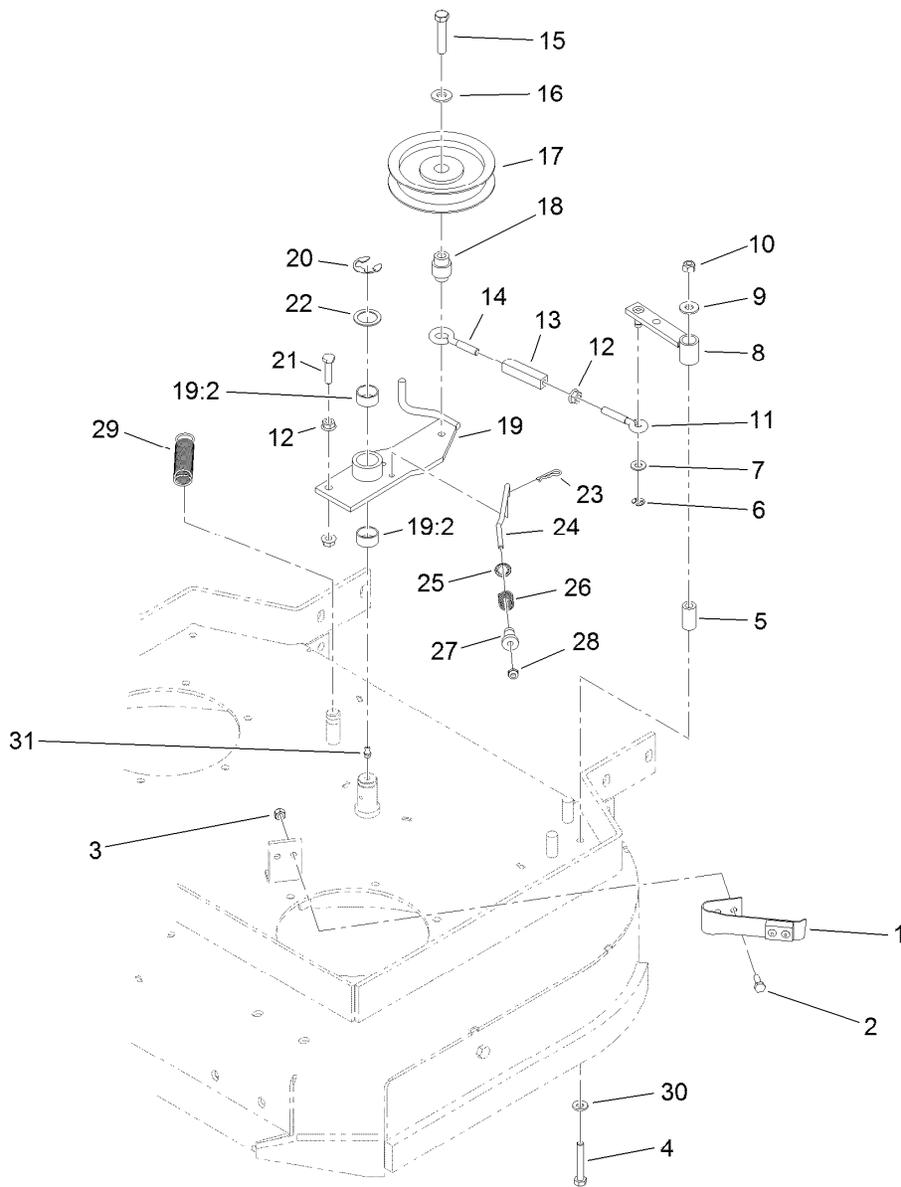

Idler Assembly

| Ref. | Part Number | Qty. | Description | Ref. | Part Number | Qty. | Description |
|------|-------------|------|---------------------|------|-------------|------|---------------------|
| 1 | 1-324372 | 1 | Pad And Spring ASM | 18 | 1-303434 | 1 | Bushing-Engagement |
| 2 | 321-4 | 2 | Screw-HH | 19 | 103-3600 | 1 | Idler Arm ASM |
| 3 | 3296-42 | 2 | Nut-Lock, NI | 19:2 | 1-323729 | 2 | Sleeve-Bearing |
| 4 | 322-10 | 1 | Screw-HH | 20 | 32151-103 | 1 | Ring-Retaining, EXT |
| 5 | 1-403179 | 1 | Tube-Pivot | 21 | 116-3515 | 1 | Screw-HH, Special |
| 6 | 32120-35 | 1 | Ring-Retaining, EXT | 22 | 1-303352 | 1 | Washer-Spindle |
| 7 | 3256-23 | 1 | Washer-Flat | 23 | 1-806003 | 1 | Pin-Cotter, Hair |
| 8 | 1-322235 | 1 | Arm-Assist | 24 | 1-323715 | 1 | Rod-Brake |
| 9 | 3256-3 | 1 | Washer-Flat | 25 | 1-323748 | 1 | Ring-Push On |
| 10 | 3296-29 | 1 | Nut-Lock, NI | 26 | 1-323747 | 1 | Spring-Compression |
| 11 | 1-303238 | 1 | Eyebolt-Thread, RH | 27 | 1-323746 | 1 | Spacer-Flanged |
| 12 | 32128-20 | 3 | Nut-HF | 28 | 3296-56 | 1 | Nut-Lock, NI |
| 13 | 1-303236 | 1 | Body-Turnbuckle | 29 | 1-323071 | 1 | Spring-Extension |
| 14 | 1-303348 | 1 | Eyebolt-Thread, LH | 30 | 1-303334 | 1 | Washer-Spring |
| 15 | 702809 | 1 | Screw-HH | 31 | 302-40 | 1 | Fitting-Grease |
| 16 | 98-5975 | 1 | Washer-Belleville | | | | |
| 17 | 116-3626 | 1 | Pulley-Idler | | | | |

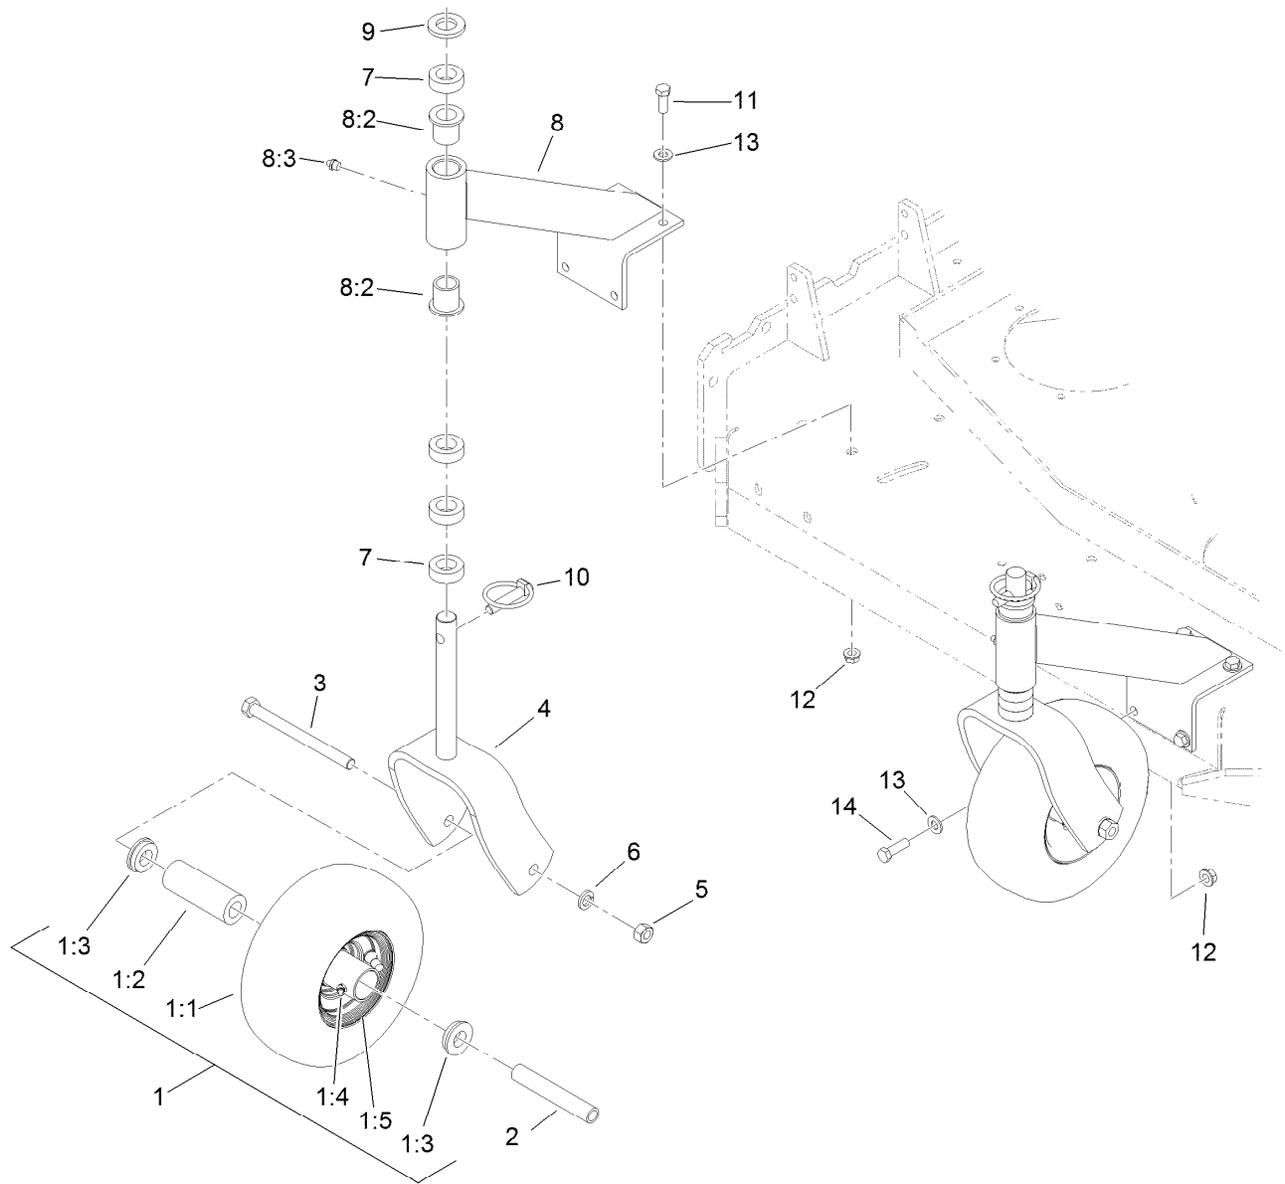

Caster Assembly

| Ref. | Part Number | Qty. | Description |
|------|-------------|------|--------------------|
| 1 | 130-4557 | 2 | Wheel And Tire ASM |
| 1:1 | | 1 | Tire ● |
| 1:2 | 1-513809 | 1 | Bearing |
| 1:3 | 1-513810 | 2 | Bushing |
| 1:4 | 302-61 | 1 | Fitting-Grease |
| 1:5 | | 1 | Wheel ● |
| 2 | 1-513547 | 2 | Spacer |
| 3 | 325-20 | 2 | Screw-HH |
| 4 | 116-7942-01 | 2 | Fork-Caster |
| 5 | 3217-9 | 2 | Nut-HH |
| 6 | 3253-7 | 2 | Washer-Lock |

| Ref. | Part Number | Qty. | Description |
|------|-------------|------|-----------------|
| 7 | 1-303314 | 8 | Spacer-Caster |
| 8 | 110-2130 | 2 | Support ASM |
| 8:2 | 1-303514 | 2 | Bearing-Flanged |
| 8:3 | 302-52 | 1 | Fitting-Grease |
| 9 | 1-513338 | 2 | Washer-Flat |
| 10 | 1-809020 | 2 | Pin |
| 11 | 323-6 | 7 | Screw-HH |
| 12 | 104-8301 | 8 | Nut-Flange, NI |
| 13 | 3256-24 | 8 | Washer-Flat |
| 14 | 323-7 | 1 | Screw-HH |

● Not serviced separately

Attachments and Accessories

For 30634 Commercial Walk-Behind Mower Fixed Deck, Pistol Grip, Gear Drive with 36in TURBO FORCE Cutting Unit

| Product Name | Model/Part |
|---|-------------------|
| Blade-Recycler, 18in..... | 105-7779-03 |
| Blade-Med Flow, 18in | 105-7794-03 |
| Blade-Low Flow, 18in..... | 105-7795-03 |
| Blade-Atomic, 18in | 105-7796-03 |
| 36in Bagger Enhancement Kit | 110-2026 |
| 36in Recycler Kit..... | 110-2080 |
| Soft Bag (3 Bushel)..... | 30104 |
| Sulky..... | 30109 |
| Weight Kit | 110-2085 |
| Blade-Recycler, 18in (6 Pack)..... | 110-0408 |
| Blade-Lo Flow, 18in (6 Pack) | 110-0406 |
| Blade-Med Flow, 18in (6 Pack) | 110-0409 |
| Blade-Hi Flow, 18in (6 Pack)..... | 108-1117 |
| Blade-Atomic, 18in (6 Pack) | 108-1118 |
| Operator-Controlled Discharge Chute Kit | 115-4190 |



Count on it.