



Form No. 3383-411 Rev A

**Count on it.**

# Parts Catalog

## Eductor Kit

### Multi-Pro® 5800 Turf Sprayer

Model No. 41612—Serial No. 314000001 and Up



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# List of Abbreviations

**AR:** as required

**ASM:** assembly

**BBC:** blade brake control

**BHTF:** button head thread forming

**CARR:** carriage

**CCW:** counter clockwise

**CW:** clockwise

**DEG:** degrees

**DPA:** Dual Point Adjustment

**ECM:** electronic control module

**EXT:** external

**FH:** flat head

**GA:** gauge

**HD:** heavy-duty

**HF:** hex flange

**HH:** hex head

**HHF:** hex head flange

**HHFTF:** hex head flange thread forming

**HJ:** hex jam

**HLH:** hex lag head

**HOC:** height-of-cut

**HSBH:** hex socket button head

**HSFH:** hex socket flat head

**HSH:** hex socket head

**HWH:** hex washer head

**HWHTF:** hex washer head thread forming

**HYD:** hydraulic

**LH:** left hand

**LP:** Liquefied Petroleum Gas

**LPG:** Liquefied Petroleum Gas

**NI:** nylon insert

**NPTF:** national pipe thread fine

**PFH:** phillips flat head

**PPH:** phillips pan head

**PPHTF:** phillips pan head thread forming

**PRH:** phillips round head

**PTH:** phillips truss head

**PTO:** power-take-off

**RH:** right hand

**ROPS:** roll-over protection system

**RRB:** rear roller brush

**SFH:** slotted fillister head

**SHH:** slotted hex head

**SHWH:** slotted hex washer head

**SPH:** slotted pan head

**SQH:** square head

**SRH:** slotted round head

**STD:** standard

**TAP:** self tapping


**TTH:** torx truss head

# Contents

Eductor Kit..... 4

Eductor Assembly No. 127-2949..... 6

# Eductor Kit

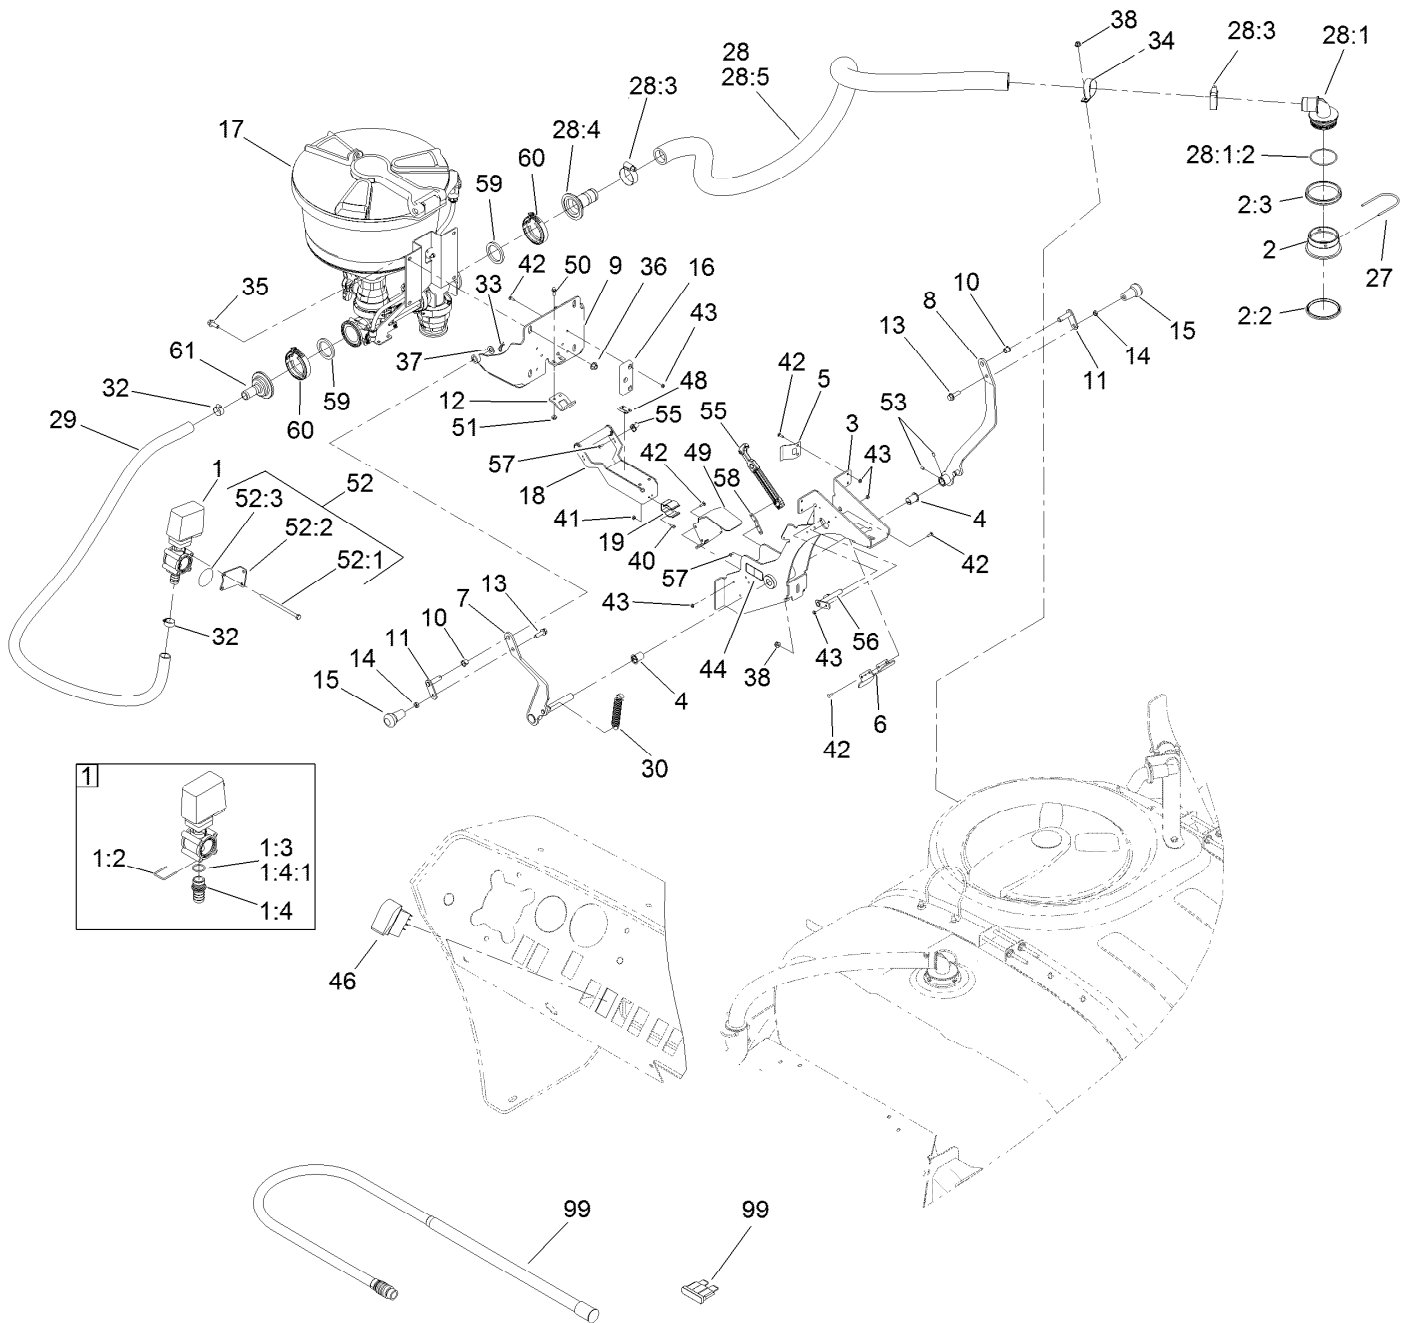

## Eductor Kit (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|------------------------|
| 1           | 119-0488           | 1           | Valve ASM          | 30          | 120-0722           | 2           | Spring-Extension       |
| 1:2         | 119-4862           | 1           | Fork               | 32          | 2412-34            | 2           | Clamp-Hose             |
| 1:3         | 119-4868           | 1           | O-Ring             | 33          | 3290-467           | 2           | Pin-Hair               |
| 1:4         | 117-7992           | 1           | Hosebarb           | 34          | 2412-96            | 1           | Clamp-R                |
| 1:4:1       | 119-4868           | 1           | O-Ring             | 35          | 3234-11            | 4           | Screw-HHF              |
| 2           | 117-7851           | 1           | Bulkhead ASM       | 36          | 32128-43           | 4           | Nut-Flange             |
| 2:2         | 100-8646           | 1           | Gasket-Bulkhead    | 37          | 106-9888           | 2           | Washer-Flat            |
| 2:3         | 100-8647           | 1           | Nut-Bulkhead       | 38          | 104-8300           | 2           | Nut-Flange, NI         |
| 3           | 120-8643-03        | 1           | Eductor-Mount      | 40          | 3250-12            | 2           | Screw-PPH              |
| 4           | 100-8541           | 2           | Bushing-A Arm      | 41          | 3296-2             | 2           | Nut-Lock, NI           |
| 5           | 119-4951           | 2           | Tab-Spring         | 42          | 1-807533           | 19          | Bolt-CARR              |
| 6           | 119-4962           | 1           | Plate-Strike       | 43          | 3296-12            | 21          | Nut-Lock, NI           |
| 7           | 119-4907-03        | 1           | Arm-Pivot, LH      | 44          | 93-6674            | 2           | Decal-Warning          |
| 8           | 119-4908-03        | 1           | Arm-Pivot, RH      | 46          | 100-8490           | 1           | Switch-Rocker          |
| 9           | 119-4912-03        | 1           | Plate-Pivot        | 48          | 119-4988           | 1           | Decal-Lock             |
| 10          | 256-257            | 2           | Bushing-Nyliner    | 49          | 125-5891           | 1           | Plate-Guide            |
| 11          | 120-0718           | 2           | Pivot-Pin          | 50          | 3234-4             | 2           | Screw-HHF              |
| 12          | 119-4928           | 1           | Bracket-Latch      | 51          | 32128-33           | 2           | Nut-HF                 |
| 13          | 3234-24            | 2           | Screw-HHF          | 52          |                    | 1           | Bracket Mounting Kit ● |
| 14          | 3218-3             | 2           | Nut-Jam            | 52:1        | 119-4879           | 4           | Screw-HH               |
| 15          | 99-7981            | 2           | Knob-Grip, Soft    | 52:2        | 119-4952           | 1           | Bracket-Mount          |
| 16          | 119-4963           | 2           | Pad-Wear           | 52:3        | 119-4870           | 1           | O-Ring                 |
| 17          | 127-2949           | 1           | Eductor ASM        | 53          | 3245-41            | 2           | Screw-HSH              |
| 18          | 127-5000-03        | 1           | Handle-Eductor     | 55          | 115-8215           | 1           | Draw Latch ASM         |
| 19          | 119-4937           | 1           | Clip-Spring        | 56          | 120-8640           | 1           | Latch-Rod              |
| 27          | 117-7996           | 1           | Fork               | 57          | 115-9830           | 5           | Screw-HSBH             |
| 28          |                    | 1           | Eductor Hose ASM ● | 58          | 125-5892-03        | 1           | Tab-Extension          |
| 28:1        | 117-7870           | 1           | Hosebarb ASM       | 59          | 127-5004           | 2           | Gasket                 |
| 28:1:2      | 100-6989           | 1           | O-Ring             | 60          | 127-5005           | 2           | Clamp-Worm Screw       |
| 28:3        | 41327              | 2           | Clamp-Hose         | 61          | 125-5894           | 1           | Fitting-Hose Barb      |
| 28:4        | 125-5895           | 1           | Fitting-Hose Barb  | 99          | 127-9826           | 1           | Lance Suction ASM      |
| 28:5        | 130-8283           | 1           | Hose-Eductor       | 99          | 218-578            | 1           | Fuse-Blade, 10 Amp     |
| 29          | 130-8279           | 1           | Eductor Hose ASM   |             |                    |             |                        |

● Not serviced separately



**Notes:**



**Count on it.**