



MODEL NO. 38170-1000001 & UP
MODEL NO. 38175-1000001 & UP

OPERATOR'S MANUAL

CCR POWERLITE™



SAFETY INSTRUCTIONS

To assure maximum safety, best performance, and to gain knowledge of the product, it is essential that you or any other operator of the snowthrower read and understand the contents of this manual before the motor is ever started. Pay particular attention to the safety alert symbol which means CAUTION, WARNING OR DANGER — “personal safety instruction.” Read and understand the instruction because it has to do with safety. Failure to comply with instruction may result in personal injury.

This snowthrower is designed and tested to offer safe and effective service, provided it is operated in strict accordance with the following Safety Instructions. Failure to comply with the following instructions **MAY RESULT IN PERSONAL INJURY.**

BEFORE OPERATING

1. Read and understand the contents of this manual carefully before operating the snowthrower. Be thoroughly familiar with all controls and proper use of the equipment. Know how to stop the snowthrower and disengage the controls quickly.
2. Never allow children to operate the snowthrower. Adults should operate the snowthrower only after reading this manual.
3. Keep everyone, especially children and pets, away from the snowthrower and area of operation.
4. Inspect area thoroughly where snowthrower will be used. Remove doormats, sleds, boards, sticks, wire, and any other foreign objects which might be picked up and thrown by the snowthrower.
5. Keep all shields and safety devices in place. If a shield, safety device, or decal is illegible or damaged, repair or replace it before beginning operation.

Also, tighten any loose nuts, bolts or screws.

6. Wear adequate winter clothing and rubber boots that will ensure proper footing on slippery surfaces. Do not wear loose fitting clothing that could possibly get caught in moving parts.
7. Always wear safety glasses or eye shields during operation or while performing an adjustment or repair to protect eyes from foreign objects that may be thrown from the machine.
8. Because fuel is highly flammable, handle it carefully.
 - A. Use an approved fuel container.
 - B. Fill fuel tank outdoors with extreme care, not indoors.
 - C. **NEVER ADD FUEL TO AN ENGINE THAT IS RUNNING OR HOT.**
 - D. Replace gas cap securely on fuel container and gas tank, and wipe up any spilled gasoline before starting engine.
9. Allow engine to warm up outdoors before operating.
10. Do not run engine indoors, except when starting the engine and for transporting the snowthrower in or out of the building. Open the outside doors; exhaust fumes are dangerous.



SAFETY INSTRUCTIONS

WHILE OPERATING

11. Use only the extension cord provided with the CCR POWERLITE Electric Start Model. Do not plug the extension cord into outlet while standing in water or when hands are wet. Do not use cord if gasoline has been spilled. If extension cord is damaged, replace immediately.
12. Never direct discharge toward or operate snowthrower near bystanders, glass enclosures, automobiles and trucks, window wells, or a drop-off. Never allow anyone in front of snowthrower.
13. Operate the snowthrower only when there is good visibility or light.
14. Always maintain secure footing and balance and keep a firm grip on the handle. Walk; never run. Exercise caution to avoid slipping or falling.
15. Be attentive when using the snowthrower, and stay alert for holes in the terrain and other hidden hazards.
16. **STAY AWAY FROM DISCHARGE OPENING WHILE OPERATING THE SNOWTHROWER. WHEN THE ENGINE IS RUNNING, THE DISCHARGE ROTOR IS TURNING.** Keep face, hands, feet, and any other part of your body or clothing away from concealed, moving or rotating parts.
17. Never clear snow off steep slopes or across the face of slopes. Exercise extreme caution when changing direction on slopes.
18. **DO NOT USE SNOWTHROWER ON A ROOF.**
19. Do not overload the snowthrower by clearing snow at too fast a rate.
20. Never operate the machine at high transport speeds on slippery surfaces.
21. Use extreme caution when crossing or operating snowthrower on walks or roads. It is not recommended that snowthrower be used on gravel or crushed rock drives. Stay alert for hidden hazards or traffic. Refer to Operating Instructions, page 8, item 5 for correct operating procedure.
22. If a foreign object is hit or snowthrower vibrates abnormally, stop engine by turning key to OFF, disconnect spark plug wire, disconnect the cord on electric start units, and wait for all moving parts to stop. Check snowthrower immediately for possible damage, an obstruction or loose parts. Vibration is generally a sign of trouble. Repair any damage before operating snowthrower again.
23. Before adjusting, cleaning, repairing or inspecting the snowthrower, or before unclogging the discharge chute or impeller housing, stop engine by turning key to OFF and wait for all moving parts to stop. Do not make any adjustments while engine is running. Disconnect the spark plug wire and keep the wire away from plug to prevent accidental starting.
24. **WHENEVER YOU LEAVE THE OPERATING POSITION, STOP ENGINE BY TURNING KEY TO OFF. REMOVE KEY FROM SWITCH IF UNIT WILL BE UNATTENDED.**
25. Let snowthrower run for a few minutes after clearing snow so moving parts do not freeze.
26. Remove key from switch when snowthrower is transported or not in use.
27. Always drain gasoline from snowthrower fuel tank before transporting in a closed car trunk or vehicle; refer to Draining Gasoline, page 9. Gasoline and its fumes are highly flammable, explosive, and dangerous if inhaled.

MAINTAINING SNOWTHROWER

28. **REMOVE KEY FROM SWITCH** when storing snowthrower. Store key in a memorable place.

SAFETY INSTRUCTIONS

29. Never store snowthrower with fuel in fuel tank inside a building where ignition sources such as an open flame, sparks, hot water and space heaters, and clothes dryers are present. Allow engine to cool before storing. Never store snowthrower in house (living area) or basement because gasoline and fumes are highly flammable, explosive, and dangerous if inhaled.

30. Always refer to Operator's Manual for important details if snowthrower is to be stored for an extended period.

31. Perform only those maintenance instructions described in this manual. Remove key from switch before per-

forming maintenance procedures to prevent the possibility of accidental starting. If major repairs are ever needed, contact your local Authorized TORO Service Dealer for assistance.

32. Keep snowthrower in safe operating condition by keeping nuts, bolts, and screws tight. Check all fasteners frequently to assure they are tight.

33. To assure optimum performance and safety, purchase genuine TORO replacement parts and accessories to keep your TORO all TORO. **NEVER USE "WILL FIT" REPLACEMENT PARTS AND ACCESSORIES.** The TORO logo assures genuineness.

SAFETY SYMBOL GLOSSARY

Safety decals and instructional decals are easily visible to the operator and are located near any area of potential danger. Replace any decal that is damaged or lost.



Whenever you leave the operating position, stop engine by turning key to OFF.



Avoid injury from rotating auger by keeping hands, feet, and clothing away.



Read and understand operator's manual



Shut off engine before unclogging discharge chute



Choke on



Recoil starter



Ignition off



Ignition on



Primer pump



110 volt starter



32:1 ratio unleaded gasoline to TORO 2-cycle oil

TABLE OF CONTENTS

	Page		Page
Assembly Instructions	4	Replacing Spark Plug	10
Before Operating	5	Replacing Rotor Blades	11
Starting/Stopping Instructions	6	Adjusting Carburetor	12
Operating Instructions	6	Storing Snowthrower	13
Maintenance	9	Toro Service Support	13
Draining Gasoline	9	Product Identification	13
Replacing Scraper	9	Maintenance Record	14
Replacing Drive Belt	9	The Toro Promise	

ASSEMBLY INSTRUCTIONS

Note: Determine left and right sides of snowthrower by standing in the normal operating position.

INSTALL DISCHARGE CHUTE (Fig. 1)

1. Position discharge chute in the completely upright position on the chute handle. Align holes in discharge chute and chute handle. Install knob snugly onto screw at rear of discharge chute.

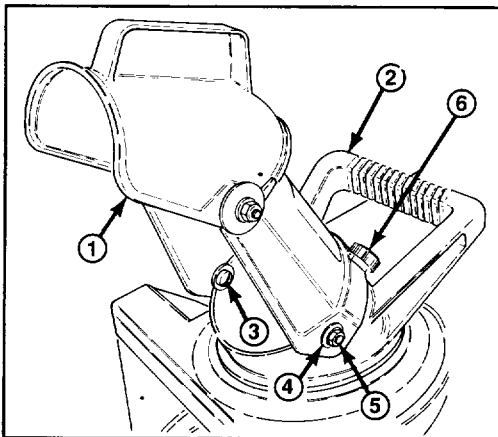


Figure 1

- | | |
|--------------------|------------|
| 1. Discharge chute | 4. Washer |
| 2. Chute handle | 5. Locknut |
| 3. Carriage bolt | 6. Knob |

2. Secure discharge chute sides to chute handle with (2) carriage bolts, (2) washers, and (2) nuts. Position washer and nut on outside of discharge chute. Tighten fasteners securely, but **DO NOT OVERTIGHTEN**. Excessive

force should not be necessary to fold discharge chute down for storage.

INSTALL HANDLE (Fig. 2)

1. Position ends of upper handle on inside of lower handles and align holes. Secure upper handle to lower handles using oval head bolts, curved washers, and knobs. Position knobs and curved washers on inside of handle and tighten securely.

Note: Make sure the oval head bolts and curved washers are aligned correctly as shown in Figure 2.

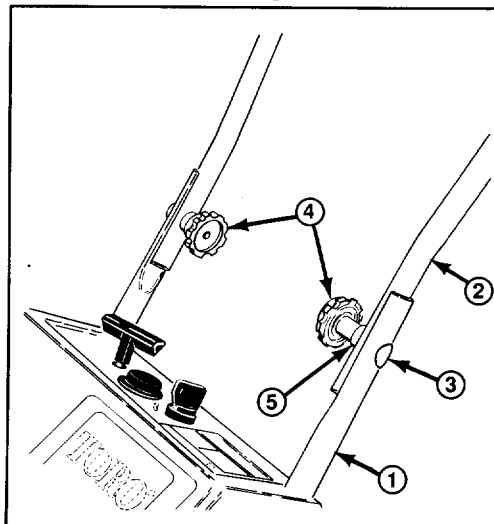


Figure 2

- | | |
|-------------------|-------------------|
| 1. Lower handle | 3. Oval head bolt |
| 2. Upper handle | 4. Knob |
| 5. Curved washers | |

BEFORE OPERATING



WARNING

DANGER: Gasoline is extremely flammable and explosive under certain conditions. Do not smoke when handling fuel and keep fuel far away from open flames and sparks. Never buy more than a 30 day supply of gasoline. Store it in an approved container. Keep gasoline out of the reach of children.

Refuel outdoors and only when engine is cold. Do not fill tank full. Fill tank to just below bottom of filler neck, not into filler neck. This space is for expansion of fuel. Use funnel or spout to prevent spilling. Wipe up any spilled gas. Assure area is dry before starting engine.

MIX GASOLINE AND OIL (Fig. 3)

1. **APPROVED OIL**—For simplicity and best engine performance, mix the contents of one 8-ounce bottle of Toro 32:1 Two-Cycle Oil with two gallons of fresh, unleaded regular gasoline. You can also use Toro “Easy Mix” Two-Cycle Oil (3.2 ounce bottle mixed one per gallon of gasoline 40:1 ratio) in this Toro two-cycle engine. Leaded regular gasoline may be used if unleaded regular is not available.

Toro Two-Cycle Oil is specially formulated to provide superior lubrication, make starting easy, and prolong engine life. If Toro Two-Cycle Oil is not available, mix two gallons of gasoline and 8 ounces of another high grade two-cycle oil that has the NMMA or BIA-TCW certification printed on the label.

NEVER USE AUTOMOTIVE OIL (i.e. SAE 30, 10W30 etc.), **TWO-CYCLE OIL THAT IS NOT CERTIFIED NMMA/BIA-TCW, OR THE WRONG MIX RATIO BECAUSE THE ENGINE CAN BE DAMAGED, AND IT WOULD NOT BE COVERED BY THE TORO WARRANTY.**

2. **Mixing Gasoline and Oil**—Pour correct amount of two cycle oil into an approved gasoline container and add a half gallon of gasoline. Install cap on gasoline container and shake the container to mix oil and gas thoroughly.

Remove cap and add remaining amount of gasoline.

Toro also recommends that Toro Stabilizer/Conditioner be used regularly in all Toro gasoline powered products during operation and storage seasons. Toro Stabilizer/Conditioner cleans the engine during operation and prevents gum-like varnish deposits from forming in the engine during periods of storage.

IMPORTANT: NEVER USE METHANOL, GASOLINE CONTAINING METHANOL, GASOHOL CONTAINING MORE THAN 10% ETHANOL, PREMIUM GASOLINE, OR WHITE GAS BECAUSE ENGINE FUEL SYSTEM DAMAGE COULD RESULT.

DO NOT USE FUEL ADDITIVES OTHER THAN THOSE MANUFACTURED FOR FUEL STABILIZATION DURING STORAGE SUCH AS TORO'S STABILIZER/CONDITIONER OR A SIMILAR PRODUCT. TORO'S STABILIZER/CONDITIONER IS A PETROLEUM DISTILLATE BASED CONDITIONER/STABILIZER. TORO DOES NOT RECOMMEND STABILIZERS WITH AN ALCOHOL BASE SUCH AS ETHANOL, METHANOL OR ISOPROPYL. ADDITIVES SHOULD NOT BE USED TO TRY TO ENHANCE THE POWER OR PERFORMANCE OF MACHINE.

NOTE: Do not mix gasoline and oil in the product fuel tank. Oil that is at room temperature mixes easier and more thoroughly than cold oil.

BEFORE OPERATING

32:1 GAS/OIL Mixing Chart

U.S. GALLON	
Gasoline	Oil
1 gallon	4 oz.
1.5 gallon	6 oz.
2 gallon	8 oz.

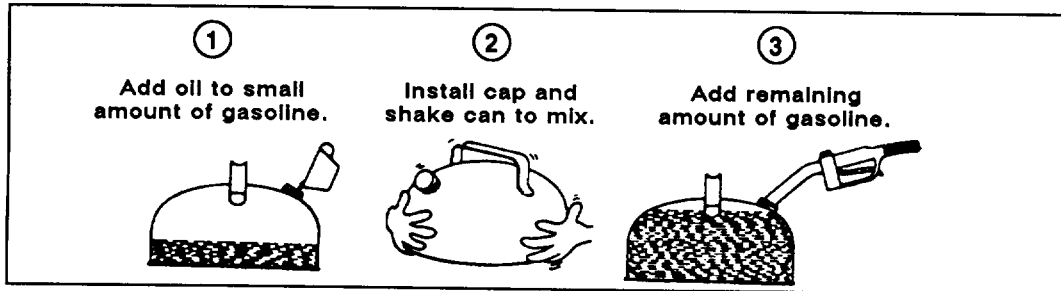


Figure 3

STARTING/STOPPING INSTRUCTIONS

STARTING/STOPPING ENGINE (Fig. 4)

1. CONTROLS—Key switch, primer, electric start button*, and recoil starter are located on the control panel. The choke lever is just below the lower left corner of the control panel.

2. Turn key to ON and move choke lever to ON (far right position).

3. Cover hole in center of primer with thumb and push primer twice slowly (1 to 2 seconds per prime) for temperatures above 0°F (-18°C). Push primer slowly three times for temperatures below 0°F (-18°C). **DO NOT PRIME IF THE ENGINE HAS BEEN RUNNING AND IS HOT**

Note: When starting engine for first time or after running out of fuel, more priming may be required to start engine.

4a. RECOIL STARTING—Hold snowthrower with one hand and pull recoil starter vigorously with other hand. If engine does not start after three pulls, push primer once more and pull recoil starter vigorously again.

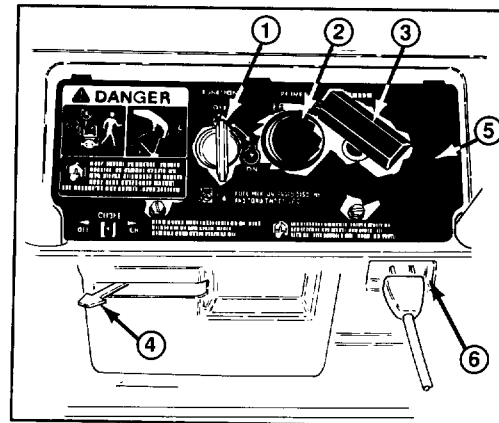


Figure 4

- 1. Key switch
- 2. Primer
- 3. Recoil start
- 4. Choke

- 5. Elec. start button*
- 6. Cord connection*

*ELEC. START MODEL

4b. ELECTRIC STARTING—Connect extension cord to snowthrower and standard household power outlet. Push starter button. When engine starts, disconnect extension cord from snowthrower and outlet.

STARTING/STOPPING INSTRUCTIONS

IMPORTANT: Excessive running of the electric starter could damage the starter due to overheating. If you are having difficulty starting the engine, **ONLY TRY THIS STARTING PROCEDURE TWICE.** Run the electric starter no more than 10 times at intervals of 5 seconds ON, 5 seconds OFF. If engine does not start after this first attempt, wait more than 40 minutes to allow starter to cool before trying to run starter again. Before repeating engine starting procedure, check that ignition key switch is ON, and make

sure there is fresh fuel in fuel tank. If engine still will not start after a second attempt, bring the snowthrower to an Authorized Toro Service Dealer for servicing.

5. When engine starts, move choke lever to middle position after a few seconds of running time. After engine has warmed up, move choke lever to OFF position.

6. TO STOP ENGINE—Turn key to OFF, and wait for all moving parts to stop before leaving operator's position.

OPERATING INSTRUCTIONS



WARNING

When engine is running, discharge rotor is turning. Objects thrown from discharge chute can cause personal injury. Keep yourself and other people away from discharge opening when engine is running. Before leaving operating position, stop engine by turning key to OFF.

OPERATING TIPS (Fig. 5)

1. **ADJUSTING DISCHARGE CHUTE**—Move the chute handle left and right to adjust the direction of the snow stream. The chute deflector handle on top of the discharge chute controls the height of the snow stream. Do not overtighten the chute deflector mounting nuts so excessive force is required to adjust the deflector.

2. **SELF PROPELLING ACTION**—The snowthrower clears down to the ground and propels itself forward when tilted slightly forward so rotor blades strike the ground. However, depth and height of snow affects forward speed. Always overlap each swath and discharge downwind when possible.

NOTE: If snowthrower is tilted too far forward, it will self-propel at a rapid

rate and snow will spray back at the feet of the operator. Reduce lift on handle slightly to self-propel at a moderate rate.

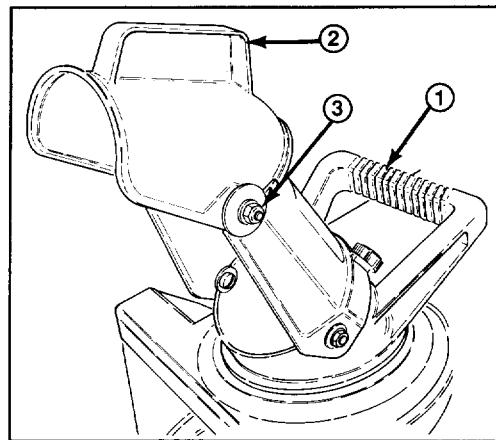


Figure 5

- 1. Chute handle
- 2. Chute deflector handle
- 3. Deflector mounting nuts

3. Keep the area to be cleared free of stones, toys, or other foreign objects which may be picked up and thrown by the rotor blades. Such items could be covered by snowfall and, therefore, unnoticed until struck by the rotor blades. Always be sure to keep all people and pets away from area of operation to prevent possibility of being hit by thrown objects.

OPERATING INSTRUCTIONS

4. ON STEPS OR CUTTING THROUGH DRIFTS—It is recommended that operator stand on **right** side of snowthrower and hold it by upper handle and chute handle (standing on left side may expose operator to engine exhaust). Use a side-to-side sweeping motion to clear snow.

5. It is not recommended that snowthrower be used on gravel or crushed rock driveways or walks. Should you find it necessary to clear snow from crushed rock or gravel, push down on handle to raise rotor blades clear of loose material that could be thrown by the blades and push unit forward.

6. In some snow and cold weather conditions, some controls and moving parts may freeze solid. **DO NOT USE EXCESSIVE FORCE WHEN TRYING TO OPERATE FROZEN CONTROLS.** When any control or part becomes hard to operate, start the engine and let it run for a few minutes. If control or part still will not move with moderate force, stop engine, remove ice or thaw out snowthrower.

**WARNING**

Never warm up snowthrower with fuel in tank inside a building where open flame or sparks are present. Never store snowthrower in house (living area) or basement because gasoline and fumes are highly flammable, explosive, and dangerous if inhaled.

7. AFTER CLEARING SNOW—Let engine run for a few minutes so ice does not freeze moving parts solid. After engine is shut off, wipe ice and snow off entire unit.

IMPORTANT: STORE SNOWTHROWER IN OPERATING POSITION ON ITS WHEELS OR HANG ON A WALL BY

ITS HANDLE. TIPPING OR STORING UNIT FORWARD ONTO FRONT HOUSING MAY CAUSE HARD STARTING.

FOLDING SNOWTHROWER (Fig. 6)

The CCR POWERLITE folds compactly for easy transporting or storage. To fold up snowthrower, follow these instructions:

**WARNING**

Always remove gasoline from snowthrower fuel tank before transporting in a closed car trunk or vehicle; refer to **Draining Gasoline**, page 9. Gasoline and its fumes are highly flammable, explosive, and dangerous if inhaled.

1. Remove knob from rear of discharge chute.
2. Fold chute down. Reinstall knob on bolt at rear of discharge chute handle to prevent losing it.

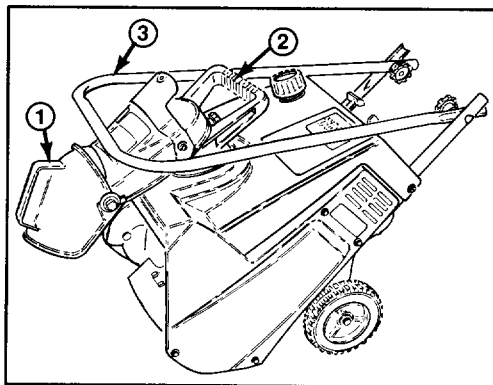


Figure 6

1. Discharge chute
2. Discharge chute handle
3. Handle

3. Loosen knobs on handle and fold handle down over unit.
4. Carry unit by discharge chute handle.

MAINTENANCE

GENERAL MAINTENANCE

Keep snowthrower in safe operating condition by cleaning the unit. Check and tighten any loose nuts, bolts, and screws. The scraper, drive belt, rotor blades, and spark plug should be checked once a year.

DRAINING GASOLINE

1. Stop engine. Remove key from switch.
2. Remove cap from fuel tank and use a pump type syphon to drain fuel into a clean, approved fuel container.
3. After fuel is drained, start engine and let it run until all fuel is consumed and engine stops. Repeat the starting procedure two more times to assure all fuel is removed from the engine.

Note: This is the only procedure recommended for draining fuel because it allows all fuel to be removed from fuel tank.

REPLACING SCRAPER (Figs. 7 & 8)

Before each season, inspect scraper for wear. When wear indicator groove is worn away (Fig. 7), replace scraper to prevent damage to underside of snowthrower.

1. Stop engine. Remove key from switch.
2. Tip snowthrower forward onto front housing.
3. Remove (3) screws holding scraper in place (Fig. 8). Remove scraper.
4. Secure new scraper to housing with (3) screws.

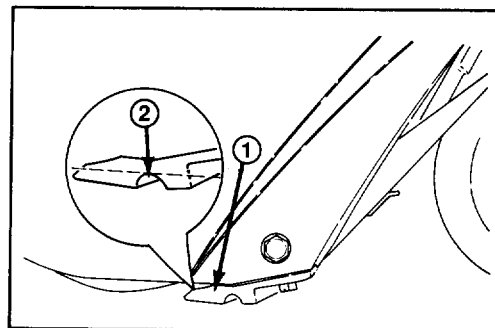


Figure 7

1. Scraper 2. Wear indicator groove

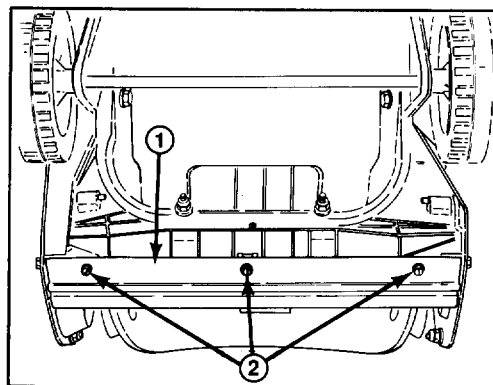


Figure 8

1. Scraper 2. Screws

REPLACING DRIVE BELT (Figs. 9, 10 & 11)

After extended use, drive belt may wear and require replacement. If drive belt continues to slip under a heavy load or the rotor does not turn, check to see if belt is severely worn.

1. Stop engine. Remove key from switch.
2. Remove (3) self tapping screws, (1) capscrew, (1) washer, and (1) nut securing left side cover to snowthrower frame (Fig. 9). Remove cover.

MAINTENANCE

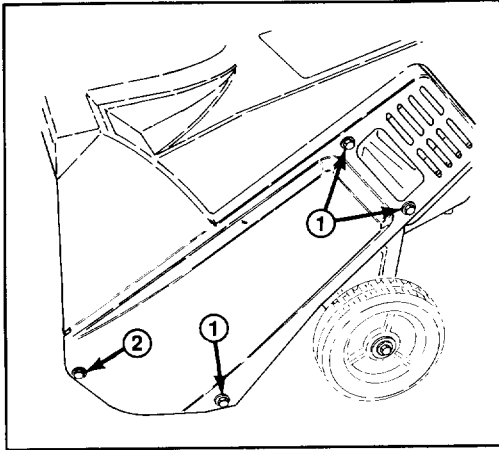


Figure 9

1. Self tapping screws 2. Capscrew, nut, washer

3. REMOVING BELT (Fig. 10)—Pull idler pulley up slightly while pulling out on belt. Allow pulley to gradually release when it can move past the belt. **DO NOT LET IDLER PULLEY SNAP.** Rotate rotor with left hand and work belt off rotor pulley. Belt slides easily off drive pulley.

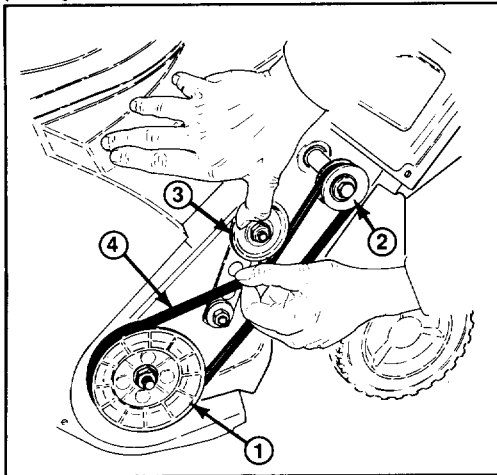


Figure 10

1. Rotor pulley 3. Idler pulley
2. Drive pulley 4. Drive belt
- 4. INSTALLING BELT (Fig. 11)**—Loop belt around drive pulley. Make sure long end of idler spring is hooked in housing notch and round end of spring

is hooked on pin on back of idler pulley. Lift up idler pulley arm assembly, squeeze belt together, and route belt under idler pulley. While holding belt with right hand, rotate rotor with left hand and slip belt onto rotor pulley.

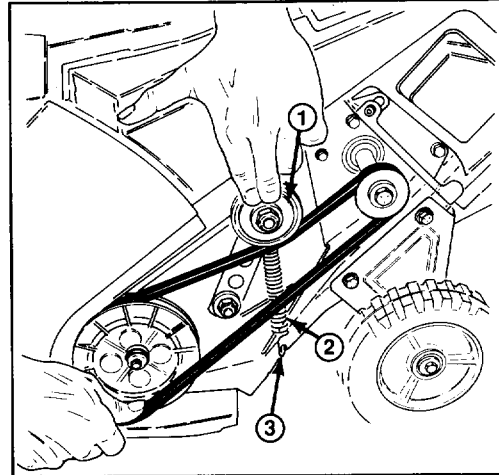


Figure 11

1. Idler pulley 3. Notch
2. Idler spring

5. Reinstall left side cover. Tighten fasteners securely, but **DO NOT OVERTIGHTEN.**

REPLACING SPARK PLUG

(Figs. 12, 13 & 14)

Before each snow season, check the spark plug. If electrodes in center of plug are dark or have deteriorated, install a new plug. Use a Champion CJ8Y spark plug and set gap at .030" (.76 mm).

1. REMOVE CONTROL PANEL

(Fig. 12)—Remove (2) screws securing control panel to housing. Remove ignition key and lift off panel, allowing it to hang on recoil rope.

2. REMOVE SPARK PLUG (Fig. 13)

—Pull wire off spark plug and remove plug.

Examine the plug and replace if cracked, fouled, or dirty. **DO NOT SANDBLAST, SCRAPE, OR CLEAN SPARK PLUG BECAUSE DIRT MAY RELEASE AND FALL INTO CYLINDER CAUSING ENGINE DAMAGE.**

MAINTENANCE

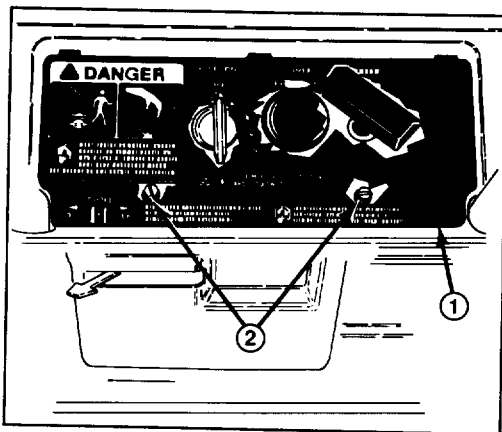


Figure 12

1. Control panel 2. Screws

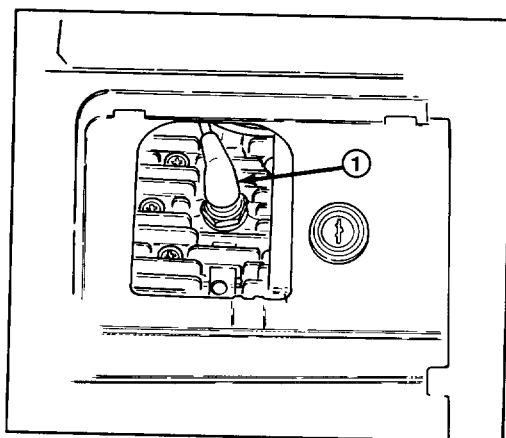


Figure 13

1. Spark plug wire

3. INSTALL SPARK PLUG—Set air gap (Fig. 14) between electrodes at .030" (.76 mm). Install plug and tighten to 15 ft-lb (20.4 N-m). If torque wrench is not used, tighten plug firmly with wrench by hand; **DO NOT OVERTIGHTEN**. Push wire onto spark plug and reinstall control panel.

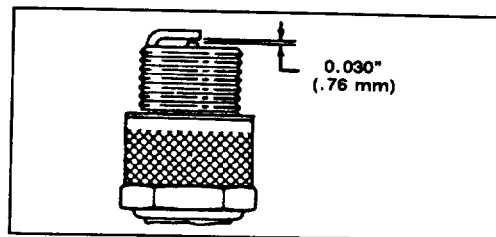


Figure 14

REPLACING ROTOR BLADES (Fig. 15 & 16)

Before each snow season, inspect rotor blades for wear. When blade edge has worn to the wear indicator hole (Fig. 15), the blades must be replaced to assure proper performance and prevent damage to underside of snowthrower. Always replace both blades at the same time.

Note: Whenever rotor blades are replaced, scraper should also be replaced to assure proper snowthrower operation and performance.

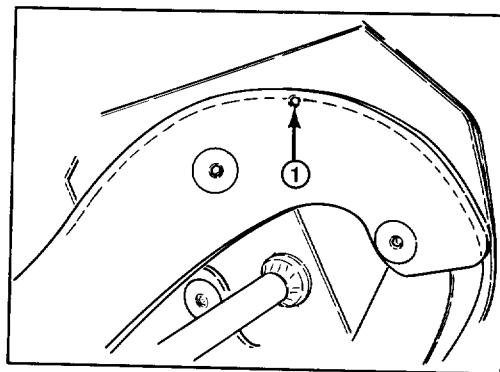


Figure 15

1. Wear Indicator hole

1. REMOVING BLADE (Fig. 16)—Remove (4) torx screws (Bit No. T27), (2) capscrews, and (6) locknuts securing blade to rotor shaft assembly.

MAINTENANCE

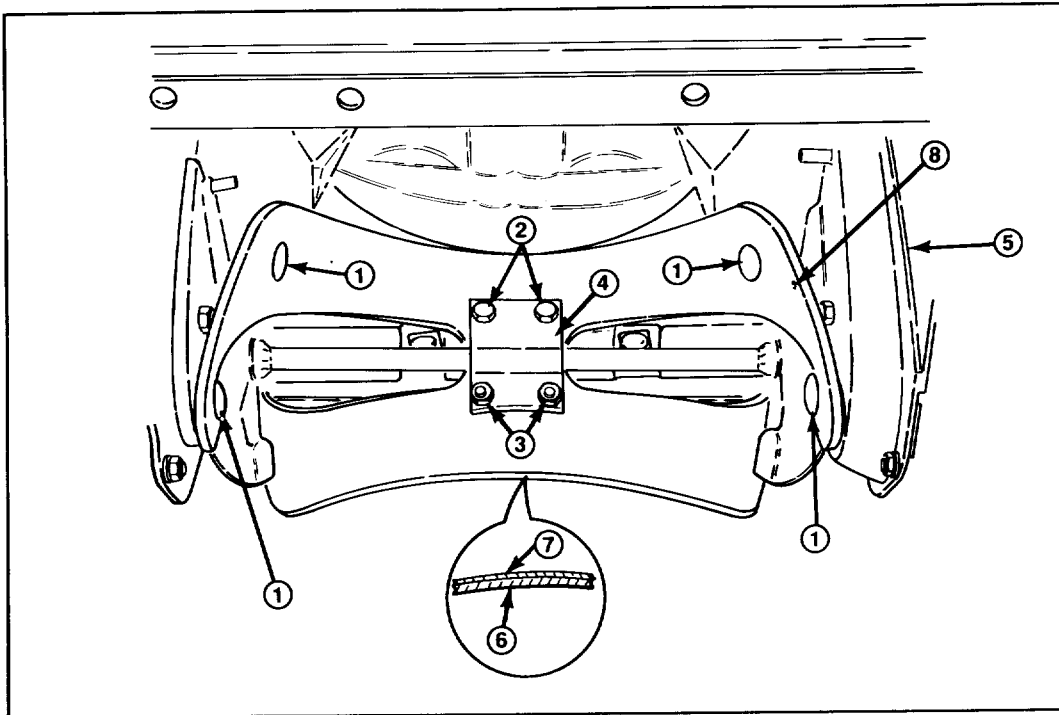


Figure 16

- 1. Torx screw
- 2. Capscrew
- 3. Locknut

- 4. Blade support
- 5. Drive belt cover

- 6. Thick side
- 7. Thin side
- 8. Wear indicator hole

2. Slide the blade out from between the blade support (Fig. 16).

3. **INSTALLING NEW BLADE**—The rotor blades are made of laminated rubber. Examine the edge of a blade to see the difference in layer thicknesses (Fig. 16).

Both blades must be installed with the thick side facing down, and the wear indicator holes must be on the drive belt cover side (Fig. 16). If one blade is installed with the thicker layer facing up and the other blade installed with the thicker layer facing down, the blades will be unbalanced, causing the snowthrower to "hop" or "bounce."

4. Insert new blade between blade supports. Secure center of blade to blade supports with (2) capscrews and

(2) locknuts. Position screw heads on thick (bottom) side of blade. Curve blade, and secure it with remaining (4) torx screws and locknuts (position screw heads on thick side of blade). Tighten all screws and nuts securely.

5. Repeat steps 1–4 to replace other blade.

ADJUSTING CARBURETOR

The carburetor has been factory set, and no adjustment is required. However, when operating snowthrower at altitudes of 5000 feet above sea level or higher, carburetor jets may have to be changed. Contact your local Authorized Toro Service Dealer for assistance.

MAINTENANCE

STORING SNOWTHROWER

1. For long term storage, either drain gasoline from fuel tank or use a fuel stabilizer before storing. To drain gasoline, refer to Draining Gasoline, page 9. After fuel is drained, start engine and let it run until all fuel is consumed and engine stops. Repeat the starting procedure two more times to assure all gas is removed from the engine. If gasoline is not drained, gum-like varnish deposits will form and cause poor engine operation or starting problems.

Fuel can be left in gas tank only if a fuel additive, such as Toro's Stabilizer/Conditioner, is added to gasoline and run through engine before storing. Toro's Stabilizer/Conditioner is a petroleum distillate based conditioner/stabilizer. Toro does not recommend stabilizers with an alcohol base, such as ethanol, methanol or isopropyl. Use fuel additive in recommended quantities as specified on container.

Under normal conditions, all fuel additives remain effective in fuel for 6–8 months.

2. CYLINDER/PISTON CARE—Slowly pull recoil starter until resistance is felt due to compression pressure, then stop. Release starter tension slowly to prevent engine from reversing due to compression pressure. This position closes both the intake and exhaust ports which prevents corrosion of the cylinder bore.

3. TIGHTEN FASTENERS AND CLEAN—Tighten screws, bolts, and nuts if necessary. Repair or replace damaged parts. Clean unit thoroughly.

4. STORE SNOWTHROWER—Cover snowthrower and store in a clean, dry place out of the reach of children. Never store snowthrower in the house or basement where ignition sources may be present such as hot water and space heaters, clothes dryers, and the like. Allow engine to cool before storing in any enclosure.

TORO SERVICE SUPPORT

If help—concerning safety, set-up, operation, maintenance, or troubleshooting—is ever needed, contact the local Authorized TORO Service Dealer or Distributor. Refer to the “Yellow Pages” for assistance. In addition to skilled service technicians, the dealer and distributor have factory approved accessories and replacement parts. Keep your TORO all TORO. Buy genuine TORO replacement parts and accessories.

PRODUCT IDENTIFICATION

A model and a serial number decal is located on right side plate. Always refer to specific numbers on the decal in correspondence or when replacement parts are needed.

MAINTENANCE RECORD

[illegible]

MAINTENANCE RECORD

[illegible]

The Toro Promise

A Two Year Limited Warranty

On All

Gasoline Powered Consumer Products

The Toro Company promises to repair these TORO Products if defective in materials or workmanship. The following time periods from the date of purchase apply:

Residential Product	2 Years
Residential Products Used Commercially	45 Days
Straight Shaft Trimmers, 3 H.P. Edger, Back Pack Blowers, 5 H.P. Lawn Vac, 5 H.P. Blower Used Commercially	90 Days

The cost of parts and labor are included, but the customer pays the transportation costs. Just return any residential product to an Authorized TORO Service Dealer or TORO Distributor.

Should you feel your TORO Product is defective and wish to rely on The Toro Promise, the following procedure is recommended:

1. Contact any Authorized TORO Service Dealer, TORO Master Service Dealer, or TORO Distributor (the Yellow Pages of your telephone directory is a good reference source).
2. He will either instruct you to return the product to him or recommend another Authorized TORO Service outlet which might be more convenient.
3. Bring the product along with your original sales slip, or other evidence of purchase date, to the service dealer.
4. The servicing dealer will inspect the unit, advise you whether the product is defective and, if so, make all repairs necessary to correct the defect without extra charge to you.

If for any reason you are dissatisfied with the dealer's analysis of the defect or the service performed, you may contact us.

Write: TORO Customer Service Dept.
8111 Lyndale Avenue South
Minneapolis, MN 55420

The above remedy of product defects through repair by an Authorized TORO Service Dealer is the purchaser's sole remedy for any defect.

THERE IS NO OTHER EXPRESS WARRANTY EXCEPT FOR THE TORO STARTING GUARANTEE ON GTS ENGINES. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY.

Some states do not allow limitations on how long implied warranty lasts, so the above limitation may not apply to you.

This Warranty applies only to parts or components which are defective and does not cover repairs necessary due to normal wear, misuse, accidents, or lack of proper maintenance. Regular, routine maintenance of the unit to keep it in proper operating condition is the responsibility of the owner.

All warranty repairs reimbursable under The Toro Promise must be performed by an Authorized Toro Service Dealer using Toro approved replacement parts.

Repairs or attempted repairs by anyone other than an Authorized TORO Service Dealer are not reimbursable under the TORO Promise. In addition, these unauthorized repair attempts may result in additional malfunctions, the correction of which is not covered by warranty.

THE TORO COMPANY IS NOT LIABLE FOR INDIRECT OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE USE OF THE PRODUCT INCLUDING ANY COST OR EXPENSE OF PROVIDING SUBSTITUTE EQUIPMENT OR SERVICE DURING PERIODS OF MALFUNCTION OR NON-USE.

Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their TORO Distributor (Dealer) to obtain guarantee policies for your country, province, or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO Importer. If all other remedies fail, you may contact us at The Toro Company.