

TORO[®]

Count on it.

Parts Catalog

Brake and Signal Light Kit **Workman[®] MD Utility Vehicle**

Model No. 120-5044

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquefied Petroleum Gas

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard


TAP: self tapping

TTH: torx truss head



Contents

Brake and Signal Light Assembly No. 120-5044	4
Rear Lamp Assembly No. 114-8428	6
Front Position Lamp Assembly No. 114-8429	7

Brake and Signal Light Assembly No. 120-5044

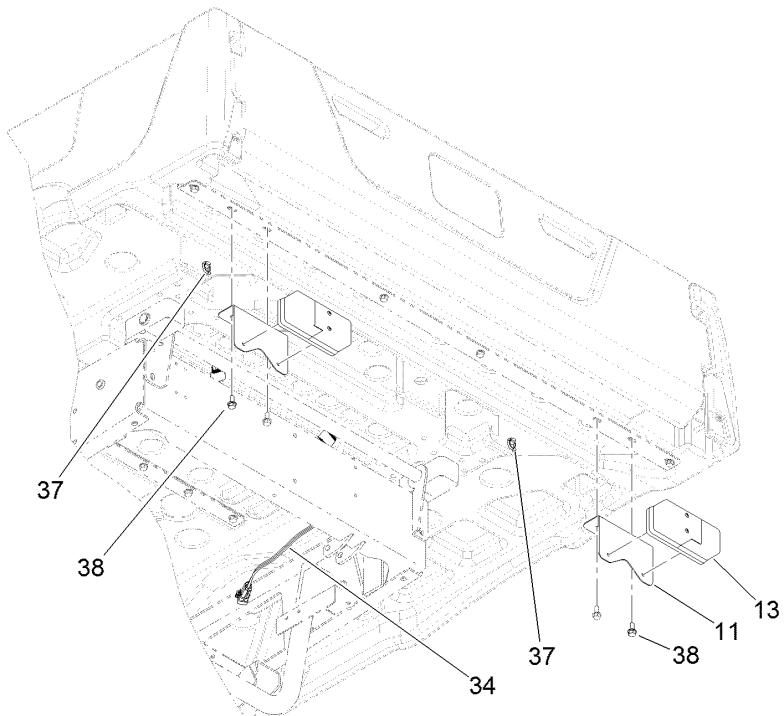


2014 AND AFTER CARGO BED CONFIGURATION

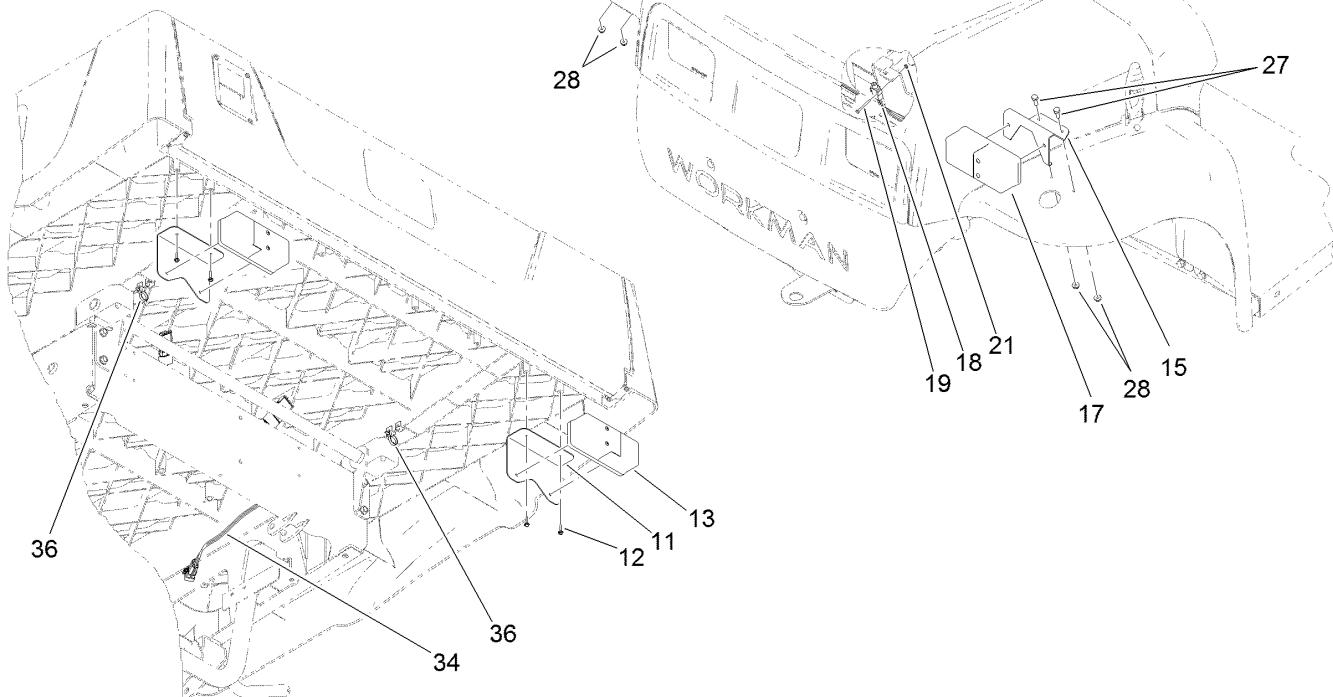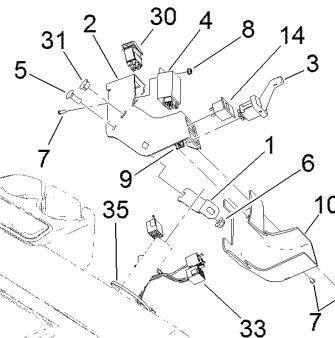

PRE 2014 CARGO BED CONFIGURATION

Brake and Signal Light Assembly No. 120-5044 (continued)


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	120-0336	1	Mount-Bracket, Column	17	114-8429	2	Front Position Lamp ASM
2	120-0363-03	1	Bracket-Column	18	95-8900	1	Switch
3	120-3953	1	Switch-Paddle, On-Off-On	19	32105-21	2	Screw-HH
4	119-9880	1	Module-Flasher	21	3296-9	2	Nut-Lock
5	3231-22	2	Screw-CARR	27	321-4	4	Screw-HH
6	104-8301	2	Nut-Flange, NI	28	104-7201	4	Nut-HF
7	115-9830	3	Screw-HSBH	30	119-7769	1	Switch-Rocker, On-None-On
8	32128-17	1	Nut-Lock, Flange	31	94-5627	1	Plug
9	701493	2	Nut-Speed	33	120-3982	1	Harness-Wire, Lights
10	120-6655	1	Cover-Column	34	119-5793	1	Harness-Wire, Tail Lights
11	119-9622-03	2	Bracket-Light, Tail	35	3290-379	1	Tie-Cable
12	98-1375	4	Screw-HWH	36	32180-082	2	Clip-Edge W/Tie, Perpendicular
13	114-8428	2	Rear Lamp ASM	37	32180-030	2	Clip-Tie
14	104-7129	1	Light-Indicator	38	3234-5	2	Screw-HHF
15	115-7662-03	1	Bracket-Light, LH				
16	115-7663-03	1	Bracket-Light, RH				

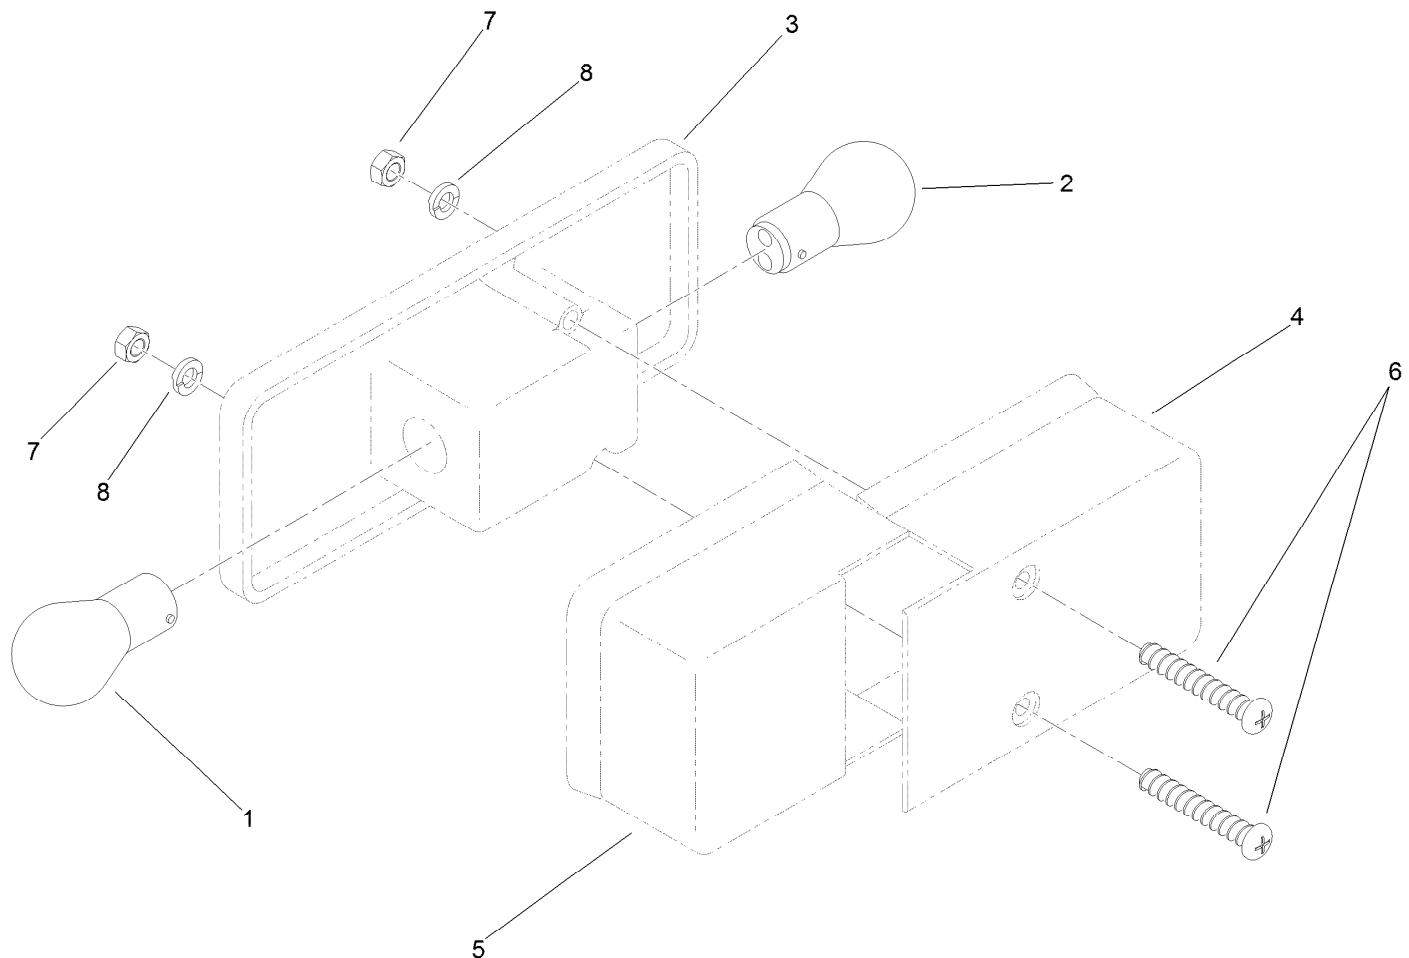

Rear Lamp Assembly No. 114-8428

Ref.	Part Number	Qty.	Description
1	115-7857	1	Bulb-7506
2	115-7858	1	Bulb-7528
3		1	Backplate-Lamp, Rear •
4		1	Lens-Lamp, Rear (Red) •
5		1	Lens-Lamp, Rear (Amber) •
6	93-3986	2	Screw-PPH
7	48-7880	2	Nut-Hex
8	43-5920	2	Washer-Lock, Spring

• Not serviced separately

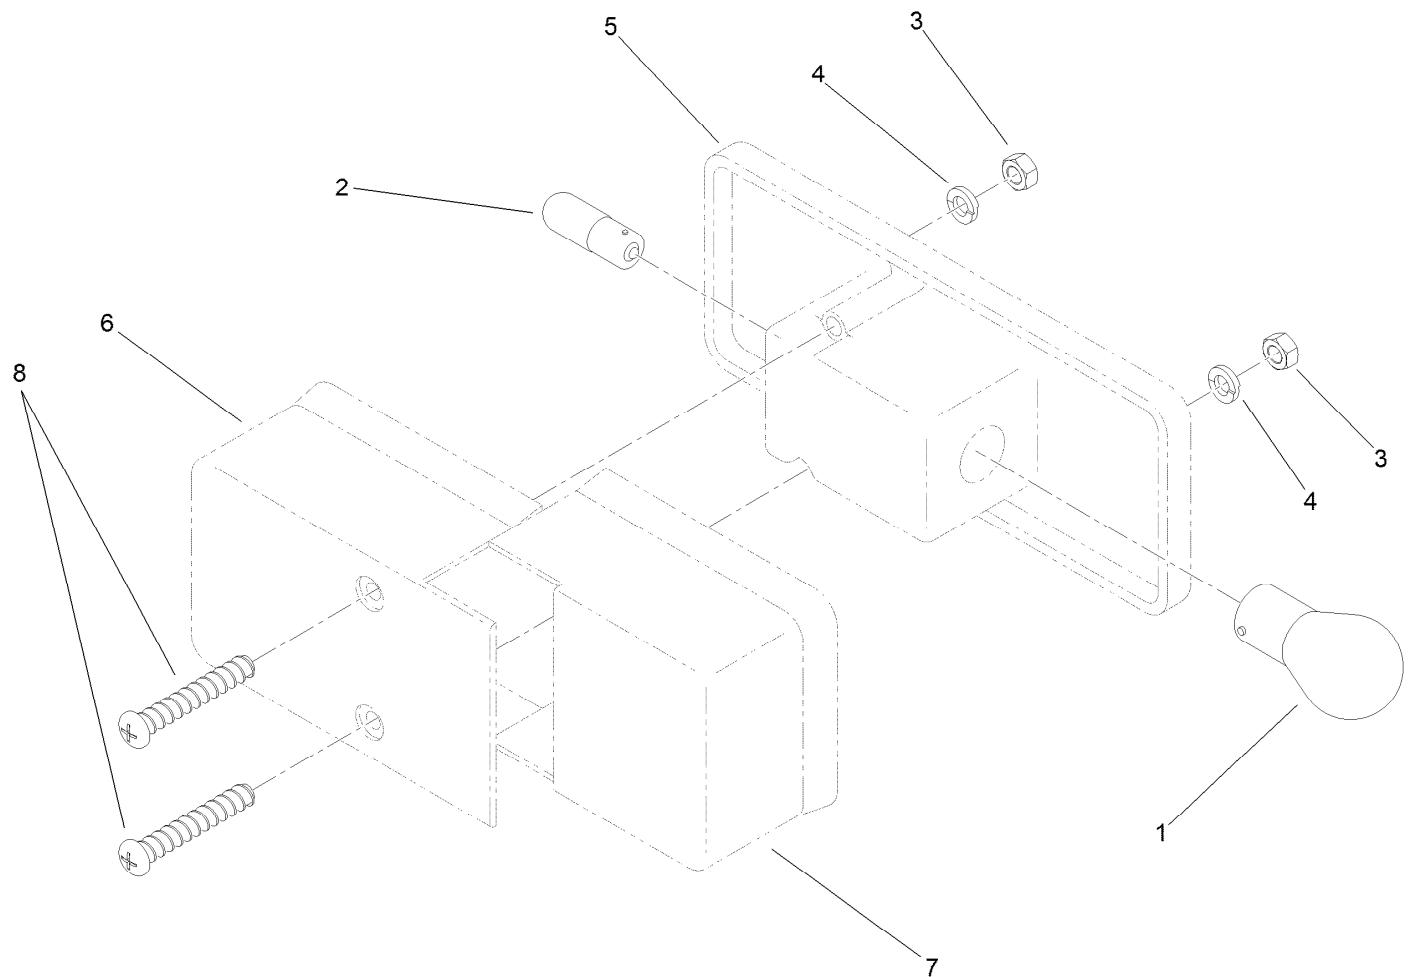

Front Position Lamp Assembly No. 114-8429

Ref.	Part Number	Qty.	Description
1	115-7857	1	Bulb-7506
2	115-7859	1	Bulb-5008
3	48-7880	2	Nut-Hex
4	43-5920	2	Washer-Lock, Spring
5		1	Backplate-Lamp, Front●
6		1	Lens-Lamp, Front (Clear)●
7		1	Lens-Lamp, Front (Amber)●
8	93-3986	2	Screw-PPH

● Not serviced separately



Count on it.