



**Count on it.**

**Parts Catalog**

**Road Light and Homologation Kit  
Workman® MD Utility Vehicle**

Model No. 120-5031



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


# List of Abbreviations

<b>AR:</b> as required	<b>HLH:</b> hex lag head	<b>PTO:</b> power-take-off
<b>ASM:</b> assembly	<b>HOC:</b> height-of-cut	<b>RH:</b> right hand
<b>BBC:</b> blade brake control	<b>HSBH:</b> hex socket button head	<b>ROPS:</b> roll-over protection system
<b>BHTF:</b> button head thread forming	<b>HSFH:</b> hex socket flat head	<b>RRB:</b> rear roller brush
<b>CARR:</b> carriage	<b>HSH:</b> hex socket head	<b>SFH:</b> slotted fillister head
<b>CCW:</b> counter clockwise	<b>HWH:</b> hex washer head	<b>SHH:</b> slotted hex head
<b>CW:</b> clockwise	<b>HWHTF:</b> hex washer head thread forming	<b>SHWH:</b> slotted hex washer head
<b>DEG:</b> degrees	<b>HYD:</b> hydraulic	<b>SPH:</b> slotted pan head
<b>DPA:</b> Dual Point Adjustment	<b>LH:</b> left hand	<b>SQH:</b> square head
<b>ECM:</b> electronic control module	<b>LP:</b> Liquefied Petroleum Gas	<b>SRH:</b> slotted round head
<b>EXT:</b> external	<b>LPG:</b> Liquefied Petroleum Gas	<b>STD:</b> standard
<b>FH:</b> flat head	<b>NI:</b> nylon insert	<b>TAP:</b> self tapping
<b>GA:</b> gauge	<b>NPTF:</b> national pipe thread fine	<b>TTH:</b> torx truss head
<b>HD:</b> heavy-duty	<b>PFH:</b> phillips flat head	
<b>HF:</b> hex flange	<b>PPH:</b> phillips pan head	
<b>HH:</b> hex head	<b>PPHTF:</b> phillips pan head thread forming	
<b>HHF:</b> hex head flange	<b>PRH:</b> phillips round head	
<b>HHFTF:</b> hex head flange thread forming	<b>PTH:</b> phillips truss head	
<b>HJ:</b> hex jam		


# Contents

Road Light and Homologation Assembly No. 120-5031 ..... 4  
Rear Lamp Assembly No. 114-8428 ..... 6  
Front Position Lamp Assembly No. 114-8429 ..... 7  
Right Hand Headlamp Assembly No. 114-8431 ..... 8

# Road Light and Homologation Assembly No. 120-5031

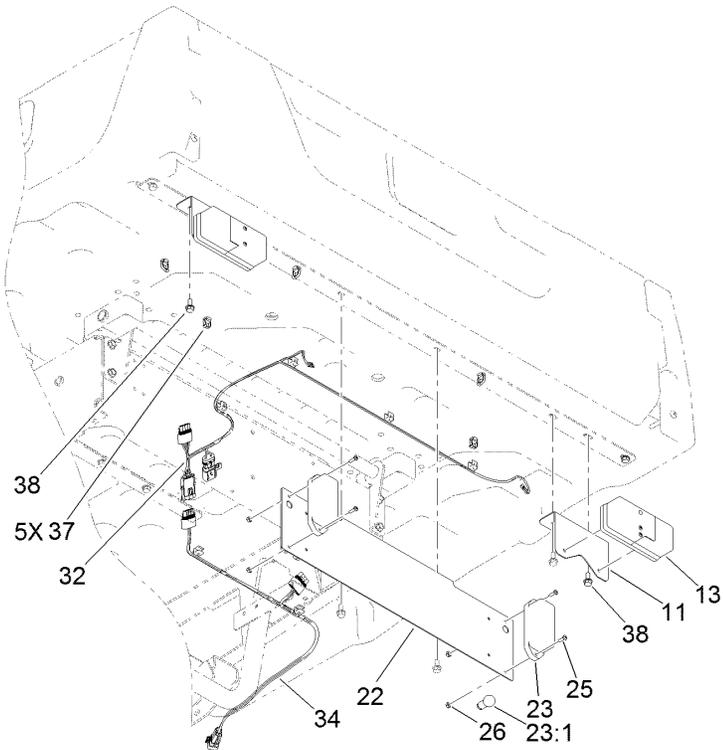


2014 AND AFTER CARGO BED CONFIGURATION

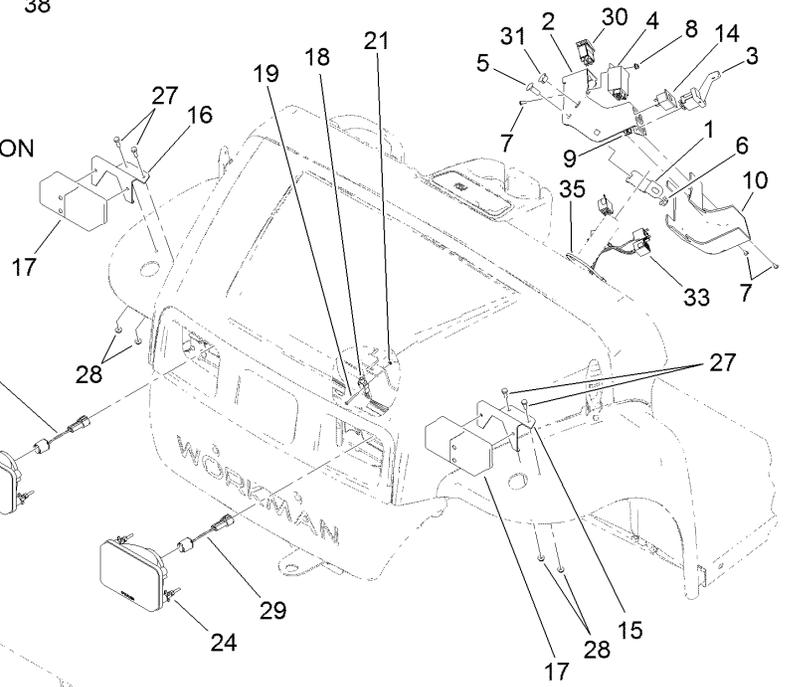

PRE 2014 CARGO BED CONFIGURATION

## Road Light and Homologation Assembly No. 120-5031 (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	120-0336	1	Mount-Bracket, Column	23	119-8091	2	Light-Plate
2	120-0363-03	1	Bracket-Column	23:1	120-7564	1	Bulb-12W
3	120-3953	1	Switch-Paddle, On-Off-On	24	114-8431	2	Headlamp-RH
4	119-9880	1	Module-Flasher	25	3290-500	4	Screw-PPH
5	3231-22	2	Screw-CARR	26	3296-2	4	Nut-Lock, NI
6	104-8301	2	Nut-Flange, NI	27	321-4	4	Screw-HH
7	115-9830	3	Screw-HSBH	28	104-7201	4	Nut-HF
8	32128-17	1	Nut-Lock, Flange	29	114-9730	2	Harness-Wire, Headlight Adapter
9	701493	2	Nut-Speed	30	119-7769	1	Switch-Rocker, On-None-On
10	120-6655	1	Cover-Column	31	94-5627	1	Plug
11	119-9622-03	2	Bracket-Light, Tail	32	120-3995	1	Harness-Wire, Tail Lights (Eu)
12	98-1375	6	Screw-HWH	33	120-3982	1	Harness-Wire, Lights
13	114-8428	2	Rear Lamp ASM	34	119-5793	1	Harness-Wire, Tail Lights
14	104-7129	1	Light-Indicator	35	3290-379	1	Tie-Cable
15	115-7662-03	1	Bracket-Light, LH	36	32180-082	2	Clip-Edge W/Tie, Perpendicular
16	115-7663-03	1	Bracket-Light, RH	37	32180-030	5	Clip-Tie
17	114-8429	2	Front Position Lamp ASM	38	3234-5	2	Screw-HHF
18	95-8900	1	Switch				
19	32105-21	2	Screw-HH				
21	3296-9	2	Nut-Lock				
22	120-5033-03	1	Bracket-Plate				

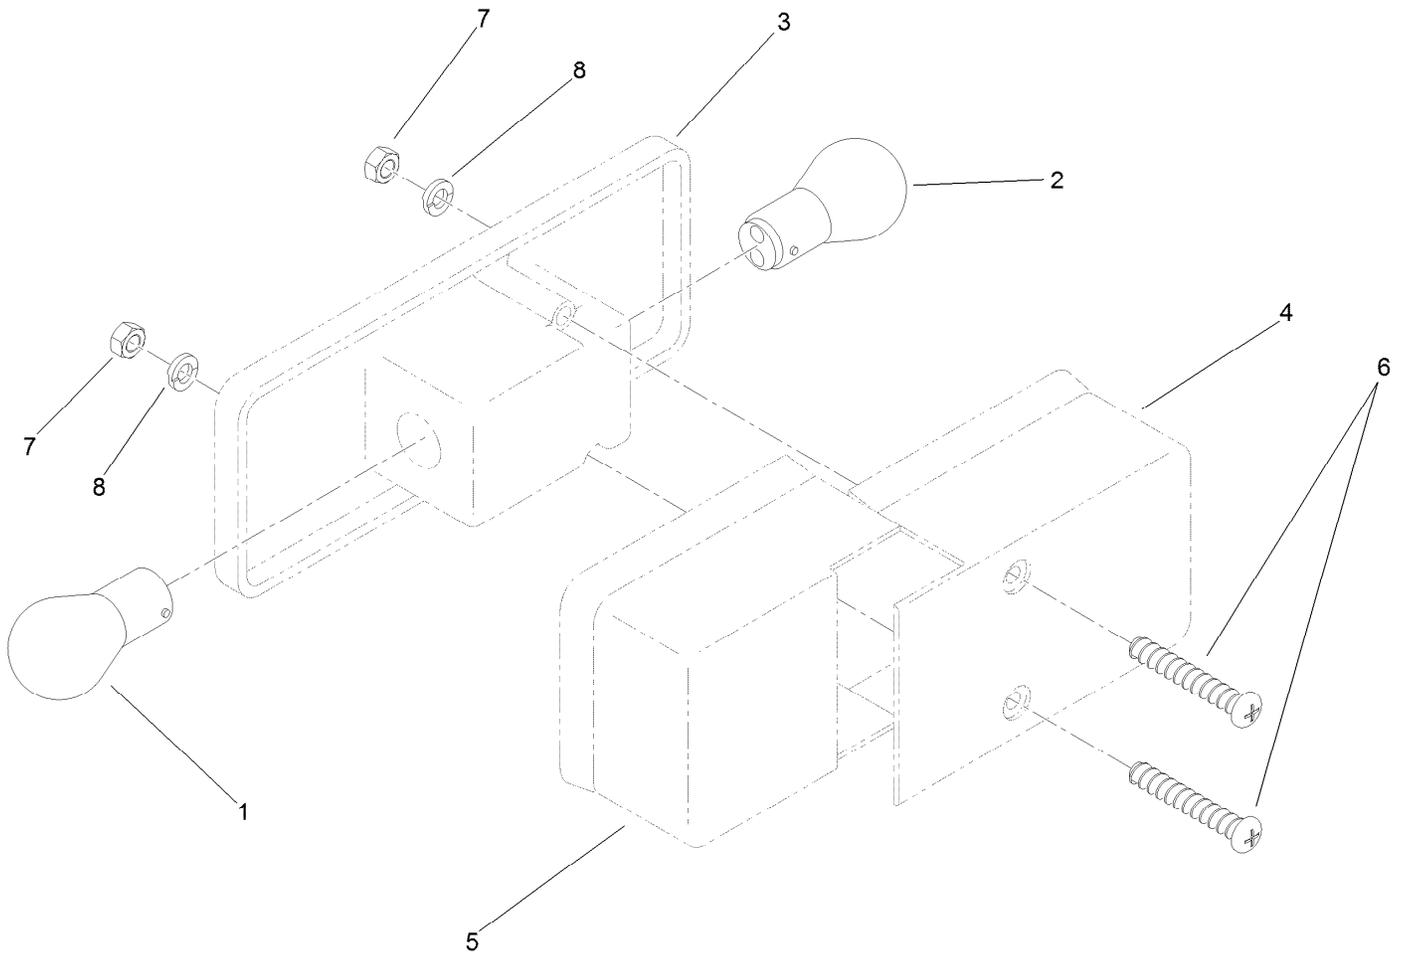

## Rear Lamp Assembly No. 114-8428

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	115-7857	1	Bulb-7506
2	115-7858	1	Bulb-7528
3		1	Backplate-Lamp, Rear ●
4		1	Lens-Lamp, Rear (Red) ●
5		1	Lens-Lamp, Rear (Amber) ●
6	93-3986	2	Screw-PPH
7	48-7880	2	Nut-Hex
8	43-5920	2	Washer-Lock, Spring


● Not serviced separately

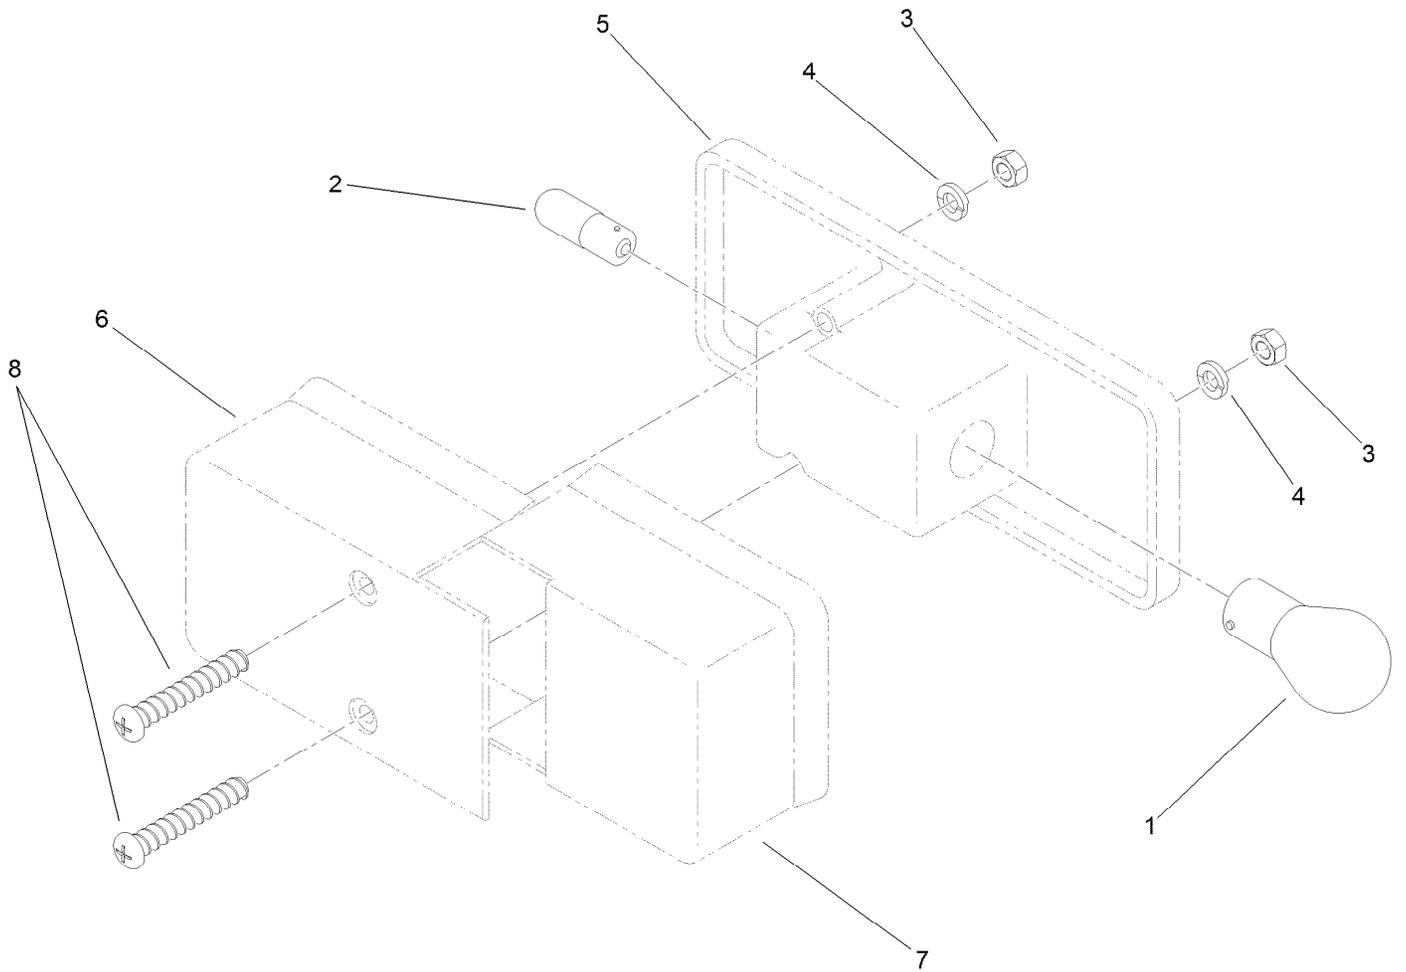

## Front Position Lamp Assembly No. 114-8429

Ref.	Part Number	Qty.	Description
1	115-7857	1	Bulb-7506
2	115-7859	1	Bulb-5008
3	48-7880	2	Nut-Hex
4	43-5920	2	Washer-Lock, Spring
5		1	Backplate-Lamp, Front ●
6		1	Lens-Lamp, Front (Clear) ●
7		1	Lens-Lamp, Front (Amber) ●
8	93-3986	2	Screw-PPH

● Not serviced separately

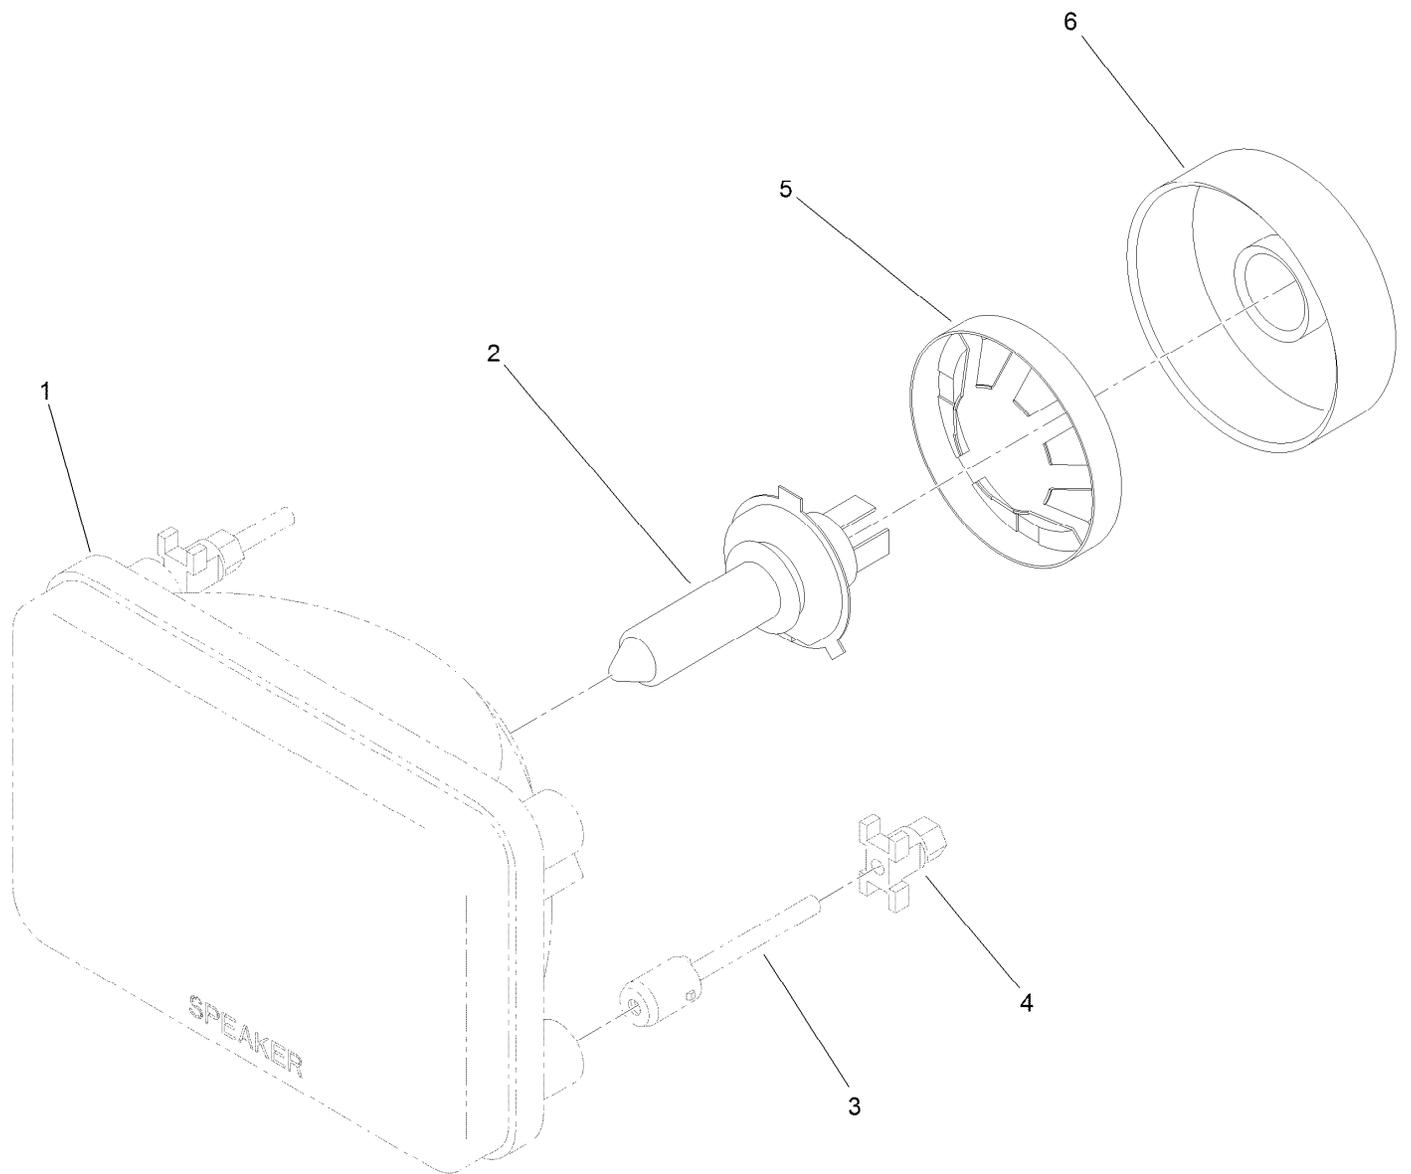

## Right Hand Headlamp Assembly No. 114-8431

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Housing-Headlamp ●
2	115-7853	1	Bulb-Headlamp
3		3	Swivel Socket ASM ●
4		3	Mount-Bushing ●
5	115-7667	1	Retainer-Headlamp
6	115-7668	1	Boot-Headlamp

● Not serviced separately

**Notes:**

**Notes:**

**Notes:**



**Count on it.**