



MODEL NO. 03410 — 10001 & UP

**OPERATOR'S
MANUAL**
REELMASTER® 216


To assure maximum safety, optimum performance, and to gain knowledge of the product, it is essential that you or any other operator of the mower read and understand the contents of this manual before the engine is ever started. Pay particular attention to the **SAFETY INSTRUCTIONS** highlighted by this symbol.



The safety alert symbol means **CAUTION, WARNING or DANGER** — personal safety instruction. Failure to comply with the instruction may result in personal injury.

FOREWORD

Your new REELMASTER® 216 was developed to provide an efficient, reliable and time-saving method of mowing high quality turf. The latest concepts in engineering and design have been incorporated into this machine along with the highest quality parts and workmanship. Excellent service will be derived if proper operation and maintenance practices are followed.

We know, since you have purchased the industry leader in mowing excellence, that future performance and dependability are of prime importance. TORO also is concerned about future use of the machine and of safety to the user. Therefore, this manual should be read by you and those involved with the REELMASTER 216 to ensure that safety, proper set-up, operation and maintenance procedures are followed at all times. The major sections of the manual are:

1. Safety Instructions
2. Set-up Instructions
3. Before Operating Instructions
4. Operating Instructions
5. Maintenance

Safety, mechanical and some general information in this manual is emphasized. DANGER, WARNING and CAUTION identify safety messages. Whenever the triangular safety alert symbol appears, ▲ it is followed by a safety message that must be read and understood. For more complete details concerning safety, read the safety instructions on pages 3, 4 and 5. IMPORTANT identifies special mechanical information and NOTE identifies general information worthy of special attention.

OPTIONAL SPARK ARRESTER

In some areas there are local, state or federal regulations requiring that a spark arrester be used on the engine of this mower. If a spark arrester is required, order the following parts from your local TORO Distributor:

- (1) 62-7460 Spark Arrester Assembly

These parts are approved by the United States Department of Agriculture and the United States Forest Service.

When mower is used or operated on any California forest, brush or grass covered land, a working order spark arrester must be attached to muffler. If not, the operator is violating state law, Section 442 Public Resources Code.

If help concerning set-up, operation, maintenance or safety is ever needed, contact the local Authorized TORO Distributor. In addition to genuine TORO replacement parts, the distributor also has optional equipment for the complete line of TORO turf care equipment. Keep your Toro all TORO. Buy genuine TORO parts and accessories.

TABLE OF CONTENTS

SAFETY INSTRUCTIONS	3-5	Operating Characteristics	17
SAFETY AND INSTRUCTION DECALS	5	Transport Operation	17
SPECIFICATIONS	6	Inspection and Cleanup after Mowing	17
LOOSE PARTS	6	Adjusting Steering Column	17
SET-UP INSTRUCTIONS	7-11	Towing Traction Unit	18
Install Rear Wheel	7	Cutting Unit Characteristics	18
Install Steering Wheel	7	Cutting Unit Daily Adjustments	18
Installing Seat	7	LUBRICATION	19
Install Front Pivot Rods	8	MAINTENANCE	20
Mount Front Roller	8	Changing Crankcase Oil	20
Level Rear Roller	8	Servicing Air Cleaner	20
Set Height-of-Cut	8	Adjusting Carburetor	21
Adjust Bedknife Parallel to Reel	9	Checking and Replacing Spark Plug	21
Verify Height-of-Cut Setting	10	Cleaning Cylinder Head Fins	22
Mount Cutting Units	10	Changing Hydraulic System Oil and Filter	22
Install Cutting Unit Drive Belts	10	Replacing Fuel Filter	22
Install Belt Tensioners to Cutting Units	11	Battery Care	23
Adjust Pulley Cleaners	11	Battery Storage	23
Install Counterbalance Springs	11	Wiring Harness Service	23
Rear Ballast	12	Adjusting Transmission for Neutral	23
BEFORE OPERATING	13-14	Adjusting Belts	23
Activate and Charge Battery	13	Adjusting Steering Stops	24
Check Crankcase Oil	13	Adjusting Traction Pedal	24
Fill Fuel Tank with Gasoline	13	Adjusting Clutch	25
Check Hydraulic System Fluid	14	Hand Brake Adjustment	25
Check Tire Pressure	14	Adjust Hood Latch	25
CONTROLS	15-16	Backlapping	25
OPERATING INSTRUCTIONS	16-17	Hydraulic Schematic	26
Starting/Stopping Engine	16	Electrical Schematic	27
Checking Operation of Interlock Switches	17	PRODUCT IDENTIFICATION	27
Training Period	17	THE TORO PROMISE	Back Cover
Before Mowing	17		



SAFETY INSTRUCTIONS

Improper use or maintenance by the operator or owner of the machine can result in injury. To reduce the potential for any injury, comply with the following safety instructions.

BEFORE OPERATING

1. Operate the machine only after reading and understanding the contents of this manual. A free replacement manual is available by sending complete model and serial number to: The Toro Company, 8111 Lyndale Avenue South, Minneapolis, Minnesota 55420.
2. Never allow children to operate the machine or adults to operate it without proper instructions.
3. Become familiar with the controls and know how to stop the machine and engine quickly.
4. Keep all shields, safety devices and decals in place. If a shield, safety device or decal is defective or damaged, repair or replace it before operating the machine.

5. Always wear substantial shoes. Do not operate machine while wearing sandals, tennis shoes or sneakers. Do not wear loose fitting clothing because it could get caught in moving parts and possibly cause personal injury.

6. Wearing safety glasses, safety shoes, long pants and a helmet is advisable and required by some local ordinances and insurance regulations.

7. Make sure the work area is clear of objects which might be picked up and thrown by the reels.

8. Do not carry passengers on the machine, and keep everyone, especially children and pets, away from the areas of operation.

9. Since gasoline is highly flammable, handle it carefully.

- A. Use an approved gasoline container.
- B. Do not remove cap from fuel tank when engine is hot or running.
- C. Do not smoke while handling gasoline.



SAFETY INSTRUCTIONS

- D. Fill fuel tank outdoors and not over one inch (25 mm) from the top of the tank, not the filler neck. Do not overfill.
- E. Wipe up any spilled gasoline.

WHILE OPERATING

- 10. Do not run the engine in a confined area without adequate ventilation. Exhaust fumes are hazardous and could be deadly.
- 11. Sit on the seat when starting and operating the machine.
- 12. Check the interlock switches daily for proper operation; refer to page 16. If a switch should fail, replace the switch before operating the machine. **(After every two years, replace all four interlock switches in the wiring system, regardless if they are working properly or not.)**
- 13. When starting the engine:
 - A. Engage parking brake.
 - B. Be sure traction pedal is in neutral and Reel Drive is in disengage position.
 - C. After engine is started, release parking brake and keep foot off traction pedal. Machine must not move. If movement is evident, the neutral control linkage is adjusted incorrectly; therefore, shut engine off and adjust until machine does not move when traction pedal is released. Refer to Adjusting Transmission for Neutral, page 22.
 - D. Watch for holes or other hidden hazards.
 - E. Use extreme care when operating close to sand traps, ditches, creeks, steep hillsides or other hazards.
 - F. Reduce speed when making sharp turns. Avoid sudden stops and starts.
 - G. Before backing up, look to the rear and assure no one is behind the machine.
 - H. Watch out for traffic when near or crossing roads. Always yield the right-of-way.
- 15. Keep hands, feet and clothing away from moving parts and the reel discharge area. If so equipped, the grass baskets must be in place during operation of the reels for maximum safety.
- 16. Raise the cutting units when driving from one work area to another.
- 17. Do not touch engine, muffler or exhaust pipe while engine is running or soon after it is stopped because these areas could be hot enough to cause burns.

18. If a cutting unit strikes a solid object or vibrates abnormally, stop immediately, turn engine off, wait for all motion to stop and inspect for damage. A damaged reel or bedknife must be repaired or replaced before operation is continued.

19. Before getting off the seat:

- A. Move traction pedal to neutral.
- B. Set the parking brake.
- C. Disengage the cutting units and wait for the reels to stop spinning.
- D. Stop the engine and remove key from ignition switch.

20. Whenever machine is left unattended, make sure reels are not spinning, key is removed from ignition switch and parking brake is set.

MAINTENANCE

- 21. Before servicing or making adjustments to the machine, stop the engine, remove key from ignition switch and disconnect wire from spark plug to prevent accidental starting of the engine.
- 22. Check performance of all four interlock switches daily. Do not defeat interlock system. It is for your protection.
- 23. To ensure entire machine is in good operating condition, frequently check and keep all nuts, bolts, screws and hydraulic fittings tight.
- 24. Make sure all hydraulic line connectors are tight, and all hydraulic hoses and lines are in good condition before applying pressure to the system.
- 25. Keep body and hands away from pin hole leaks or nozzles that eject hydraulic fluid under high pressure. Use paper or cardboard, not hands, to search for leaks. Hydraulic fluid escaping under pressure can have sufficient force to penetrate skin and do serious damage. If fluid is ejected into the skin it must be surgically removed within a few hours by a doctor familiar with this form of injury or gangrene may result.
- 26. Before disconnecting or performing any work on the hydraulic system, all pressure in system must be relieved by stopping engine and lowering cutting units to the ground.
- 27. If major repairs are ever needed or if assistance is desired, contact an Authorized Toro Distributor.
- 28. To reduce potential fire hazard, keep the engine area free of excessive grease, grass, leaves and accumulation of dirt.



SAFETY INSTRUCTIONS

29. If the engine must be running to perform a maintenance adjustment, keep hands, feet, clothing, and any other parts of the body away from the cutting units and any moving parts. Keep everyone away.

30. Do not overspeed the engine by changing governor settings. To assure safety and accuracy, have an Authorized Toro Distributor check maximum engine speed with a tachometer.


31. Engine must be shut off before checking oil or adding oil to the crankcase.

32. To insure optimum performance and safety, use genuine TORO replacement parts and accessories. Replacement parts and accessories made by other manufacturers could be dangerous, and such use could void the product warranty of The Toro Company



SAFETY AND INSTRUCTION DECALS

The following safety and instruction decals are installed on the traction unit. If any become damaged or illegible, replace them. Decals are listed in your Parts Catalog. Order replacements from your Authorized Toro Distributor.

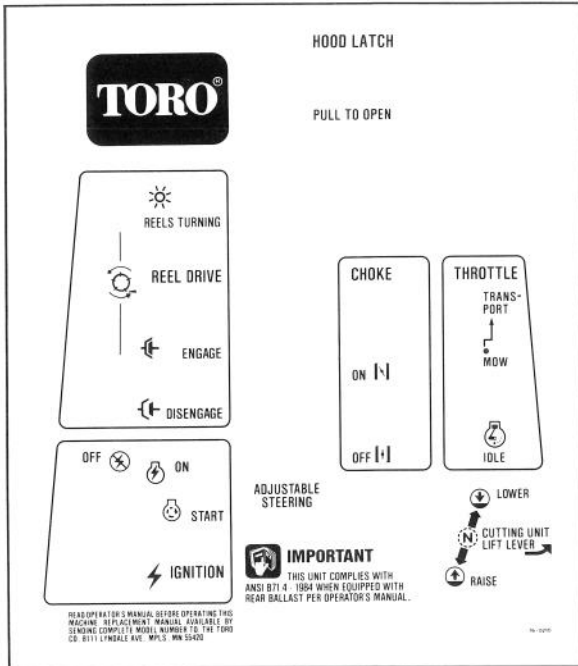

ON INSTRUMENT PANEL
(Part No. 76-0210)



ON LEFT FOOTREST
(Part No. 62-7280)



ON LIFT ARMS
(Part No. 61-3610)



ON CUTTING UNIT SHIELD
(Part No. 62-5070)



ON MUFFLER SHROUD AND HYDRAULIC TANK
(Part No. 66-6840)

SPECIFICATIONS

Engine: Kohler, 4 cycle, air cooled, 16 hp @ 3600 rpm, 35.90 cu. in. (588 cc) displacement. Stelite® intake and exhaust valve and rotator. Mechanical fuel pump, large capacity dual element air cleaner. 5¼ pint oil capacity.

Electrical: 12 volt starter. Electronic solid state ignition. Interlock switches. 15 amp alternator and solid state regulator rectifier.

Fuel Capacity: 6 gallons gasoline.

Traction Drive: Hydrostatic drive; variable displacement pump, infinitely variable in both forward and reverse direction. High torque hydraulic wheel motors.

Ground Speed: Infinitely variable speed selection in forward and reverse.

Ground mowing speed: 0-5 mph
 Transport speed: 0-6.5 mph
 Reverse speed: 0-3 mph

Tires/Wheels: Two front traction drive tires, 18 x 8.50 - 8 tubeless, 4 ply rating. Rear steering tire 18 x 6.50 - 8 4 ply tire with tube. Recommended tire pressure 12-16 psi.

Frame: Tricycle vehicle with front two wheels providing drive and rear wheel steering. Frame consists

of formed steel, welded steel and steel tubing components.

Controls: Foot operated traction pedal with adjustable stop. Hand operated throttle, choke, ignition switch, reel engagement switch, cutting unit lift lever and parking brake.

Cutting Unit Lift: Hydraulic lift with automatic reel shut off.

Overall Dimensions: 54" wheel tread width; 55" wheel base; 81" width; 92" length; 43" height.

Weight: 1,250 lbs. with 8 blade cutting unit.

Optional Equipment:

Full Roller Kit	Model No. 03440
Sectional Roller Kit	Model No. 03445
Wiehle Roller Kit	Model No. 03450
Skid Kit	Model No. 03446
Anti-Scalp Kit	Model No. 03447
Roller Scraper Kit	Part No. 60-9560
Comb Kit	Part No. 67-9400
Large Pulley Kit	Part No. 67-9540
Rear Weight — 8 Blade	Part No. 62-5140
Rear Weight — Basket Kit	Part No. 62-7470
Grass Basket Kit	Model No. 03433
Gauge Bar Kit	Part No. 13-8199

LOOSE PARTS CHART

DESCRIPTION	QTY.	USE
Wheel Assembly	1	Mount Rear Wheel.
Spacers	2	
Flat Washers	2	
Castor Axle	1	
Locknut	1	
Roll Pin	1	Install Steering Wheel.
Steering Cap	1	
Pivot Rod	2	Install to Front Lift Arms.
Capscrews — 5/16 - 18 x 7/8" Lg.	4	
Lockwashers	4	
Thrust Washers	3	Mount Cutting Units to Lift Arms.
Flat Washer	3	
Lockwasher	3	
Capscrew	3	
Capscrew	4	Install Belt Tension Rod to Cutting Unit (Fixed Cutting Units only).
Spacer	4	
Washer	8	
Nut	4	
Locknuts — M8	4	Install Seat.
V-Belt	2	Install to Jackshaft Pulley and Reel Pulley.
Spring	3	Install Counterbalance Springs.
Vinyl Sleeve	1	
Chain	1	
Shackle	3	
Clevis Pin	3	
Cotter Pin	3	
Key	1	
Battery Terminal Boot	1	Secure Battery Cables to Battery.
Capscrew	2	
Nut	2	
Reservoir Plug	1	Use When Changing Hydraulic Filter.
Operators Manual	1	Read Before Operating Machine.
Parts Catalog	1	
Registration Card	1	Fill Out and Send to The Toro Co.

SET UP INSTRUCTIONS

INSTALL REAR WHEEL

1. Mount wheel assembly to rear castor fork with (2) spacers, (2) flat washers, castor axle and locknut. Spacers to be positioned on inside of fork and washers outside of fork.

INSTALL STEERING WHEEL (Fig. 1)

1. Move rear wheel so it points straight ahead.
2. Slide steering wheel onto steering shaft aligning mounting holes.

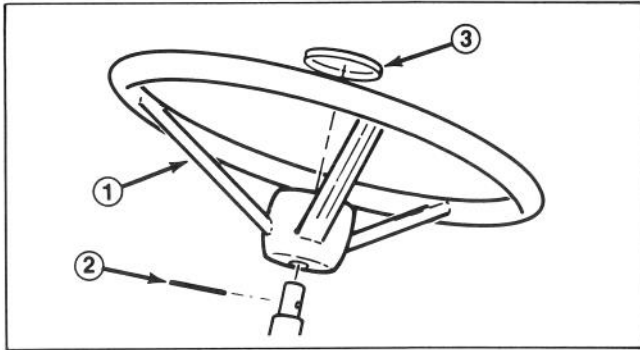


Figure 1

1. Steering wheel 2. Roll pin 3. Steering cap

3. Secure steering wheel in place with roll pin. Install steering wheel cap.

INSTALLING SEAT (Fig. 2)

The Reelmaster 216 is shipped without the seat assembly. Deluxe Seat Kit, Model 30797 or Standard Seat Kit, Model 30796, must be installed as follows:

1. Remove shipping ties securing lower seat slides to upper seat slides. Note orientation of lower slides for correct reinstallation.
2. On Deluxe Seat, remove machine screws securing upper slides to seat bottom. Move seat slides inward to next set of mounting holes and resecure with machine screws and (4) M8 locknuts (loose parts). Apply Locktite to fasteners.
3. Insert lower slides onto upper slides.
4. Loosely secure slides to seat plate with fasteners supplied with seat.

Note: Mount seat in forward holes to attain forward adjustment.

5. Tighten flangenuts and check operation of seat.

Note: For operators that are lightweight, less than 150 pounds and short in stature, less than 5'4" tall, an optional weight kit (Toro part no. 80-4210) for seat model 30796 is available from your Authorized Toro Distributor. Mount weight to top of seat plate with (2) capscrews and flange nuts as shown in Figure 3. When using weight, seat slide adjusters should be mounted in the forward set of holes provided in seat

plate to insure seat can be positioned forward enough to provide comfortable operation and control of the mower.

Important: Do not use weight with any other seat as it may cause interlock system to malfunction.

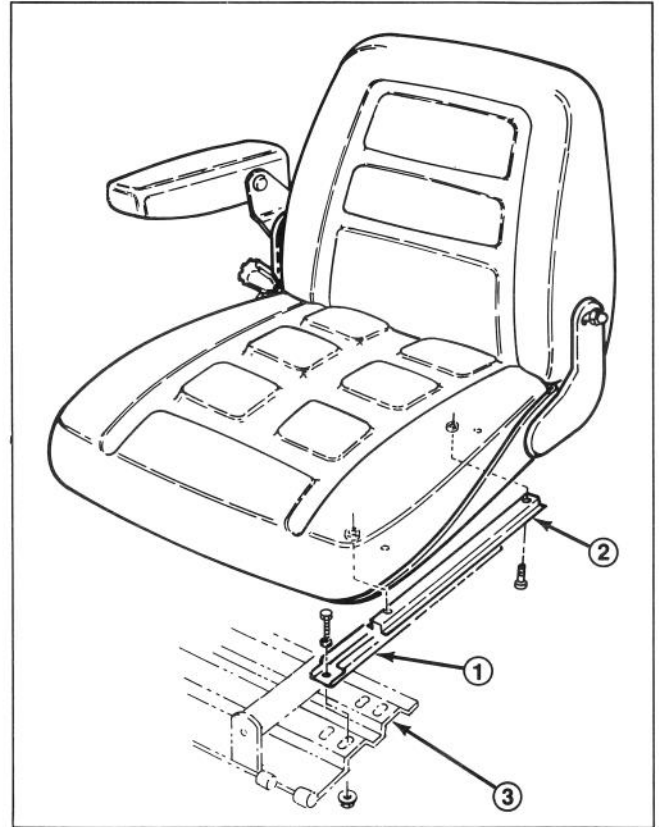


Figure 2

1. Lower seat slide
2. Upper seat slide
3. Seat plate

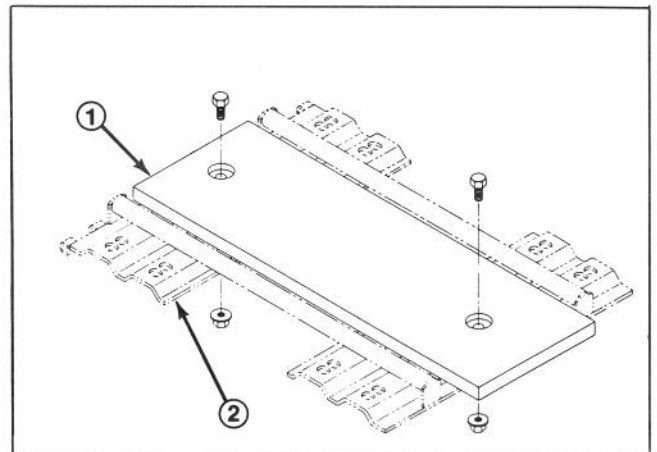


Figure 3

1. Seat weight
2. Seat plate

SET UP INSTRUCTIONS

INSTALL FRONT PIVOT RODS (Fig. 4)

1. Insert a pivot rod into each lift arm and align mounting holes.

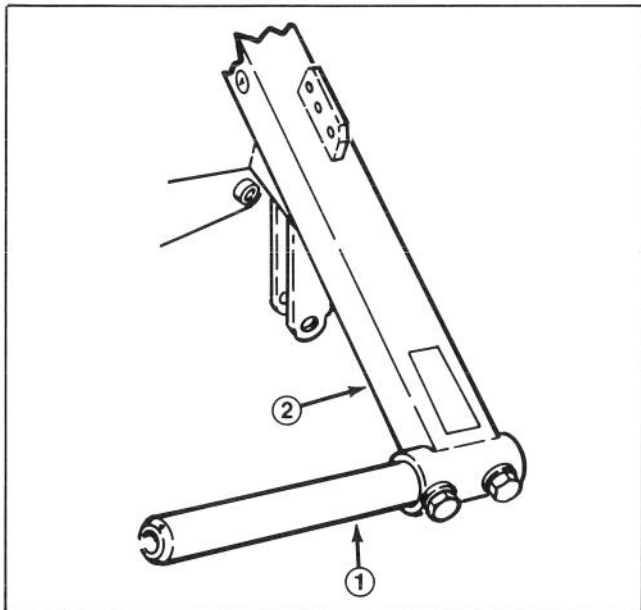


Figure 4

1. Pivot rod
2. Lift arm

2. Secure a pivot rod to each lift arm with (2) 5/16 - 18 x 7/8" Lg. capscrews and lockwashers.

MOUNT FRONT ROLLER (Fig. 5) (Floating Cutting Unit)

1. Remove (2) locknuts securing each angle bracket to cutting unit.

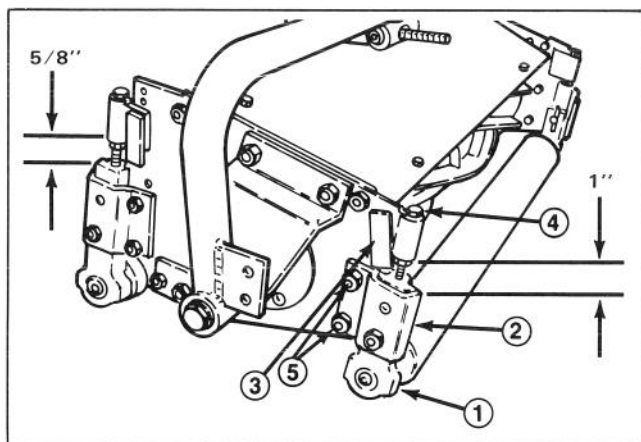


Figure 5

1. Roller bracket
2. Angle bracket
3. Height-of-cut pin
4. Support cap screw
5. Locknuts

2. Remove height-of-cut pins.
3. Insert smaller dia. shaft end of roller into white bushing in roller bracket, making sure flanged end of

nylon bushing faces inside toward roller. **Hex of roller bracket must mate with hex of nut adjustment.**

4. Press roller bracket onto other shaft end of roller. **Hex of roller bracket must mate with hex of nut adjustment.**

5. Hold one roller bracket stationary and use other bracket as a wrench to loosen or tighten bearing clearance to allow roller to rotate freely and to eliminate bearing end play.

6. Roller brackets must be aligned for installation onto cutting unit. If necessary to align after bearing adjustment, remove roller bracket on side with flanged nyloner, align with opposite roller bracket within \pm one hex flat and replace.

7. Reinstall Height-of-Cut pins.

8. Reinstall (2) locknuts securing each angle bracket to cutting unit.

SET HEIGHT OF CUT AND LEVEL

REAR ROLLER (Fig. 5) (Floating Cutting Unit)

1. Position cutting unit on a flat level table or board.
2. Slightly loosen (crack) nut securing each roller bracket to angle bracket (Fig. 5).
3. Adjust support capscrew to achieve $1'' \pm 1/16$ dimension between Height-of-Cut support and *front* roller bracket (2 places) (Fig. 5).
4. Adjust support capscrew to achieve $5/8'' \pm 1/16$ dimension between Height-of-Cut support and *rear* roller bracket (2 places) (Fig. 5).

5. Remove hairpin cotters securing *rear* Height-of-Cut pins and reinstall in the $1/2''$ setting as indicated on Height-of-Cut plate.

6. Remove hairpin cotters securing *front* Height-of-Cut pins and reinstall in the $1/4''$ setting as indicated on Height-of-Cut plate to allow clearance between roller and table.

7. Position a $1/2''$ or thicker bar under the reel blades and against the front face of the bedknife. Make sure bar covers the full length of reel blades.

8. Verify if rear roller is level, by inserting a piece of paper under each end of roller.

9. Level roller by adjusting appropriate support capscrew on rear roller supports until roller is parallel and entire length of roller contacts table.

10. When roller is level, adjust both rollers to desired Height-of-Cut pins. **Tighten nuts securing roller brackets.**

SET UP INSTRUCTIONS

SET HEIGHT-OF-CUT AND LEVEL REAR ROLLER (Fig. 6) (Fixed Cutting Units)

1. Position cutting unit on flat level surface or board.
2. Slightly loosen (crack) nuts securing roller brackets to angle brackets.

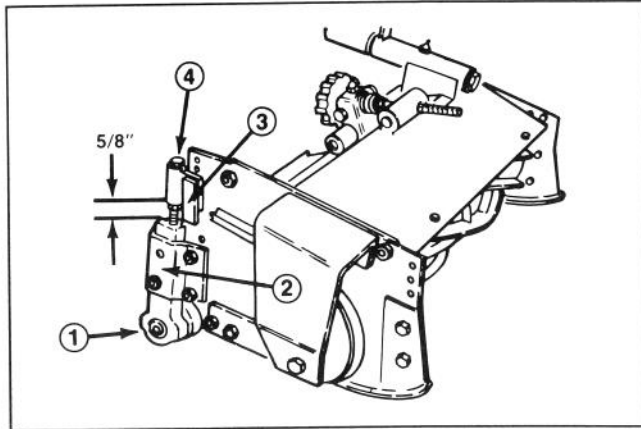


Figure 6

1. Roller bracket
2. Angle bracket
3. Height-of-cut pin
4. Support capscrew

3. Adjust support capscrews to achieve 5/8" plus or minus 1/16" dimension between Height-of-Cut support and roller bracket (2 places).

4. Remove hairpin cotters securing Height-of-Cut pins and reinstall in hole at desired setting as indicated on Height-of-Cut plate.

5. Use a gage block with a height equal to the desired height-of-cut and position it against the front edge of the bedknife at one end. Turn the support capscrew to adjust the height of the bedknife equal to the gage block.

6. Repeat the procedure at the other end, then re-check the original end.

7. **Tighten nuts securing roller brackets.**

8. After initial set-up, height-of-cut may be changed by repositioning Height-of-Cut pins to desired setting.

ADJUST BEDKNIFE PARALLEL TO REEL (Fig. 7-8) (Floating or Fixed Cutting Units)

1. Make sure reel contact is removed by turning bedknife adjustment knob counterclockwise (Fig. 7). Tip cutting unit to gain access to reel and bedknife (Fig. 8).

2. On either end of reel, insert a long strip of dry newspaper between reel and bedknife. While slowly


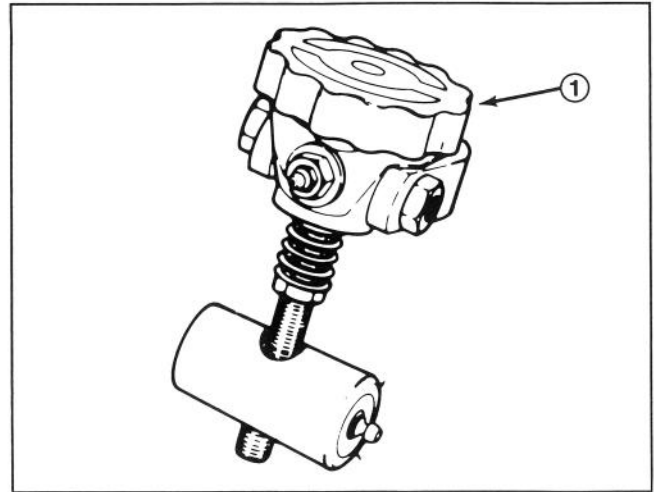


Figure 7

1. Bedknife adjustment knob

rotating reel into bedknife, turn bedknife adjusting knob clockwise, one click at a time until paper is pinched lightly, which results in a slight drag when paper is pulled (Fig. 8).

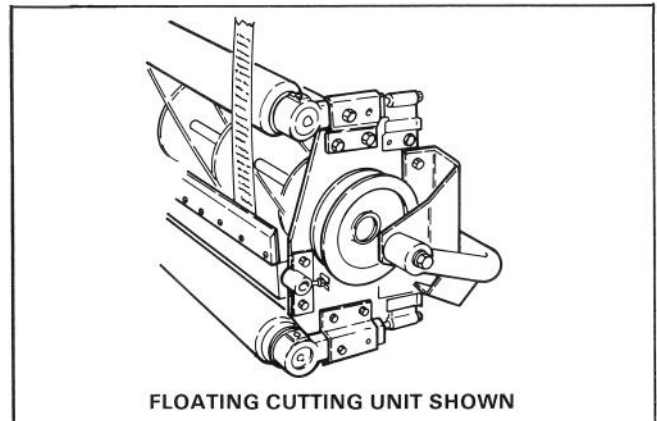


FLOATING CUTTING UNIT SHOWN

Figure 8

3. Check for light contact at other end of reel using paper. If light contact is not evident, proceed to next step.

4. Loosen (2) carriage bolts on bedbar adjuster (Fig. 9).

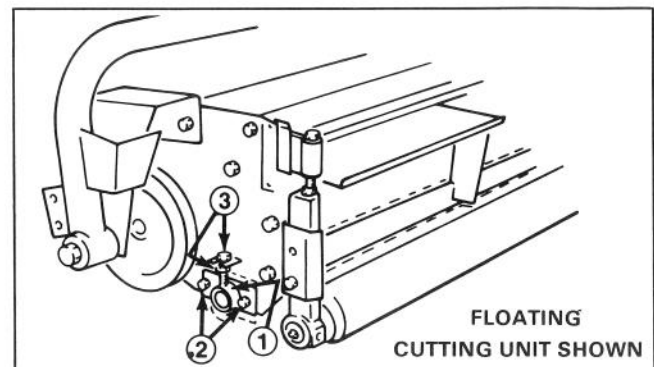

FLOATING CUTTING UNIT SHOWN

Figure 9

1. Bedbar adjuster
2. Carriage bolts
3. Adjustment nuts

SET UP INSTRUCTIONS

5. Adjust nuts to move bedbar adjuster up or down until paper is pinched along entire bedknife surface, when bedknife adjustment knob is adjusted to no more than two clicks beyond first contact of reel bedknife (Fig. 9).

6. Tighten nuts and carriage bolts and verify adjustment.

VERIFY HEIGHT-OF-CUT SETTING (Fig. 10) (Floating Cutting Unit)

1. On gauge bar, set head of screw to desired Height-of-Cut. This measurement is from bar face to underside of screw head. Gauge bar (Toro Part No. 13-8199) may be obtained from your local Toro Distributor.

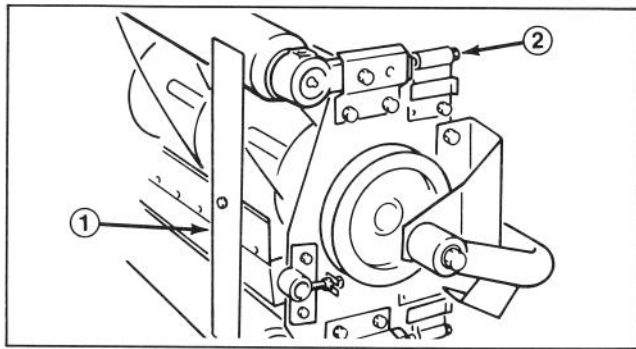


Figure 10

1. Gauge bar
2. Front roller support screw

2. Slightly loosen (crack) nut securing each front roller bracket to angle bracket.

3. Place the bar across the front and rear rollers and adjust the front roller support screws until the underside of screw head engages the bedknife cutting edge. Do this on both ends of reel.

4. Tighten nuts securing roller brackets.

MOUNT CUTTING UNITS (Fig. 11) (Floating Cutting Unit)

1. Slide a thrust washer onto lift arm pivot rod.
2. Slide cutting unit carrier frame onto pivot rod and secure with a flatwasher, lockwasher and capscrew.

MOUNT CUTTING UNITS (Fig. 12) (Fixed Cutting Units)

1. Slide a thrust washer onto lift arm pivot rod.

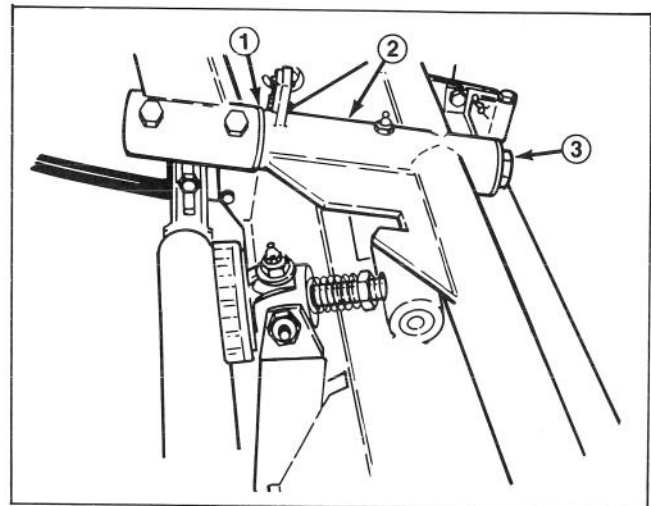


Figure 11

1. Thrust washer
2. Carrier frame
3. Flatwasher, lockwasher, capscrew

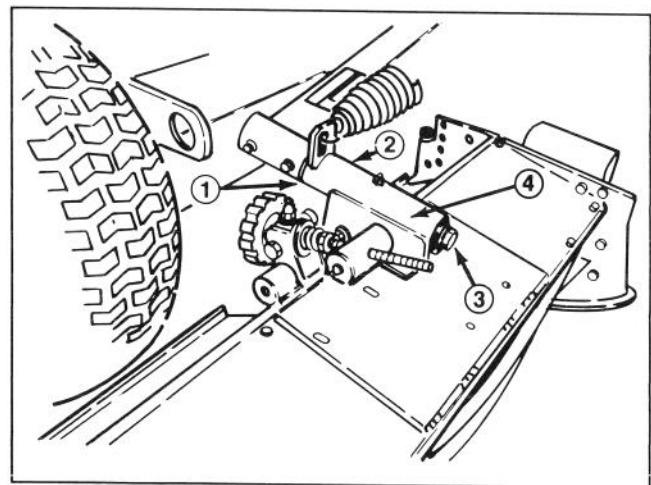


Figure 12

1. Thrust washer
2. Cutting unit support
3. Flatwasher, lockwasher, capscrew
4. Cutting unit support

2. Slide cutting unit support onto pivot rod and secure with a flatwasher, lockwasher, and capscrew.

3. Front cutting units should be parallel to front wheels. To adjust, loosen capscrews securing supports to cutting units, adjust cutting units until parallel, then, retighten screws.

INSTALL CUTTING UNIT DRIVE BELTS (Fig. 13) (Floating Cutting Units)

1. Route (3) V-belts (two in loose parts) around jackshaft pulleys and reel pulleys.

SET UP INSTRUCTIONS

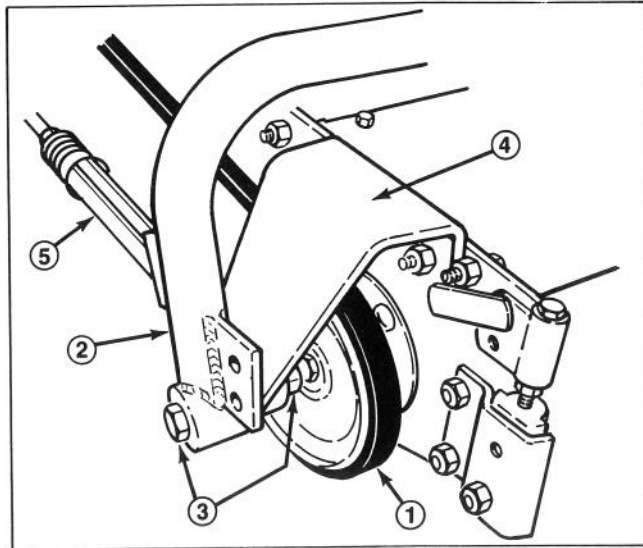


Figure 13

- | | |
|---|----------------------|
| 1. Cutting unit drive belt | 4. Tensioner bracket |
| 2. Carrier frame | 5. Belt tensioner |
| 3. Shoulder bolt, (2) flatwashers and nut | |

INSTALL CUTTING UNIT DRIVE BELTS (Fig. 14) (Fixed Cutting Units)

1. Route (3) V-belts (one in loose parts) around jackshaft pulleys and reel pulleys.

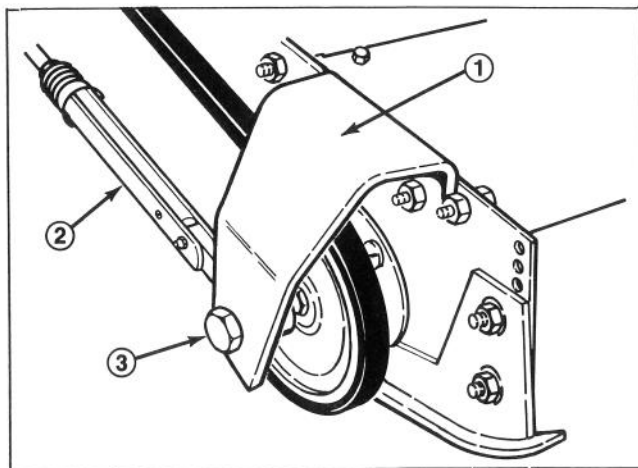


Figure 14

- | | |
|--------------------|---|
| 1. Tension bracket | 3. Capscrew, (2) flatwashers,
spacer and nut |
| 2. Belt tensioner | |

INSTALL BELT TENSIONERS TO CUTTING UNITS (Fig. 13) (Floating Cutting Units)

1. On pulley end of front cutting units and both ends of rear cutting unit, remove nut from bolt securing carrier frame to tensioner bracket.
2. Install a spacer, belt tension rod and washer onto capscrew.

Note: Belt tension rods to be in locked position when installing. Loosen jam nut and rotate rod to adjust rod length for installation.

3. Reinstall nut previously removed.

INSTALL BELT TENSIONERS TO CUTTING UNITS (Fig. 14) (Fixed Cutting Units)

1. On pulley end of front cutting units and both ends of rear cutting unit, install a washer, spacer, belt tension rod and spacer on capscrew.

Note: Belt tension rods to be in locked position when installing. Loosen jam nut and rotate rod to adjust rod length for installation.

2. Secure with nut.

ADJUST PULLEY CLEANERS (Fig. 15)

1. Adjust cleaner bracket so it is centered in groove of pulley and tighten carriage bolt and locknut.
2. Adjust cleaner bracket so there is approximately .030 - .060 clearance between bracket and pulley, then tighten capscrew and locknut.

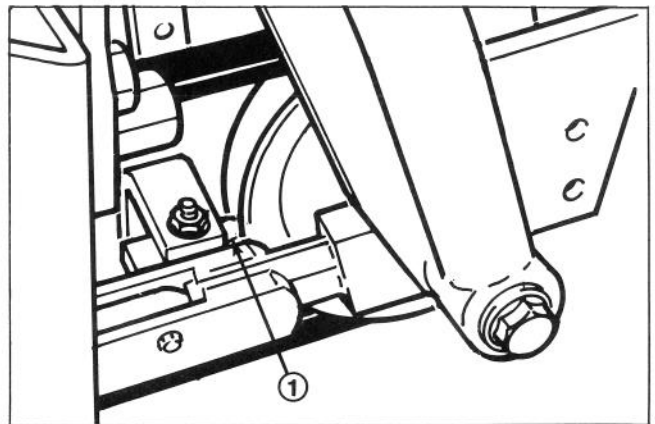


Figure 15

1. Cleaner bracket

INSTALL COUNTERBALANCE SPRINGS (Figs. 16-18)

1. Remove capscrew securing counterbalance arm to frame.

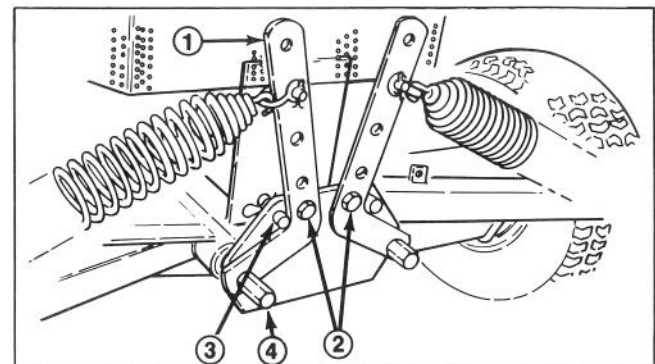


Figure 16

- | | |
|---|---------------------------------|
| 1. Counterbalance arm | 3. Clevis pin & hairpin cotter |
| 2. Capscrew securing counterbalance arm | 4. Counterbalance arm pivot hex |

SET UP INSTRUCTIONS

2. Remove hairpin cotter and clevis pin next to arm.
3. Pivot front arms outward and rear arm inward.
4. Hook one end of spring into second hole (from bottom) on cutting unit lift tab.

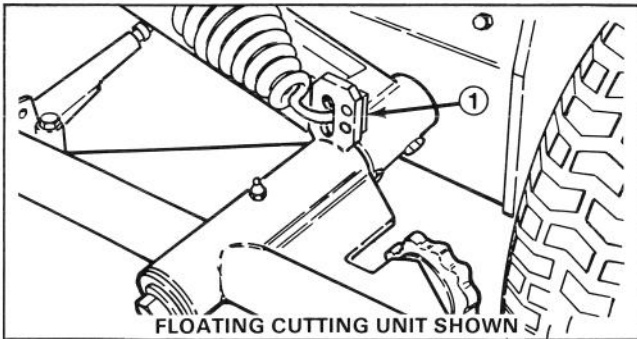


Figure 17

1. Cutting unit lift tab

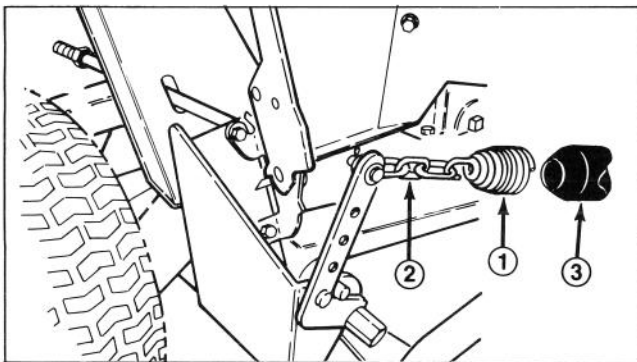


Figure 18

1. Rear counter balance spring
2. Chain links
3. Vinyl cover

Note: On rear counterbalance spring install vinyl cover over spring before installing.

5. On front cutting units secure other end of spring to appropriate hole (see chart below) on counterbalance arm with clevis, clevis pin and hairpin cotter.
6. On rear cutting unit secure other end of spring to appropriate hole in counterbalance arm with (2) chain links (5, 8 & 11 Blade Floating Cutting units) or (3) chain links (5 Blade Fixed Cutting units), clevis, clevis pin and hairpin cotter.
 - A. Bottom hole — for 5 blade reel application
 - B. Middle hole — for 8 blade reels without baskets
 - C. Top hole — for 8 blade reels using baskets

IMPORTANT: These are recommended settings. Readjust spring positions to attain optimum performance. By raising spring locations on counterbalance arms, cutting unit weight on ground is reduced and traction is increased.

7. To tension the counterbalance springs proceed as follows:

- A. Insert a 3/4" socket with long extension bar onto counterbalance arm pivot hex.
- B. Pivot arms back until clevis pin and hairpin cotter can be reinstalled in frame.
- C. Reinstall capscrew to lock arms in position.



WARNING

Use caution when tensioning springs as they are under heavy load.

ADD REAR BALLAST

This unit complies with ANSI B71.4-1984 Standard when equipped with rear ballast. Use chart below to determine weight or combinations of weights needed.

Cutting Unit Configuration	Weight Required
Fixed (no carrier frame)	Calcium Chloride in rear tire.
Floating (with carrier frame and no baskets)	Calcium Chloride in rear tire and rear weight, Part No. 62-5140.
Floating (with carrier frame and baskets)	Calcium Chloride in rear tire and rear weights, Part No. 62-5140 and 62-7470.

IMPORTANT: If a puncture occurs in a tire with calcium chloride, remove unit from turf area as quickly as possible. To prevent possible damage to turf, immediately soak affected area with water.

Either Type 1 (77%) or Type 2 (94%) commercial calcium chloride flake may be used.

Plain water freezes solid at 32° F (0° C). The 3-1/2 pound (1.6 kg) calcium chloride to one gallon (3.8 L) of water solution is slush free to -12° F (-24° C), and will freeze solid at -52° F (-46° C). The 5 pound (2.3 kg) per gallon (liter) solution is slush free to -50° F (-45° C) and will freeze solid at -62° F (-52° C).

Tires should be filled to approximately 75% capacity (valve level with valve at the top).

TO INSTALL REAR WEIGHT, PART NO. 62-5140

1. Remove (4) capscrews, flatwashers, and spacers securing gas tank mounting plate to rear frame.
2. Discard spacers.
3. Slide weight under gas tank mounting plate aligning mounting holes.
4. Secure weight to frame with fasteners previously removed.

TO INSTALL REAR WEIGHT, PART NO. 62-7470

1. Secure the (2) weights to the bottom of weight, Part No. 62-5140 with fasteners supplied with kit.

BEFORE OPERATING

ACTIVATE AND CHARGE BATTERY (Fig. 19)

1. If Battery is not filled with electrolyte or activated, bulk electrolyte with 1.260 specific gravity must be purchased from a local battery supply outlet and added to battery.



CAUTION

Wear safety goggles and rubber gloves when working with electrolyte. Charge the battery in a well ventilated place so gasses produced while charging can dissipate. Since the gases are explosive, keep open flames and electrical spark away from the battery; do not smoke. Nausea may result if the gases are inhaled. Unplug charger from electrical outlet before connecting to or disconnecting charger leads from battery posts.

2. Remove filler caps from battery and slowly fill each cell until electrolyte is just above the plates.
3. Replace filler caps and connect a 3 to 4 amp battery charger to the battery posts. Charge the battery at a rate of 3 to 4 amperes for 4 to 8 hours.
4. When battery is charged, disconnect charger from electrical outlet and battery posts.
5. Remove filler caps. Slowly add electrolyte to each cell until level is up to fill ring. Install filler caps.

IMPORTANT: Do not overfill battery. Electrolyte will overflow onto other parts of the machine and severe corrosion and deterioration will result.

6. Install the positive cable (rubber boot over end) to the positive (+) terminal and the negative cable (black) to the negative (—) terminal of the battery and secure with capscrews and nuts. Slide the rubber boot over the positive terminal to prevent possible short-out from occurring (Fig. 19).

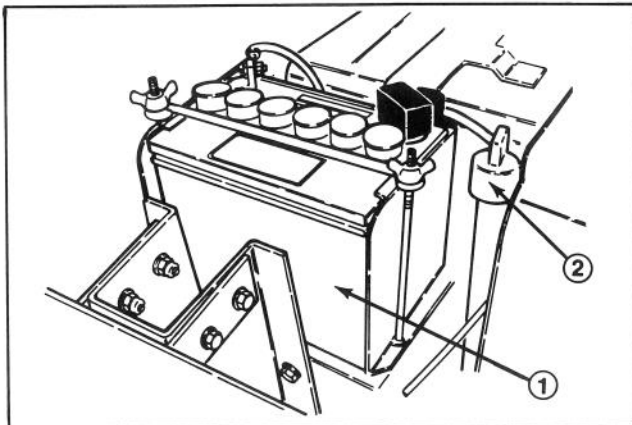


Figure 19

1. Battery

2. Oil dipstick

CHECK CRANKCASE OIL (Fig. 19)

The Kohler engine is shipped with 5¼ pints of oil in the crankcase; however, level of oil must be checked before and after the engine is first started.

1. Position machine on a level surface.
2. Remove dipstick and wipe it with a clean rag. Push dipstick down into dipstick tube and make sure it is seated fully. Pull dipstick out and check level of oil. If oil level is low, add enough oil to raise level to FULL mark on dipstick.

FILL FUEL TANK WITH GASOLINE (Fig. 20)

THE TORO COMPANY STRONGLY RECOMMENDS THE USE OF FRESH CLEAN, UNLEADED REGULAR GRADE GASOLINE IN TORO GASOLINE POWERED PRODUCTS. UNLEADED GASOLINE BURNS CLEANER, EXTENDS ENGINE LIFE, AND PROMOTES GOOD STARTING BY REDUCING THE BUILD-UP OF COMBUSTION CHAMBER DEPOSITS.

Note: Do not mix oil with gasoline. Never use methanol, gasoline containing methanol, gasohol, gasoline additives, premium gasoline, or white gas because engine/fuel system damage could result.



DANGER

Because gasoline is flammable, caution must be used when storing or handling it. Do not fill fuel tank while engine is running, hot or when machine is in an enclosed area. Vapors may build up and be ignited by a spark or flame source many feet away. **DO NOT SMOKE** while filling the fuel tank to prevent the possibility of an explosion. Always fill fuel tank outside and wipe up any spilled gasoline before starting engine. Use a funnel or spout to prevent spilling gasoline before starting engine and fill tank to about 1 inch (25 mm) below the filler neck. Store gasoline in a clean safety-approved container and keep the cap in place on the container. Keep gasoline in a cool, well-ventilated place; never in an enclosed area such as a hot storage shed. To assure volatility, do not buy more than a 30 day supply of gasoline. Gasoline is a fuel for internal combustion engines; therefore, do not use it for any other purpose. Since many children like the smell of gas, keep it out of their reach because the fumes are explosive and dangerous to inhale.

BEFORE OPERATING

1. Remove cap from the fuel tank and fill the 6 gallon tank to within 1 inch from the top with unleaded gasoline. Install fuel tank cap tightly.

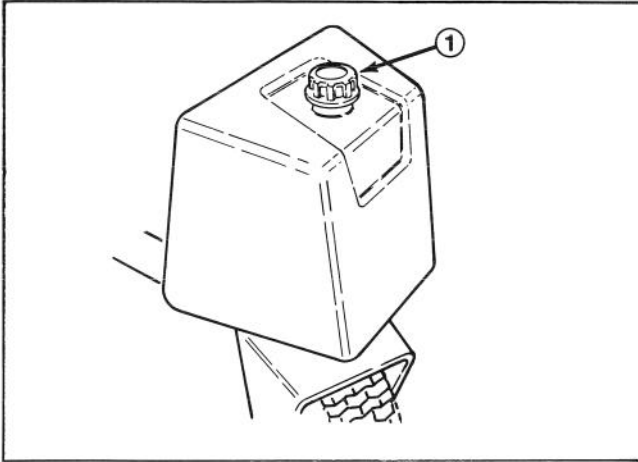


Figure 20

1. Fuel tank cap

2. Wipe up gasoline that may have spilled to prevent a fire hazard.

CHECK HYDRAULIC SYSTEM FLUID (Fig. 21)

The hydraulic system is designed to operate with Mobil DTE26 or equivalent anti-wear hydraulic fluid. The machine's reservoir is filled at the factory with approximately 3½ gallons of fluid. However, check level of hydraulic fluid before engine is first started and daily thereafter.

Hydraulic Oil (Recommended brands): (ISO 68)

Mobil	DTE 26
Shell	Tellus 68
Amoco	Rykon Oil #68
Conoco	Super Hydraulic Oil 68
Exxon	Nuto H 68
Kendall	Kenol R&O AW 68
Pennzoil	Penreco 68
Phillips	Magnus A 68
Standard	Energol HLP 68
Sun	Sunvis 831 WR
Union	Unaz AW 68

Note: All are interchangeable.

IMPORTANT: Use only hydraulic oils specified. Other fluids could cause system damage.

Note: A red dye additive for the hydraulic system oil is available in 2/3 oz (20 ml) bottles. One bottle is sufficient for 4-6 gal (15-23 l) of hydraulic oil. Order Part No. 44-2500 from your Authorized Toro Distributor.

1. Position machine on a level surface.
2. Remove dipstick cap from filler neck and wipe it with a clean rag. Insert dipstick cap into filler neck; then remove it and check level of fluid. Fluid level should be between marks on dipstick, add Mobil DTE26 or equivalent fluid to raise level to full mark. Do not overfill.

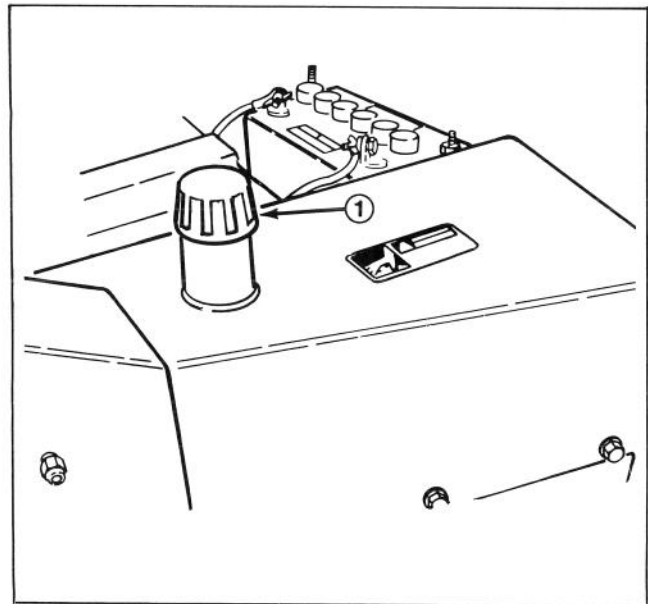


Figure 21

1. Dipstick filler cap

3. Install dipstick filler cap onto filler neck.

CHECK TIRE PRESSURE

The tires are over-inflated for shipping. Therefore, release some of the air to reduce the pressure. Correct air pressure in front and rear tires is 12 to 16 psi.

CONTROLS

Traction Pedal (Fig. 22 & 23) — Traction pedal has two functions: one, to make the machine move forward, the other, to make it move rearward. Using the heel and toe of the right foot, depress top of pedal to move forward and bottom of pedal to move rearward. **For operator comfort, do not rest heel of foot on reverse when operating forward.**

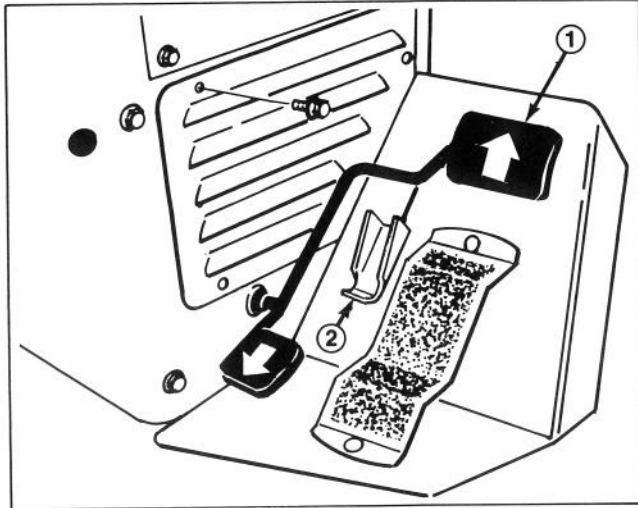


Figure 22

1. Traction pedal
2. Traction pedal stop (forward)

Traction Pedal Stop (Fig. 22) — Used in conjunction with traction pedal to maintain a constant mowing speed. Adjust so pedal contacts stop at desired forward speed. The reverse pedal stop (under pedal) is set at the factory to provide 3 M.P.H. maximum speed in the reverse direction.

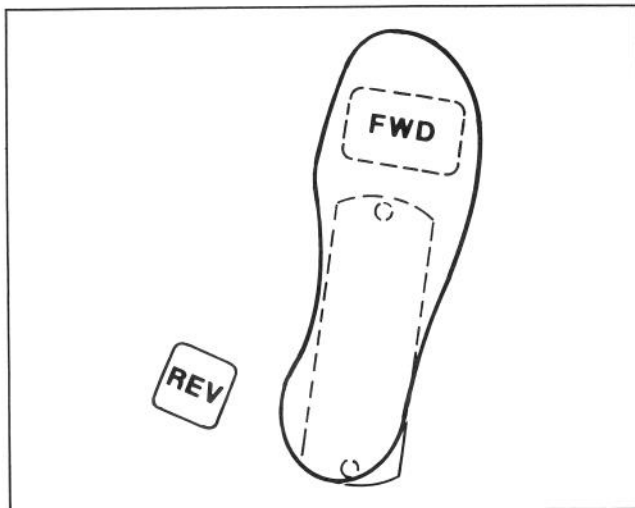


Figure 23

Ignition Switch (Fig. 24) — The ignition switch, used to start and stop the engine, has three positions: OFF, RUN and START. Rotate key clockwise — START position — to engage starter motor. Release key when engine starts. The key will move automatically to the ON position. To shut engine off, rotate key counter-clockwise to OFF position.

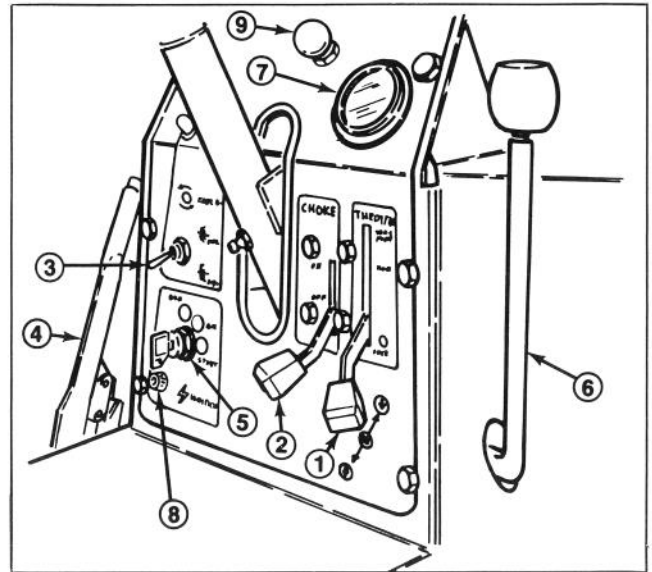


Figure 24

- | | | |
|------------------------------|----------------------------|----------------|
| 1. Throttle control | 4. Parking brake | 7. Hour meter |
| 2. Choke control | 5. Ignition switch | 8. Fuse holder |
| 3. Cutting unit drive switch | 6. Cutting unit lift lever | 9. Hood latch |

Choke (Fig. 24) — To start a cold engine, close carburetor choke by moving choke control upward to ON position. After engine starts, regulate choke to keep engine running smoothly. As soon as possible, open the choke by pulling it downward to the OFF position. A warm engine requires little or no choking.

Throttle (Fig. 24) — Throttle is used to operate engine at various speeds. Moving throttle upward increases engine speed, downward decreases engine speed. The throttle controls the speed of the reel blades and, in conjunction with traction pedal, controls ground speed of the machine. Position control in MOW for normal cutting. To attain TRANSPORT, move control to MOW, push control to right, then up to transport.

Cutting Unit Lift Lever (Fig. 24) The lift lever has three positions: LOWER, RAISE, and NEUTRAL. To lower cutting units to the ground, move lift lever forward. When lowering cutting units, make sure hydraulic cylinder is completely retracted before releasing lift lever. To raise cutting units, pull lift lever rearward to the RAISE position. Cutting units will not operate unless cylinder is retracted or when lifted. To decrease play in lever, tighten retaining locknut.

Cutting Unit Drive Switch (Fig. 24) — The switch has two positions: ENGAGE and DISENGAGE. Toggle switch engages electromagnetic clutch to drive cutting units. Amber light on dash indicate when reels are rotating.

Hour Meter (Fig. 24) — Indicates the total hours of machine operation. The Hour Meter starts to function whenever the key switch is rotated to "ON" position.

Fuse Holder (Fig. 24) — A 30 Amp fuse protects the starter circuit. To replace fuse, rotate knob counter-

CONTROLS

clockwise and remove fuse from case. Install fuse, insert knob and rotate clockwise to secure in panel.

Parking Brake (Fig. 24) — Whenever the engine is shut off, the parking brake must be engaged to prevent accidental movement of the machine. To engage the parking brake, pull back on lever. After releasing parking break, move slightly in reverse to release brakes before moving forward.

Seat Adjustments — Fore and Aft Adjustment — Move lever on side of seat outward, slide seat to desired position and release lever to lock seat into position.

Deluxe Seat Adjustments (Fig. 25) — Weight Adjustment — Push lever up or down to adjust to operator's weight. Lever up — light operator, lever in middle position — medium weight operator or lever down for heavy operator. (Deluxe Seat only).

Inclining Backrest — Turn handle to adjust angle of backrest. (Deluxe Seat only).

Fuel Shut-off Valve (located behind seat) — Close fuel shut-off valve when storing machine.

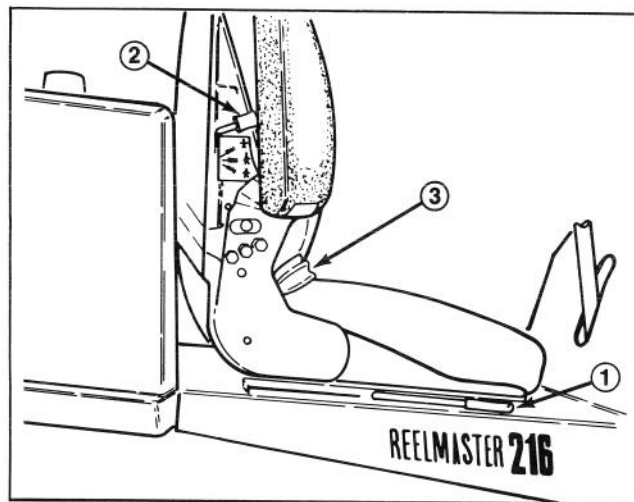


Figure 25

1. Fore and aft lever
2. Weight adjustment lever
3. Inclining backrest knob

OPERATING INSTRUCTIONS

STARTING/STOPPING ENGINE

1. Be sure parking brake is set and Reel Drive switch is in DISENGAGE position.

Note: After hand brake is released, run vehicle in opposite direction of resistance to fully release brake.

2. Remove foot from traction pedal and make sure pedal is in neutral position.

3. Move choke lever to ON position — when starting a cold engine — and throttle lever to half throttle position.

4. Insert key into ignition switch and rotate it clockwise to start the engine. Release key when engine starts. Regulate the choke to keep engine running smoothly.

IMPORTANT: To prevent overheating of the starter motor, do not engage starter longer than 10 seconds. After 10 seconds of continuous cranking, wait 60 seconds before engaging starter motor again.

5. When engine is started for the first time, or after overhaul of the engine, operate the machine in forward and reverse for one to two minutes. Also operate the lift lever and reel drive switch to be sure of proper operation of all parts.

Turn steering wheel to the left and right to check steering response. Then shut engine off and check for oil leaks, loose parts and any other noticeable malfunctions.



CAUTION

Shut engine off and wait for all moving parts to stop before checking for oil leaks, loose parts and other malfunctions.

6. To stop engine, move throttle control downward to IDLE position, move reel drive switch to DISENGAGE and rotate ignition key to OFF. Remove key from switch to prevent accidental starting.

7. Close fuel shut off valve before storing machine.

OPERATING INSTRUCTIONS

CHECK OPERATION OF INTERLOCK SWITCHES



CAUTION

Do not disconnect the safety switches because they are for the operator's protection. Check operation of the switches daily to be sure the interlock system is operating correctly. If a switch is not operating properly, replace it before operating the machine. Replace the switches every two years to be sure of maximum safety.

1. With operator off the seat, traction pedal in neutral and cutting unit clutch switch in disengage position, the engine should start. If either the traction pedal is depressed or the cutting unit clutch switch is engaged, the engine should stop. Correct problem if not operating properly.

2. With operator in the seat, engine running, and cutting unit clutch switch engaged, the clutch should be engaged, the dash indicator light glowing and the jackshaft turning when the lift cylinder is fully retracted. As the lift cylinder is extended, the light should go out, the clutch disengage and the jackshaft stop turning. Correct problem if not operating properly.

3. With operator on seat, engine running, clutch switch engaged, cutting units lowered and lift cylinder fully retracted, reels should turn and dash indicator light should glow. If reels do not turn and light does not glow, an adjustment to the cutting unit interlock switch may be necessary.

- A. Stop engine and set parking brake.
- B. Make sure cutting units are completely lowered and lift cylinder is fully retracted.
- C. Locate cutting unit interlock switch on left side of machine on bottom of hydraulic cylinder.
- D. Rotate screw out until switch is activated. Check continuity when switch is activated.
- E. Check operation and repeat adjustment, if necessary.

TRAINING PERIOD

Before mowing with the Reelmaster 216, The Toro Company suggests you find a clear area and practice starting and stopping, raising and lowering cutting units, turning, etc. This training period will be beneficial to the operator in gaining confidence in the performance of the Reelmaster 216.

BEFORE MOWING

Inspect the area for debris and clear area if necessary. Determine the direction best to mow on the previous mowing direction. Always mow in an alternate pattern from the previous mowing, so that the grass blades will be less apt to lay down and therefore be difficult to gather between the reel blades and bedknife.

OPERATING CHARACTERISTICS

Practice operating the Reelmaster 216 and become thoroughly familiar with it. Because of its hydrostatic transmission and choices of either two or three wheel drive, its characteristics differ from many turf maintenance machines. Points to consider when operating are the traction drive, engine speed and load on the cutting units. Regulate the traction pedal to keep engine rpm high and somewhat constant while mowing to maintain adequate power for the traction and cutting units. Adjust the traction pedal stop to maintain constant ground speed and quality of cut. However, when on hilly terrain or in TRANSPORT throttle position, do not use the pedal stop.

TRANSPORT OPERATION

Be sure the cutting units are in fully up position, move traction pedal stop from under pedal to allow full traction pedal travel and place throttle control in TRANSPORT position. While operating on slopes and uneven terrain, always reduce speed and use extreme caution before turning to reduce risk of tipping or losing control. Watch carefully for, and avoid, holes in the terrain, sudden drop-offs and other hidden hazards. To prevent costly damage and downtime, familiarize yourself with the width of the Reelmaster 216. Do not attempt to pass between immovable objects placed close together.

INSPECTION AND CLEAN-UP AFTER MOWING

At the completion of mowing operation, thoroughly wash the machine with a garden hose **without a nozzle** so excessive water pressure will not cause contamination and damage to seals and bearings. Make sure cooling fins and area around engine cooling air intake are kept free of dirt or grass clippings. After cleaning, it is recommended the machine be inspected for possible hydraulic fluid leaks, damage or wear to hydraulic and mechanical components and the cutting units checked for sharpness and proper reel to bedknife adjustment.

ADJUST STEERING COLUMN (Fig. 26)

1. Raise hood
2. Remove capscrew securing steering column to frame bracket.
3. Adjust steering column to desired operating position and reinstall capscrew.

OPERATING INSTRUCTIONS

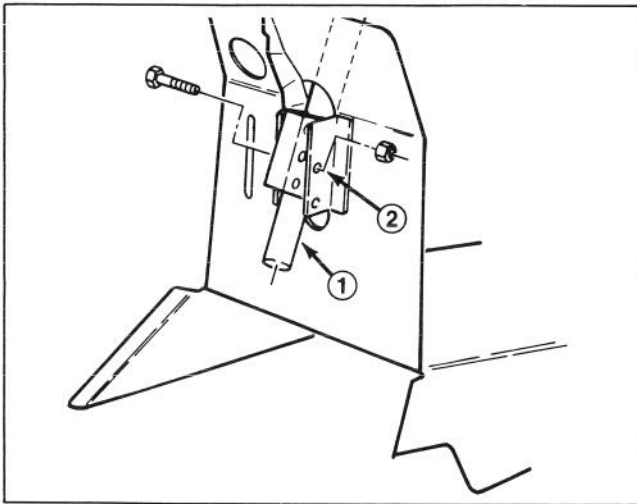


Figure 26

1. Steering column
2. Frame bracket

TOWING TRACTION UNIT

In case of an emergency, the Reelmaster 216 can be towed for a short distance. However, Toro does not recommend this as a standard procedure.

IMPORTANT: Do not tow the machine faster than 2-3 mph because drive system may be damaged. If machine must be moved a considerable distance, transport it on a truck or trailer.

1. Reach under front of machine and rotate by-pass valve, located on pump, counterclockwise until it is fully open.
2. Before starting engine, close by-pass valve securely by rotating it clockwise. Do not exceed 5-8 ft-lb torque. Do not start engine when valve is open.

CUTTING UNIT CHARACTERISTICS

The single knob bedknife-to-reel adjustment system incorporated in this cutting unit simplifies the adjustment procedure needed to deliver optimum mowing performance. The precise adjustment possible with the single knob/bedbar design gives the necessary control to provide a continual self-sharpening action — thus maintaining sharp cutting edges,

assuring good quality-of-cut, and greatly reducing the need for routine backlapping.

In addition, the rear roller positioning system permits optimum bedknife attitude and location for varying height-of-cuts and turf conditions.

CUTTING UNIT DAILY ADJUSTMENTS

Prior to each day's mowing, or as required, each cutting unit must be checked to verify proper bedknife-to-reel contact. **This must be performed even though quality of cut is acceptable.**

1. Shut off engine and lower cutting units onto a hard surface.
2. Release belt tension to cutting units, refer to Releasing Belt Tension to Cutting Units, page 23.
3. Slowly rotate reel in reverse direction listening for reel-to-bedknife contact. If no contact is evident, turn bedknife adjusting knob clockwise, one click at a time, until light contact is felt and heard.
4. If excessive contact is felt, turn bedknife adjusting knob counterclockwise, one click at a time until no contact is evident. Then turn bedknife adjusting knob one click at a time clockwise, until light contact is felt and heard.

IMPORTANT: Light contact is preferred at all times. If light contact is not maintained, bedknife/reel edges will not sufficiently self-sharpen and dull cutting edges will result after a period of operation. If excessive contact is maintained, bedknife/reel wear will be accelerated, uneven wear can result, and quality of cut may be adversely affected.

Note: As the reel blades continue to run against the bedknife a slight burr will appear on the front cutting edge surface the full length of the bedknife. If a file is occasionally run across the front edge to remove this burr, improved cutting can be obtained.

After extended running, a ridge will eventually develop at both ends of the bedknife. These ridges must be rounded off or filed flush with cutting edge of bedknife to assure smooth operation.

LUBRICATION

GREASING BEARINGS AND BUSHINGS

The traction unit and cutting units have grease fittings that must be lubricated regularly with No. 2 General Purpose Lithium Base Grease. If machine is operated under normal conditions, lubricate bearings and bushings after every 25 hours of operating. Bearings and bushings must be lubricated daily when operating conditions are extremely dusty and dirty. Dusty and dirty operating conditions could cause dirt to get into the bearings and bushings, resulting in accelerated wear.

The traction unit has bearings and bushings that must be lubricated and these lubrication points are:

Steering column (Fig. 27), steering shaft (2), rear castor fork (Fig. 28), jackshaft pulley bearing (2), lift arms (3) (Fig. 29) rear axle, pivot rods (3) (Fig. 30) and belt tensioner (Fig. 31).

The cutting unit lubrication points are: Single point knob adjustment knob (2) (Fig. 32), reel flange bearing (2) (Fig. 33) and front and rear rollers (Fig. 33).

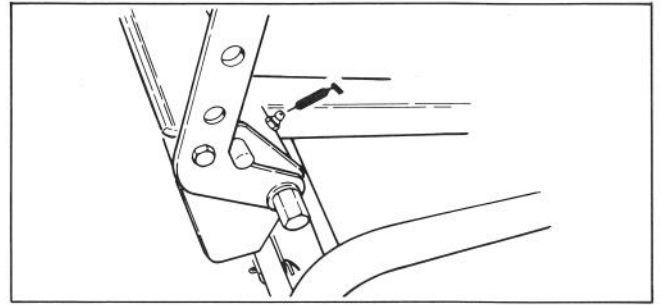


Figure 29

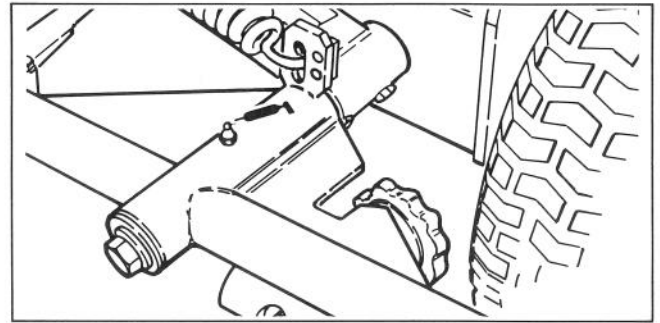


Figure 30

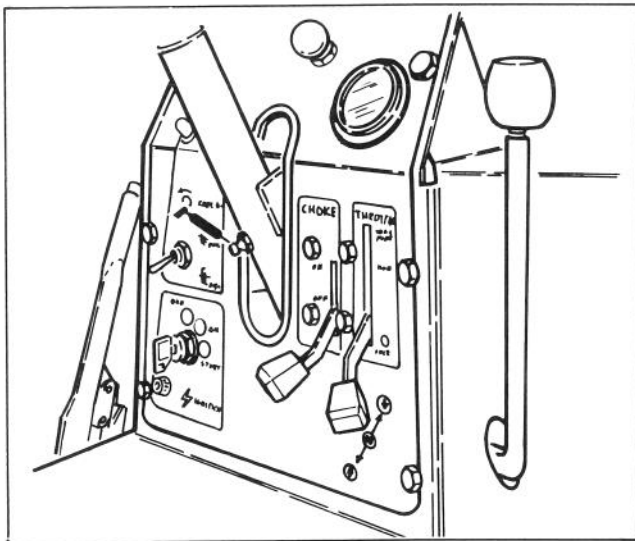


Figure 27

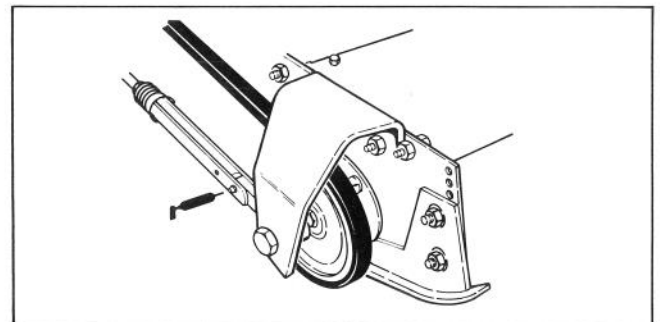


Figure 31

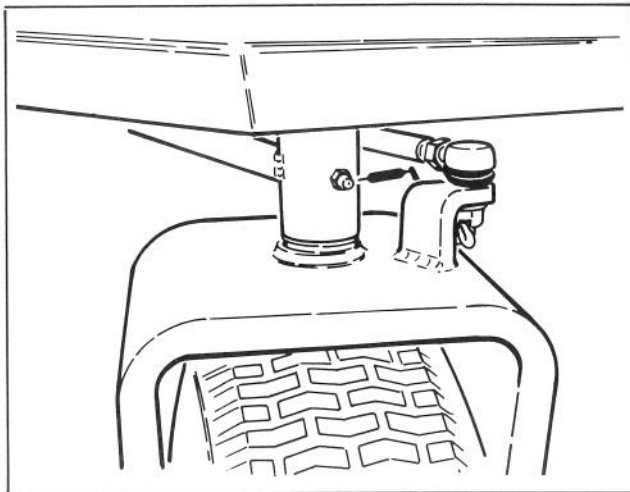


Figure 28

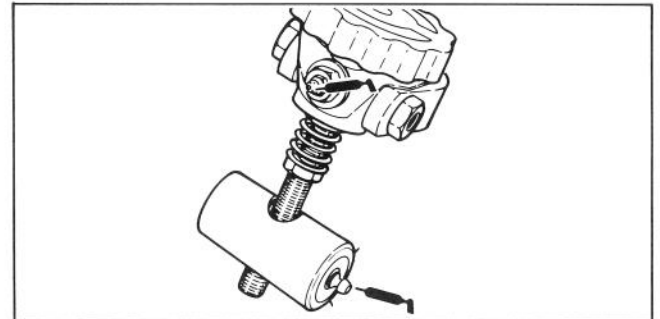


Figure 32

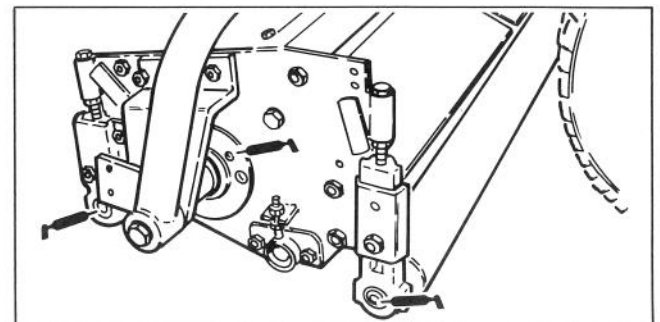


Figure 33

MAINTENANCE

CHANGING CRANKCASE OIL (Fig. 34)

For new engines, change oil after first 5 operating hours. Thereafter, under normal conditions, change oil after every 25 hours of engine operation. However, an engine operated in dusty or dirty conditions requires more frequent oil changes. If possible, run engine just before changing oil. Warm oil flows more freely and carries more contaminants than cold oil.

1. Place an oil drain pan below the drain plug on rear of crankcase. Clean area around drain plug.
2. Remove drain plug and allow oil to flow into drain pan. After oil is drained, reinstall oil drain plug.

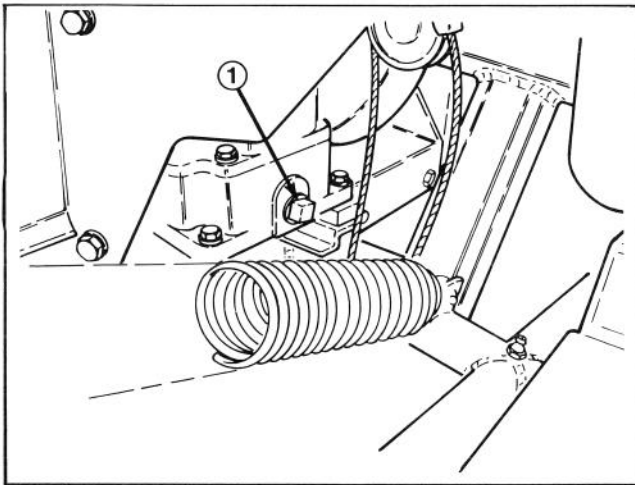


Figure 34

1. Crankcase drain plug

3. Remove filler cap and pour 5¼ pints of oil having the API "service classification" SE or SF into the filler neck. Oil viscosity — weight — is selected according to anticipated ambient temperature. Temperature/viscosity recommendations are:

- A. Above +32°F (0°C) — Use SAE 30, and if it is not available, 10W-30 or 10W-40 are acceptable substitutes.
- B. Below 32°F (0°C) — Use SAE 5W-20 or 5W-30, and if they are not available, 10W-30 or 10W-40 are acceptable substitutes.

4. Check oil and make sure level is up to the FULL mark on dipstick. Add more oil if level is low; however, DO NOT OVERFILL.

SERVICING AIR CLEANER (Fig. 35-36)

The foam pre-cleaner must be cleaned and re-oiled after every 25 hours engine operation if engine is operated in clean air conditions. However, air cleaner must be cleaned every few hours if operating conditions are extremely dusty or sandy.

1. Remove lock nut and cover.

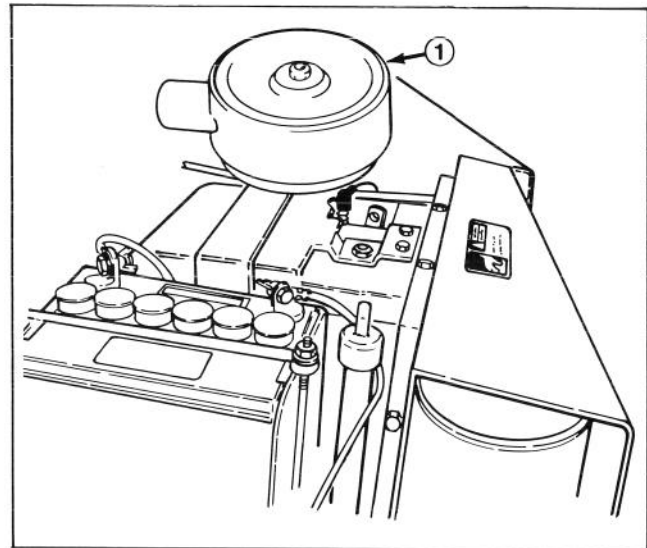


Figure 35

1. Air cleaner cover

2. Remove foam pre-cleaner by sliding it off the paper element.

3. a. Wash foam pre-cleaner in detergent and warm water.
- b. Wrap foam pre-cleaner in cloth and squeeze dry. Do not wring pre-cleaner.
- c. Saturate foam pre-cleaner in engine oil. Squeeze to remove excess oil.

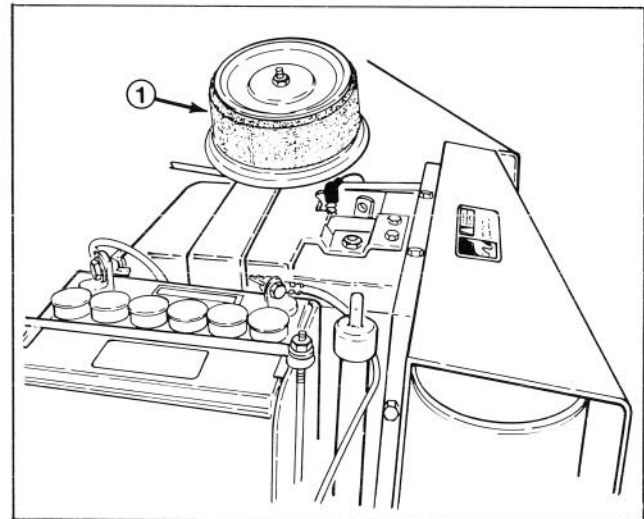


Figure 36

1. Foam pre-cleaner

4. Reinstall on paper cartridge.

Inspect paper element every 50 hours of operation and replace when dirty or damaged. Do not wash paper element or do not clean with compressed air as damage will occur.

Note: With air cleaner disassembled, check air cleaner components for damage. Replace if neces-

MAINTENANCE

sary. Make sure rubber breather tube in base plate is securely in place or severe engine damage may occur.

5. Reinstall element with pre-cleaner, element cover seal, air cleaner element cover, nut, air cleaner cover and lock nut.

6. Tighten lock nut 1/2 to 1 turn after nut contacts cover. Do not overtighten.

ADJUSTING CARBURETOR (Fig. 37)

Lack of power accompanied by black sooty exhaust smoke is usually caused by a rich carburetor setting. Since a dirty air cleaner element causes the same conditions, check it before adjusting carburetor.

High RPM Setting — 3600 ± 100
Low RPM Setting — 1200 ± 100

IMPORTANT: Check to make sure the choke is operating correctly before the carburetor is adjusted.

1. Main fuel screw — Close screw by gently rotating it clockwise.

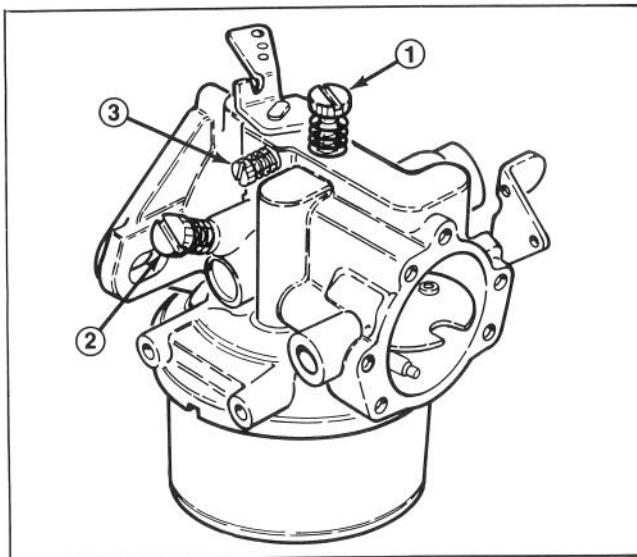


Figure 37

1. Main fuel screw
2. Idle fuel adjusting screw
3. Idle speed screw

IMPORTANT: Do not close the screw too tight because the screw will likely be damaged.

2. Rotate — open — the main fuel screw 3½ turns counterclockwise.

3. Idle fuel adjusting screw — Close screw by gently rotating it clockwise. Open screw by rotating it 2-1/2 turns counterclockwise.



WARNING

Engine must be running so final adjustment of the carburetor can be performed. To guard against possible personal injury, keep hands, feet, face and other parts of the body away from the muffler, other hot parts of the engine, and other moving or rotating parts of the engine. Assure reel switch is in DISENGAGE position and cutting units are on the shop floor. Also engage parking brake.

IMPORTANT: Do not close the screw too tightly because the screw will likely be damaged.

Note: These settings are approximate; however, the settings will allow engine to be started so carburetor can be fine tuned — steps 4-7.

4. Start engine and let it run for 5-10 minutes at half throttle to warm up. Engine must be warm before making final adjustments.

5. Move throttle to TRANSPORT position. Turn main fuel screw in until speed decreases and note position of screw. Now turn screw out — the engine speed may first increase, then it will decrease as screw is turned. Note the position of screw when engine speed starts to decrease. Set the screw at the midpoint of the two positions noted.

6. To adjust idle fuel adjusting screw, follow same procedure as for main fuel but more throttle to IDLE after 5-10 minute warm up and make adjustment.

7. Idle Speed Setting — Run engine at half-throttle for 5-10 minutes to warm up. Move throttle to IDLE and set engine speed to 1200 RPM by turning the idle speed adjusting screw clockwise or counterclockwise.

CHECKING AND REPLACING SPARK PLUG

Since air gap between center and side electrodes increases gradually during normal engine operation, check condition of electrodes at 100 hour intervals. The correct spark plug to use in the engine is Champion RH-10 or equivalent. Set air gap at .025 in.

1. Clean area around spark plug so dirt does not fall into cylinder when plug is removed.

2. Pull wire off spark plug and remove plug from cylinder head.

MAINTENANCE

3. Check condition of center and side electrodes to determine operating temperature of engine.
 - A. Light brown insulator tip indicates correct spark plug and heat range.
 - B. Black or oily insulator tip indicates an excessively rich fuel mixture, possibly caused by a dirty air cleaner element or a carburetor that is set too rich.
 - C. Light gray or blistered-white insulator indicates overheating caused by a lean carburetor setting or incorrect spark plug (heat range too high).

IMPORTANT: A cracked, fouled or dirty spark plug must be replaced. Do not sandblast, scrape or clean electrodes by using a wire brush because grit may release from the plug and enter combustion chamber resulting in engine damage.

4. After setting air gap at .025", install spark plug in cylinder head. Tighten the plug to 10-15 ft-lb. Push wire onto spark plug.

CLEANING CYLINDER HEAD FINS

To avoid overheating and possible engine damage, cooling fins on cylinder head must be kept clean.

CHANGING HYDRAULIC SYSTEM FLUID AND FILTER

The hydraulic system filter must be changed initially, after the first five hours of operation, and thereafter every 250 hours of operation or yearly, whichever comes first. Use a genuine Toro oil filter for replacement. The hydraulic fluid must be changed every 500 hours of operation or yearly, whichever comes first.

1. Park the machine on a level surface lower the cutting units, set parking brake and turn the engine off.
2. If only the filter is to be changed, remove reservoir cap and insert reservoir plug (Fig. 38), to block

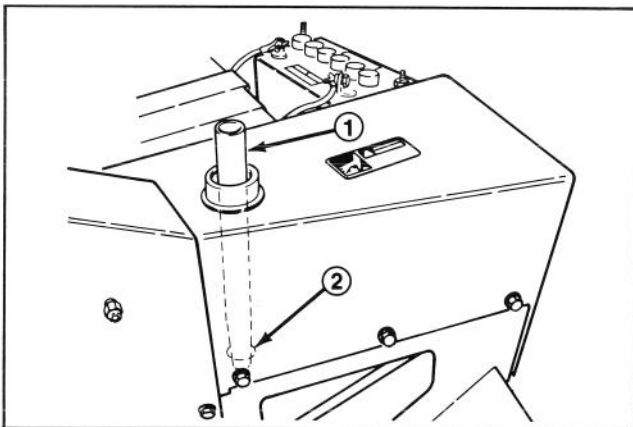


Figure 38

1. Reservoir Plug 2. Reservoir Outlet

outlet. This will retain most of the fluid in reservoir when filter is removed.

3. Clean the area around the hydraulic oil filter and remove the filter from the bottom of the filter housing, allowing the oil to flow into a drain pan. Use bottom type filter wrench. Dispose of the oil filter properly.
4. Apply a film of oil on the filter gasket. Install filter by hand until gasket contacts mounting head; then tighten filter an additional three-fourths turn.
5. Fill the reservoir to proper level, refer to Check Hydraulic System Fluid, page 14.
6. Place all controls in neutral or disengaged position and start engine. Run engine at lowest possible RPM to purge the system of air.
7. Run engine until lift cylinder extends and retracts and forward and reverse wheel motion is achieved.
8. Stop the engine and check the oil level in reservoir, add oil if necessary.
9. Check all connections for leaks.

REPLACING FUEL FILTER

An in-line filter is incorporated into the fuel line. Use the following procedures should replacement become necessary:

1. Close fuel shut-off valve.
2. Clamp both fuel lines that connect to the fuel filter so gasoline cannot drain when lines are removed.



CAUTION

Since gasoline is highly flammable, drain it outdoors and make sure engine is cool to prevent a potential fire hazard. Wipe up any gasoline that may have spilled. Do not drain gasoline near any open flame or where gasoline fumes may be ignited by a spark. Do not smoke a cigar, cigarette, or a pipe when handling gasoline.

3. Loosen the hose clamps at both ends of the filter and pull fuel lines off filter.
4. Slide hose clamps onto ends of fuel lines. Push fuel lines onto fuel filter and secure them with hose clamps. Be sure arrow on side of filter points toward the fuel carburetor.

MAINTENANCE

BATTERY CARE

1. Battery electrolyte level must be properly maintained and the top of the battery kept clean. If the machine is stored in a location where temperatures are extremely high, the battery will run down more rapidly than if the machine is stored in a location where temperatures are cool. To prevent battery from freezing, make sure it is fully charged. The specific gravity of a fully charged battery is 1.250.
2. Check the electrolyte level every 25 operating hours or, if machine is in storage, every 30 days.
3. Maintain cell level with distilled or demineralized water. Do not fill cells above the bottom of the split ring inside each cell.
4. Keep top of battery clean by washing periodically with a brush dipped in ammonia or bicarbonate of soda solution. Flush the top surface with water after cleaning. Do not remove the fill caps while cleaning.
5. Battery cables must be tight on terminals to provide good electrical contact.
6. If corrosion occurs at terminals, disconnect cables, negative (—) cable first and scrape clamps and terminals separately. Reconnect cables, positive (+) cable first and coat terminals with petroleum jelly.

BATTERY STORAGE

If the machine will be stored more than 30 days, remove the battery and charge it fully. Either store it on the shelf or on the machine. Leave the cables disconnected if stored on the machine. Store the battery in a cool atmosphere to avoid quick deterioration of the charge in the battery.

WIRING HARNESS SERVICE

Prevent corrosion of wiring terminals by applying Grafo 112X (Skin-over) grease, Toro Part No. 505-47, to the inside of all harness connectors whenever the harness is replaced.

Always disconnect battery cables, ground cable (—) first, to prevent possible wiring damage from short-outs whenever working with the electrical system.

ADJUSTING TRANSMISSION FOR NEUTRAL (Fig. 39)

If the machine "creeps" when the traction control pedal is in the neutral position, the spring leaf assembly must be adjusted.

1. Block up under the frame so one of the front wheels is off the floor. Place selector control in two wheel drive position.

2. Start engine, move throttle to SLOW and check front wheel that is off shop floor; it must not be rotating. If wheel is rotating forward, loosen capscrews and lightly tap bottom of pump plate counter-clockwise. By contrast, tap pump plate clockwise if wheel is rotating backward. When wheel stops rotating, tighten capscrews holding pump plate against side of pump. Verify the adjustment with throttle in SLOW and FAST position.

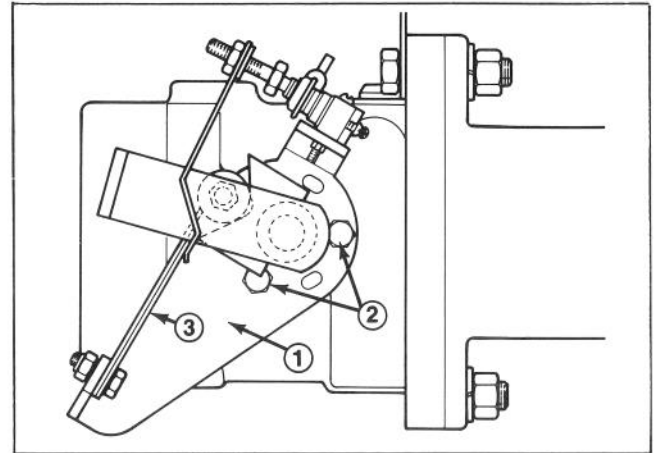


Figure 39

1. Pump plate
2. Capscrews
3. Leaf springs

3. Should the wheel continue to rotate, check for the following:
 - A. Ball bearing is loose or worn out.
 - B. Plunger on interlock switch is sticking.
 - C. loose or missing fasteners.
 - D. Worn missing fasteners.
 - E. Pump lever loose on control shaft. (Correct by applying Loc-tite 271 or 601 to shaft).
 - F. Weak or damaged leaf springs. Replace.
 - G. Internal pump component malfunction.

BELT ADJUSTMENTS

Make sure belts are properly tensioned to assure proper operation of the machine and unnecessary wear. Check all belts midway in span of belt. Check belts frequently.

1. The hydraulic pump belt should be tensioned securely to avoid slipping.
 - A. Tighten nut on adjustment rod (Fig. 40) until desired belt tension is attained.

Note: Tighten belt to eliminate slippage (squeeling under load) but do not overtighten.

MAINTENANCE

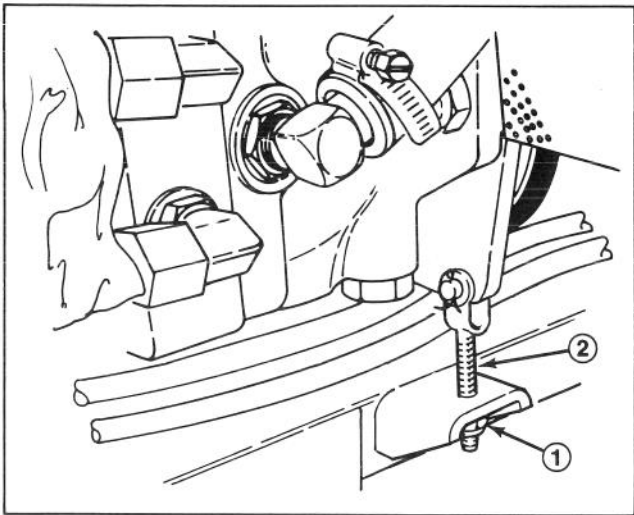


Figure 40

1. Nut
2. Adjustment Rod

2. The clutch to Jack Shaft belt (Poly-V belt) should be properly tensioned.

- A. Make sure the idler bracket and belt tensioner assembly are free to move.
- B. Adjust nut on belt tensioner (left side of engine) to compress spring to a length of $\frac{3}{4}$ ".

3. The cutting unit drive belts should have a maximum deflection of $\frac{1}{2}$ of an inch with a 10 pound load applied.

- A. Loosen jam nut on front end of belt tension rod. Rotate rod to lengthen or shorten rod to desired length. Tighten jam nut.

4. To release belt tension to cutting units, push retaining cup rearward and pivot yoke downward.

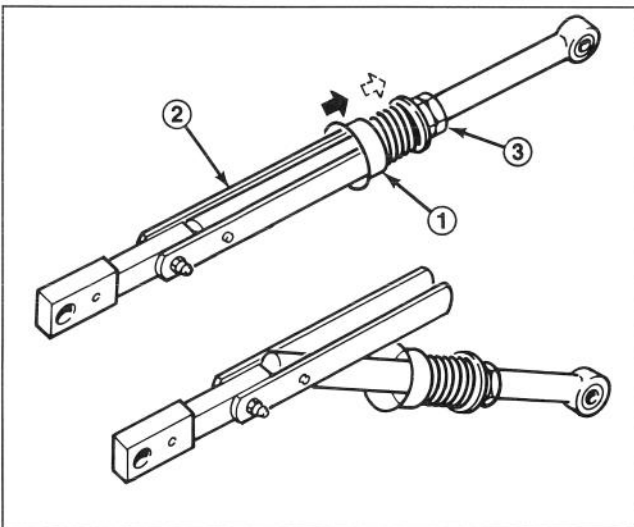


Figure 41

1. Belt tension rod cup retainer
2. Belt tension rod
3. Jam nut

ADJUSTING STEERING STOPS (Fig. 42)

To increase or decrease the turning radius of the machine when steering wheel is fully cramped right or left, steering stop screws may be adjusted.

1. Loosen locknuts securing stop screws to tabs on steering sector (Fig. 42).

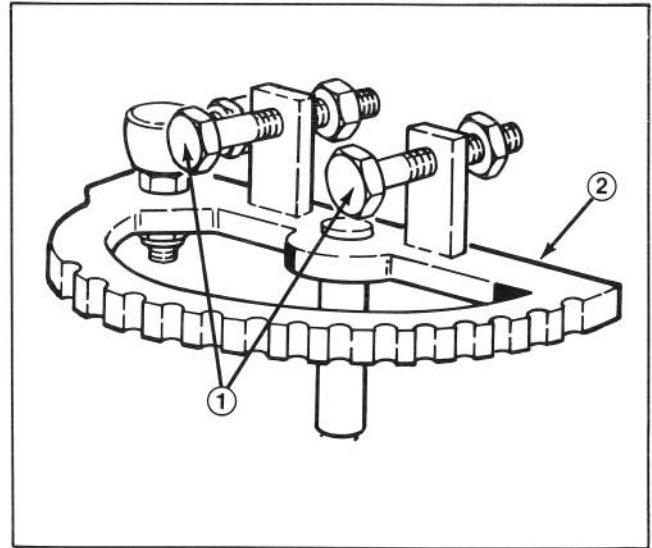


Figure 42

1. Stop screws
2. Steering sector

2. Thread stop screws in or out until desired turning radius is attained.

3. Check adjustment and retighten locknuts.

ADJUSTING TRACTION PEDAL (Fig. 43 & 44)

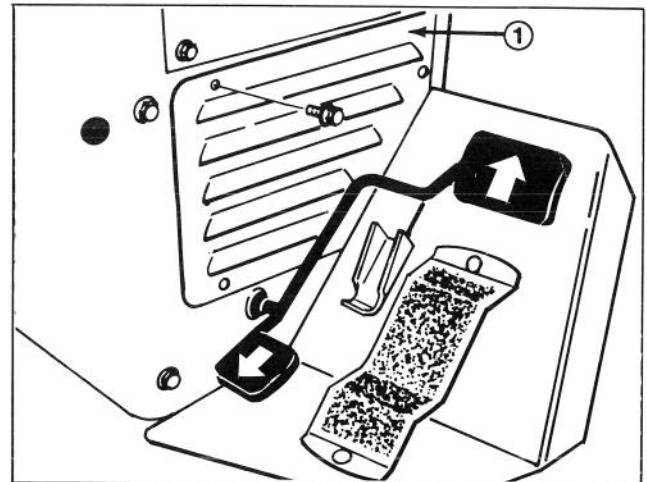


Figure 43

1. Support screen

MAINTENANCE

If traction pedal contacts footrest when pushed fully forward or maximum forward traction speed is unattainable, an adjustment to the traction pedal linkage is required. There should be 3/8 of an inch clearance between pedal shaft and footrest when pedal is pushed fully forward.

1. Remove (3) self tapping screws securing support screen to hydraulic support panel (Fig. 43). Remove screen.
2. Loosen jam nuts on each end of traction rod (Fig. 44).

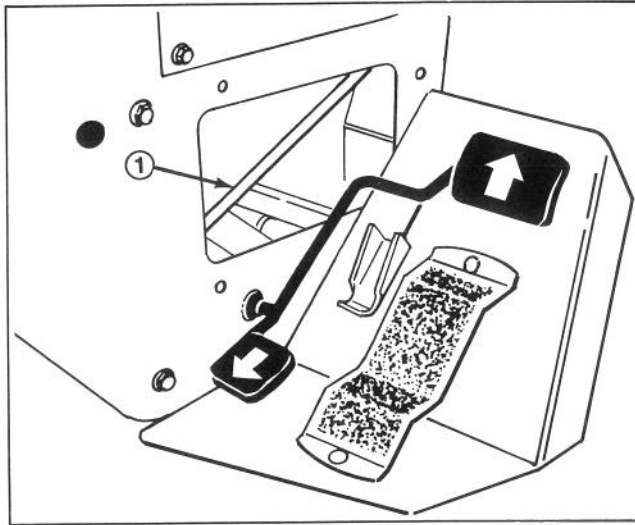


Figure 44
1. Traction rod

3. Rotate rod until 3/8" dimension between traction pedal shaft and footrest is attained.
4. Retighten jam nuts securing traction rod and reinstall support screen.
5. The stop for reverse travel (under pedal) may be adjusted for slower travel. Speeds in excess of 3 M.P.H. are not recommended.

ADJUSTING CLUTCH

The clutch is adjustable to ensure proper engagement.

1. To adjust clutch, tighten or loosen locknuts on flange studs.
2. Check adjustment by inserting feeler gauge thru slots next to flange studs.
3. The proper disengaged clearance between the clutch plates is .012 - .018 inches. It will be necessary to check this clearance at each of the three slots to ensure the plates are parallel to each other and equal at all (3) locations.

HAND BRAKE ADJUSTMENT

1. Remove both front wheels.

2. Insure that there are (4) return springs on each Return Spring Bracket. The upper (2) springs are stronger than the lower (2).

3. Check operation of the brake lever and linkage to ensure that it moves freely without binding.

4. A properly adjusted brake will have the following clearances:

- a. With handle fully released, the left Brake Shoe should rest solidly against the upper and lower Brake Spacers in an approximately centered position.
- b. There should be approximately 1/32" clearance between the LH Brake Arm and the Lug Nut.
- c. The Spring should be compressed to a length of 3/4" by the nut.
- d. The right Brake Shoe should have about 1/16" clearance from the upper and lower Brake Spacers in an approximately centered position. This may be readjusted as follows:

- 1) Loosen the (2) Capscrews, on the left Brake Arm, which hold the Slide Plates.
- 2) Place shims between the right Brake Shoe and the upper and lower Brake Spacers.
- 3) While holding the left brake shoe against the Brake Spacers, tap the Slide Plates down against the Roll Pin and secure the Slide Plates in this position.
- 4) Remove the shims from behind the right Brake Shoe.

5. Clean any rust or debris from inside the wheel rims and reinstall wheels.

6. After any brake adjustment, operate the vehicle at a low speed (one mph or less) and check that the brakes engage equally on both wheels. Readjust as necessary.

ADJUST HOOD LATCH

1. To adjust hood latch, loosen jam nuts on hood latch release lever and reposition in slot in control panel as required and/or loosen screws securing latch on hood and reposition as required.

BACKLAPPING CUTTING UNITS

The cutting units may be backlapped in position on the machine by releasing tensioning to the drive belts and removing the capscrew securing the left end of the carrier frame to the cutting unit. Otherwise, remove cutting units completely before backlapping.

MAINTENANCE

Connect a lapping machine to the capscrew on the left end of reelshaft with an extension coupler and a 9/16 socket. Backlap according to procedures in the Toro Sharpening Reel and Rotary Mowers Manual Form No. 80-300 PT.



CAUTION


Be careful when lapping the reel because contact with the reel or other moving parts can result in personal injury.




DANGER

Under no circumstances use a short handled paint brush. 29-9100 Handle assembly complete or individual parts are available from your local Authorized TORO Distributor.

HYDRAULIC SCHEMATIC

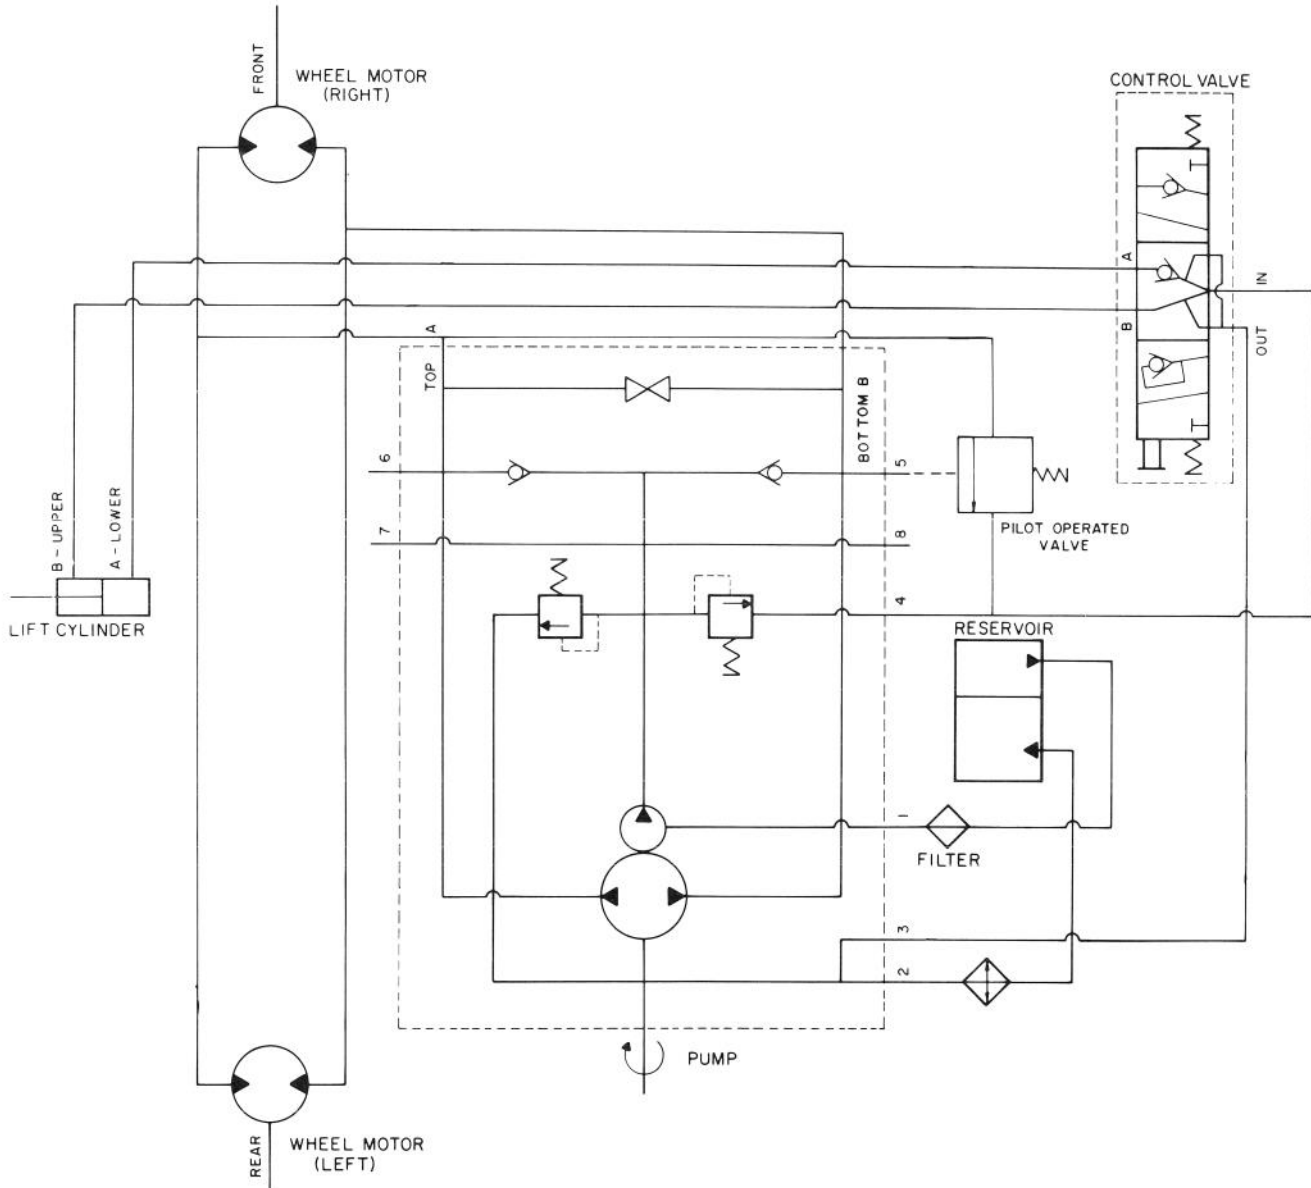

ELECTRICAL SCHEMATIC

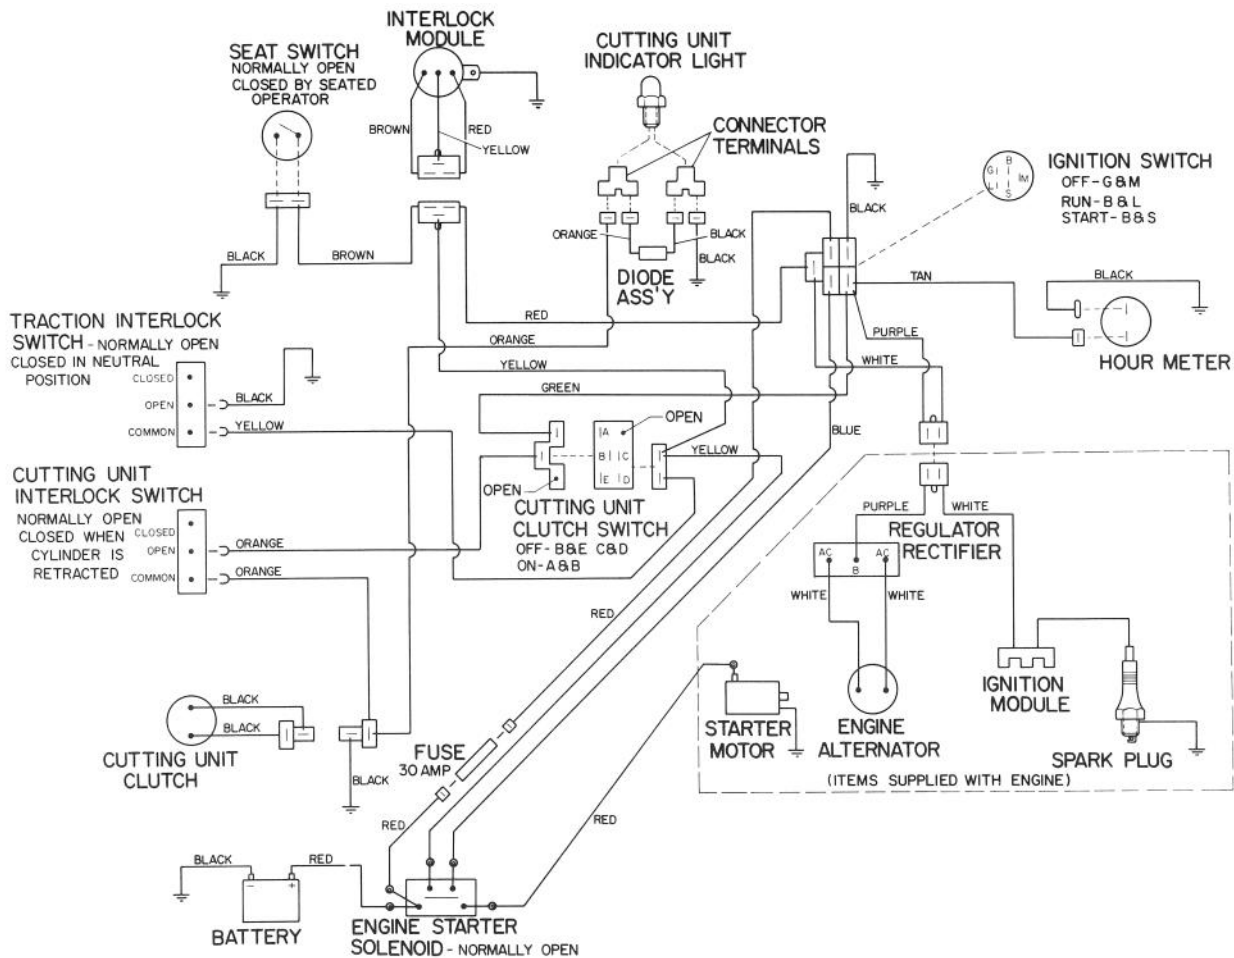

IDENTIFICATION AND ORDERING

The mower has two identification numbers: a model number and a serial number. The two numbers are stamped into a plate that is riveted to the frame at rear of mower. In any correspondence concerning the mower, supply the model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial numbers of the mower.
2. Part number, description and quantity of part(s) desired.

The Toro Promise

A ONE YEAR LIMITED WARRANTY

The Toro Company promises to repair your TORO Product if defective in materials or workmanship. The following time periods from the date of purchase apply:

Commercial Products 1 Year

The costs of parts and labor are included, but the customer pays the transportation costs on walk rotary mowers with cutting unit widths of less than 25".

If you feel your TORO product is defective and wish to rely on The Toro Promise, the following procedure is recommended:

1. Contact your Authorized TORO Distributor or Commercial Dealer (the Yellow Pages of your telephone directory is a good reference source).
2. The TORO Distributor or Commercial Dealer will advise you on the arrangements that can be made to inspect and repair your product.
3. The TORO Distributor or Commercial Dealer will inspect the product and advise you whether the product is defective and, if so, make all repairs necessary to correct the defect without an extra charge to you.

If for any reason you are dissatisfied with the distributor's analysis of the defect or the service performed, you may contact us.

Write:

TORO Commercial Products Service Department
8111 Lyndale Avenue South
Minneapolis, Minnesota 55420

The above remedy of product defects through repair by an Authorized TORO Distributor or Commercial Dealer is the purchaser's sole remedy for any defect.

THERE IS NO OTHER EXPRESS WARRANTY. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This Warranty applies only to parts or components which are defective and does not cover repairs necessary due to normal wear, misuse, accidents, or lack of proper maintenance. Regular, routine maintenance of the unit to keep it in proper condition is the responsibility of the owner.

All warranty repairs reimbursable under the Toro Promise must be performed by an Authorized TORO Commercial Dealer or Distributor using Toro approved replacement parts.

Repairs or attempted repairs by anyone other than an Authorized TORO Distributor or Commercial Dealer are not reimbursable under the Toro Promise. In addition, these unauthorized repair attempts may result in additional malfunctions, the correction of which is not covered by warranty.

THE TORO COMPANY IS NOT LIABLE FOR INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE USE OF THE PRODUCT INCLUDING ANY COST OR EXPENSE OF PROVIDING SUBSTITUTE EQUIPMENT OR SERVICE DURING PERIODS OF MALFUNCTION OR NON-USE.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their TORO Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason

you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.