



Form No. 3384-538 Rev A

Count on it.

Parts Catalog

48in E-Z Vac™ Blower and Drive Kit

Z Master® 2000 Series Mower

Model No. 78571—Serial No. 314000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquefied Petroleum Gas

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping


TTH: torx truss head

Contents

Blower and Drive Assembly 4

Idler Assembly 5

Blower Assembly 6

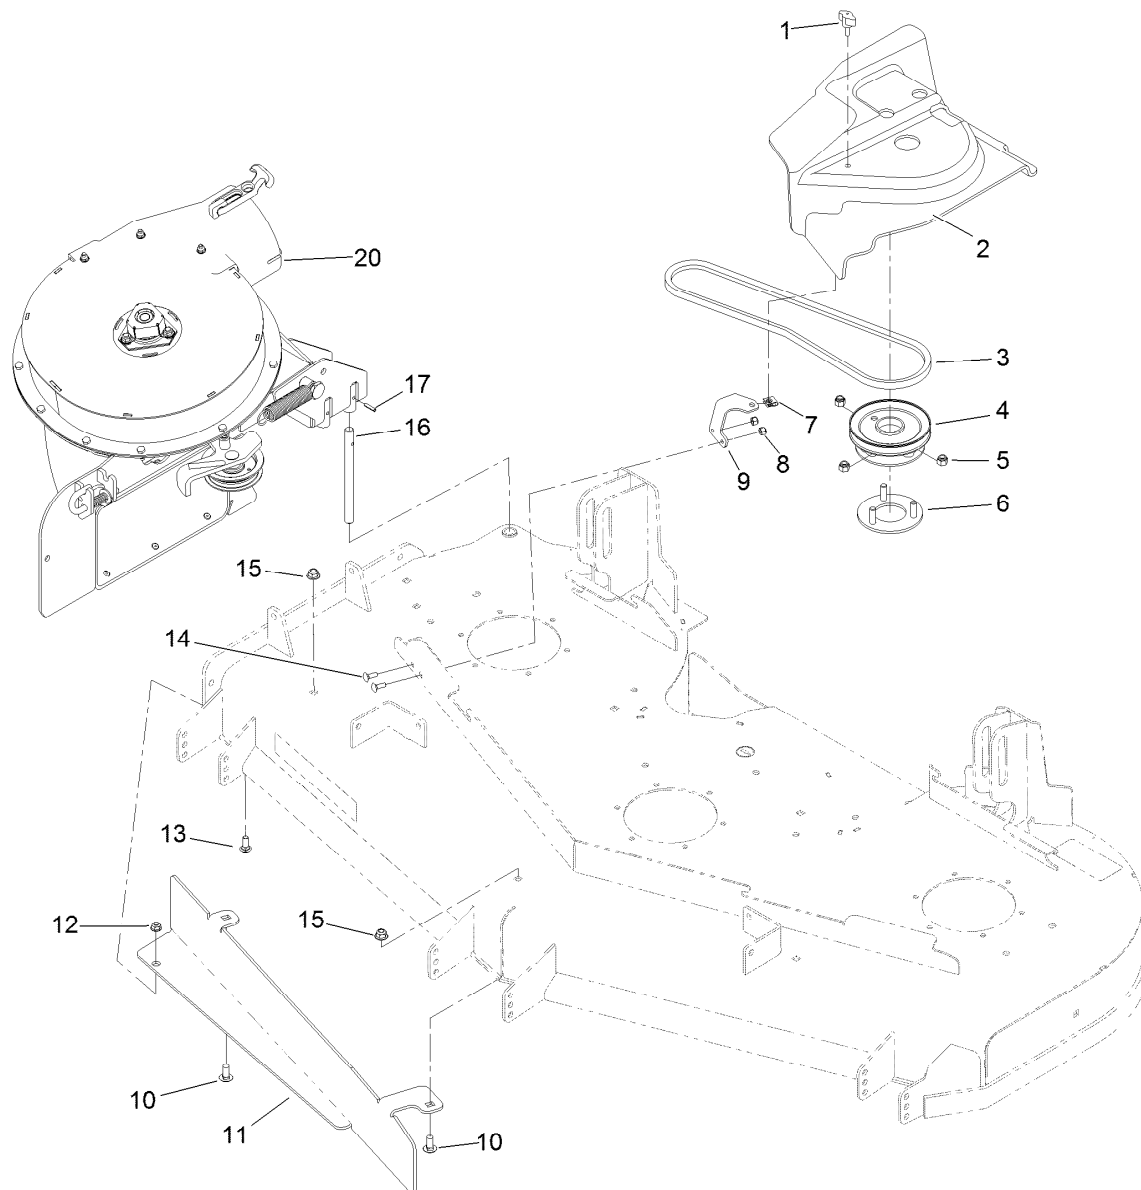


Blower and Drive Assembly

Ref.	Part Number	Qty.	Description
1	98-8332	1	Knob
2	117-8642	1	Cover-Belt
3	121-3224	1	Belt-V
4	112-8668-03	1	Blower Pulley ASM
5	3296-39	3	Nut-Lock, NI
6	121-3207	1	Pulley Mount ASM
7	609900	1	Nut-Speed
8	3296-42	2	Nut-Lock, NI
9	115-3637-01	1	Bracket-Belt Cover

Ref.	Part Number	Qty.	Description
10	3231-27	2	Screw-CARR
11	120-3249-01	1	Baffle-Bagger
12	104-8300	1	Nut-Flange, NI
13	3230-16	1	Screw-CARR
14	3229-1	2	Bolt-CARR
15	104-8301	2	Nut-Flange, NI
16	1-353050	1	Shaft-Catcher, Grass
17	1-806323	1	Pin-Roll
20		1	E-Z Vac Blower ASM ●


● Not serviced separately

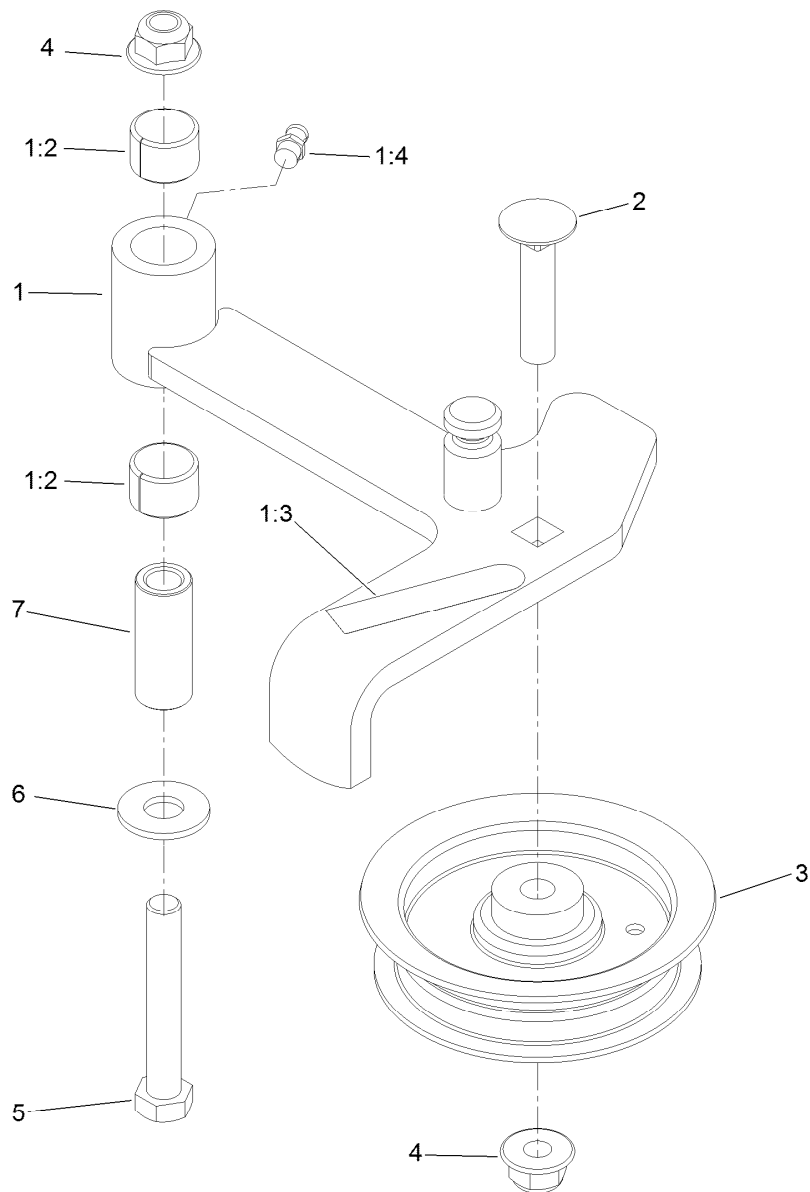

Idler Assembly

Ref.	Part Number	Qty.	Description
1	117-8638	1	Idler Arm With Bushing ASM
1:2	1-653600	2	Bushing
1:3	1-653558	1	Decal-Warning
1:4	302-19	1	Fitting-Grease
2	3231-5	1	Screw-CARR
3	103-1103	1	Idler-Flat
4	104-8301	2	Nut-Flange, NI
5	323-12	1	Screw-HH
6	3256-4	1	Washer-Flat
7	1-603044	1	Bushing

Blower Assembly

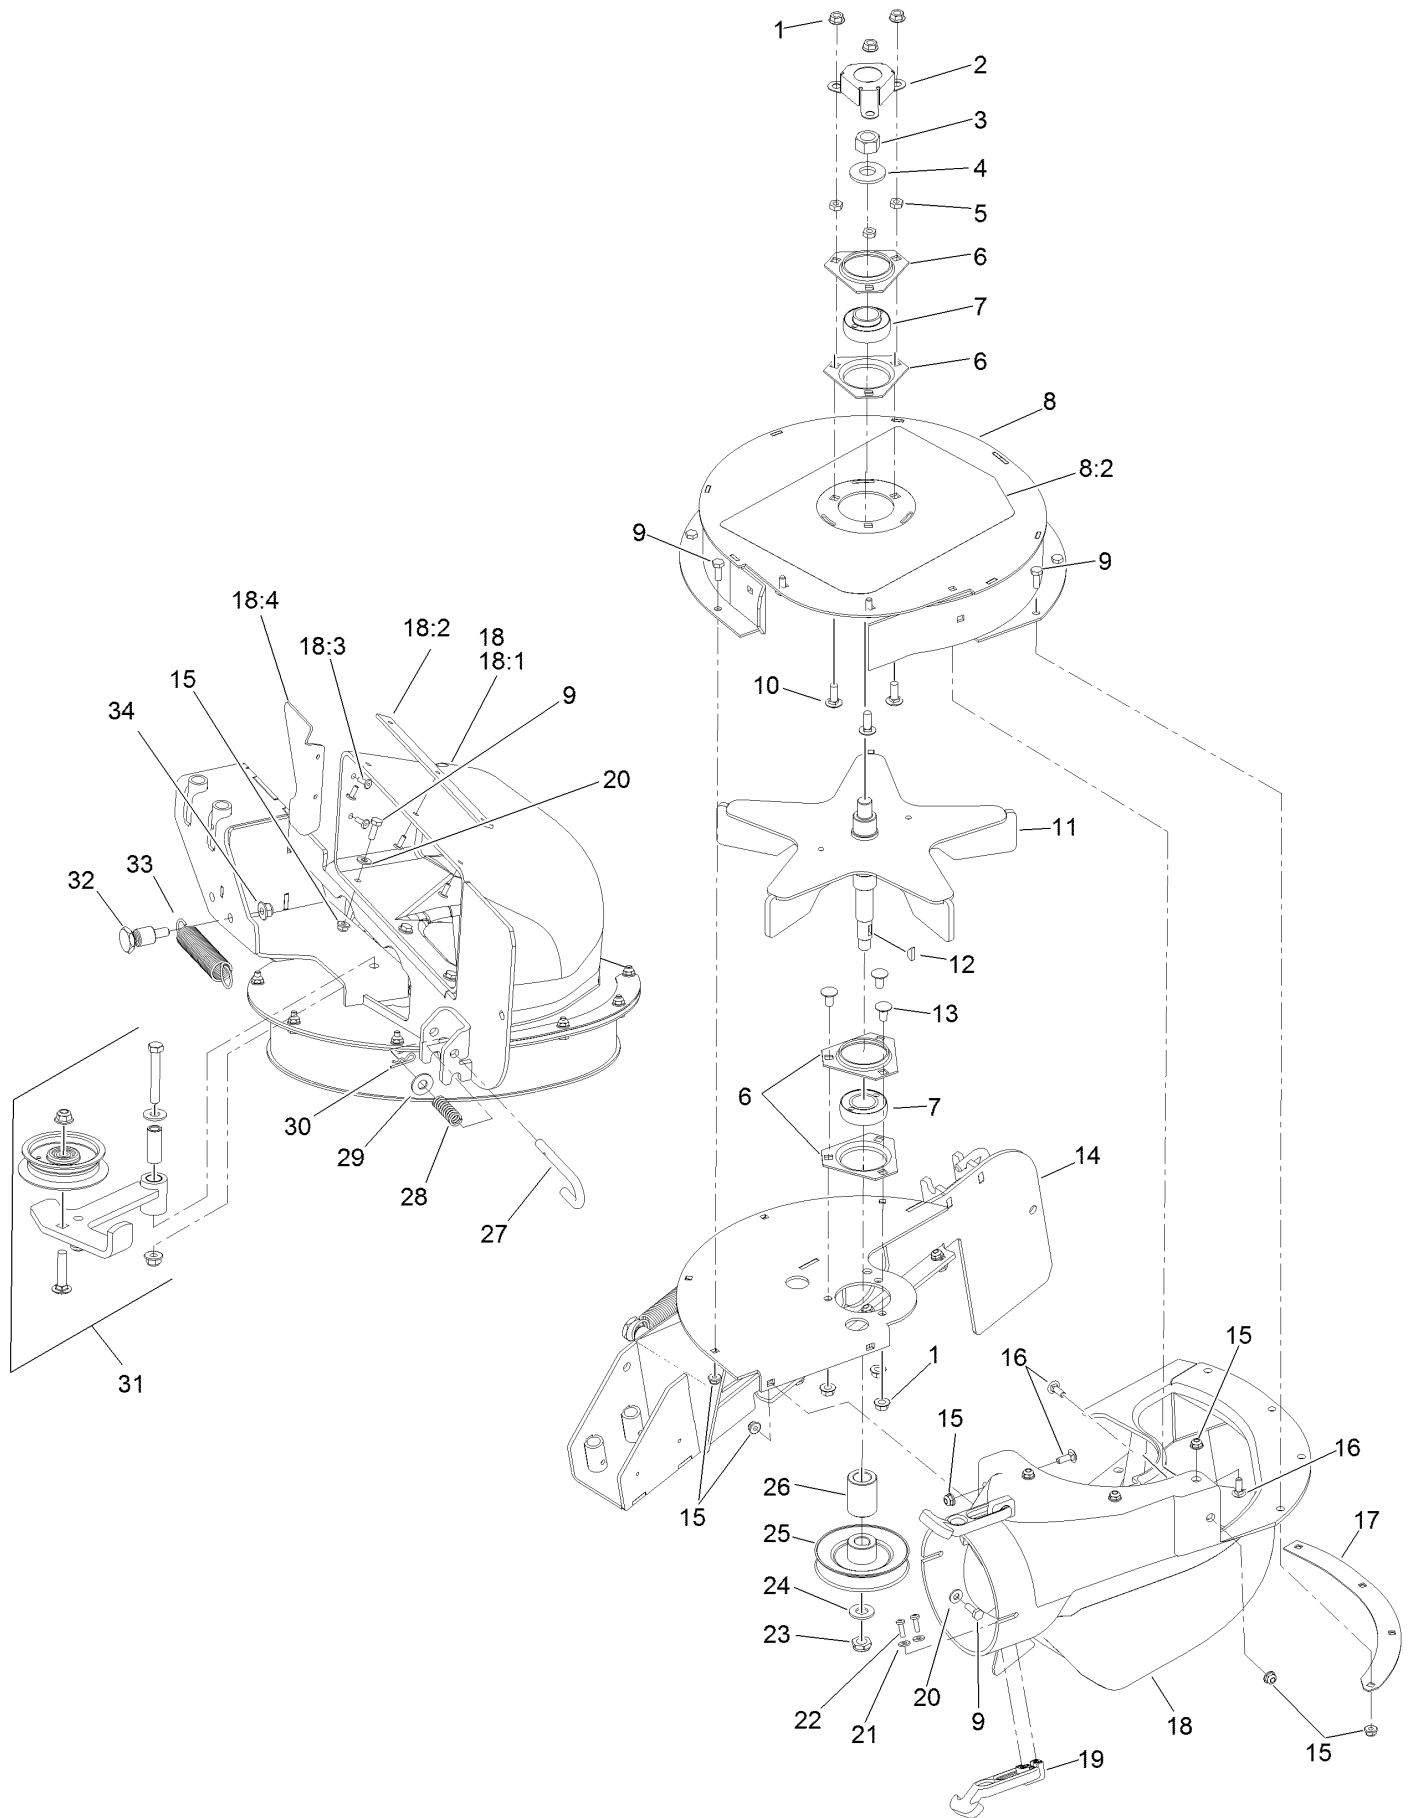

Blower Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	32128-20	6	Nut-HF	18:2	103-4752-03	1	Plate, Reinforcing (Below S/N 260,000)
2	116-4776	1	Cover-Nut	18:3	114439	5	Rivet-Pop
3	3219-6	1	Nut-Hex	18:4	116-6486-03	1	Plate-Filler
4	1-513208	1	Washer-Spring	19	103-4080	2	Latch-Rubber
5	3218-2	3	Nut-Jam	20	3256-22	5	Washer-Flat
6	1-513013	4	Housing-Flange	21	3256-14	4	Washer-Flat
7	1-653346	2	Bearing-SPH	22	3290-500	4	Screw-PPH
8	121-3221	1	Upper Housing ASM	23	3296-28	1	Nut-Lock, NI
8:2	121-3212	1	Decal-Warning, Blower	24	3256-26	1	Washer-Flat
9	321-4	13	Screw-HH	25	112-2345	1	Pulley
10	3230-10	3	Screw-CARR	26	1-653365	1	Spacer
11	103-3815	1	Impeller	27	116-4356	1	Pin-Latch
12	3257-32	1	Key-Woodruff	28	121-3249	1	Spring-Compression
13	3230-18	3	Screw-CARR	29	3256-4	1	Washer-Flat
14	120-2542-03	1	Blower Frame ASM	30	3290-307	1	Pin-Hair
15	104-7201	18	Nut-HF	31		1	Idler Arm ASM ●
16	3229-1	5	Bolt-CARR	32	121-3225	1	Anchor-Spring
17	116-4434-03	1	Plate-Backing, Blower	33	1-603693	1	Spring-Extension
18	116-6487	1	Small Blower Chute ASM	34	104-8301	1	Nut-Flange, NI
18:1	116-4991	1	Chute-Blower, Small				

● Not serviced separately



Count on it.