



Form No. 3376-631 Rev B

Count on it.

Parts Catalog

48cm Super Bagger Lawn Mower

Model No. 20835—Serial No. 313000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HP: high pressure

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: low pressure

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head

Contents

Housing and Rear Door Assembly 4

Bag and Frame Assembly..... 5

Engine and Blade Assembly..... 6

Shroud, Flywheel and Fuel Tank Assembly 7

Dipstick, Brake and Governor Arm Assembly 8


Carburetor, Muffler, Air Cleaner and Valve Cover Assembly 9

Traction, Height-of-Cut and Suspension Assembly..... 10

Transmission and Belt Assembly..... 11


Handle Assembly 12

Attachments and Accessories 13

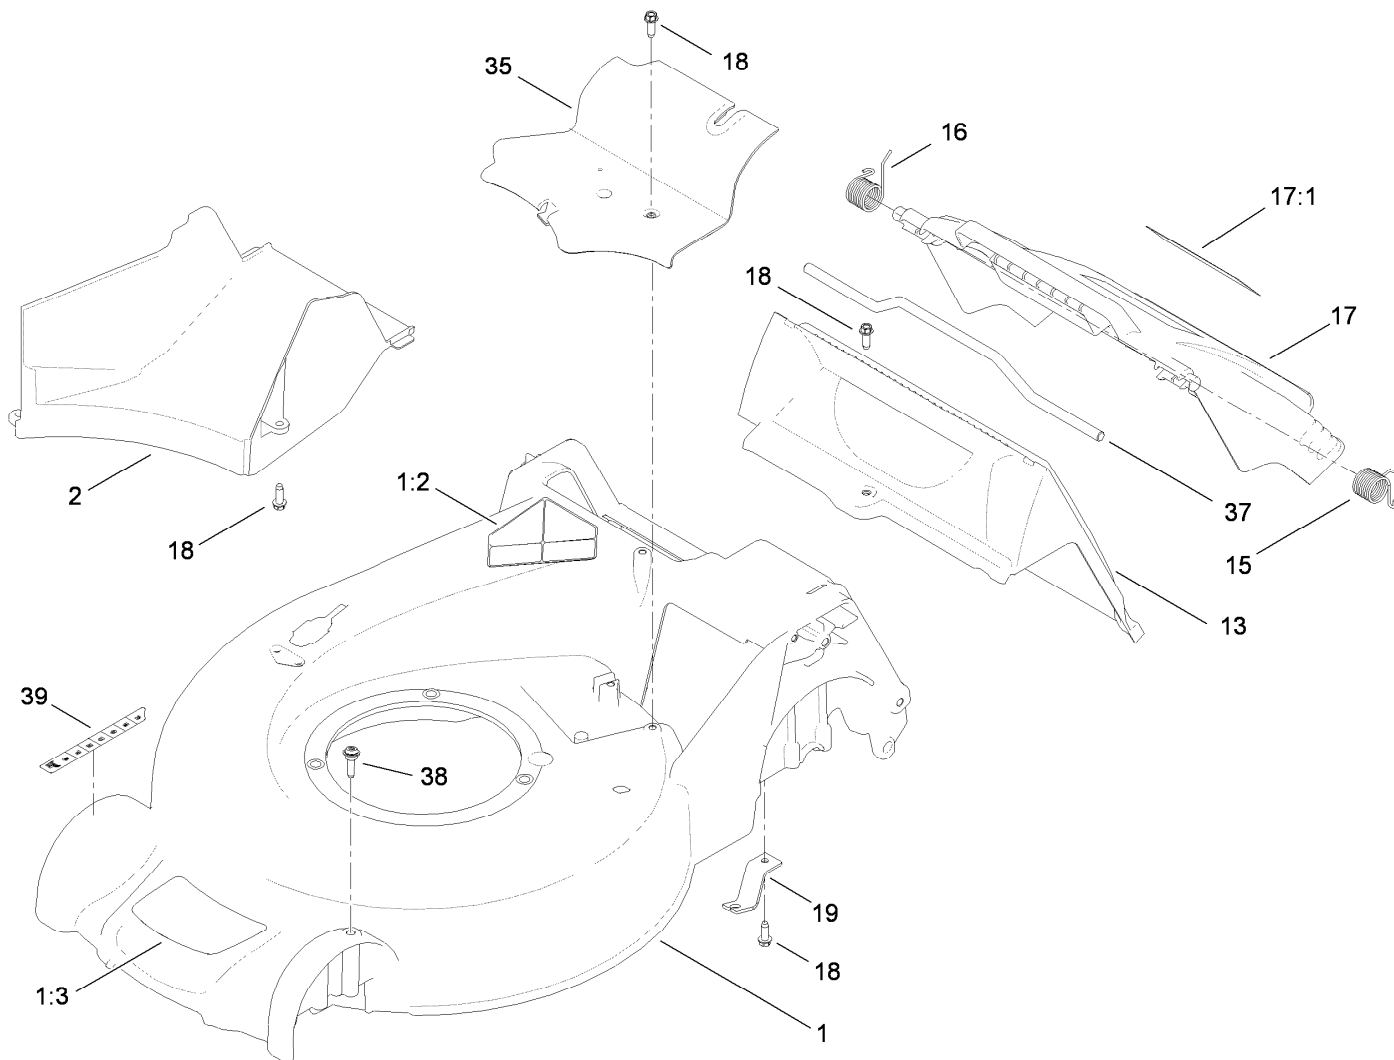


Housing and Rear Door Assembly

Ref.	Part Number	Qty.	Description
1	117-9379	1	Housing ASM
1:2	112-8760	1	Decal-Danger
1:3	119-2256	1	Decal-Housing
2	117-4063	1	Ramp-Discharge
13	114-2668	1	Chute
15	115-2859	1	Spring-Torsion
16	114-7924	1	Spring-Torsion
17	117-4085	1	Rear Door ASM
17:1	114-7982	1	Decal-Warning
18	49-2040	5	Screw-HWHTF
19	117-9385	1	Bracket-Cable, Traction
35	117-4062	1	Cover-Belt
37	117-9378	1	Rod-Deflector
38	119-2267	1	Screw-Shoulder, BHTF
39	119-2283	1	Decal-HOC

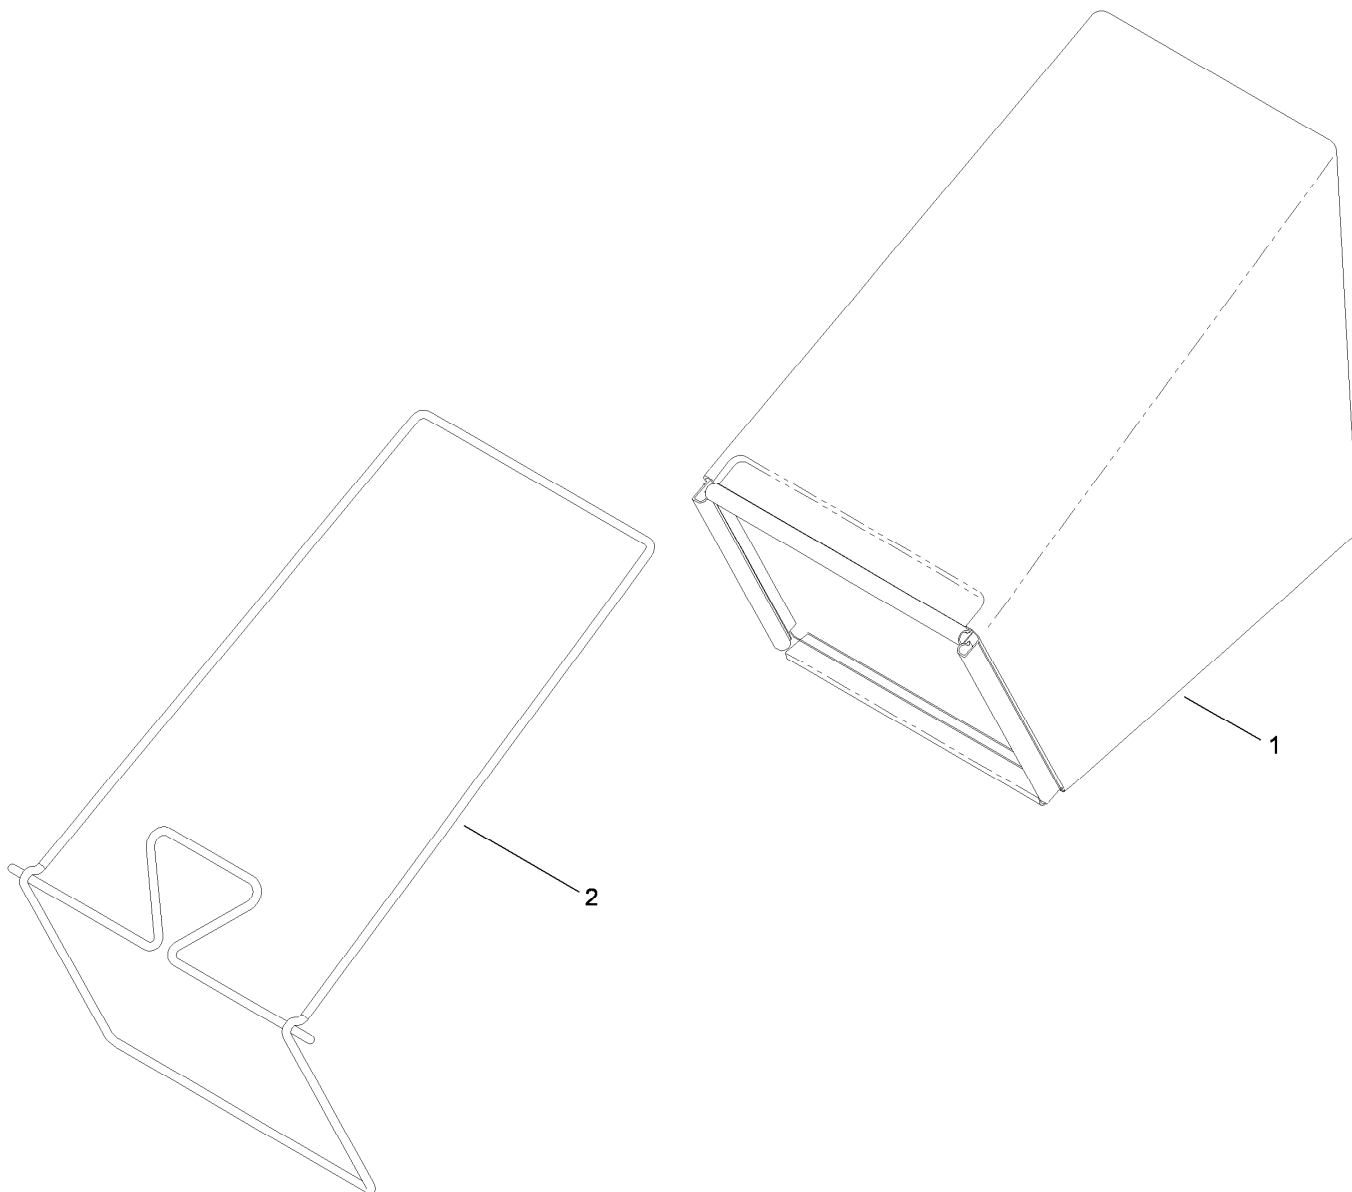


Bag and Frame Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	117-9365	1	Grass Bag ASM
2	117-9363-03	1	Frame-Bag

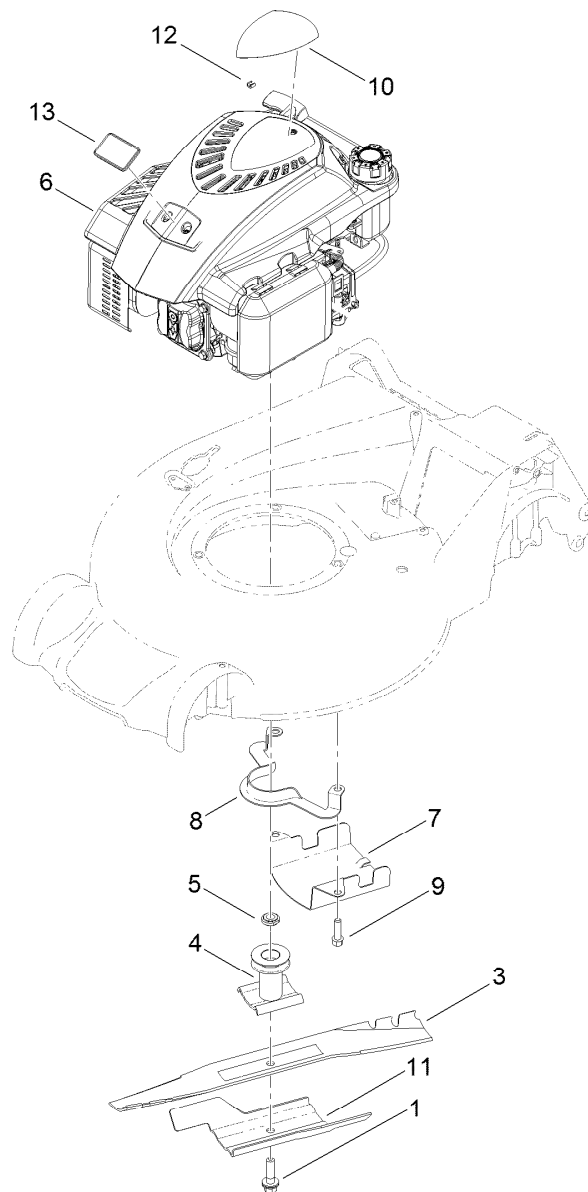


Engine and Blade Assembly

Ref.	Part Number	Qty.	Description
1	125-2466	1	Bolt-Blade
3	110-7080	1	Blade
4	106-3987	1	Driver-Blade
5	106-3999	1	Spacer-Driver
6	120-4411	1	Engine-Lc1P65Fc
7	107-7489-03	1	Shield-Grass
8	108-8110-03	1	Guide-Belt
9	92-1648	3	Screw-Mount, Engine
10	120-1938	1	Decal-Shroud, Ce
11	105-6848-03	1	Accelerator-Blade
12	92-1701	1	Stop-Rope
13	120-0183	1	Plate-Logo

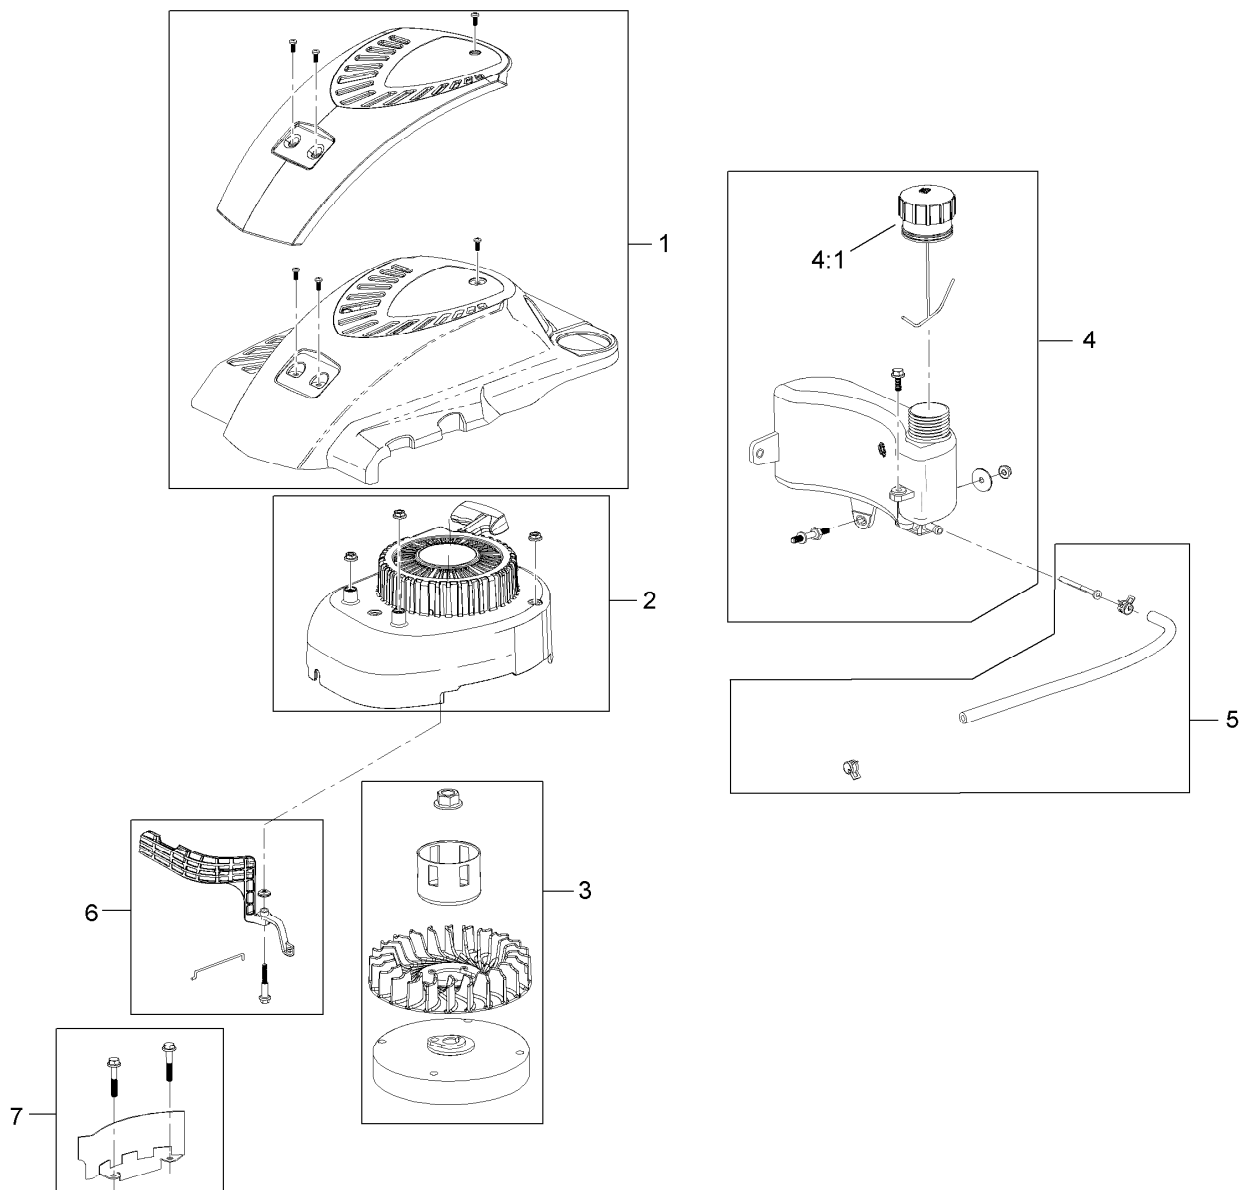


Shroud, Flywheel and Fuel Tank Assembly

Ref.	Part Number	Qty.	Description
1	119-1990	1	Shroud ASM
2	121-4160	1	Recoil And Blower Shroud Kit
3	119-1970	1	Flywheel And Fan Kit
4	121-4162	1	Fuel Tank Kit
4:1	121-4163	1	Cap-Fuel
5	121-4167	1	Fuel Line Kit
6	121-4168	1	Air Vane Kit
7	119-1994	1	Flywheel Shield Kit

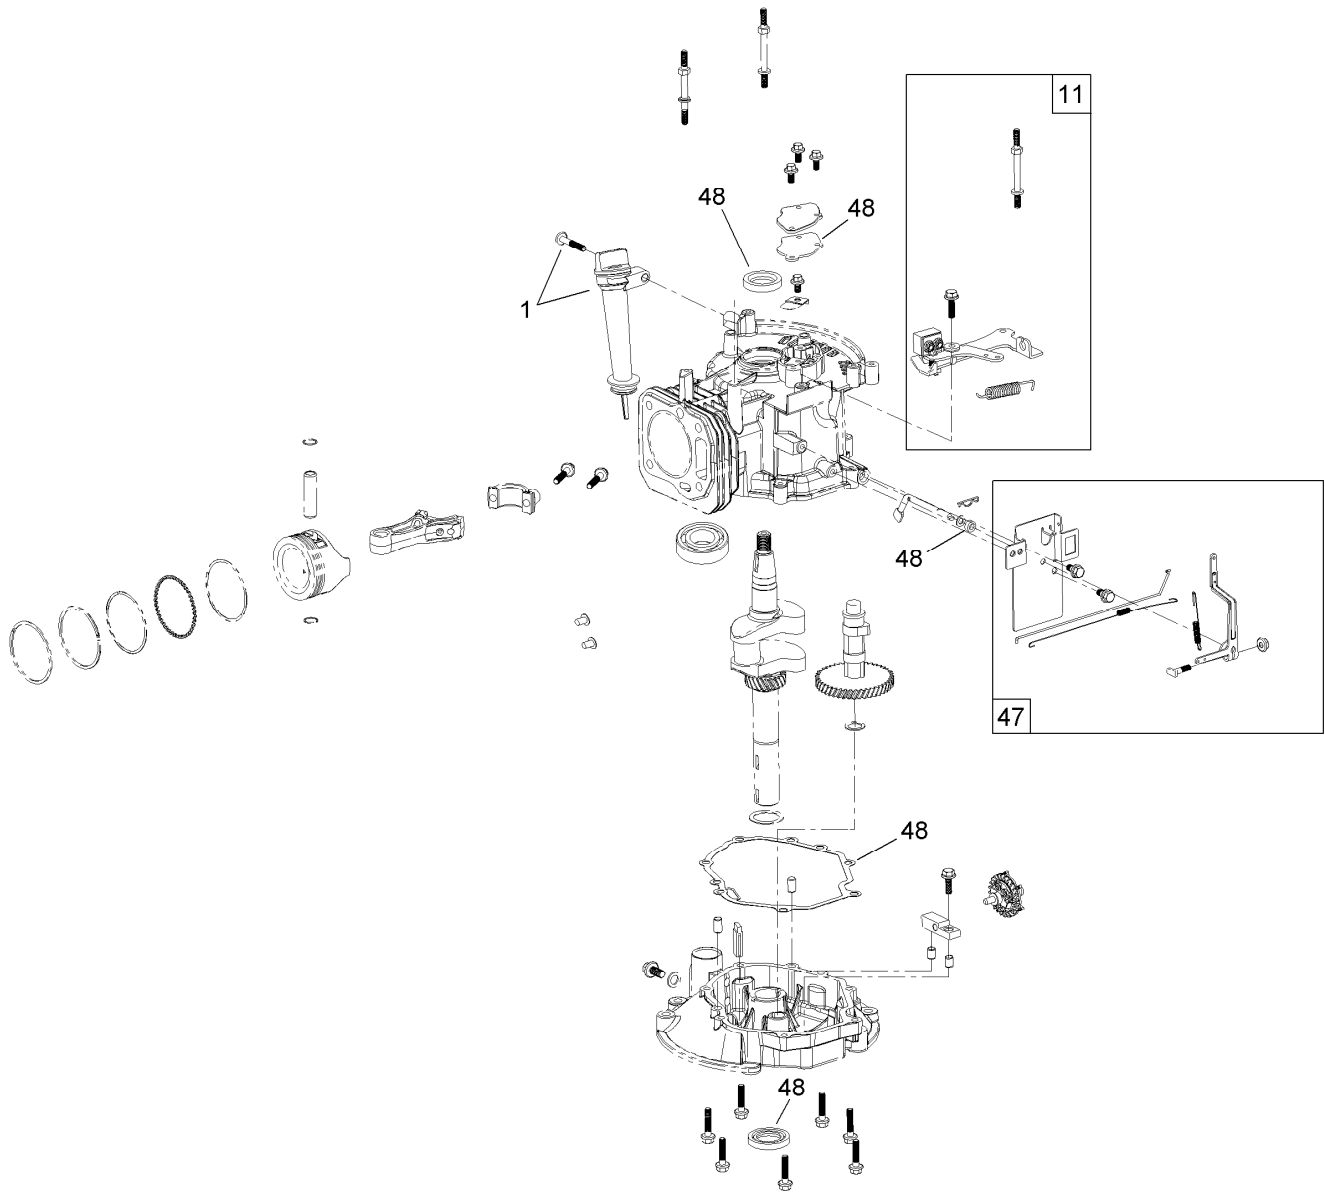


Dipstick, Brake and Governor Arm Assembly

Ref.	Part Number	Qty.	Description
1	119-1903	1	Dipstick And Fill Tube Kit
11	119-1991	1	Brake ASM Recoil Kit
47	119-1968	1	Governor Arm Kit
48	127-9144	1	Seal And Gasket Kit

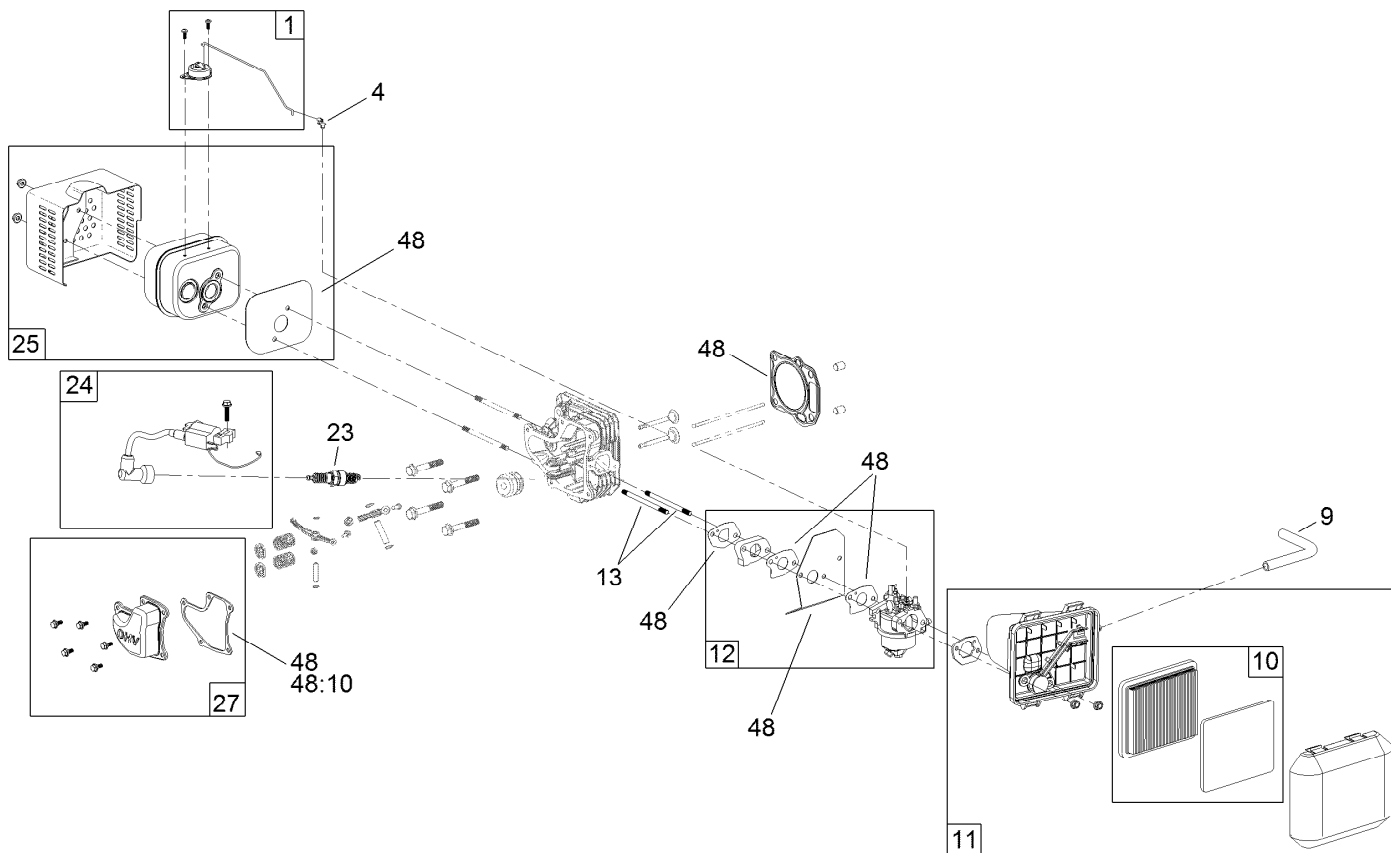

Carburetor, Muffler, Air Cleaner and Valve Cover Assembly


Ref.	Part Number	Qty.	Description
1	121-4175	1	Thermal Control Kit
4	120-4451	1	Lock-Throttle
9	119-1902	1	Tube-Breather
10	119-1909	1	Air Filter And Prefilter Kit
11	121-4177	1	Air Cleaner ASM Kit
12	120-4405	1	Carburetor Repair Kit
12	121-4181	1	Carburetor Complete Kit
13	121-0367	2	Stud-Intake
23	121-4199	1	Spark Plug
24	121-4186	1	Ignition Kit
25	119-1969	1	Muffler And Shield Kit
27	121-4188	1	Valve Cover Kit
48	127-9144	1	Seal And Gasket Kit
48:10	121-4190	1	Gasket-Valve

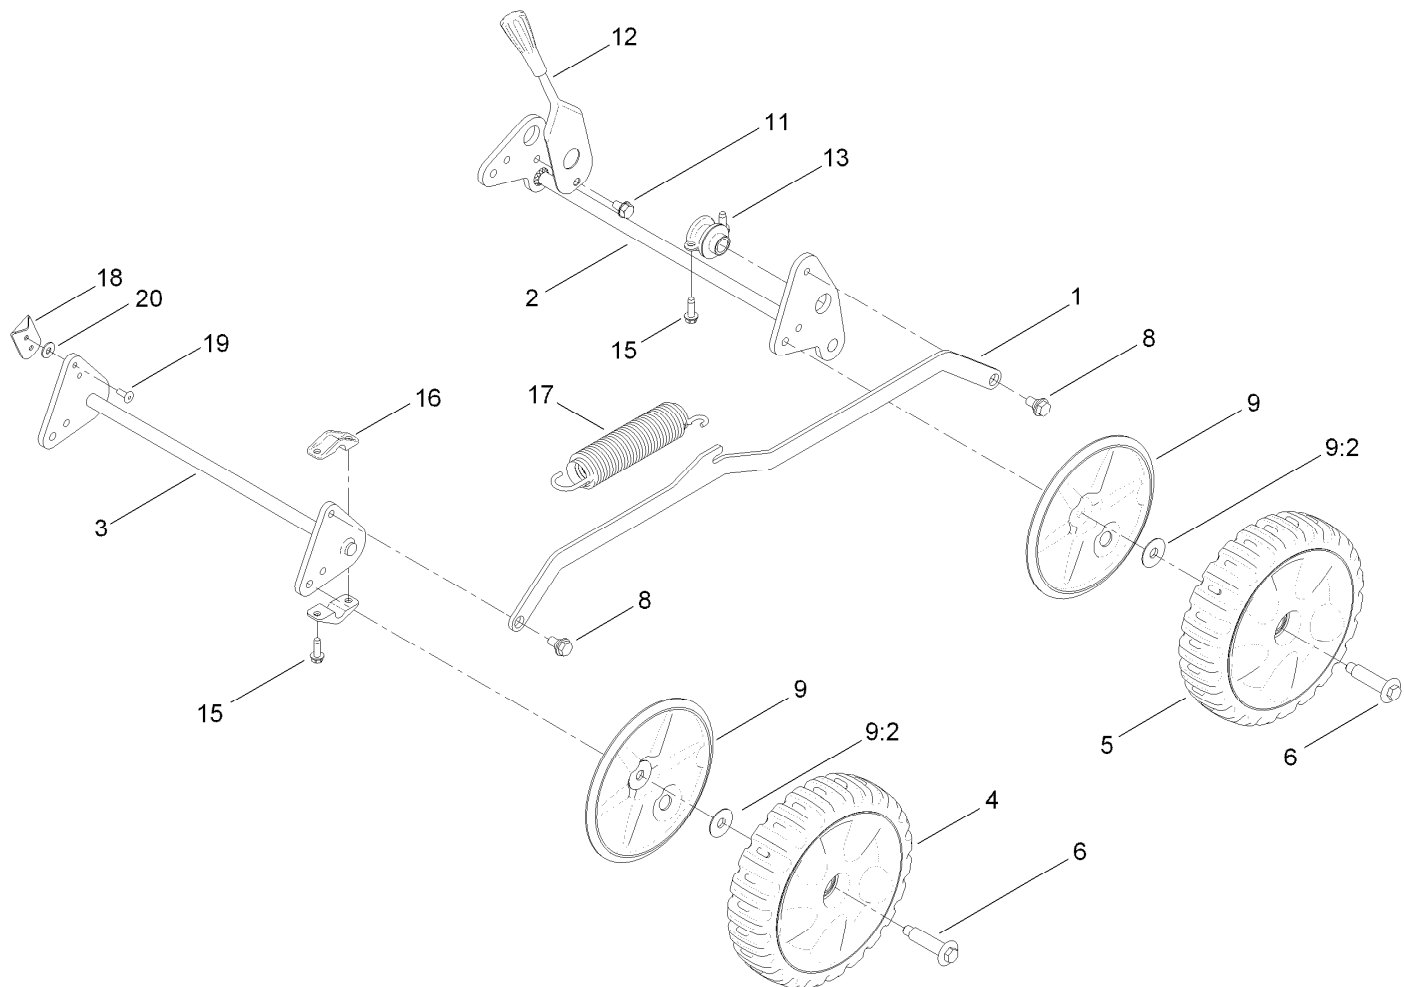

Traction, Height-of-Cut and Suspension Assembly


Ref.	Part Number	Qty.	Description
1	117-4066-01	1	Bar-Cross, HOC
2	120-0196-03	1	Bar-Pivot, Rear
3	120-3902-03	1	Bar-Pivot, Front
4	117-4082	2	8 Inch Wheel ASM
5	117-4083	2	8 Inch Wheel And Gear ASM
6	614650	4	Bolt-Shoulder
8	27-0411	2	Screw-Shoulder
9	117-4088	4	Wheel Cover ASM
9:2	614426	1	Washer-Stepped

Ref.	Part Number	Qty.	Description
11	32104-82	1	Screw-HHF
12	117-4084	1	Handle-Lift Assist
13	119-2278	2	Bushing ASM
15	49-2040	8	Screw-HWHTF
16	100-1500	4	Mount-Axle, Front
17	119-2265	1	Spring-Extension
18	119-2286	1	Indicator-HOC
19	114439	2	Rivet-Pop
20	3256-1	2	Washer-Flat

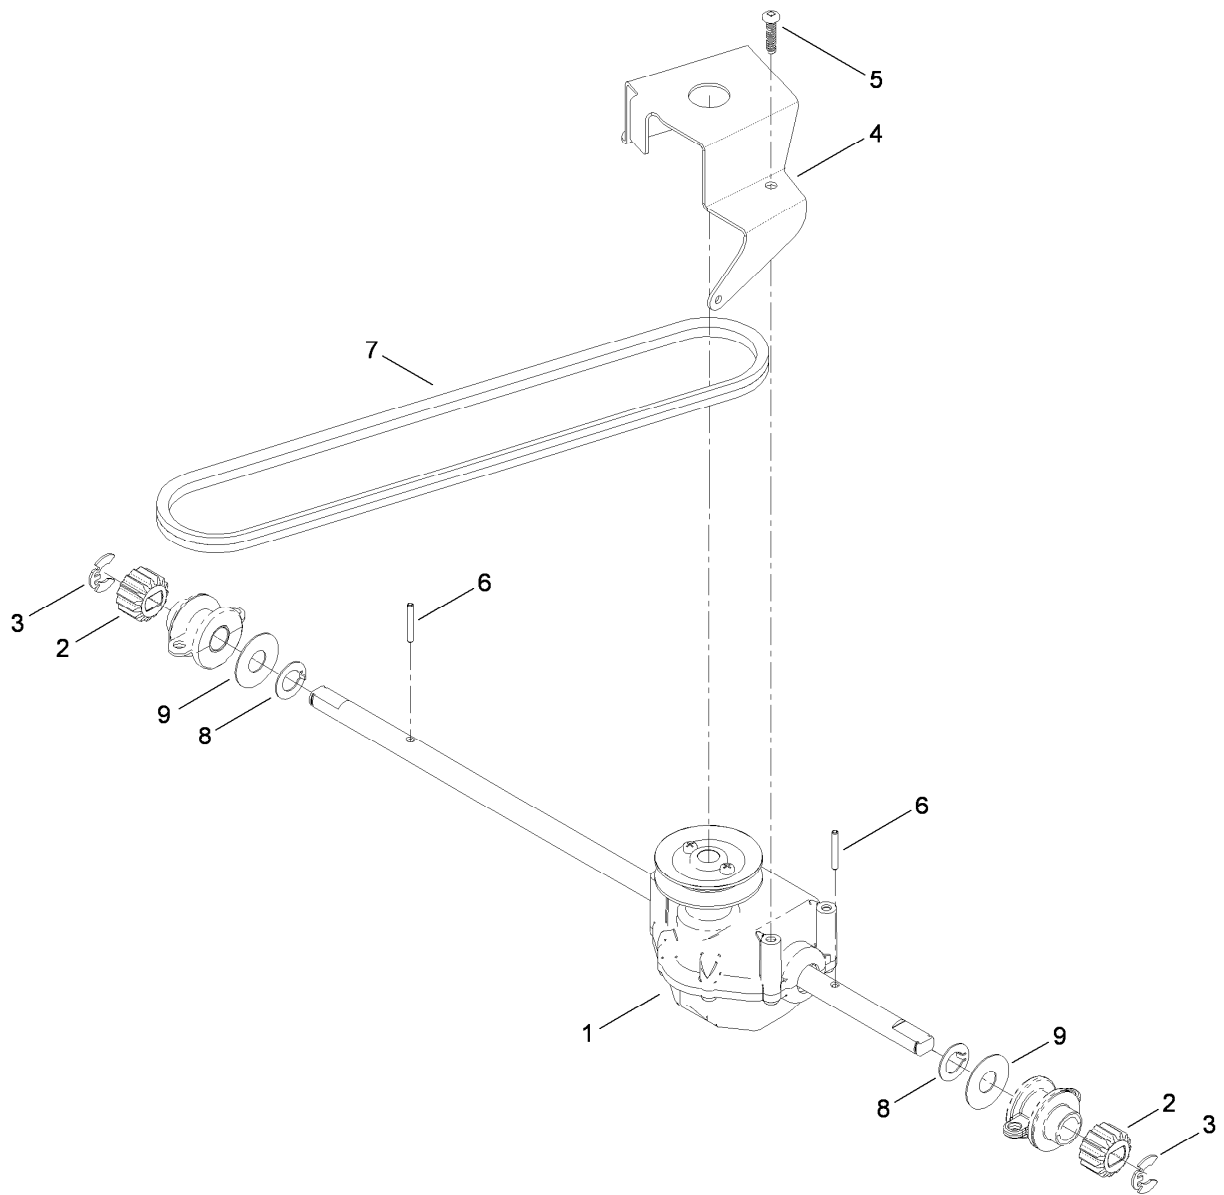

Transmission and Belt Assembly

Ref.	Part Number	Qty.	Description
1	117-4086	1	Transmission-Gearbox
2	110-9417	2	Gear-Pinion, 15T
3	65-2720	2	Ring-Clip, Locking
4	114-7977-03	1	Bracket-Transmission
5	108-7476	3	Screw-Plastite
6	110-7192	2	Pin-Roll
7	110-9429	1	V-Belt
8	112-3911	2	Washer-Thrust, Keyed
9	110-7179	2	Washer-Plain

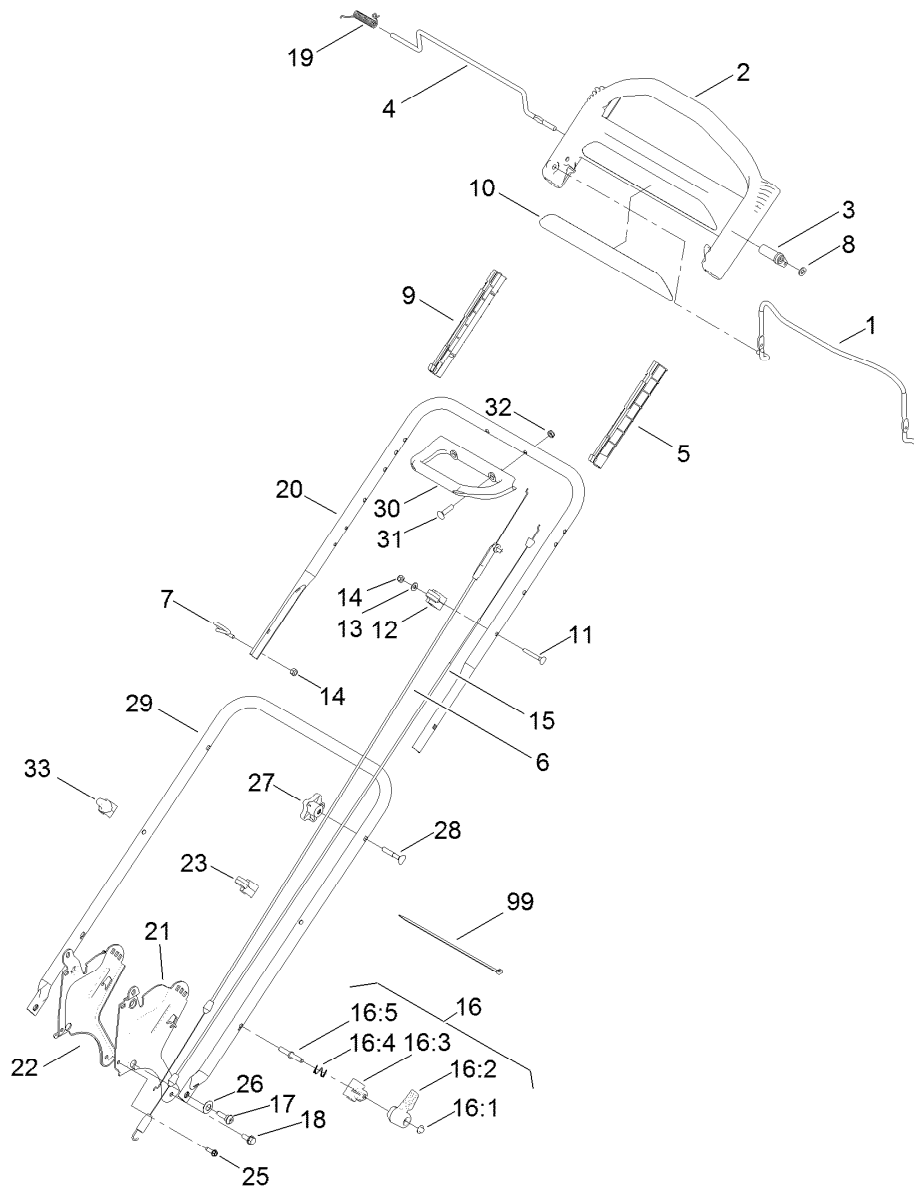

Handle Assembly

Ref.	Part Number	Qty.	Description
1	104-8679-03	1	Bail-Brake
2	104-8678	1	Handle-Control
3	99-1589	1	Lever-Traction
4	99-1588	1	Bar-Control, Traction
5	105-6842	1	Guide-LH
6	108-8157	1	Cable-Brake
7	86-9671	1	Guide-Rope
8	3256-23	1	Washer-Flat
9	105-6841	1	Guide-RH
10	120-3911	1	Decal-Ads, Handle
11	95-4453	1	Screw
12	99-5239	1	Anchor-Cable
13	3256-1	1	Washer-Flat
14	3296-73	2	Nut-Lock, NI
15	117-9389	1	Cable-Traction
16	115-2860	2	Quick Release ASM
16:1	109-0917	1	Nut-Push
16:2	114-7995	1	Lever
16:3	114-7996	1	Anchor-Spring

Ref.	Part Number	Qty.	Description
16:4	115-2858	1	Spring-Compression
16:5	114-2675	1	Rod-Release
17	119-2267	2	Screw-Shoulder, BHTF
18	32144-11	2	Screw-HWHTF
19	121-9118	1	Spring-Torsion
20	117-9376-05	1	Handle-Upper
21	114-2671-03	1	Bracket-Handle, LH
22	114-2672-03	1	Bracket-Handle, RH
23	114-7988	1	Guide-Cable
25	49-2040	2	Screw-HWHTF
26	112-9972	2	Washer-Conical, Spring
27	117-5976	2	Knob-Handle
28	112-8876	2	Screw-Handle
29	117-9380-05	1	Handle-Lower
30	99-1591	1	Handle-Assist, Traction
31	99-6005	2	Bolt-Carriage
32	99-6007	2	Nut-Lock, NI
33	117-9384	1	Guide-Rope, Flexible
99	614249	2	Tie-Cable

Attachments and Accessories

For 20835 48cm Super Bagger Lawn Mower

Product Name	Model/Part
Lawnmower Cover.....	490-7462
Plain Walk Mower Cover.....	490-7463

Notes:

Notes:



Count on it.