

Dual Split Caster Kit

Dedicated-Bagging Riding Mower

Model No. 130-8455

Installation Instructions

⚠ WARNING

CALIFORNIA Proposition 65 Warning

This product contains a chemical or chemicals known to the State of California to cause cancer, birth defects, or reproductive harm.

Installation

Loose Parts

Use the chart below to verify that all parts have been shipped.

Description	Qty.	Use
Wheel assembly	1	Install the wheels.
Bolt (1/2 x 13 inches)	1	
Locknut (1/2 inch)	1	

Installing the Wheels

1. Disengage the blade-control switch (PTO), move the motion-control levers to the neutral-locked position, and set the parking brake.
2. Stop the engine, remove the key, and wait for all moving parts to stop before leaving the operating position.
3. Loosen the bolt and nut for the existing tire.
4. Raise the rear of the machine and support it with a jack stand.
5. Remove the single-wheel assembly from caster fork.
6. Install the new wheel assembly with the bolt (1/2 x 13 inches) and locknut (1/2 inch) as shown in Figure 1.
7. Torque the bolt to 37 to 45 N-m (27 to 33 ft-lb).
8. Raise the rear of the machine, remove the jack stands, and lower the machine.

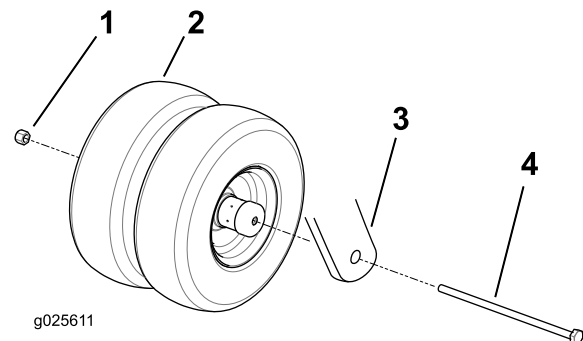


Figure 1

- | | |
|-----------------------|---------------------------|
| 1. Locknut (1/2 inch) | 3. Caster fork |
| 2. Wheel assembly | 4. Bolt (1/2 x 13 inches) |



