



# 24in Cordless Hedge Trimmer

Model No. 51498—Serial No. 314000001 and Up

Model No. 51498T—Serial No. 314000001 and Up

## Operator's Manual

Model 51498T does not include a battery or a charger.



If you have questions or problems, contact us at [www.Toro.com](http://www.Toro.com) or call toll free 1-800-237-2654 (US) or 1-800-248-3258 (Canada) before returning this product.

## General Power Tool Safety Warnings

### ⚠ WARNING

#### CALIFORNIA

#### Proposition 65 Warning

This product contains a chemical or chemicals known to the State of California to cause cancer, birth defects, or reproductive harm.



**WARNING** Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

Save all warnings and instructions for future reference.

The term "power tool" in all of the warnings listed below refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

#### 1. Work area safety

- Keep work area clean and well lit. Cluttered or dark areas invite accidents
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

#### 2. Electrical safety

- Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and

refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.

- Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.
- If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply. Use of an RCD reduces the risk of electric shock.

#### 3. Personal safety

- Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
- Use personal protective equipment. Always wear eye protection. Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
- Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.



- F. **Dress properly. Do not wear loose clothing or jewelry. Keep your hair, clothing and gloves away from moving parts.** *Loose clothes, jewelry, or long hair can be caught in moving parts.*
  - G. **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** *Use of these devices can reduce dust-related hazards.*
4. **Power tool use and care**
- A. **Do not force the power tool. Use the correct power tool for your application.** *The correct power tool will do the job better and safer at the rate for which it was designed.*
  - B. **Do not use the power tool if the switch does not turn it on and off.** *Any power tool that cannot be controlled with the switch is dangerous and must be repaired.*
  - C. **Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools.** *Such preventive safety measures reduce the risk of starting the power tool accidentally.*
  - D. **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** *Power tools are dangerous in the hands of untrained users.*
  - E. **Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tools operation. If damaged, have the power tool repaired before use.** *Many accidents are caused by poorly maintained power tools.*
  - F. **Keep cutting tools sharp and clean.** *Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.*
  - G. **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed..** *Use of the power tool for operations different from those intended could result in a hazardous situation.*
5. **Battery tool use and care**
- A. **Recharge only with the charger specified by the manufacturer.** *A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.*
  - B. **Use power tools only with specifically designated battery packs.** *Use any other battery packs may create a risk of injury and fire.*
  - C. **When battery pack is not in use, keep it away from the other metal objects, like paper clips, coins, keys, nails, screws, or other small metal objects that can make a connection from one terminal to another.** *Shorting the battery terminals together may cause burns or a fire.*
  - D. **Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.** *Liquid ejected from the battery may cause irritation or burns.*
  - E. **Ideal charging temperature is between 5 and 40 degrees C (41 and 104 degrees F).** *Charging outside of this temperature range will increase the charging time.*

6. **Service**

**Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.**

## Hedge Trimmer Safety Warnings

- **Keep all parts of the body away from the cutter blade. Do not remove cut material or hold material to be cut when blades are moving. Make sure the switch is off when clearing jammed material. Blades coast after turn off.** *A moment of inattention while operating the hedge trimmer may result in serious personal injury.*
- **Use both hands when operating the hedge trimmer. Using one hand could cause loss of control and result in serious personal injury.**
- **Carry the hedge trimmer by the handle with the cutter blade stopped.** *Proper handling of the hedge trimmer will reduce possible personal injury from the cutter blades.*
- **Hold the power tool by insulated gripping surfaces only, because the cutter blade may contact hidden wiring or its own cord. Cutter blades contacting a "live" wire may make exposed metal parts of the power tool "live" and could give the operator an electric shock.**
- **DANGER – Keep hands away from blade.** *Contact with blade will result in serious personal injury.*

# Safety and Instructional Decals



Safety decals and instructions are easily visible to the operator and are located near any area of potential danger. Replace any decal that is damaged or lost.

**⚠ DANGER**  
KEEP HANDS AWAY FROM BLADE.  
N'APPROCHEZ PAS LES MAINS DE LA LAME.

**⚠ WARNING** TO REDUCE THE RISK OF INJURY, USER MUST READ INSTRUCTION MANUAL. Do not expose to rain.  
Use only Toro battery model 88508 & 88509.

**⚠ AVERTISSEMENT** POUR RÉDUIRE LES RISQUES DE BLESSURES, LISEZ ATTENTIVEMENT LE MANUEL DE L'UTILISATEUR.  
Ne l'exposez pas à la pluie. Utilisez uniquement avec batterie TORO 88508 & 88509.

1 \*Maximum initial voltage without workload, as rated by battery manufacturer. Under workload, nominal voltage is 43.2V.  
\*Tension initiale maximale sans charge, telle qu'indiquée par le fabricant de la batterie. Mesurée sous charge, la tension nominale est de 43.2 V.

48V MAX\* DC  $\equiv$  24" / 610mm  
Dual Action / Double Action  
Cutting Capacity: 0.71" / Capacité de coupe : 18mm

Model: **51498**  
Modèle:   
Serial Number:   
Numéro de série:   
Date Code:   
Code de date:

Country of Origin: China  
Pays d'origine : Chine  
218549 THE TORO COMPANY  
8111 Lyndale Avenue South  
Bloomington, MN 55420-1196 USA

125-3247

1. Warning—read the *Operator's Manual*; do not use in wet conditions; wear eye protection.

**TORO** 48V MAX\* DC  $\equiv$  86 Wh  
Li-Ion Battery / Batterie au Lithium-ion

\*Maximum initial voltage without workload, as rated by battery manufacturer. Under workload, nominal voltage is 43.2V DC  $\equiv$ .  
\*Tension initiale maximale sans charge, telle qu'indiquée par le fabricant de la batterie. Mesurée sous charge, la tension nominale est de 43.2 V DC  $\equiv$ .

**⚠ WARNING** To reduce the risk of injury, user must read the instruction manual. Wear eye protection. Do not short terminals. Do not throw into fire. Use only with Toro battery charger 88507 & 88510. When charging make sure temperature is between 5° to 40°C (41° to 104°F), -10° to 45°C (14° to 113°F) for discharge. Risk of fire, explosion and burns. Do not disassemble, crush, expose to heat above 100°C (212°F), or incinerate. Keep battery out of reach of children. To reduce risk of injury to persons, remove battery pack when not in use.

**⚠ AVERTISSEMENT** Pour réduire le risque de blessures, l'utilisateur doit lire le manuel d'utilisation. Portez des lunettes de protection. Ne pas court-circuiter. Ne jetez pas au feu. Utilisez uniquement avec chargeur de batterie Toro 88507 & 88510. Lorsque vous chargez la batterie, assurez-vous que la température est de 5 à 40 °C (41 à 104 °F), -10 à 45 °C (14 à 113 °F) pour la décharge. Risque d'incendie, d'explosion et des brûlures. Ne pas démonter, écraser, exposer à une température au-dessus de 100 °C (212 °F) ou incinérer. Conservez la batterie hors de portée des enfants. Pour réduire les risques de blessures corporelles, retirez l'ensemble batterie quand la machine ne sert pas.

Country of Origin: China / Pays d'origine : Chine

Model: **88508**  
Modèle:   
Serial Number:   
Numéro de série:   
Date Code:   
Code de date:

125-3240

125-3240

**⚠ DANGER**  
KEEP HANDS AWAY FROM BLADE.  
N'APPROCHEZ PAS LES MAINS DE LA LAME.

**⚠ WARNING** TO REDUCE THE RISK OF INJURY, USER MUST READ INSTRUCTION MANUAL. Do not expose to rain.  
Use only Toro battery model 88508 & 88509.

**⚠ AVERTISSEMENT** POUR RÉDUIRE LES RISQUES DE BLESSURES, LISEZ ATTENTIVEMENT LE MANUEL DE L'UTILISATEUR.  
Ne l'exposez pas à la pluie. Utilisez uniquement avec batterie TORO 88508 & 88509.

1 \*Maximum initial voltage without workload, as rated by battery manufacturer. Under workload, nominal voltage is 43.2V.  
\*Tension initiale maximale sans charge, telle qu'indiquée par le fabricant de la batterie. Mesurée sous charge, la tension nominale est de 43.2 V.

48V MAX\* DC  $\equiv$  24" / 610mm  
Dual Action / Double Action  
Cutting Capacity: 0.71" / Capacité de coupe : 18mm

Model: **51498T**  
Modèle:   
Serial Number:   
Numéro de série:   
Date Code:   
Code de date:

Country of Origin: China  
Pays d'origine : Chine  
218549 THE TORO COMPANY  
8111 Lyndale Avenue South  
Bloomington, MN 55420-1196 USA

125-8322

1. Warning—read the *Operator's Manual*; do not use in wet conditions; wear eye protection.

**TORO**

LITHIUM-ION BATTERY CHARGER  
CHARGEUR DE BATTERIE LITHIUM-ION  
Input: 100-240V AC 50/60Hz Max 1.6A  
Output: 48V MAX\* DC  $\equiv$  2A

\*Maximum initial voltage without workload, as rated by battery manufacturer. Under workload, nominal voltage is 43.2V DC  $\equiv$ .  
\*Tension initiale maximale sans charge, telle qu'indiquée par le fabricant de la batterie. Mesurée sous charge, la tension nominale est de 43.2 V DC  $\equiv$ .

**⚠ CAUTION** To reduce the risk of injury, user must read the instruction manual. Charge only 88508 or 88509 type rechargeable battery. Other types of batteries may burst causing personal injury and damage. Risk of electric shock. Do not expose to liquid, vapor, or rain. Do not interconnect output terminal. For indoor use only.

**⚠ ATTENTION** Pour réduire le risque de blessures, l'utilisateur doit lire le manuel d'utilisation. Utilisez uniquement pour les batteries rechargeables type 88508 ou 88509. D'autres types de batteries pourraient exploser et causer des blessures ou des dommages. Risque de décharge électrique. Ne pas exposer à des liquides, à la vapeur ou à la pluie. Ne pas interconnecter la borne de sortie. Pour usage intérieur uniquement.

Backfeed Protection / Protection contre le retour d'énergie


THE TORO COMPANY  
8111 Lyndale Avenue South  
Bloomington, MN 55420-1196 USA  
Country of Origin: China / Pays d'origine : Chine  
Manufactured by CHANGZHOU GLOBE CO., LTD  
Fabriqué par CHANGZHOU GLOBE CO., LTD

E365782  
 LISTED

Model: **88507 SL**  
Modèle:   
Serial Number:   
Numéro de série:   
Date Code:   
Code de date:

125-8298

125-8298

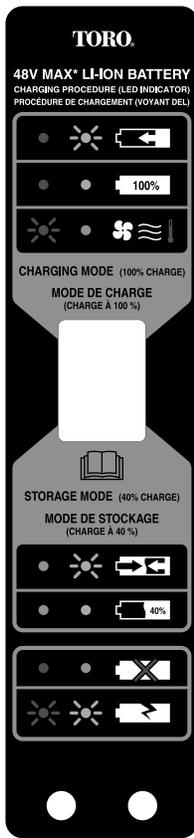

121-7654

Symbol	Name	Designation/Explanation
DC	Direct current	Type of current
A	Amperes	Current
Hz	Hertz	Frequency (cycles per second)
SPM	Strokes per minute	Speed of blade
V	Volts	Voltage

# Setup

Cut the cable tie away from your body and remove it from the trigger handle (Figure 1).

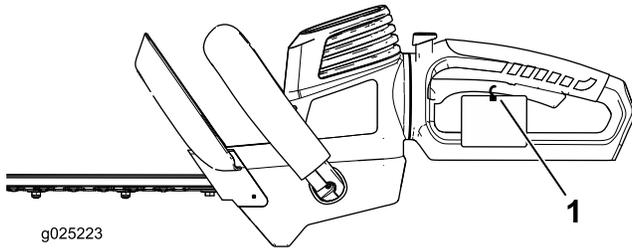


Figure 1

1. Cable tie

2. Align the tongue of the battery pack with the cavity in the handle housing (Figure 3).

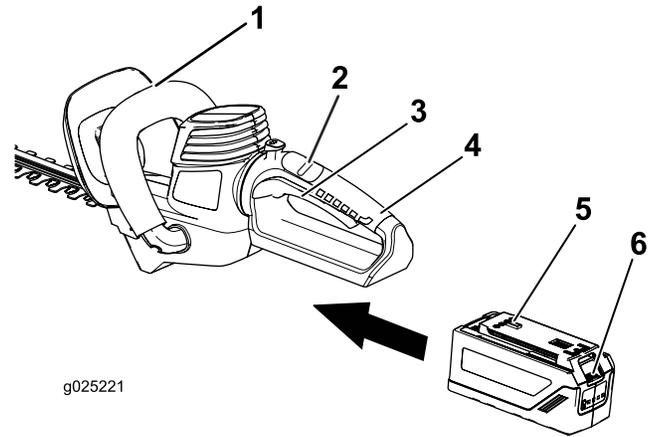


Figure 3

- |                     |                   |
|---------------------|-------------------|
| 1. Auxiliary handle | 4. Trigger handle |
| 2. Lock switch      | 5. Tongue         |
| 3. Trigger          | 6. Latch          |

# Operation

**Important:** The battery pack is not fully charged when it is purchased. Before using the hedge trimmer for the first time, refer to **Charging the Battery Pack** (page 6). Make sure to read all safety precautions. If storing for a prolonged period of time, remove the battery. When ready to use again, charge the battery pack; refer to **Charging the Battery Pack** (page 6).

## Starting the Hedge Trimmer

1. Remove the protective cover from the cutter blades (Figure 2).

### **⚠ WARNING**

The hedge trimmer blades can cause cuts or amputation.

Be careful when handling the hedge trimmer with the protective cover removed.

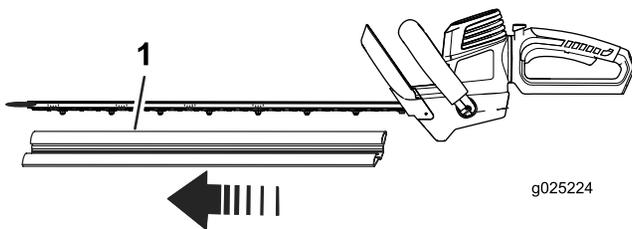


Figure 2


1. Protective cover

3. Grasp the trigger handle (Figure 3).
4. Push the battery pack into the handle until the latch locks into place.
5. Place one hand on the trigger handle. Place the other hand on the auxiliary handle (Figure 3).
6. Slide the lock switch backward, toward you, then squeeze the trigger switch to turn on the hedge trimmer (Figure 3).

**Note:** The trimmer will stay on as long as the trigger and the auxiliary handle trigger are squeezed. You may release the switch once the hedge trimmer is running.

# Rotating the Hedge Trimmer Handle

1. Press and hold the rotational lock button.

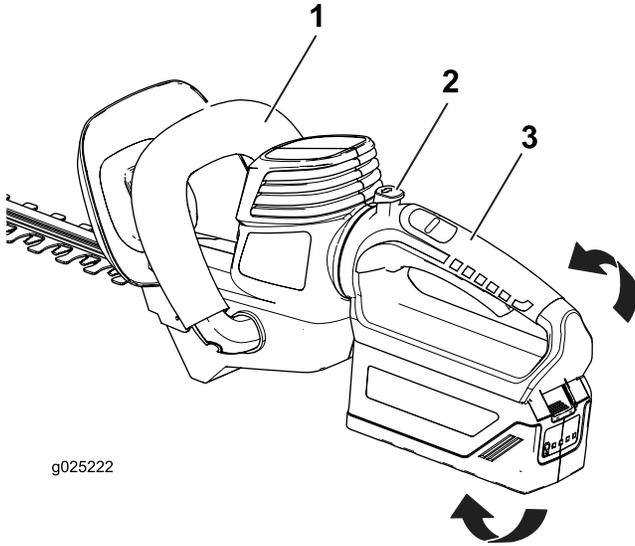

g025222

**Figure 4**

1. Auxiliary handle
2. Rotational lock button
3. Trigger handle

2. Rotate the handle to the right or left depending on desired cutting direction, then release the rotational lock button to lock the handle in the desired position.


# Stopping the Hedge Trimmer

1. Release the trigger switch (Figure 3).
2. Allow at least 5 seconds for the cutting blade to stop moving.

# Charging the Battery Pack

**Important:** For best results, your battery pack should be charged in a location where the temperature is more than 5° C (41° F) but less than 40° C (104° F). To reduce the risk of serious personal injury, do not store outside or in vehicles. Charging time will be increased if not charged within this range.


1. If the power cord is not plugged in to the charger, plug it into the charger (Figure 5), then plug the power cord into a power socket.
2. Turn the battery upside down and line up the battery terminal with the slot in the charger (Figure 5 and Figure 6).

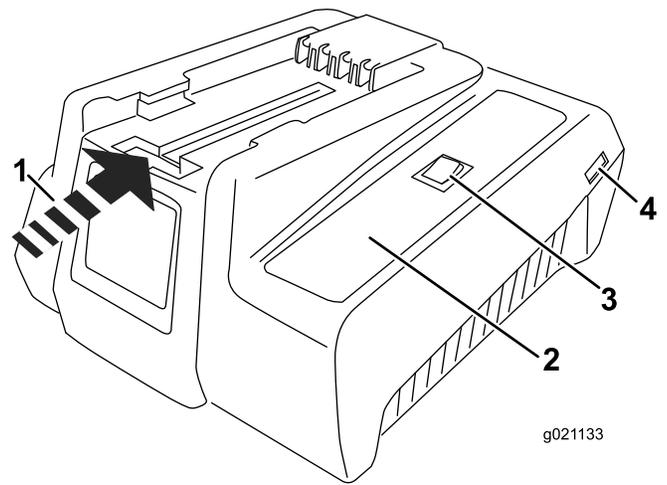

g021133

**Figure 5**

1. Insert battery here
2. LED indicators
3. Charge/storage mode switch
4. Power cord plug-in location

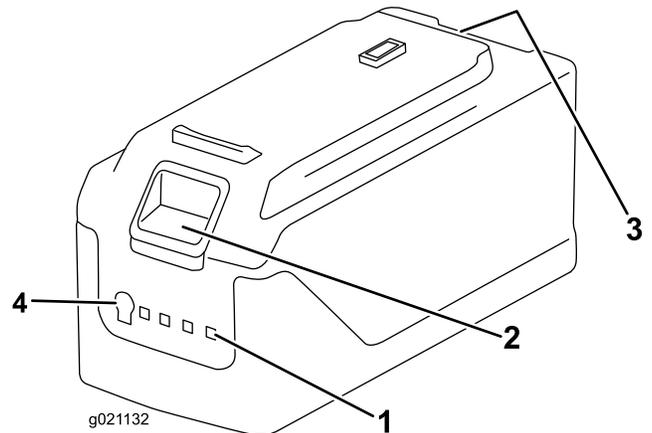


g021132

**Figure 6**

1. LED indicators (level of charge)
  2. Release button
  3. Battery terminal
  4. Test button
3. Slide the battery into the charger until it clicks into place.
  4. To remove the battery, hold down the charger, pull up on the release button, and slide the battery backward out of the charger.


**Note:** If you have trouble removing the battery, apply some dielectric grease to the battery terminals (Figure 7). **Do not** use any other type of lubricant as it can damage the terminals.

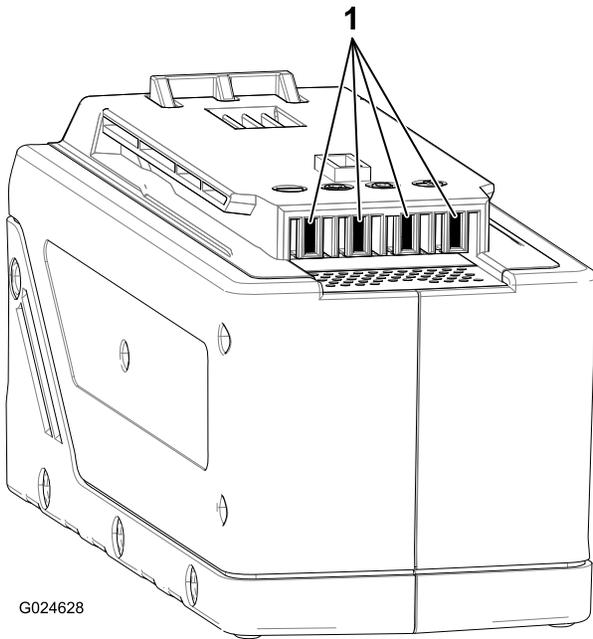

G024628

**Figure 7**

1. Battery terminals

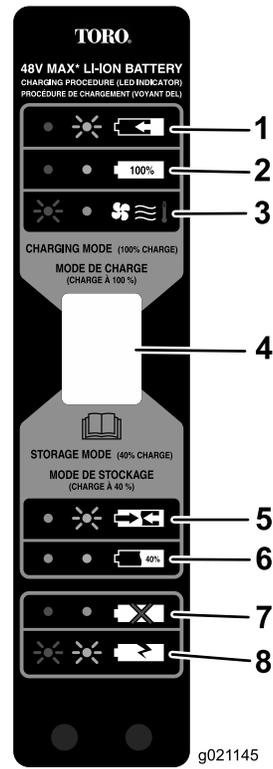

g021145

**Figure 8**

5. Refer to Figure 8 to interpret the LED indicators on the battery charger.

- |   |  |
|---|--|
| 1. Red light on; green light flashing—battery is charging.  | 5. Red light off; green light flashing—battery is preparing for storage. |
| 2. Red light on; green light on—battery is fully charged.   | 6. Red light off; green light on—battery is prepared for storage.        |
| 3. Red light flashing; green light off—abnormal battery temperature (greater than 40 C (104 F) or less than 5 C (41 F). | 7. Red light on; green light off—no battery inserted.                    |
| 4. Charge/storage mode switch   | 8. Red light flashing; green light flashing—battery is defective.        |

**Important:** If the charger indicates an abnormal battery temperature, allow the battery to cool or warm up as needed before inserting the battery into the charger.

Storing a lithium-ion battery at 40% of its capacity maximizes battery life.

Use storage mode (Figure 8) when the battery will not be used for 1 month or longer.

1. Insert the battery into the charger.
2. Turn storage mode on.
3. The battery will charge or discharge as necessary to approximately 40% charge.
4. When the battery is ready for storage (Figure 8, item 6.), remove the battery from the charger.

## Operating Tips

- This unit is used for cutting in either direction in a slow, sweeping action from side to side.
- Stand so that you are stable and balanced on both feet. Do not overreach.
- Inspect and clear the area of any hidden objects.
- Never use the hedge trimmer near power lines, fencing, posts, buildings, or other immovable objects.
- Never use a blade after hitting a hard object without first inspecting it for damage. Do not use if you detect any damage.
- Never touch the blades or service this appliance with the power supply connected.
- Do not force the hedge trimmer through heavy shrubbery. This can cause the blades to bind and slow down. If the blades slow down, reduce the pace.
- Do not attempt to cut stems or twigs that are larger than 16 mm (5/8 inch), or those obviously too large to feed into the cutting blade. Use a non-powered hand saw or pruning saw to trim large stems.
- If blades become jammed, stop the motor, allow the blades to stop, and remove the battery before attempting to remove the obstruction.
- If desired, you can use a string to help cut your hedge level. Decide how high you want the hedge. Stretch a piece of string along the hedge at the desired height. Trim the hedge just above the guide line of string.
- Trim the side of a hedge so that it is slightly narrower at the top. You expose more of the hedge when you shape it this way, and the hedge will appear more uniform.
- Wear gloves when trimming thorny or prickly growth. When trimming new growth, use a wide sweeping action, so that the stems are fed directly into the cutting blade. Older growth will have thicker stems and most easily trimmed by using a sawing movement.

## Maintenance

### Oiling the Trimmer Blade

**Note:** The trimmer blade should be oiled before and after each use.

1. Stop the motor and remove the battery.
2. Clean dirt and debris from the body of the hedge trimmer, using a damp cloth with a mild detergent.

**Note:** Do not use any strong detergents on the plastic housing or the handle. Certain aromatic oils such as pine and lemon, and by solvents such as kerosene can damage plastic parts.

3. Lay the hedge trimmer on a flat surface. Apply light weight machine oil along the edge of the top blade. If you will be using the hedge trimmer for an extended period of time, it is advisable to oil the blade during use.

**Note:** Do not oil the appliance while it is running.

### Battery Pack Preparation For Recycling

#### **⚠ WARNING**

**Upon removal, cover the battery pack's terminals with heavy-duty adhesive tape. Do not attempt to destroy or disassemble the battery pack or remove any of its components. Lithium-ion batteries must be recycled or disposed of properly at the nearest battery recycling facility.**

## Service

Should this item need service, take the product to your Authorized Toro Service Dealer. Your Toro Dealer is specially trained to repair Toro products and will ensure that your Toro stays "All" Toro.

## Storage

- Clean all foreign material from the product.
- Store it in a well-ventilated place that is inaccessible to children.
- Keep away from corrosive agents such as garden chemicals and de-icing salts.

## Troubleshooting

Using the battery when it is hot can reduce the operating time. The battery will automatically stop working when it is overheated to prevent damage to it. Remove the battery from the charger and allow it to cool before placing it back into the trimmer.

Using the battery when there is moisture on the leads can cause the trimmer to malfunction. Allow the battery to dry or wipe it dry before placing it back into the trimmer.

**Notes:**

**Notes:**

**Notes:**

## The Toro Promise - Electric Products

### A Three-Year Full Warranty for Residential Use for the United States and Canada

The Toro Company and its affiliate, Toro Warranty Company, pursuant to an agreement between them, jointly warrant this product for three years against defects in material or workmanship when used for normal residential purposes.\*

If you think your Toro Product contains a defect in materials or workmanship, if you have questions or problems, and before returning this product call toll free:

**Trimmers:**

1-800-237-2654 (US)  
1-800-248-3258 (Canada)

**Blowers:**

1-888-367-6631 (US)  
1-888-430-1687 (Canada)

**Snowthrowers:**

1-800-808-2963 (US)  
1-800-808-3072 (Canada)

To receive a replacement or repair, at our option, return the complete unit to the seller. United States and Canada customers may return their product, with proof of purchase, to any Authorized Service Dealer. United States customers may also return their product, with proof of purchase, postage prepaid, to the Toro Service Center, 5500 SE Delaware, Ankeny, IA 50021.

This warranty covers product defects only. **Neither The Toro Company nor Toro Warranty Company is liable for indirect, incidental, or consequential damages in connection with the use of the Toro Products covered by this warranty, including any cost or expense of providing substitute equipment or service during reasonable periods of malfunction or non-use pending completion of repairs under this warranty. Some states do not allow exclusions of incidental or consequential damages, so the above exclusions may not apply to you.** This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

### Countries Other than the United States and Canada

Customers who have purchased Toro products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province, or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the Toro importer. If all other remedies fail, you may contact us at Toro Warranty Company.

### Australian Consumer Law

Australian customers will find details relating to the Australian Consumer Law either inside the box or at your local Toro Dealer.

\* Residential use means use of the product on the same lot as your home.

Part Number 374-0262 Rev. F