



Count on it.

Form No. 3389-314 Rev A

Parts Catalog

Workman® MDX Utility Vehicle

Model No. 07273TC—Serial No. 315000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HP: high pressure

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: low pressure

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

 
STD: standard

TAP: self tapping

TTH: torx truss head

Contents


Front Suspension and Wheel Assembly	4
Front Frame Assembly	5
Rear Frame and Suspension Assembly	6
Front Brake Assembly	7
Master Cylinder Assembly No. 104-6782	8
Brake Caliper Assembly No. 127-7424	9
Rear Brake Assembly	10
RH Rear Brake Assembly No. 114-8331	11
LH Rear Brake Assembly No. 114-8332	12
Steering Assembly	13
Steering Box Assembly No. 112-3130	14
Pedal Box Assembly	15
Shifter Assembly	16
Hood and Bumper Assembly	17
Fender Well Assembly	18
Fender Assembly	19
Dash Installation Assembly	20
Dash Assembly	21
Seatbase Assembly	22
Cargo Bed Assembly	23
Cargo Bed Service Assembly No. 127-7384	24
Engine, Clutch and Air Cleaner Assembly	25
Primary Clutch Assembly No. 120-4818	27
Air Cleaner Assembly No. 99-7120	28
Rear Axle Drive System Assembly	29
Transaxle Assembly No. 119-0760	30
Secondary Clutch Assembly No. 119-6011	32
Battery Assembly	33
Electrical Assembly	34
Starter Generator Assembly No. 119-9545	35
Fuel Tank Assembly	36
Attachments and Accessories	37

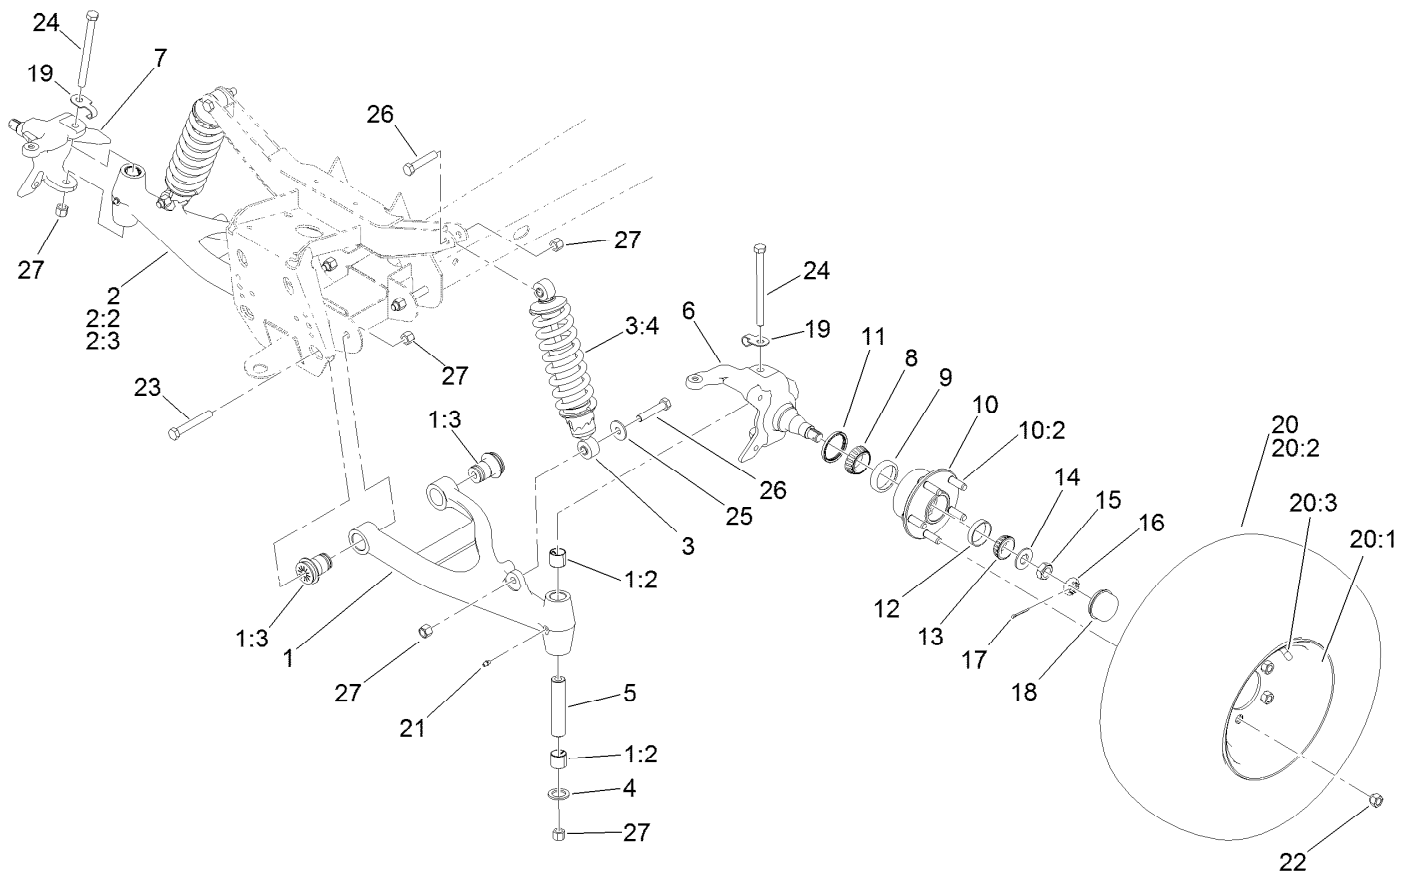

Front Suspension and Wheel Assembly

Ref.	Part Number	Qty.	Description
1	114-8313	1	LH A-Arm ASM
1:2	125-5196	2	Bushing
1:3	87-1450	2	Bushing-Flange
2	114-8314	1	RH A-Arm ASM
2:2	125-5196	2	Bushing
2:3	87-1450	2	Bushing-Flange
3	112-2975	2	Shock/Spring ASM
3:4	112-3383	1	Spring
4	256-115	2	Washer-Thrust
5	99-7499	2	Sleeve-Kingpin
6	119-9521	1	Spindle-LH
7	119-9522	1	Spindle-RH
8	254-106	2	Cone-Bearing, Tapered
9	254-107	2	Cup-Bearing, Tapered
10	117-8071	2	Hub ASM
10:2	10-6830	5	Stud-Type, Drive
11	108-7019	2	Seal-Shaft
12	254-72	2	Bearing-Cup, Tapered


Ref.	Part Number	Qty.	Description
13	254-94	2	Bearing-Cone, Tapered
14	93-0309	2	Washer-Tab
15	3220-7	2	Nut-Jam
16	93-0307	2	Nut-Lock, Retainer
17	3272-12	2	Pin-Cotter
18	241-119	2	Cap-Dust
19	112-3311	2	Clip-Hose
20	120-5025	2	Tire And Wheel ASM
20:1	120-4974	1	Wheel
20:2	104-7289	1	Tire
20:3	232-27	1	Stem-Valve
21	302-5	2	Fitting-Grease
22	242-50	10	Nut-Lug
23	325-14	4	Screw-HH
24	325-20	2	Screw-HH
25	51-3500	2	Washer
26	325-10	4	Screw-HH
27	3296-23	10	Nut-Lock, NI

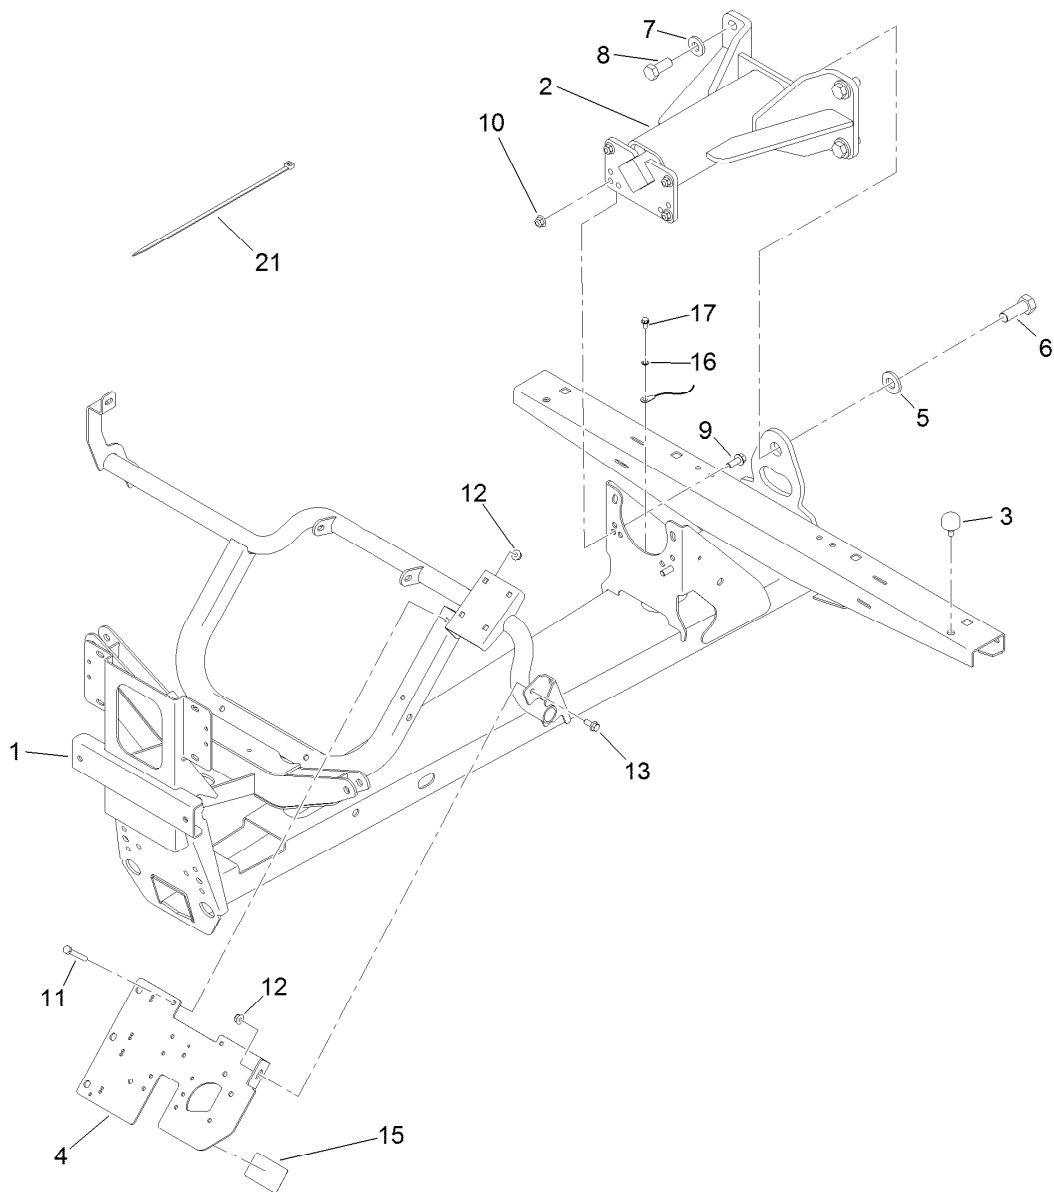 

Front Frame Assembly

Ref.	Part Number	Qty.	Description
1	112-3340-03	1	Frame-Front
2	99-7700	1	Pivot Yoke ASM
3	87-2440	1	Bumper-Rubber
4	112-3376-03	1	Plate-Mount, Electrical
5	87-3060	1	Washer-Hardened
6	328-24	1	Screw-HH
7	99-7667	4	Washer-Flat
8	327-4	4	Screw-HH
9	3234-11	4	Screw-HHF


Ref.	Part Number	Qty.	Description
10	104-8301	4	Nut-Flange, NI
11	322-11	2	Screw-HH
12	104-8300	3	Nut-Flange, NI
13	110-5053	1	Screw-HHF
15	112-3325	1	Decal-Block, Fuse
16	3254-16	1	Washer-Lock/Int
17	32144-4	1	Screw-HWH
21	3290-379	12	Tie-Cable

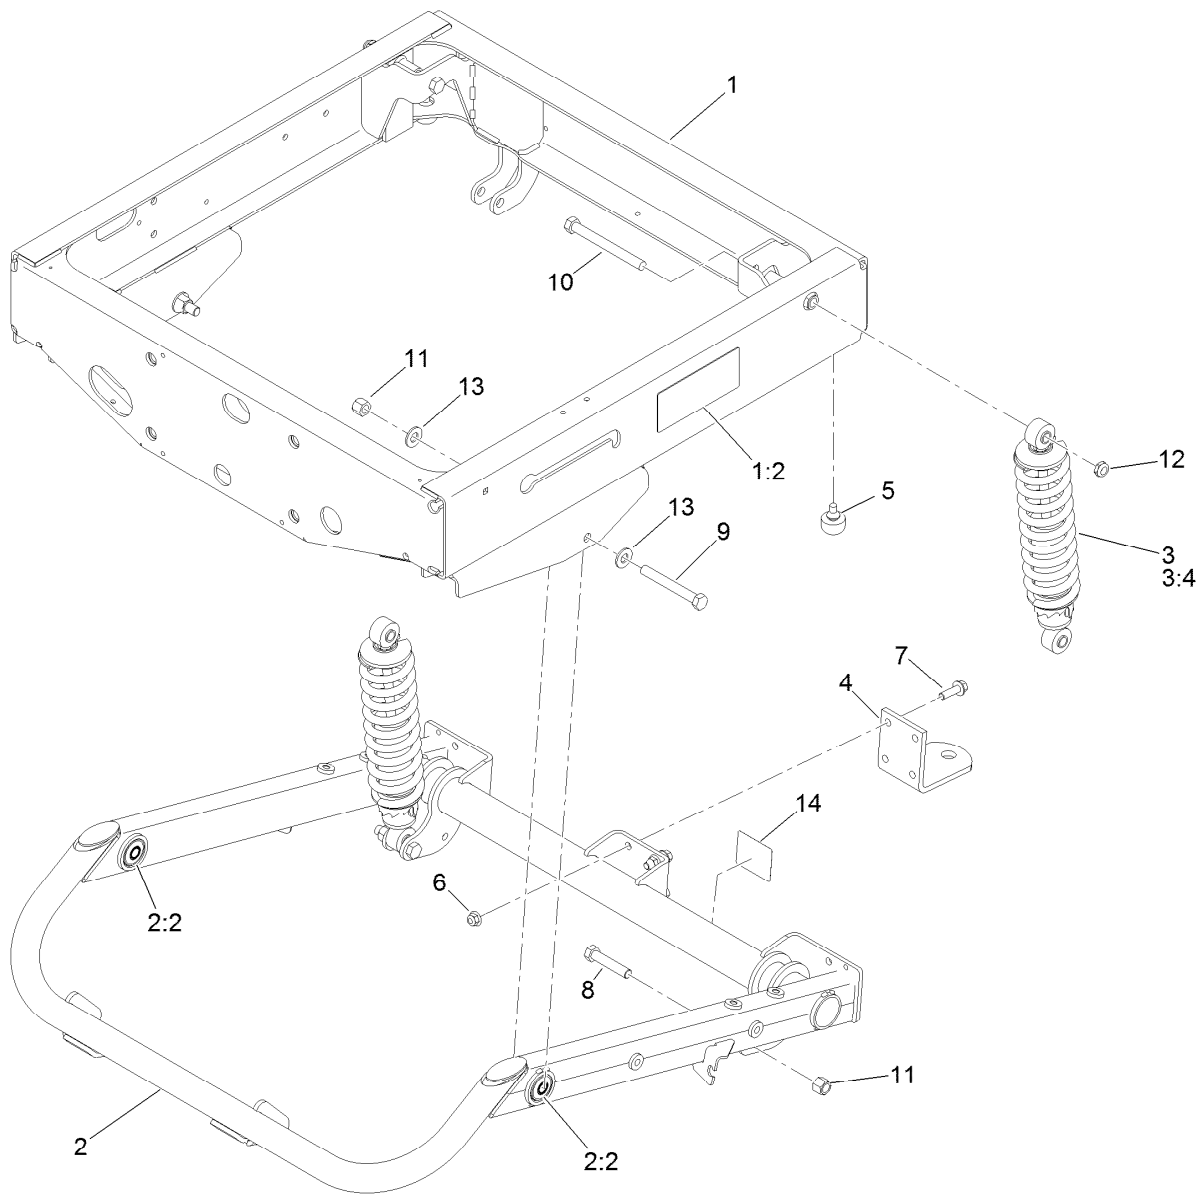 

Rear Frame and Suspension Assembly


Ref.	Part Number	Qty.	Description
1	119-9628	1	Rear Frame ASM
1:2	99-7345	2	Decal-Warning
2	115-7614	1	Swing Arm ASM
2:2	112-3377	2	Bushing-Arm, Control
3	112-3168	2	Rear Shock/Spring ASM
3:4	112-3386	1	Spring
4	99-7654-03	1	Hitch-Duty, Light
5	87-2440	2	Bumper-Rubber
6	104-8301	4	Nut-Flange, NI

Ref.	Part Number	Qty.	Description
7	3234-24	4	Screw-HHF
8	325-10	2	Screw-HH
9	325-17	2	Screw-HH
10	325-19	2	Screw-HH
11	3296-23	4	Nut-Lock, NI
12	3296-45	2	Nut-Lock, NI
13	87-7270	4	Washer-Thrust
14	99-7350	1	Decal-Rating, Hitch (Light Duty)

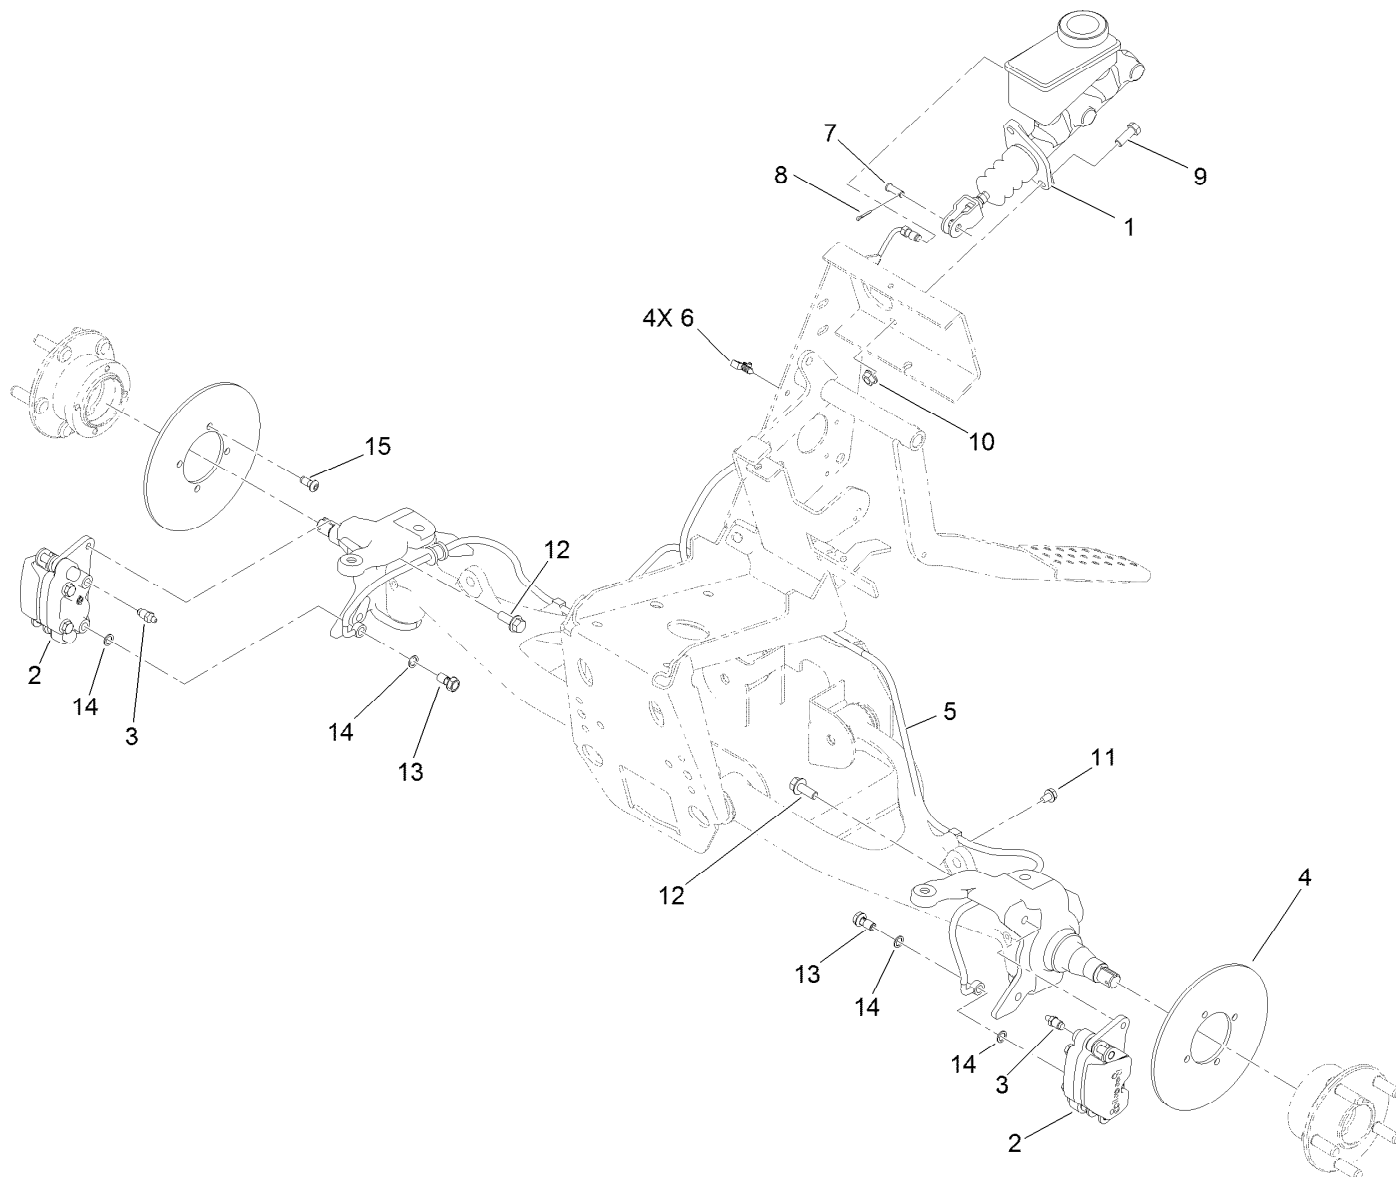 


Front Brake Assembly

Ref.	Part Number	Qty.	Description
1	104-6782	1	Master Cylinder ASM
2	127-7424	2	Brake Caliper ASM
3	119-9509	2	Screw-Bleed
4	131-3460	2	Rotor
5	119-9683	1	Front Brake Line ASM
6	114-8324	4	Clip-Line, Brake
7	283-2	1	Pin-Clevis
8	3272-10	1	Pin-Cotter
9	323-6	2	Screw-HH
10	3290-357	2	Nut-HHF, Whiz
11	32104-32	2	Screw-HWH
12	3234-11	4	Screw-HHF
13	120-4875	2	Bolt-Flange, Banjo
14	115-2341	4	Washer-Banjo
15	121-9671	8	Screw-HSBH

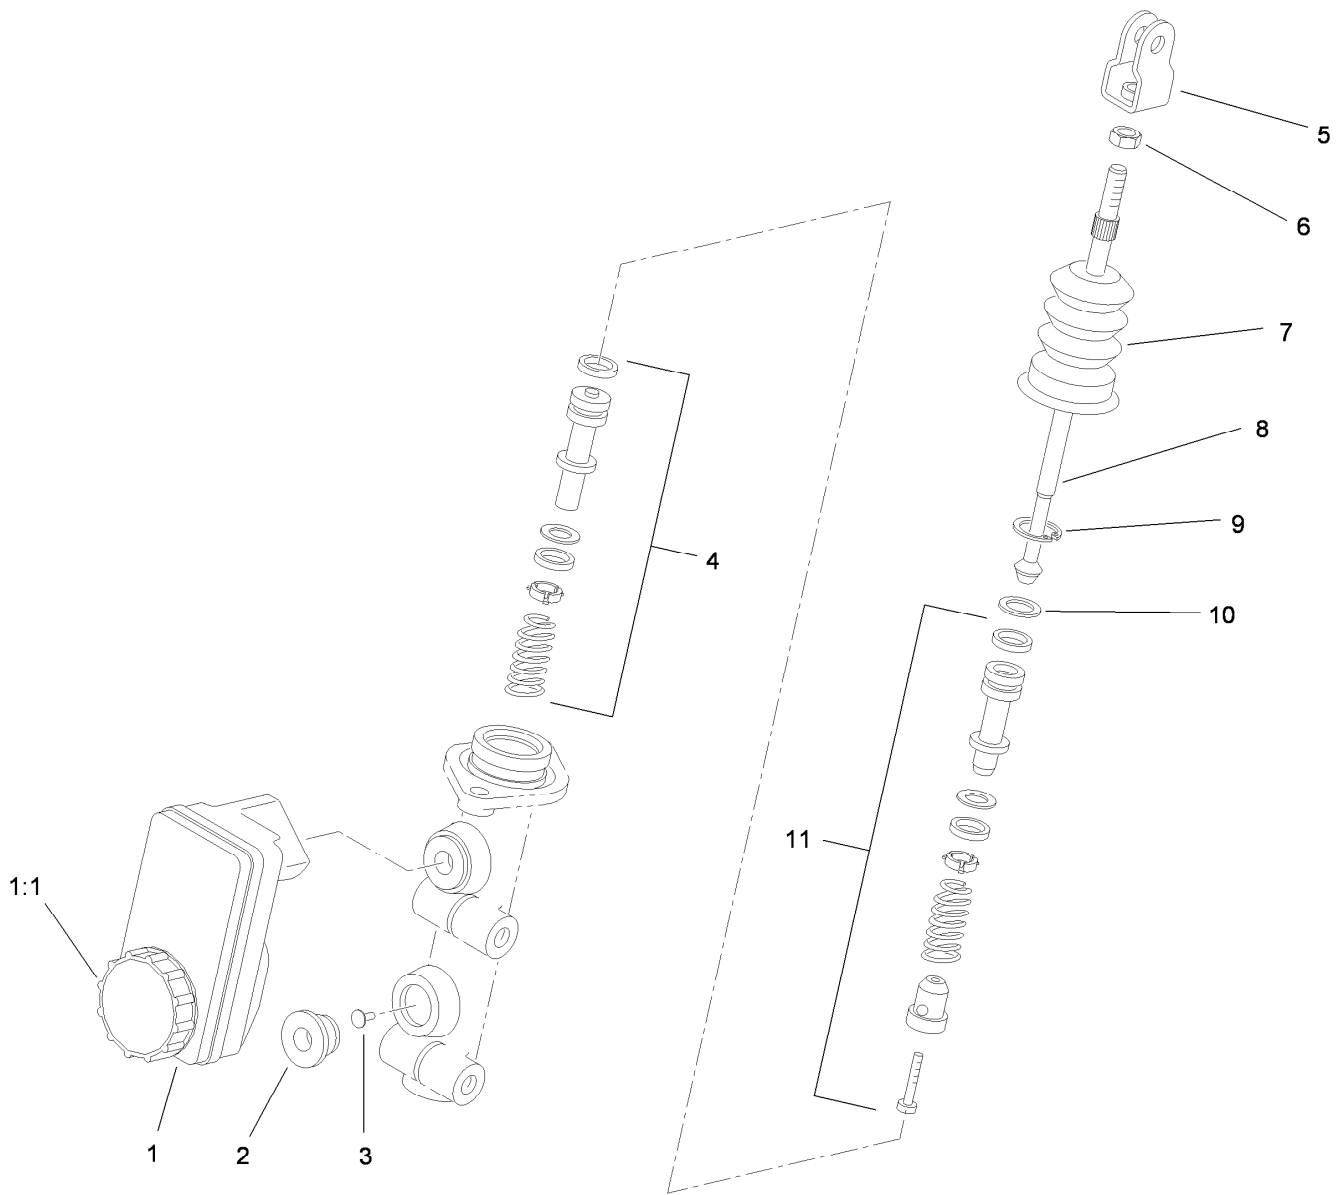 


Master Cylinder Assembly No. 104-6782

Ref.	Part Number	Qty.	Description
1	104-6845	1	Reservoir ASM
1:1	92-4112	1	Cap ASM
2	93-8971	2	Seal-Port, Flange
3	92-4103	1	Pin-Stop
4	92-4102	1	Secondary Piston ASM
5	92-4110	1	Clevis
6	21-0360	1	Nut-Hex
7	94-5209	1	Cover-Dust
8	94-5210	1	Rod-Push
9	92-4109	1	Ring-Snap
10	92-4108	1	Retainer-Washer
11	92-4101	1	Primary Piston ASM

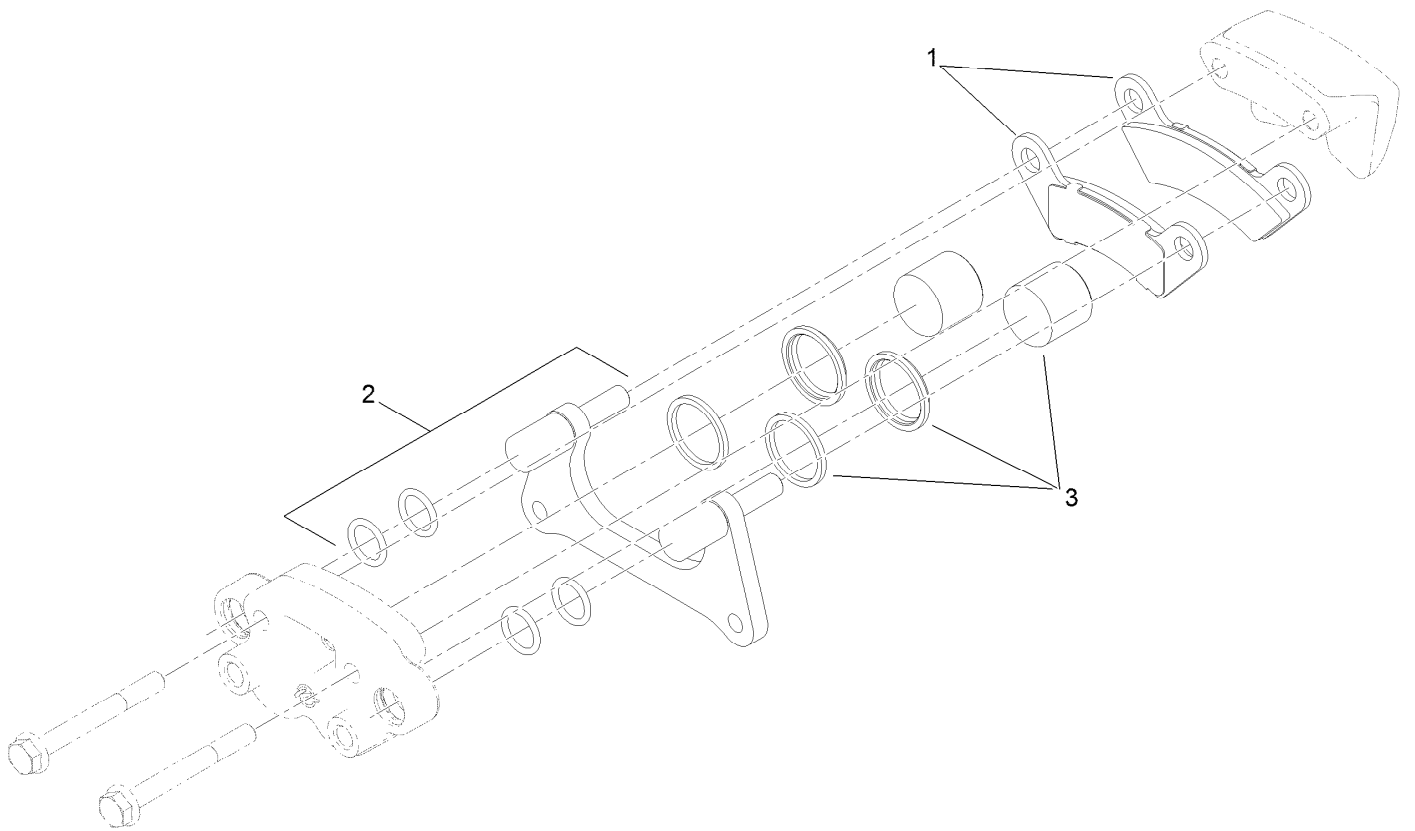 

Brake Caliper Assembly No. 127-7424


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-9510	1	Pads-Brake
2	119-9511	1	Bracket Kit
3	119-9512	1	Piston Kit

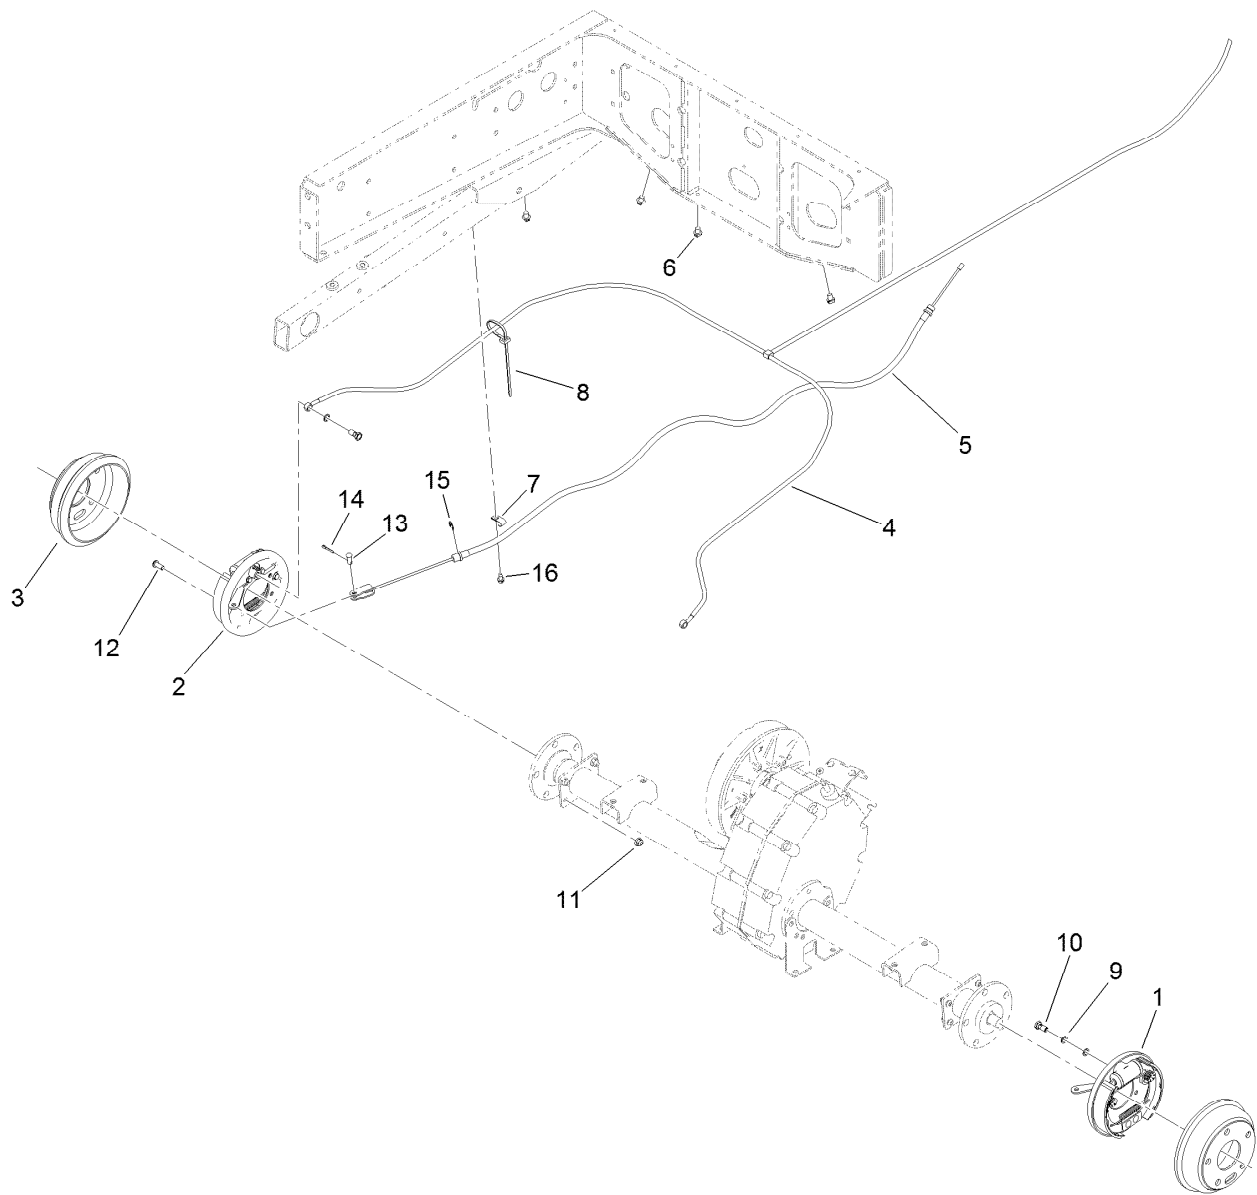 

Rear Brake Assembly

Ref.	Part Number	Qty.	Description
1	114-8331	1	RH Brake ASM
2	114-8332	1	LH Brake ASM
3	104-6500	2	Drum-Brake
4	112-2926	1	Rear Brake Line ASM
5	112-3309	2	Cable-Brake
6	32180-030	6	Clip-Tie
7	2412-89	2	Clamp-R
8	3290-378	2	Tie-Cable


Ref.	Part Number	Qty.	Description
9	115-2341	4	Washer-Banjo
10	115-2340	2	Bolt-Banjo
11	104-8300	8	Nut-Flange, NI
12	3274-55	8	Screw-HSBH
13	283-62	2	Pin-Clevis
14	3272-10	2	Pin-Cotter
15	32120-47	2	Ring-Retaining, External
16	32104-17	2	Screw-HWH

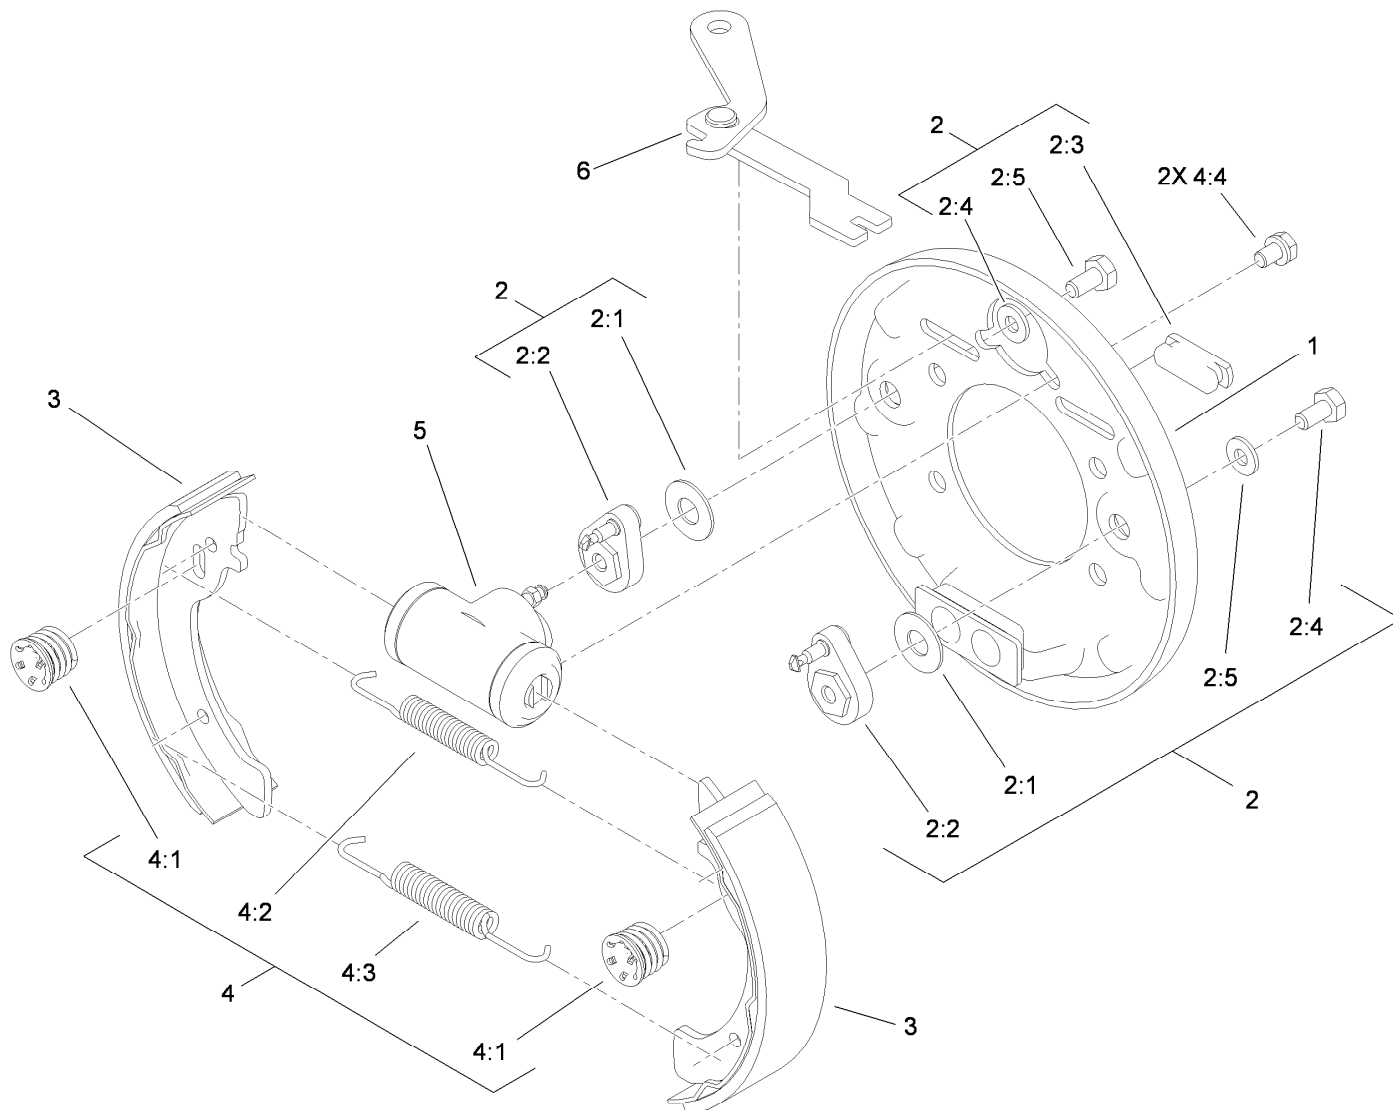 

RH Rear Brake Assembly No. 114-8331

Ref.	Part Number	Qty.	Description
1	100-8586	1	Backing Plate ASM
2	104-6820	1	Adjuster Kit
2:1	100-8585	2	Washer-Bellville
2:2	100-8588	2	Adjuster Lever ASM
2:3	100-8584	2	Cover-Dust
2:4		2	Washer ●
2:5		2	Bolt ●
3	104-6818	4	Shoe And Lining Kit
4	104-6819	1	Hardware Kit
4:1	100-8583	2	Shoe Hold Down Spring ASM
4:2	100-8581	2	Spring-Upper
4:3	100-8582	2	Spring-Lower
4:4		2	Bolt And Washer ●
5	114-8333	1	Wheel Cylinder ASM
6	104-6826	1	RH Park Brake Lever ASM

 
● Not serviced separately

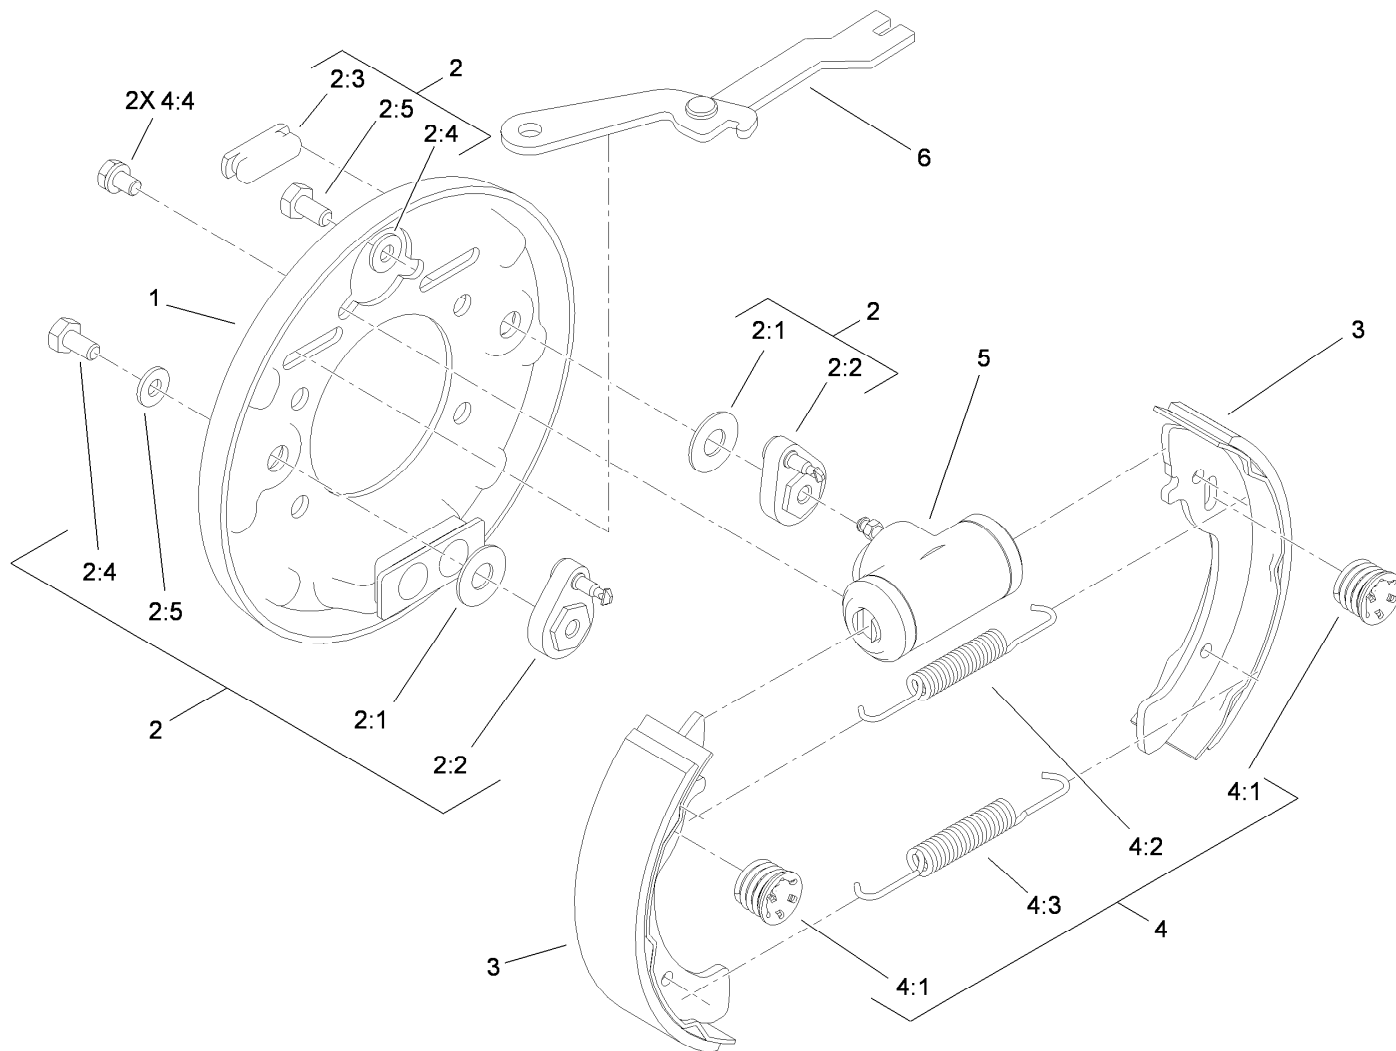

LH Rear Brake Assembly No. 114-8332

Ref.	Part Number	Qty.	Description
1	100-8586	1	Backing Plate ASM
2	104-6820	1	Adjuster Kit
2:1	100-8585	2	Washer-Bellville
2:2	100-8588	2	Adjuster Lever ASM
2:3	100-8584	2	Cover-Dust
2:4		2	Washer ●
2:5		2	Bolt ●
3	104-6818	4	Shoe And Lining Kit
4	104-6819	1	Hardware Kit
4:1	100-8583	2	Shoe Hold Down Spring ASM
4:2	100-8581	2	Spring-Upper
4:3	100-8582	2	Spring-Lower
4:4		2	Bolt And Washer ●
5	114-8333	1	Wheel Cylinder ASM
6	104-6825	1	LH Park Brake Lever ASM

 ● Not serviced separately

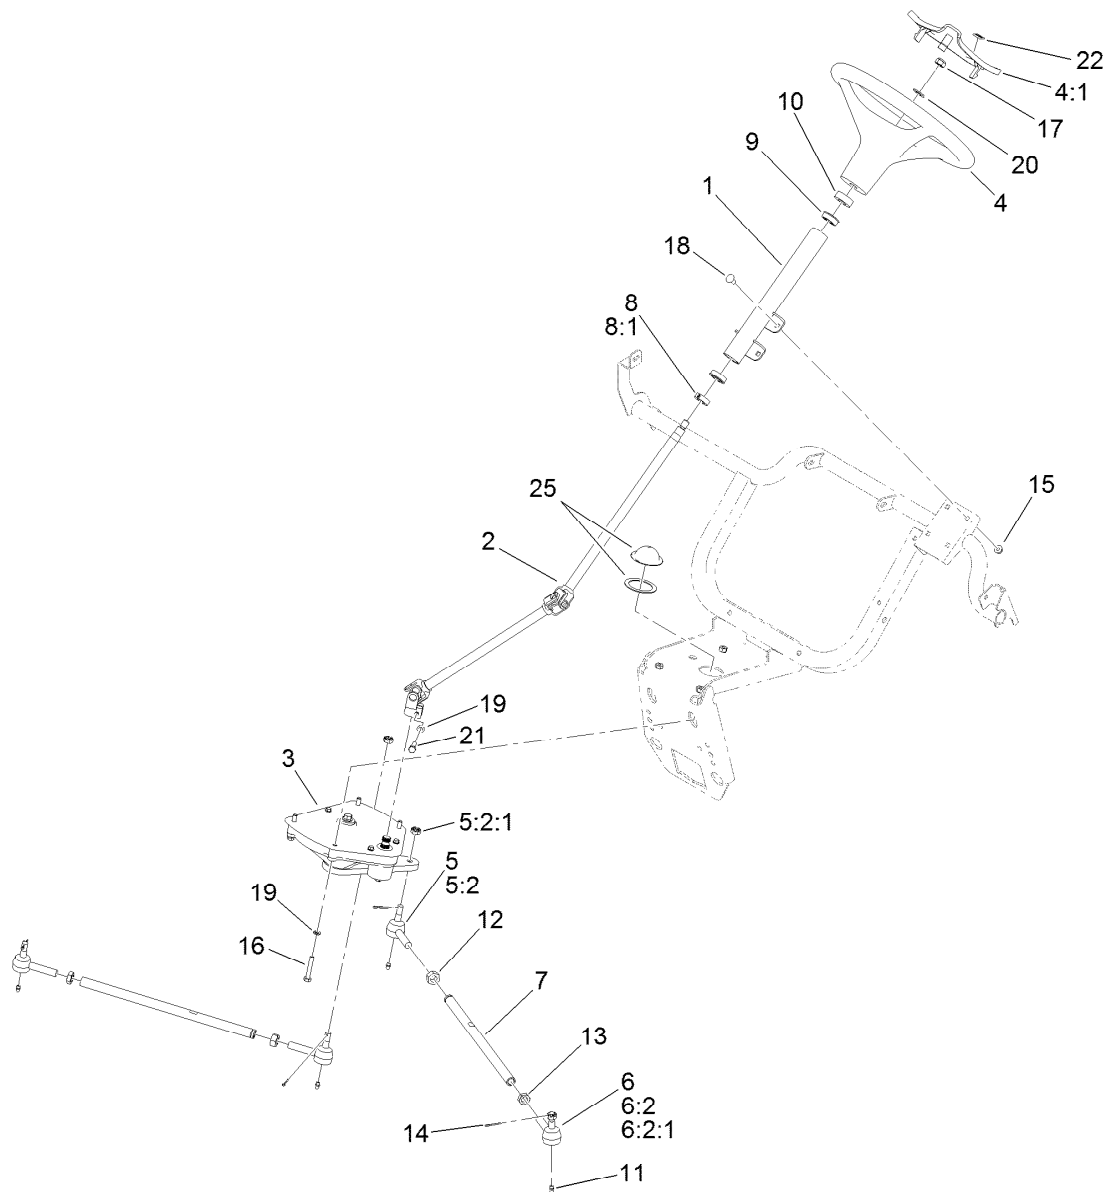


Steering Assembly

Ref.	Part Number	Qty.	Description
1	112-3264-03	1	Column
2	112-3355	1	Steering Shaft ASM
3	112-3130	1	Steering Box ASM
4	98-1471	1	Wheel-Steering
4:1	98-1468	1	Cover-Wheel, Steering
5	112771-03	2	Joint-Ball, LH
5:2		1	Socket-Balljoint ●
5:2:1	915031	1	Nut
6	112772-03	2	Joint-Ball, RH
6:2		1	Socket-Balljoint ●
6:2:1	915031	1	Nut
7	115-7654	2	Tie Rod
8	111383	1	Collar
8:1	3245-32	1	Screw-HSH
9	112-3262	2	Bearing

Ref.	Part Number	Qty.	Description
10	21-9260	1	Cover-Dust
11	302-5	4	Fitting-Grease
12	3218-21	2	Nut-Jam
13	3220-11	2	Nut-Jam
14	3272-7	4	Pin-Cotter
15	104-8300	4	Nut-Flange, NI
16	112-3305	4	Screw-HH
17	119-9493	1	Nut-Lock, NI
18	3230-1	4	Bolt-CARR
19	3253-4	5	Washer-Lock
20	3256-26	1	Washer-Flat
21	48-7730	1	Screw-Cap, HH
22	98-1459	1	Decal
25	120-5049	1	Steering Box Cover Kit

 
● Not serviced separately

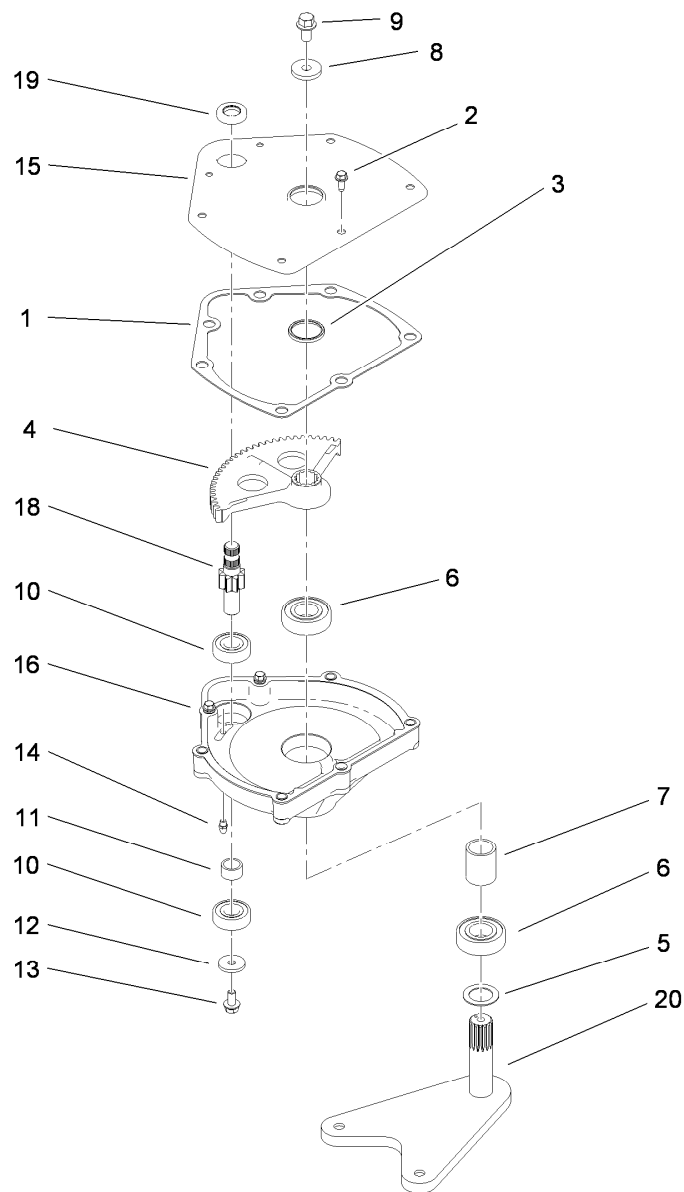

Steering Box Assembly No. 112-3130

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	94-2135	1	Gasket
2	32144-10	3	Screw-HWH
3	103118	1	Seal
4	99-7843	1	Sector-Gear
5	3256-42	1	Washer-Flat
6	251-82	2	Bearing-Ball
7	112-2917	1	Spacer
8	104-6563	1	Washer-Stepped
9	104-7156	1	Screw-HHF
10	38-7820	2	Bearing-Ball


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
11	94-2217	1	Spacer-Shaft, Input
12	1-613235	1	Washer
13	98-3498	1	Screw-HH
14	302-5	1	Fitting-Grease
15	112-2918-03	1	Cover-Housing, Steering
16	114-8309	1	Housing-Steering
18	115-7726	1	Gear-Pinion
19	99-7657	1	Seal-Oil
20	112-3096-03	1	Arm-Pitman

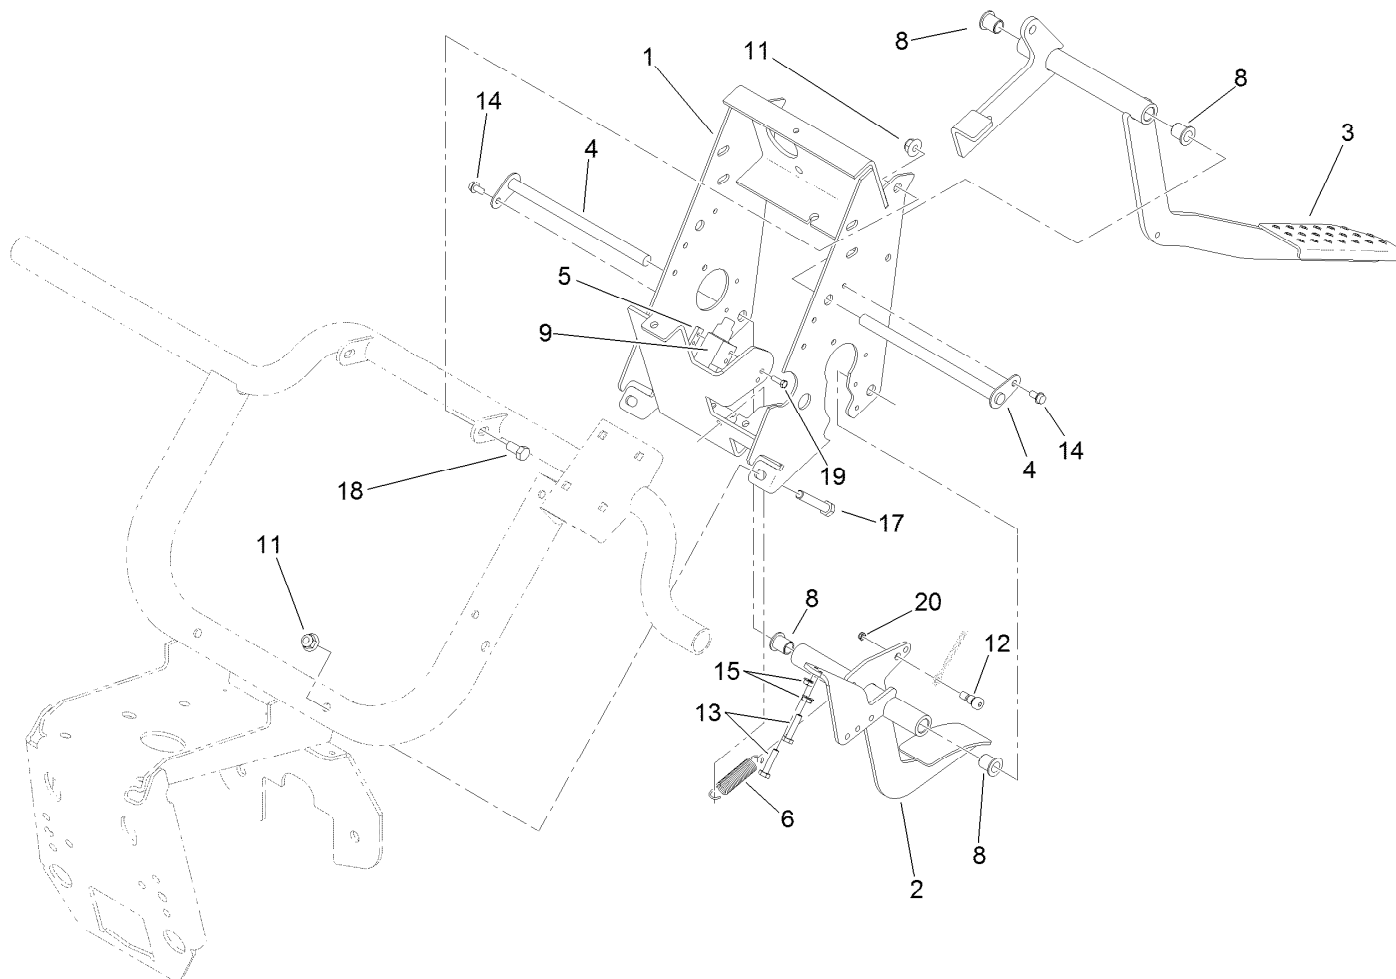 

Pedal Box Assembly

Ref.	Part Number	Qty.	Description
1	119-0748-03	1	Support-Pedal
2	119-9747-03	1	Pedal-Throttle
3	112-3314-03	1	Pedal-Brake
4	104-7164	2	Pivot-Pedal
5	1-633181	1	Plate-Tapped
6	104-6415	1	Spring-Return, Pedal
8	125-8775	4	Bushing-Flange
9	99-7407	1	Switch
11	104-8301	4	Nut-Flange, NI


Ref.	Part Number	Qty.	Description
12	1-809056	1	Screw-HSH
13	321-7	2	Screw-HH
14	32144-4	2	Screw-HWH
15	32149-2	2	Nut-Keps
17	323-11	2	Screw-HH
18	323-4	2	Screw-HH
19	3290-134	2	Screw
20	3296-47	1	Nut-Lock, NI

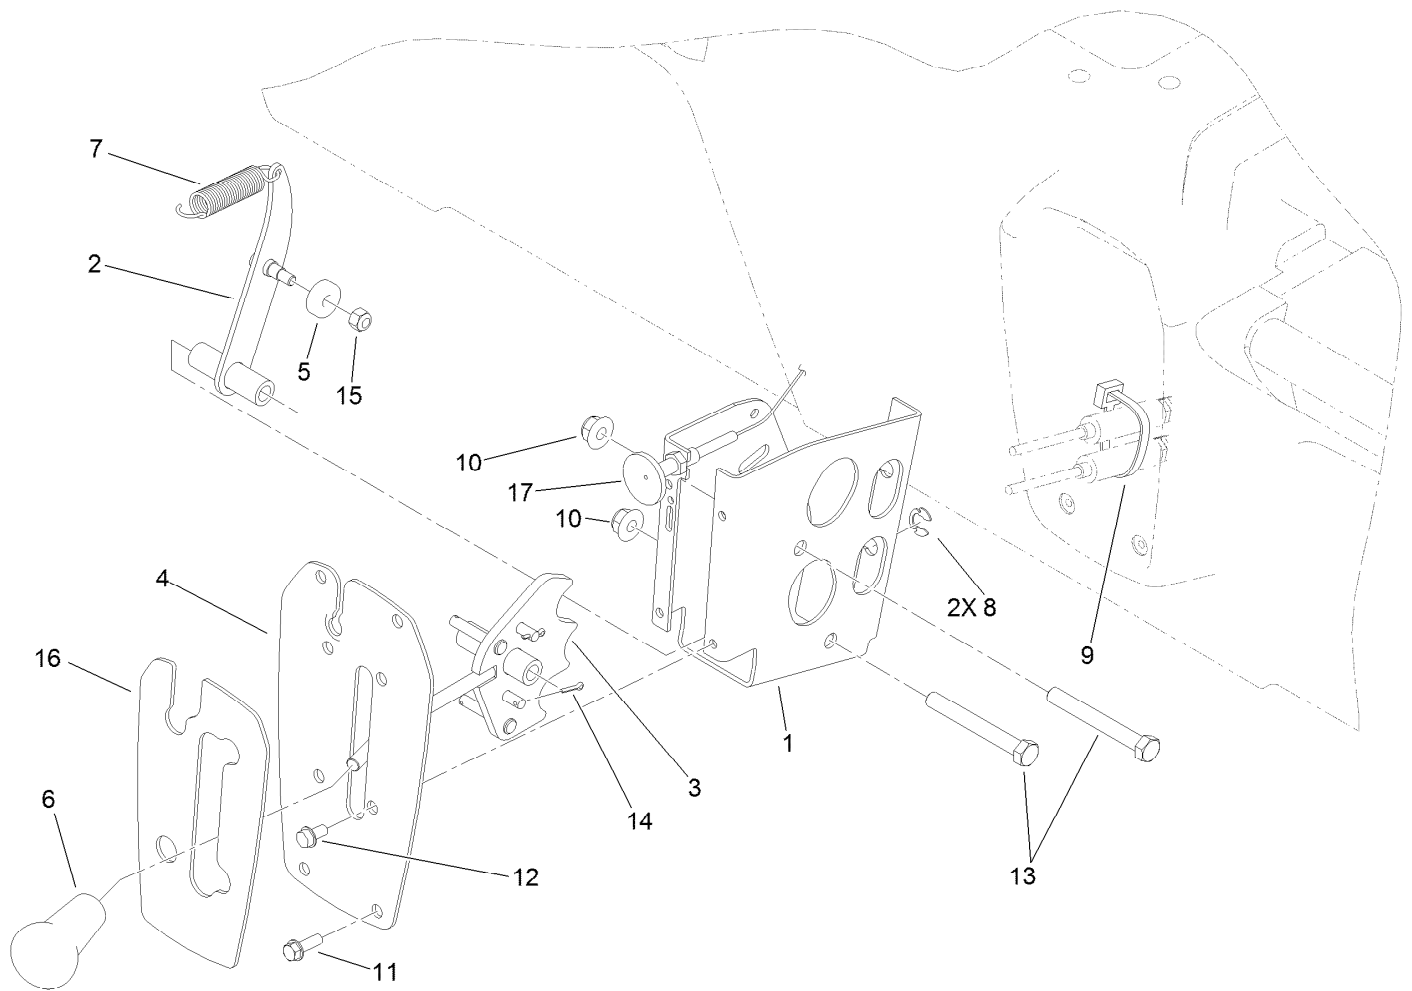 

Shifter Assembly

Ref.	Part Number	Qty.	Description
1	108-3141-03	1	Bracket-Shift
2	108-3138	1	Arm-Detent
3	114-2719	1	Plate-Detent
4	99-7887-03	1	Plate-Shifter
5	251-307	1	Bearing-Ball
6	99-7981	1	Knob-Grip, Soft
7	104-6415	1	Spring-Return, Pedal
8	32151-101	2	E-Ring
9	3290-378	1	Tie-Cable


Ref.	Part Number	Qty.	Description
10	104-8301	2	Nut-Flange, NI
11	32105-15	4	Screw-HWH
12	32144-4	4	Screw-HWH
13	323-14	2	Screw-HH
14	3272-5	2	Pin-Cotter
15	3296-42	1	Nut-Lock, NI
16	99-7952	1	Decal-Shifter
17	99-7111	1	Cable-Choke

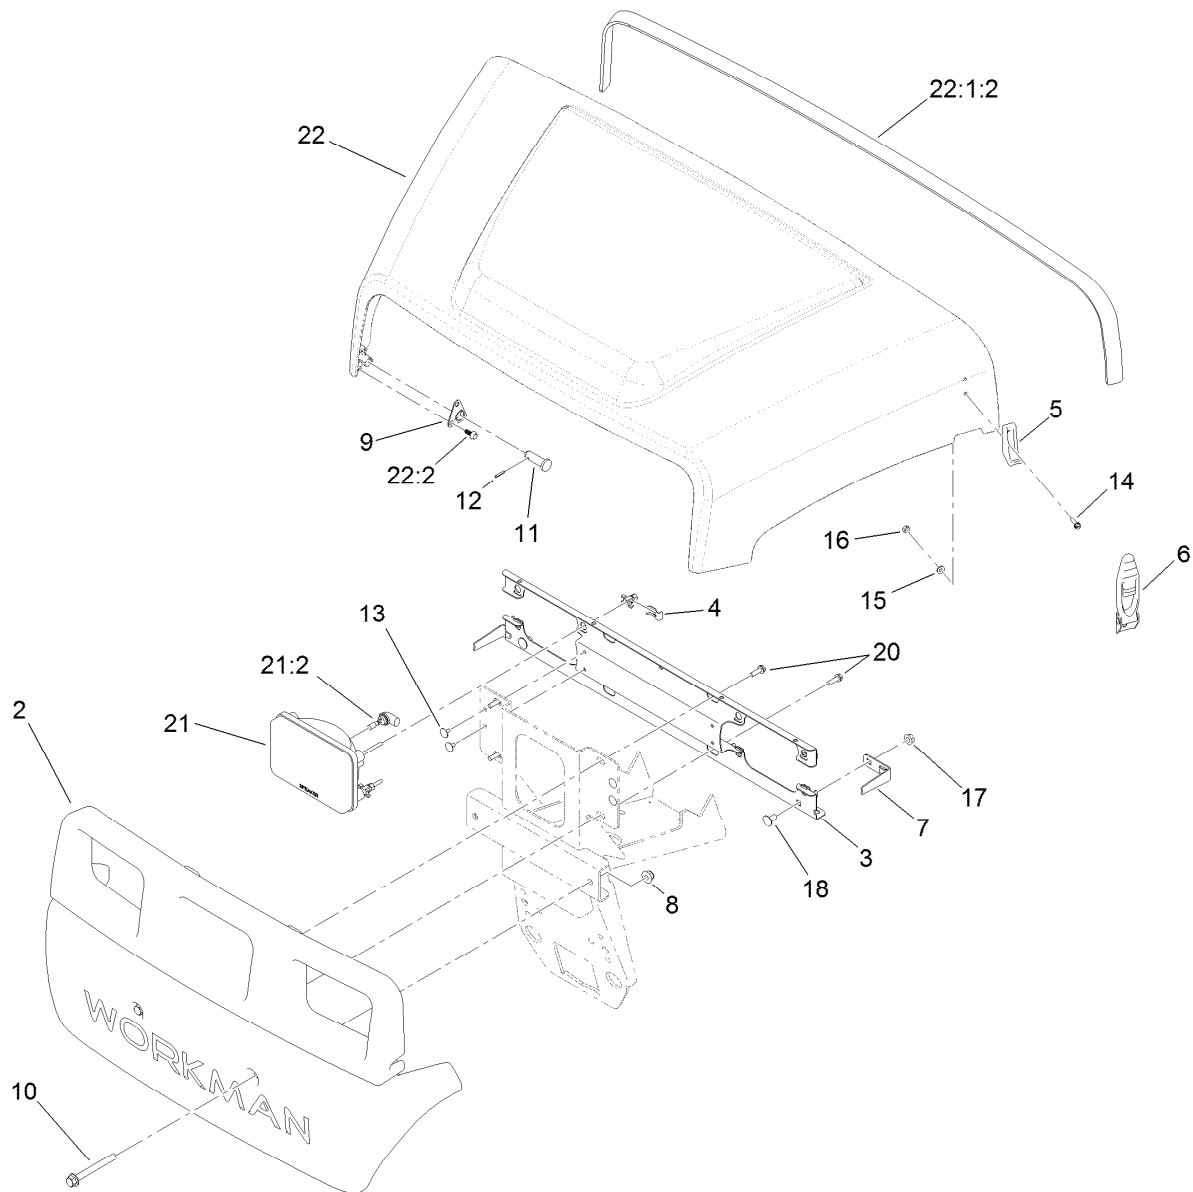 

Hood and Bumper Assembly


Ref.	Part Number	Qty.	Description
2	112-3365	1	Bumper
3	119-0841-03	1	Bracket-Headlight
4	115-2408	6	Clip-Speed
5	103-2897	2	Latch-Catch
6	115-2416	2	Latch-Rubber
7	112-3373	2	Keeper-Pivot, Hood
8	104-8301	2	Nut-Flange, NI
9	112-3308	2	Retainer-Pin
10	115-7660	2	Screw-HHF
11	117-5094	2	Pin-Clevis
12	32121-50	2	Pin-Spring
13	146489	4	Rivet

Ref.	Part Number	Qty.	Description
14	32105-13	4	Screw-HWH
15	3256-14	4	Washer-Flat
16	3296-2	4	Nut-Lock, NI
17	32128-20	2	Nut-HF
18	3230-18	2	Screw-CARR
20	46-8091	4	Screw-HWH
21	114-8322	2	Headlight ASM
21:2	115-2395	1	Light Bulb ASM
22	121-9606	1	Hood ASM
22:1:2	115-7635	1	Seal-Foam
22:2	121-9605	6	Screw-HWH

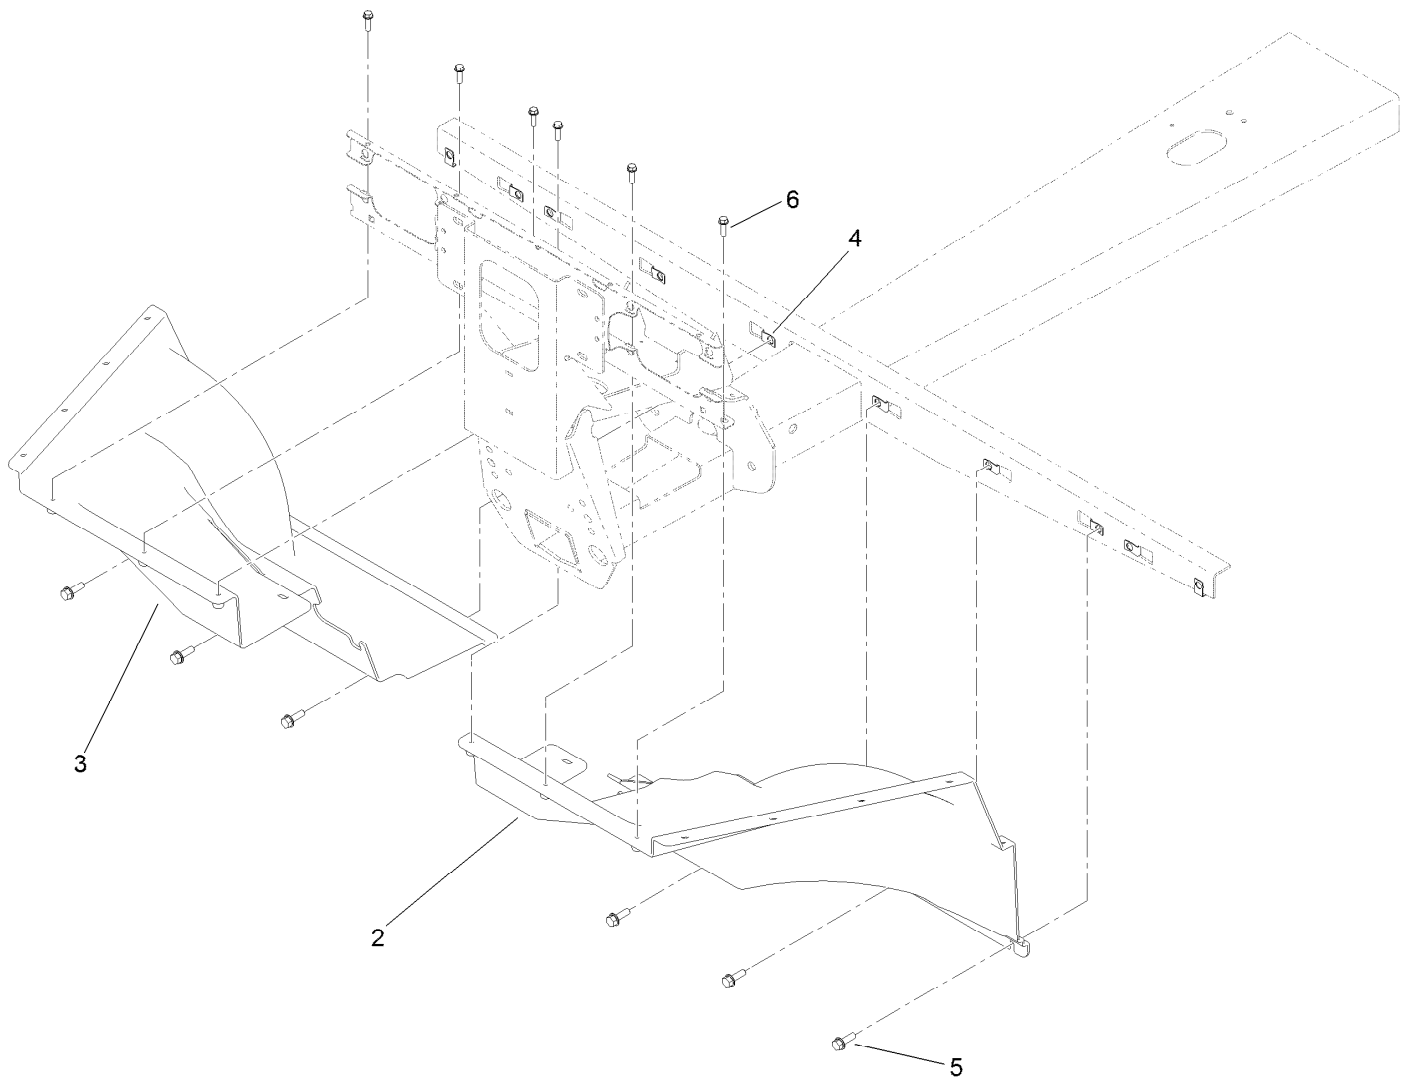 


Fender Well Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	112-3369	1	Well-Fender, LH
3	112-3368	1	Well-Fender, RH
4	112-3306	10	Nut
5	3234-29	10	Screw-HHF
6	46-8091	6	Screw-HWH

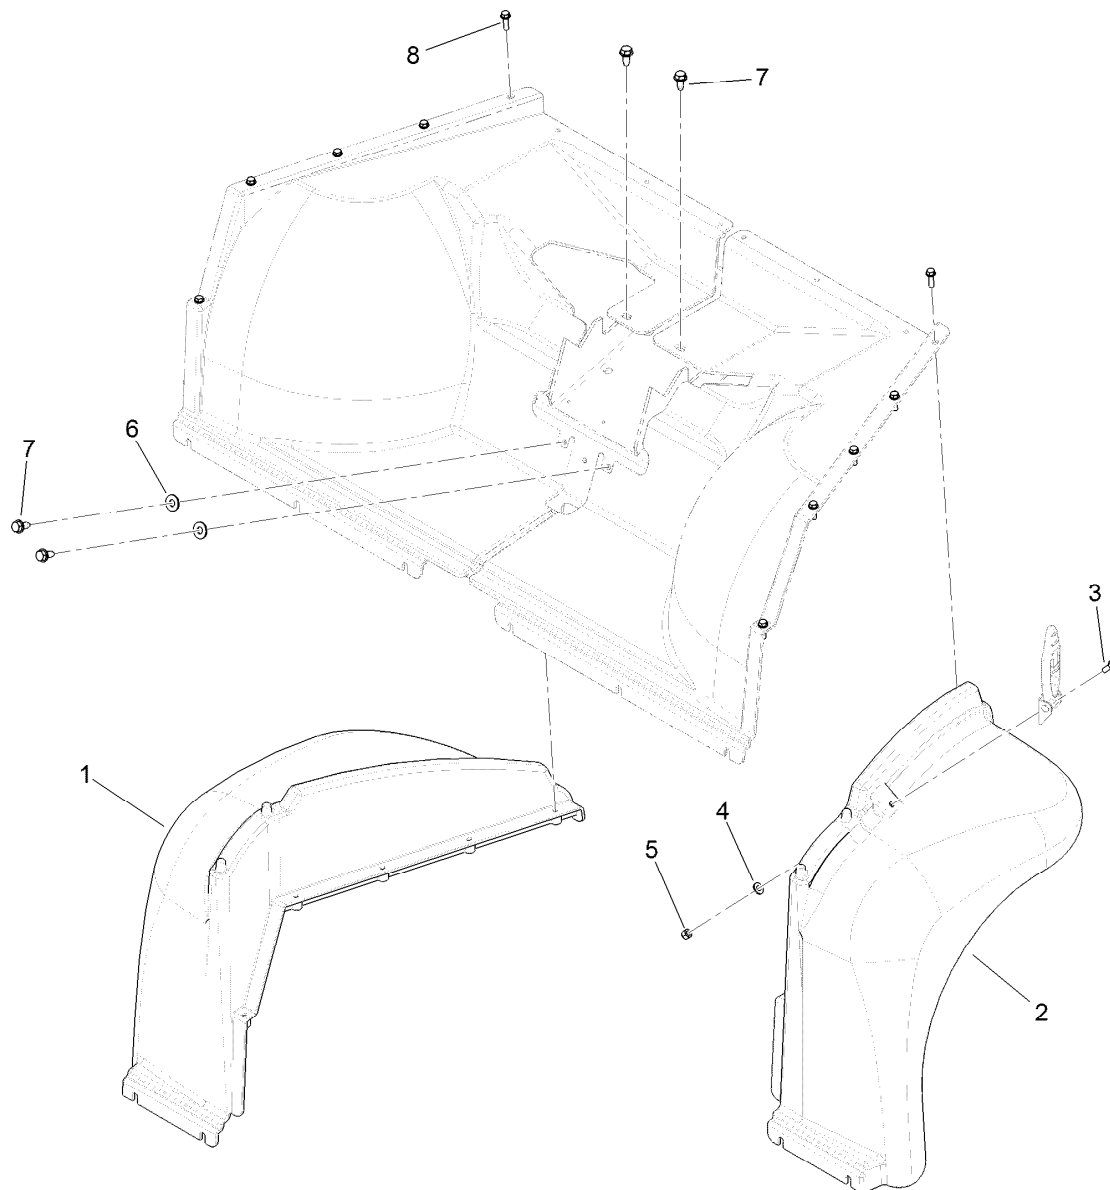 

Fender Assembly


Ref.	Part Number	Qty.	Description
1	112-3371	1	Fender-LH
2	112-3370	1	Fender-RH
3	321-39	2	Screw-HH
4	3256-22	2	Washer-Flat
5	3296-42	2	Nut-Lock, NI
6	3256-71	2	Washer-Flat
7	32104-32	4	Screw-HWH
8	46-8091	10	Screw-HWH

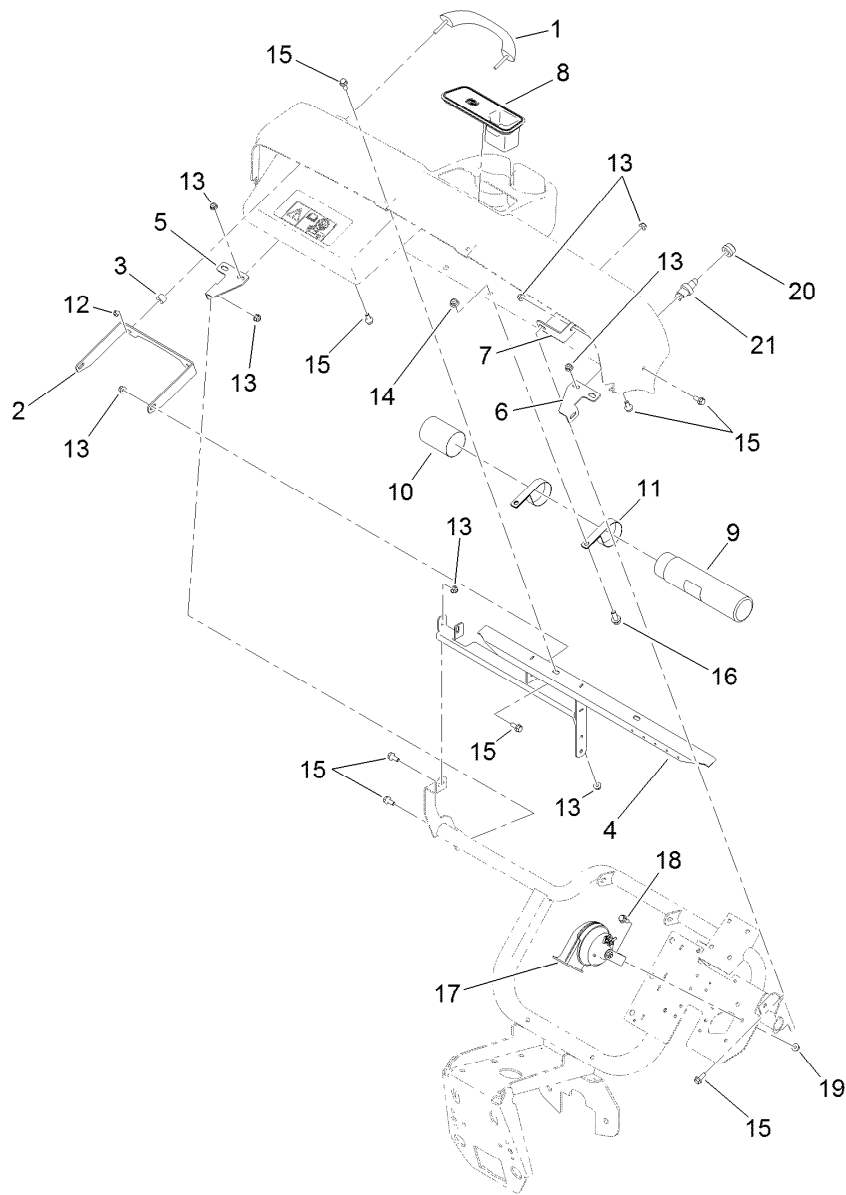 

Dash Installation Assembly


Ref.	Part Number	Qty.	Description
1	112-3320	1	Handle-Grip
2	112-3391-03	1	Bracket-Grip, Handle
3	114-8301	2	Spacer
4	115-7651-03	1	Support-Dash
5	114-8304	1	Bracket-Mount, Dash (RH)
6	114-8312	1	Bracket-Mount, Dash (LH)
7	114-8305	1	Angle-Mount, Dash (LH)
8	104-6930	1	Plug-Rubber
9	104-7050	1	Tube-Manual
10	104-7048	1	Cap-Housing
11	2412-133	2	R-Clamp

Ref.	Part Number	Qty.	Description
12	104-7201	2	Nut-HF
13	104-8300	15	Nut-Flange, NI
14	104-8301	2	Nut-Flange, NI
15	110-5053	15	Screw-HHF
16	3234-11	2	Screw-HHF
17	110-2594	1	Horn ASM
18	110-5053	1	Screw-HHF
19	104-8300	1	Nut-Flange, NI
20	112-3313	1	Nut-Weatherproof
21	112-3324	1	Switch-Horn

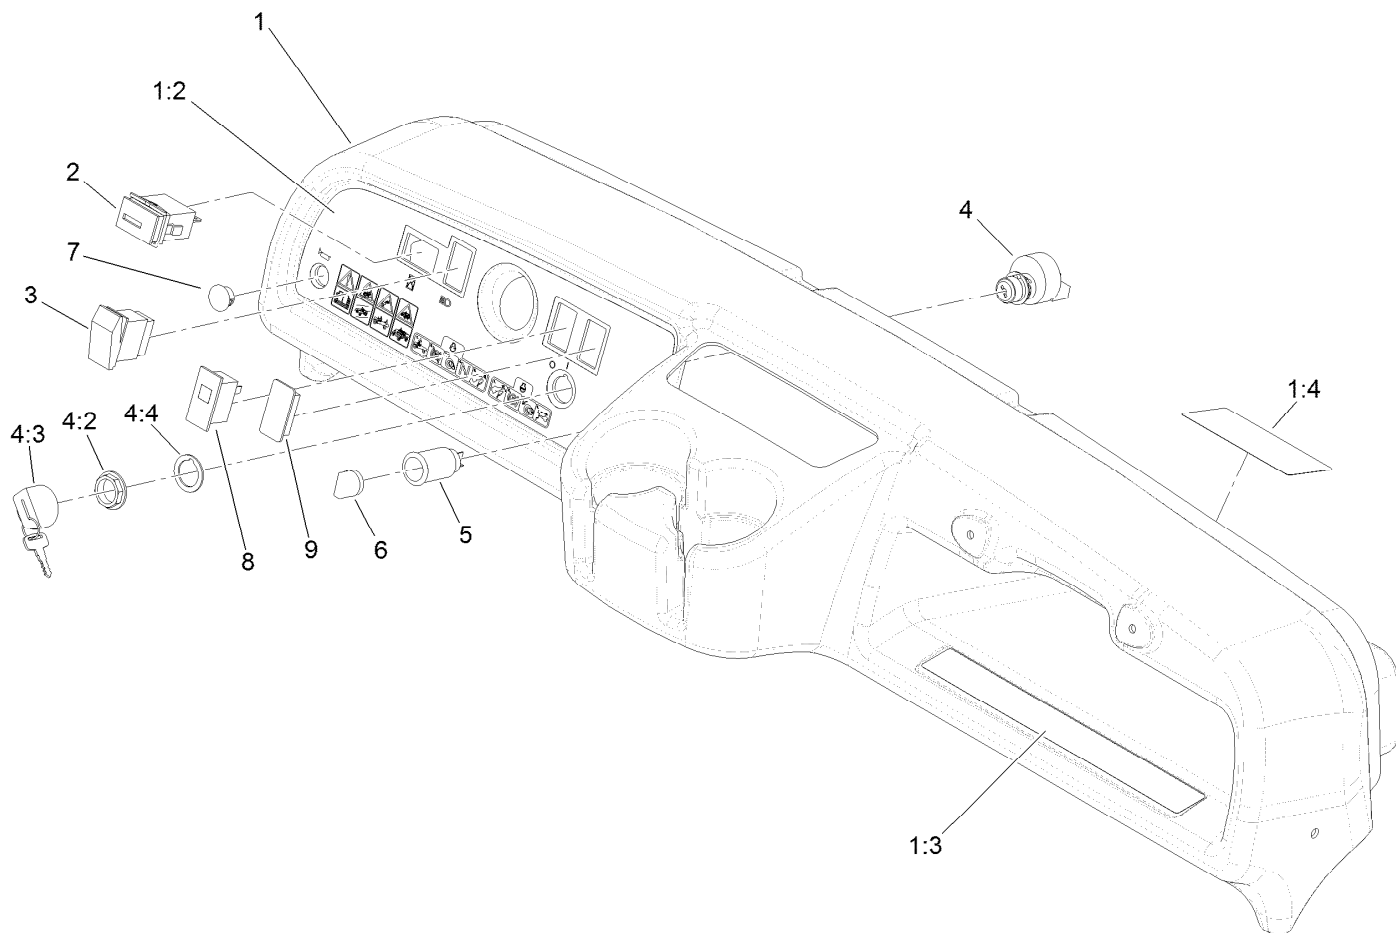 

Dash Assembly


Ref.	Part Number	Qty.	Description
1	114-8310	1	Dash ASM
1:2	117-5001	1	Decal-Panel, Control
1:3	104-6581	1	Decal-Danger
1:4	115-2412	1	Decal-No Storage
2	94-4208	1	Hourmeter
3	95-8999	1	Switch
4	120-3956	1	Ignition Switch ASM
4:2	108-8660	1	Nut-Mounting
4:3	106-5270	1	Ignition Key Set
4:4	108-8659	1	Washer-Backup
5	99-7411	1	Point-Power
6	99-7416	1	Cap
7	94-5627	1	Plug
8	99-7410	1	Indicator-Light, Low-Oil Pressure
9	99-7420	1	Plug-Hole

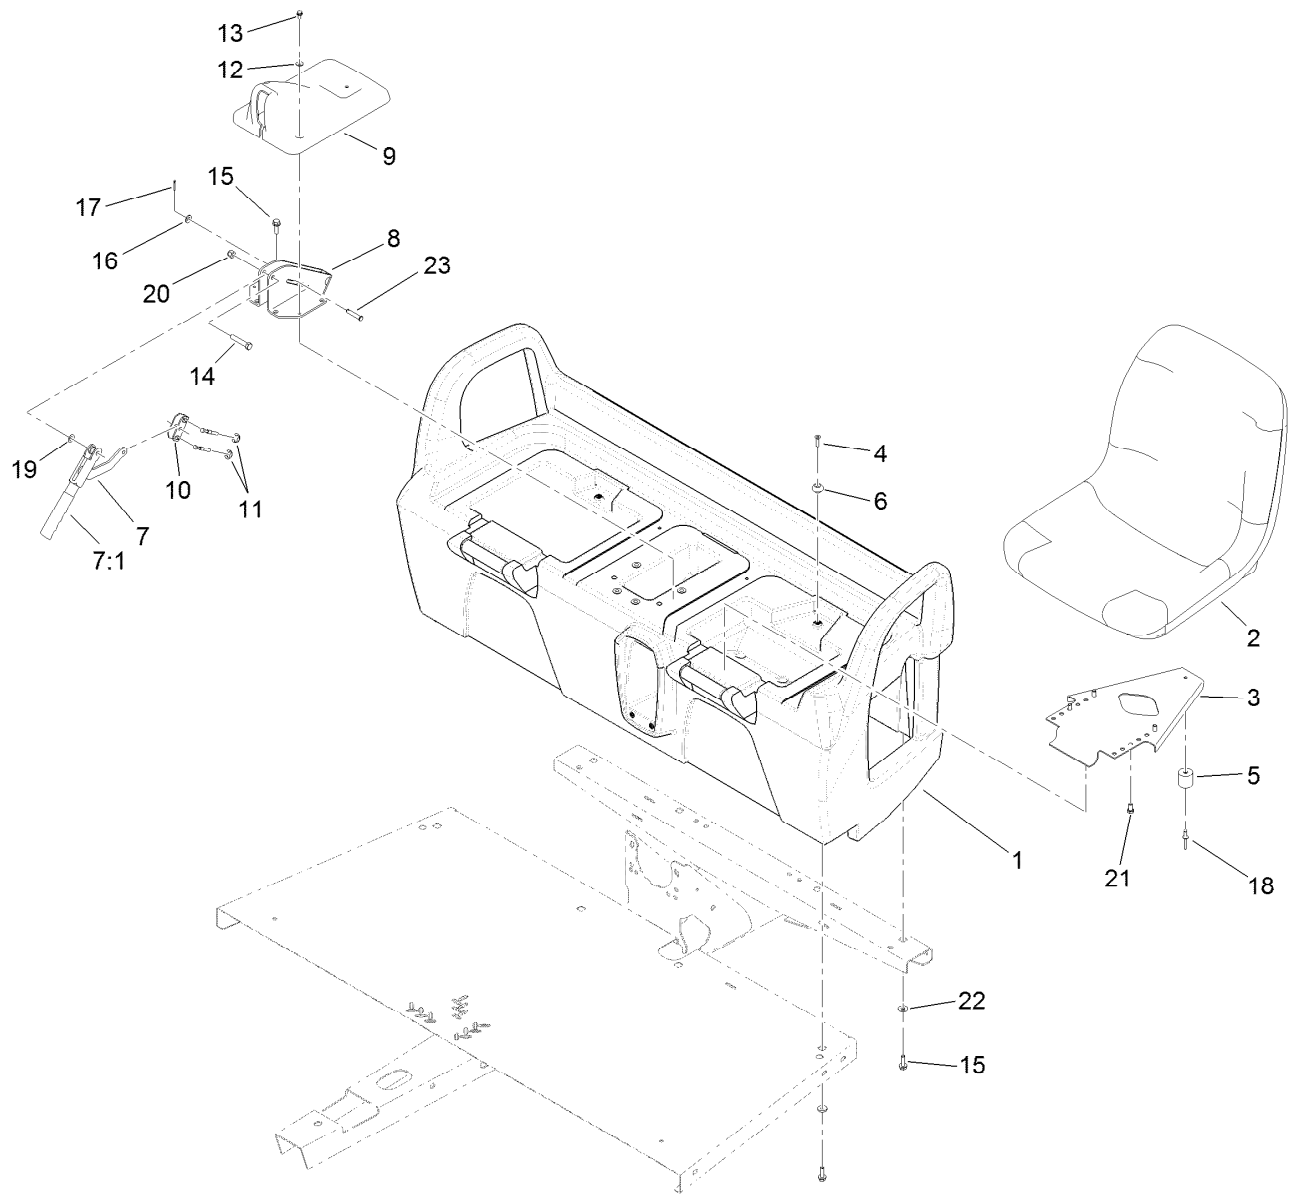 

Seatbase Assembly

Ref.	Part Number	Qty.	Description
1	104-6847	1	Seat Base ASM
2	112-2923	2	Seat ASM
3	99-7829	2	Bracket-Seat
4	32108-5	2	Screw-FH
5	99-7830	2	Rubber Receptical ASM
6	99-7833	2	Post-Holding
7	127-8863	1	Lever-Brake, Park
7:1	127-8864	1	Grip-Handle
8	104-6844-03	1	Support-Brake, Park
9	104-7014	1	Cover-Brake, Parking
10	87-3480	1	Bracket-Equalizer, Cable
11	32120-47	2	Ring-Retaining, External


Ref.	Part Number	Qty.	Description
12	3256-1	2	Washer-Flat
13	32144-4	2	Screw-HWH
14	323-10	1	Screw-HH
15	3234-17	12	Screw-HHF
16	3256-23	1	Washer-Flat
17	3272-6	1	Pin-Cotter
18	3290-412	2	Rivet
19	3290-477	1	Washer-Curved
20	3296-39	1	Nut-Lock, NI
21	33114-016	8	Screw-HH
22	88-7200	8	Washer-Flat
23	94-3829	1	Pin-Clevis

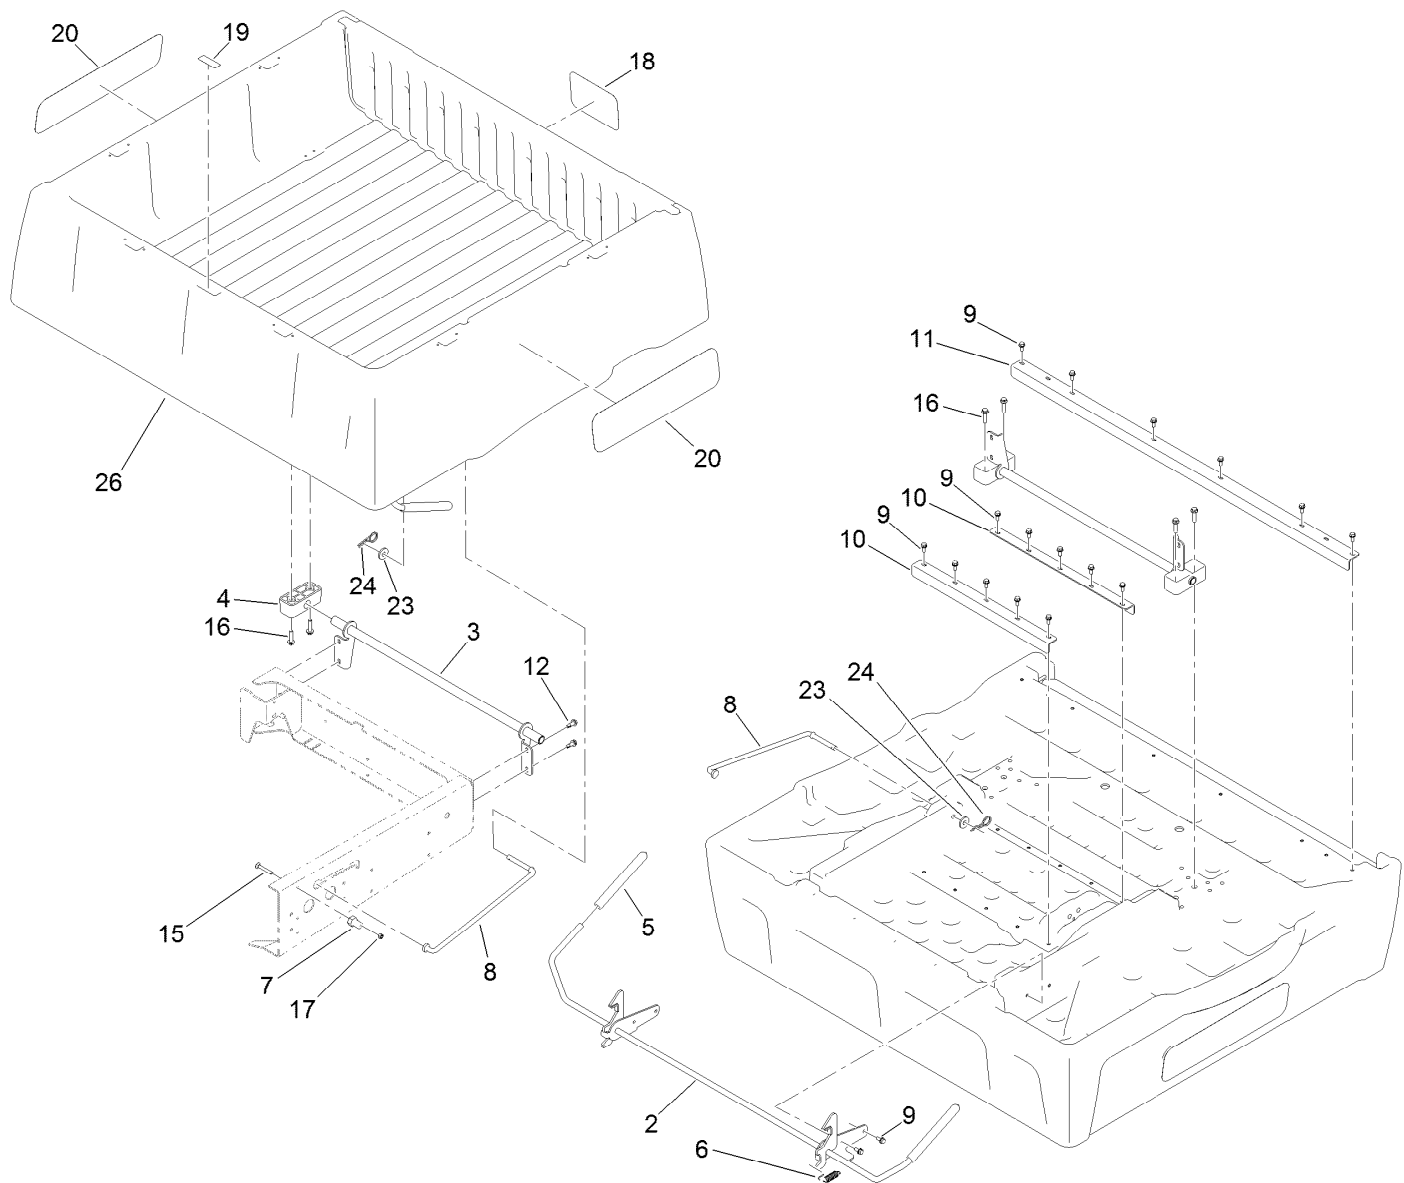 

Cargo Bed Assembly


Ref.	Part Number	Qty.	Description
2	121-6344	1	Latch ASM
3	119-0848-03	1	Bracket-Pivot
4	121-6342	2	Bushing-Pivot
5	119-9627	2	Grip-Handle
6	5-7290	2	Spring-Tension
7	104-7248	2	Pin-Latch
8	121-6316	1	Rod-Prop
9	3234-5	20	Screw-HHF
10	121-6314-03	2	Brace-Bed, Middle
11	121-6315-03	1	Brace-Bed, Rear
12	105-6245	4	Screw-Tapping

Ref.	Part Number	Qty.	Description
15	3230-7	2	Bolt-CARR
16	3234-18	4	Screw-HHF
17	3296-29	2	Nut-Lock, NI
18	104-7213	1	Decal
19	115-7739	1	Decal-No Riders
20	119-9450	2	Decal
23	110-6147	1	Washer-Flat
24	107-3155	1	Hairpin
26	127-7384	1	Complete Cargo Bed Service ASM

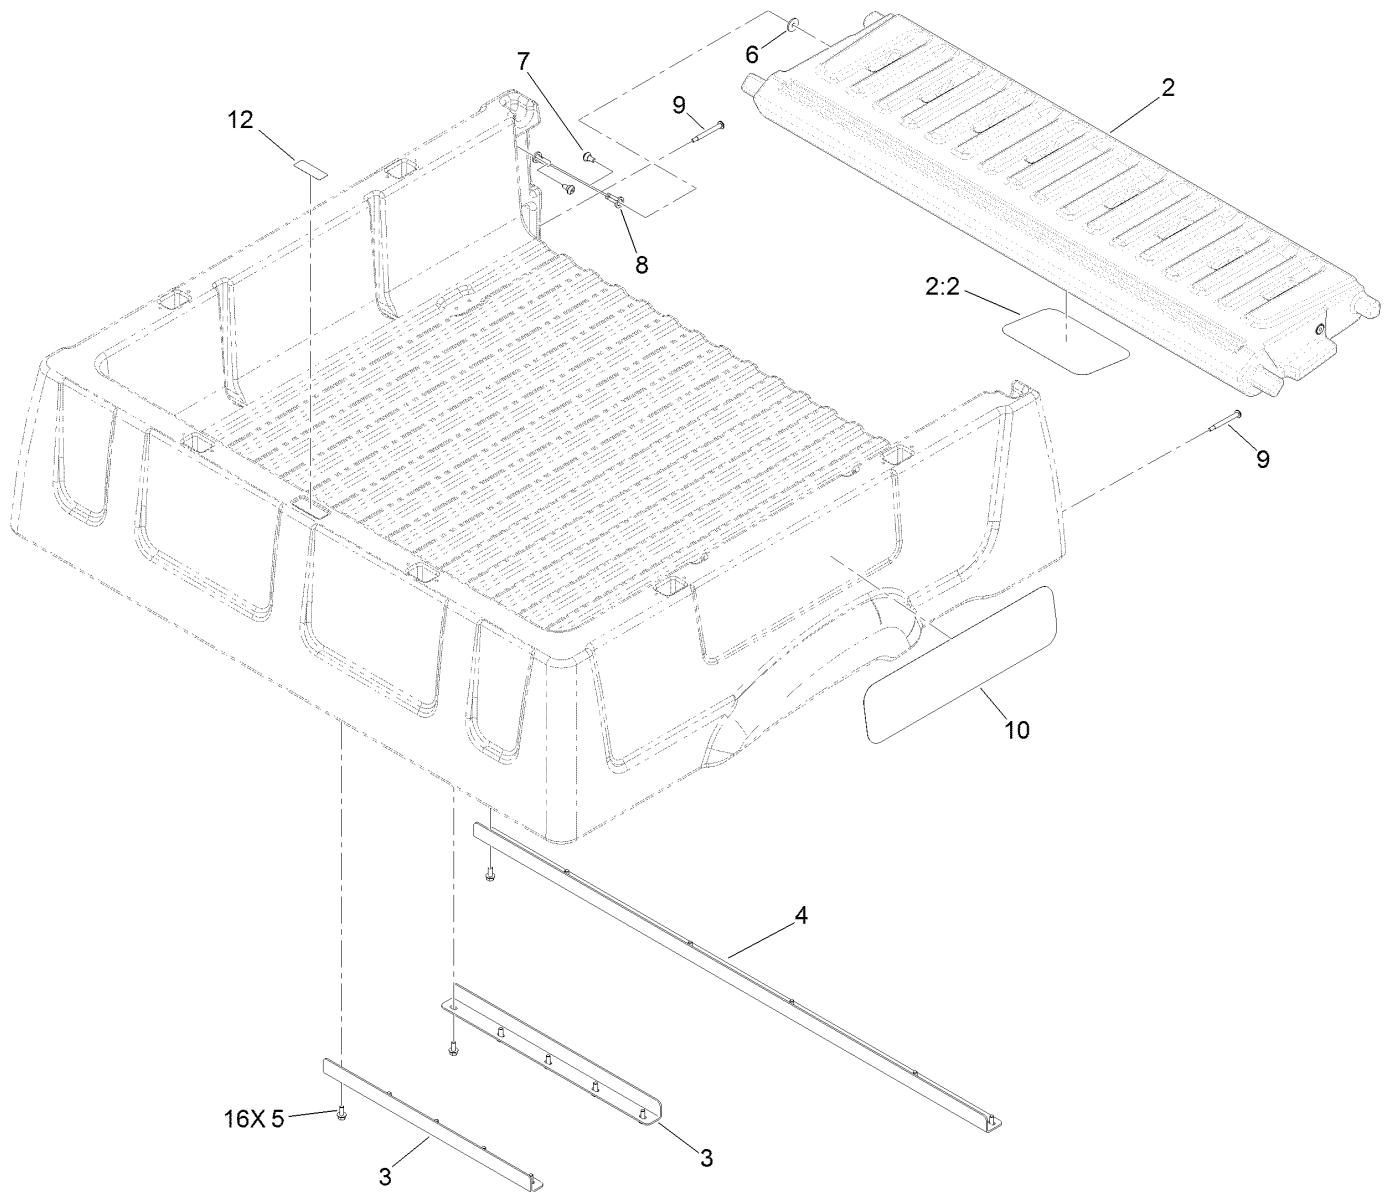 

Cargo Bed Service Assembly No. 127-7384


Ref.	Part Number	Qty.	Description
2	127-7396	1	Tailgate ASM
2:2	104-7213	1	Decal
3	121-6314-03	2	Brace-Bed, Middle
4	121-6315-03	1	Brace-Bed, Rear
5	3234-5	16	Screw-HHF
6	115-7109	2	Washer-Flat
7	119-2267	4	Screw-Shoulder, BHTF
8	121-6343	2	Lanyard-Tailgate
9	127-7383	2	Screw-Shoulder, Bh (Torx)
10	120-4825	2	Decal
12	115-7739	1	Decal-No Riders

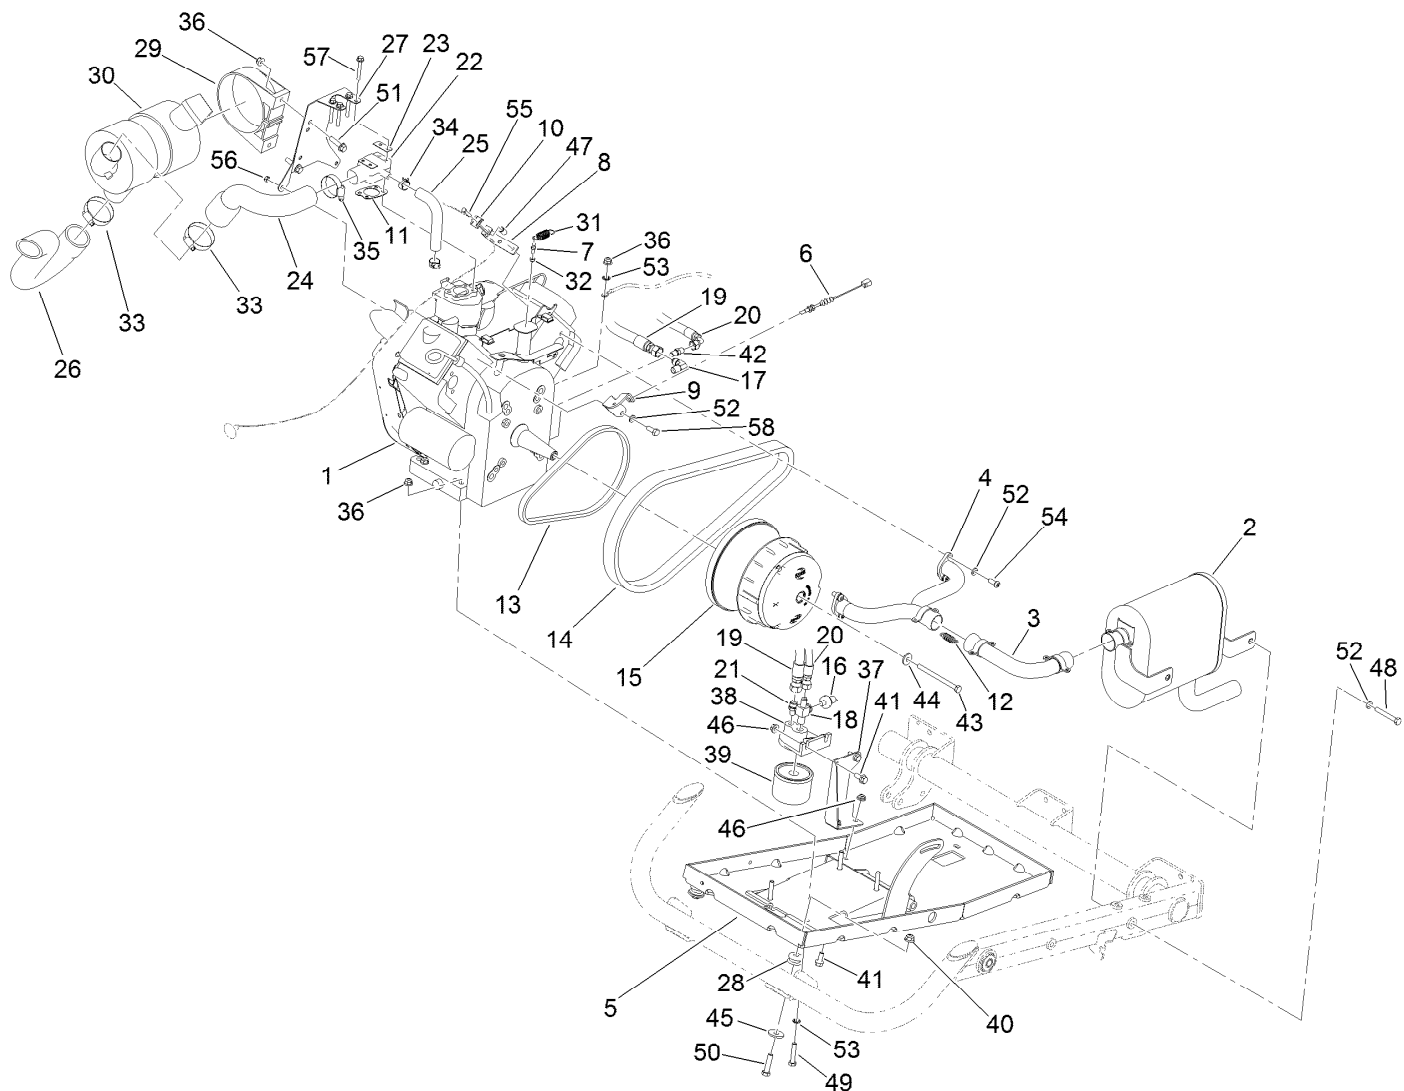 

Engine, Clutch and Air Cleaner Assembly

Ref.	Part Number	Qty.	Description
1	117-2714	1	Engine-Briggs & Stratton, 295440-0153-G2
2	119-0746	1	Muffler
3	119-0717	1	Pipe-Exhaust
4	104-6476	1	Manifold-Engine
5	119-0709-03	1	Tray-Engine
6	115-7612	1	Cable-Accelerator
7	99-7847	1	Ball-Stud
8	107-0319	1	Bracket-Cable
9	115-2393	1	Bracket-Cable
10	81-1690	1	Clamp-Cable
11	110-8158	1	Gasket-Adaptor
12	104-6478	4	Spring-Extension
13	112-2911	1	Belt-Starter
14	119-0711	1	Belt-Variable
15	120-4818	1	Primary Clutch ASM
16	115-2316	1	Switch-Pressure
17	115-2317	1	Fitting-Elbow
18	119-0826	1	Fitting-Tee
19	119-0831	1	HYD Hose ASM
20	119-0832	1	HYD Hose ASM


Ref.	Part Number	Qty.	Description
21	119-0833	1	Fitting-Straight
22	108-2829	1	Adaptor-Carburetor
23	108-8427	2	Gasket-Carburetor
24	112-3227	1	Hose-Intake
25	112-6461	1	Hose-Adapter, Carboretor
26	115-7623	1	Hose-Intake
27	119-0862-03	1	Bracket-Cleaner, Air
28	63-9750	2	Mount
29	95-5806	1	Bracket-Mounting
30	99-7120	1	Air Cleaner ASM
31	71-5470	1	Spring-Brake
32	110-2619	1	Keeper-Spring
33	2412-130	2	Clamp-Hose
34	2412-143	2	Clamp-Hose
35	2412-3	1	Clamp-Hose
36	104-8300	4	Nut-Flange, NI
37	112-3240-03	1	Bracket-Filter, Oil
38	115-2314	1	Adapter-Filter, Oil
39	107-7817	1	Filter-Oil, Engine
40	104-8301	2	Nut-Flange, NI
41	110-5053	4	Screw-HHF

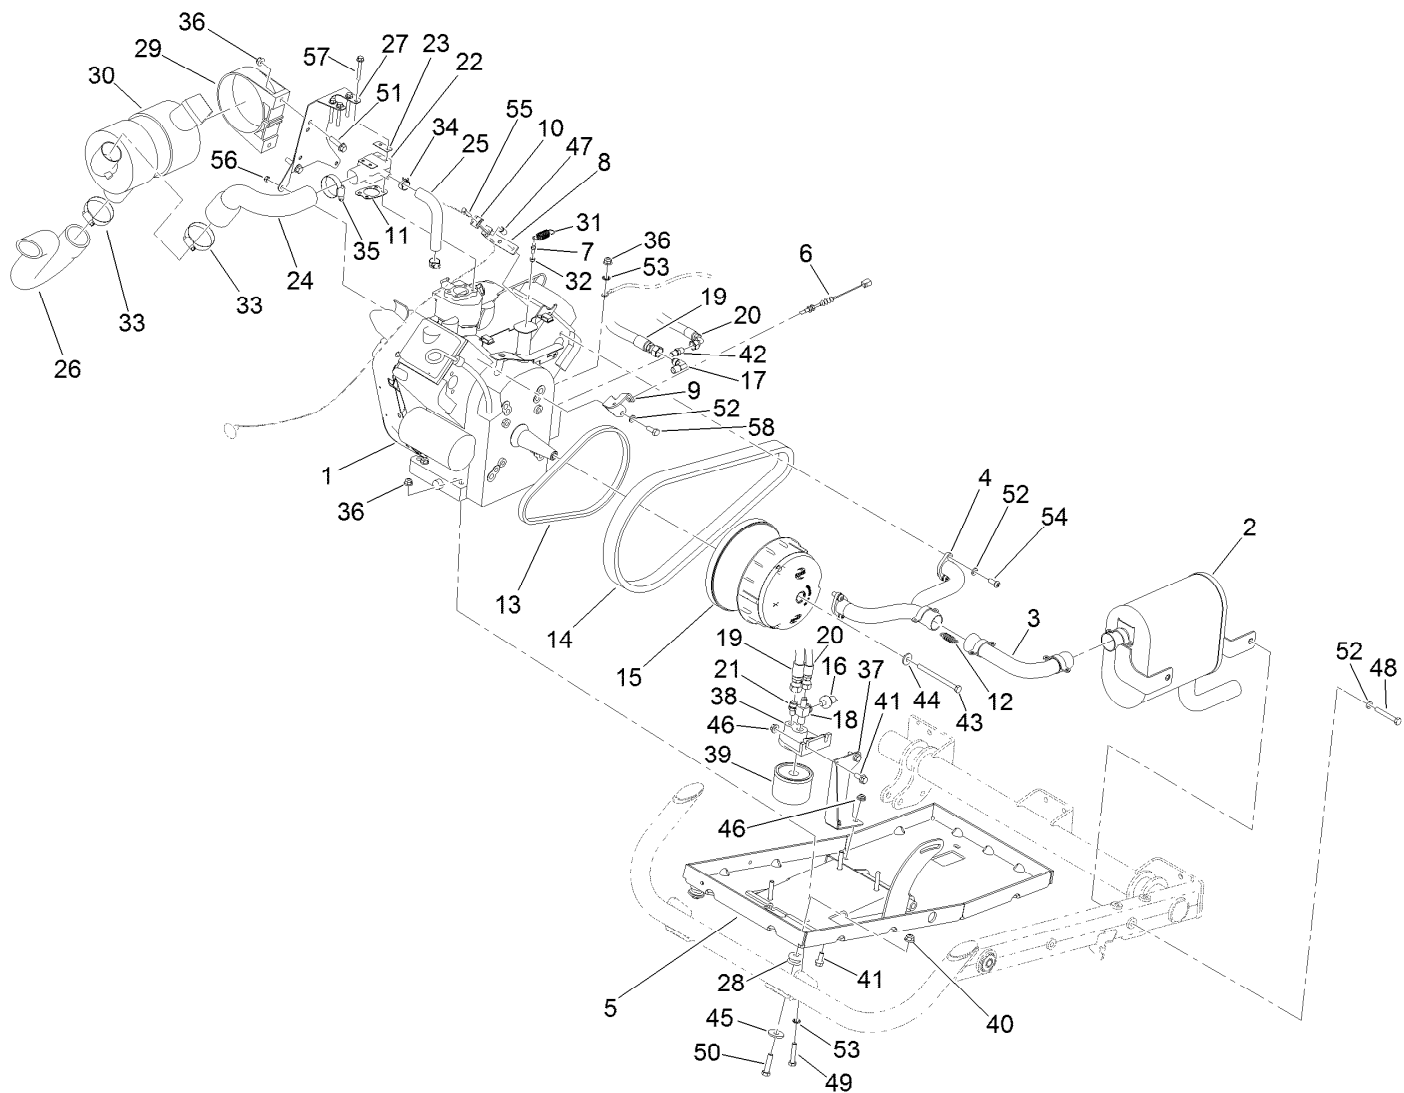 

Engine, Clutch and Air Cleaner Assembly (continued)


Ref.	Part Number	Qty.	Description
42	112-3282	1	Fitting-Straight
43	119-0722	1	Screw-HH
44	119-0724	1	Washer-Flange
45	2844	2	Washer
46	32128-20	4	Nut-HF
47	32148-14	1	Insert-Threaded
48	322-11	2	Screw-HH
49	322-9	4	Screw-HH
50	323-8	2	Screw-HH

Ref.	Part Number	Qty.	Description
51	3234-36	2	Screw-HHF
52	3253-4	8	Washer-Lock
53	3254-2	2	Washer-Lock, Internal
54	3274-96	4	Screw-HSBH
55	3290-432	1	Screw-HH
56	33023-00	2	Nut-Lock
57	33103-045	4	Screw-HHF
58	66-3160	2	Screw-Cap

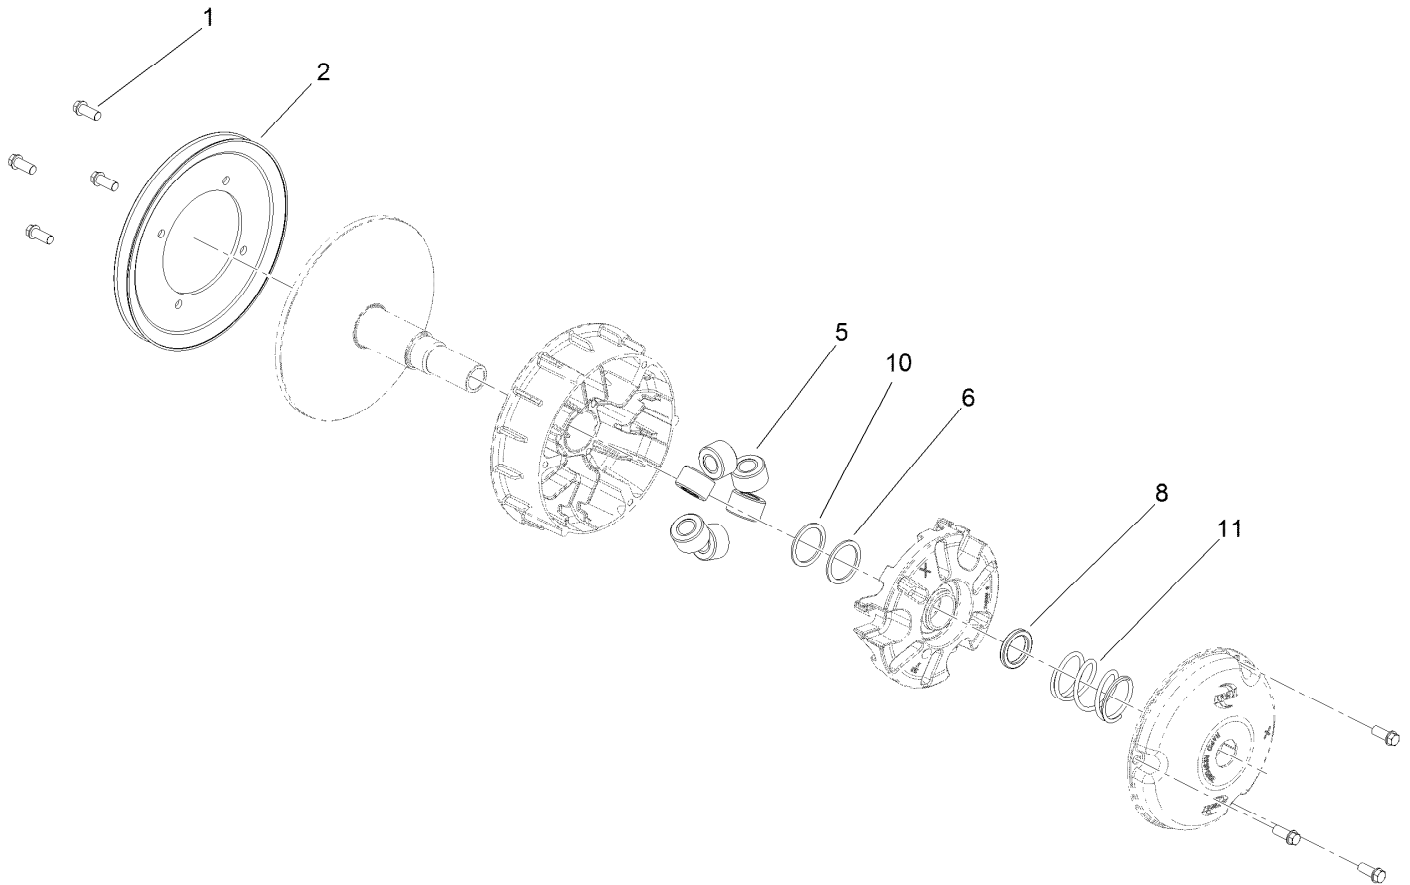 

Primary Clutch Assembly No. 120-4818


Ref.	Part Number	Qty.	Description
1	49-2040	7	Screw-HWHTF
2	119-0813	1	Pulley-Primary
5	119-9533	6	Roller-60G
6	119-0812	1	Shim-Spider
8	119-0807	1	Shim-Limiter (.175)
10	119-0815	1	Shim-Spider
11	119-9532	1	Spring-Red/White

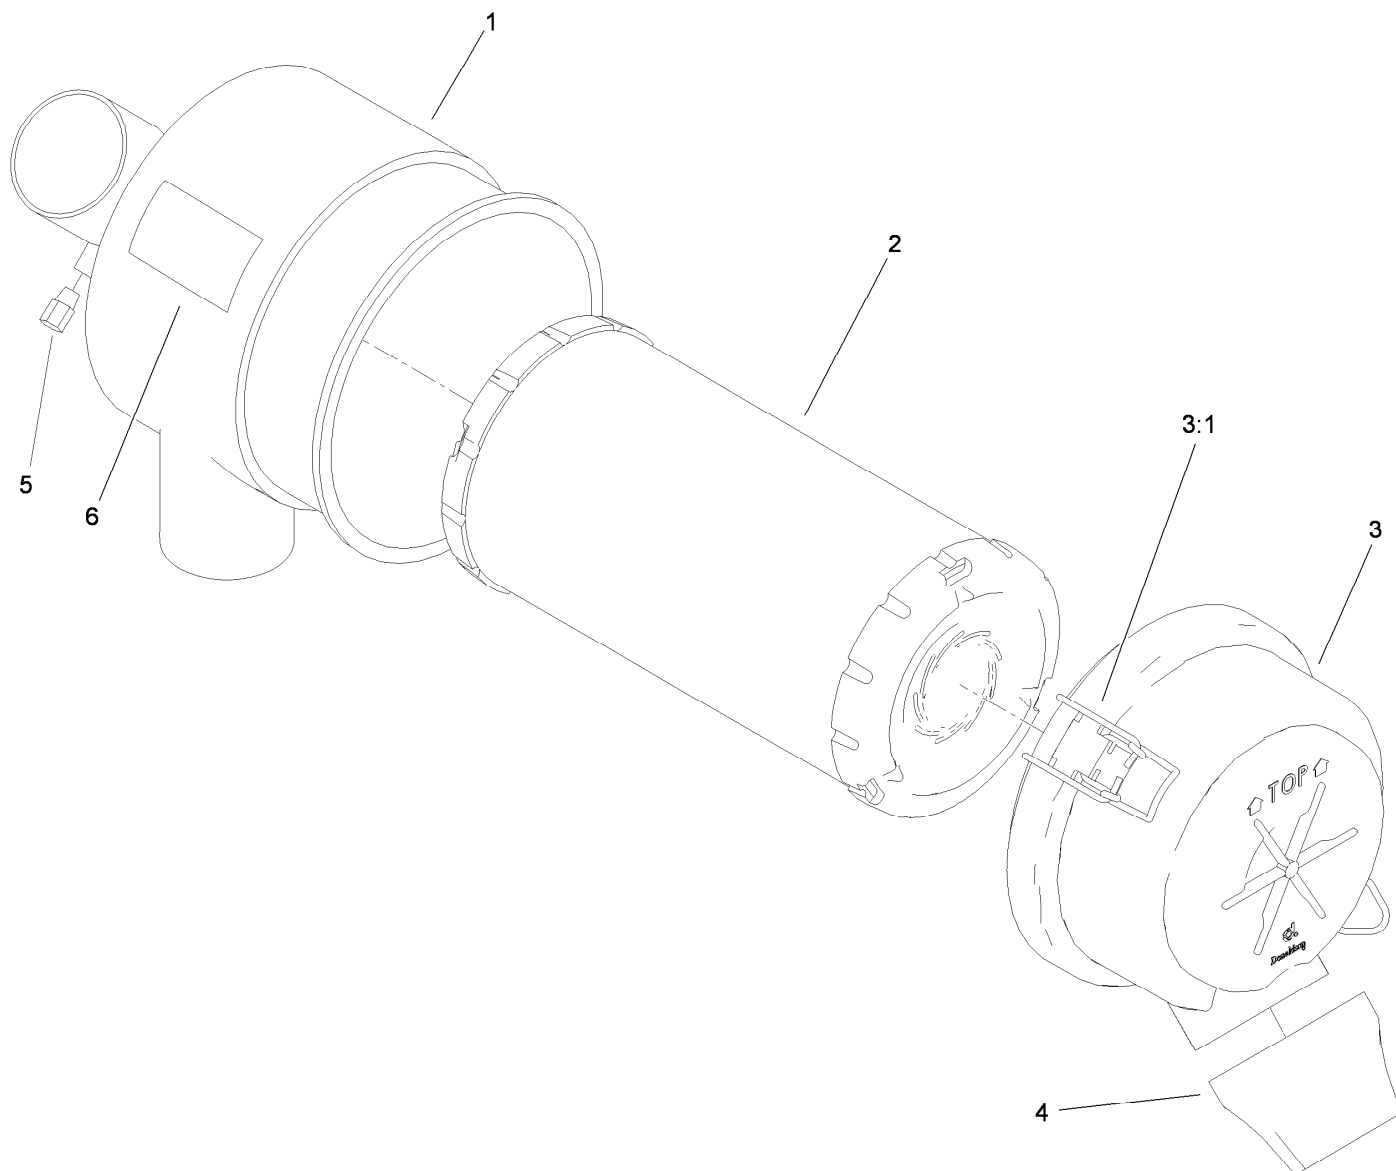 

Air Cleaner Assembly No. 99-7120

Ref.	Part Number	Qty.	Description
1		1	Body ●
2	108-3811	1	Filter-Air
3	94-3652	1	Cover ASM
3:1	1-643283	2	Latch-Cleaner, Air
4	87-9400	1	Valve-Vacuator
5		1	Plug ●
6		1	Marking ●

 ● Not serviced separately

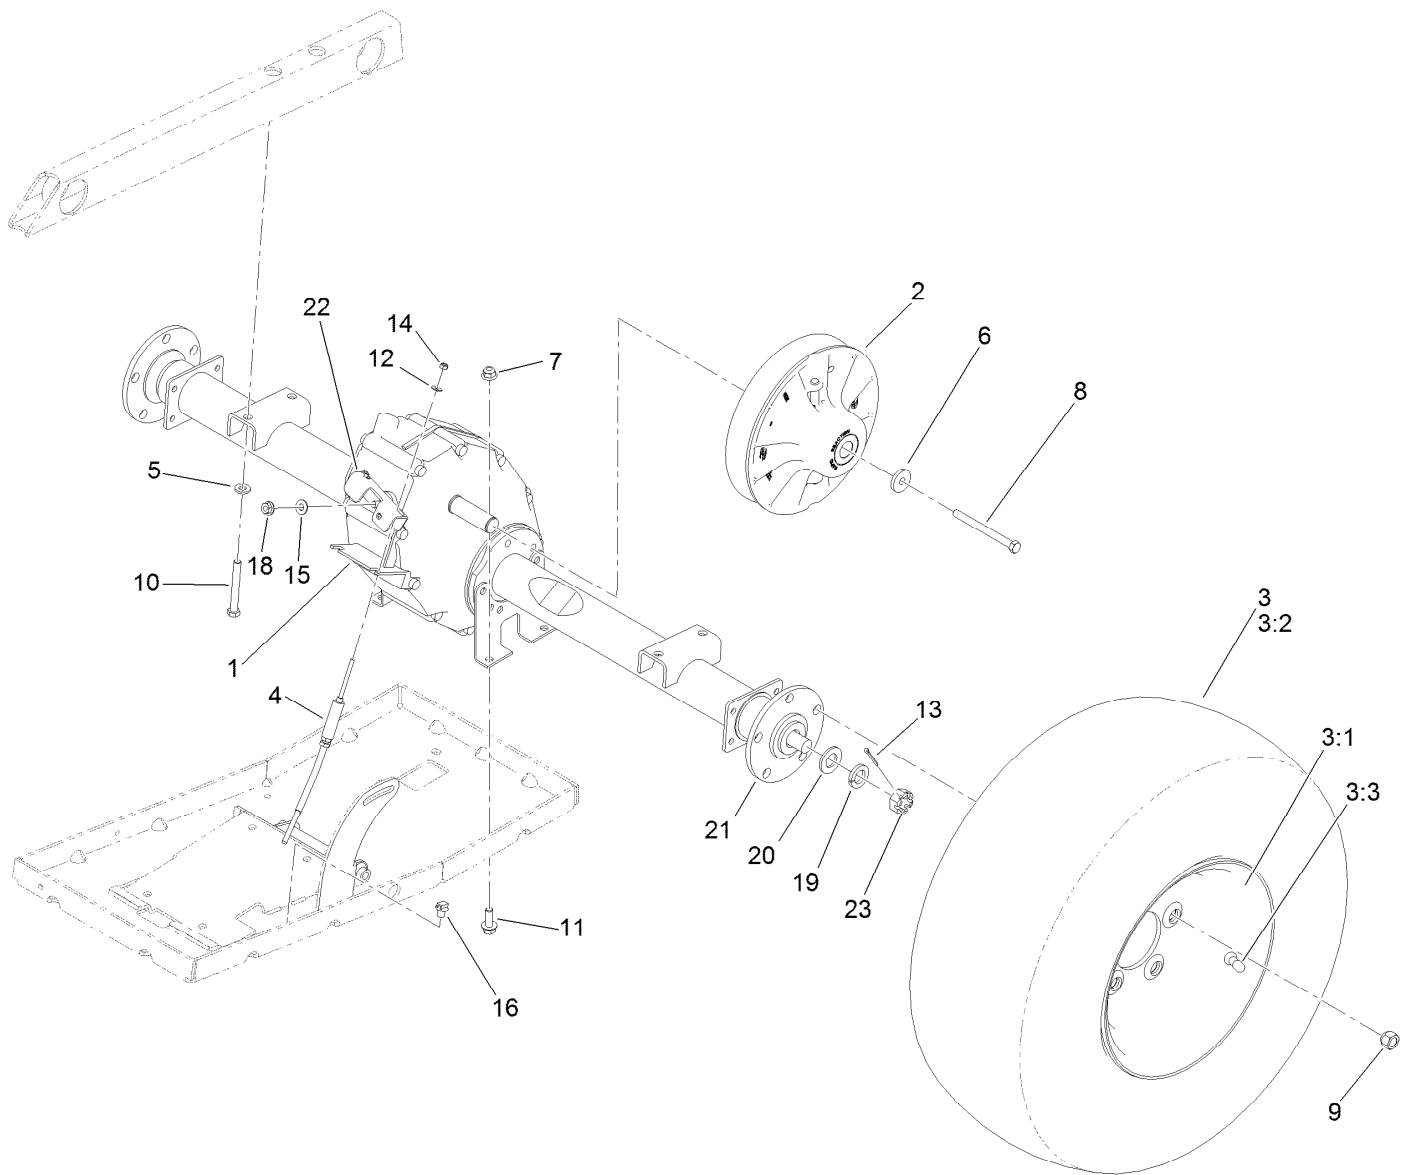


Rear Axle Drive System Assembly

Ref.	Part Number	Qty.	Description
1	119-0760	1	Transaxle ASM
2	119-6011	1	Secondary Clutch ASM
3	120-4972	2	Tire And Wheel ASM
3:1	87-5720	1	Wheel
3:2	104-7281	1	Tire
3:3	232-27	1	Stem-Valve
4	115-7679	2	Tension Cable Control ASM
5	100-4852	4	Washer-Hardened
6	104-6563	1	Washer-Stepped
7	104-8301	4	Nut-Flange, NI
8	119-0723	1	Screw-HH, Lock
9	242-50	10	Nut-Lug
10	323-14	4	Screw-HH


Ref.	Part Number	Qty.	Description
11	3234-11	4	Screw-HHF
12	3256-49	2	Washer-Flat
13	3272-12	2	Pin-Cotter
14	3296-2	2	Nut-Lock, NI
15	87-8640	1	Washer-Flat
16	32180-030	1	Clip-Tie
18	104-1672	1	Nut-Lock
19	104-1673	2	Washer-Spring
20	104-1674	2	Washer
21	104-1675	2	Hub
22	104-6860	1	Lever-Select
23	104-1656	2	Nut-Castle

 Transaxle Assembly No. 119-0760

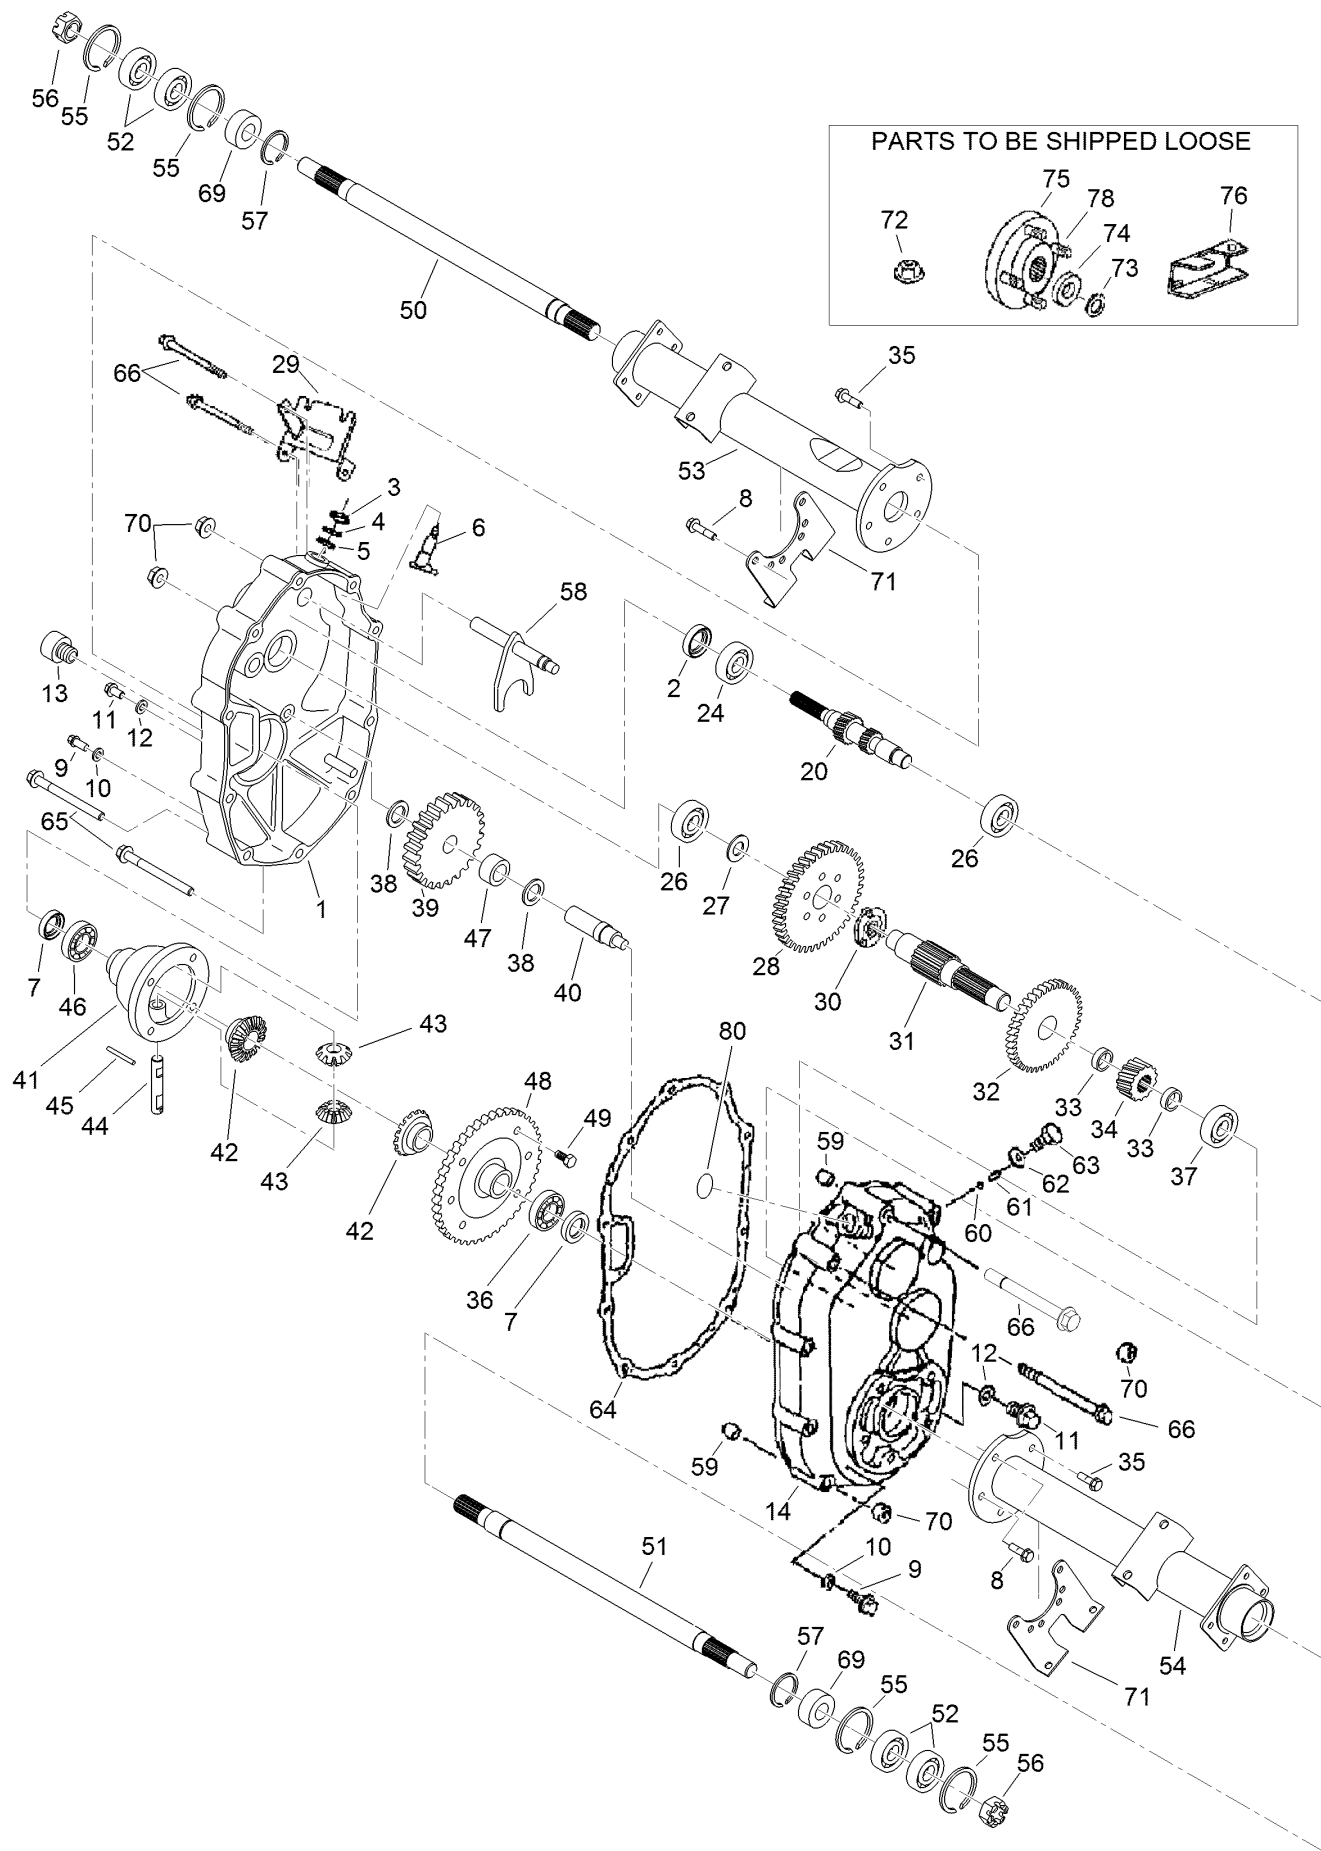


Transaxle Assembly No. 119-0760 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-1601	1	Case-LH, Complete	44	104-1644	1	Shaft-Differential
2	104-1602	1	Seal-Oil	45	104-1645	1	Pin
3	104-1603	1	Seal-Oil	46	104-1646	1	Bearing-Ball
4	104-1604	1	Ring-Snap	47	104-1647	1	Bearing-Needle
5	104-1605	1	Spacer	48	104-1648	1	Gear
6	104-1606	1	Shaft-Selector	49	104-1649	6	Bolt
7	104-1607	2	Seal-Oil	50	104-1650	1	Shaft-Axle, LH
8	104-1608	4	Bolt-Flange	51	104-1651	1	Shaft-Axle, RH
9	104-1609	2	Plug-Check, Oil	52	104-1652	4	Bearing-Ball
10	104-1610	2	Gasket	53	104-1653	1	Case-Axle, LH
11	104-1611	2	Plug-Drain, Oil	54	104-1654	1	Case-Axle, RH
12	104-1612	2	Gasket	55	104-1655	4	Ring-Snap
13	104-1613	1	Plug-Filler, Oil	56	104-1656	2	Nut-Castle
14	104-1614	1	Case-Complete, RH	57	104-1657	2	Ring-Snap
20	104-7002	1	Shaft-Input, Complete	58	104-6870	1	Shaft-Shift, Complete
24	104-1624	1	Bearing-Ball	59	104-1659	2	Knock-Pipe
26	104-1626	2	Bearing-Ball	60	104-1660	1	Ball-Steel
27	104-1627	1	Spacer	61	104-1661	1	Spring
28	104-1628	1	Gear	62	104-1662	1	Gasket
29	104-1629	1	Bracket-Wire, Change	63	104-1663	1	Bolt
30	104-1630	1	Clutch-Pin	64	104-1664	1	Gasket
31	104-1631	1	Shaft-Center	65	104-1665	6	Bolt-Flange
32	104-1632	1	Gear	66	104-1666	4	Bolt-Flange
33	104-1633	2	Collar	69	104-6867	2	Collar
34	104-1634	1	Gear	70	33004-00	10	Nut-HF
35	104-1635	6	Bolt-Flange	71	104-1671	2	Bracket-Axle
36	104-1636	1	Bearing-Ball	72	104-1672	1	Nut-Lock
37	104-1637	1	Bearing-Ball	73	104-1673	2	Washer-Spring
38	104-1638	2	Spacer	74	104-1674	2	Washer
39	104-1639	1	Gear	75	104-1675	2	Hub
40	104-1640	1	Shaft-Counter	76	104-6860	1	Lever-Select
41	104-1641	1	Case-Differential	78	104-8649	10	Stud
42	104-1642	2	Gear-Side, Differential	80	121-9718	1	Cap-Seal
43	104-1643	2	Pinion-Differential				

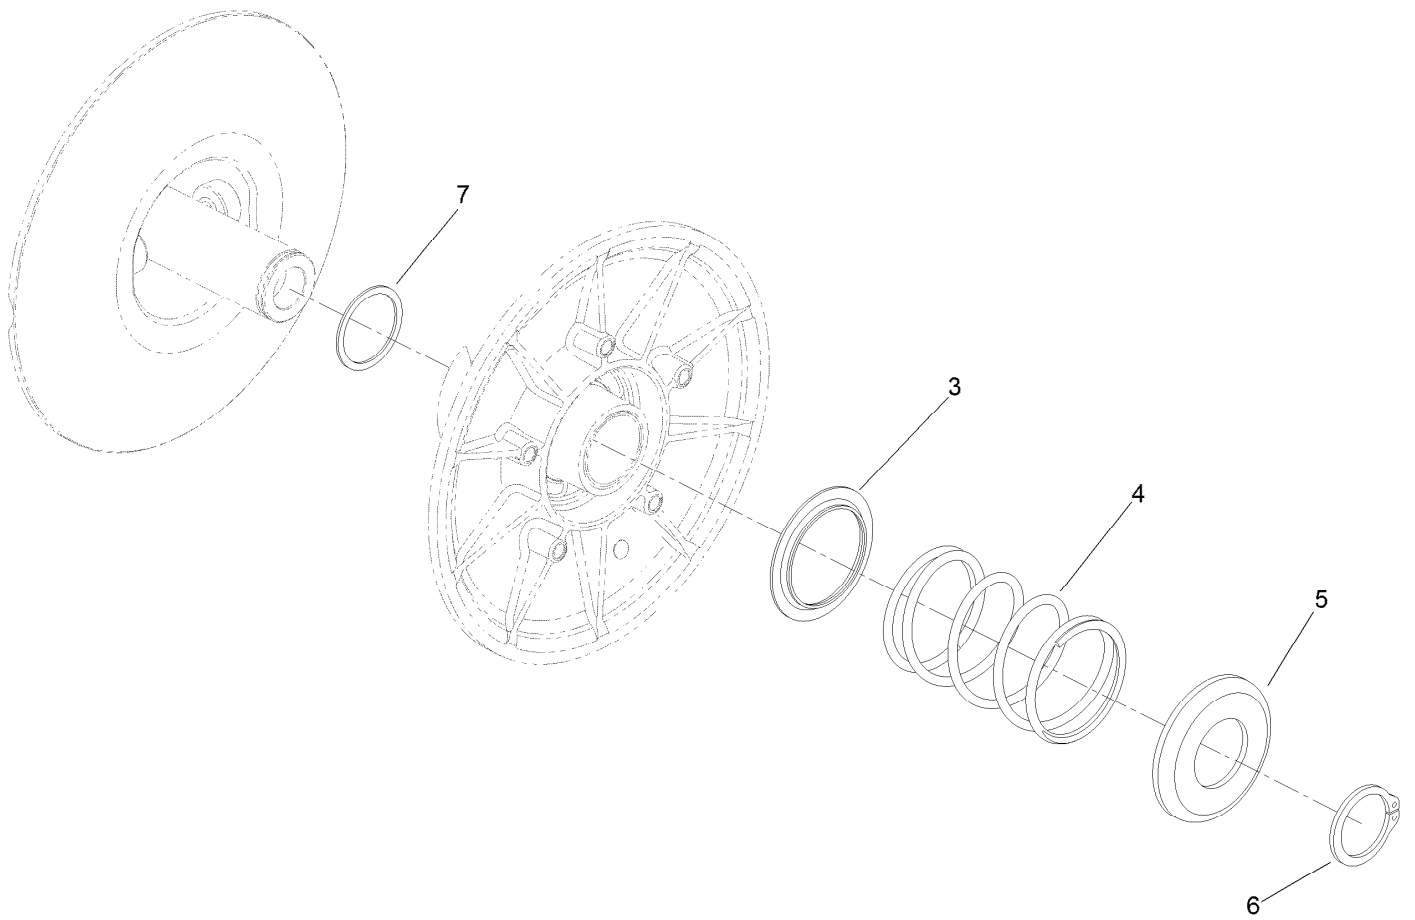 

Secondary Clutch Assembly No. 119-6011


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	119-0809	1	Cup-Spring Retainer, Inner
4	119-9360	1	Spring-Compression, Black/Almond
5	119-0810	1	Cup-Spring Retainer, Outer
6	119-0811	1	Ring-Retaining
7	119-6018	1	Shim-Thrust

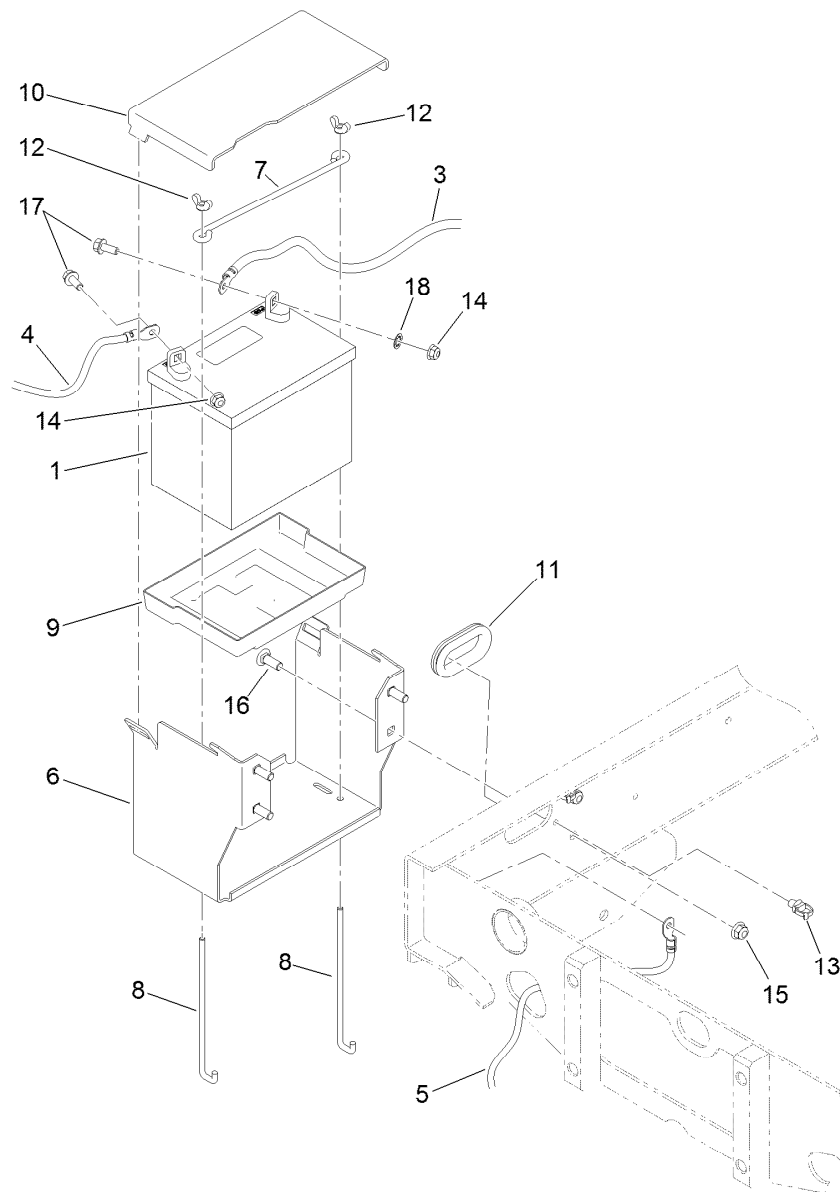 

Battery Assembly

Ref.	Part Number	Qty.	Description
1	104-8162	1	Battery-Dry
3	114-9404	1	Cable-Battery, Positive
4	115-8107	1	Cable-Battery, Negative
5	115-8108	1	Cable-Battery, Negative
6	115-2302-03	1	Base-Battery
7	100-6434	1	Rod-Hold Down, Battery
8	100-6435	2	Post-Battery
9	106948	1	Tray-Battery
10	115-2394	1	Cover-Battery


Ref.	Part Number	Qty.	Description
11	240-12	1	Grommet
12	32103-22	2	Nut-Wing
13	32180-030	2	Clip-Tie
14	104-8300	2	Nut-Flange, NI
15	104-8301	4	Nut-Flange, NI
16	3231-22	4	Screw-CARR
17	3234-5	2	Screw-HHF
18	3254-6	1	Washer-Lock, Internal

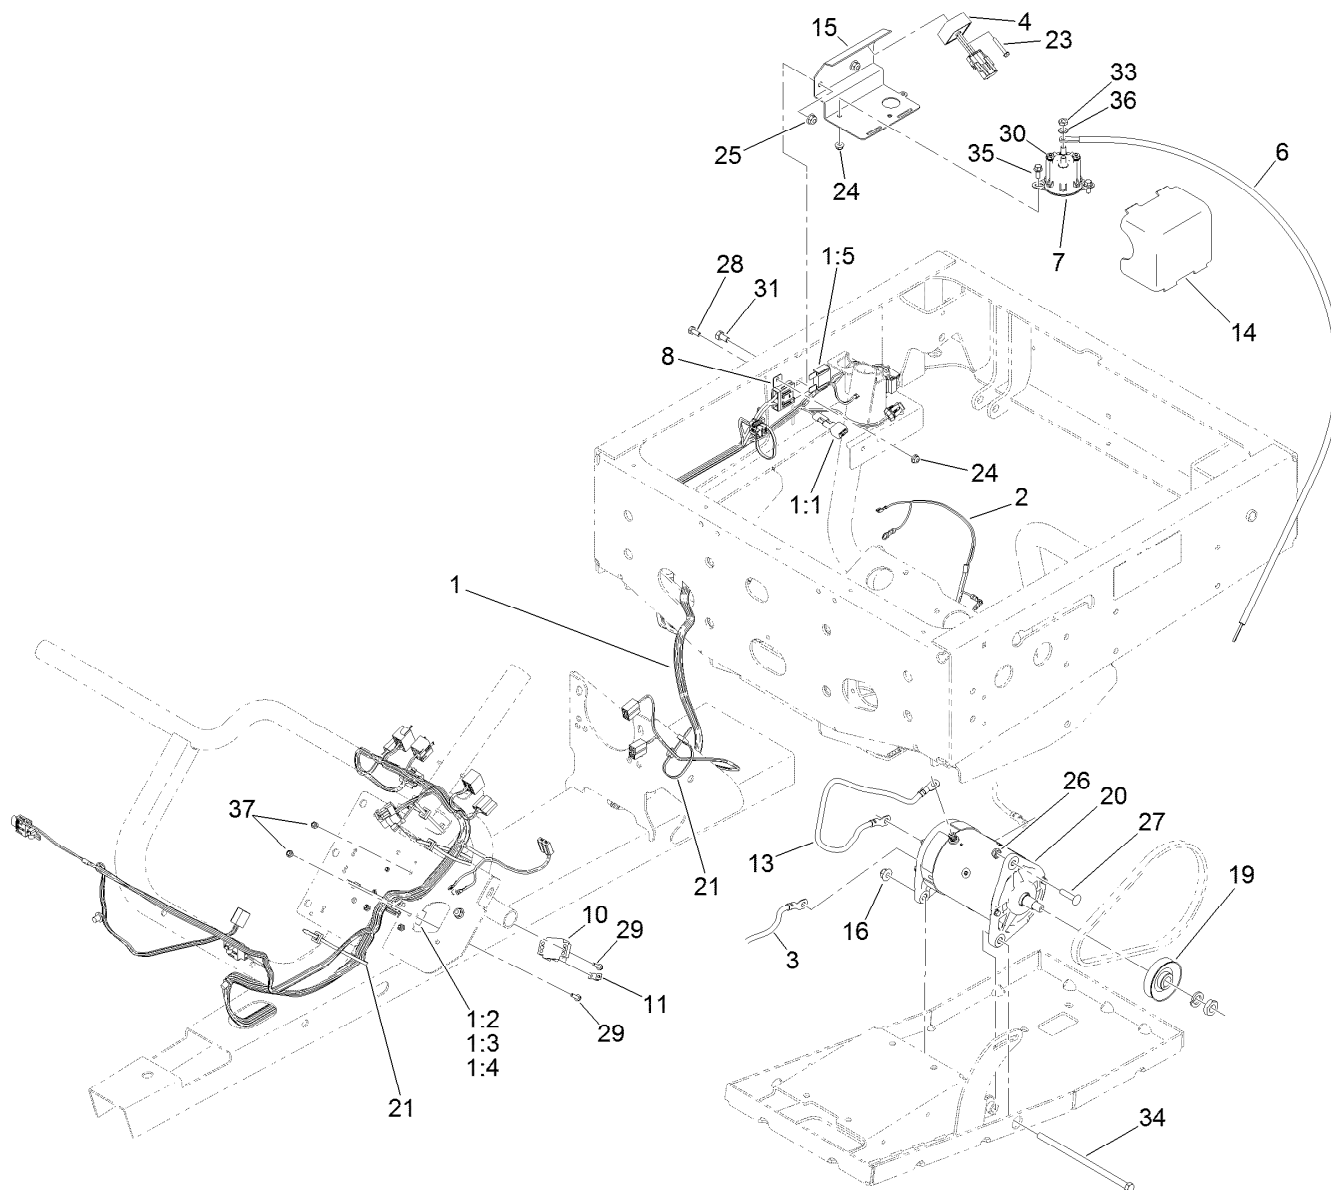 

Electrical Assembly

Ref.	Part Number	Qty.	Description
1	119-5774	1	Harness-Wire
1:1	100-4918	1	Diode-Over Molded
1:2	218-578	1	Fuse-Blade, 10 Amp
1:3	109355	1	Fuse-Blade, 15 Amp
1:4	109101	1	Fuse-Blade, 20 Amp
1:5	114-3342	1	Fuse-Maxi, 60 Amp
2	115-8109	1	Harness-Wire, Engine
3	94-2777	1	Wire-Ground
4	119-9492	1	Regulator-Voltage
6	112-3537	1	Cable-Battery, Positive
7	114-3315	1	Solenoid-12 Vdc
8	114-5502	1	Clip-Fuse
10	42862	1	Block-Terminal, Ground
11	42863	1	Strip-Jumper
13	99-7403	1	Cable-Negative
14	112-3027	1	Cover-Controller
15	119-0752-03	1	Mount-Component
16	104-8301	1	Nut-Flange, NI

Ref.	Part Number	Qty.	Description
19	121-6277	1	Pulley-Drive
20	119-9545	1	Starter Generator ASM
21	3290-378	3	Tie-Cable
23	100-4352	1	Screw-HWH
24	104-7201	3	Nut-HF
25	104-8300	3	Nut-Flange, NI
26	3296-69	1	Nut-Lock, NI
27	112-6950	1	Screw-CARR
28	321-3	1	Screw-HH
29	32105-13	6	Screw-HWH
30	32149-8	2	Nut-Keps
31	322-2	2	Screw-HH
33	3220-2	2	Nut-Jam
34	323-30	1	Screw-HH
35	3234-33	2	Screw-HHF
36	3255-8	2	Washer-Lock
37	3296-2	6	Nut-Lock, NI

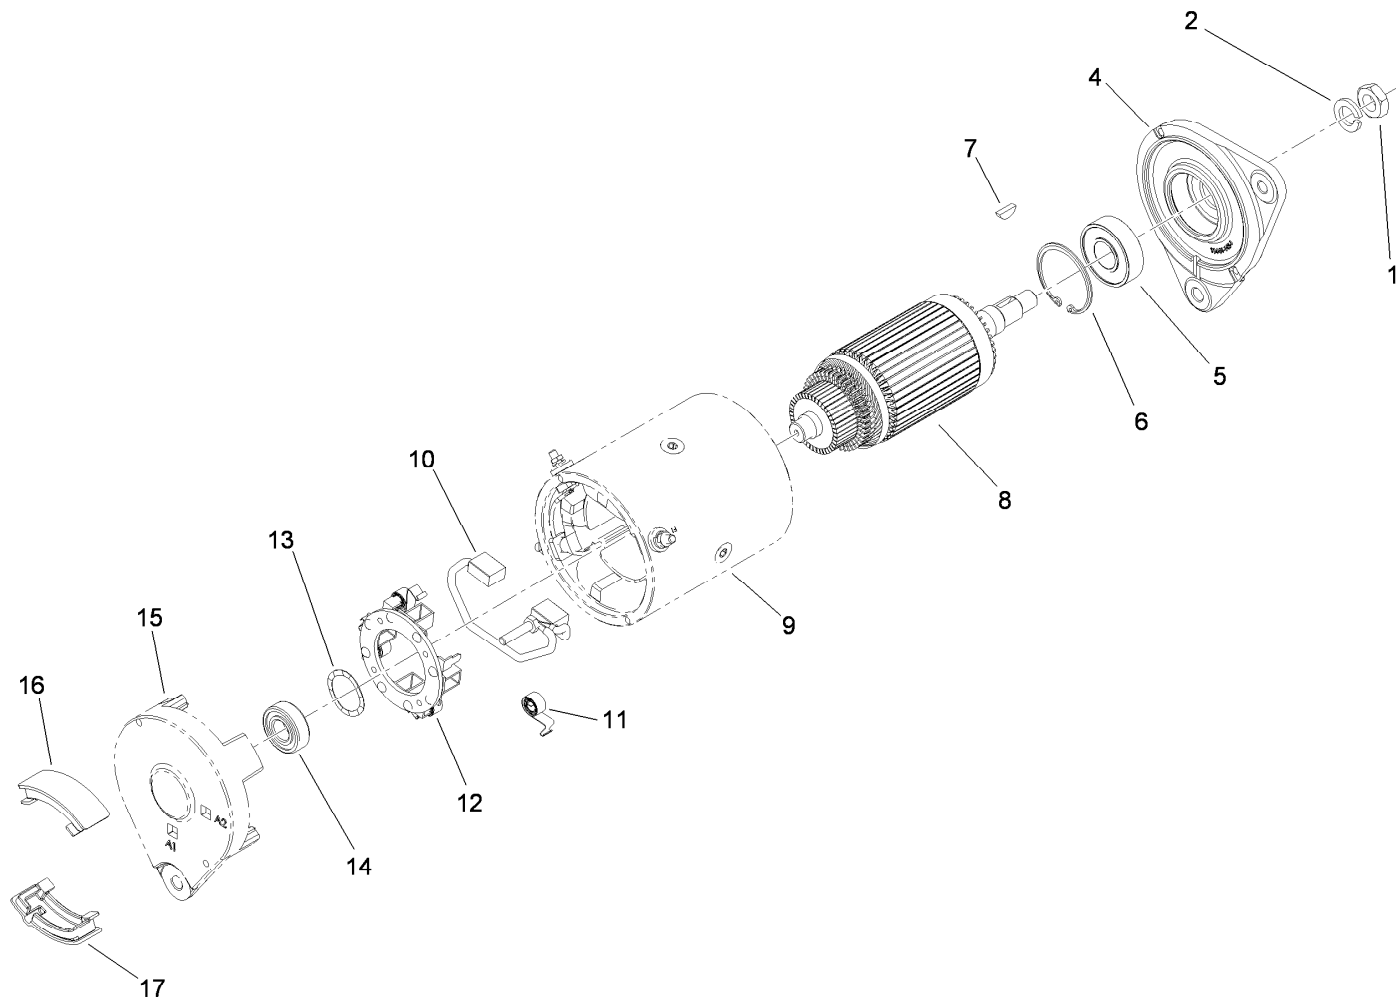 

Starter Generator Assembly No. 119-9545

Ref.	Part Number	Qty.	Description
1	119-9651	1	Nut
2	119-9652	1	Washer-Lock
4	119-9654	1	Head-End, Drive
5	119-9655	1	Bearing
6	119-9656	1	Ring-Retaining
7	119-9657	1	Key-Woodruff
8	119-9658	1	Armature ASM
9		1	Frame And Field Assembly

Ref.	Part Number	Qty.	Description
10	119-9659	1	Brush Lead And Terminal Service Kit
11	119-9660	4	Spring-Brush
12	119-9661	1	Brush Box ASM
13	119-9662	1	Washer-Wave
14	119-9663	1	Bearing
15		1	Head-End, Cummutator ●
16	119-9664	3	Plug-Rubber
17	119-9665	1	Plug-Rubber

● Not serviced separately



Ref.	Part Number	Qty.	Description
10	94-2690	1	Filter-Fuel
11	106-5317	1	Hose-Fuel
12	114-3765	1	Hose-Fuel
14	110-4103	1	Hose-Fuel
15	75-4701	1	Hose-Fuel
17	110-8751	1	Hose-Fuel
18	2412-146	2	Clamp-Hose
20	2412-98	4	Clamp-Hose
22	3339-175	1	Strapping-Web
24	99-7129	1	Conduit-Line, Fuel

Attachments and Accessories

For 07273TC Workman MDX Utility Vehicle

Product Name	Model/Part
Electric Bed Lift Kit, 2014 and After Workman MD/MDX/MDX-D Utility Vehicle	07389
Receiver Hitch Kit	07278
Roll-Over Protection System	07276
Canopy Kit	07324
Folding Windshield Kit	07326
Solid Windshield Kit	07325
Heavy-Duty Brush Guard and Bumper Kit	07338
Heavy-Duty Bumper Kit	07329
Hard Cab	07328
Sliding Window Door Kit	07352
Fixed Window Door Kit	07353
Snow Plow	07327
Lift Wire Harness Kit	115-7823
Backup Alarm Kit	115-7824
Tire And Wheel Asm	119-0751
Replacement Front Spring Kit.....	117-4847
Tire-AT 489, 24x10.5-10	104-7061
Tire-AT 489, 22x9.5-10	104-7062
Wheel-5 Bolt	104-6889
Spark Arrestor Screen	94-8157
Side Mirror Kit.....	119-9546
Battery Kit	119-9680
Stake Pocket Adapter Kit, 2011 and After Workman MD Series Utility Vehicle.....	119-9604
Tie-Down Kit, 2011 and After Workman MD Series Utility Vehicle	119-9605
Road Light and Homologation Kit	120-5031
Brake and Signal Light Kit.....	120-5044
Road-Ready Pro Force Debris Blower.....	44539
Pro Force Debris Blower.....	44538
Bed Mount Kit, Pro Force Debris Blower.....	44543
Bed Mount Sound Barrier Kit, Pro Force Debris Blower	44546
Tapered Nozzle Kit.....	119-6280
Rectangular Nozzle Kit	119-6281
Nozzle-Extension, Straight	119-6282
Nozzle-Extension, Tapered.....	119-6283
Nozzle-Extension, Rectangular	119-6284
Horn Kit.....	115-7825
Key Start Kit.....	121-6338
Cargo Bed Installation Kit with Manual Dump, 2011 to 2013 Workman MD Series Utility Vehicle.....	127-7385
Cargo Bed Installation Kit with Electric Lift, 2011 to 2013 Workman MD Series Utility Vehicle.....	127-7386
Cargo Bed Installation Kit with Manual Dump, 2010 and Before Workman MD Series Utility Vehicle.....	131-3457

Notes:

Notes:



Count on it.