



Count on it.

Form No. 3389-316 Rev A

Parts Catalog

Workman® MDE Utility Vehicle

Model No. 07299TC—Serial No. 315000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HP: high pressure

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: low pressure

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head


STD: standard

TAP: self tapping

TTH: torx truss head

Contents


Front Suspension and Wheel Assembly	4
Front Frame Assembly	5
Front Brake Assembly	6
Master Cylinder Assembly No. 104-6782	7
Brake Caliper Assembly No. 127-7424	8
Rear Brake Line Assembly	9
Steering Assembly	10
Steering Box Assembly No. 112-3130	11
Pedal Box Assembly	12
Charging Receptacle Assembly	13
Offboard 48 Volt Charger Assembly No. 112-2914	14
Hood and Bumper Assembly	15
Fender Well Assembly	16
Fender Assembly	17
Dash Assembly	18
Solenoid Assembly No. 104-7135	20
Seatbase Assembly	21
Cargo Bed Assembly	22
Cargo Bed Service Assembly No. 127-7384	23
Battery and Transaxle Assembly	24
Electric Motor Assembly No. 104-7335	25
Electric Transaxle Assembly No. 114-8330	26
LH Rear Brake Assembly No. 114-8332	28
RH Rear Brake Assembly No. 114-8331	29
Controller Assembly	30
Rear Frame Assembly	31
Attachments and Accessories	32

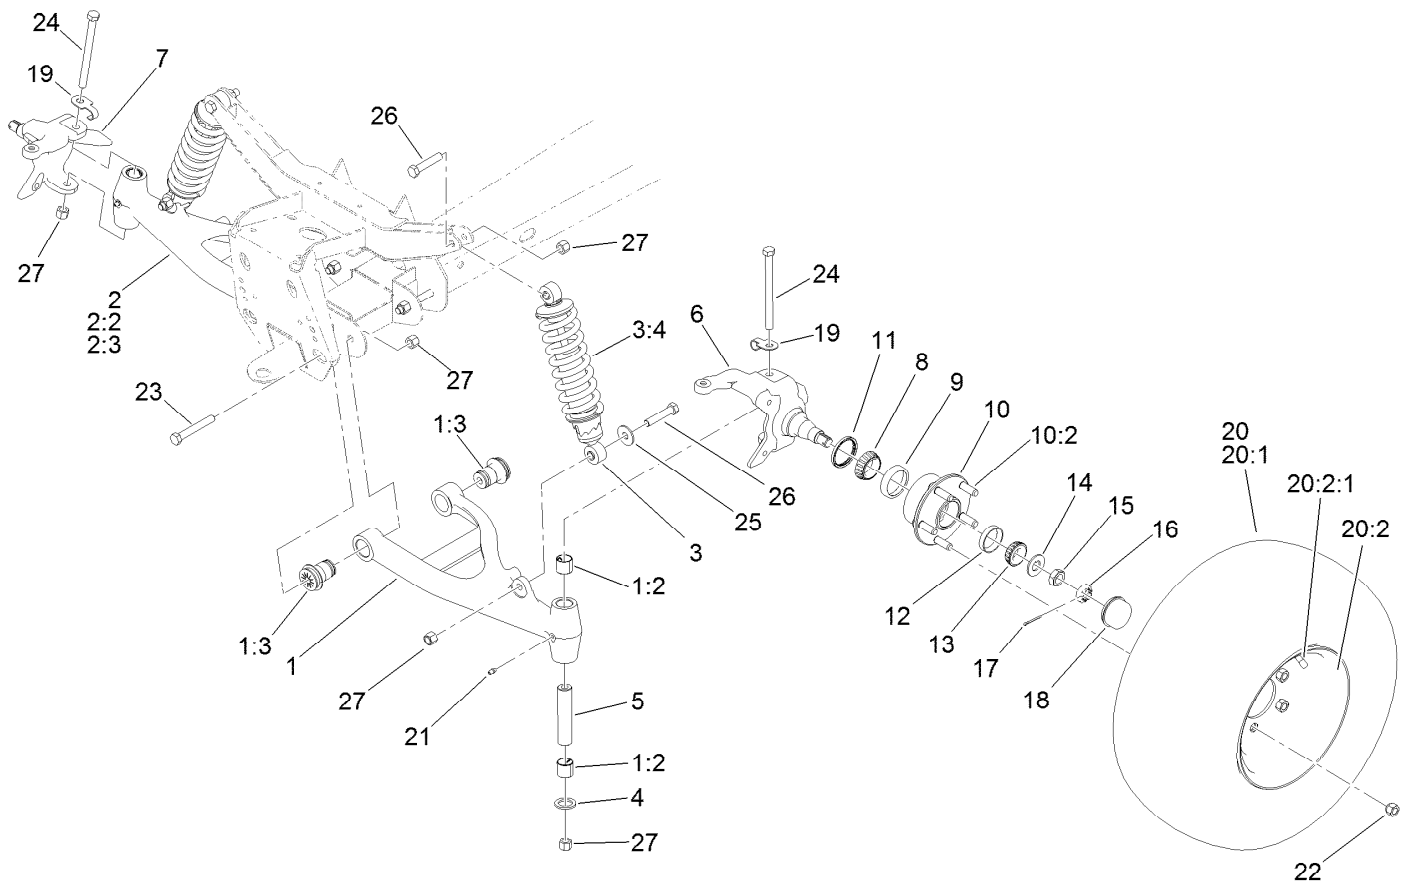

Front Suspension and Wheel Assembly


Ref.	Part Number	Qty.	Description
1	114-8313	1	LH A-Arm ASM
1:2	125-5196	2	Bushing
1:3	87-1450	2	Bushing-Flange
2	114-8314	1	RH A-Arm ASM
2:2	125-5196	2	Bushing
2:3	87-1450	2	Bushing-Flange
3	112-2975	2	Shock/Spring ASM
3:4	112-3383	1	Spring
4	256-115	2	Washer-Thrust
5	99-7499	2	Sleeve-Kingpin
6	119-9521	1	Spindle-LH
7	119-9522	1	Spindle-RH
8	254-106	2	Cone-Bearing, Tapered
9	254-107	2	Cup-Bearing, Tapered
10	117-8071	2	Hub ASM
10:2	10-6830	5	Stud-Type, Drive
11	108-7019	2	Seal-Shaft
12	254-72	2	Bearing-Cup, Tapered

Ref.	Part Number	Qty.	Description
13	254-94	2	Bearing-Cone, Tapered
14	93-0309	2	Washer-Tab
15	3220-7	2	Nut-Jam
16	93-0307	2	Nut-Lock, Retainer
17	3272-12	2	Pin-Cotter
18	241-119	2	Cap-Dust
19	112-3311	2	Clip-Hose
20	127-7434	2	Tire/Wheel ASM
20:1	127-7435	1	Tire
20:2	127-7436	1	Wheel
20:2:1	232-27	1	Stem-Valve
21	302-5	2	Fitting-Grease
22	242-50	10	Nut-Lug
23	325-14	4	Screw-HH
24	325-20	2	Screw-HH
25	51-3500	2	Washer
26	325-10	4	Screw-HH
27	3296-23	10	Nut-Lock, NI

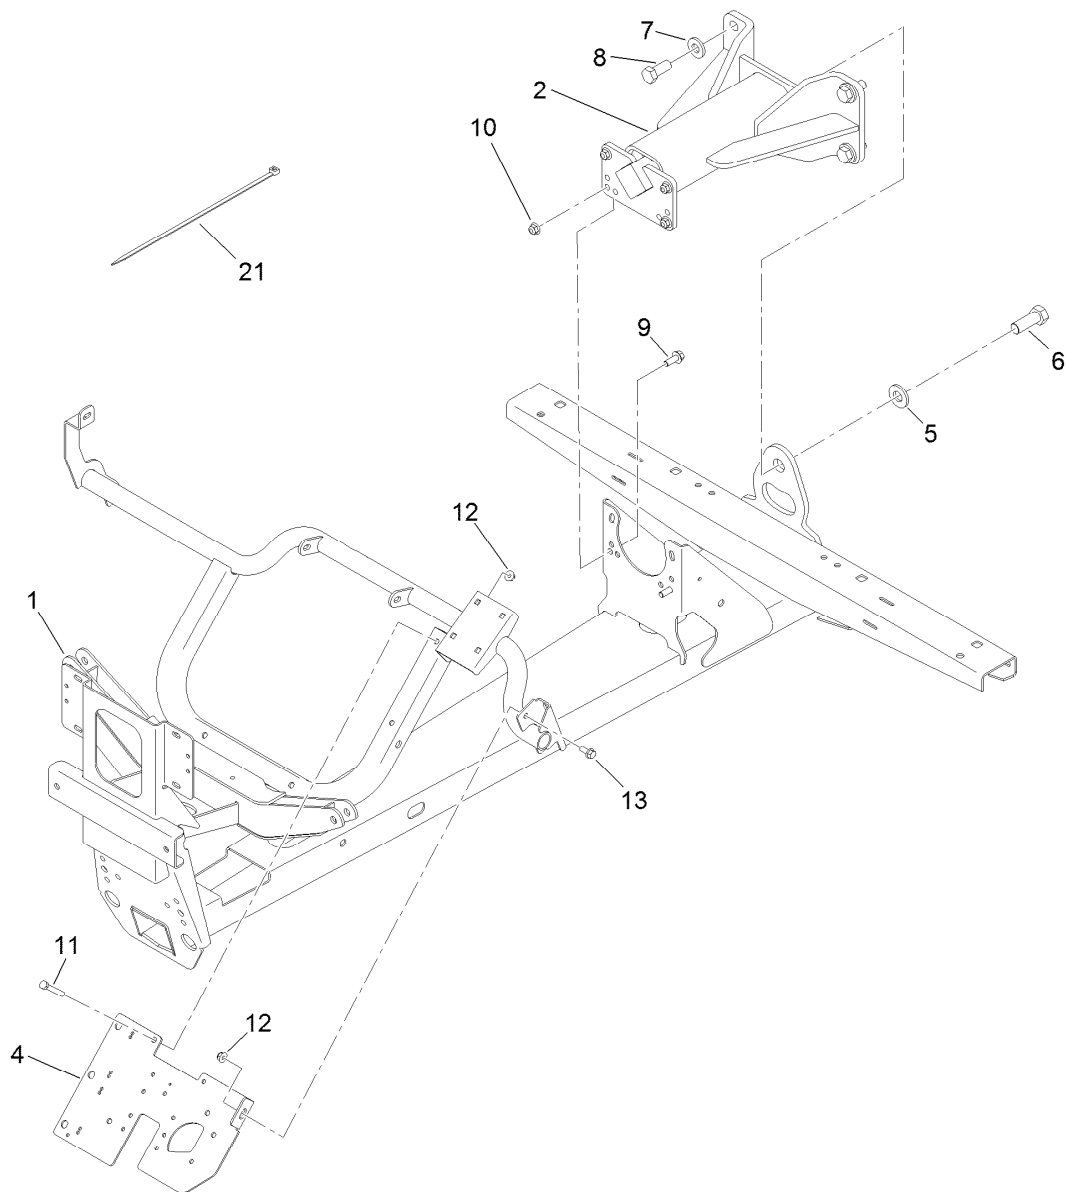


Front Frame Assembly

Ref.	Part Number	Qty.	Description
1	112-3340-03	1	Frame-Front
2	99-7700	1	Pivot Yoke ASM
4	112-3376-03	1	Plate-Mount, Electrical
5	87-3060	1	Washer-Hardened
6	328-24	1	Screw-HH
7	99-7667	4	Washer-Flat
8	327-4	4	Screw-HH
9	3234-11	4	Screw-HHF
10	104-8301	4	Nut-Flange, NI
11	322-11	2	Screw-HH
12	104-8300	3	Nut-Flange, NI
13	110-5053	1	Screw-HHF
21	3290-379	12	Tie-Cable

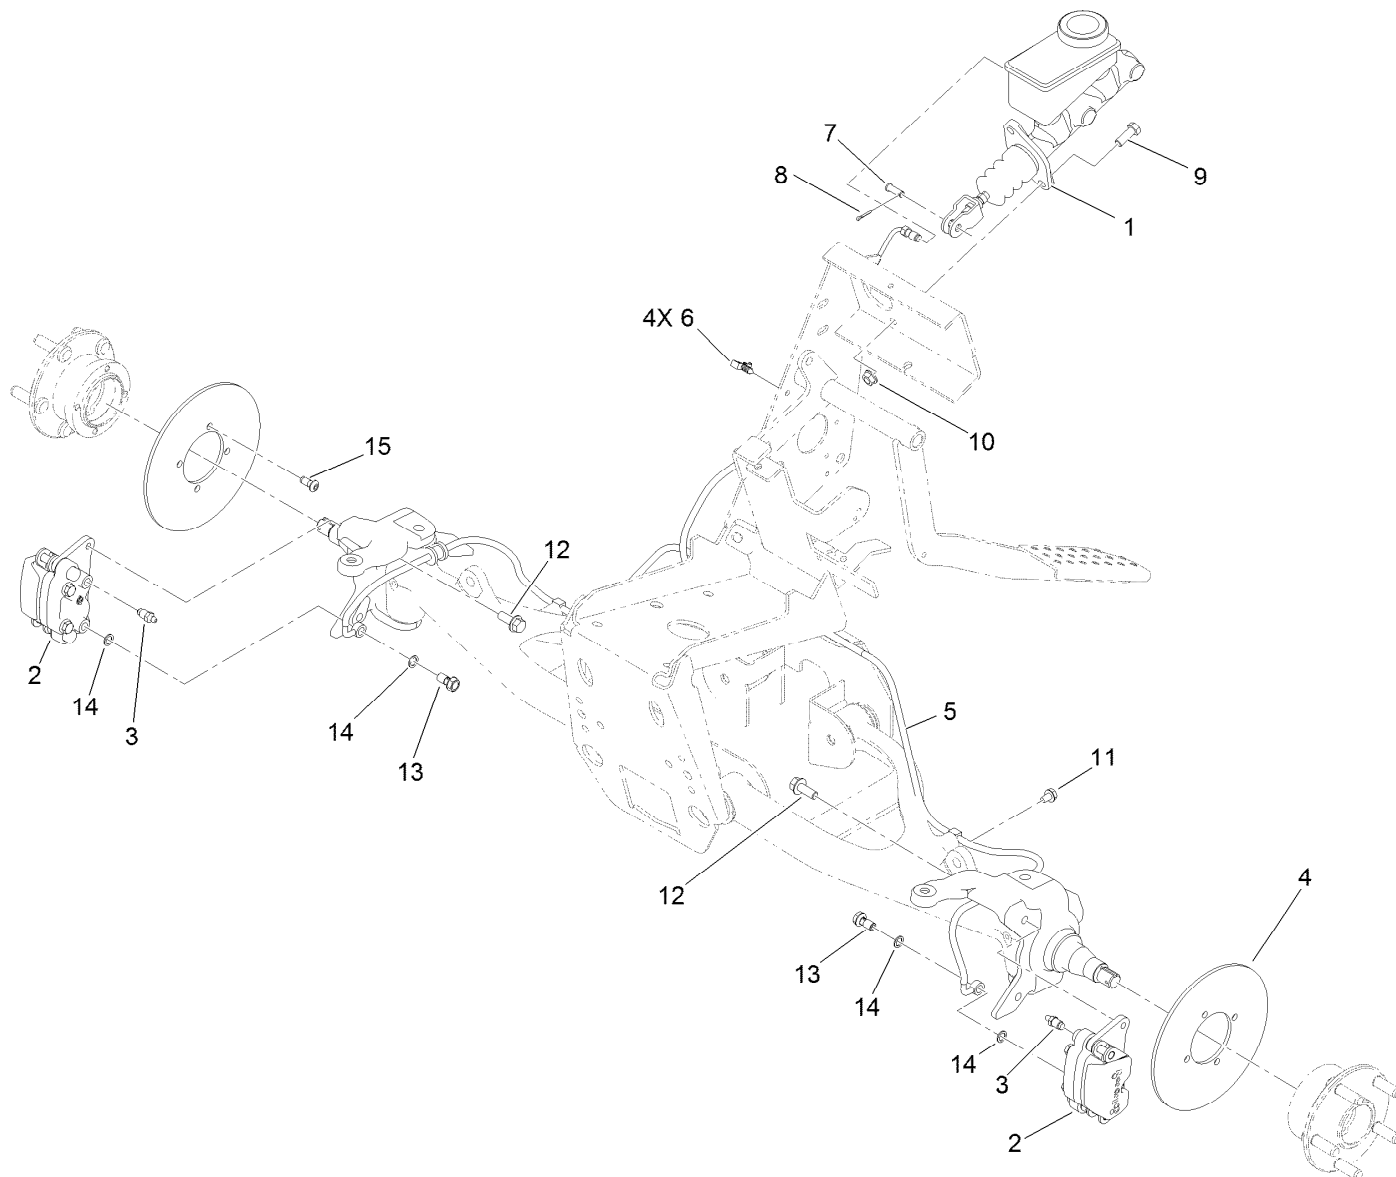


Front Brake Assembly

Ref.	Part Number	Qty.	Description
1	104-6782	1	Master Cylinder ASM
2	127-7424	2	Brake Caliper ASM
3	119-9509	2	Screw-Bleed
4	131-3460	2	Rotor
5	119-9683	1	Front Brake Line ASM
6	114-8324	4	Clip-Line, Brake
7	283-2	1	Pin-Clevis
8	3272-10	1	Pin-Cotter
9	323-6	2	Screw-HH
10	3290-357	2	Nut-HHF, Whiz
11	32104-32	2	Screw-HWH
12	3234-11	4	Screw-HHF
13	120-4875	2	Bolt-Flange, Banjo
14	115-2341	4	Washer-Banjo
15	121-9671	8	Screw-HSBH

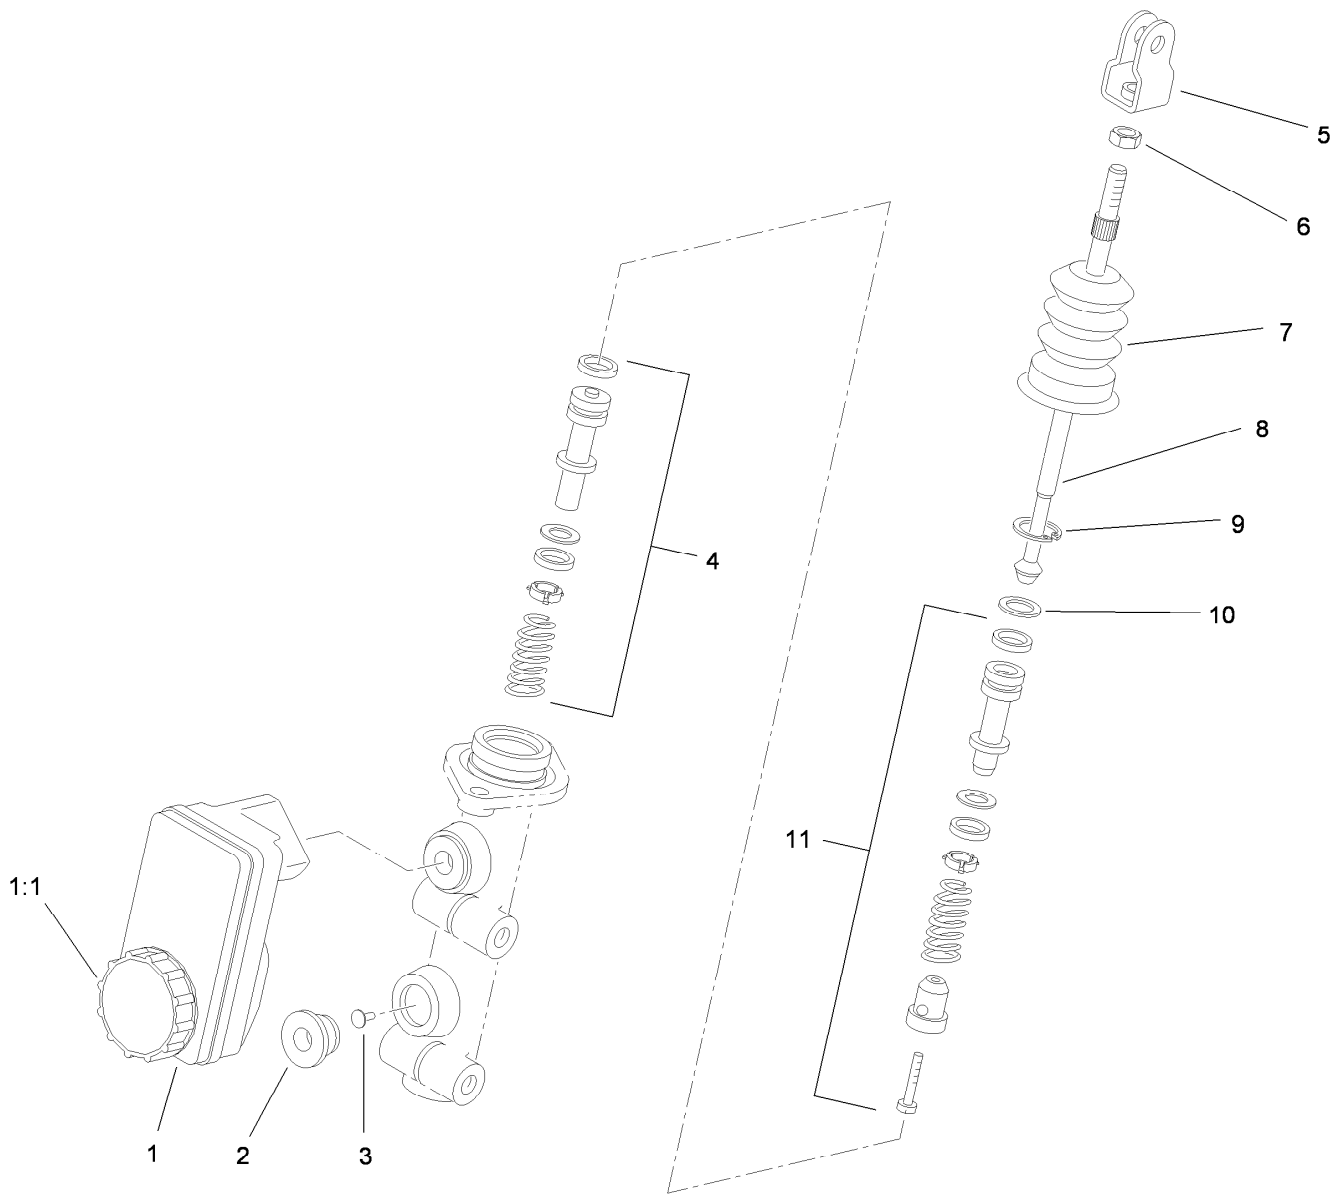


Master Cylinder Assembly No. 104-6782

Ref.	Part Number	Qty.	Description
1	104-6845	1	Reservoir ASM
1:1	92-4112	1	Cap ASM
2	93-8971	2	Seal-Port, Flange
3	92-4103	1	Pin-Stop
4	92-4102	1	Secondary Piston ASM
5	92-4110	1	Clevis
6	21-0360	1	Nut-Hex
7	94-5209	1	Cover-Dust
8	94-5210	1	Rod-Push
9	92-4109	1	Ring-Snap
10	92-4108	1	Retainer-Washer
11	92-4101	1	Primary Piston ASM

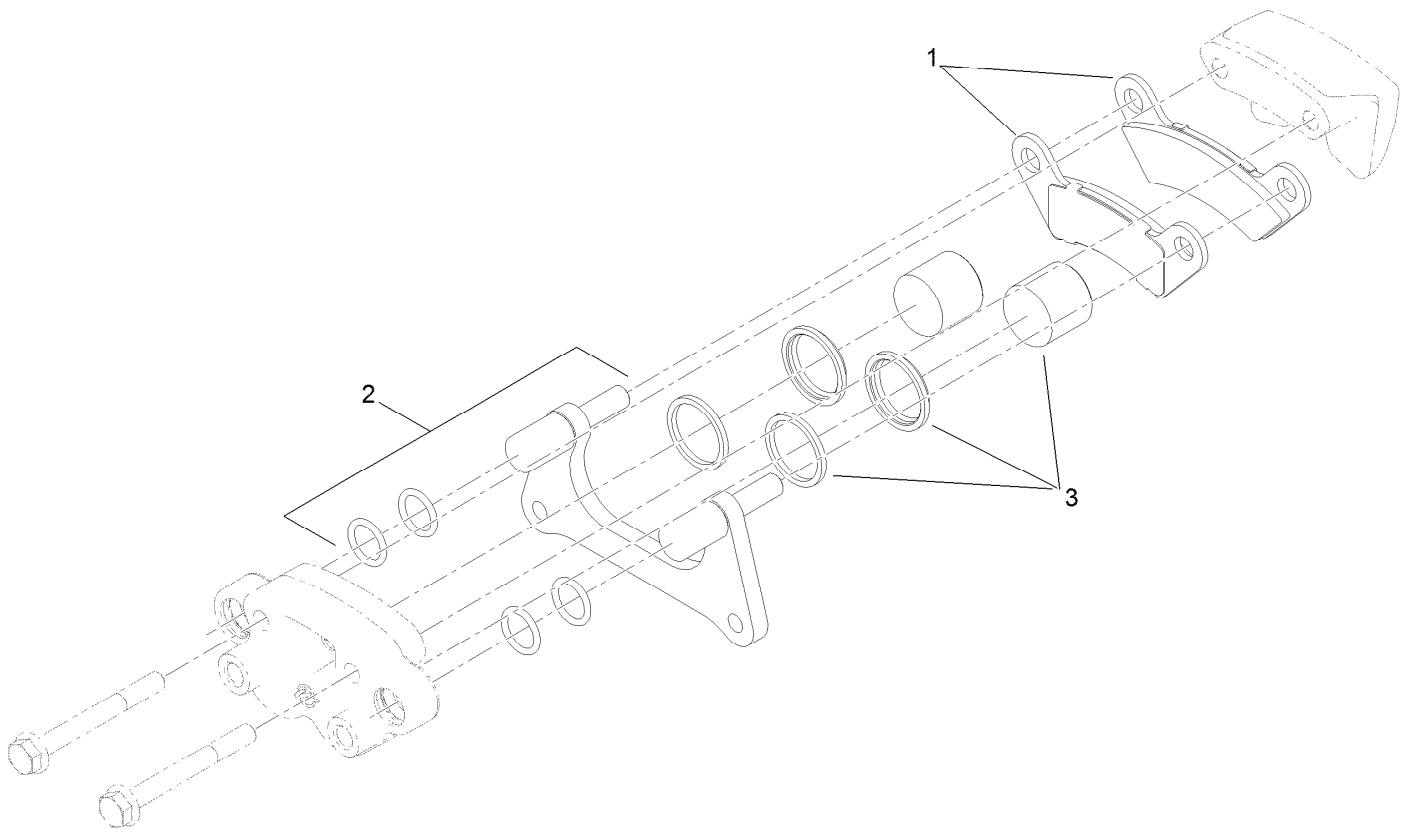


Brake Caliper Assembly No. 127-7424

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-9510	1	Pads-Brake
2	119-9511	1	Bracket Kit
3	119-9512	1	Piston Kit

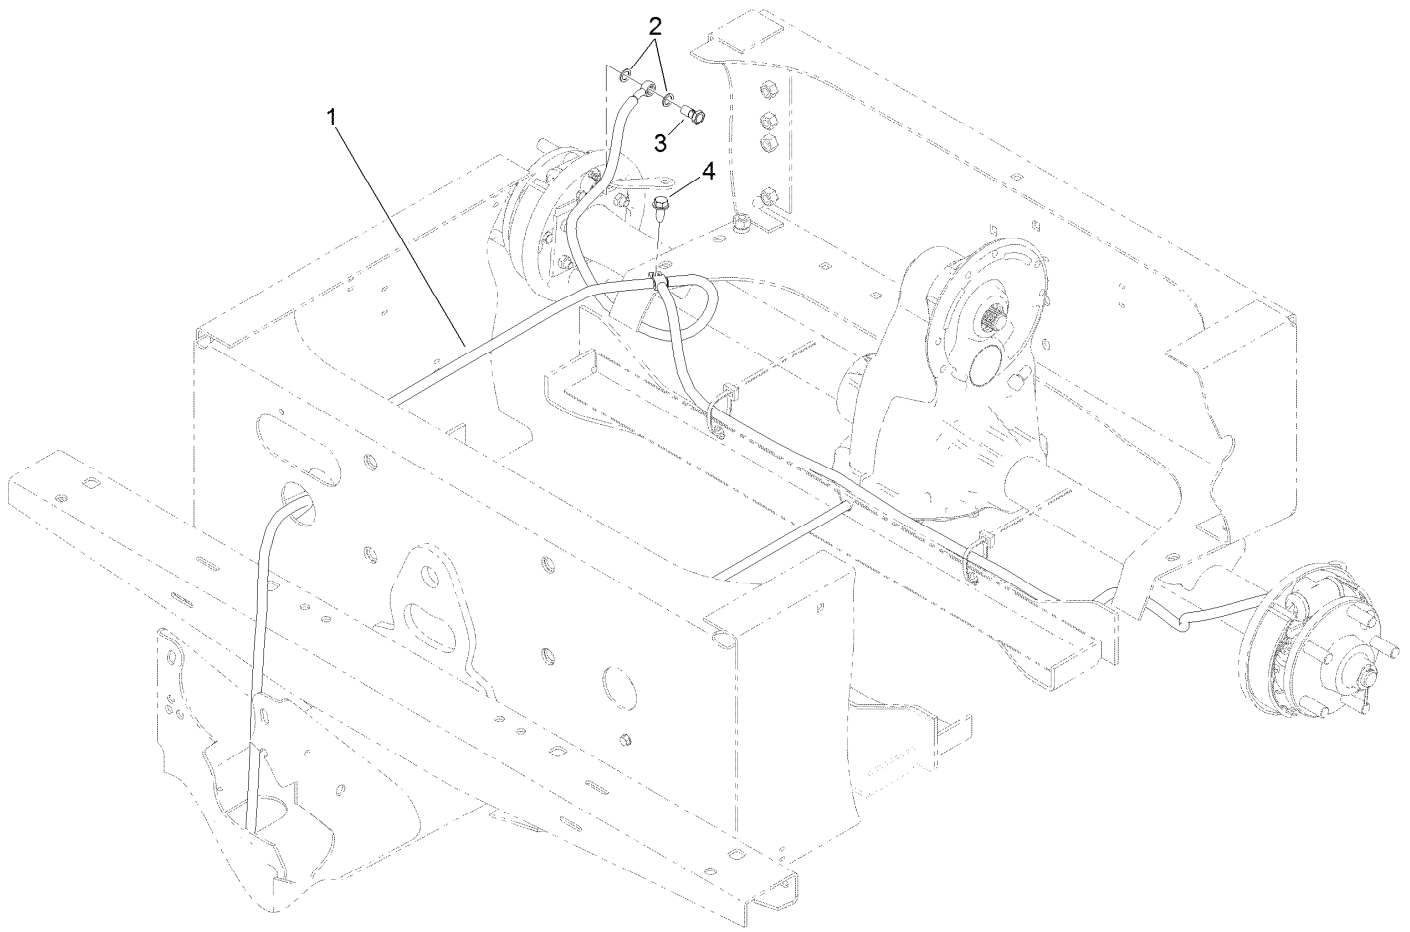

Rear Brake Line Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	115-2409	1	Rear Brake Line ASM
2	115-2341	4	Washer-Banjo
3	115-2340	2	Bolt-Banjo
4	32104-32	1	Screw-HWH

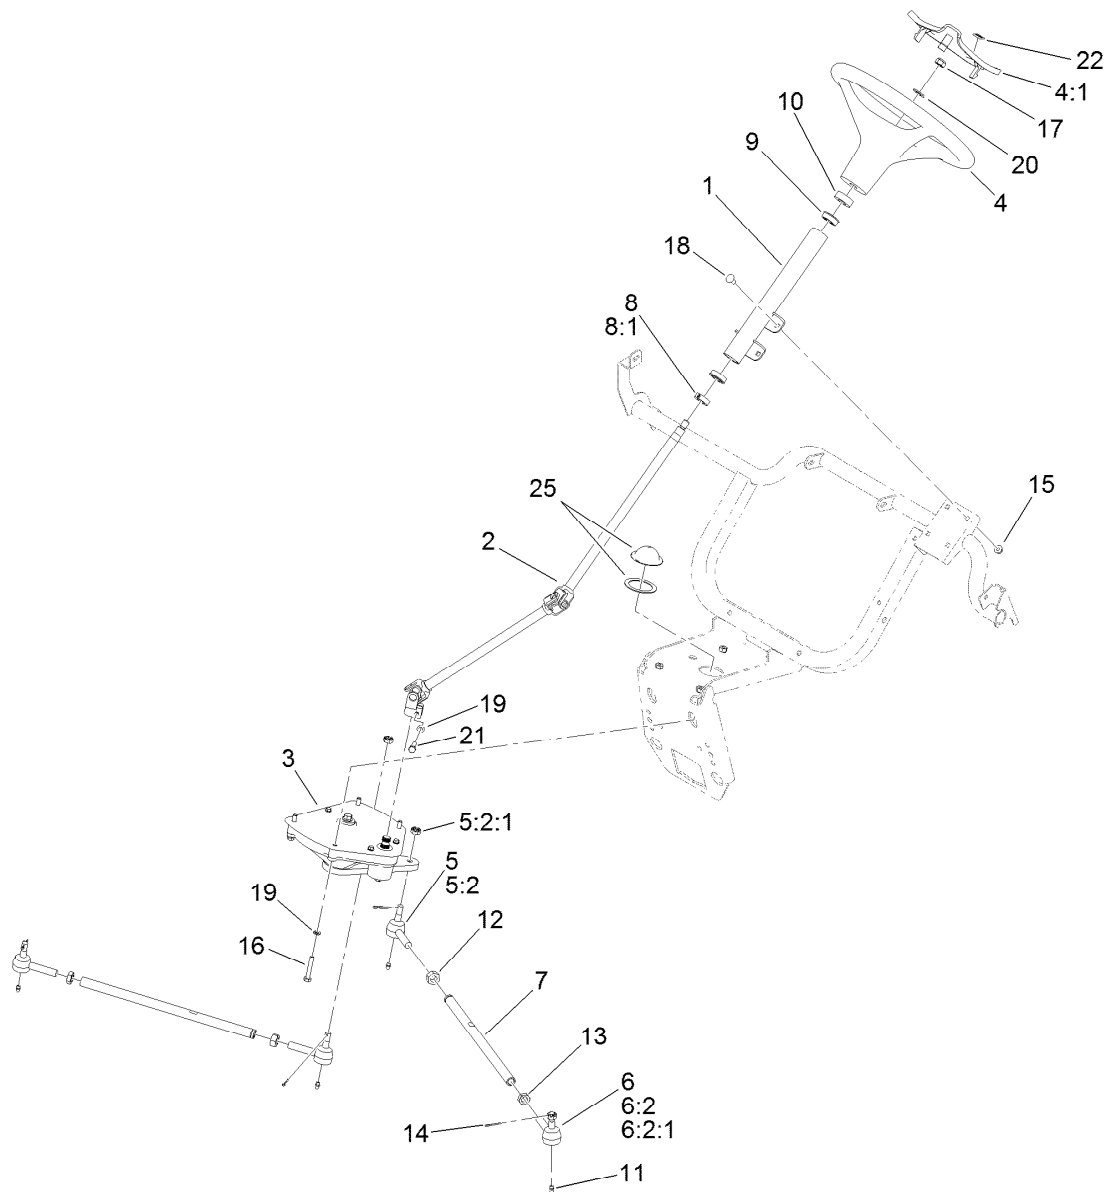


Steering Assembly

Ref.	Part Number	Qty.	Description
1	112-3264-03	1	Column
2	112-3355	1	Steering Shaft ASM
3	112-3130	1	Steering Box ASM
4	98-1471	1	Wheel-Steering
4:1	98-1468	1	Cover-Wheel, Steering
5	112771-03	2	Joint-Ball, LH
5:2		1	Socket-Balljoint ●
5:2:1	915031	1	Nut
6	112772-03	2	Joint-Ball, RH
6:2		1	Socket-Balljoint ●
6:2:1	915031	1	Nut
7	115-7654	2	Tie Rod
8	111383	1	Collar
8:1	3245-32	1	Screw-HSH
9	112-3262	2	Bearing

Ref.	Part Number	Qty.	Description
10	21-9260	1	Cover-Dust
11	302-5	4	Fitting-Grease
12	3218-21	2	Nut-Jam
13	3220-11	2	Nut-Jam
14	3272-7	4	Pin-Cotter
15	104-8300	4	Nut-Flange, NI
16	112-3305	4	Screw-HH
17	119-9493	1	Nut-Lock, NI
18	3230-1	4	Bolt-CARR
19	3253-4	5	Washer-Lock
20	3256-26	1	Washer-Flat
21	48-7730	1	Screw-Cap, HH
22	98-1459	1	Decal
25	120-5049	1	Steering Box Cover Kit


● Not serviced separately

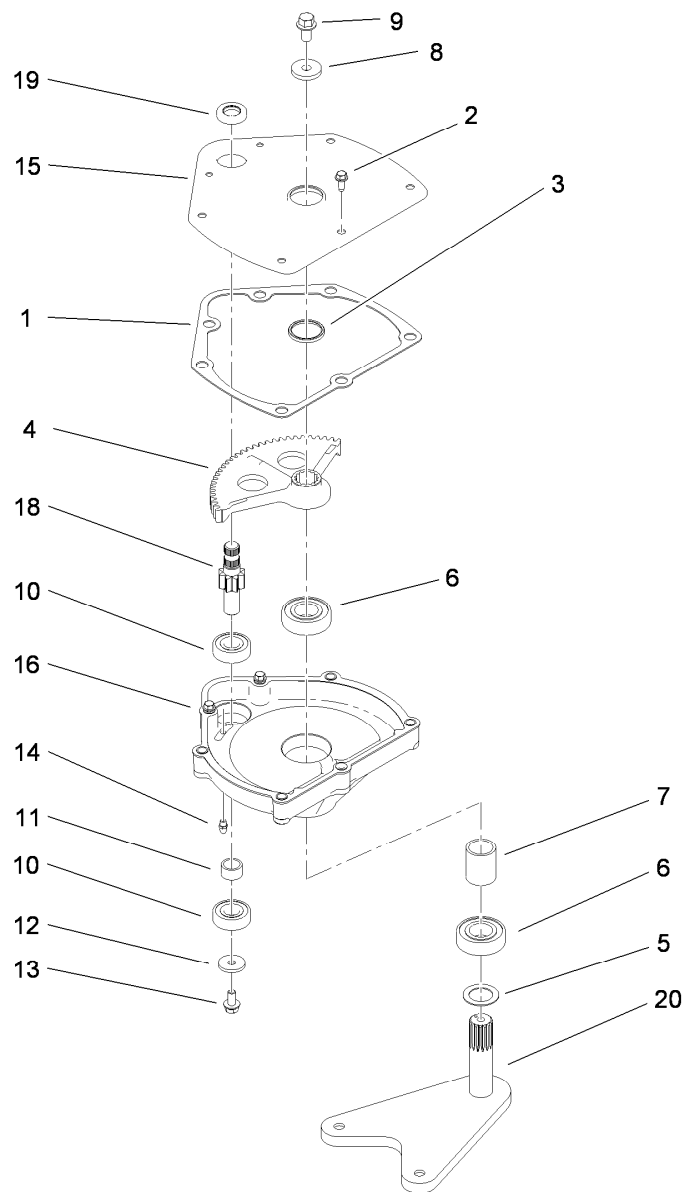

Steering Box Assembly No. 112-3130

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	94-2135	1	Gasket
2	32144-10	3	Screw-HWH
3	103118	1	Seal
4	99-7843	1	Sector-Gear
5	3256-42	1	Washer-Flat
6	251-82	2	Bearing-Ball
7	112-2917	1	Spacer
8	104-6563	1	Washer-Stepped
9	104-7156	1	Screw-HHF
10	38-7820	2	Bearing-Ball


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
11	94-2217	1	Spacer-Shaft, Input
12	1-613235	1	Washer
13	98-3498	1	Screw-HH
14	302-5	1	Fitting-Grease
15	112-2918-03	1	Cover-Housing, Steering
16	114-8309	1	Housing-Steering
18	115-7726	1	Gear-Pinion
19	99-7657	1	Seal-Oil
20	112-3096-03	1	Arm-Pitman

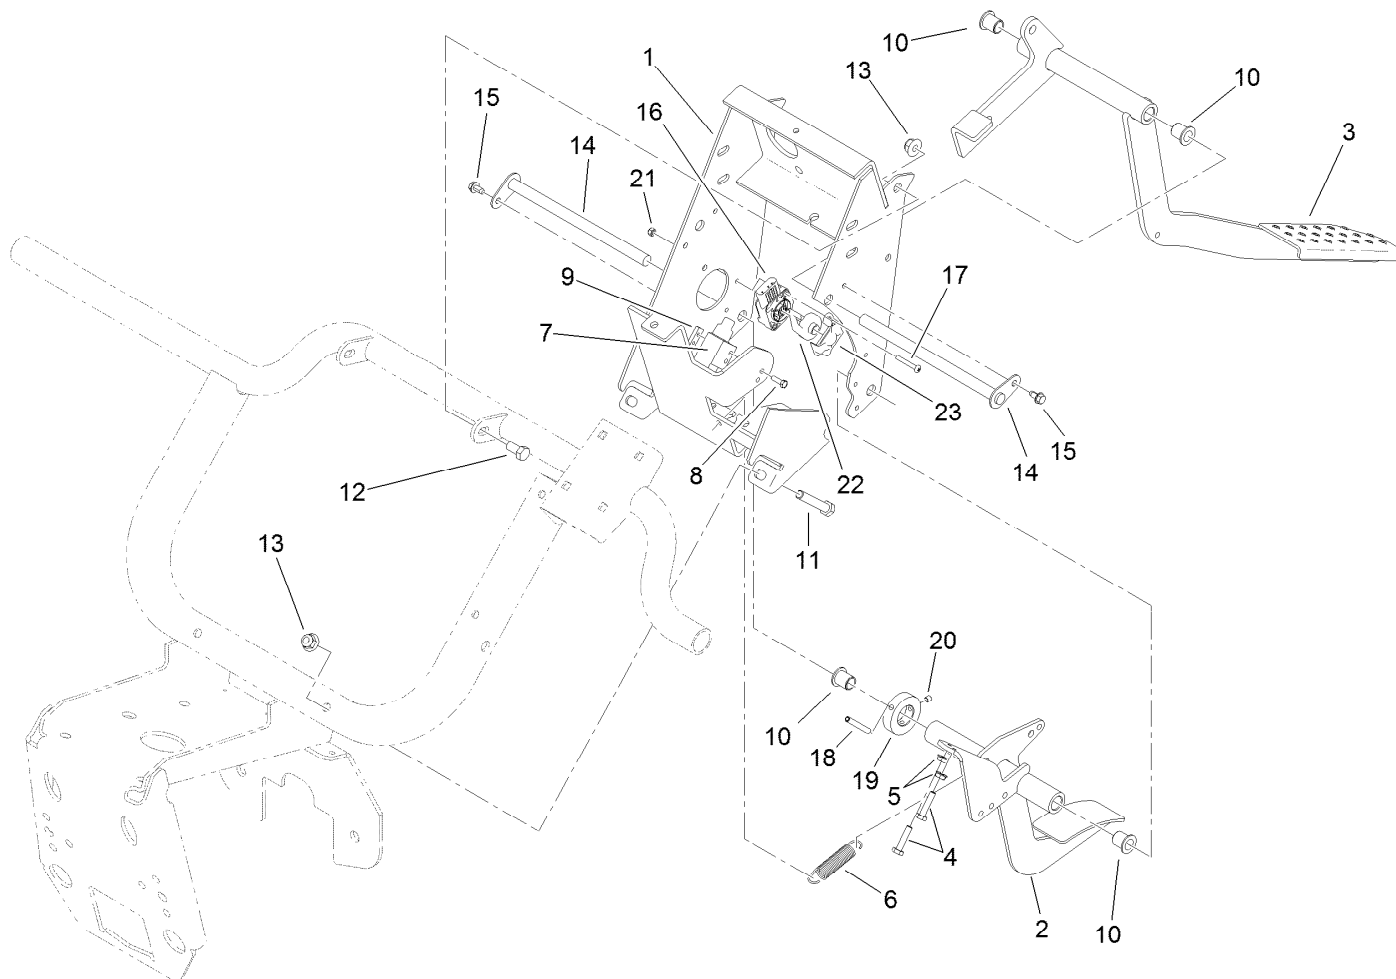

Pedal Box Assembly

Ref.	Part Number	Qty.	Description
1	119-0748-03	1	Support-Pedal
2	119-9747-03	1	Pedal-Throttle
3	112-3314-03	1	Pedal-Brake
4	321-7	2	Screw-HH
5	32149-2	2	Nut-Keps
6	104-6415	1	Spring-Return, Pedal
7	99-7407	1	Switch
8	3290-134	2	Screw
9	1-633181	1	Plate-Tapped
10	125-8775	4	Bushing-Flange
11	323-11	2	Screw-HH
12	323-4	2	Screw-HH


Ref.	Part Number	Qty.	Description
13	104-8301	4	Nut-Flange, NI
14	104-7164	2	Pivot-Pedal
15	32144-4	2	Screw-HWH
16	119-0737	1	Sensor-Position
17	104-1452	2	Screw-PPH
18	117-5071	1	Pin-Roll
19	104-7301	1	Collar
20	3245-32	2	Screw-HSH
21	3296-2	2	Nut-Lock, NI
22	117-5059	1	Pivot-Sensor, Speed
23	117-5061	1	Retainer

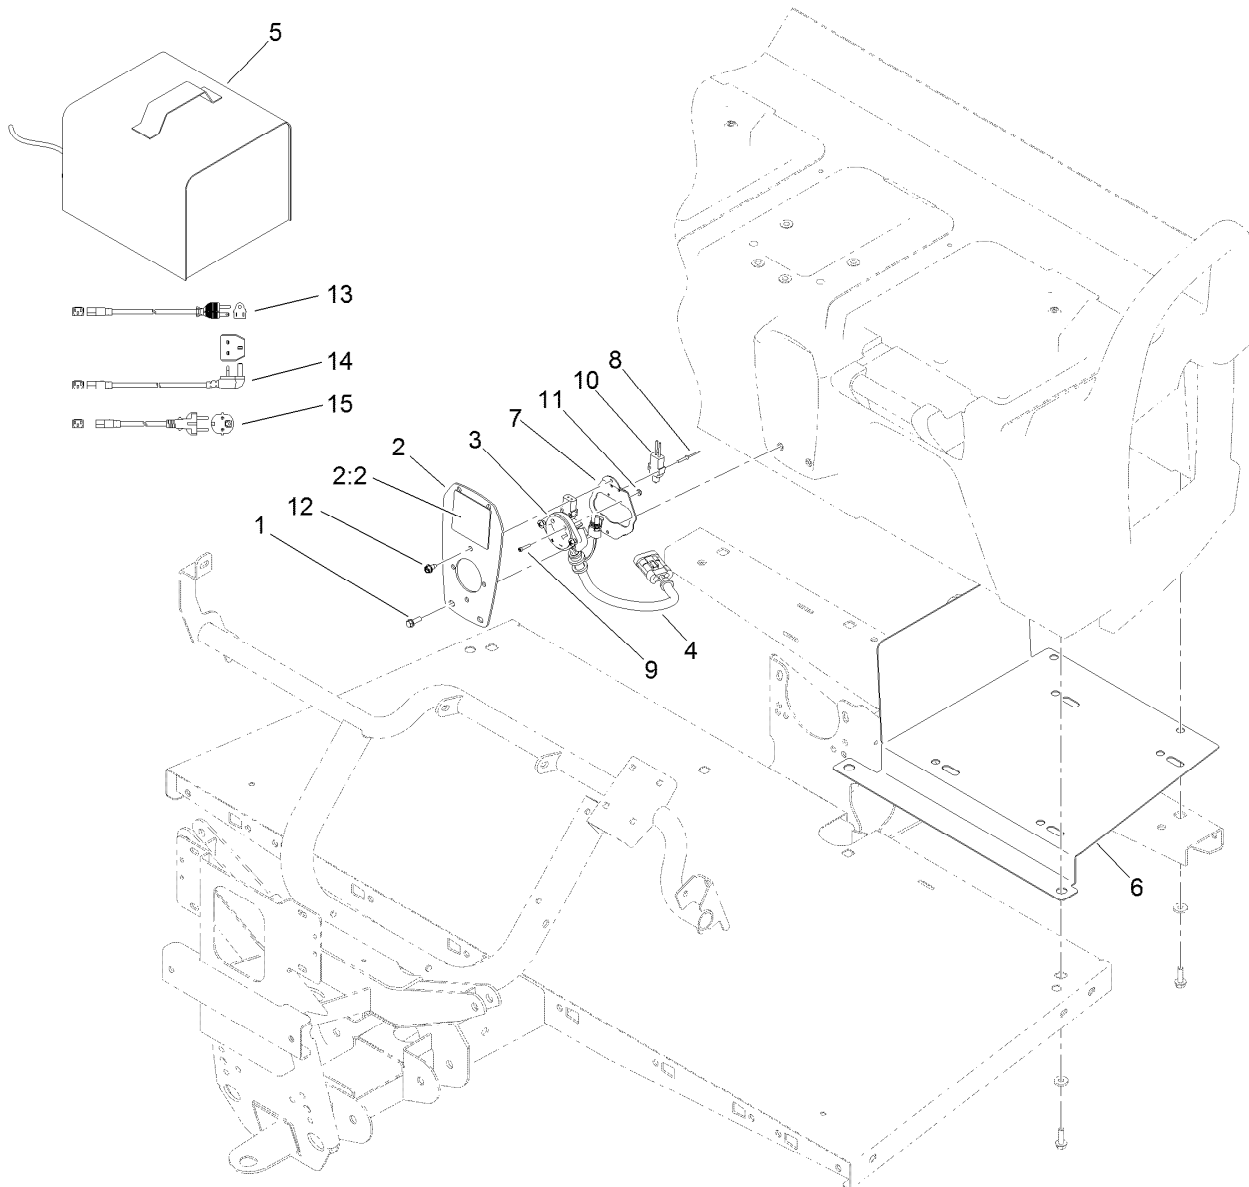

Charging Receptacle Assembly

Ref.	Part Number	Qty.	Description
1	32105-15	4	Screw-HWH
2	107-0370	1	Plate-Receptacle
2:2	107-0295	1	Decal-Charger
3	107-0288	1	Receptacle-Charger
4	115-1913	1	Harness-Wire, Charger
5	112-2914	1	Charger-48V, Offboard
6	107-0359-03	1	Tray-Seatbase
7	107-0716	1	Bracket-Mount, Socket


Ref.	Part Number	Qty.	Description
8	107-0333	2	Rivet-Pop
9	107-0334	2	Screw-HSH
10	99-3410	1	Switch
11	3296-9	2	Nut-Lock
12	32104-17	4	Screw-HWH
13	107-0384	1	Powercord-Ac
14	107-0383	1	Powercord-Ac, U.K.
15	107-0382	1	Powercord-Ac, Europe

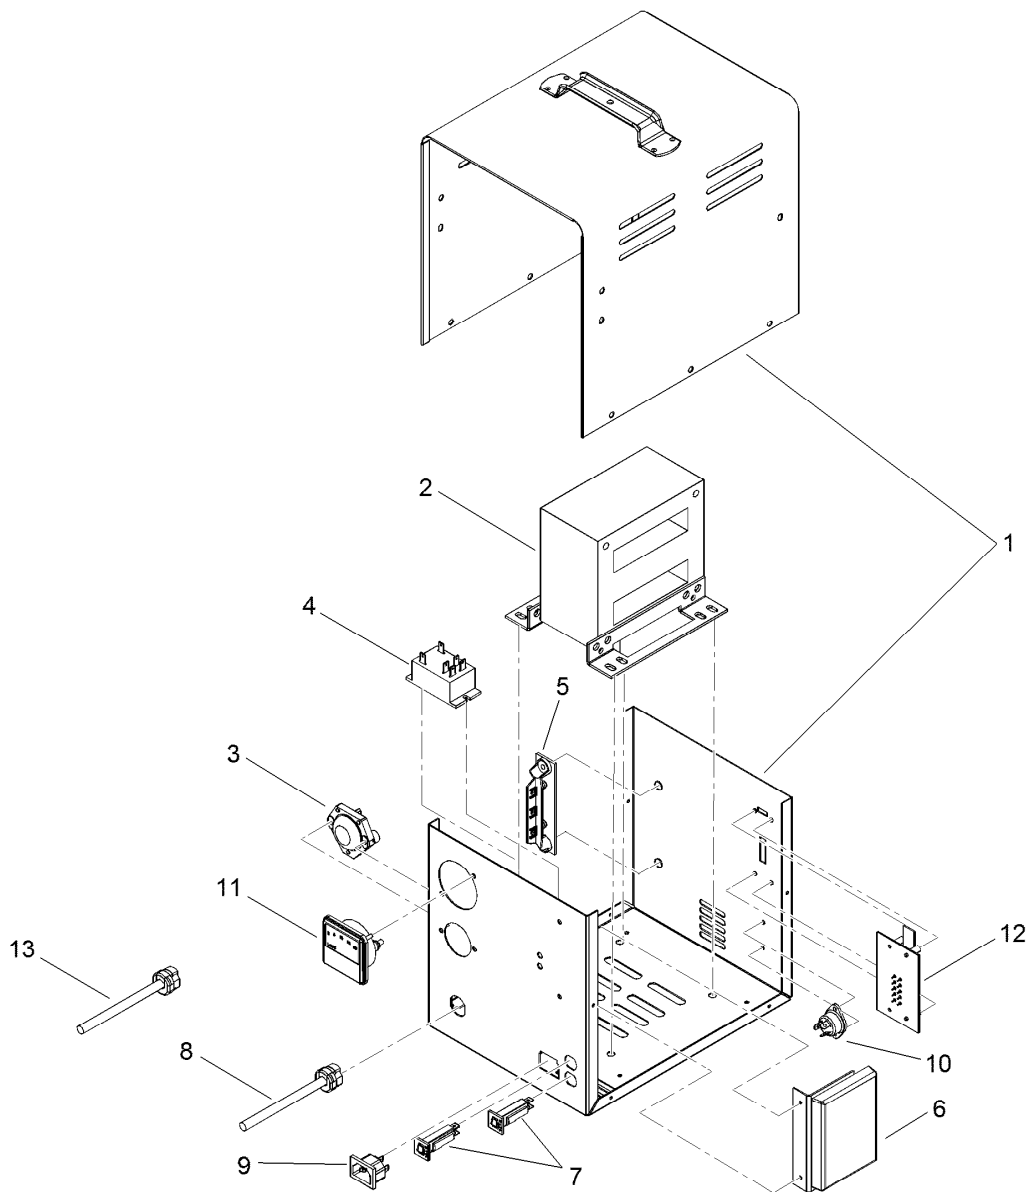

Offboard 48 Volt Charger Assembly No. 112-2914

Ref.	Part Number	Qty.	Description
1		1	Case ASM ●
2		1	Transformer ASM ●
3	108-1161	1	Fuse ASM
4	108-1170	1	Relay, 48V Dc
5	108-1163	1	Diode ASM
6	112-2913	1	Control Board ASM
7	110-2577	2	Breaker-Circuit
8	108-1173	1	Kit-Cordset
9	108-1174	1	Connector-Inlet
10	108-1168	1	Terminal And Screw ASM
11	108-1175	1	Ammeter
12	110-2578	1	Switch ASM
13	108-3071	1	Kit-Cordset, 20 Foot (Dc)


● Not serviced separately

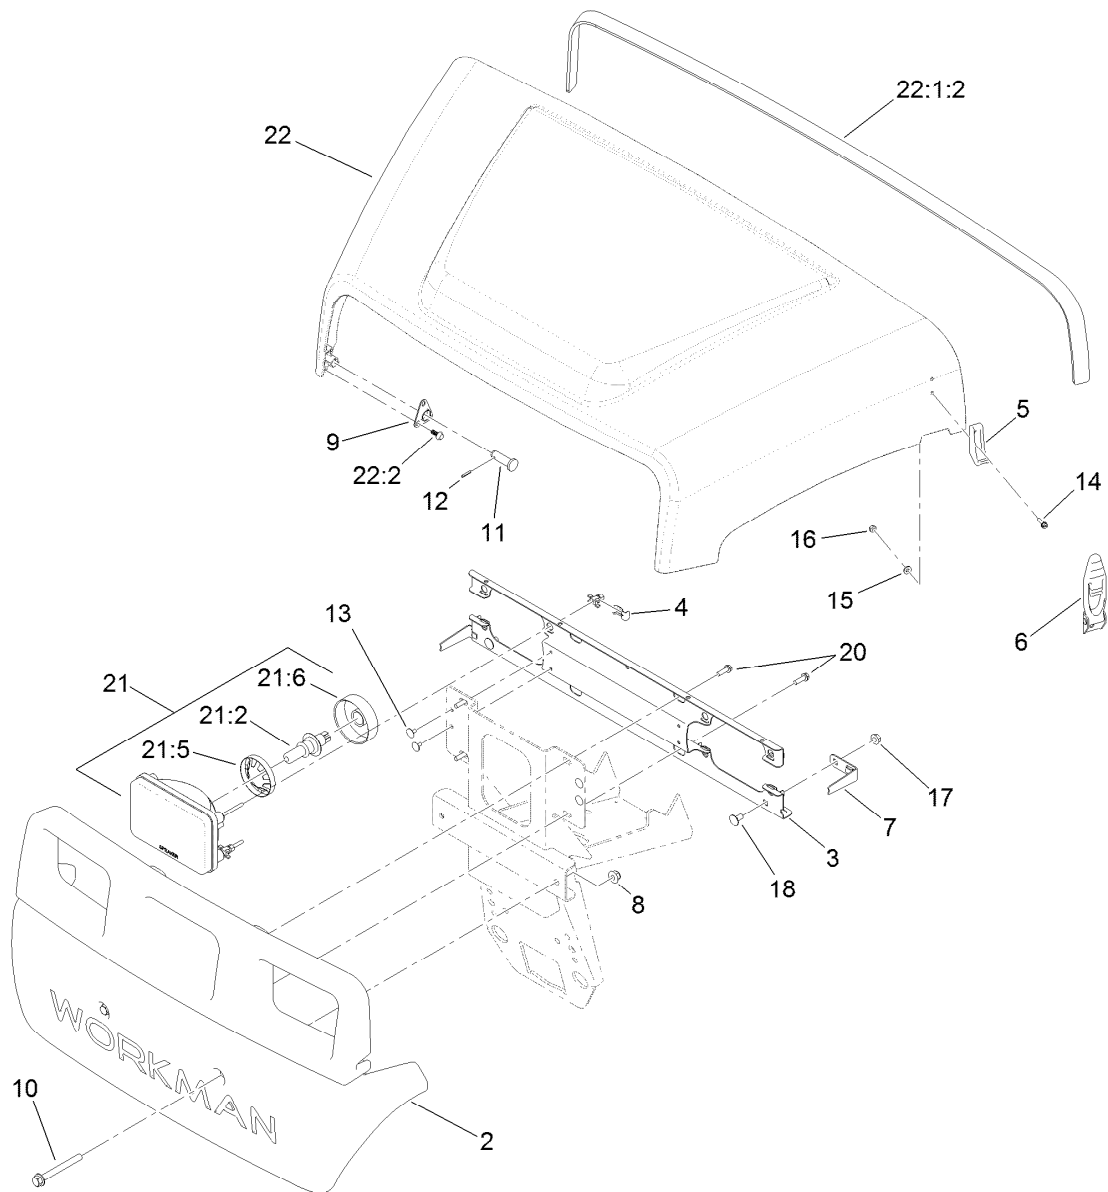

Hood and Bumper Assembly


Ref.	Part Number	Qty.	Description
2	112-3365	1	Bumper
3	119-0841-03	1	Bracket-Headlight
4	115-2408	6	Clip-Speed
5	103-2897	2	Latch-Catch
6	115-2416	2	Latch-Rubber
7	112-3373	2	Keeper-Pivot, Hood
8	104-8301	2	Nut-Flange, NI
9	112-3308	2	Retainer-Pin
10	115-7660	2	Screw-HHF
11	117-5094	2	Pin-Clevis
12	32121-50	2	Pin-Spring
13	146489	4	Rivet
14	32105-13	4	Screw-HWH

Ref.	Part Number	Qty.	Description
15	3256-14	4	Washer-Flat
16	3296-2	4	Nut-Lock, NI
17	32128-20	2	Nut-HF
18	3230-18	2	Screw-CARR
20	46-8091	4	Screw-HWH
21	115-7617	2	Headlight ASM
21:2	115-7618	1	Bulb-24V
21:5	115-7667	1	Retainer-Headlamp
21:6	115-7668	1	Boot-Headlamp
22	121-9606	1	Hood ASM
22:1:2	115-7635	1	Seal-Foam
22:2	121-9605	6	Screw-HWH

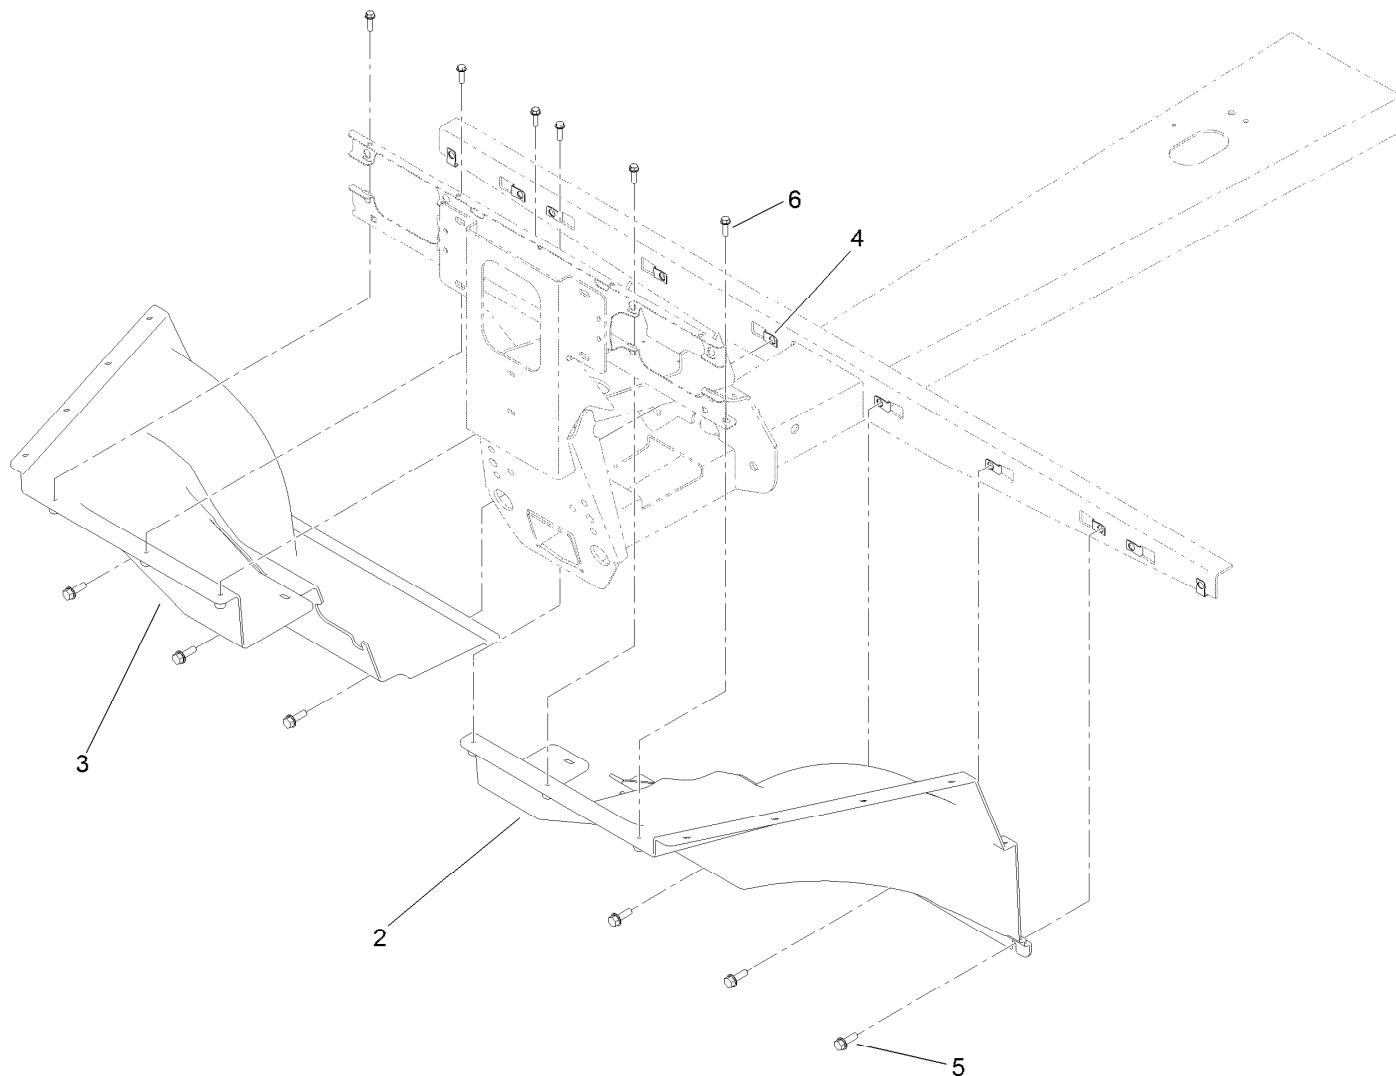

Fender Well Assembly


Ref.	Part Number	Qty.	Description
2	112-3369	1	Well-Fender, LH
3	112-3368	1	Well-Fender, RH
4	112-3306	10	Nut
5	3234-29	10	Screw-HHF
6	46-8091	6	Screw-HWH

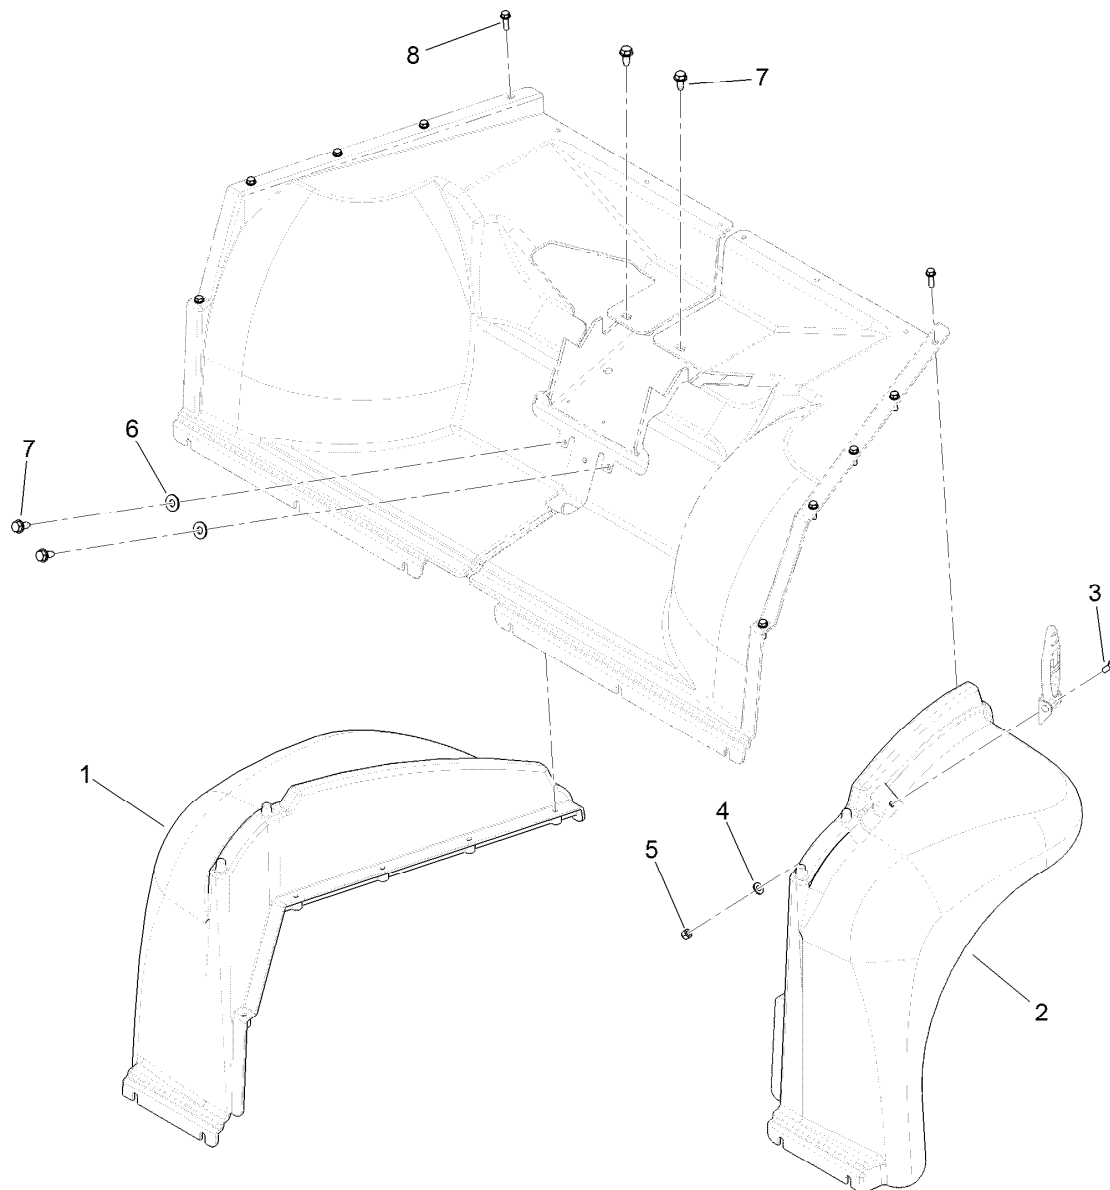

Fender Assembly

Ref.	Part Number	Qty.	Description
1	112-3371	1	Fender-LH
2	112-3370	1	Fender-RH
3	321-39	2	Screw-HH
4	3256-22	2	Washer-Flat
5	3296-42	2	Nut-Lock, NI
6	3256-71	2	Washer-Flat
7	32104-32	4	Screw-HWH
8	46-8091	10	Screw-HWH


Dash Assembly

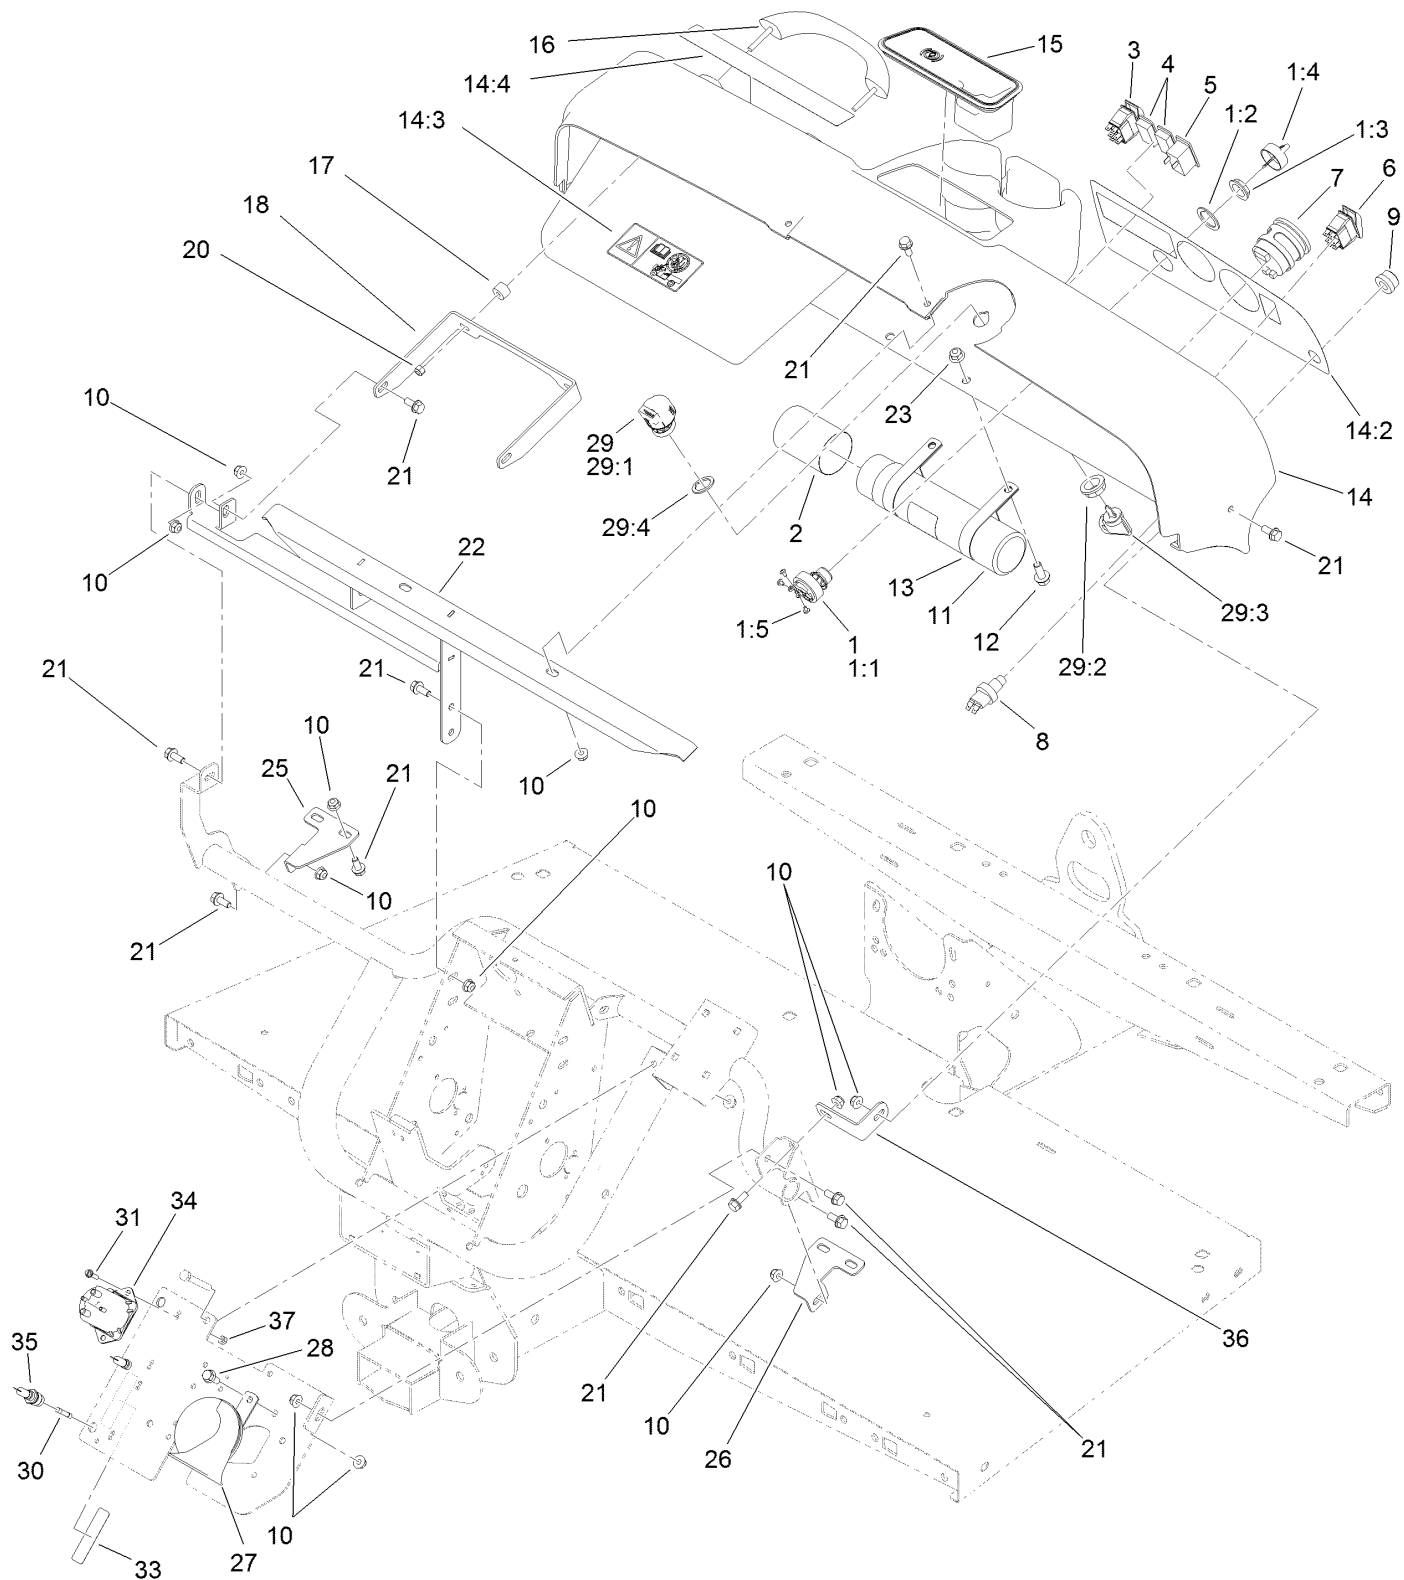

Dash Assembly (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	120-4815	1	Switch-Key, 48V	16	112-3320	1	Handle-Grip
1:1		1	Switch-Key ●	17	114-8301	2	Spacer
1:2	108-8659	1	Washer-Backup	18	112-3391-03	1	Bracket-Grip, Handle
1:3	108-8660	1	Nut-Mounting	20	104-7201	2	Nut-HF
1:4	106-5270	1	Ignition Key Set	21	110-5053	16	Screw-HHF
1:5	3250-28	3	Screw	22	115-7651-03	1	Support-Dash
2	104-7048	1	Cap-Housing	23	104-8301	2	Nut-Flange, NI
3	107-0255	1	Switch	25	114-8304	1	Bracket-Mount, Dash (RH)
4	99-7420	2	Plug-Hole	26	114-8312	1	Bracket-Mount, Dash (LH)
5	104-7129	1	Light-Indicator	27	107-0358	1	Horn
6	107-0747	1	Switch-Rocker	28	110-5053	1	Screw-HHF
7	107-0260	1	Gauge-Hour/Battery Level, 48 Volt	29	110-2580	1	Switch-Key, Supervisor
8	112-3324	1	Switch-Horn	29:1		1	Switch-Key ●
9	112-3313	1	Nut-Weatherproof	29:2	108-8660	1	Nut-Mounting
10	104-8300	17	Nut-Flange, NI	29:3	110-5221	1	Set-Key, Supervisor
11	104-7050	1	Tube-Manual	29:4	108-8659	1	Washer-Backup
12	3234-11	2	Screw-HHF	30	98-8876	2	Fuse-10 Amp
13	2412-133	2	R-Clamp	31	32105-13	2	Screw-HWH
14	114-8311	1	Dash ASM	33	115-7621	1	Decal-Electrical
14:2	112-3310	1	Decal-Dash, Ce	34	104-7135	1	Solenoid ASM
14:3	104-7215	1	Decal-Danger	35	218-489	2	Holder-Fuse
14:4	115-2412	1	Decal-No Storage	36	114-8305	1	Angle-Mount, Dash (LH)
15	104-6930	1	Plug-Rubber	37	3296-2	2	Nut-Lock, NI

● Not serviced separately

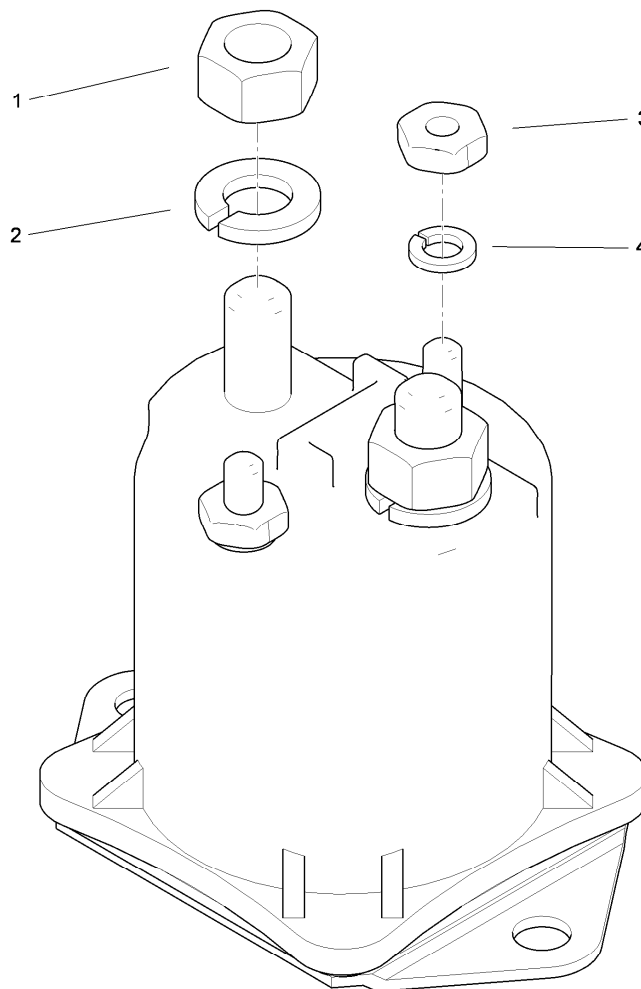

Solenoid Assembly No. 104-7135


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	3217-6	2	Nut-Hex
2	3253-4	2	Washer-Lock
3	3219-14	2	Nut-Hex
4	3253-17	2	Washer-Lock

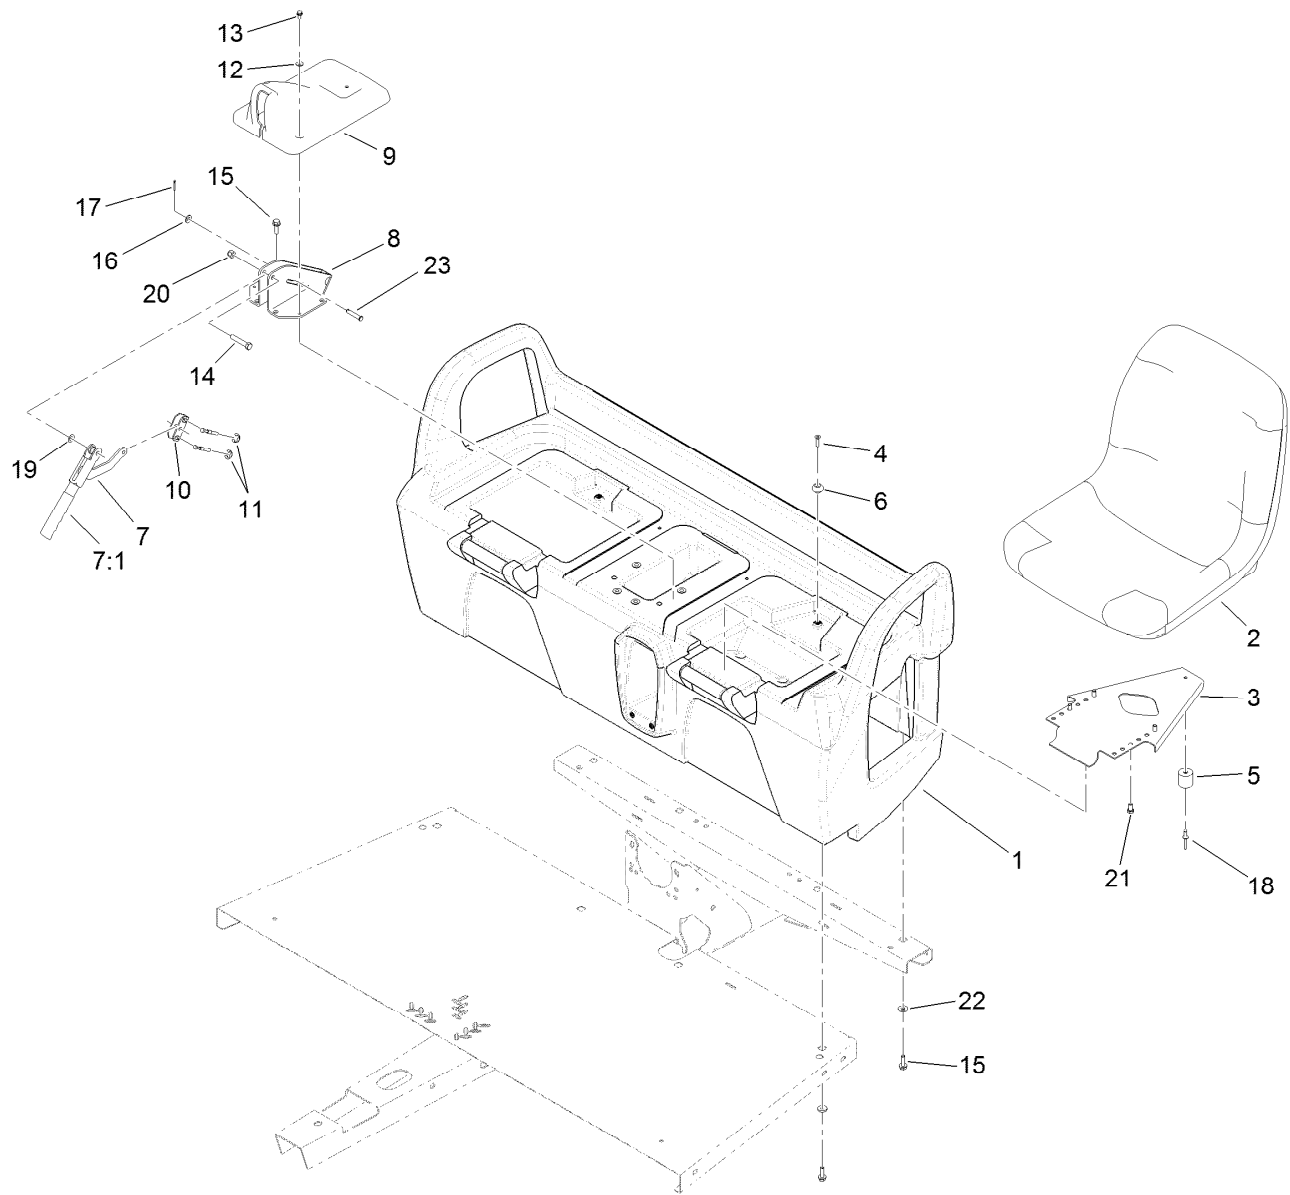

Seatbase Assembly

Ref.	Part Number	Qty.	Description
1	104-6847	1	Seat Base ASM
2	112-2923	2	Seat ASM
3	99-7829	2	Bracket-Seat
4	32108-5	2	Screw-FH
5	99-7830	2	Rubber Receptical ASM
6	99-7833	2	Post-Holding
7	104-6842	1	Lever-Brake, Park
7:1	106-7972	1	Grip-Handle
8	104-6844-03	1	Support-Brake, Park
9	104-7014	1	Cover-Brake, Parking
10	87-3480	1	Bracket-Equalizer, Cable
11	32120-47	2	Ring-Retaining, External


Ref.	Part Number	Qty.	Description
12	3256-1	2	Washer-Flat
13	32144-4	2	Screw-HWH
14	323-10	1	Screw-HH
15	3234-17	12	Screw-HHF
16	3256-23	1	Washer-Flat
17	3272-6	1	Pin-Cotter
18	3290-412	2	Rivet
19	3290-477	1	Washer-Curved
20	3296-39	1	Nut-Lock, NI
21	33114-016	8	Screw-HH
22	88-7200	8	Washer-Flat
23	94-3829	1	Pin-Clevis

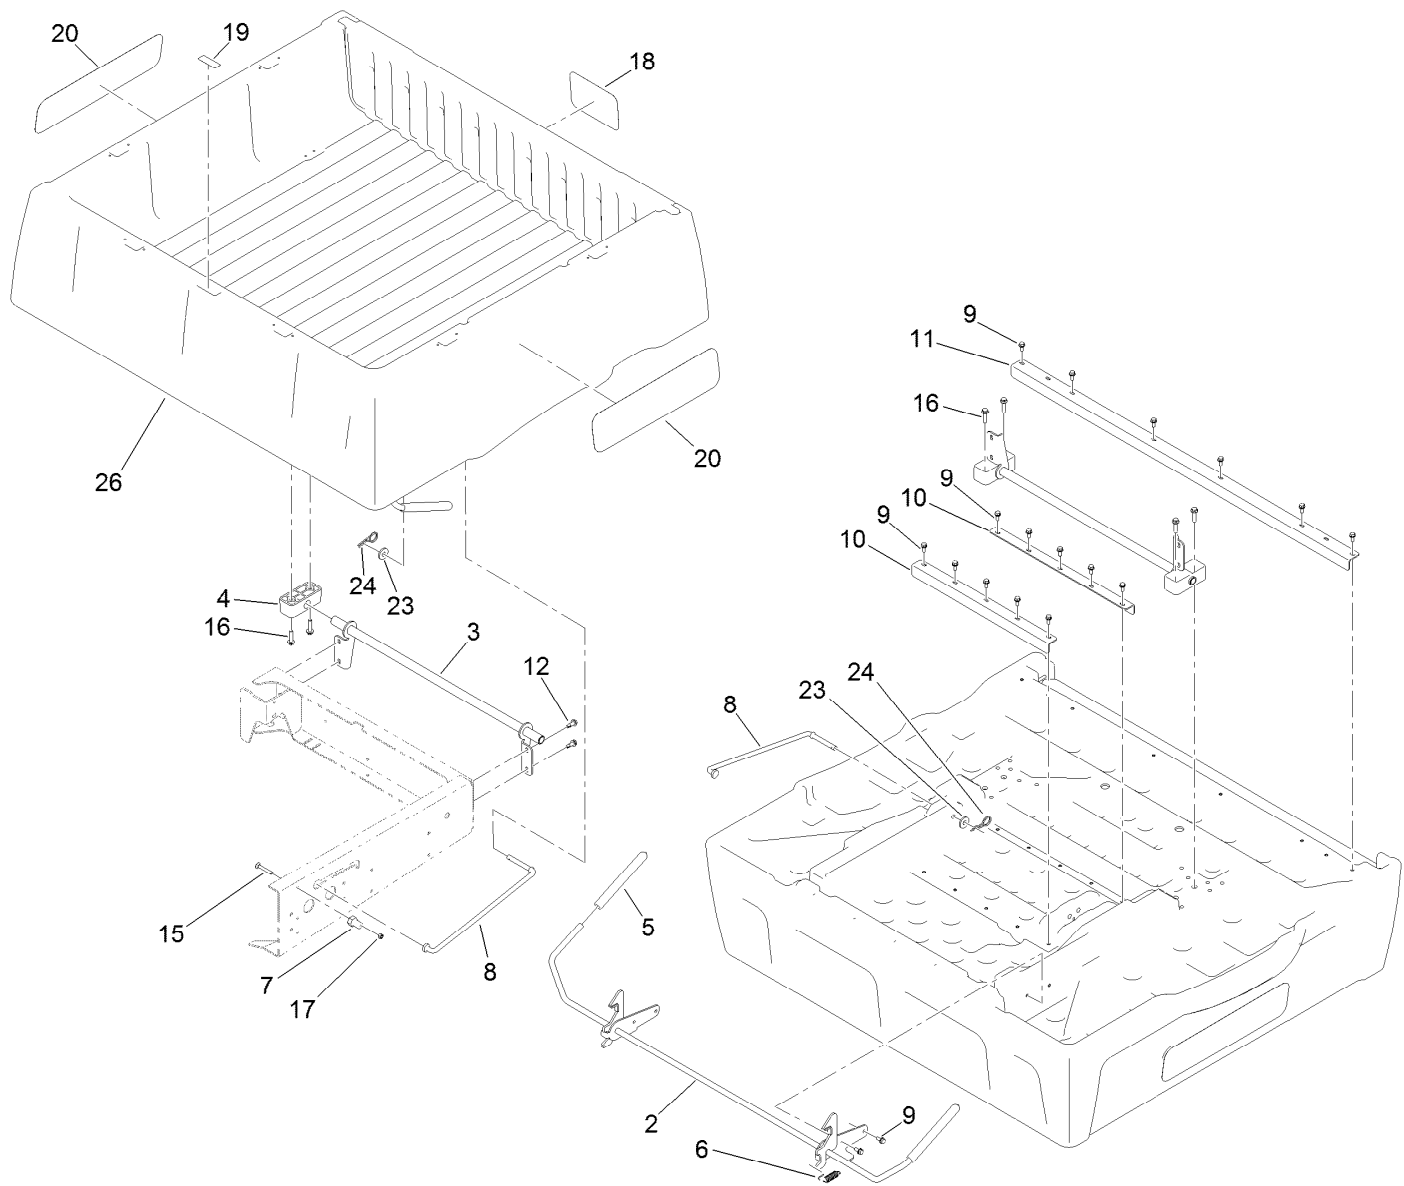

Cargo Bed Assembly


Ref.	Part Number	Qty.	Description
2	121-6344	1	Latch ASM
3	119-0848-03	1	Bracket-Pivot
4	121-6342	2	Bushing-Pivot
5	119-9627	2	Grip-Handle
6	5-7290	2	Spring-Tension
7	104-7248	2	Pin-Latch
8	121-6316	1	Rod-Prop
9	3234-5	20	Screw-HHF
10	121-6314-03	2	Brace-Bed, Middle
11	121-6315-03	1	Brace-Bed, Rear
12	105-6245	4	Screw-Tapping

Ref.	Part Number	Qty.	Description
15	3230-7	2	Bolt-CARR
16	3234-18	4	Screw-HHF
17	3296-29	2	Nut-Lock, NI
18	104-7213	1	Decal
19	115-7739	1	Decal-No Riders
20	119-9451	2	Decal
23	110-6147	1	Washer-Flat
24	107-3155	1	Hairpin
26	127-7384	1	Complete Cargo Bed Service ASM

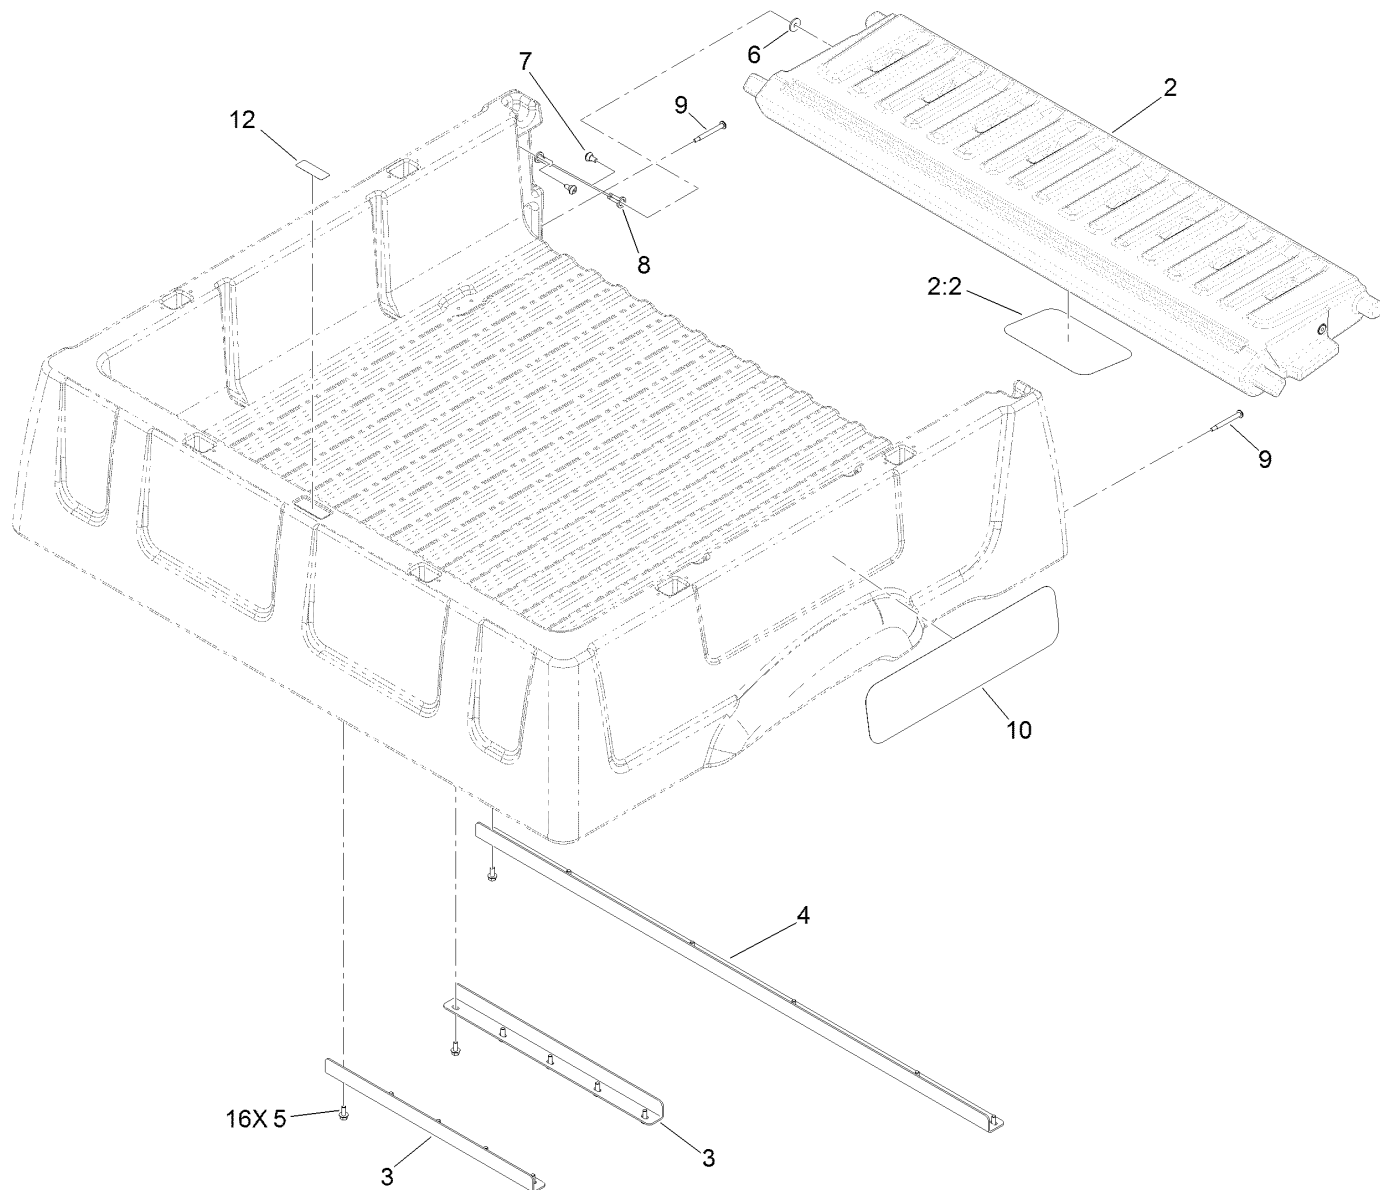

Cargo Bed Service Assembly No. 127-7384


Ref.	Part Number	Qty.	Description
2	127-7396	1	Tailgate ASM
2:2	104-7213	1	Decal
3	121-6314-03	2	Brace-Bed, Middle
4	121-6315-03	1	Brace-Bed, Rear
5	3234-5	16	Screw-HHF
6	115-7109	2	Washer-Flat
7	119-2267	4	Screw-Shoulder, BHTF
8	121-6343	2	Lanyard-Tailgate
9	127-7383	2	Screw-Shoulder, Bh (Torx)
10	120-4825	2	Decal
12	115-7739	1	Decal-No Riders

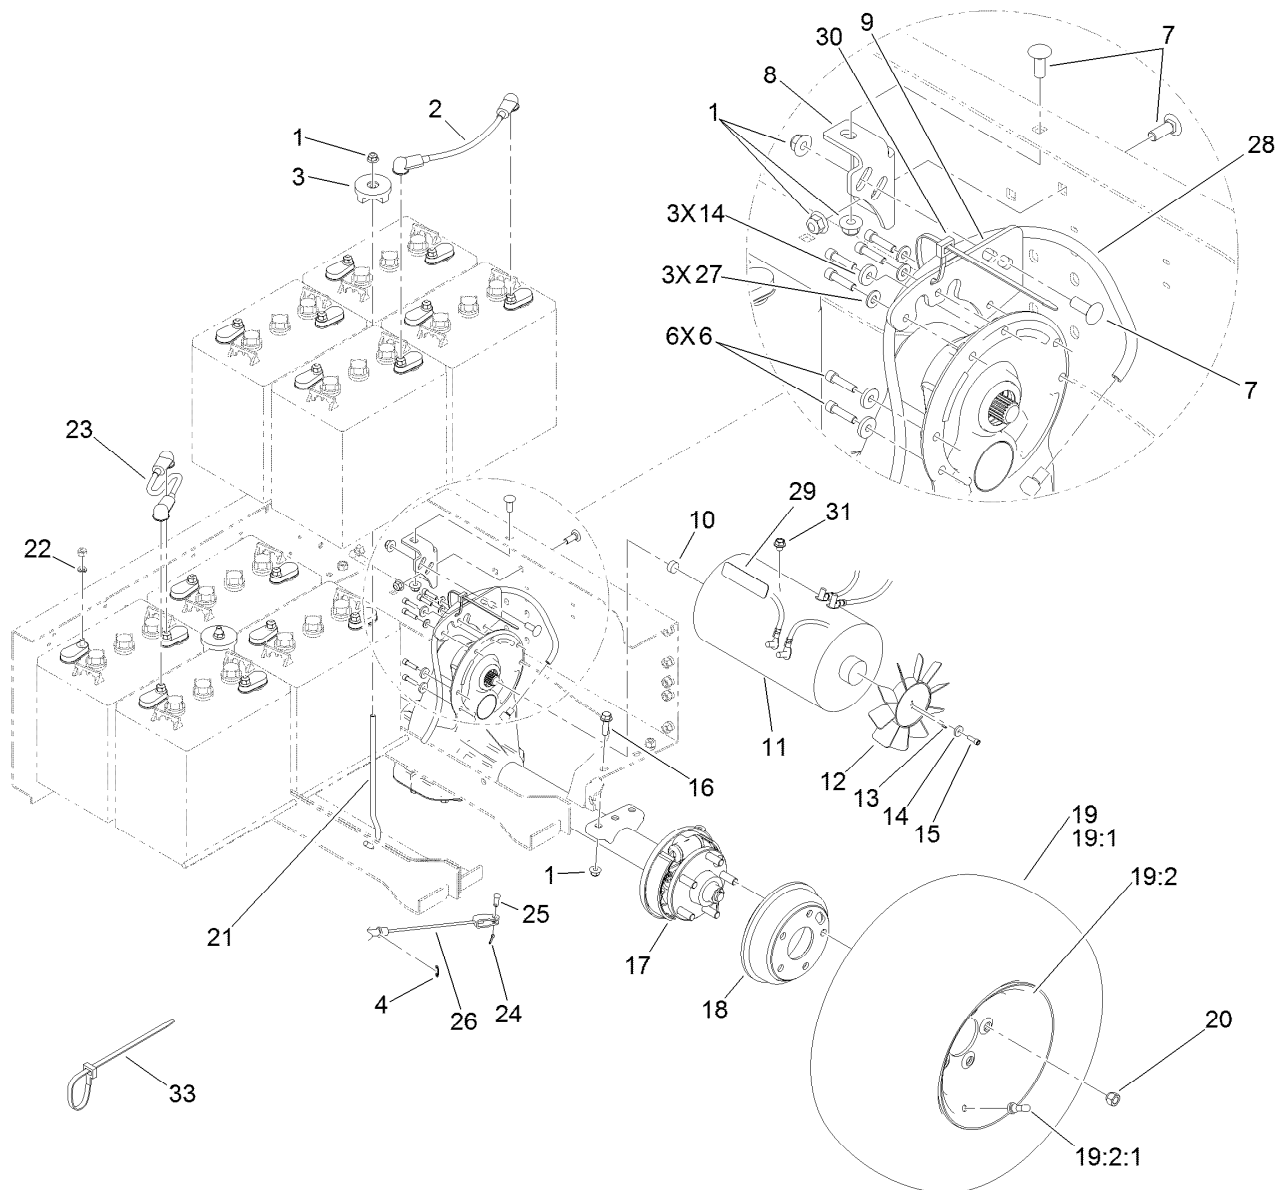

Battery and Transaxle Assembly

Ref.	Part Number	Qty.	Description
1	104-8301	11	Nut-Flange, NI
2	107-0739	1	Cable-Battery, Positive
3	104-7149	2	Hold Down ASM
4	32120-47	2	Ring-Retaining, External
6	3274-26	6	Screw-HSH
7	3231-22	5	Screw-CARR
8	104-7249-03	1	Bracket-Support
9	104-7305-03	1	Plate-Mount, Transaxle
10	112-3399	1	Damper-Rubber
11	104-7335	1	Electric Motor ASM
12	107-0259	1	Fan-10 Blade, Clockwise
13	32121-68	2	Pin-Roll
14	73-3580	4	Washer
15	3274-8	1	Screw-HSH
16	3234-24	4	Screw-HHF
17	114-8330	1	Electric Transaxle ASM
18	104-6500	2	Drum-Brake


Ref.	Part Number	Qty.	Description
19	127-7434	2	Tire/Wheel ASM
19:1	127-7435	1	Tire
19:2	127-7436	1	Wheel
19:2:1	232-27	1	Stem-Valve
20	242-50	10	Nut-Lug
21	104-7339	2	Rod-Battery
22	107-0280	16	Washer-Lock
23	107-0738	6	Cable-Battery, Positive
24	3272-10	2	Pin-Cotter
25	283-62	2	Pin-Clevis
26	110-2647	2	Cable-Brake, Park
27	3256-22	3	Washer-Flat
28	110-1872	1	Hose-Fuel
29	107-0356	1	Decal-Motor
30	3290-379	12	Tie-Cable
31	107-0376	1	Screw-HHF
33	3290-378	2	Tie-Cable

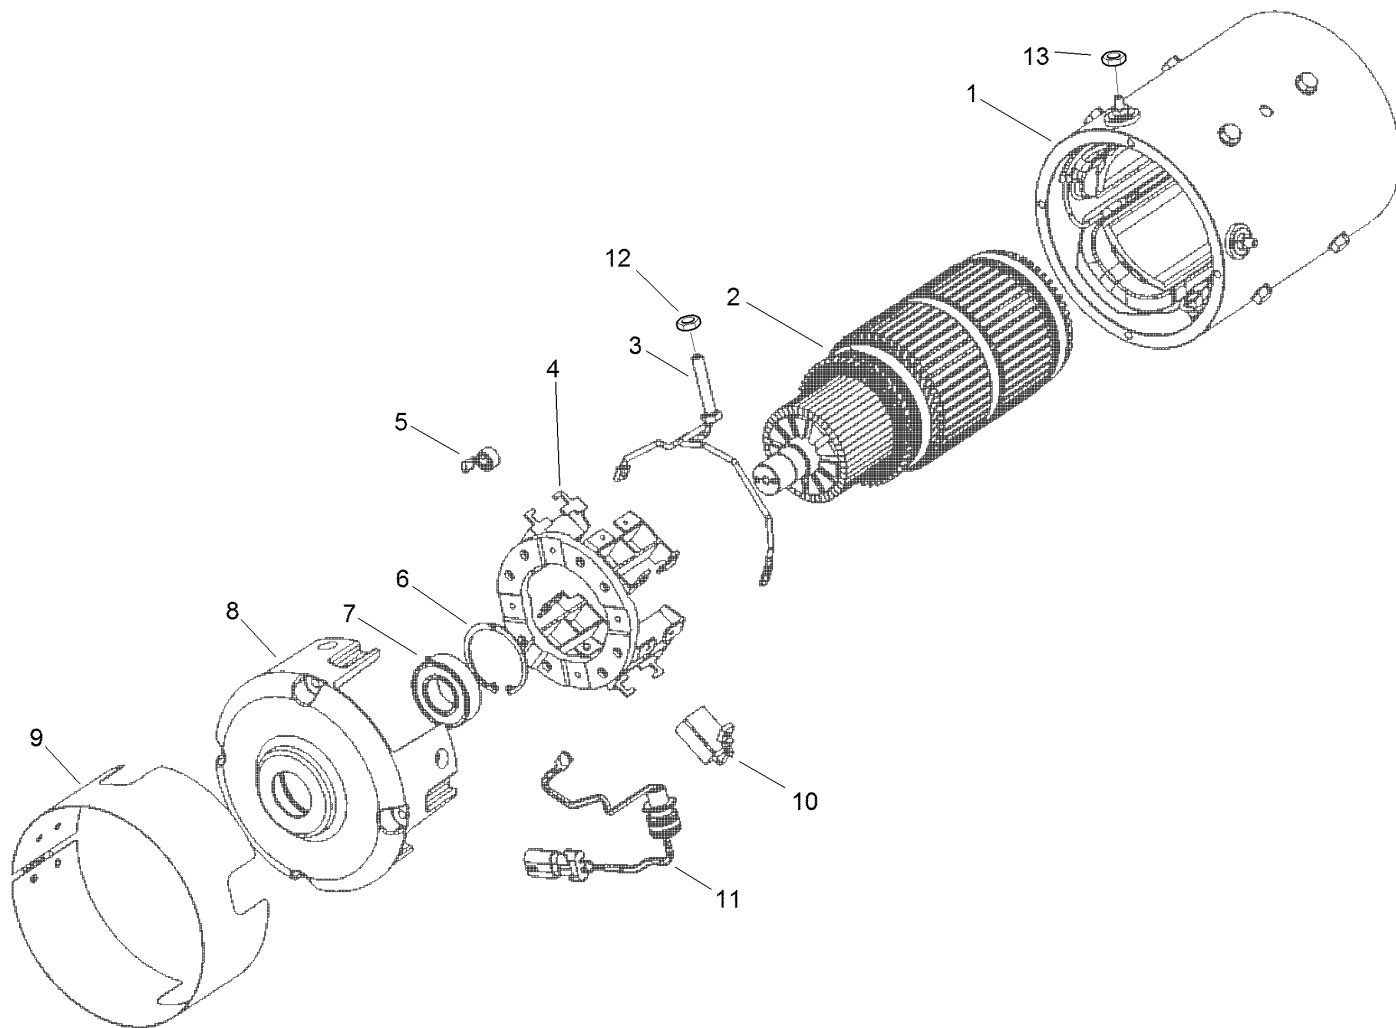

Electric Motor Assembly No. 104-7335

Ref.	Part Number	Qty.	Description
1		1	Frame And Field ASM ●
2		1	Armature ASM ●
3	108-1151	2	Brush Lead ASM
4	108-1152	1	Brush Box ASM
5	108-1153	8	Spring-Brush
6	108-1154	1	Ring-Retaining
7	108-1155	1	Bearing
8	108-1156	1	Head-Commutator
9	108-1157	1	Headband ASM
10	108-1158	8	Brush
11	108-1159	1	Thermal Sensor ASM
12	3218-13	2	Nut-Jam, Brass
13	3218-14	2	Nut-Jam, Brass

● Not serviced separately

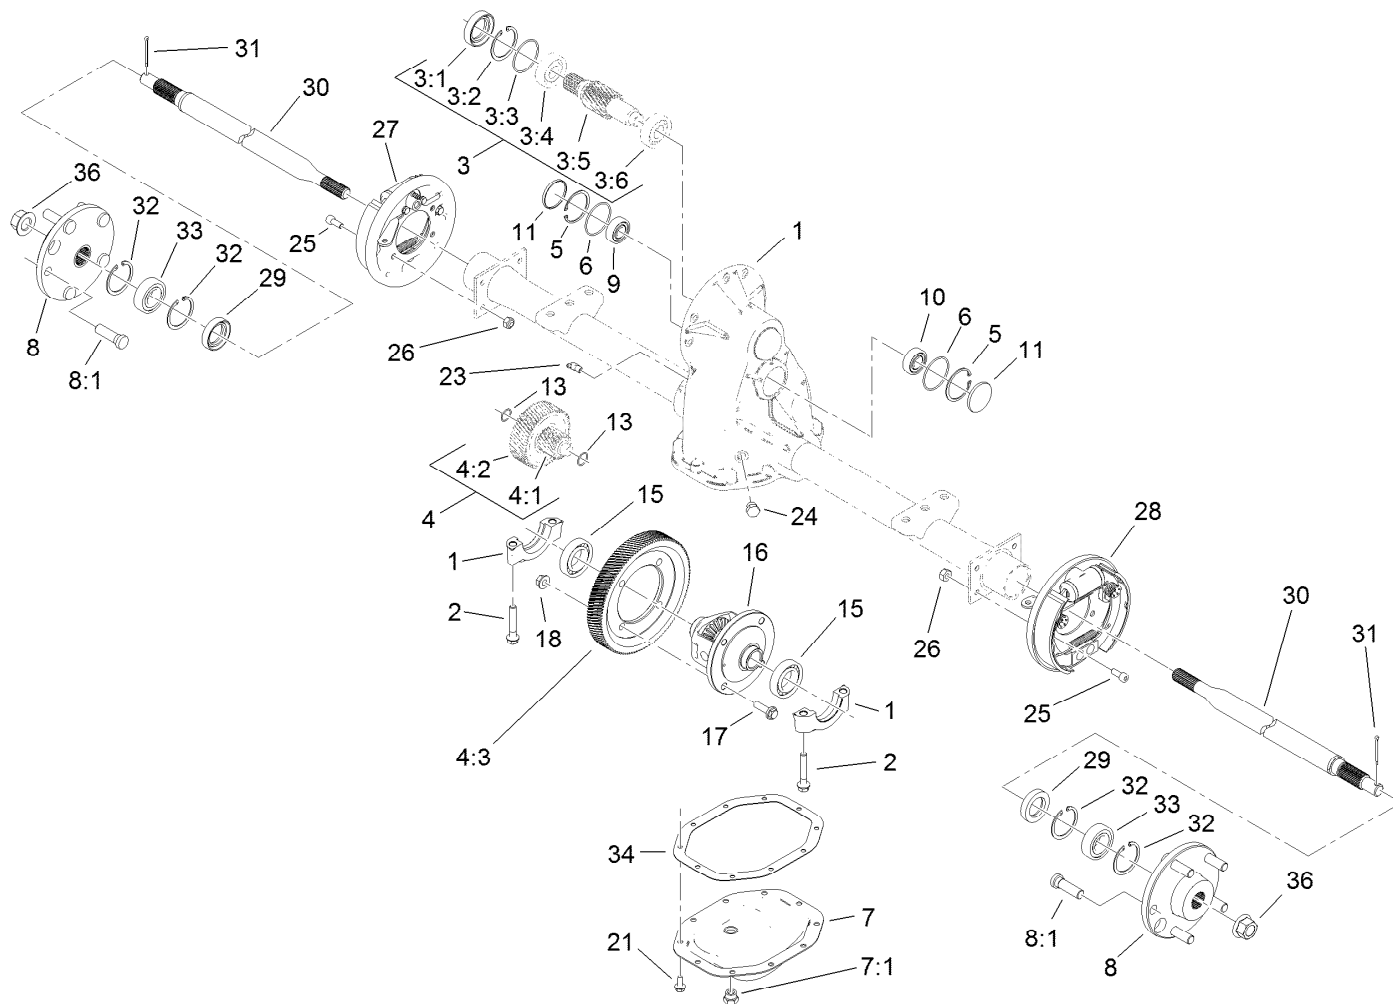


Electric Transaxle Assembly No. 114-8330

Ref.	Part Number	Qty.	Description
1		1	Transaxle ASM ●
2	108-2401	4	Bolt-Cap, Bearing
3	115-2185	1	Input Shaft Kit
3:1	108-2403	1	Seal-Oil
3:2	108-2404	1	Ring-Retaining
3:3	108-2405	1	O-Ring
3:4		1	Bearing-Ball ●
3:5		1	Shaft-Input ●
3:6		1	Bearing-Ball ●
4	108-2409	1	Internal Gear Kit
4:1		1	Shaft-Input ●
4:2		1	Gear-Intermediate ●
4:3	110-2541	1	Gear-Drive, Final
5	108-2404	2	Ring-Retaining
6	108-2405	2	O-Ring
7	108-2416	1	Cover Kit
7:1	108-2415	1	Plug-HH
8	112-3136	2	Hub ASM

Ref.	Part Number	Qty.	Description
8:1	112-3137	1	Bolt-Wheel
9	108-2406	1	Bearing-Ball
10	108-2407	1	Bearing-Ball
11	108-2408	2	Plug-Cap, End
13	108-2410	2	O-Ring
15	108-2411	2	Bearing-Ball
16	112-3138	1	Differential ASM
17	108-2413	4	Screw-Hex
18	108-2414	4	Nut-Lock
21	108-2427	10	Screw-Tapping
23	108-2428	1	Elbow-90 Degree
24	108-2429	1	Plug-HH
25	112-3139	8	Screw-HSH
26	108-2418	8	Nut-Lock
27	114-8332	1	LH Brake ASM
28	114-8331	1	RH Brake ASM
29	112-3140	2	Seal-Oil
30	112-3141	2	Shaft-Axle

● Not serviced separately

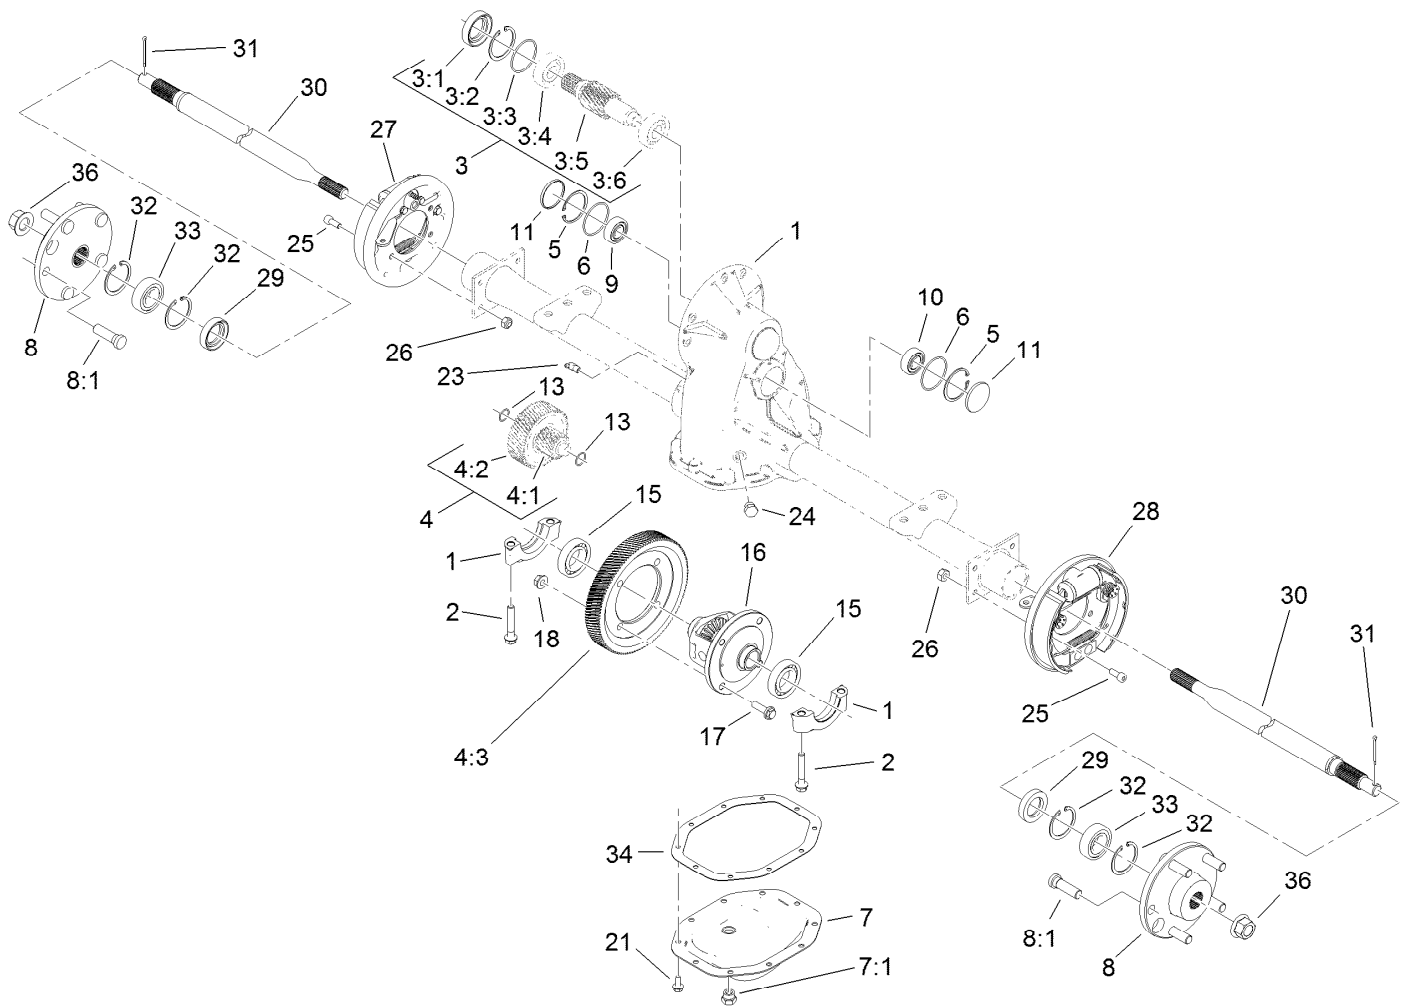


Electric Transaxle Assembly No. 114-8330 (continued)

Ref.	Part Number	Qty.	Description
31	3272-12	2	Pin-Cotter
32	108-2424	4	Ring-Retaining
33	108-2425	2	Bearing-Ball

Ref.	Part Number	Qty.	Description
34	108-3148	1	Gasket
36	112-3142	2	Nut-HF


● Not serviced separately

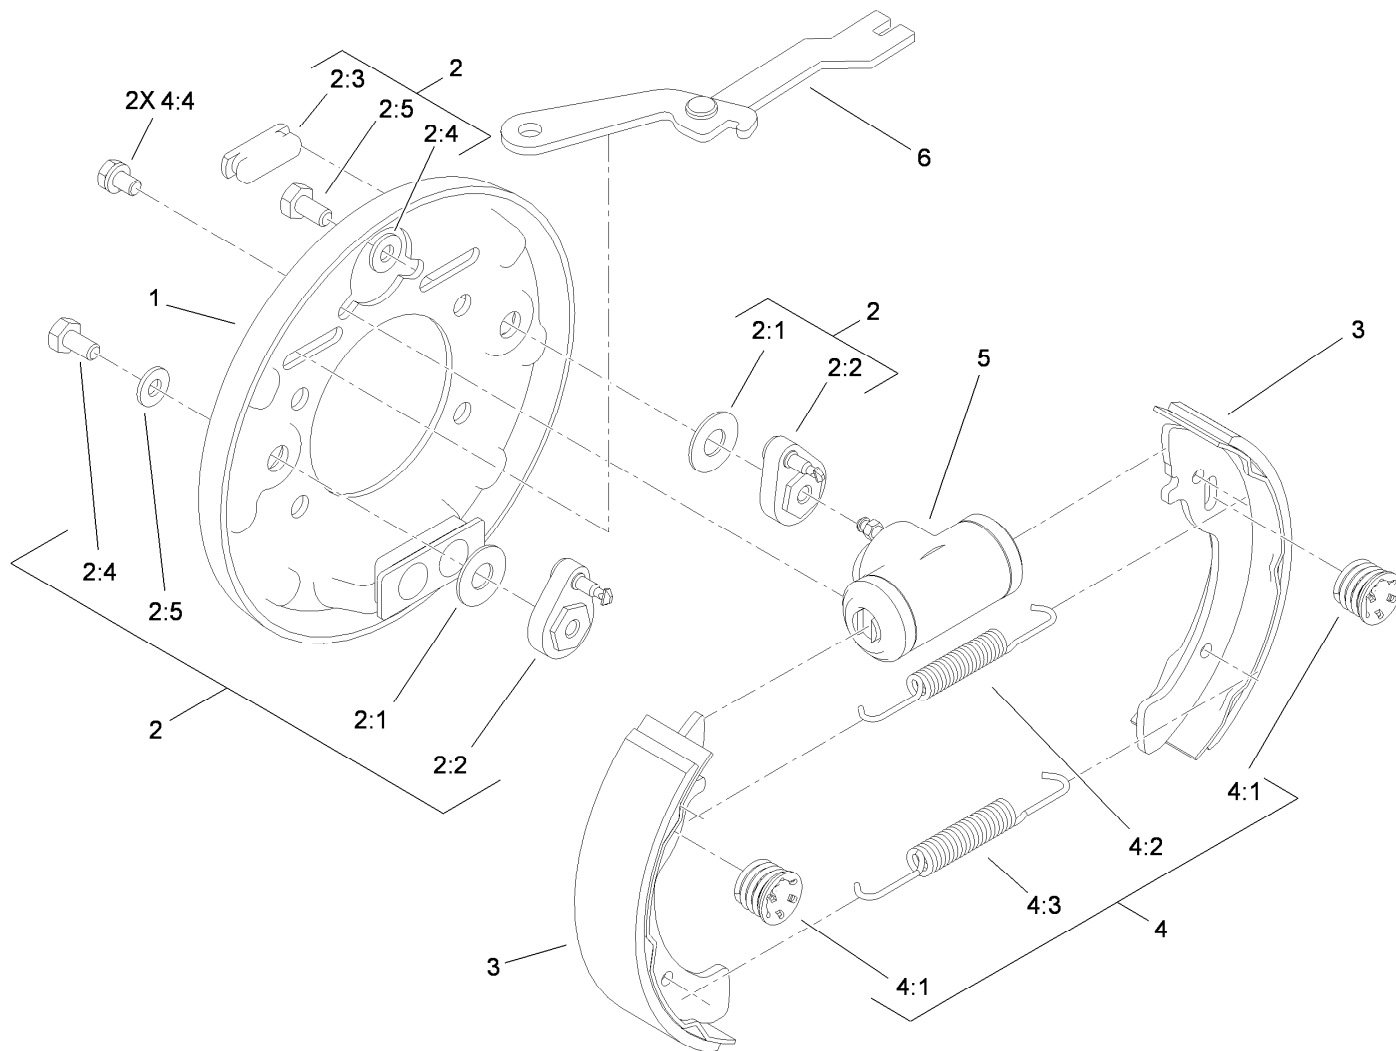

LH Rear Brake Assembly No. 114-8332

Ref.	Part Number	Qty.	Description
1	100-8586	1	Backing Plate ASM
2	104-6820	1	Adjuster Kit
2:1	100-8585	2	Washer-Bellville
2:2	100-8588	2	Adjuster Lever ASM
2:3	100-8584	2	Cover-Dust
2:4		2	Washer ●
2:5		2	Bolt ●
3	104-6818	4	Shoe And Lining Kit
4	104-6819	1	Hardware Kit
4:1	100-8583	2	Shoe Hold Down Spring ASM
4:2	100-8581	2	Spring-Upper
4:3	100-8582	2	Spring-Lower
4:4		2	Bolt And Washer ●
5	114-8333	1	Wheel Cylinder ASM
6	104-6825	1	LH Park Brake Lever ASM


● Not serviced separately

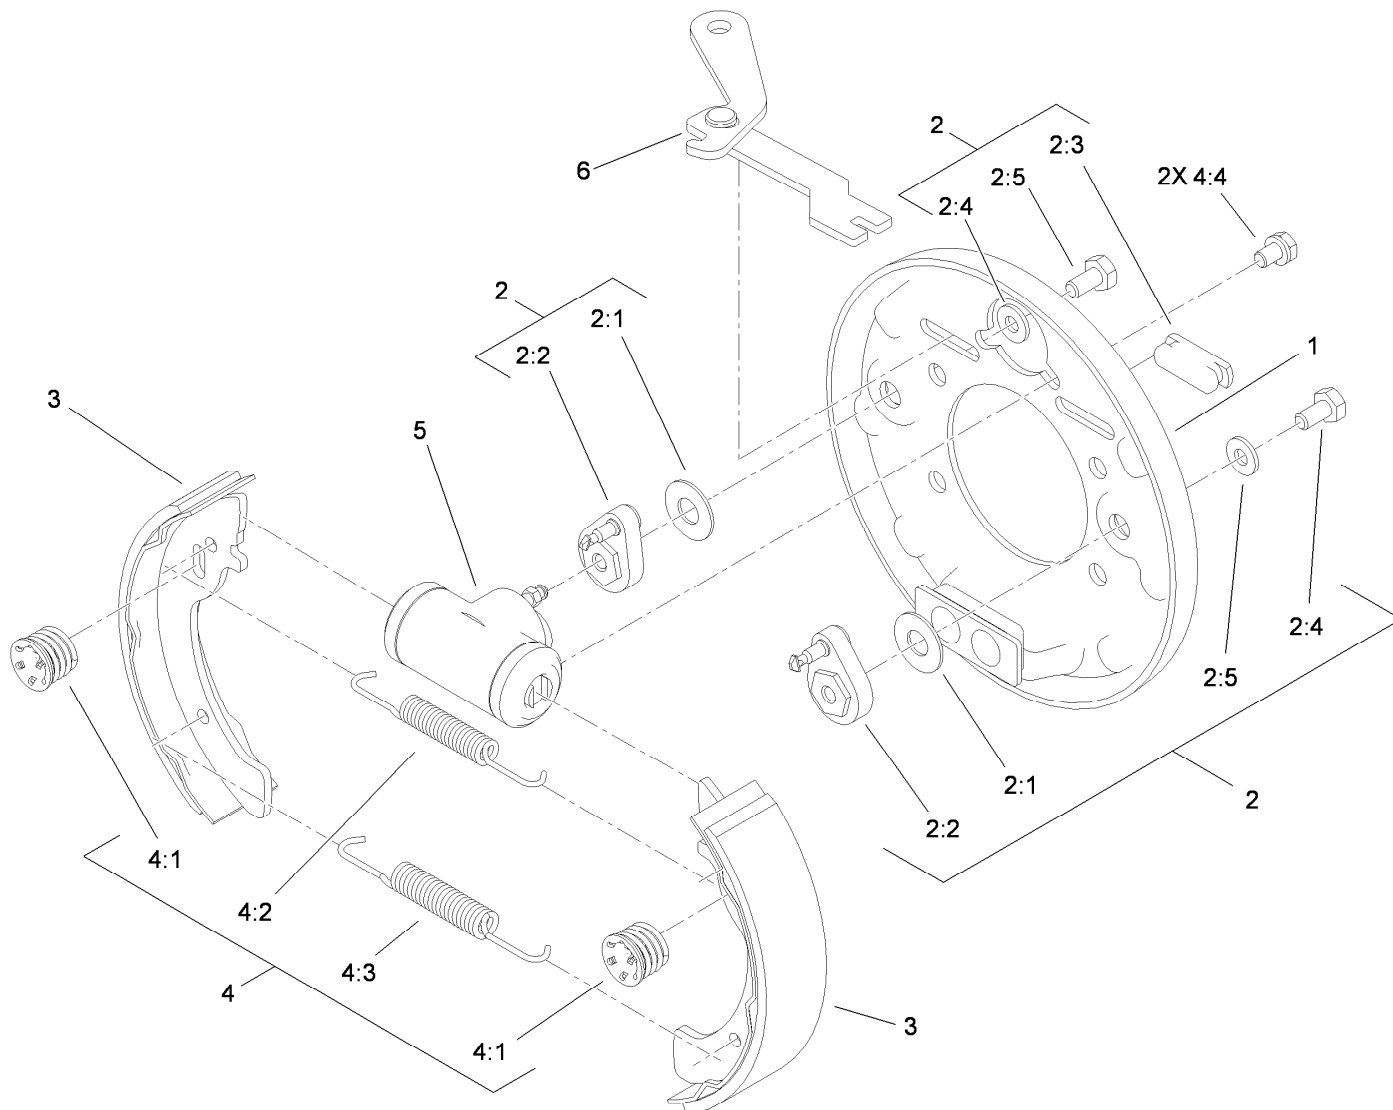

RH Rear Brake Assembly No. 114-8331

Ref.	Part Number	Qty.	Description
1	100-8586	1	Backing Plate ASM
2	104-6820	1	Adjuster Kit
2:1	100-8585	2	Washer-Bellville
2:2	100-8588	2	Adjuster Lever ASM
2:3	100-8584	2	Cover-Dust
2:4		2	Washer ●
2:5		2	Bolt ●
3	104-6818	4	Shoe And Lining Kit
4	104-6819	1	Hardware Kit
4:1	100-8583	2	Shoe Hold Down Spring ASM
4:2	100-8581	2	Spring-Upper
4:3	100-8582	2	Spring-Lower
4:4		2	Bolt And Washer ●
5	114-8333	1	Wheel Cylinder ASM
6	104-6826	1	RH Park Brake Lever ASM


● Not serviced separately

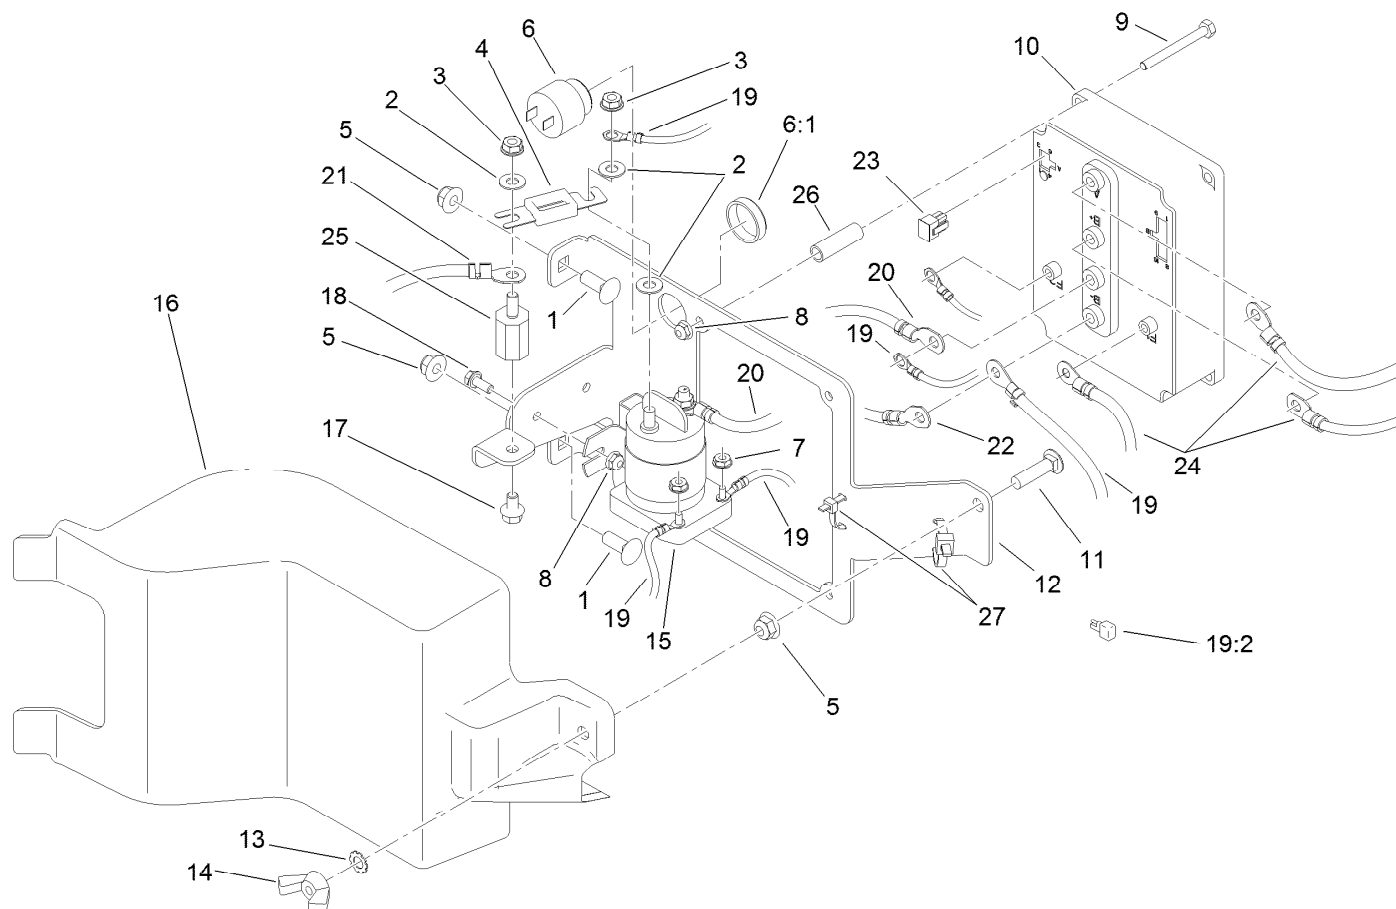

Controller Assembly

Ref.	Part Number	Qty.	Description
1	3231-22	2	Screw-CARR
2	107-0394	3	Washer-Flat
3	107-0380	3	Nut-HHF
4	104-7320	1	Fuse
5	104-8301	3	Nut-Flange, NI
6	94-5582	1	Alarm-Audio
6:1	104-5107	1	Nut-Plastic, Knurled
7	32149-8	2	Nut-Keps
8	104-7201	6	Nut-HF
9	321-15	4	Screw-HH
10	110-2569	1	Controller-Sevcon
11	3231-4	1	Screw-CARR
12	104-7137-03	1	Mount-Controller
13	3255-9	1	Washer-Lock
14	32103-3	1	Nut-Wing
15	104-7136	1	Contactora-48V

Ref.	Part Number	Qty.	Description
16	104-7138	1	Cover-Controller
17	100-1719	1	Screw-Flange
18	3234-33	2	Screw-HHF
19	117-4700	1	Harness-Wire, Mid Duty Elect
19:2	100-4918	1	Diode-Over Molded
20	107-0740	1	Cable-Battery, Positive
21	107-0741	1	Cable-Battery, Positive
22	107-0742	1	Cable-Battery, Negative
23	32160-130	1	Connector
24	107-0737	1	Harness-Wire, Battery Cable
25	107-0286	1	Isolator
26	107-0285	4	Spacer
27	3290-379	2	Tie-Cable

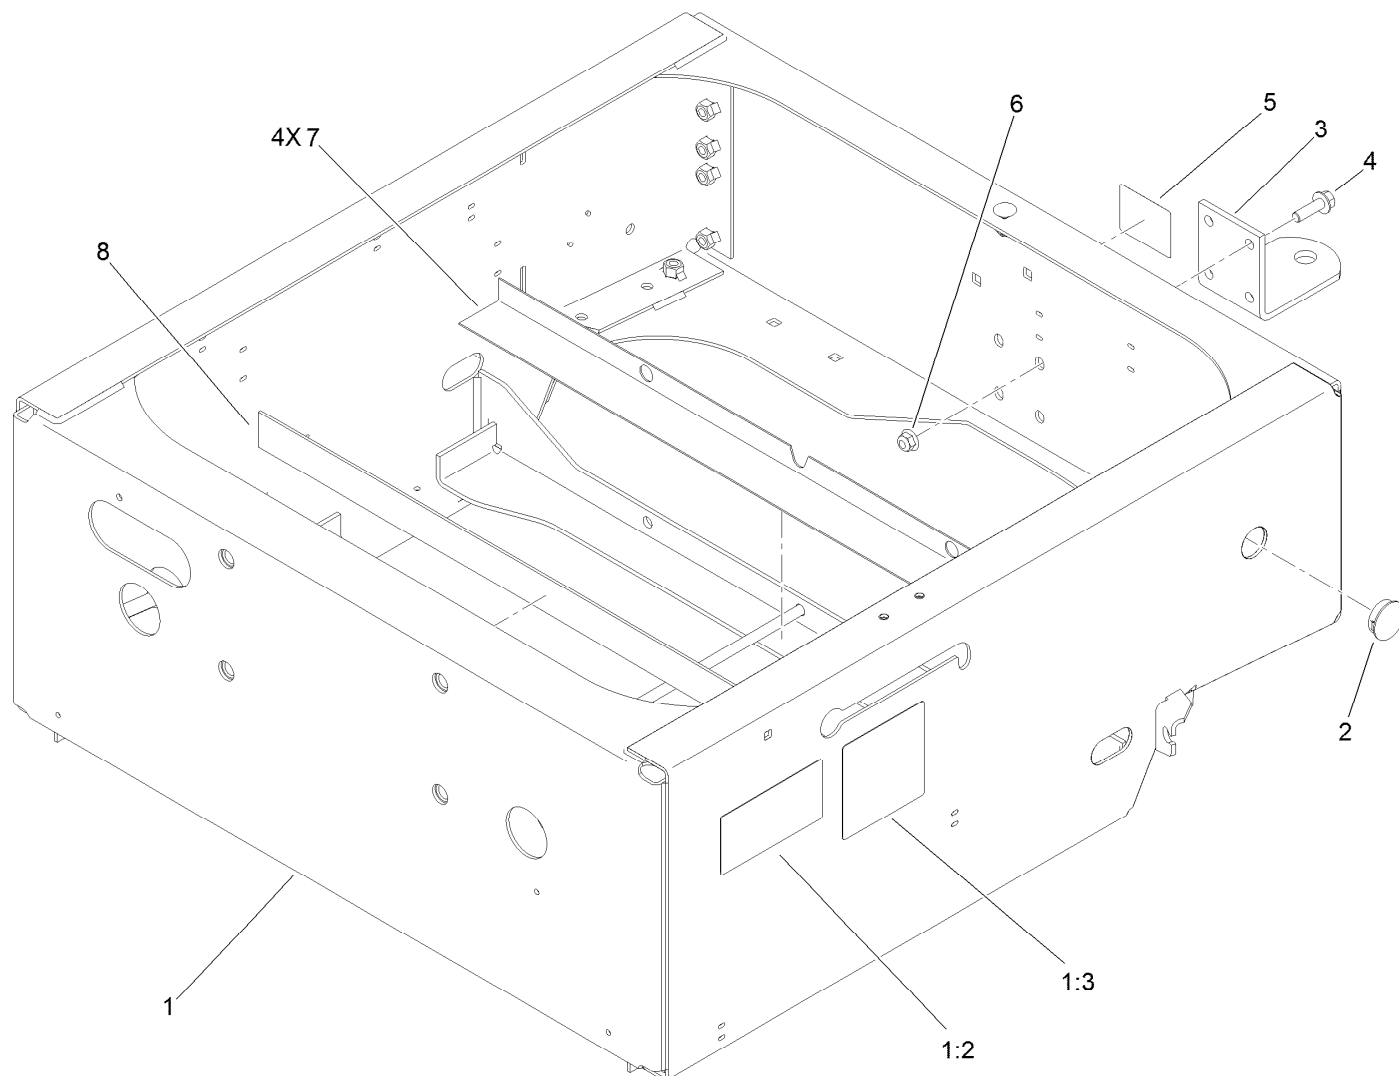

Rear Frame Assembly

Ref.	Part Number	Qty.	Description
1	119-9631	1	Rear Frame ASM
1:2	104-7207	2	Decal-Electric
1:3	107-0257	1	Decal-Polarity
2	94-1402	1	Plug-Hole
3	99-7654-03	1	Hitch-Duty, Light
4	3234-24	4	Screw-HHF
5	99-7350	1	Decal-Rating, Hitch (Light Duty)
6	104-8301	4	Nut-Flange, NI
7	107-0267	4	Isolator-Battery
8	107-0252	1	Pad-Battery

Attachments and Accessories

For 07299TC Workman MDE Utility Vehicle

Product Name	Model/Part
Receiver Hitch Kit	07278
Roll-Over Protection System	07276
Canopy Kit	07324
Folding Windshield Kit	07326
Solid Windshield Kit	07325
Heavy-Duty Brush Guard and Bumper Kit	07338
Heavy-Duty Bumper Kit	07329
Hard Cab	07328
Sliding Window Door Kit	07352
Fixed Window Door Kit	07353
Snow Plow	07327
Tire And Wheel Asm	119-0751
Replacement Front Spring Kit.....	117-4847
Tire-AT 489, 24x10.5-10	104-7061
Tire-AT 489, 22x9.5-10	104-7062
Wheel-5 Bolt.....	104-6889
Side Mirror Kit.....	119-9546
Stake Pocket Adapter Kit, 2011 and After Workman MD Series Utility Vehicle.....	119-9604
Tie-Down Kit, 2011 and After Workman MD Series Utility Vehicle	119-9605
Road Light and Homologation Kit	120-5031
Brake and Signal Light Kit.....	120-5044
Road-Ready Pro Force Debris Blower.....	44539
Pro Force Debris Blower.....	44538
Bed Mount Kit, Pro Force Debris Blower.....	44543
Bed Mount Sound Barrier Kit, Pro Force Debris Blower	44546
Tapered Nozzle Kit.....	119-6280
Rectangular Nozzle Kit	119-6281
Nozzle-Extension, Straight	119-6282
Nozzle-Extension, Tapered.....	119-6283
Nozzle-Extension, Rectangular	119-6284
Electric Bed Lift Kit, 2014 and After Workman MDE Utility Vehicle	07396
20 foot Cordset Kit (DC).....	108-3071
Horn Kit.....	115-7827
Potentiometer Kit	117-5085
48V Battery Charger	115-7785
Cord-AC (US/CANADA)	119-0661
Accessory Installation Kit, Espar Heater Kit for Workman MDE Utility Vehicle	117-4968
Cord-AC (UK)	119-0662
Cord-AC (Europe).....	119-0663
12V Power Plug Adapter Kit	07318
Cargo Bed Installation Kit with Manual Dump, 2011 to 2013 Workman MD Series Utility Vehicle.....	127-7385
Cargo Bed Installation Kit with Electric Lift, 2011 to 2013 Workman MD Series Utility Vehicle.....	127-7386
Cargo Bed Installation Kit with Manual Dump, 2010 and Before Workman MD Series Utility Vehicle.....	131-3457

Notes:

Notes:

Notes:



Count on it.