



Form No. 3389-374 Rev A

Count on it.

Parts Catalog

62in Rotary Mower

**Groundsmaster® 360 Series and 7200 Series
Traction Unit**

Model No. 30457—Serial No. 315000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HP: high pressure

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: low pressure

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head

Contents

Roller, Belt and Pulley Assembly 4

Deck Decal Assembly No. 127-6472 6

Low Driven Spindle Assembly No. 119-4776 7


High Driven Spindle Assembly No. 119-4549 8

Double Driven Spindle Assembly No. 119-4548 9

Deck Cover and Gearbox Assembly 10

Gearbox Assembly No. 130-8659 11

Pull Link Assembly 12

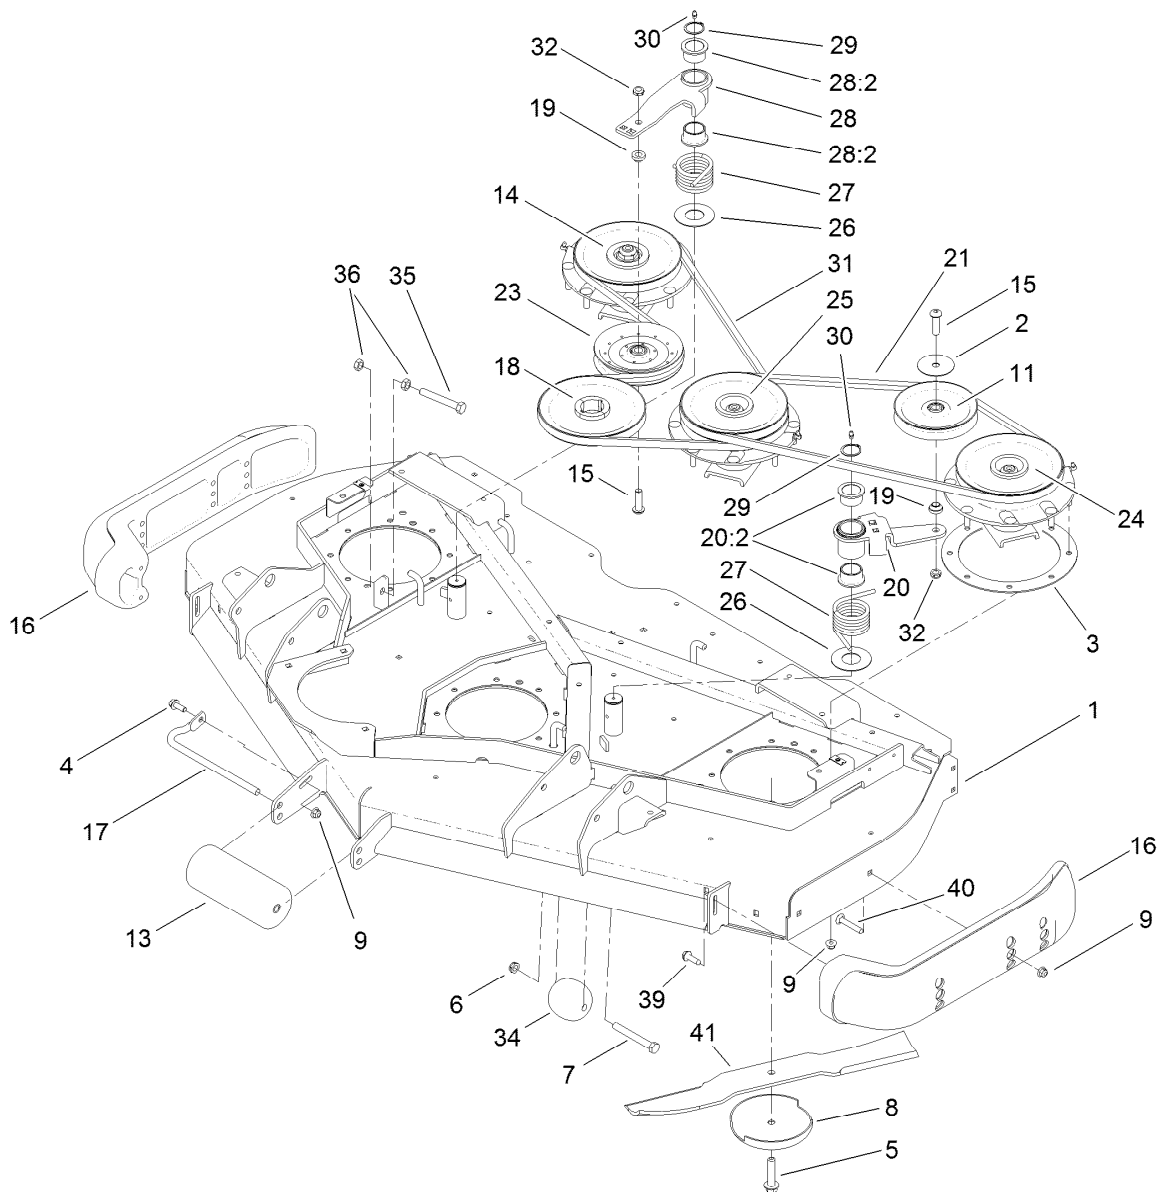


Roller, Belt and Pulley Assembly

Ref.	Part Number	Qty.	Description
1	127-6472	1	Deck ASM
2	100-3102	1	Washer-Flat
3	120-6603-03	3	Ring-Doubler
4	3234-42	1	Screw-HHF
5	92-5816	3	Bolt-Blade
6	3296-45	2	Nut-Lock, NI
7	325-17	2	Screw-HH
8	72-9361	3	Cup-Scalp, Anti
9	104-8301	29	Nut-Flange, NI
11	01-268-0160	1	Pulley-Idler
13	68-6710	1	Roller
14	119-4776	1	Low-Driven Spindle ASM
15	108-1993	2	Screw-HSBH
16	112-1479	2	Skid-Bumper, Deck
17	68-6840	1	Shaft-Roller
18	107-4767	1	Pulley
19	108-1924	2	Spacer-Idler
20	117-9176	1	Idler Arm ASM

Ref.	Part Number	Qty.	Description
20:2	93-4510	2	Bushing-Caster
21	110-9595	1	Belt-V
23	110-9596	1	Pulley-Idler
24	119-4549	1	High-Driven Spindle ASM
25	119-4548	1	Double Driven Spindle ASM
26	108-1926	2	Washer
27	108-1921	2	Spring-Torsion
28	108-1930	1	Idler Arm ASM
28:2	93-4510	2	Bushing-Caster
29	32120-84	2	Ring-Snap, External
30	302-5	2	Fitting-Grease
31	110-9594	1	Belt-V
32	3296-45	2	Nut-Lock, NI
34	29-4820	2	Roller
35	325-14	1	Screw-HH
36	3218-5	2	Nut-Jam
39	9136144	2	Screw-HWHTF
40	3231-33	4	Screw-CARR

● Not illustrated

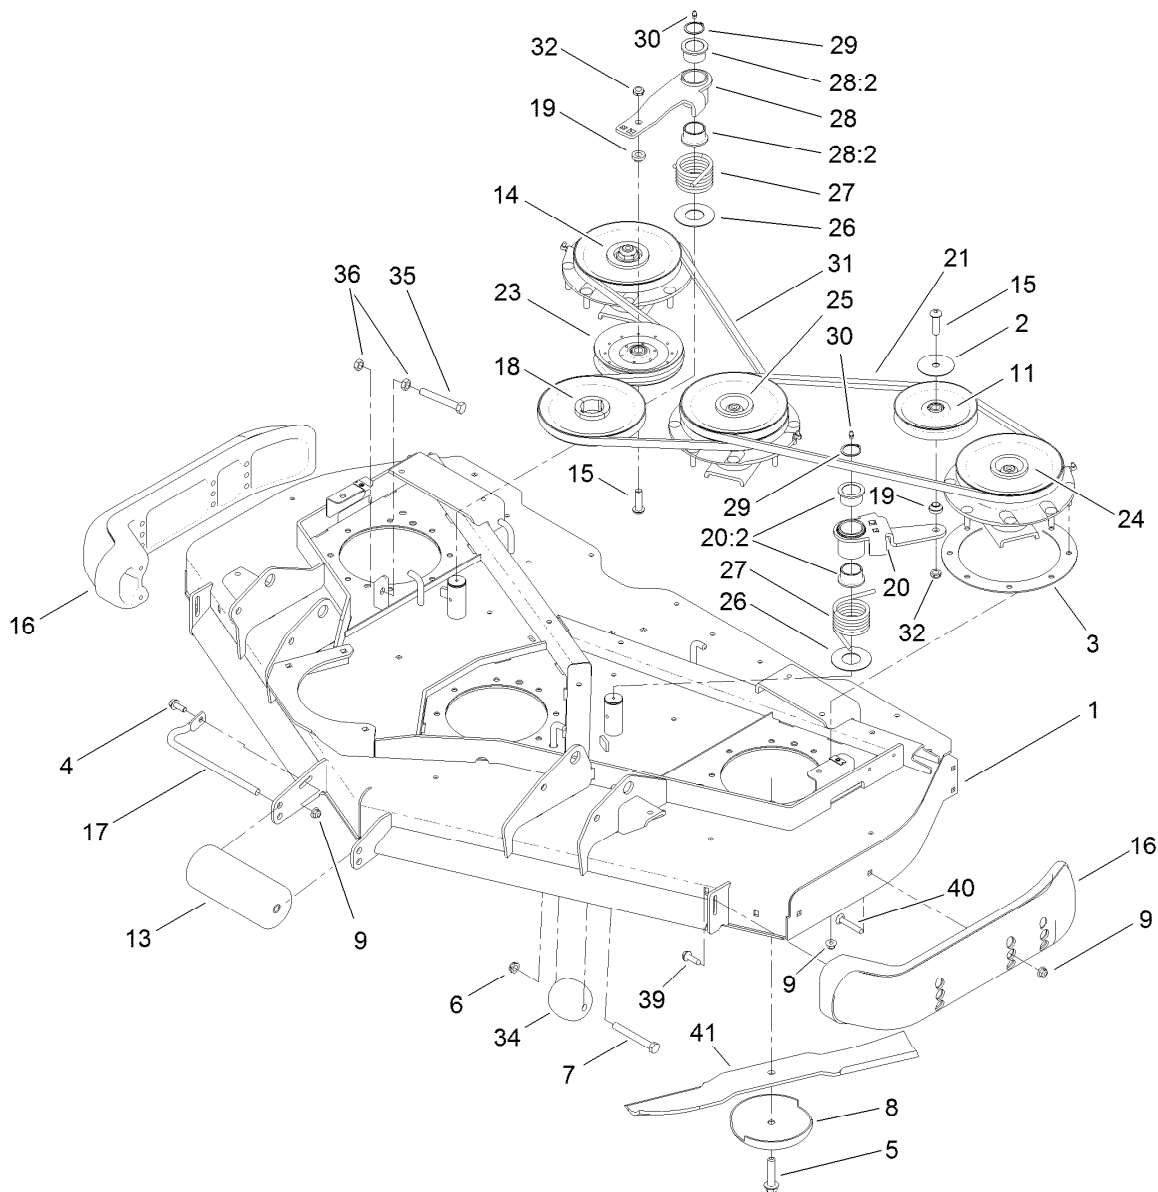


Roller, Belt and Pulley Assembly (continued)

Ref.	Part Number	Qty.	Description
41	107-0214-03	3	Blade-Atomic, 21.75 In ●


Ref.	Part Number	Qty.	Description
41	110-6115-03	3	Blade-Flat Sail, 21.75 In ●
41	92-5608-03	3	Blade

● Not illustrated

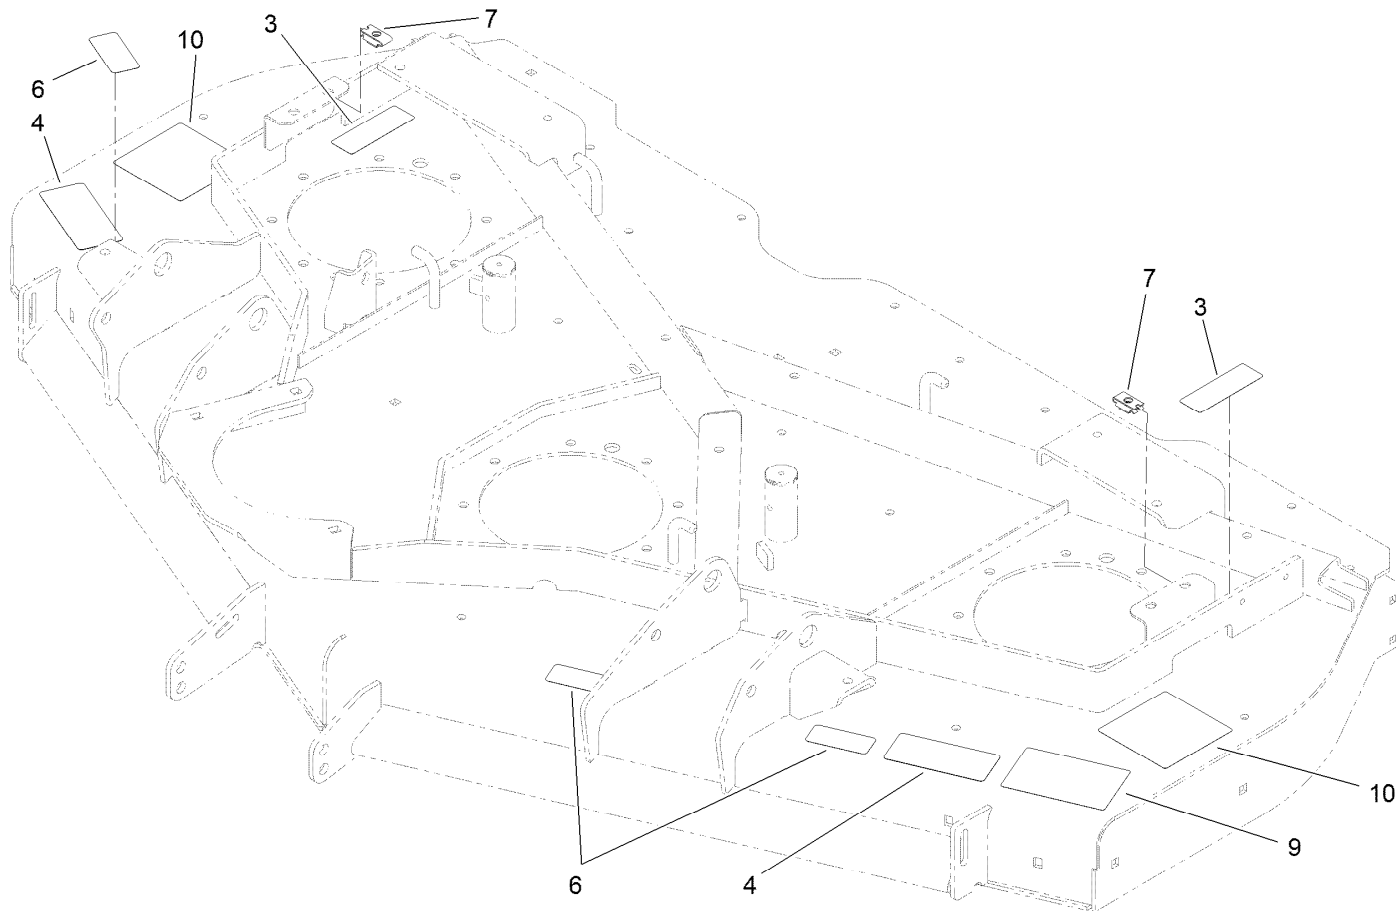

Deck Decal Assembly No. 127-6472


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	117-4979	2	Decal-Warning, Shields
4	93-7818	2	Decal-Torque, Blade Bolt
6	93-6696	3	Decal-Warning
7	110-3510	4	Nut-Retainer
9	66-1630	1	Decal
10	120-6604	2	Decal-Danger

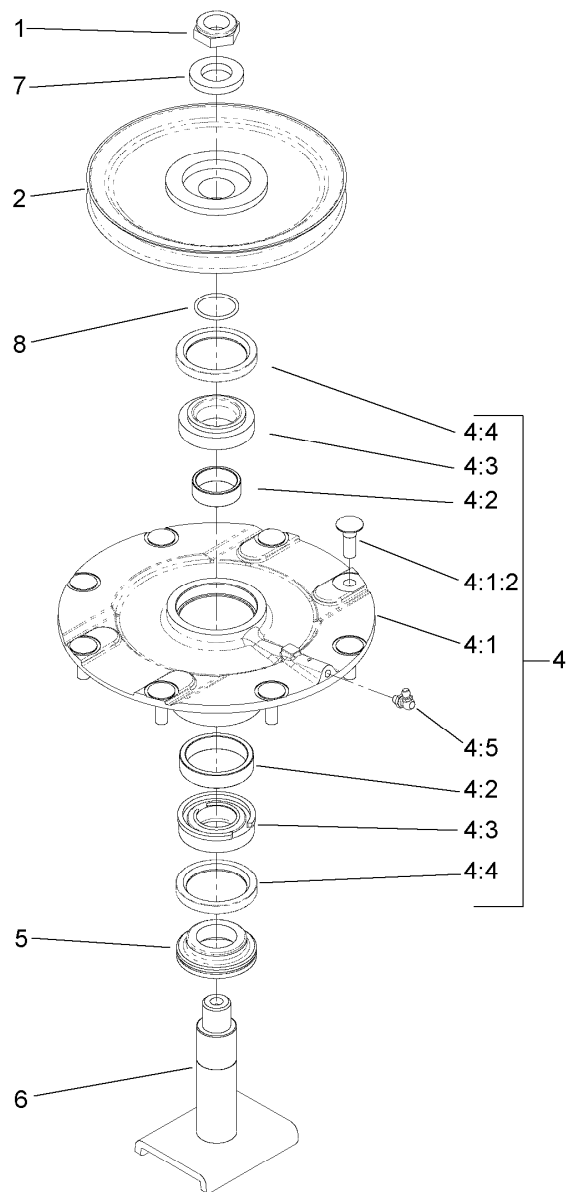

Low Driven Spindle Assembly No. 119-4776

Ref.	Part Number	Qty.	Description
1	3296-60	1	Nut-Lock, NI
2	104-3546	1	Pulley-Driven, Low
4	119-4775	1	Spindle Housing ASM
4:1		1	Spindle ASM ●
4:1:2	114-8195	8	Bolt-Ribbed Neck
4:2	120-5577	1	Bearing Spacer Set
4:3	110-8297	1	Bearing ASM
4:4	253-154	2	Seal-Oil
4:5	302-60	1	Fitting-Grease
5	69-6950	1	Spacer-Shaft, Spindle
6	104-3554	1	Shaft-Spindle
7	120-5576	1	Washer-Hardened
8	106-7159	1	O-Ring


● Not serviced separately

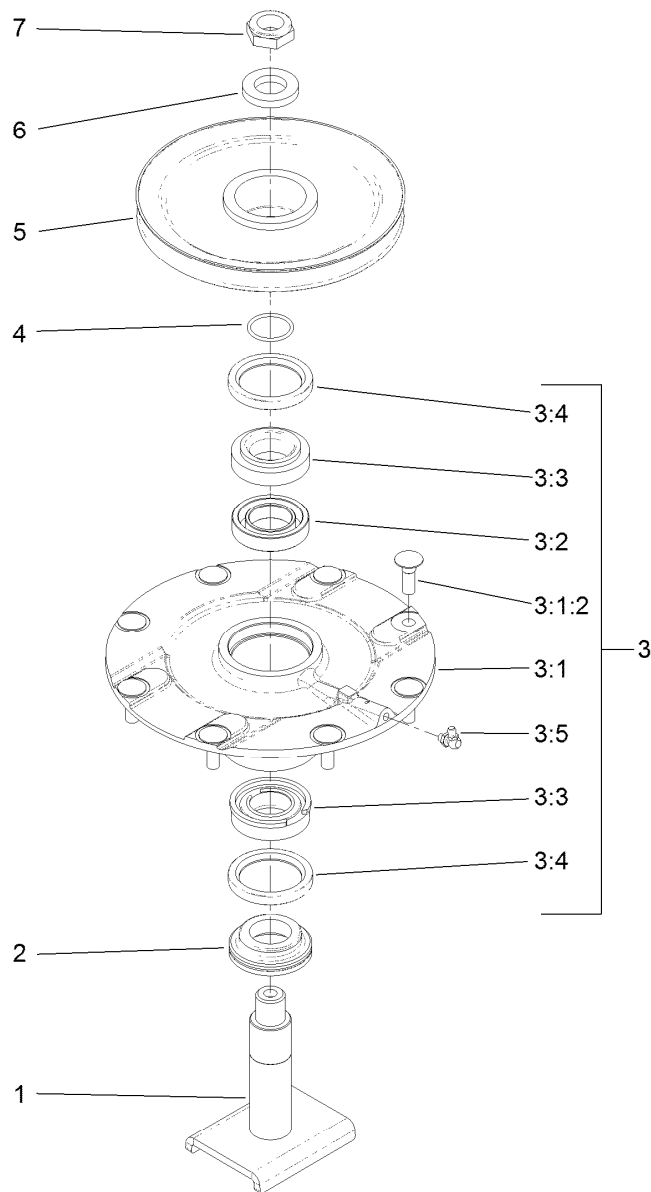

High Driven Spindle Assembly No. 119-4549

Ref.	Part Number	Qty.	Description
1	104-3554	1	Shaft-Spindle
2	69-6950	1	Spacer-Shaft, Spindle
3	119-4775	1	Spindle Housing ASM
3:1		1	Spindle ASM ●
3:1:2	114-8195	8	Bolt-Ribbed Neck
3:2	120-5577	1	Bearing Spacer Set
3:3	110-8297	1	Bearing ASM
3:4	253-154	2	Seal-Oil
3:5	302-60	1	Fitting-Grease
4	106-7159	1	O-Ring
5	104-3548	1	Pulley-Driven, High
6	120-5576	1	Washer-Hardened
7	3296-60	1	Nut-Lock, NI


● Not serviced separately

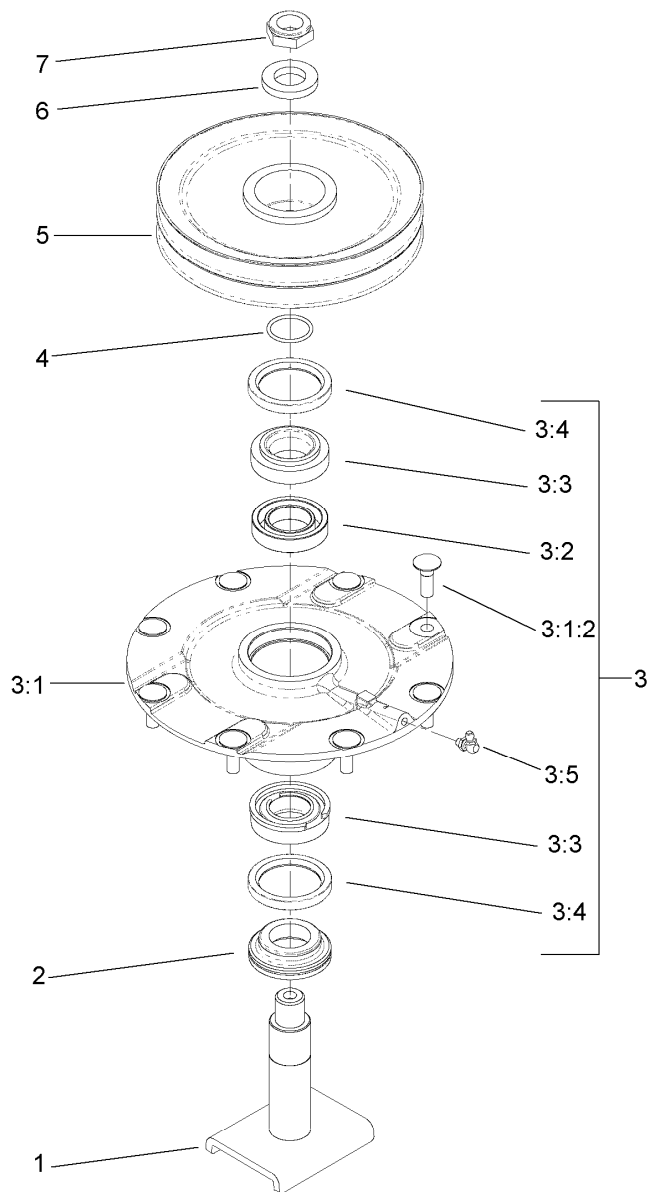

Double Driven Spindle Assembly No. 119-4548

Ref.	Part Number	Qty.	Description
1	104-3554	1	Shaft-Spindle
2	69-6950	1	Spacer-Shaft, Spindle
3	119-4775	1	Spindle Housing ASM
3:1		1	Spindle ASM ●
3:1:2	114-8195	8	Bolt-Ribbed Neck
3:2	120-5577	1	Bearing Spacer Set
3:3	110-8297	1	Bearing ASM
3:4	253-154	2	Seal-Oil
3:5	302-60	1	Fitting-Grease
4	106-7159	1	O-Ring
5	104-3547	1	Pulley-Driven, Double
6	120-5576	1	Washer-Hardened
7	3296-60	1	Nut-Lock, NI


● Not serviced separately

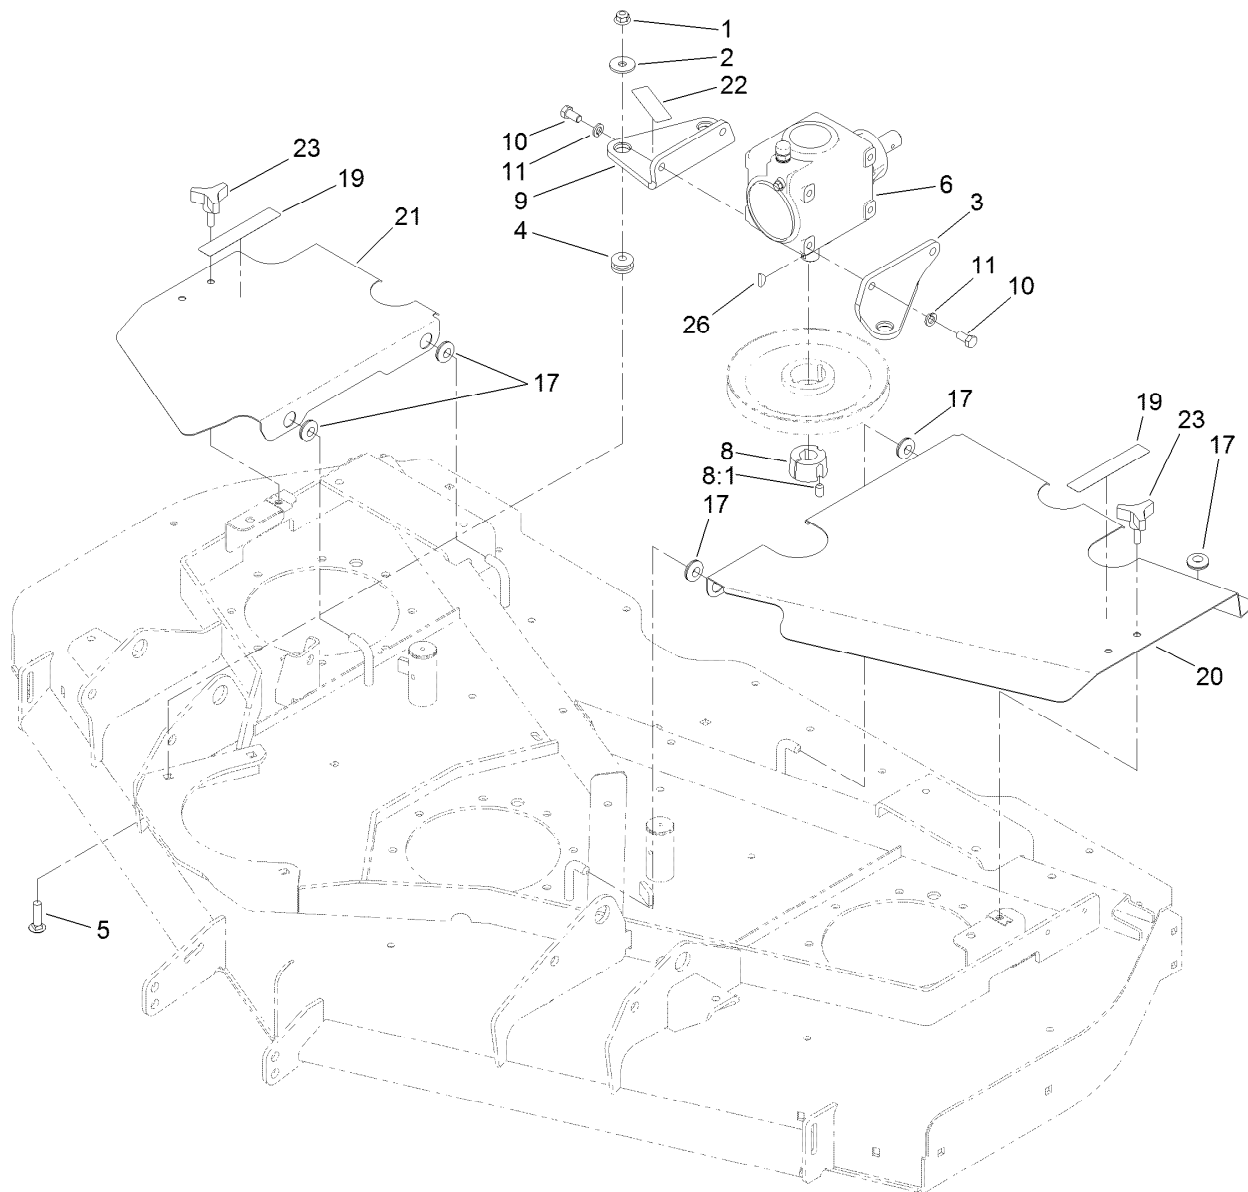

Deck Cover and Gearbox Assembly

Ref.	Part Number	Qty.	Description
1	104-8301	3	Nut-Flange, NI
2	63-8410	3	Washer
3	110-6384-03	1	Bracket-Gearbox, LH
4	63-9750	3	Mount
5	3231-26	3	Screw-CARR
6	130-8659	1	Gearbox ASM
8	23-1640	1	Bushing-Taperlock
8:1	3247-4	2	Screw-Set
9	110-6385-03	1	Bracket-Gearbox, RH


Ref.	Part Number	Qty.	Description
10	323-4	4	Screw-HH
11	3253-21	4	Washer-Lock
17	112-9559	5	Grommet
19	93-6687	2	Decal-No Step
20	112-1458-03	1	Cover-Deck, LH
21	112-1459-03	1	Cover-Deck, RH
22	93-6697	1	Decal-Lube
23	106-2240	2	Knob
26	3257-5	1	Key-Woodruff

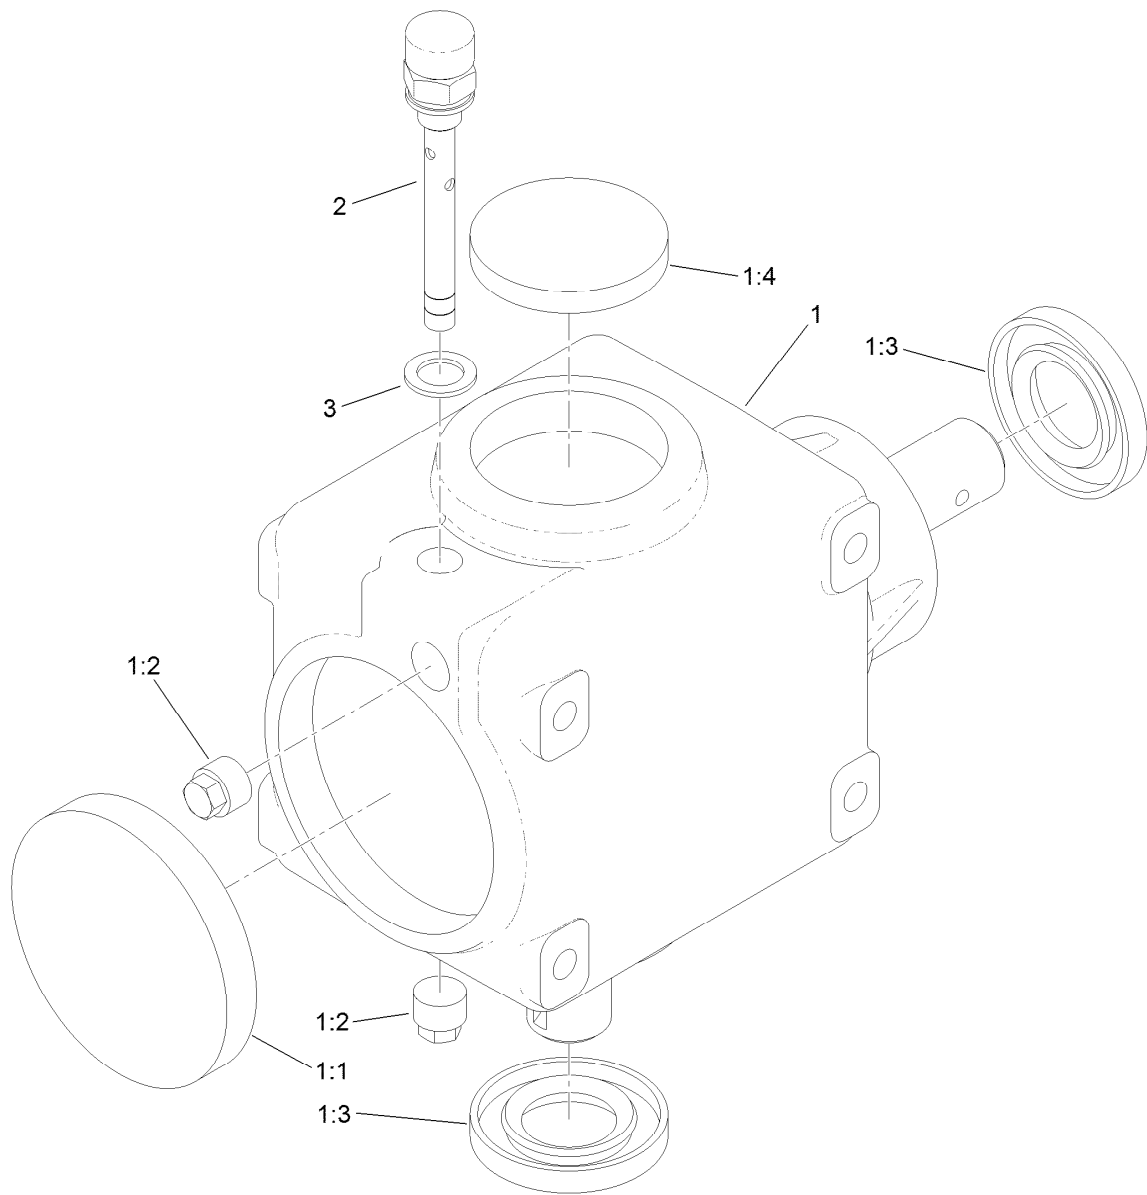

Gearbox Assembly No. 130-8659

Ref.	Part Number	Qty.	Description
1		1	Gearbox ASM ●
1:1	107-2932	1	Cap-Oil
1:2	107-2933	2	Plug
1:3	117-9247	2	Seal
1:4	107-2935	1	Cap-Oil
2	130-8661	1	Plug-Breather
3	130-4899	1	Washer

● Not serviced separately

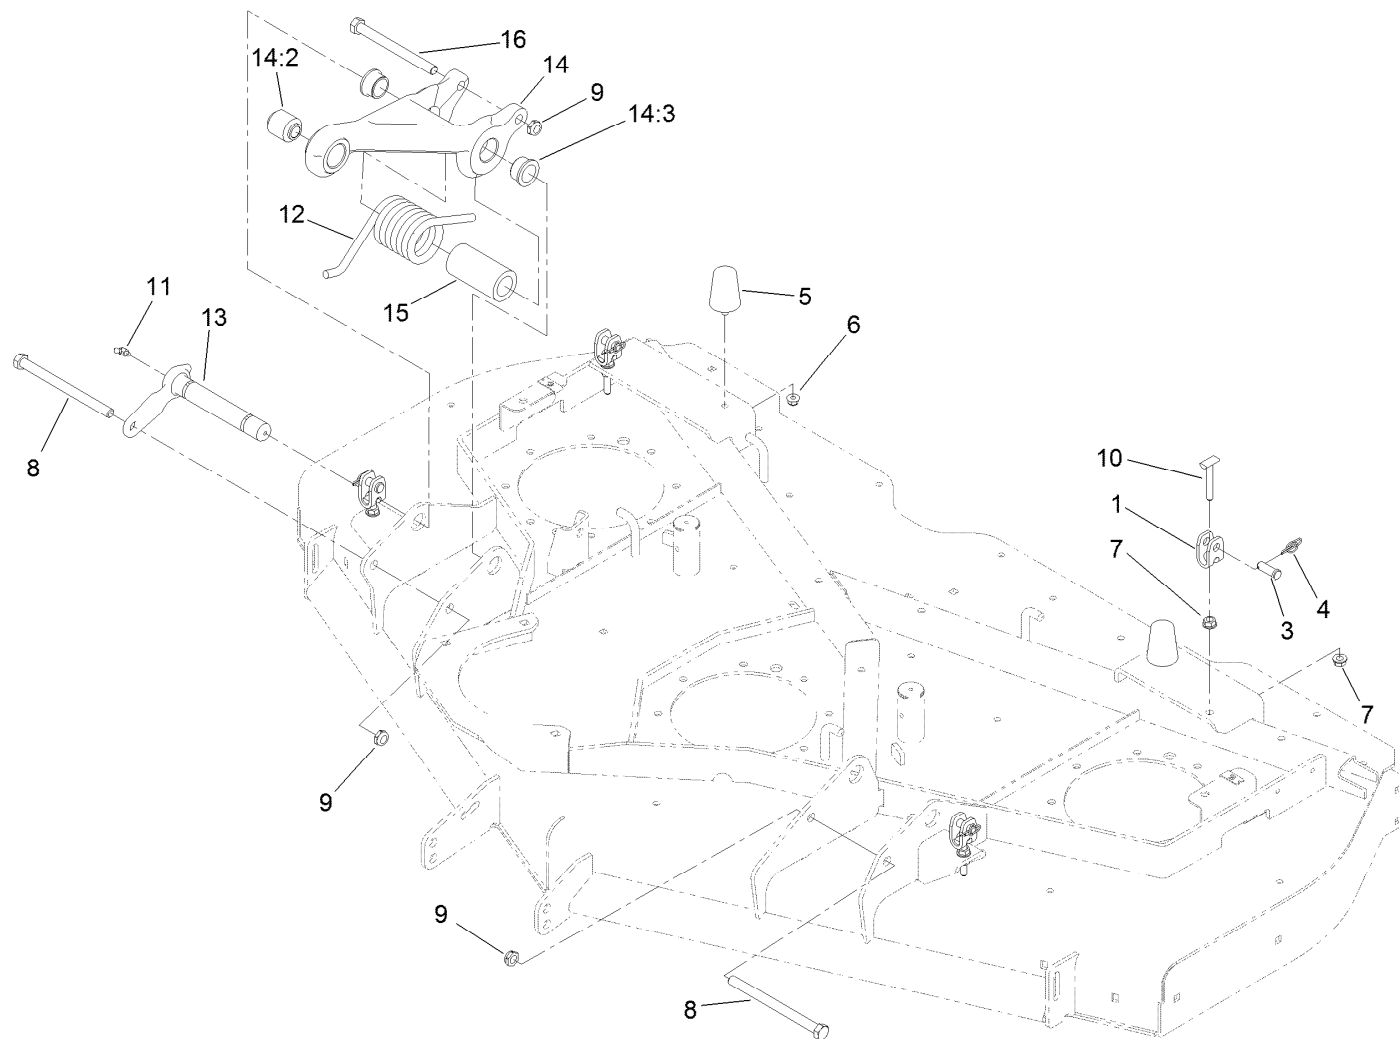

Pull Link Assembly

Ref.	Part Number	Qty.	Description
1	115-1429	4	Yoke-Clevis
3	700601	4	Pin-Clevis
4	112-1491	4	Pin-Cotter
5	110-5070	2	Bumper
6	104-8300	2	Nut-Flange, NI
7	3290-357	8	Nut-HHF, Whiz
8	325-33	2	Screw-HH
9	3296-45	4	Nut-Lock, NI
10	125-9450	4	T-Bar

Ref.	Part Number	Qty.	Description
11	302-11	4	Fitting-Lube, 45 DEG
12	112-9520	2	Spring-Torsion
13	120-5570	2	Pin-Retainer
14	112-1625	2	Pull Link ASM
14:2	107-2328	1	Bushing
14:3	114-5680	2	Bushing-Flange
15	110-9845	2	Spacer-Plain
16	325-22	2	Screw-HH

Notes:

Notes:

Notes:



Count on it.