



Count on it.

Parts Catalog

Reelmaster® 7000-D 4-Wheel Drive Traction Unit

Model No. 03708N—Serial No. 313000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HP: high pressure

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: low pressure

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

 
TTH: torx truss head

Contents

Hood, Screen and Bumper Assembly	5
Steering and Brake Control Assembly	6
Steering Tilt Column Assembly No. 106-3622	8
Steering Valve Assembly No. 114-8119	9
Traction Pedal Assembly	10
Seat Mounting Assembly	11
Air Ride Seat Suspension Assembly No. 108-1488	12
Vinyl Premium Seat Assembly No. 117-5676	14
Console and Control Arm Assembly	15
Hydraulic Tank Assembly	17
Fuel Tank Assembly	18
Front Wheel, Brake and Hydraulic Drive Assembly	19
Planetary Assembly No. 105-4500	20
RH Brake Assembly No. 100-3069	21
LH Brake Assembly No. 100-3070	22
Piston Motor Assembly No. 105-1218	23
Fan Plumbing Assembly	24
Hydraulic Pump and Plumbing Assembly	25
Piston Pump Assembly No. 114-4188	26
Control Assembly No. 115-4446	28
Four Section Pump Assembly No. 114-4189	29
Radiator Assembly	30
Fan and Motor Assembly	32
Hydraulic Motor Assembly No. 117-4769	33
Engine Mounting and Exhaust Assembly	34
Rear Axle Assembly	35
Piston Motor Assembly No. 105-1219	37
Bevel Pinion Shaft Assembly Rear Axle Assembly No. 110-4750	38
Differential Assembly Rear Axle Assembly No. 110-4750	39
Axle Support Assembly Rear Axle Assembly No. 110-4750	40
Bevel Gear Case Assembly Rear Axle Assembly No. 110-4750	41
Bevel Gear Shaft Assembly Rear Axle Assembly No. 110-4750	42
Axle Case Assembly Rear Axle Assembly No. 110-4750	43
Axle Assembly Rear Axle Assembly No. 110-4750	44
Steer Cylinder Assembly No. 119-3903	45
Flywheel Coupler Assembly	46
Electrical Assembly	47
Battery Storage Box Assembly No. 115-9100	49
Storage Box Assembly No. 115-9101	50
Front Lift Arm Assembly	51
Hydraulic Cylinder Assembly No. 119-3852	53
Hydraulic Cylinder Assembly No. 119-3850	54
Air Cleaner and Fan Manifold Assembly	55
Fan Drive Manifold Assembly No. 119-3943	56
Air Cleaner Assembly No. 99-5410	57
No. 2 and 3 Lift Arm Assembly	58
Hydraulic Cylinder Assembly No. 119-3851	60
No. 2 and 3 Hydraulic Hose Assembly	61
No. 1, 4 and 5 Hydraulic Hose Assembly	62
Gear Motor Assembly No. 115-8250	63
Frame and Roll-Over Protection Assembly	64
Front Frame Assembly No. 119-3872	65
Front Shroud and Work Light Assembly	66
Mow and Lift Manifold Assembly	67

Contents (continued)


Mow Manifold Assembly No. 119-1461	68
Manifold Mow Block Assembly	69
Lift Manifold Assembly No. 119-1463	70
5 Plex Lift Manifold Assembly	71
4 Wheel Drive and Filter Manifold Assembly	72
Filter Manifold Assembly No. 119-3893	73
Filter Manifold Block Assembly	74
4 Wheel Drive Manifold Block Assembly No. 119-3940	75
4-Wheel Drive Manifold Assembly	76
Junction Manifold Assembly No. 119-3877	77
Juction Manifold Assembly	78
Traction Hydraulic Line Assembly	79
Steering Hydraulic Line Assembly	81
Hydraulic Line Assembly	82
Hydraulic Line Assembly 2	83
Crankcase Assembly	84
Oil Pan Assembly	85
Cylinder Head Assembly	86
Gear Case Assembly	87
Cylinder Head Cover Assembly	88
Oil Pump Assembly	89
Dipstick and Guide Assembly	90
Main Bearing Case Assembly	91
Cam Shaft and Idle Gear Assembly	92
Piston and Crankshaft Assembly	93
Flywheel Assembly	94
Fuel Camshaft and Governor Shaft Assembly	95
Idle Apparatus and Stop Solenoid Assembly	96
Injection Pump Assembly	97
Governor Assembly	98
Speed Control Plate Assembly	99
Nozzle Holder and Glow Plug Assembly	100
Alternator and Pulley Assembly	101
Alternator Component Part Assembly	102
Starter Assembly	103
Starter Components Assembly	104
Water Flange and Thermostat Assembly	105
Water Pump Assembly	106
Valve and Rocker Arm Assembly	107
Inlet and Exhaust Manifold Assembly	108
Muffler Gasket and Operator Manual	109
Attachments and Accessories	110

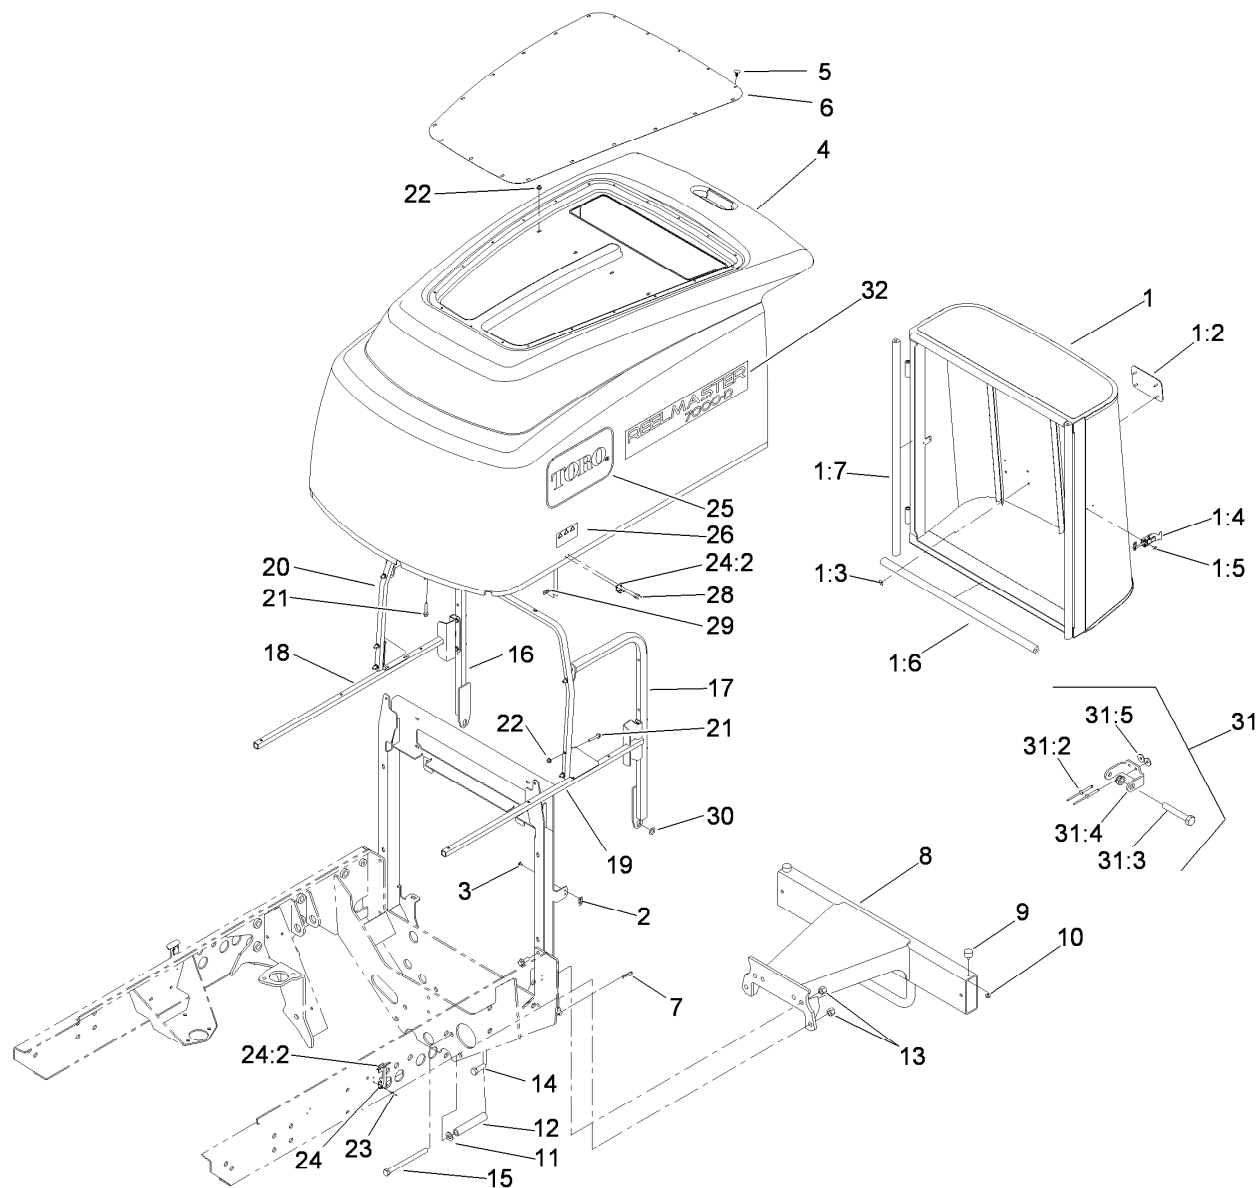

Hood, Screen and Bumper Assembly

Ref.	Part Number	Qty.	Description
1	115-4362	1	Screen ASM
1:2	93-6028	1	Plate-Logo
1:3	94-2638	4	Nut-Tinnerman
1:4	114-8117	1	Latch-Adjustable
1:5	3269-3	2	Rivet-Pop
1:6	115-4358	2	Seal-Bulb
1:7	115-4359	2	Seal-Bulb
2	115-4357	1	Latch-Keeper
3	3269-3	2	Rivet-Pop
4	119-3883	1	Hood ASM
5	117-2382	20	Plug-Plastic
6	114-4192-03	1	Screen-Hood
7	3290-467	2	Pin-Hair
8	105-9221-03	1	Bumper-Rear
9	240-14	2	Bumper-Rubber
10	32128-33	2	Nut-HF
11	3256-26	2	Washer-Flat
12	76-8350	2	Stop-Axle
13	3296-23	4	Nut-Lock, NI
14	325-6	2	Screw-HH
15	325-33	2	Screw-HH


Ref.	Part Number	Qty.	Description
16	114-8108-03	1	Tube-RH
17	114-8109-03	1	Tube-LH
18	117-2358-03	1	Tube-Hood, RH
19	114-8102-03	1	Tube
20	115-9118-03	1	Tube-Frame, Hood
21	94-5781	26	Screw-HHF
22	104-7201	26	Nut-HF
23	3290-55	4	Rivet-Pop
24	59-9740	2	Flex Draw Latch ASM
24:2	249-40	1	Keeper
25	66-1210	2	Decal
26	106-6754	2	Decal-Danger
28	3269-17	4	Rivet-Pop
29	3269-10	4	Washer-Back
30	98-1629	2	Washer
31	119-2004	1	Ce Latch Kit
31:2	107-0333	2	Rivet-Pop
31:3	322-10	1	Screw-HH
31:4	3296-47	1	Nut-Lock, NI
31:5	3269-10	2	Washer-Back
32	119-3942	2	Decal

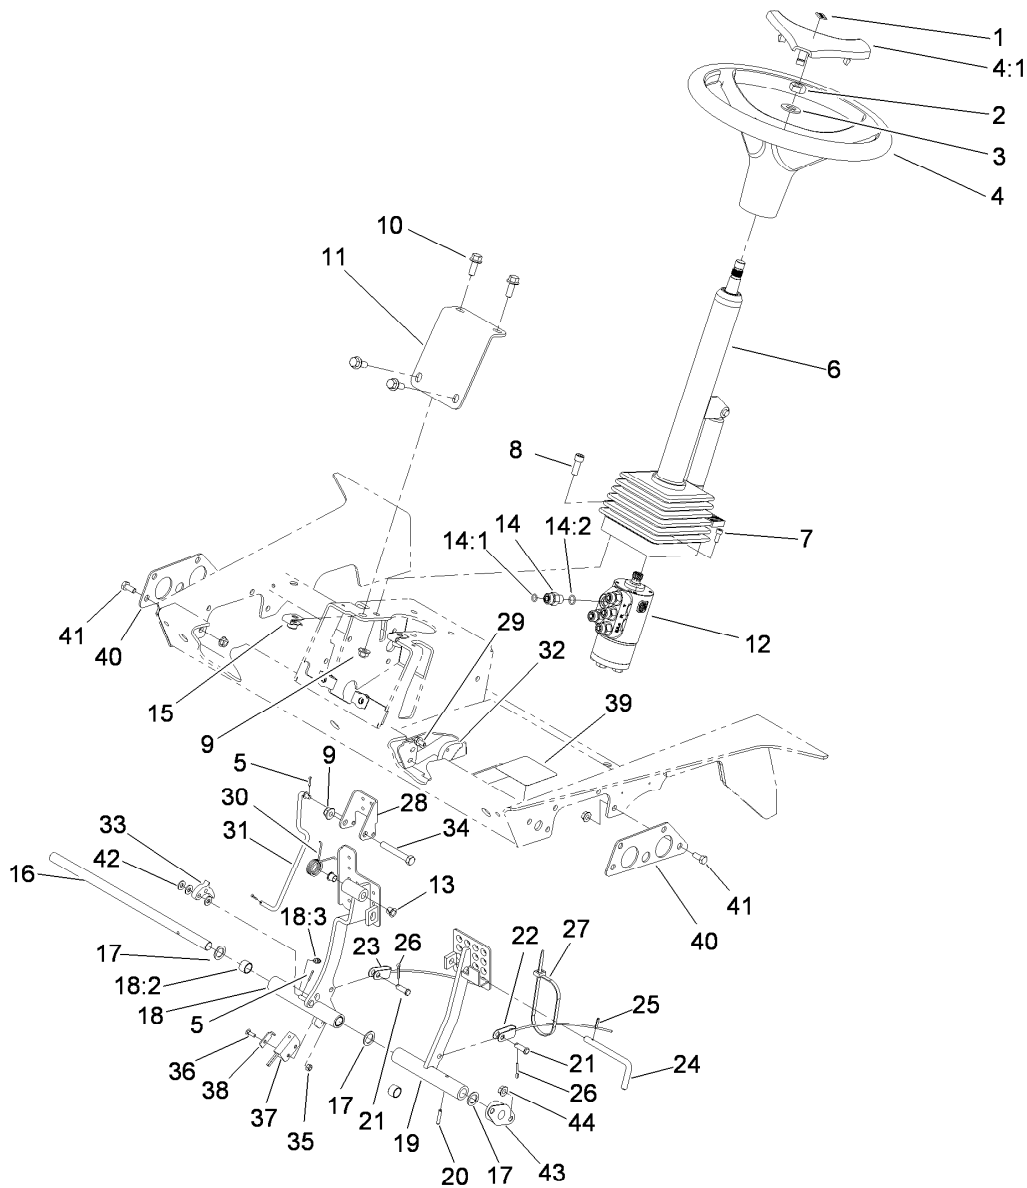 

Steering and Brake Control Assembly

Ref.	Part Number	Qty.	Description
1	98-1459	1	Decal
2	3296-33	1	Nut-Lock, NI
3	3256-27	1	Washer-Flat
4	98-1471	1	Wheel-Steering
4:1	98-1468	1	Cover-Wheel, Steering
5	3272-5	3	Pin-Cotter
6	106-3622	1	Steering Tilt Column ASM
7	105-2409	4	Screw-HSH
8	3274-7	4	Screw-HSH
9	104-8301	5	Nut-Flange, NI
10	3234-11	4	Screw-HHF
11	115-4379-01	1	Brace-Column
12	114-8119	1	Steering Valve ASM
13	52-2891	2	Bushing-Flanged, Nylon
14	340-2	5	Fitting-HYD, Straight
14:1	237-22	1	O-Ring
14:2	237-42	1	O-Ring
15	112-4576	4	Nut-Clip, U
16	75-1470	1	Pin-Pivot, Brake
17	3256-69	3	Washer-Flat
18	119-0005	1	RH Brake Pedal ASM


Ref.	Part Number	Qty.	Description
18:2	256-42	2	Bushing
18:3	302-5	1	Fitting-Grease
19	115-4421-03	1	Pedal-Brake, LH
20	32121-16	1	Pin-Spring
21	283-58	2	Pin-Clevis
22	92-7530	1	Cable-Brake, LH
23	92-7529	1	Cable-Brake, RH
24	63-7880	1	Pin-Latch, Brake
25	32121-50	1	Pin-Spring
26	3272-10	2	Pin-Cotter
27	3290-378	1	Tie-Cable
28	99-7963-03	1	Pedal-Park
29	3234-13	2	Screw-HHF
30	99-7140	1	Spring-Torsion
31	115-4417	1	Rod-Brake Pawl
32	119-0002	1	Pawl-Brake
33	120-1691	1	Detent-Brake
34	323-12	1	Screw-HH
35	3296-2	1	Nut-Lock, NI
36	3229-34	1	Screw-CARR
37	100-1270	1	Switch-Proximity

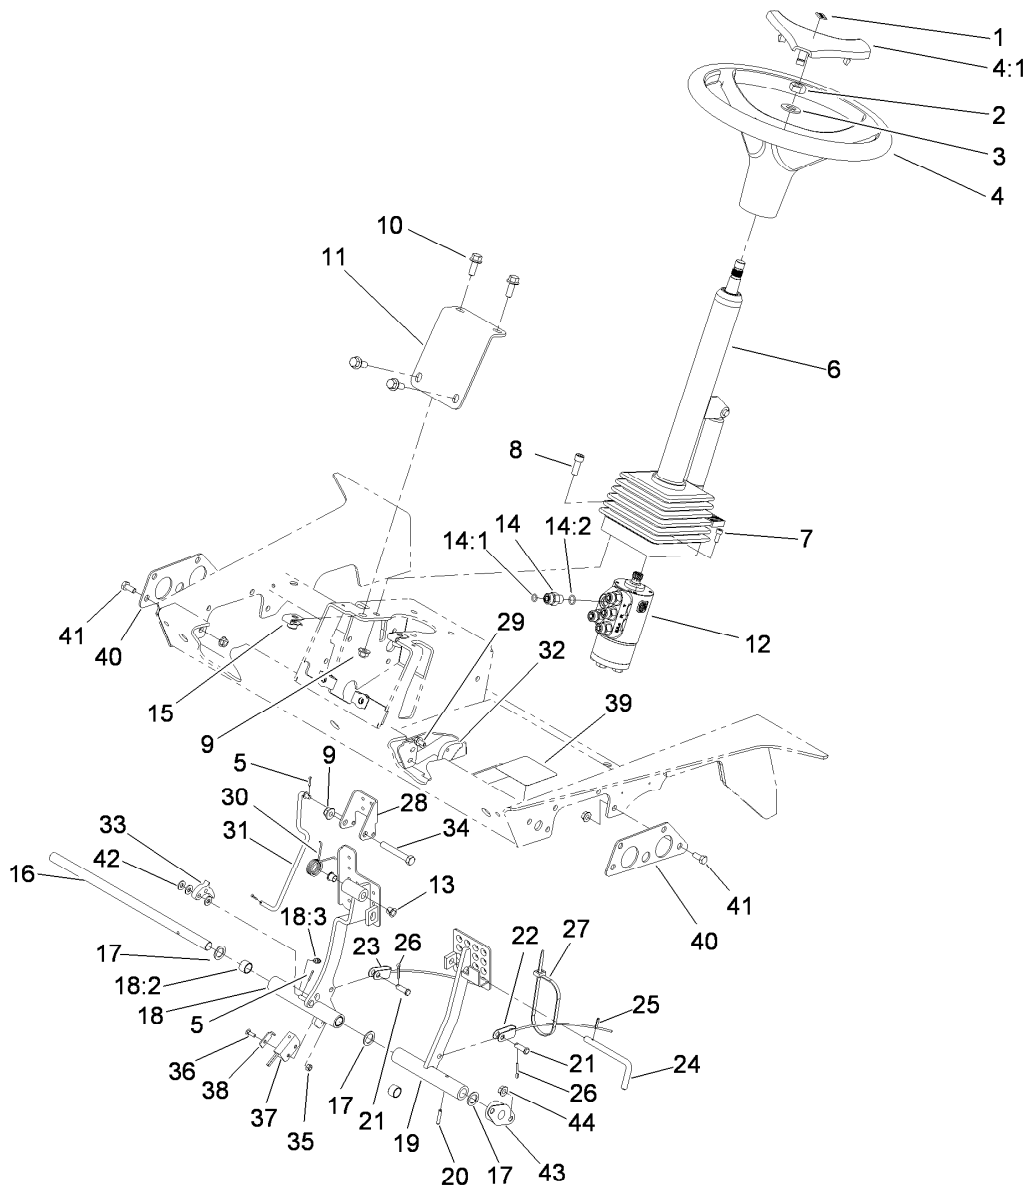 

Steering and Brake Control Assembly (continued)

Ref.	Part Number	Qty.	Description
38	100-4872	1	Plate-Switch, Neutral
39	117-4763	1	Decal-Brake
40	106-7794-01	2	Plate-Mount, HYD Fitting
41	322-3	3	Screw-HH


Ref.	Part Number	Qty.	Description
42	3256-22	3	Washer-Flat
43	256-236	2	Bearing-Mount, Flange
44	32128-20	3	Nut-HF

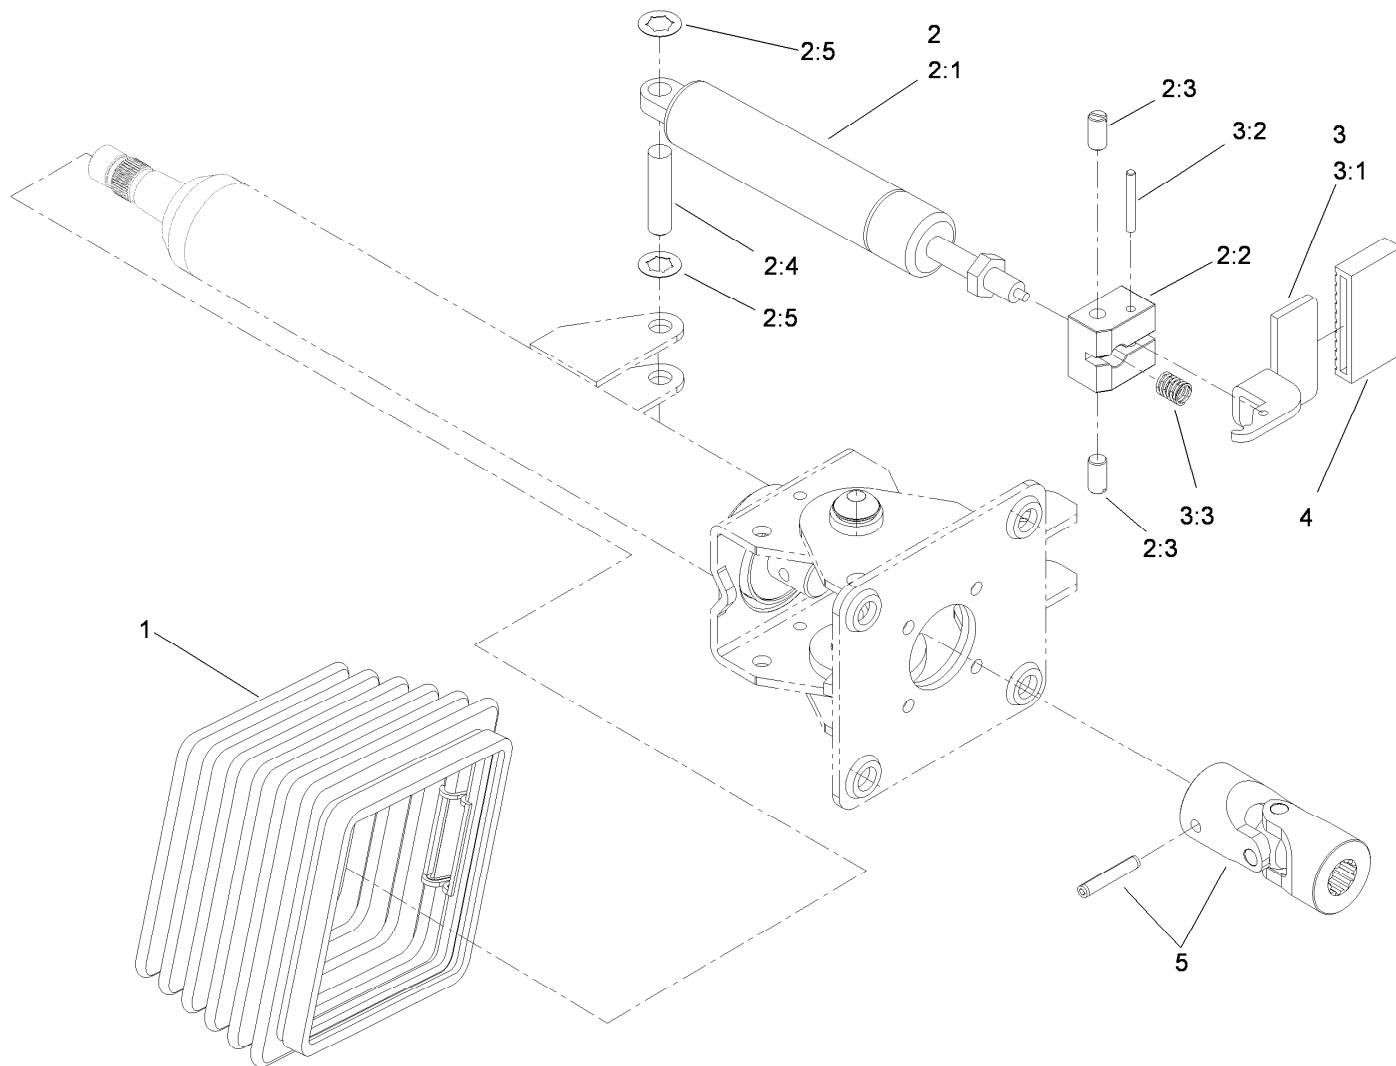 

Steering Tilt Column Assembly No. 106-3622


Ref.	Part Number	Qty.	Description
1	110-6462	1	Bellows-Rubber
2	110-6463	1	Cylinder Service Kit
2:1		1	Cylinder-Gas ●
2:2		1	Block-Pedal ●
2:3		2	Bolt ●
2:4		1	Pin ●
2:5		2	Washer-Lock ●
3	110-6464	1	Pedal Service Kit
3:1		1	Pedal ●
3:2		1	Pin ●
3:3		1	Spring ●
4	110-6465	1	Cover-Pedal
5	120-6256	1	Universal Joint Kit

 ● Not serviced separately

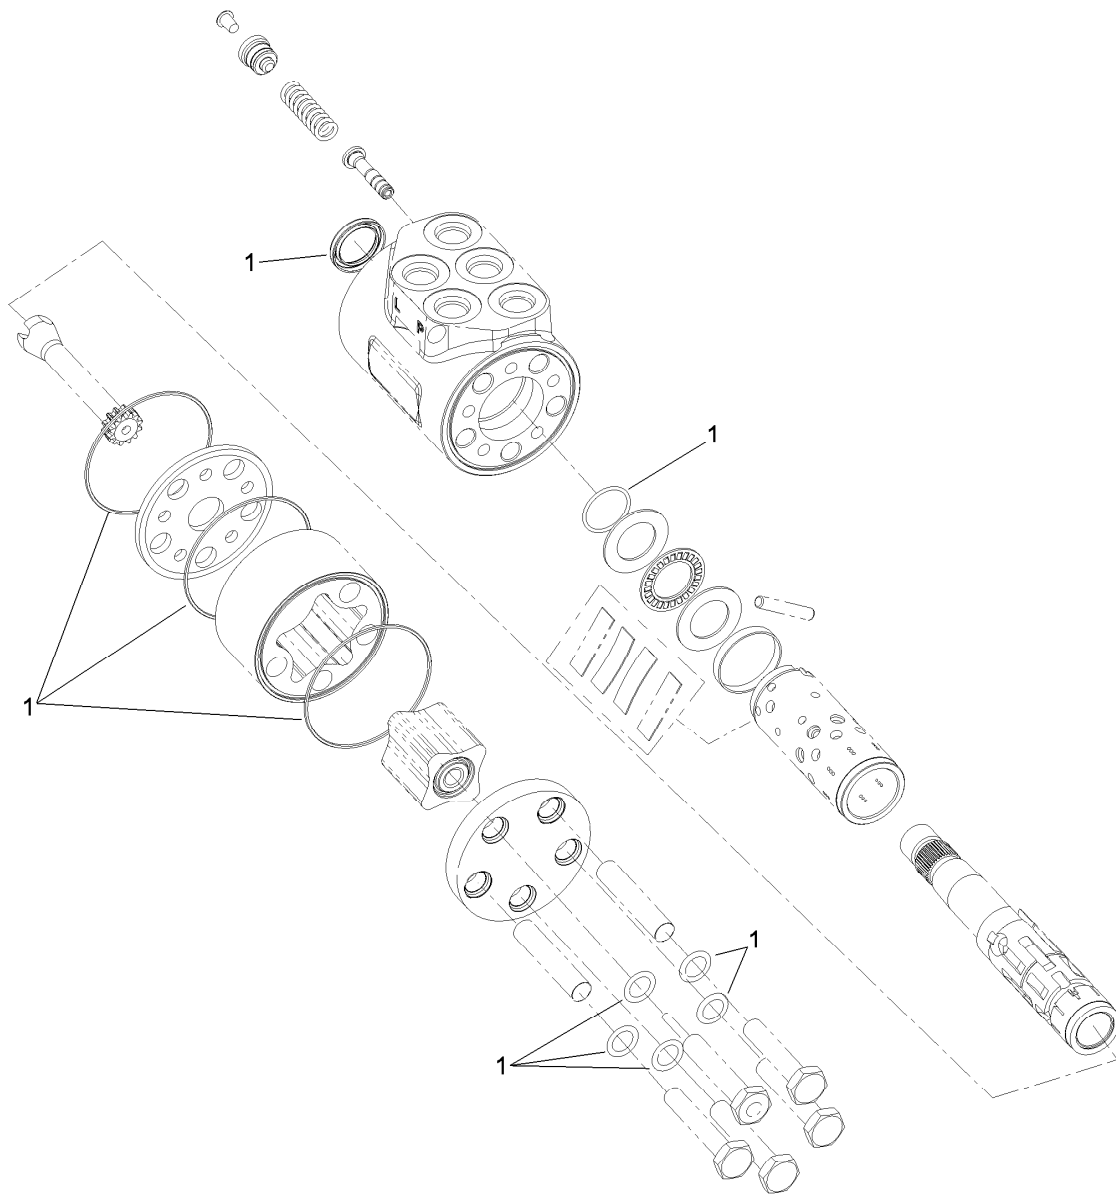


Steering Valve Assembly No. 114-8119

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	106-6716	1	Seal Kit

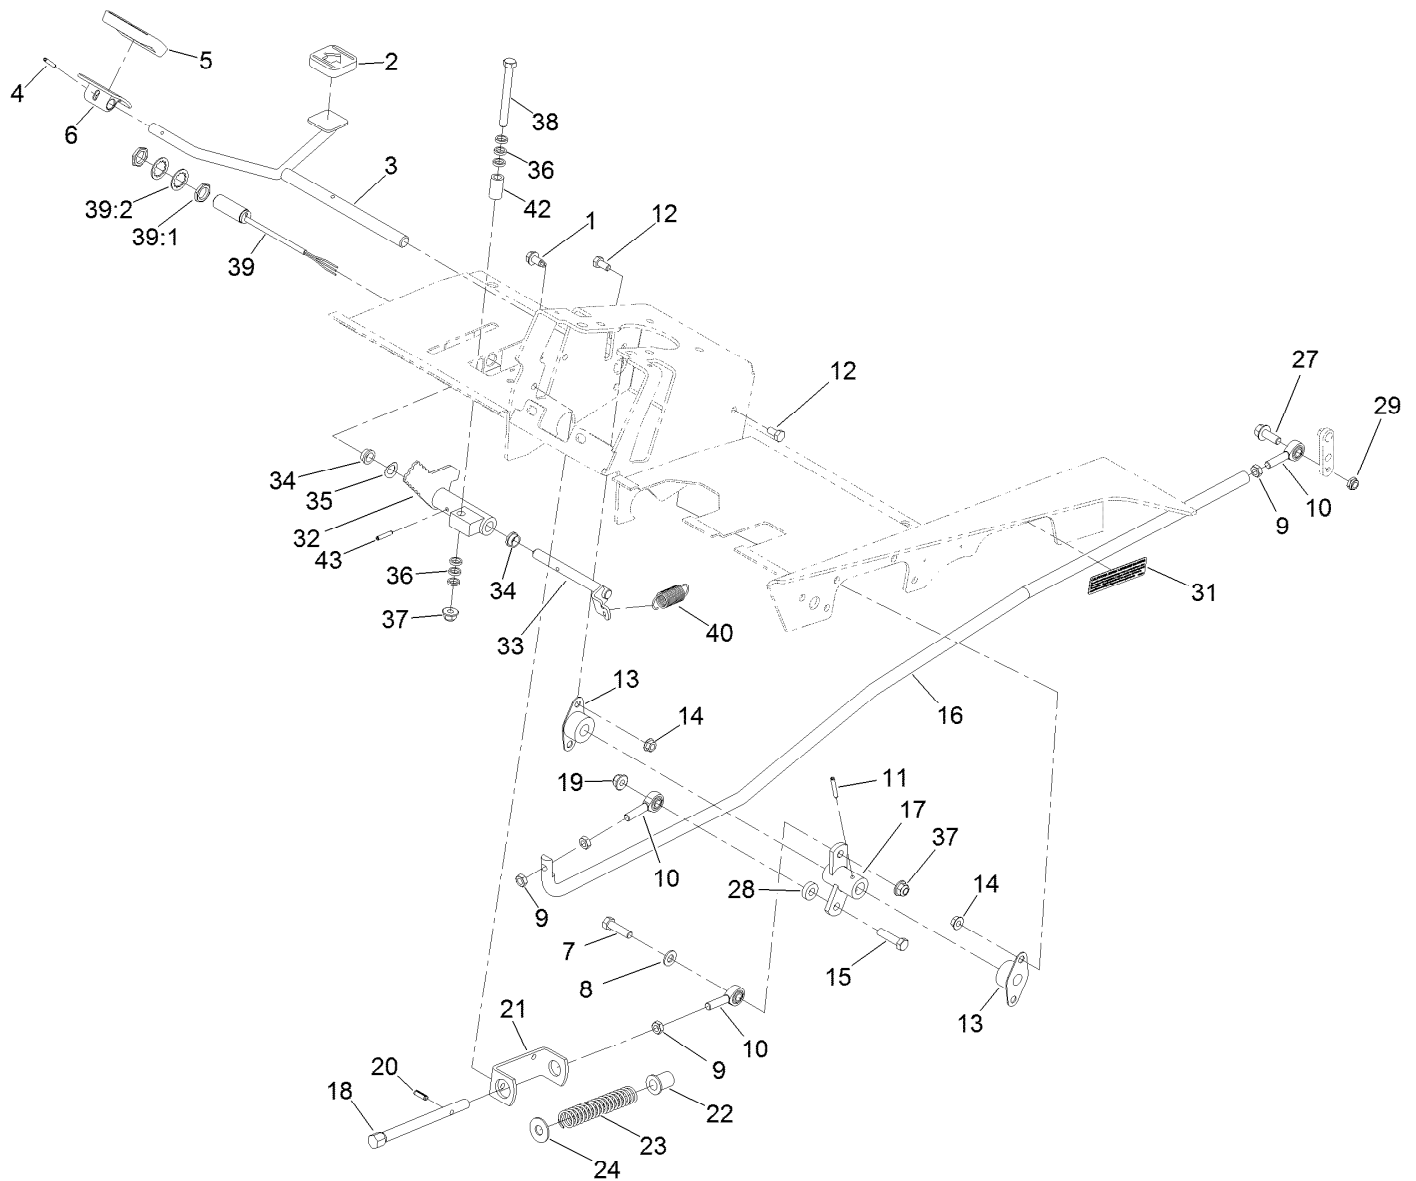 

Traction Pedal Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	32104-32	2	Screw-HWH	22	92-7610	1	Retainer-Spring
2	74-9110	1	Pad-Pedal, Reverse	23	84-9100	1	Spring
3	75-2970	1	Pedal-Traction	24	3256-5	1	Washer-Flat
4	32121-45	1	Pin-Spring	27	3234-11	1	Screw-HHF
5	74-9100	1	Pad-Pedal, Forward	28	5-0652	1	Spacer
6	117-9507	1	Pedal-Accelerator	29	3296-59	1	Nut-Lock, NI
7	323-29	1	Screw-HH	31	117-2718	1	Decal-Arrester, Spark
8	3256-24	1	Washer-Flat	32	117-0216	1	Stop-Mow
9	3220-3	4	Nut-HJ	33	106-3731	1	Rod-Pivot
10	2411-36	3	Bearing-End, Rod	34	256-156	2	Bushing-Flange
11	32121-6	1	Pin-Roll, Slotted	35	110-8982	1	Washer-Spring
12	322-2	4	Screw-HH	36	62-4420	6	Washer
13	256-236	2	Bearing-Mount, Flange	37	104-8301	2	Nut-Flange, NI
14	32128-20	4	Nut-HF	38	323-15	1	Screw-HH
15	323-8	1	Screw-HH	39	115-5300	1	Proximity Switch ASM
16	117-4794-03	1	Rod-Traction	39:1	117-3207	2	Nut-Hex
17	115-4380-03	1	Hub-Pivot, Traction	39:2	117-3208	2	Washer-Lock, Internal Tooth
18	115-4383	1	Shaft-Spring	40	92-7305	1	Spring-Extension
19	104-8301	2	Nut-Flange, NI	42	110-4631	1	Tube-Spacer
20	32121-11	1	Pin-Roll	43	32121-16	1	Pin-Spring
21	92-7608-03	1	Bracket-Spring				

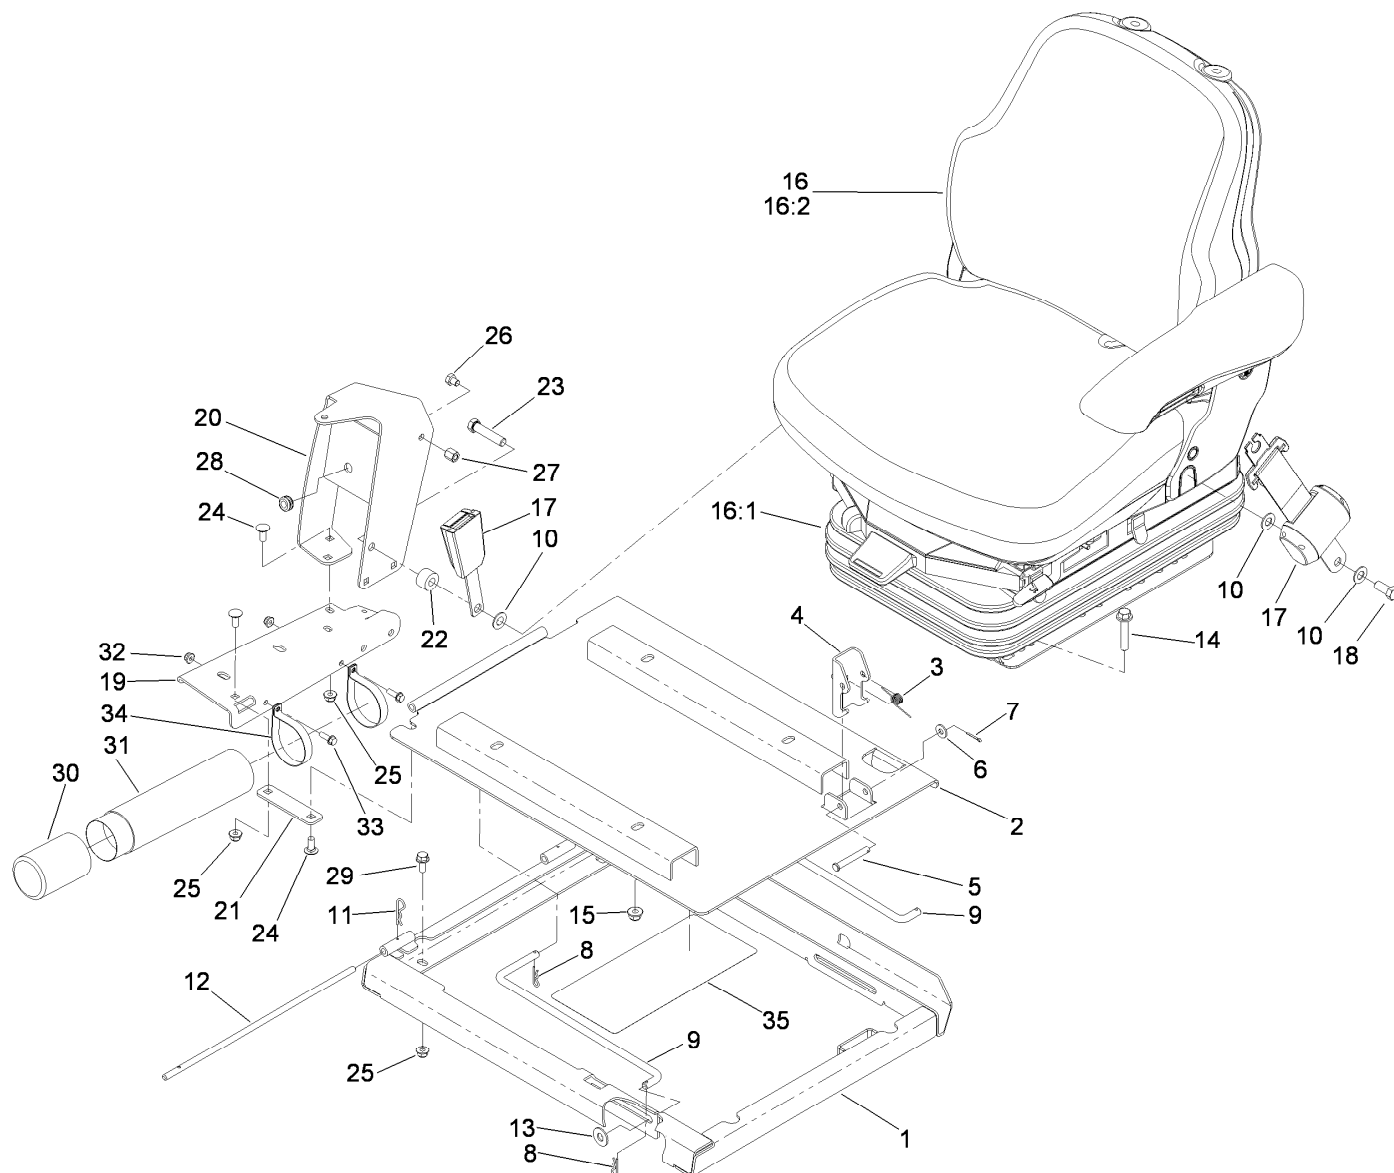 


Seat Mounting Assembly

Ref.	Part Number	Qty.	Description
1	115-4400-03	1	Frame-Seat
2	115-4411-03	1	Plate-Seat
3	104-4821	1	Spring-Torsion
4	115-4423-03	1	Latch-Seat Plate
5	110-0618	1	Pin-Clevis
6	3256-2	1	Washer-Flat
7	3272-6	1	Pin-Cotter
8	3290-307	4	Pin-Hair
9	117-4797-03	2	Rod-Seat Frame
10	3256-25	3	Washer-Flat
11	3290-467	1	Pin-Hair
12	75-3400	1	Shaft-Pivot, Seat
13	3256-4	2	Washer-Flat
14	66-9302	4	Screw-HHF, Whiz
15	104-8301	4	Nut-Flange, NI
16		1	Seat And Suspension ASM
16:1	108-1488	1	Seat Suspension ASM
16:2	117-5676	1	Premium Seat ASM

Ref.	Part Number	Qty.	Description
17	110-0413	1	Seatbelt-Retractable
18	3212-4	1	Screw-HH
19	119-0000-03	1	Channel-Support
20	117-4798-03	1	Arm-Support
21	112-7449-03	1	Bracket-Support
22	17-7190	1	Spacer-Finger
23	3212-8	1	Screw-HH
24	3230-23	6	Screw-CARR
25	104-8300	10	Nut-Flange, NI
26	108-8646	1	Screw-HH, Lock
27	112-7405	1	Nut-Hex, Coupling
28	237-136	1	Grommet
29	3234-47	4	Screw-HHF
30	104-7048	1	Cap-Housing
31	104-7050	1	Tube-Manual
32	104-7201	2	Nut-HF
33	32105-15	2	Screw-HWH
34	107-1865	2	R-Clamp
35	120-1681	1	Decal-Reel Speed, 7 Inch

● Not serviced separately

 Air Ride Seat Suspension Assembly No. 108-1488

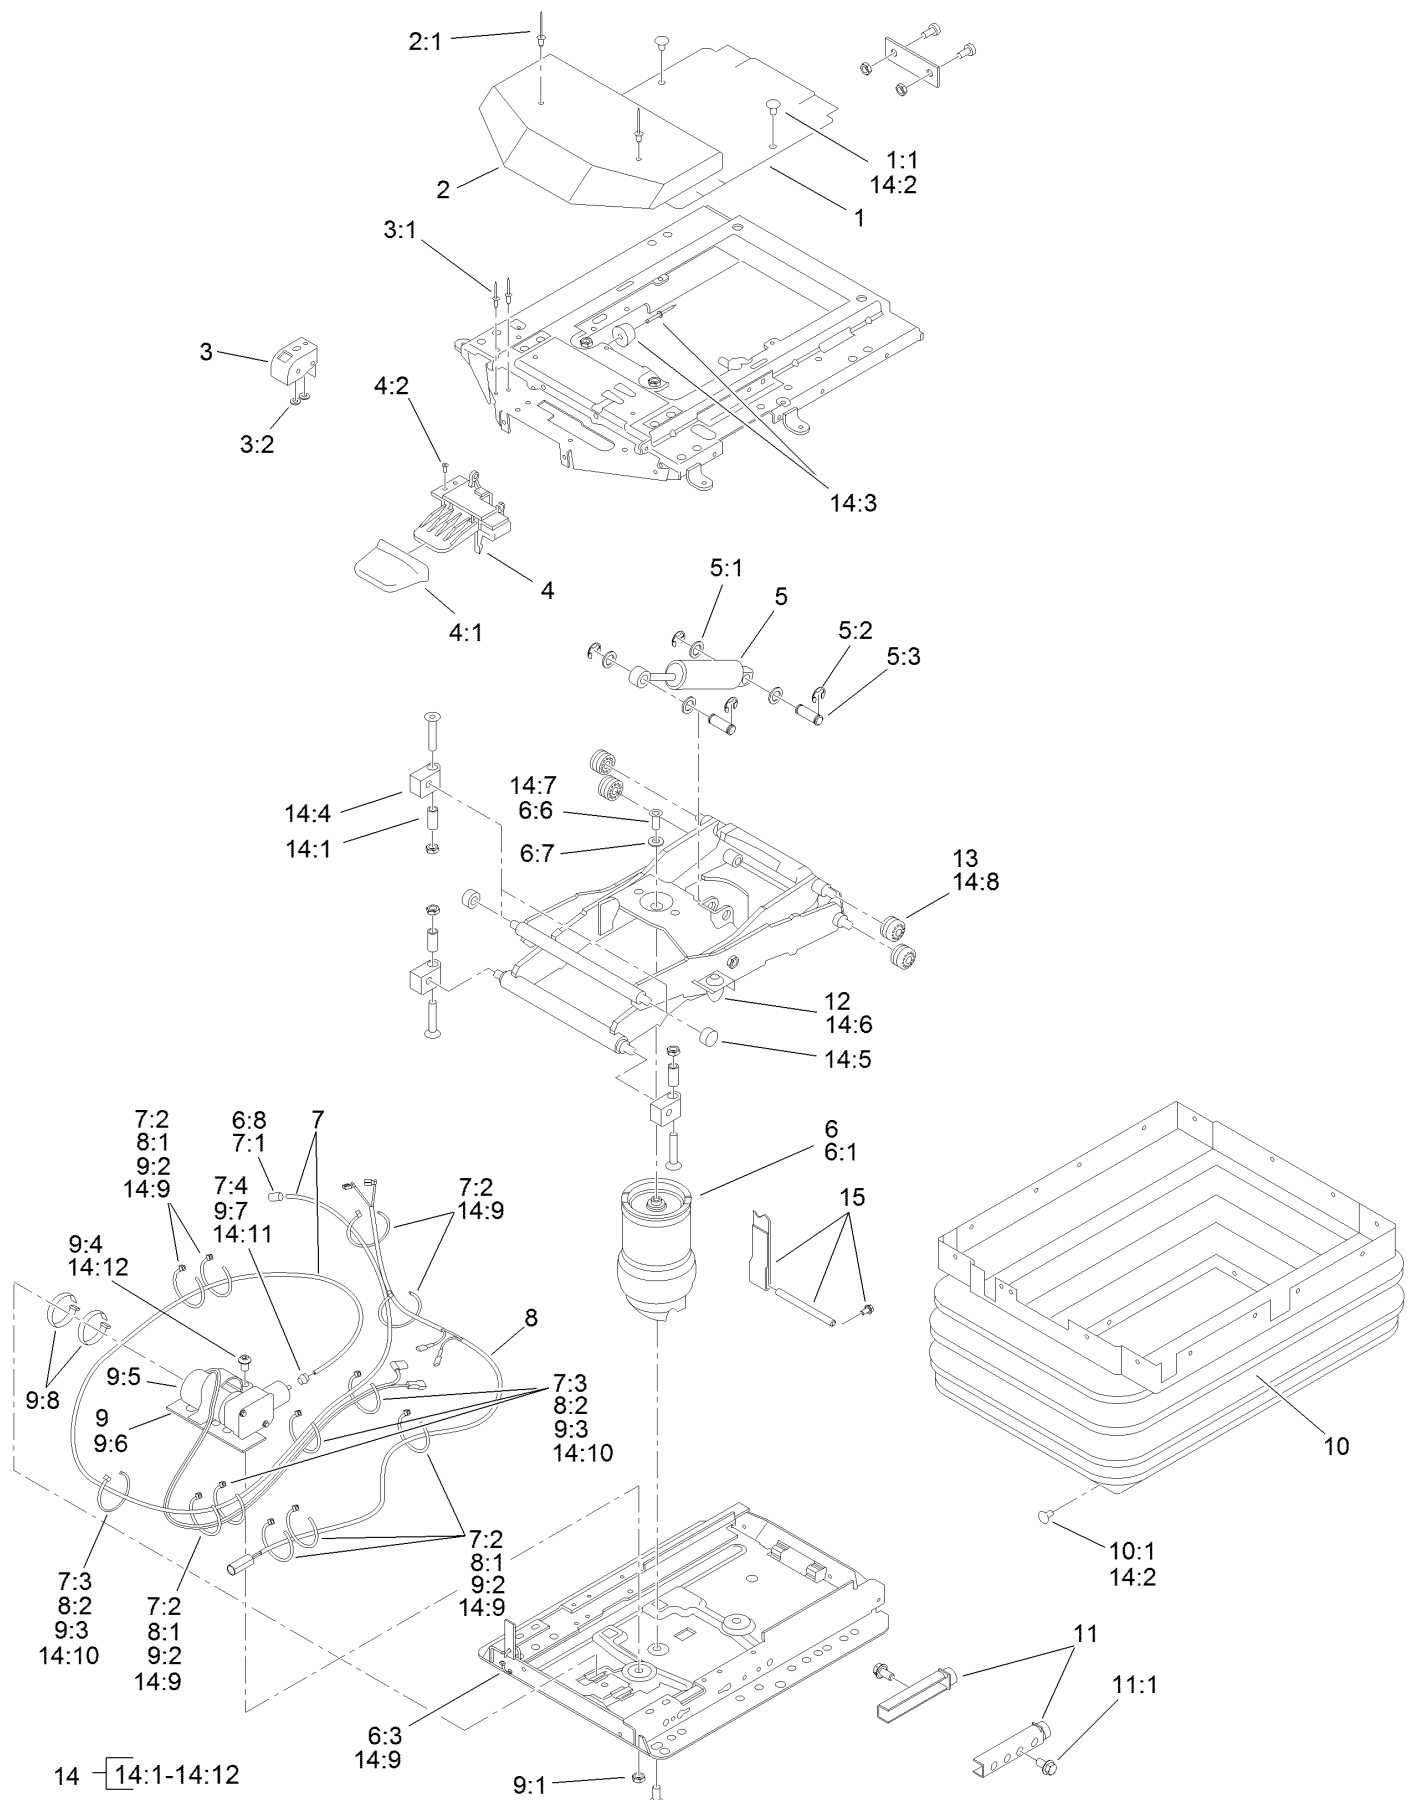


Air Ride Seat Suspension Assembly No. 108-1488 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	108-8026	1	Cover ASM	9:1		1	Nut ■
1:1	39-5710	2	Plug-Plastic	9:2		5	Tie-Wire ■
2	108-8027	1	Cover ASM	9:3		4	Tie-Wire ■
2:1		2	Rivet ■	9:4		1	Screw ■
3	108-8028	1	Level Indicator Kit	9:5		1	Compressor ■
3:1		2	Rivet ■	9:6		1	Plate-Mounting ■
3:2		2	Washer ■	9:7		1	Nipple-Hose ■
4	108-8029	1	Air Control Valve ASM	9:8		2	Clamp ■
4:1		1	Handle ■	10	108-8035	1	Bellows ASM
4:2		3	Screw ■	10:1	39-5710	23	Plug-Plastic
5	108-8030	1	Shock Absorber Kit	11	108-8036	1	Stop Kit
5:1		4	Washer ■	11:1		2	Screw ■
5:2		4	C-Clip ■	12	107-1213	2	Bumper Set
5:3		2	Pin ■	13	108-8037	4	Roller
6	108-8031	1	Air Spring Kit	14	108-8038	1	Wear Parts Kit ●
6:1		1	Air Spring ■	14:1		4	Spacer ■
6:3		2	Cable Tie ■	14:2	39-5710	2	Plug-Plastic
6:6		2	Screw ■	14:3		1	Bumper ■
6:7		1	Washer ■	14:4		4	Support-Housing ■
6:8		1	Nipple-Hose ■	14:5		2	Roller ■
7	108-8032	1	Air Tube ASM	14:6	107-1213	2	Bumper Set
7:1		1	Nipple-Hose ■	14:7		2	Screw ■
7:2		7	Tie-Wire ■	14:8	108-8037	4	Roller
7:3		4	Tie-Wire ■	14:9		9	Tie-Wire ■
7:4		1	Nipple-Hose ■	14:10		4	Tie-Wire ■
8	108-8033	1	Connecting Cable ASM	14:11		1	Nipple-Hose ■
8:1		8	Tie-Wire ■	14:12		1	Screw ■
8:2		4	Tie-Wire ■	15	119-2161	1	Tether Kit
9	108-8034	1	Compressor Kit				

● Not illustrated

 ■ Not serviced separately

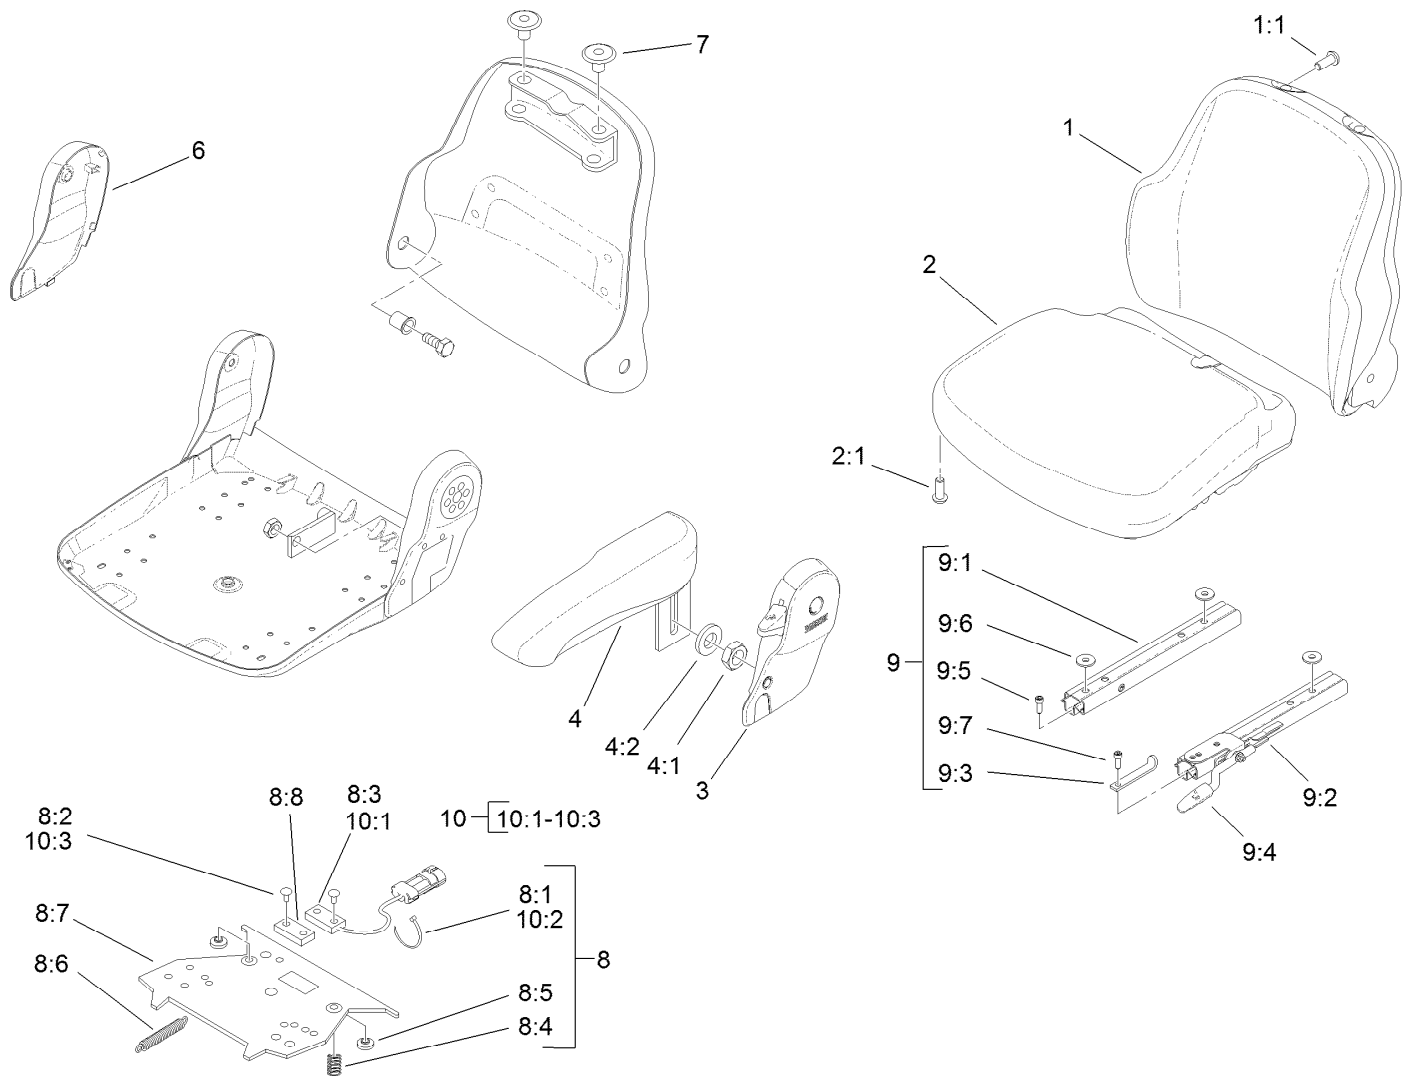


Vinyl Premium Seat Assembly No. 117-5676

Ref.	Part Number	Qty.	Description
1	108-8016	1	Backrest Cushion ASM
1:1	119-7742	4	Screw-Cushion
2	108-8017	1	Seat Cushion ASM
2:1	119-7742	3	Screw-Cushion
3	108-8018	1	Cover-Armrest
4	108-8019	1	LH Armrest ASM
4:1	82-9650	1	Nut
4:2	107-1198	1	Washer
6	108-8021	1	Cover-Armrest
7	108-8022	2	Cover-Black
8	108-8024	1	Switch Kit
8:1		3	Wire Tie ●
8:2		4	Rivet ●
8:3		1	Sensor-Seat Switch ●
8:4		2	Spring-Compression ●
8:5		2	Bumper-Pressure Plate ●

Ref.	Part Number	Qty.	Description
8:6		1	Spring-Extension ●
8:7		1	Plate-Mounting ●
8:8		1	Magnet ●
9	108-8025	1	Adjustment Rail Set
9:1		1	Rail-Adjustment, RH ●
9:2		1	Rail-Adjustment, LH ●
9:3		1	Stop-Rail ●
9:4		1	Handle ●
9:5		3	Screw ●
9:6		3	Washer ●
9:7		1	Screw ●
10	110-6189	1	Switch Kit
10:1		1	Switch ●
10:2		3	Wire Tie ●
10:3		2	Rivet ●

 
● Not serviced separately

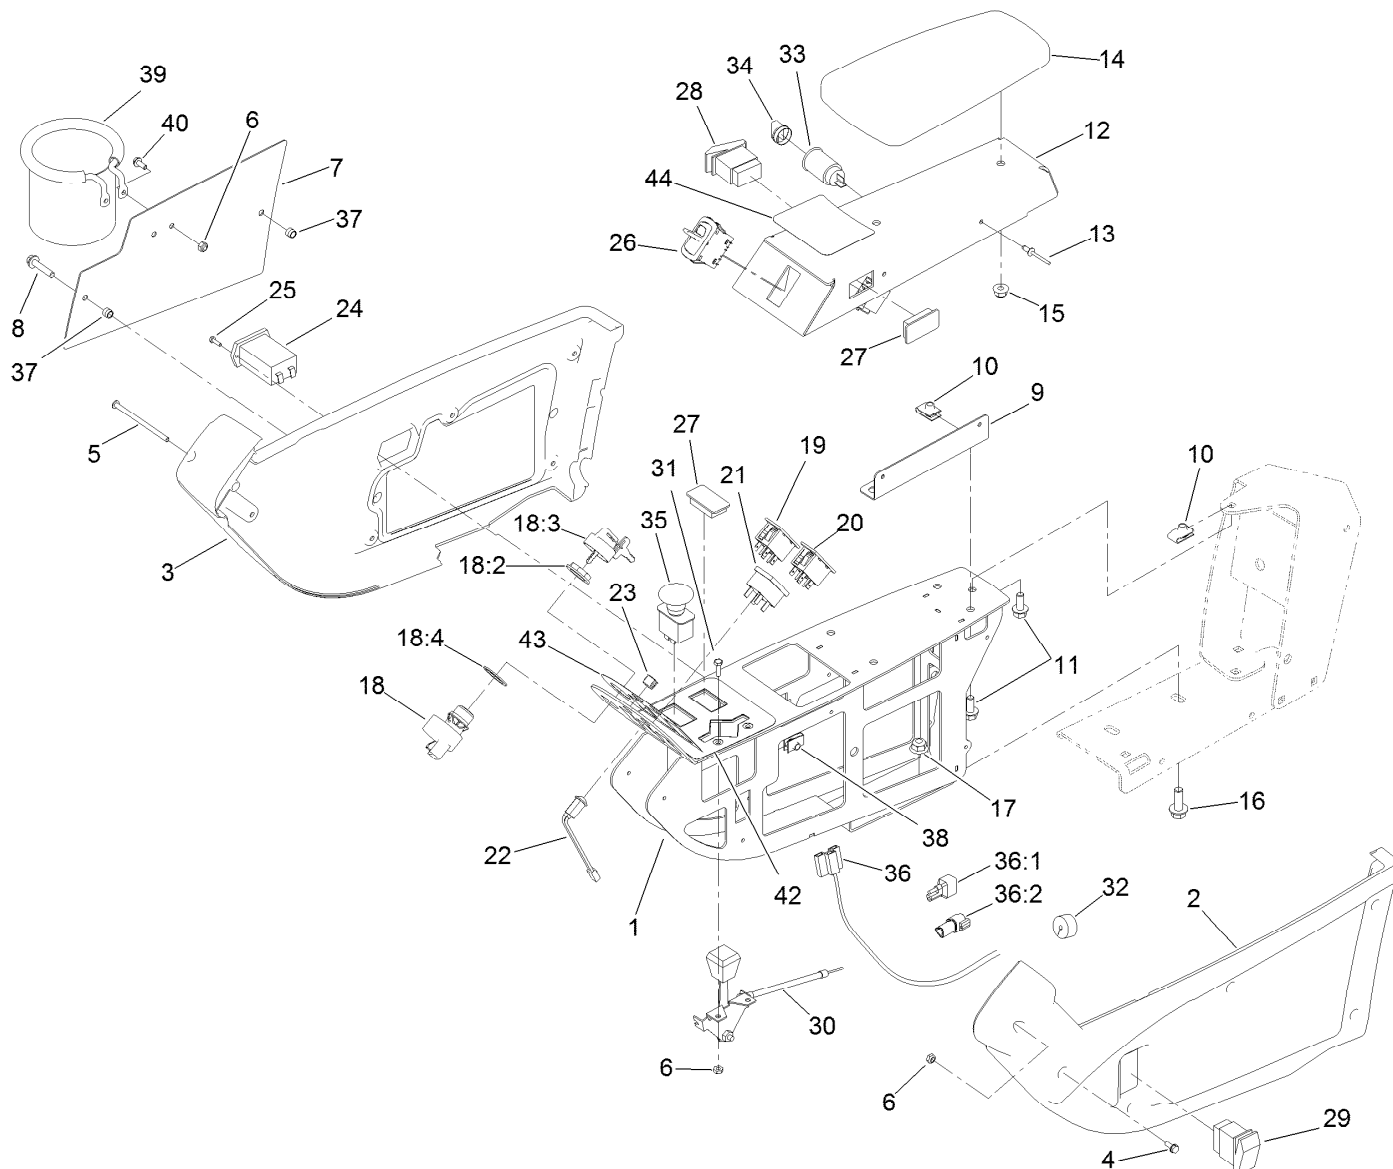

Console and Control Arm Assembly

Ref.	Part Number	Qty.	Description
1	115-4430-03	1	Frame-Arm, Control
2	108-7604	1	Cover-LH
3	108-7605	1	Cover-RH
4	32144-112	10	Screw-HWH
5	3250-22	1	Screw-PPH
6	3296-2	5	Nut-Lock, NI
7	115-8849-03	1	Plate-Cover
8	3234-21	2	Screw-HHF
9	112-7404	1	Angle-Mounting
10	94-2413	5	U-Nut
11	3234-5	5	Screw-HHF
12	120-1685-03	1	Panel-Control ASM
13	3290-409	2	Rivet
14	108-7602	1	Rest-Arm
15	104-8300	2	Nut-Flange, NI
16	3234-42	2	Screw-HHF
17	104-8301	2	Nut-Flange, NI
18	106-5269	1	Ignition Switch ASM
18:2	108-8660	1	Nut-Mounting
18:3	106-5270	1	Ignition Key Set
18:4	108-8659	1	Washer-Backup


Ref.	Part Number	Qty.	Description
19	100-8070	1	Lamp-Warning
20	100-8071	1	Lamp-Warning
21	110-0941	1	Gauge-Temperature
22	95-7652	1	Light-Indicator
23	2410-64	1	Plug-Button
24	75-6820	1	Hourmeter
25	32144-18	2	Screw-HWH
26	114-3316	1	Switch-Paddle
27	99-7420	2	Plug-Hole
28	106-2027	1	Switch-Intermittent
29	95-8999	1	Switch
30	115-9117	1	Cable-Throttle
31	3290-134	2	Screw
32	110-8911	1	Seal-Foam
33	99-7411	1	Point-Power
34	99-7416	1	Cap
35	93-9999	1	Switch-PTO
36	119-1301	1	Harness-Wire, Seat And Console
36:1	104-4022	1	Resistor-75 Ohm
36:2	32180-043	1	Resistor-120 Ohm

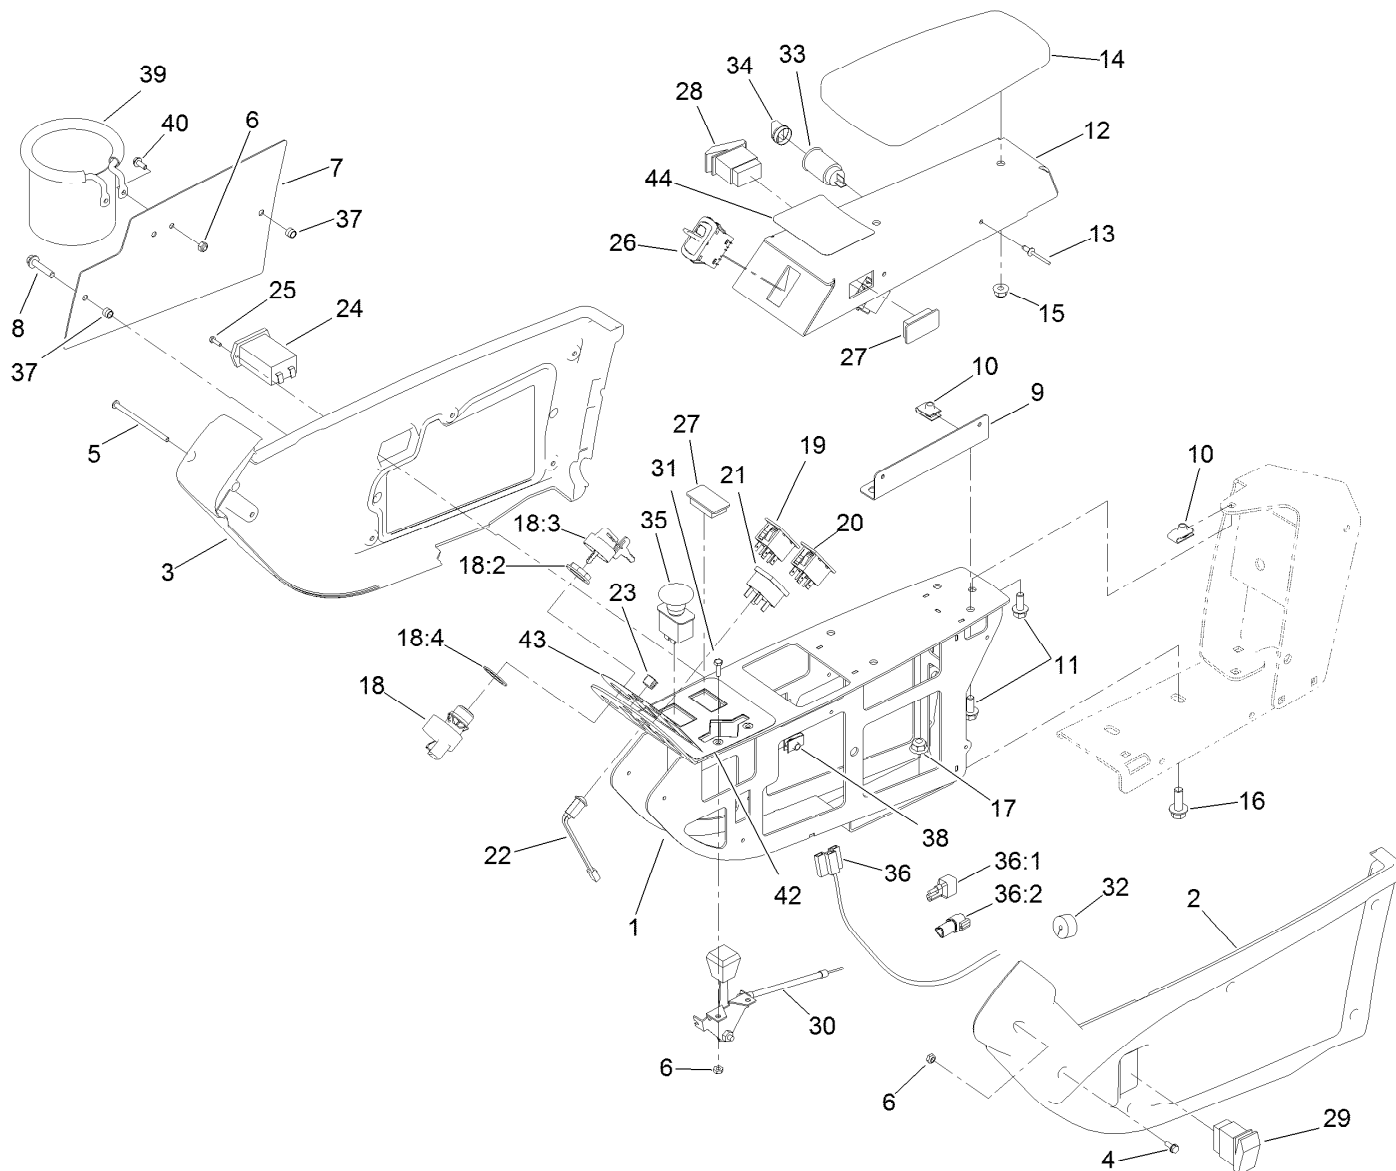 

Console and Control Arm Assembly (continued)

Ref.	Part Number	Qty.	Description
37	110-0542	2	Spacer-Flange
38	107069	2	Clip
39	117-2378	1	Holder-Bag
40	3290-321	2	Screw-HWH


Ref.	Part Number	Qty.	Description
42	119-3884	1	Decal-Console, Lower
43	117-2385	1	Decal-Console, Upper
44	117-2386	1	Decal-Lift

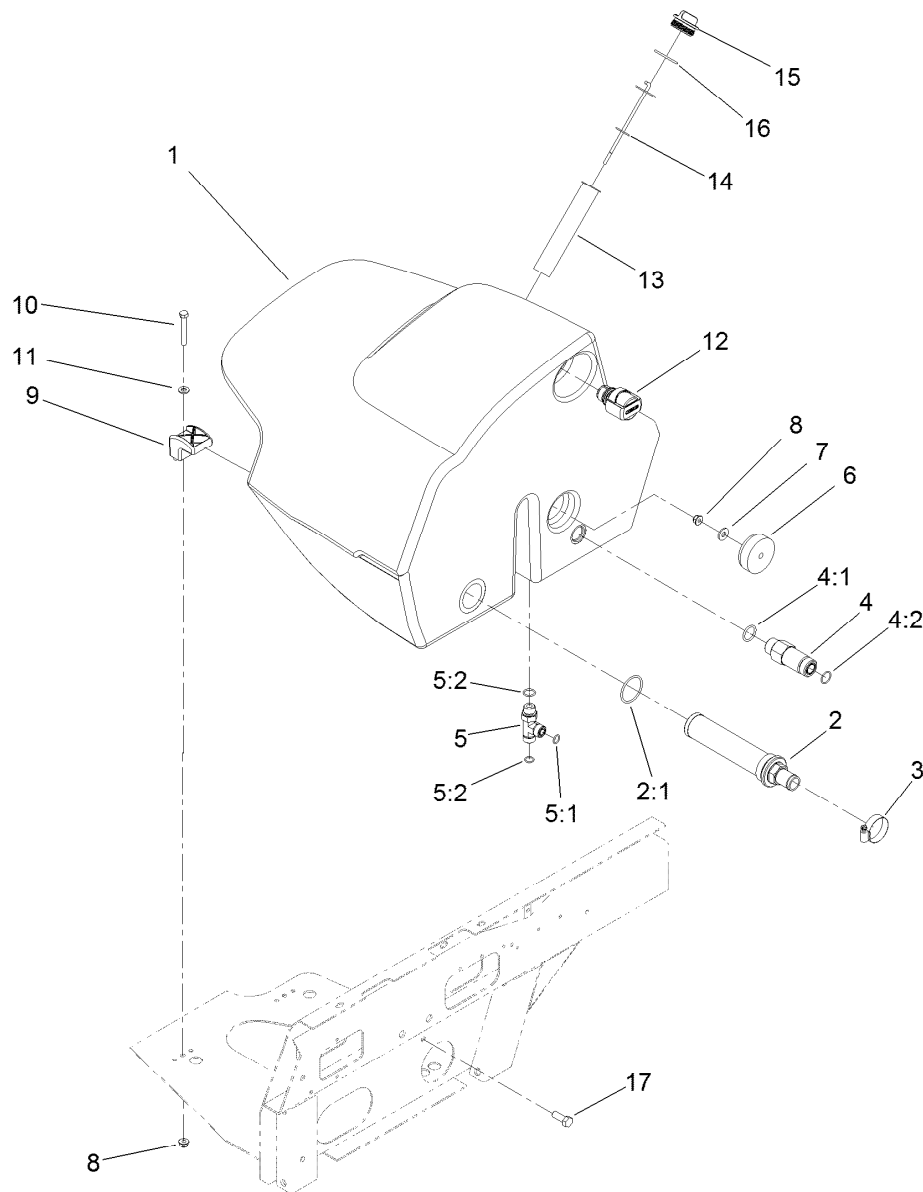 

Hydraulic Tank Assembly

Ref.	Part Number	Qty.	Description
1	119-0017	1	Tank-HYD
2	104-7546	1	Tank Strainer ASM
2:1	340-136	1	O-Ring
3	2412-111	2	Clamp
4	92-6058	1	Fitting-HYD
4:1	237-81	1	O-Ring
4:2	237-58	1	O-Ring
5	340-109	1	Fitting-HYD, Tee
5:1	237-79	1	O-Ring
5:2	237-30	2	O-Ring
6	108-1605	1	Bumper-Recess


Ref.	Part Number	Qty.	Description
7	3256-3	1	Washer-Flat
8	104-8300	3	Nut-Flange, NI
9	107-4543	2	Clamp
10	322-11	2	Screw-HH
11	3256-23	2	Washer-Flat
12	115-9793	1	Breather
13	61-2790	1	Filter-Screen
14	119-6968	1	Dipstick-Oil
15	93-7498	1	Plug-Plastic
16	237-101	1	O-Ring
17	322-5	1	Screw-HH

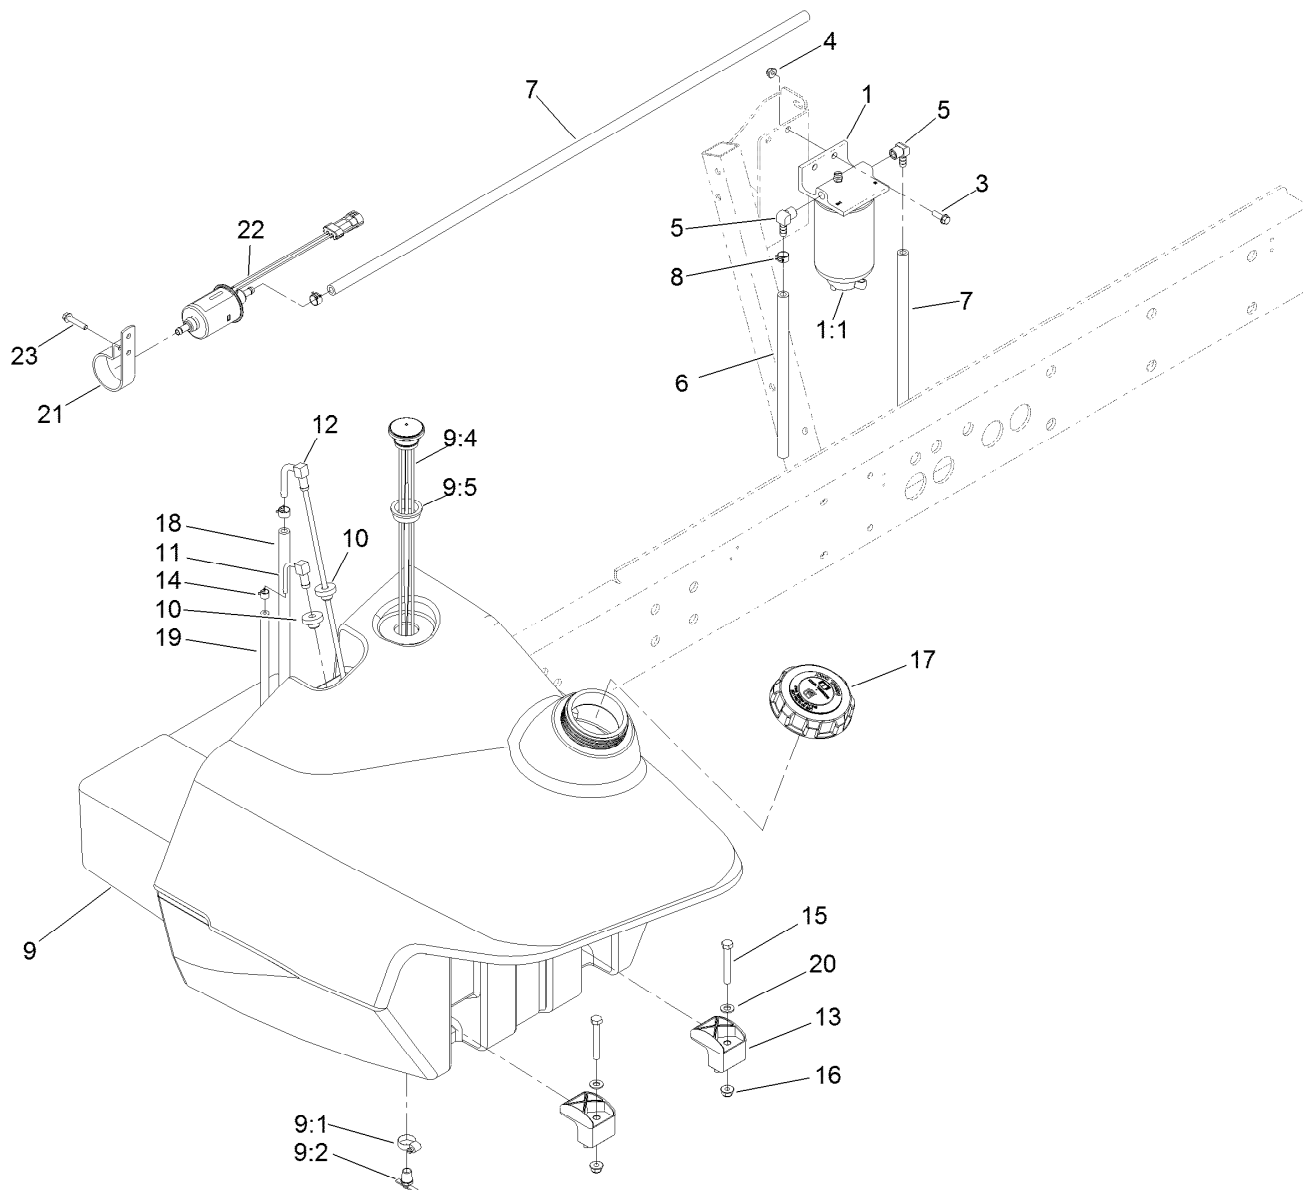 

Fuel Tank Assembly

Ref.	Part Number	Qty.	Description
1	110-9044	1	Seperator Filter ASM
1:1	110-9049	1	Filter-Spin On
3	32105-15	2	Screw-HWH
4	104-7201	2	Nut-HF
5	353-781	2	Fitting-Elbow
6	109-0309	1	Hose-Fuel
7	110-3258	1	Hose-Fuel
8	92-2379	6	Clamp-Hose
9	115-4353	1	Fuel Tank ASM
9:1	2412-36	1	Clamp-Hose
9:2	304-46	1	Draincock
9:4	117-4790	1	Guage-Fuel
9:5	95-8972	1	Grommet
10	46-6560	2	Bushing


Ref.	Part Number	Qty.	Description
11	104-5605	1	Fitting-Return
12	115-4354	1	Tube-Suction, Fuel
13	107-4543	2	Clamp
14	2412-80	2	Clamp-Hose
15	322-11	2	Screw-HH
16	104-8300	2	Nut-Flange, NI
17	114-5062	1	Cap-Biodiesel
18	110-3257	1	Hose-Fuel
19	110-0471	1	Hose-Fuel
20	3256-23	2	Washer-Flat
21	110-8817	1	Bracket-Pump, Fuel
22	110-8806	1	Pump-Fuel
23	32144-110	1	Screw-HWH

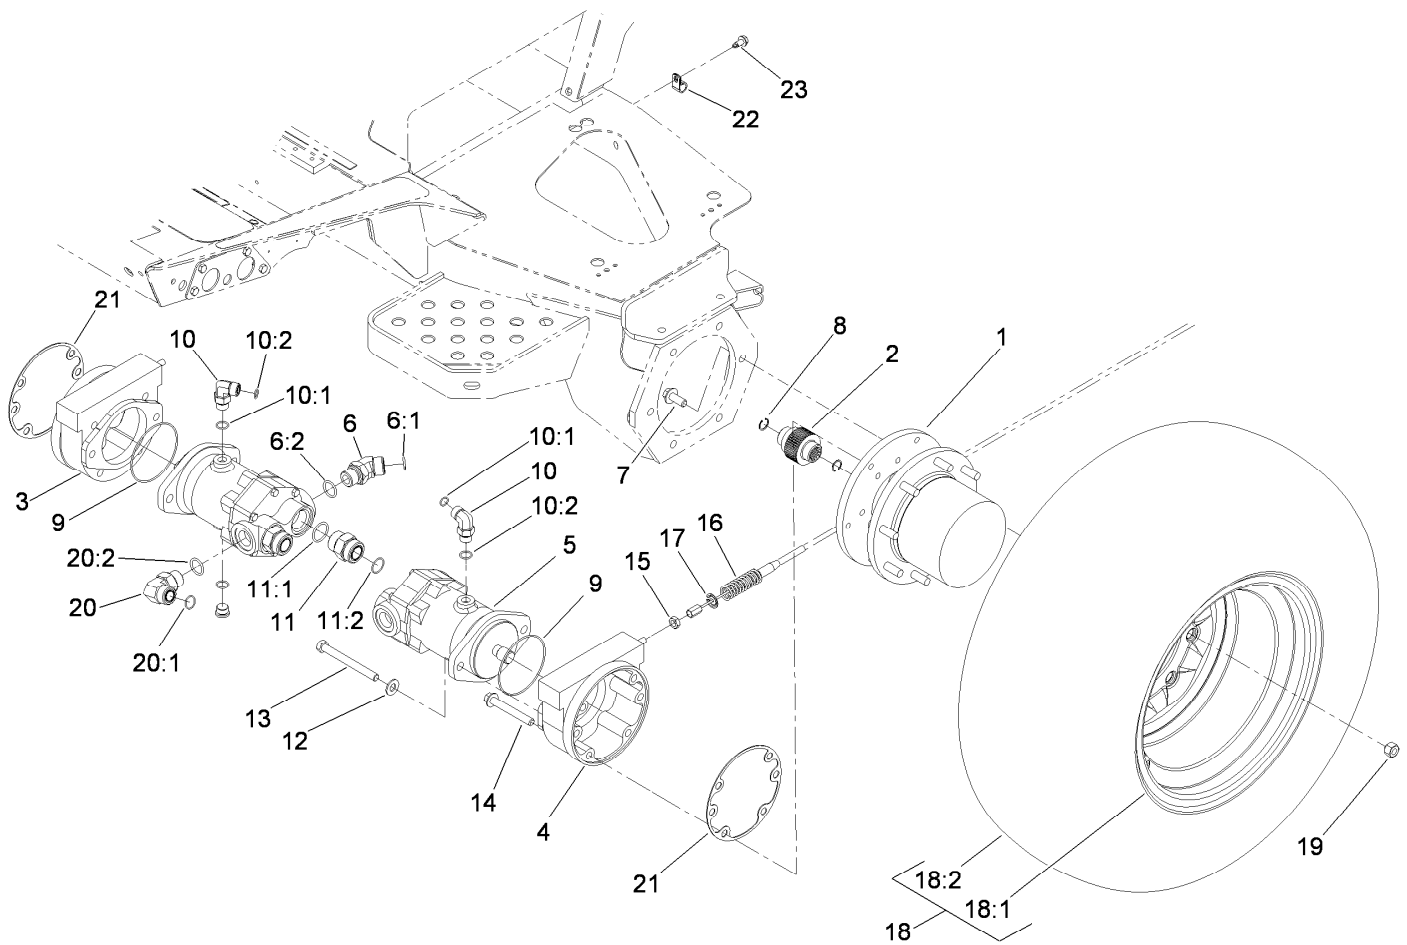 

Front Wheel, Brake and Hydraulic Drive Assembly

Ref.	Part Number	Qty.	Description
1	105-4500	2	Planetary ASM
2	100-3046	2	Shaft-Brake, Splined
3	100-3069	1	RH Brake ASM
4	100-3070	1	LH Brake ASM
5	105-1218	2	Piston Motor ASM
6	100-5530	2	Fitting-HYD, 45 DEG
6:1	237-58	1	O-Ring
6:2	237-81	1	O-Ring
7	33106-030	12	Screw-HHF
8	93-7972	4	Ring-Retaining, Internal
9	237-166	2	O-Ring
10	340-98	2	Fitting-HYD, 90 DEG
10:1	237-79	1	O-Ring
10:2	237-30	1	O-Ring
11	104-3797	4	Fitting-HYD, Straight
11:1	237-146	1	O-Ring
11:2	340-65	1	O-Ring

Ref.	Part Number	Qty.	Description
12	3256-26	4	Washer-Flat
13	33116-120	4	Screw-HH
14	33106-090	8	Screw-HHF
15	3218-4	2	Nut-Jam
16	94-3088	2	Spring-Compression
17	94-3050	2	Plate-Spring
18	119-1538	2	Tire And Wheel ASM
18:1	119-1540	1	Wheel-15 Inch
18:2	63-4480	1	Tire
19	92-7483	16	Nut-Lug
20	340-142	2	Fitting-HYD, 90 DEG
20:1	237-58	1	O-Ring
20:2	237-81	1	O-Ring
21	93-7984	2	Gasket
22	2412-93	2	Clamp-R
23	32104-32	2	Screw-HWH

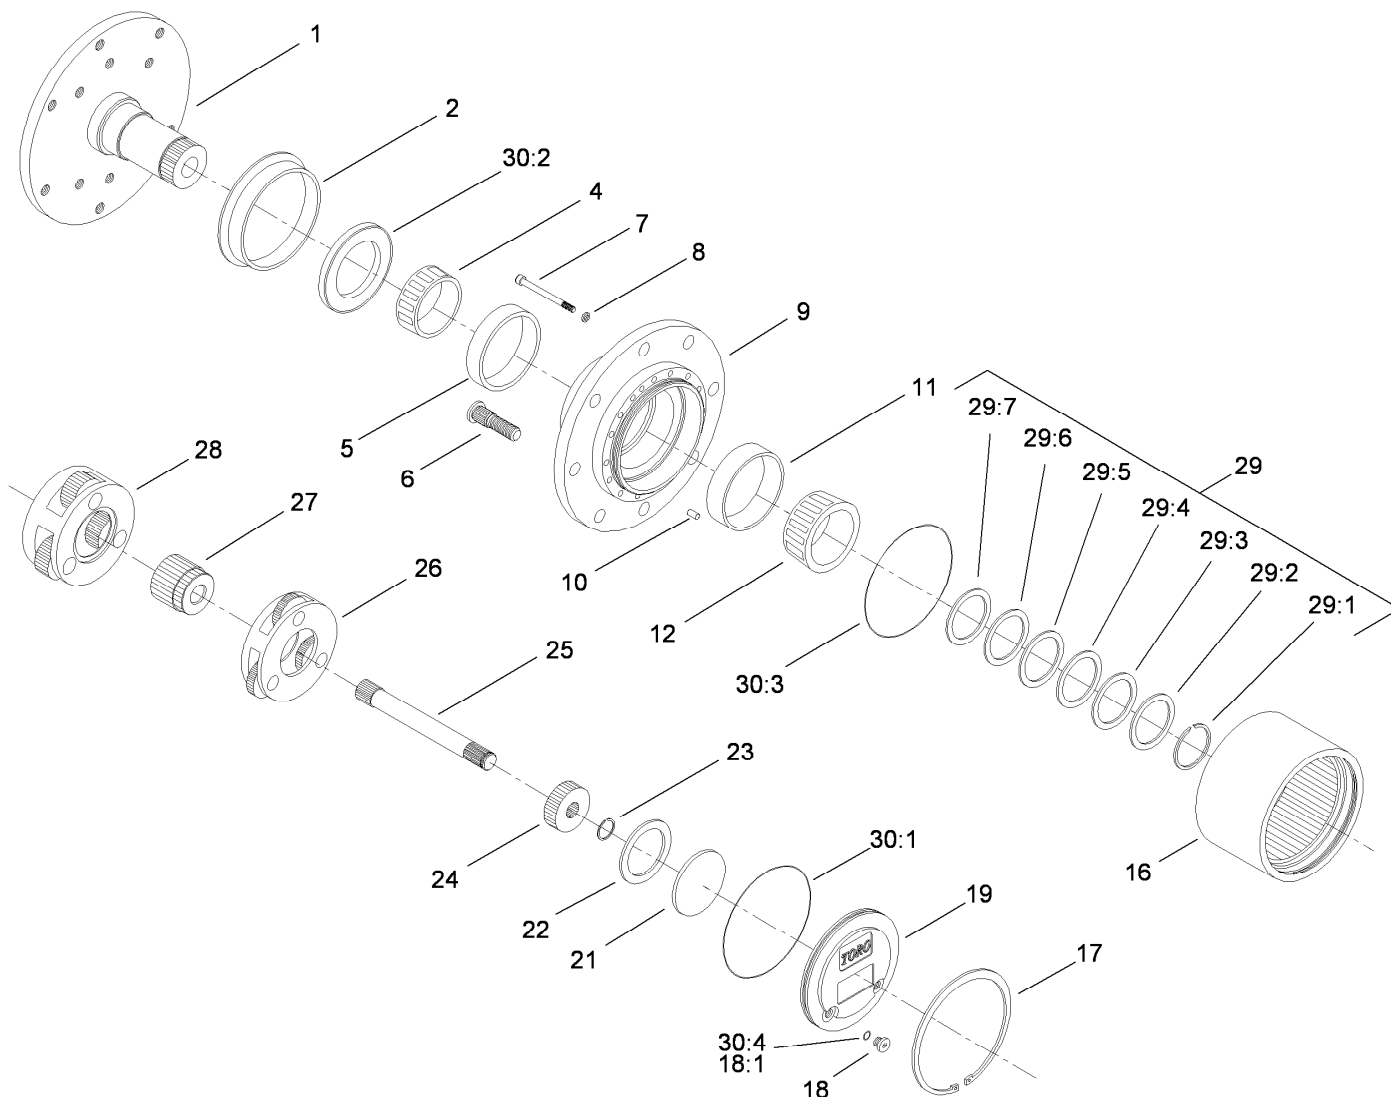 


Planetary Assembly No. 105-4500

Ref.	Part Number	Qty.	Description
1		1	Spindle ■
2	105-8122	1	Seal-Boot
4	105-8120	1	Bearing-Cone
5	105-8119	1	Bearing-Cup
6	105-8124	8	Stud-Wheel
7	105-8125	16	Bolt-Head, Socket
8	3253-18	16	Washer-Lock
9		1	Housing ■
10	105-8121	1	Pin-Dowel
11	105-8117	1	Bearing-Cup
12	105-8118	1	Bearing-Cone
16	105-8113	1	Gear-Ring
17	105-8132	1	Ring-Retaining
18	353-990	2	Plug ASM
18:1	237-78	1	O-Ring
19	105-8138	1	Cap-End
21	105-8133	1	Plug-Thrust
22	105-8123	1	Washer-Thrust
23	105-8131	1	Ring-Retaining

Ref.	Part Number	Qty.	Description
24	105-8114	1	Gear-Primary
25	105-8115	1	Shaft-Drive
26	105-8129	1	Primary Carrier ASM
27	105-8139	1	Gear-Secondary
28	105-8130	1	Secondary Carrier ASM
29	105-8136	1	Shim Kit
29:1		1	Ring-Snap ■
29:2		1	Shim-Bearing, 2.9Mm ■
29:3		1	Shim-Bearing, 2.8Mm ■
29:4		1	Shim-Bearing, 2.7Mm ■
29:5		1	Shim-Bearing, 2.6Mm ■
29:6		1	Shim-Bearing, 2.5Mm ■
29:7		1	Shim-Bearing, 2.4Mm ■
30	105-8137	1	Seal Kit ●
30:1		1	O Ring-Flange Cap ■
30:2		1	Seal-Oil ■
30:3		2	O Ring-End Cap ■
30:4	237-78	2	O-Ring


● Not illustrated

 ■ Not serviced separately

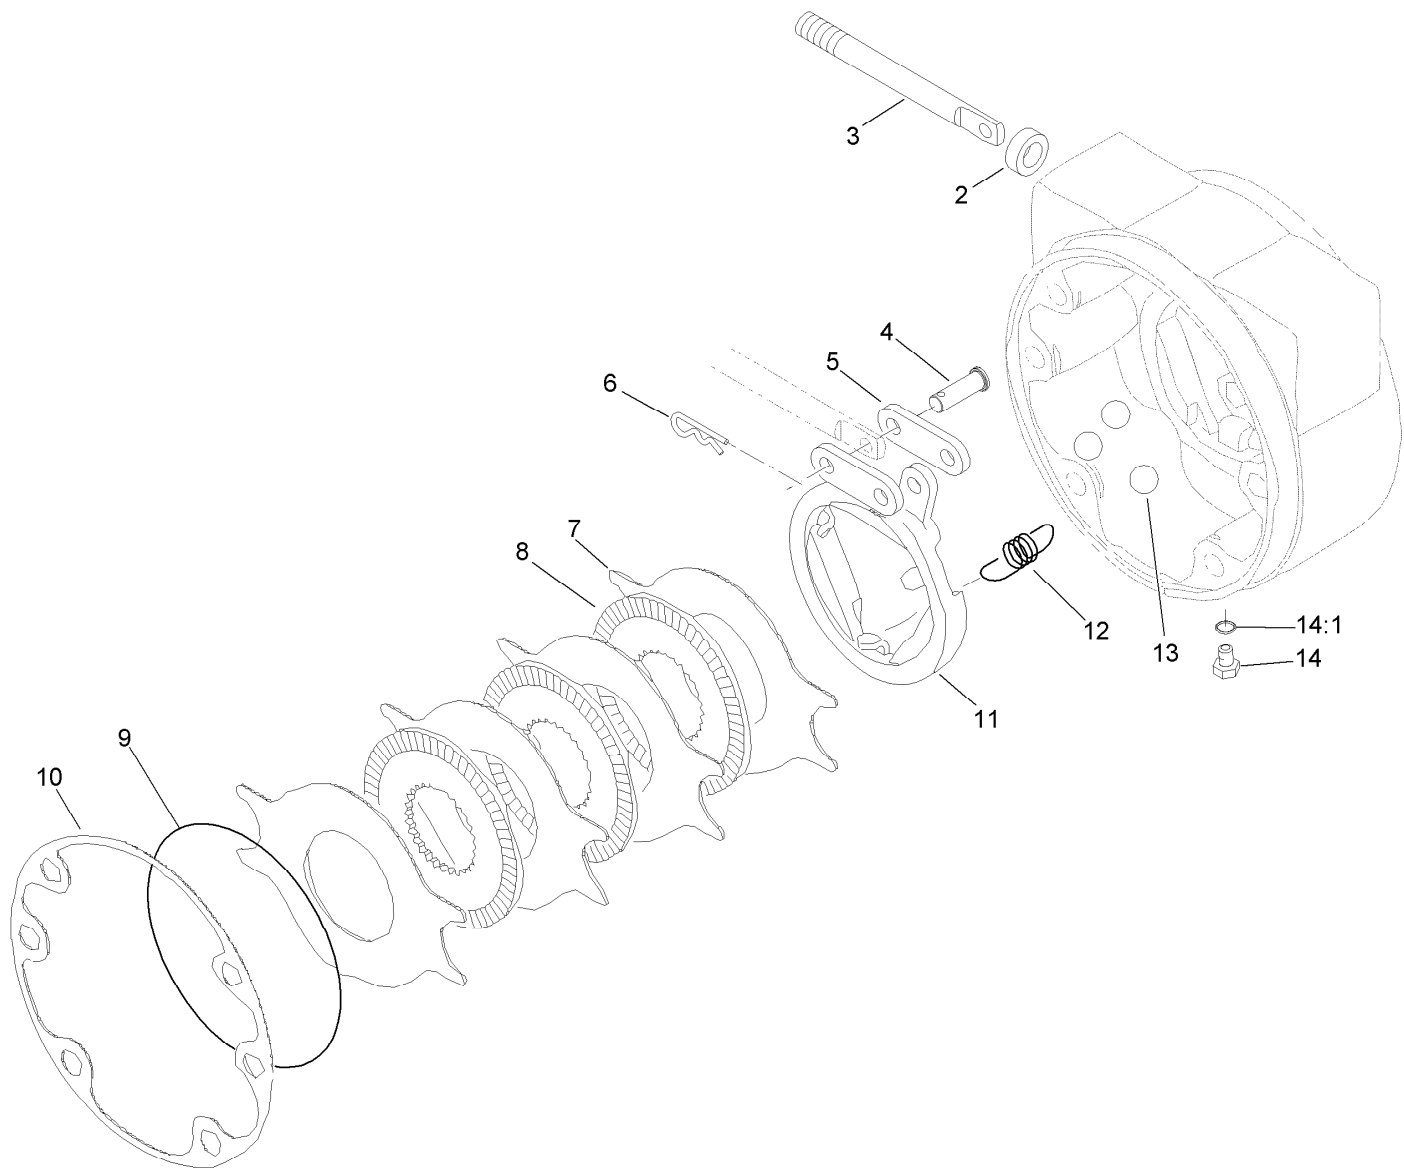


RH Brake Assembly No. 100-3069

Ref.	Part Number	Qty.	Description
2	93-7977	1	Seal
3	93-7978	1	Rod-Pull
4	93-7983	2	Pin-Clevis
5	93-7980	2	Link
6	93-7979	2	Pin-Hitch
7	93-7986	4	Disc-Stationary
8	104-4278	3	Disc-Rotating
9	93-7976	1	Ring-Retaining
10	93-7984	1	Gasket
11	104-4280	1	Actuator-Rotating
12	93-7987	3	Spring-Extension
13	93-7985	3	Ball
14	353-990	2	Plug ASM
14:1	237-78	1	O-Ring

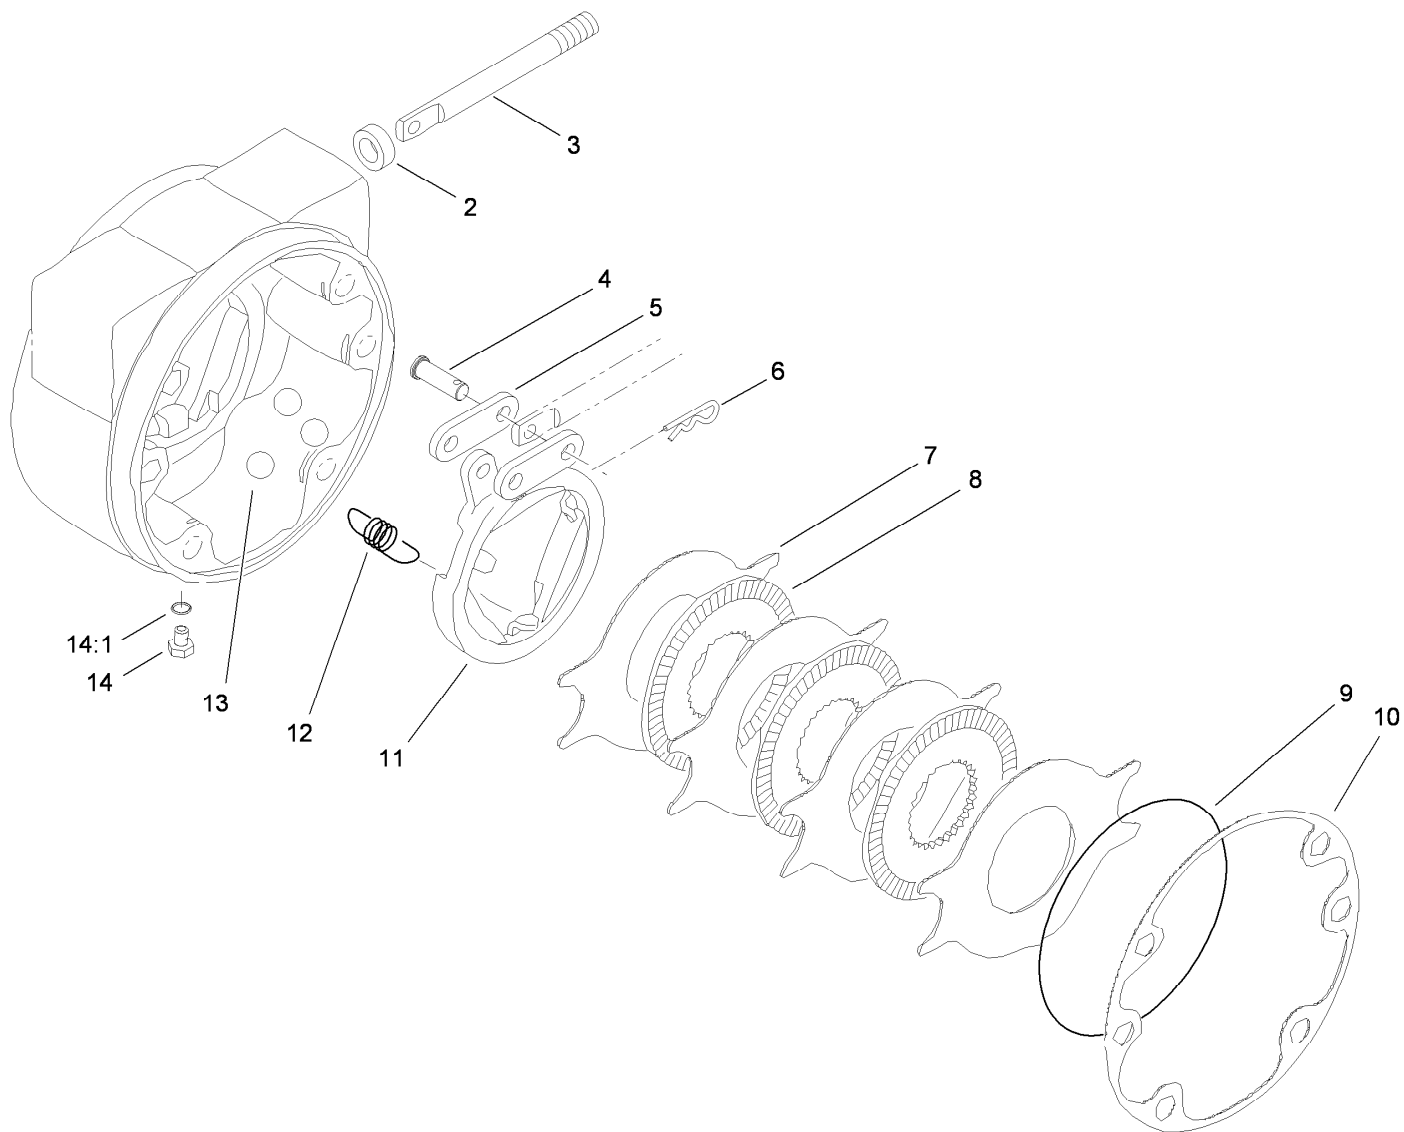 

LH Brake Assembly No. 100-3070

Ref.	Part Number	Qty.	Description
2	93-7977	1	Seal
3	93-7978	1	Rod-Pull
4	93-7983	2	Pin-Clevis
5	93-7980	2	Link
6	93-7979	2	Pin-Hitch
7	93-7986	4	Disc-Stationary
8	104-4278	3	Disc-Rotating
9	93-7976	1	Ring-Retaining
10	93-7984	1	Gasket
11	104-4279	1	Actuator-Rotating
12	93-7987	3	Spring-Extension
13	93-7985	3	Ball
14	353-990	2	Plug ASM
14:1	237-78	1	O-Ring

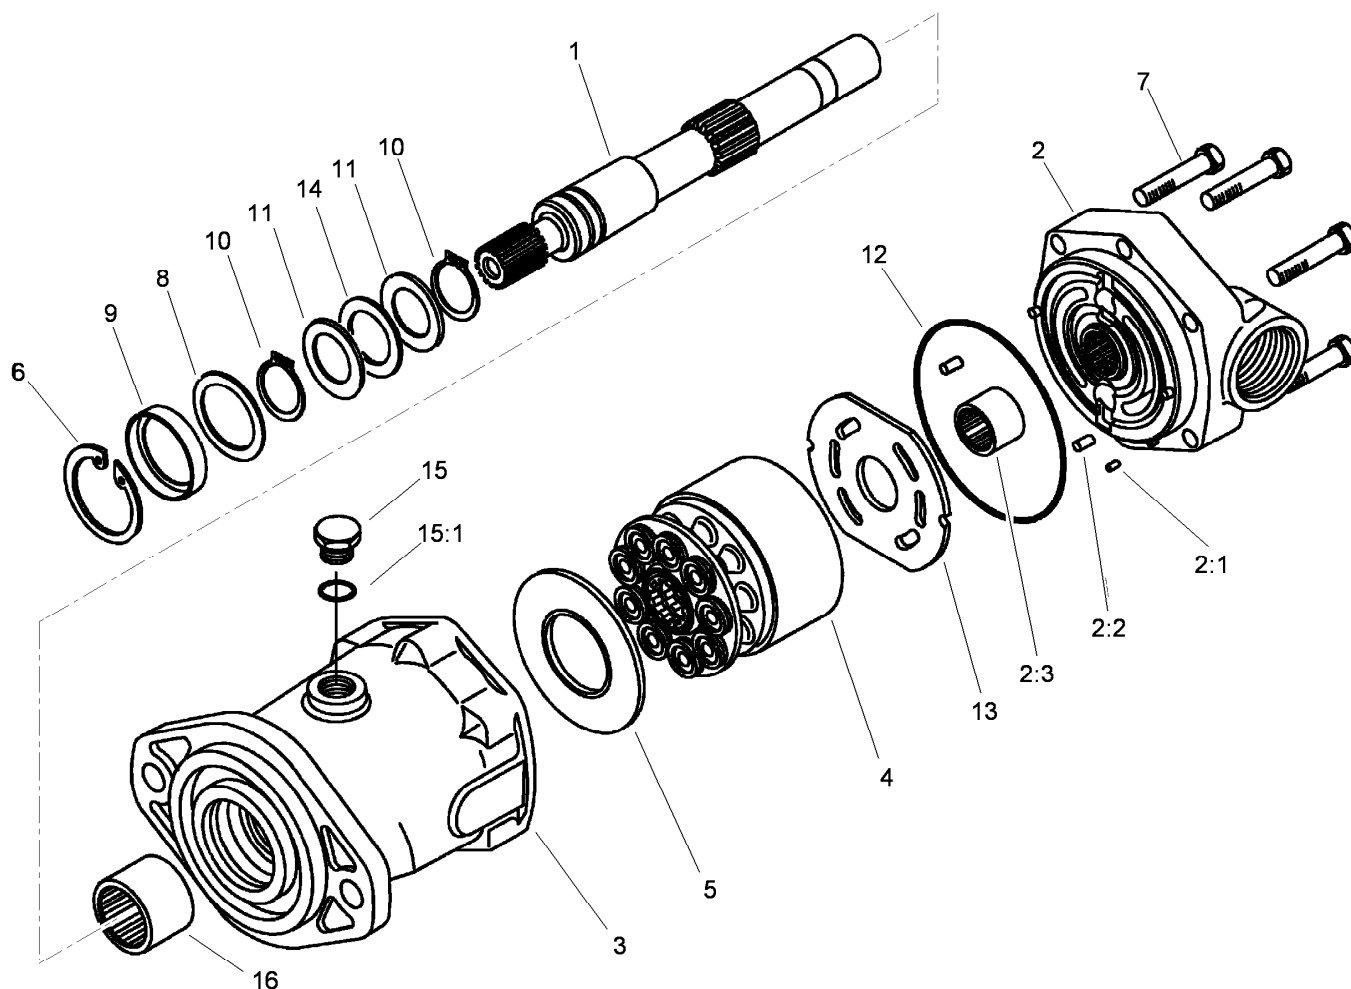 


Piston Motor Assembly No. 105-1218

Ref.	Part Number	Qty.	Description
1	94-3004	1	Shaft-Drive, Splined
2	105-2851	1	Backplate ASM
2:1		3	Pin-Dowel ●
2:2		1	Pin-Dowel ●
2:3		1	Bearing-Needle ●
3		1	Housing ●
4	76-6910	1	Rotating Kit
5	76-6970	1	Insert-Plate, Cam
6	60-6260	1	Ring
7	94-3002	6	Capscrew


Ref.	Part Number	Qty.	Description
8	60-6240	1	Washer
9	105-3331	1	Seal-Shaft
10	76-7000	2	Ring-Retaining
11	76-6950	2	Race-Thrust
12	76-6980	1	O-Ring
13	94-3003	1	Plate-Valve
14	76-6960	1	Bearing-Thrust
15	353-550	1	Plug-HYD, HH
15:1	237-79	1	O-Ring
16	63-4390	1	Bearing-Needle

 ● Not serviced separately

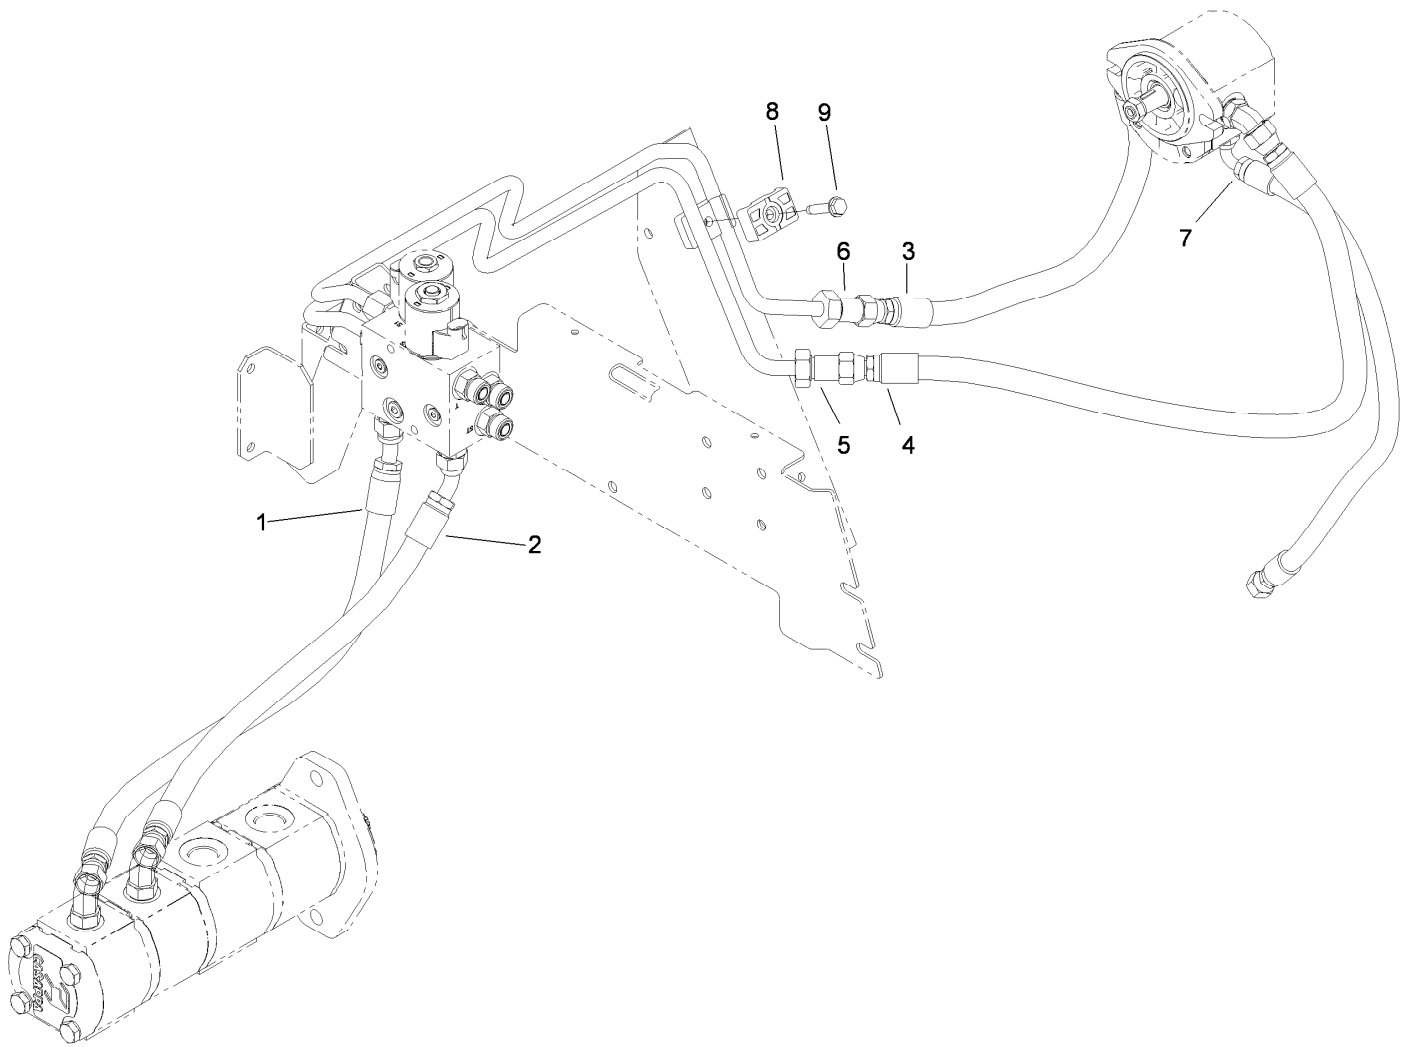

Fan Plumbing Assembly


Ref.	Part Number	Qty.	Description
1	115-4438	1	Hose-HYD
2	115-4439	1	Hose-HYD
3	92-2406	1	Hose-HYD
4	115-9116	1	Hose-HYD
5	115-9122	1	Tube-HYD
6	115-9123	1	Tube-HYD
7	115-4434	1	Hose-HYD
8	56-7976	2	Clamp-Tube
9	32144-57	1	Screw

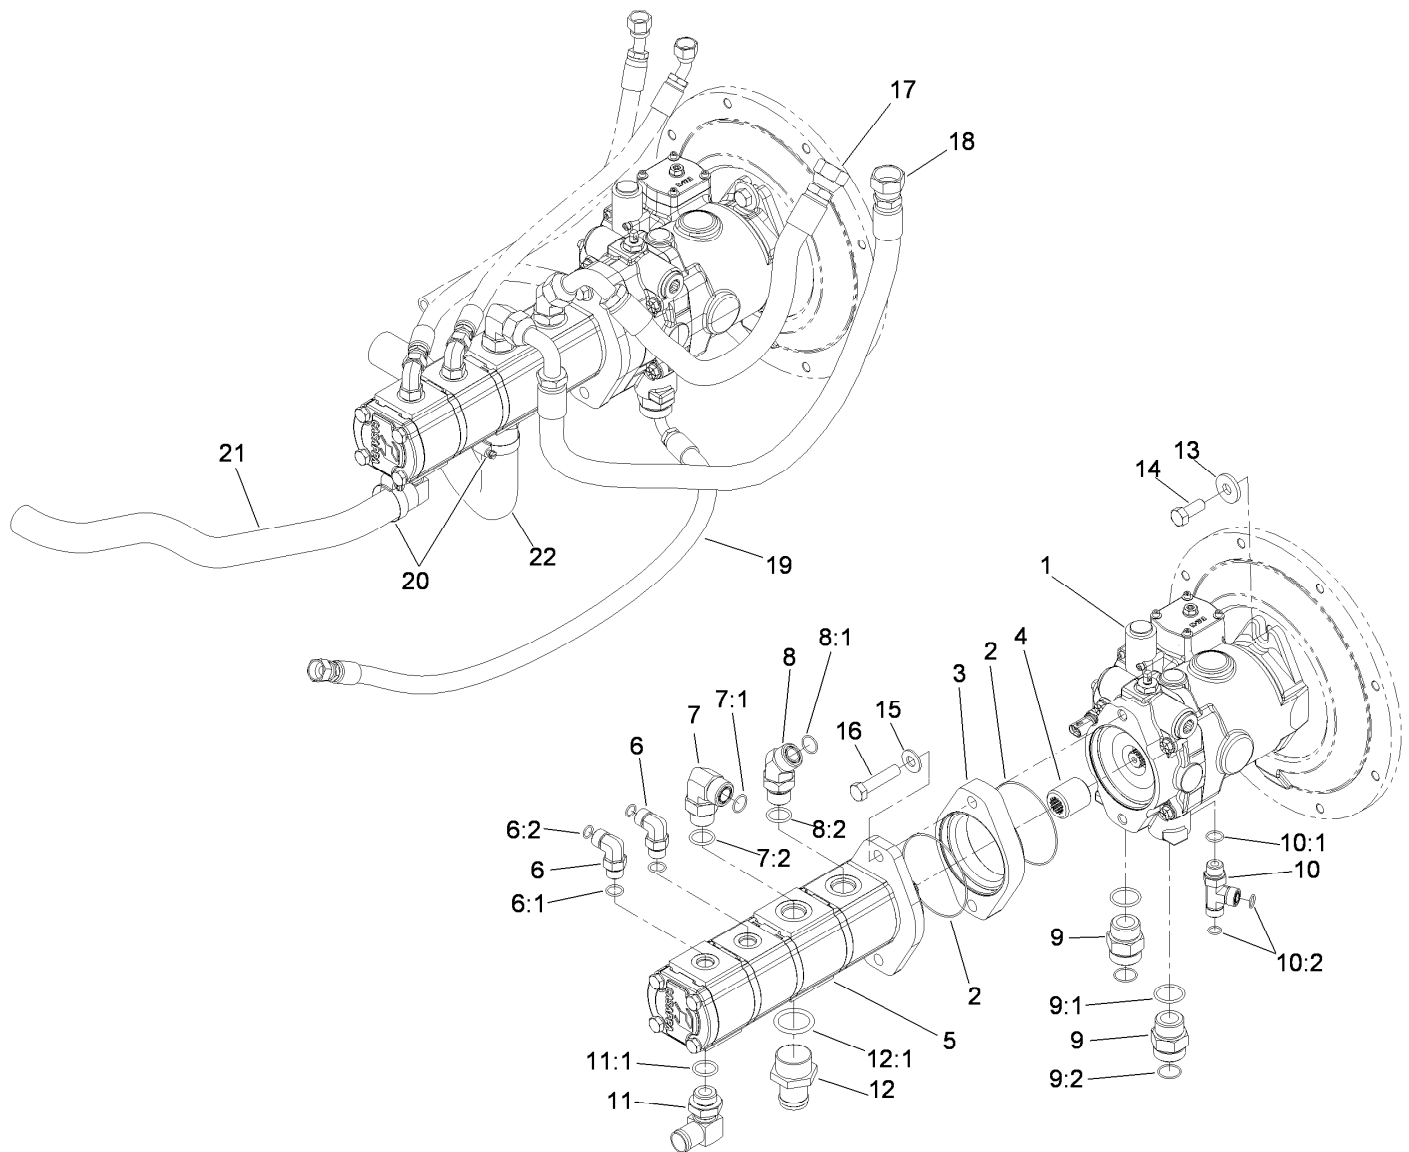 

Hydraulic Pump and Plumbing Assembly

Ref.	Part Number	Qty.	Description
1	114-4188	1	Piston Pump ASM
2	115-3009	2	O-Ring
3	115-3757	1	Spacer-Pump
4	115-3011	1	Coupler-Pump
5	114-4189	1	4-Section Pump ASM
6	340-98	2	Fitting-HYD, 90 DEG
6:1	237-79	1	O-Ring
6:2	237-30	1	O-Ring
7	340-142	1	Fitting-HYD, 90 DEG
7:1	237-58	1	O-Ring
7:2	237-81	1	O-Ring
8	100-5530	1	Fitting-HYD, 45 DEG
8:1	237-58	1	O-Ring
8:2	237-81	1	O-Ring
9	104-3797	2	Fitting-HYD, Straight
9:1	237-146	1	O-Ring
9:2	340-65	1	O-Ring

Ref.	Part Number	Qty.	Description
10	340-109	1	Fitting-HYD, Tee
10:1	237-79	1	O-Ring
10:2	237-30	2	O-Ring
11	100-4202	1	Fitting-HYD, 90 DEG
11:1	237-81	1	O-Ring
12	104-5480	1	Fitting-Hose, Straight
12:1	237-123	1	O-Ring
13	110-6147	2	Washer-Flat
14	325-5	2	Screw-HH
15	87-7270	2	Washer-Thrust
16	115-8488	2	Screw-HH
17	117-4762	1	Hose-HYD
18	115-4384	1	Hose-HYD
19	120-1688	1	Hose ASM
20	2412-111	2	Clamp
21	115-4447	1	Hose-Suction
22	119-3902	1	Hose-Suction

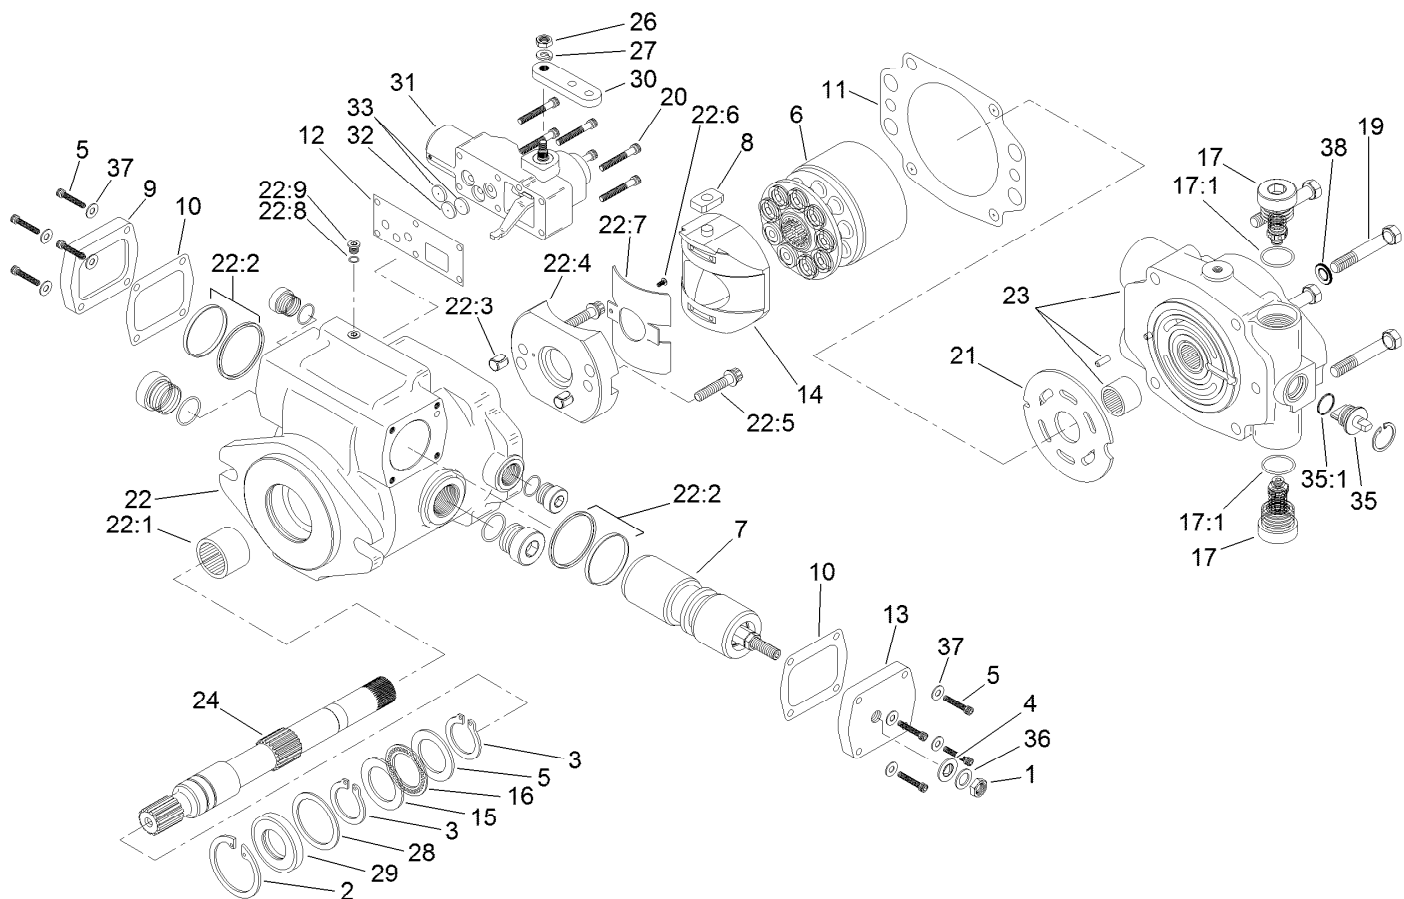 


Piston Pump Assembly No. 114-4188

Ref.	Part Number	Qty.	Description
1	3220-3	1	Nut-HJ
2	60-6260	1	Ring
3	76-7000	2	Ring-Retaining
4	94-3027	1	Washer-Seal
5	93-6337	8	Screw
6	105-9851	1	Rotating Kit
7	105-4572	1	Servo Piston ASM
8	94-3032	1	Follower-Piston
9	94-3033	1	Plate-Cover
10	93-6339	2	Gasket
11	105-2900	1	Gasket-Housing
12	105-2901	1	Gasket-Housing, Control
13	105-9853	1	Plate-Cover
14	94-3026	1	Camplate ASM
15	76-6950	2	Race-Thrust
16	76-6960	1	Bearing-Thrust
17	105-2857	2	Valve-Relief
17:1		1	O-Ring ●

Ref.	Part Number	Qty.	Description
19	323-45	4	Screw-HH
20	93-6324	6	Screw
21	105-9854	1	Plate-Valve
22	105-9855	1	Housing ASM
22:1		1	Bearing ●
22:2		2	Seal ASM ●
22:3		2	Dowel-Bushing ●
22:4		1	Cradle ASM ●
22:5		2	Screw ●
22:6		1	Screw ●
22:7		1	Bushing ●
22:8		1	O-Ring ●
22:9		1	Plug ●
23	115-4445	1	Endcover Sub ASM
24	115-3008	1	Shaft-Drive
26	93-6327	1	Nut
27	3253-3	1	Washer-Lock
28	60-6240	1	Washer

 ● Not serviced separately

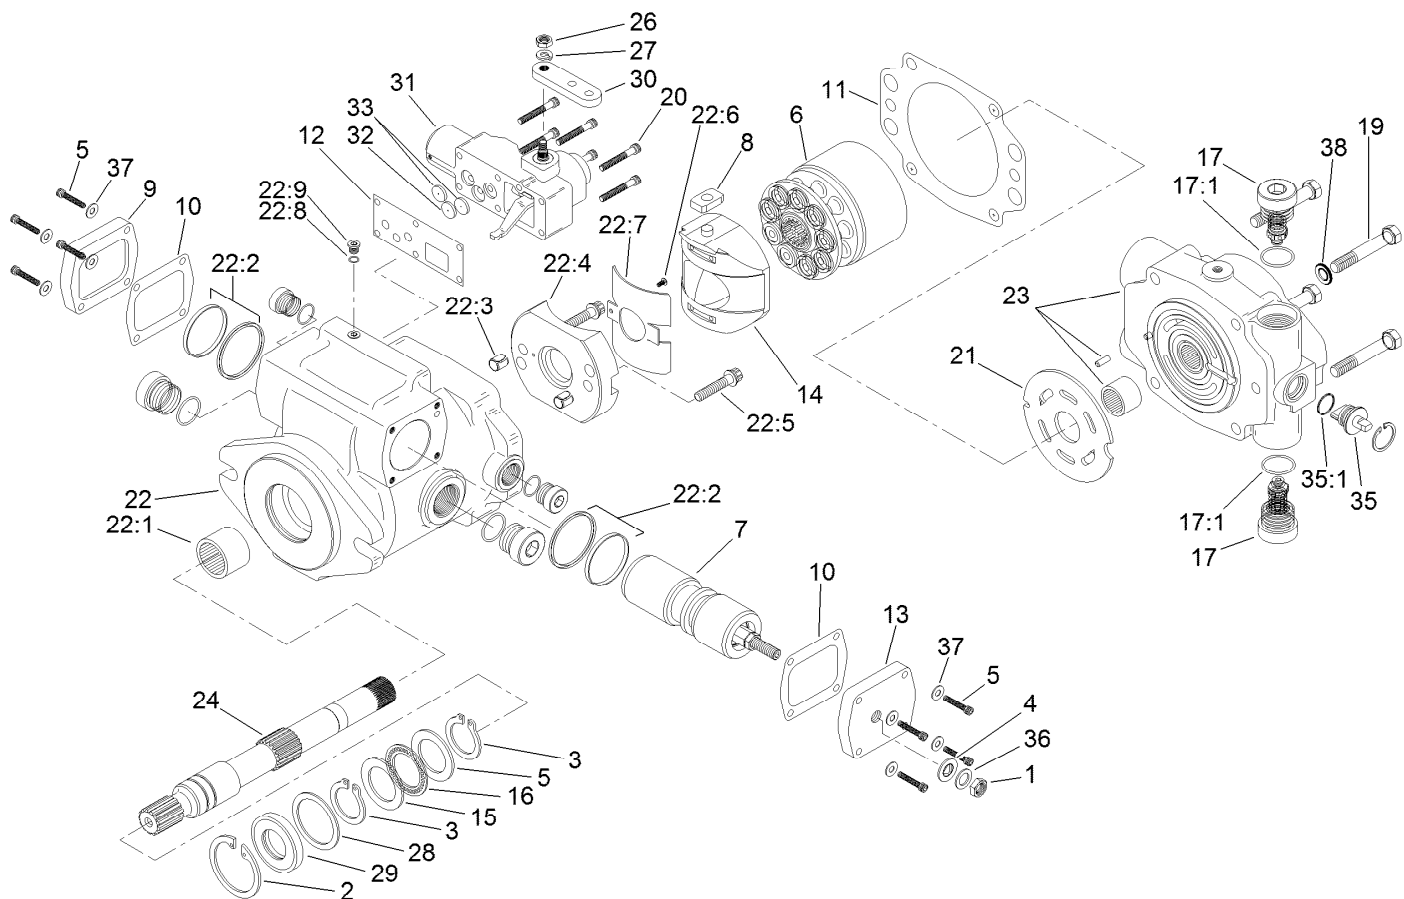


Piston Pump Assembly No. 114-4188 (continued)

Ref.	Part Number	Qty.	Description
29	105-3331	1	Seal-Shaft
30	110-0036	1	Arm-Control
31	115-4446	1	Manual Servo Control ASM
32	105-2909	1	Orifice-Control, .036 Dia
33	94-3041	2	Orifice-Control (.028 Dia)

Ref.	Part Number	Qty.	Description
35	105-2864	1	Valve-Bypass
35:1		1	O-Ring ●
36	94-3030	1	Washer
37	93-6336	8	Washer
38	105-9762	4	Washer

 ● Not serviced separately

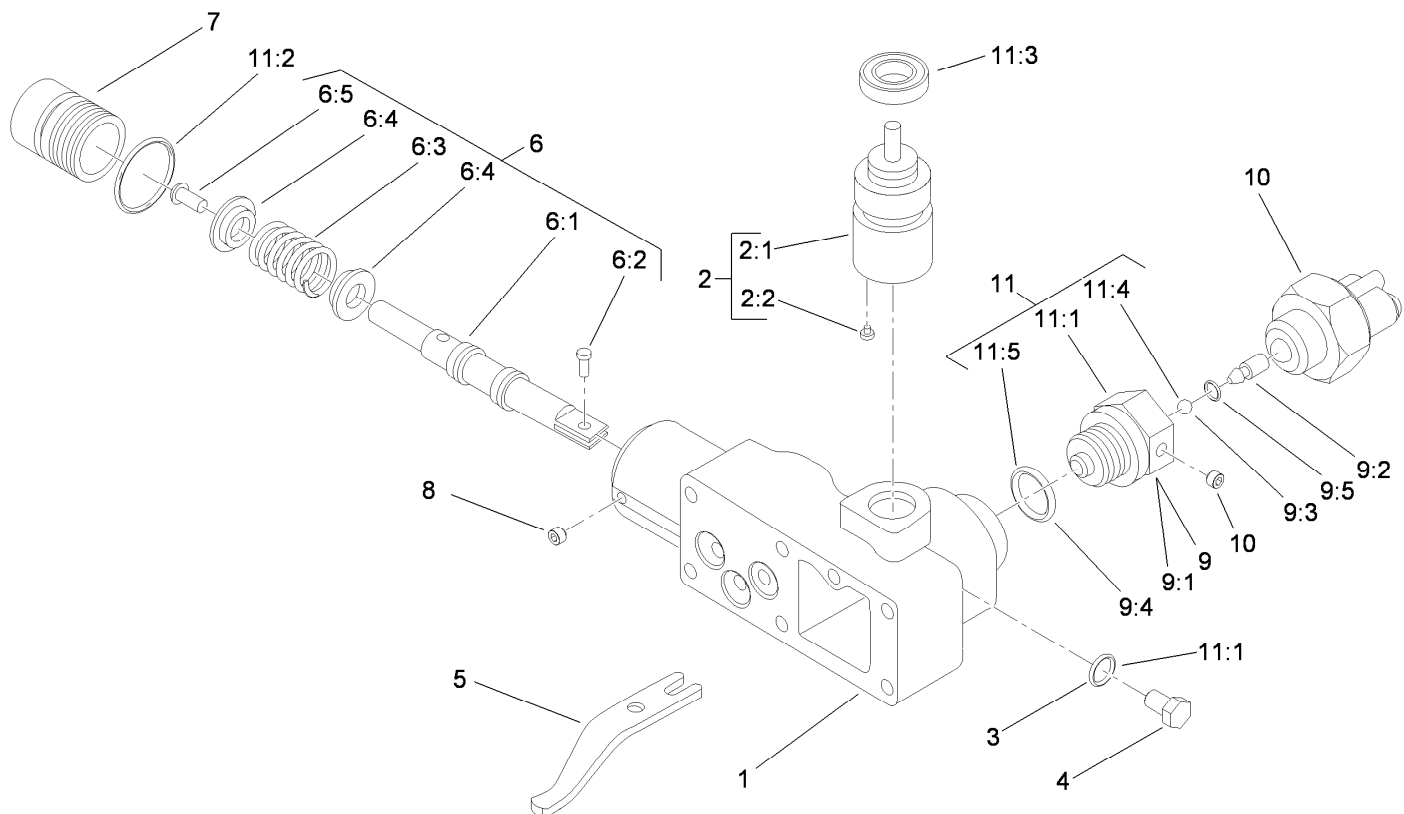


Control Assembly No. 115-4446

Ref.	Part Number	Qty.	Description
1		1	Housing-Control ●
2	108-7099	1	Input Control Shaft ASM
2:1		1	Shaft ●
2:2		1	Pin ●
3		1	O-Ring ●
4		1	Plug ●
5		1	Link-Feedback ●
6	108-7098	1	Valve Spool ASM
6:1		1	Valve-Spool ●
6:2		1	Pin-Dowel ●
6:3		1	Spring ●
6:4		2	Retainer ●
6:5		1	Screw ●
7		1	Plug ●

Ref.	Part Number	Qty.	Description
8		2	Screw-Set ●
9	108-8003	1	Adaptor ASM
9:1		1	Adaptor-Lockout, Neutral ●
9:2		1	Pin ●
9:3		1	Ball ●
9:4		1	O-Ring ●
9:5		1	O-Ring ●
10	115-3795	1	Switch-Neutral
11	94-3044	1	Seal Kit
11:1	117-8979	1	Seal-Shaft
11:2	105-2901	1	Gasket-Housing, Control
11:3		1	O-Ring ●
11:4		1	O-Ring ●
11:5		1	Seal-Wiper ●

 
● Not serviced separately

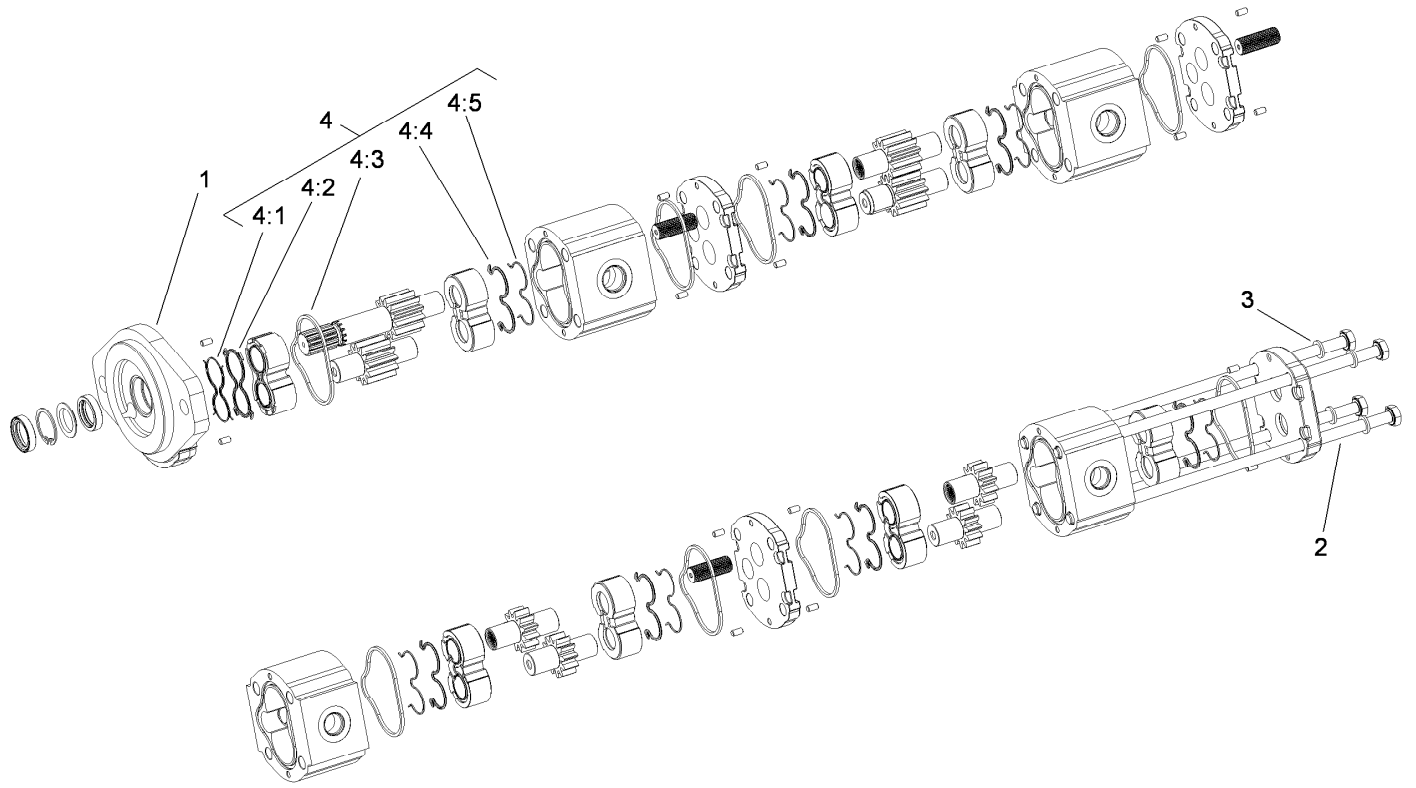

Four Section Pump Assembly No. 114-4189


Ref.	Part Number	Qty.	Description
1	115-3774	1	Cover-Front
2	115-4444	4	Bolt
3	115-9138	4	Washer
4	115-3776	1	Seal Kit
4:1		1	Seal ●
4:2		1	Seal ●
4:3		8	Seal ●
4:4		7	Seal ●
4:5		7	Seal ●

 ● Not serviced separately

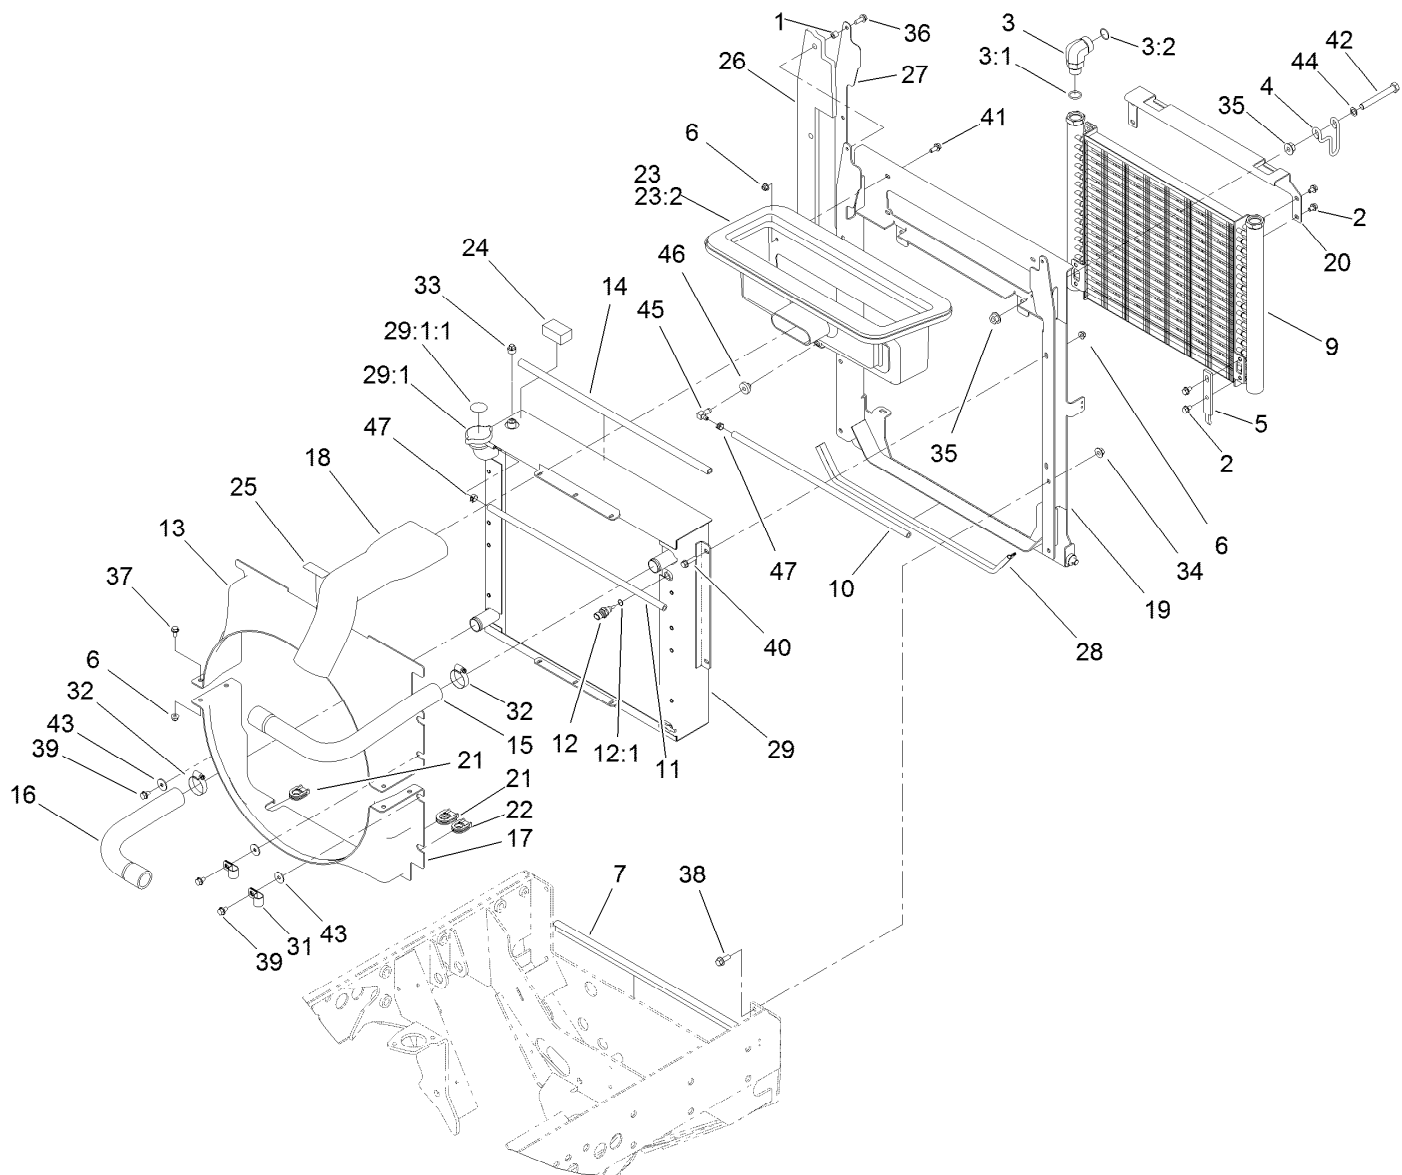

Radiator Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	1-603903	6	Spacer	20	114-4193	1	Bracket-Oil Cooler,Top
2	100-1719	8	Screw-Flange	21	115-3763	2	Grommet (.800 Id)
3	104-3796	2	Fitting-HYD, 90 DEG	22	115-3764	1	Grommet (.680 Id)
3:1	237-81	1	O-Ring	23	115-4363	1	Plenum ASM
3:2	340-65	1	O-Ring	23:2	115-4393	1	Seal-Plenum
4	104-5429	2	Clamp-Form, Wire	24	115-9133	2	Seal-Foam
5	104-5460-03	2	Plate-Mount, Oil Cooler	25	117-4766	1	Decal-Warning, Fan
6	104-8300	12	Nut-Flange, NI	26	117-4780	2	Seal-Foam, Hood
7	105-9858	1	Seal-Bulb	27	117-4781-03	2	Bracket-Seal Hood
9	110-0485	1	Cooler-Oil	28	117-4782	1	Seal-Bulb
10	110-3258	1	Hose-Fuel	29	119-3871	1	Radiator
11	110-6184	1	Hose-Fuel	29:1	115-7766	1	Cap-Radiator
12	110-8829	1	Sender-Temperature	29:1:1	106-6755	1	Decal-Cap, Radiator
12:1	237-42	1	O-Ring	31	2412-81	2	Clamp-R
13	114-3816	1	Shroud-Radiator, Upper	32	2412-111	4	Clamp
14	114-3828	1	Seal-Bulb	33	281-13	1	Plug-Pipe
15	114-3831	1	Hose-Radiator, Upper	34	32128-43	4	Nut-Flange
16	114-3832	1	Hose-Radiator, Lower	35	32128-49	4	Nut-HHF
17	114-3834	1	Shroud-Radiator, Lower	36	32144-41	2	Screw-Taptite
18	114-4152	1	Hose-Air Cleaner	37	3234-7	4	Screw-HHF
19	114-4153-03	1	Radiator Mount ASM	38	3234-11	4	Screw-HHF

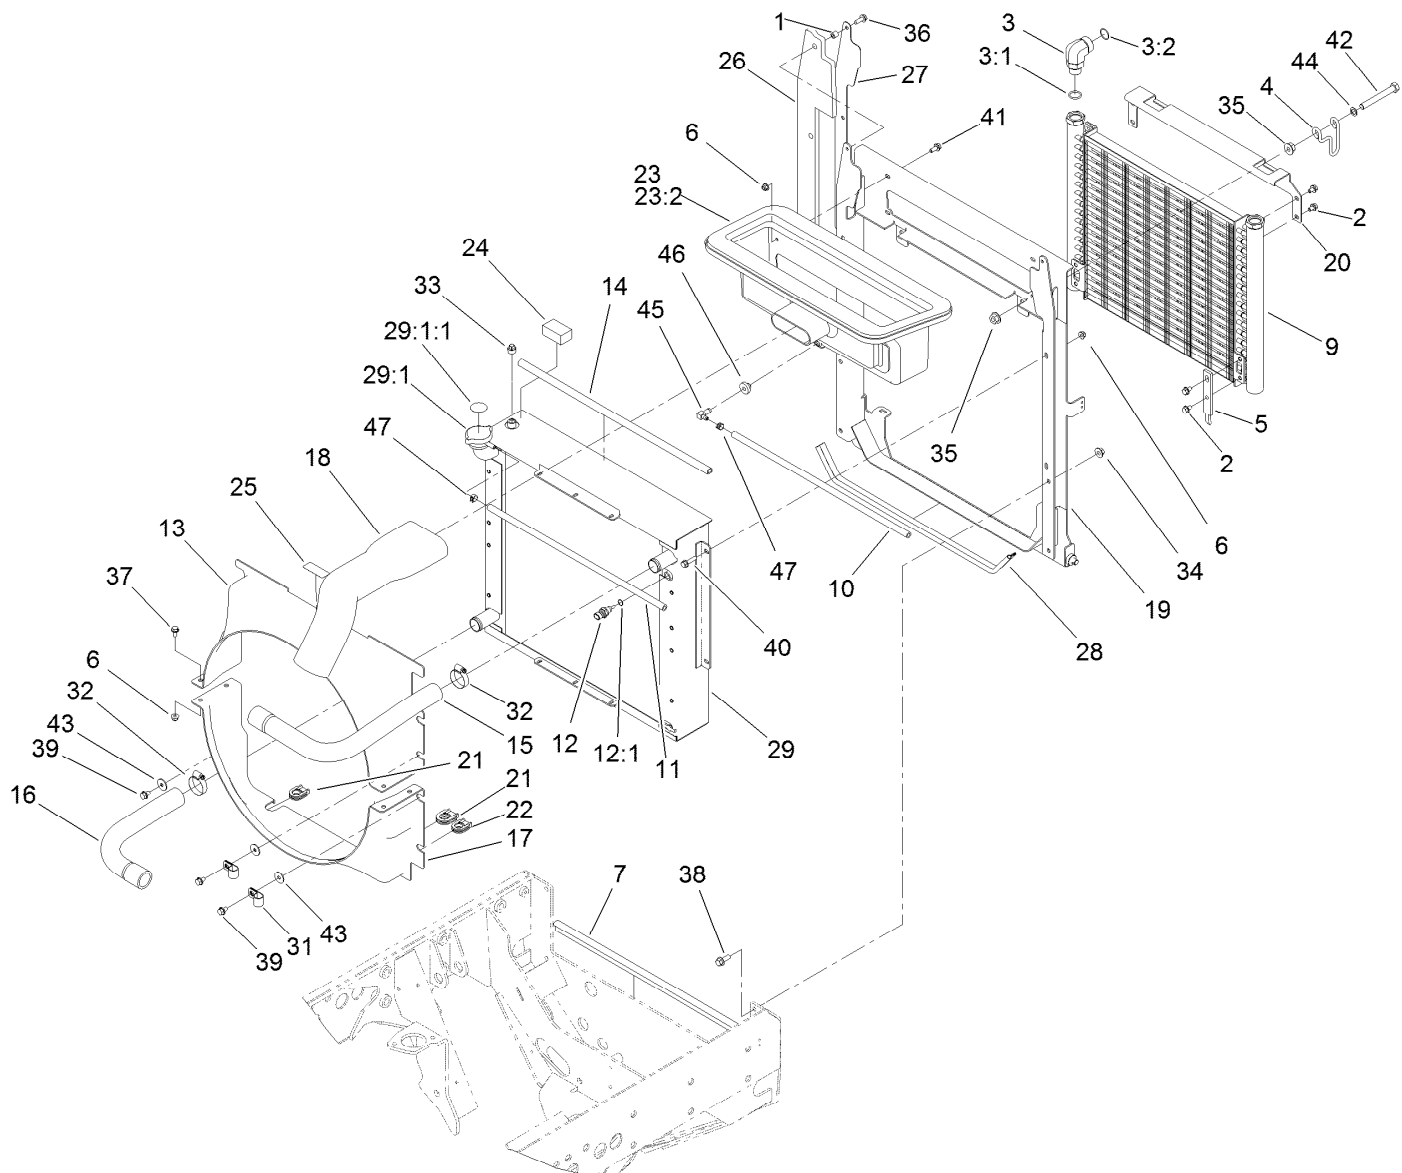 

Radiator Assembly (continued)

Ref.	Part Number	Qty.	Description
39	3234-30	8	Screw-HHF
40	3234-36	4	Screw-HHF
41	3234-47	4	Screw-HHF
42	325-17	2	Screw-HH
43	3256-82	8	Washer-Flat


Ref.	Part Number	Qty.	Description
44	41-8440	2	Washer
45	46-6550	1	Fitting-Elbow, 90 DEG
46	46-6560	1	Bushing
47	92-2379	2	Clamp-Hose

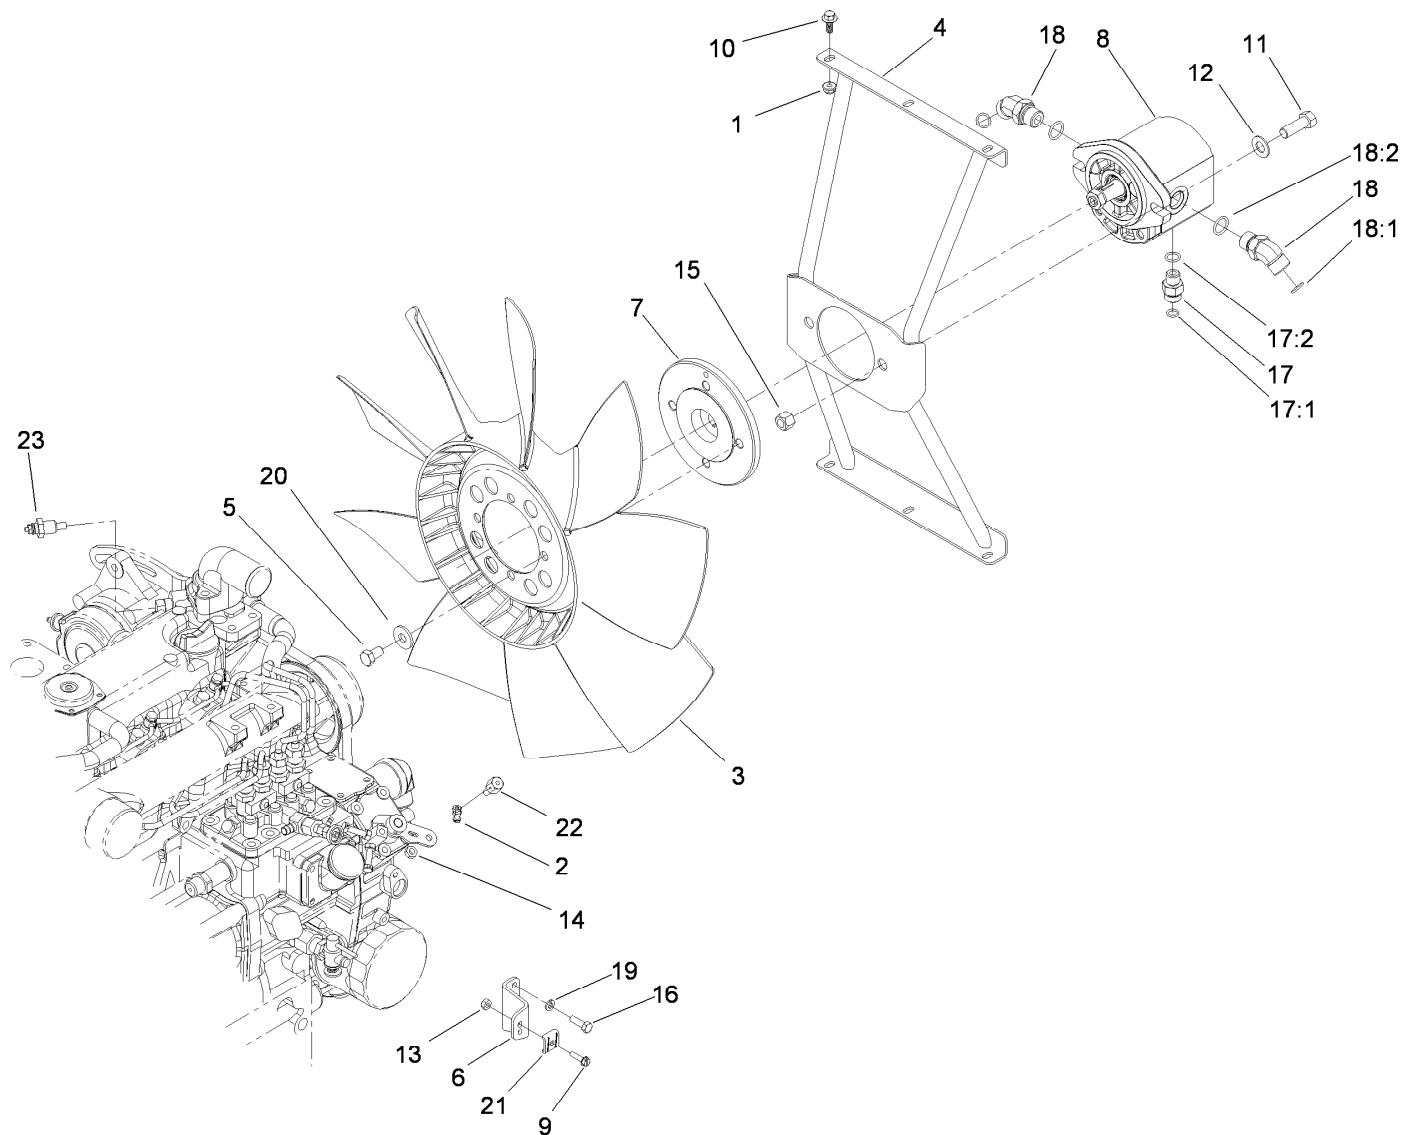 

Fan and Motor Assembly

Ref.	Part Number	Qty.	Description
1	104-7201	6	Nut-HF
2	112-9919	1	Stop-Cable, Throttle
3	114-3825	1	Fan
4	114-9764-03	1	Bracket-Motor, Fan
5	115-8486	4	Screw-HH
6	115-9114-03	1	Support-Cable, Throttle
7	117-2364	1	Hub-Fan
8	117-4769	1	HYD Motor ASM
9	32105-13	1	Screw-HWH
10	99-6810	6	Screw-HHF
11	324-5	2	Screw-HH
12	3256-25	2	Washer-Flat
13	3296-2	1	Nut-Lock, NI
14	3296-13	1	Nut-Lock, NI


Ref.	Part Number	Qty.	Description
15	3296-48	2	Nut-Lock, NI
16	33113-020	2	Screw-HH
17	340-2	1	Fitting-HYD, Straight
17:1	237-22	1	O-Ring
17:2	237-42	1	O-Ring
18	340-101	2	Fitting-HYD, 45 DEG
18:1	237-30	1	O-Ring
18:2	237-79	1	O-Ring
19	43-5930	2	Washer-Lock, Spring
20	80-6990	4	Washer-Hardened
21	81-1690	1	Clamp-Cable
22	93-0021	1	Swivel-Cable, Throttle
23	98-9346	1	Sender-Temperature

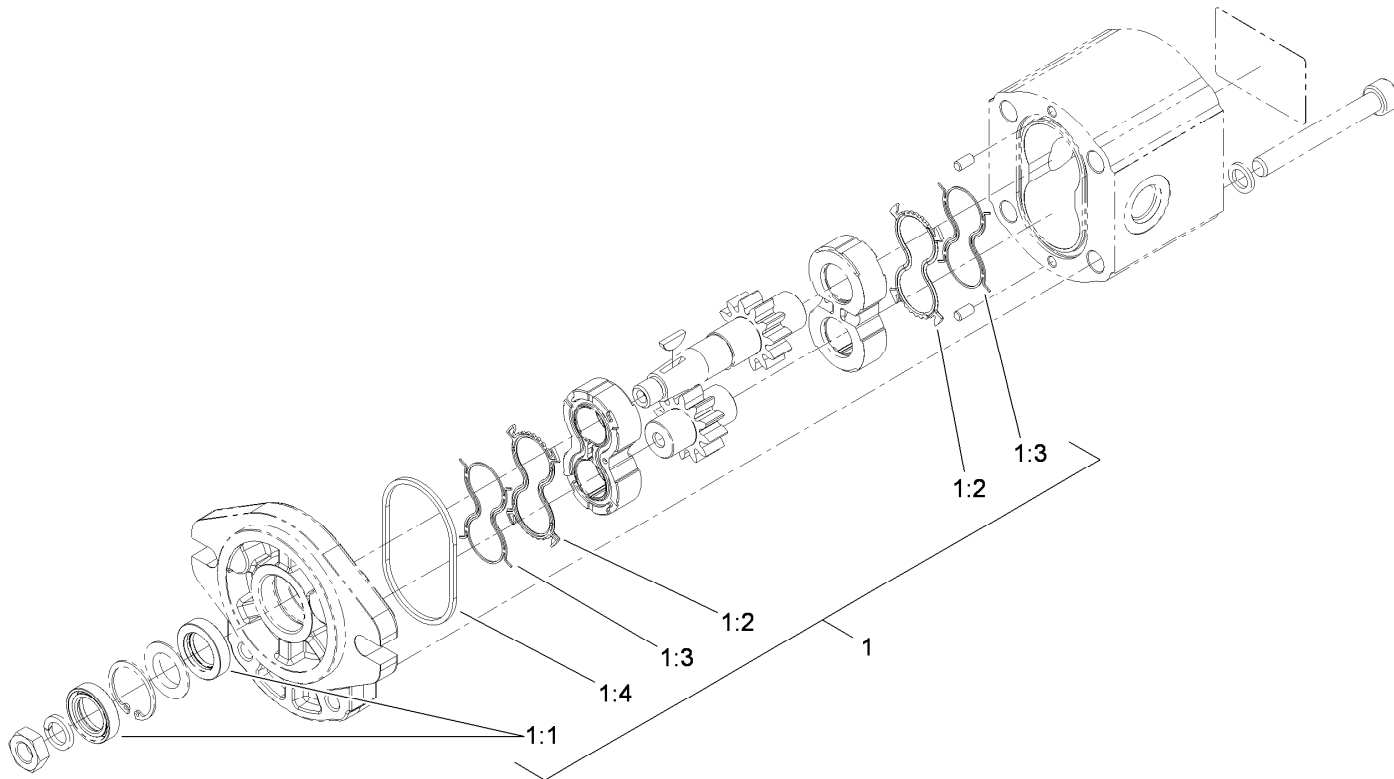 

Hydraulic Motor Assembly No. 117-4769

Ref.	Part Number	Qty.	Description
1	115-4110	1	Seal Kit
1:1		2	Seal-Shaft ●
1:2		2	Seal-Plate, Balancing ●
1:3		2	Seal-Anti Extrusion ●
1:4		2	O Ring-Housing ●

 
● Not serviced separately

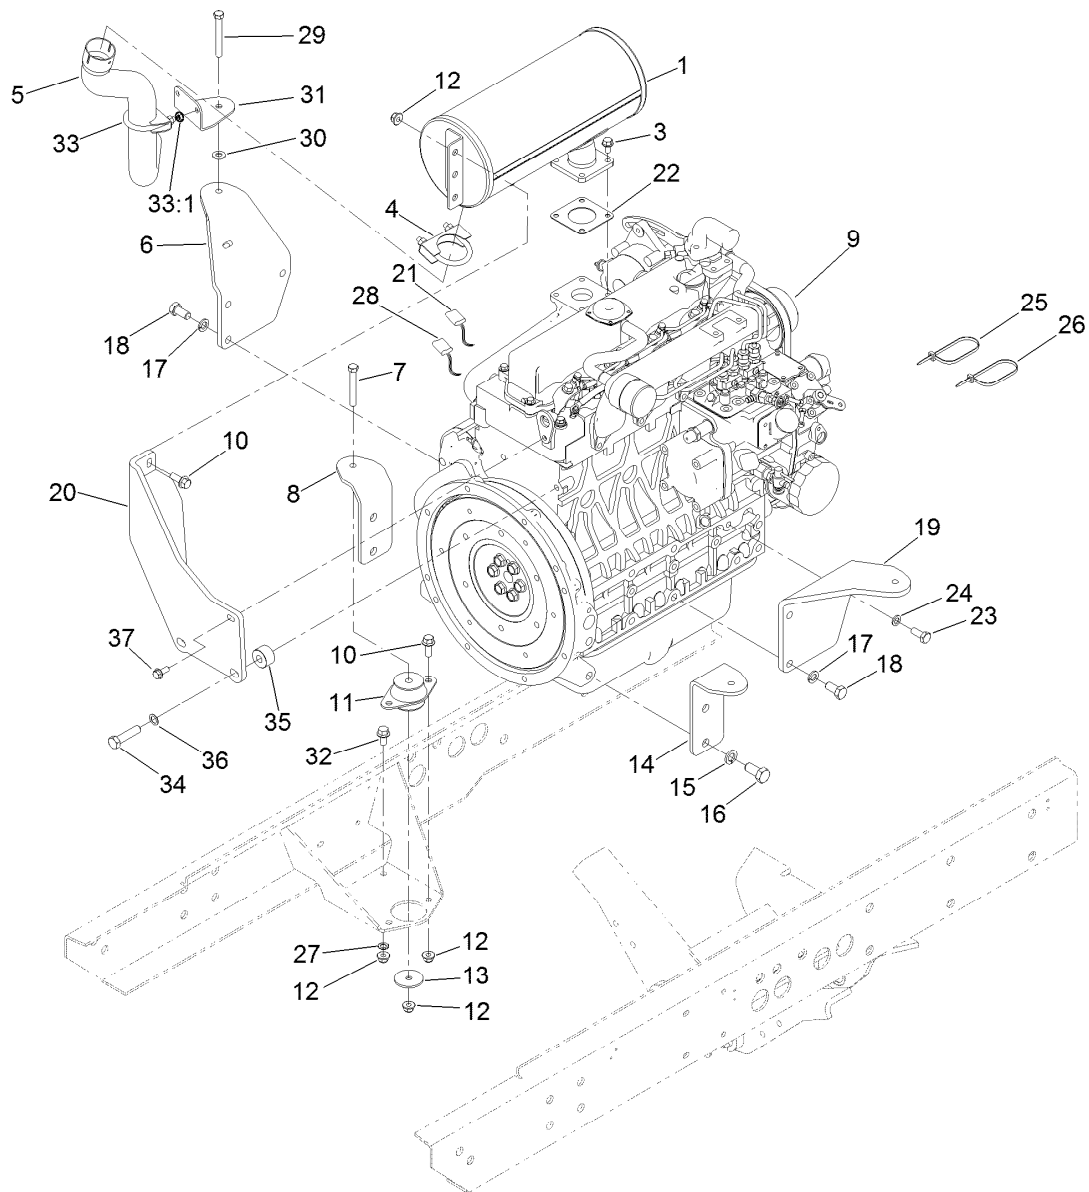

Engine Mounting and Exhaust Assembly

Ref.	Part Number	Qty.	Description
1	119-3860	1	Muffler
3	33104-016	4	Screw-HHF
4	18-2130	1	Clamp
5	119-3880	1	Tailpipe
6	114-3807-03	1	Mount-Engine, RH
7	323-13	3	Screw-HH
8	114-4170-03	1	Mount-Engine, Front RH
9	125-2179	1	Engine-Kubota, V2403Dt
10	3234-11	10	Screw-HHF
11	53-9682	4	Mount-Engine
12	104-8301	15	Nut-Flange, NI
13	63-7400	4	Washer-Rebound
14	114-4169-03	1	Mount-Engine, Front, LH
15	43-5950	4	Washer-Lock, Spring
16	43-3210	4	Screw-HH
17	48-8070	5	Washer-Lock
18	42-9250	5	Bolt
19	114-3817-03	1	Mount-Engine, LH
20	120-1697-03	1	Muffler Bracket ASM


Ref.	Part Number	Qty.	Description
21	117-2370	1	Harness-Ground
22	100-9333	1	Gasket-Muffler
23	43-0090	1	Screw-HH
24	48-9590	1	Washer-Lock
25	3290-378	1	Tie-Cable
26	3290-379	2	Tie-Cable
27	3255-9	1	Washer-Lock
28	117-2374	1	Harness-Wire, Alternator
29	323-14	1	Screw-HH
30	3256-24	1	Washer-Flat
31	120-1692-03	1	Bracket-Muffler
32	3234-1	1	Screw-HHF
33	2112-6	1	Clamp-Muffler
33:1	3218-2	2	Nut-Jam
34	120-1698	2	Screw-HH
35	120-1699	2	Spacer
36	112-6957	2	Washer-Hardened
37	98-7977	1	Screw-HHF

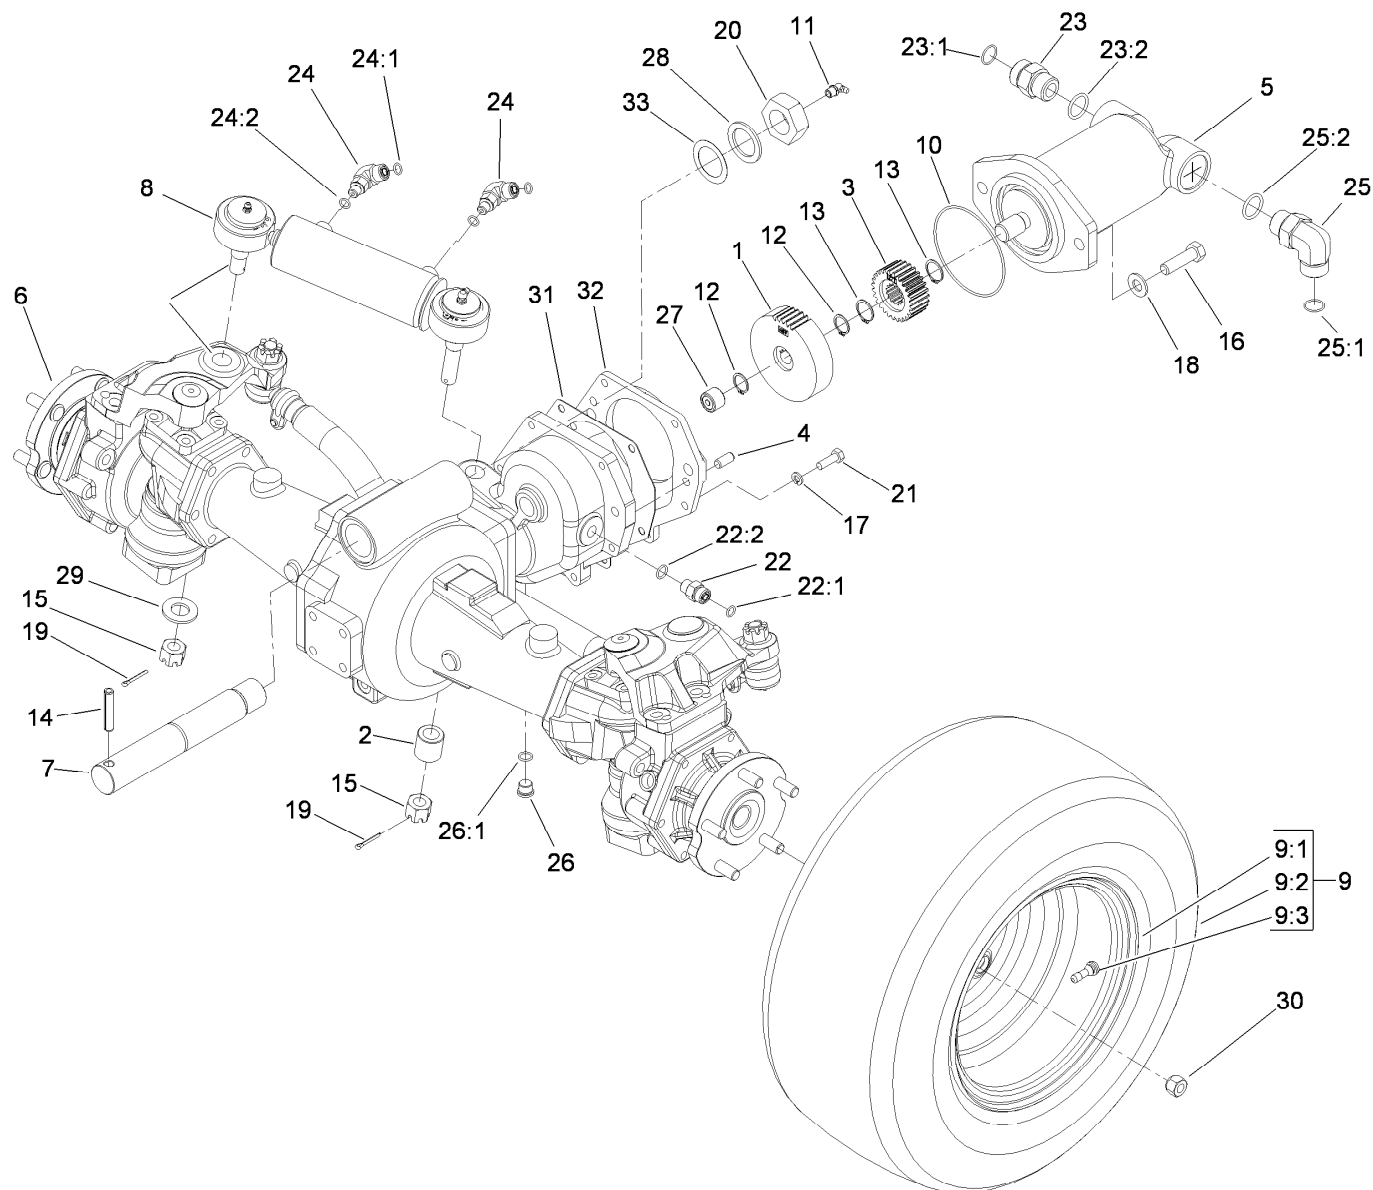 

Rear Axle Assembly

Ref.	Part Number	Qty.	Description
1	104-5664	1	Gear-44T
2	100-3796	1	Spacer-Joint, Ball
3	104-5663	1	Pinion-28T
4	104-2353	2	Pin-Dowel
5	105-1219	1	HYD Motor ASM
6	110-4750	1	Drive Axle ASM
7	115-9142	1	Pin-Rear Axle
8	119-3903	1	Steer Cylinder ASM
9	120-1666	2	Tire ASM
9:1	115-1573	1	Rim
9:2	117-5125	1	Tire
9:3	232-27	1	Stem-Valve
10	237-166	1	O-Ring
11	302-33	1	Fitting-Grease
12	32120-15	2	Ring-Snap, EXT
13	32120-76	2	Ring-Snap, EXT
14	32121-110	1	Pin-Roll, Slotted
15	32136-14	2	Nut-SHH
16	325-7	2	Screw-HH
17	3253-4	6	Washer-Lock
18	3256-26	2	Washer-Flat


Ref.	Part Number	Qty.	Description
19	3272-11	2	Pin-Cotter
20	3296-68	1	Nut-Lock, NI
21	33114-025	6	Screw-HH
22	340-2	1	Fitting-HYD, Straight
22:1	237-22	1	O-Ring
22:2	237-42	1	O-Ring
23	340-9	1	Fitting-HYD, Straight
23:1	237-58	1	O-Ring
23:2	237-81	1	O-Ring
24	340-97	2	Fitting-HYD, 90 DEG
24:1	237-22	1	O-Ring
24:2	237-78	1	O-Ring
25	340-142	1	Fitting-HYD, 90 DEG
25:1	237-58	1	O-Ring
25:2	237-81	1	O-Ring
26	353-989	1	Plug-Hex, Hollow
26:1	237-42	1	O-Ring
27	74-5700	1	Bearing-Needle, Roller
28	92-1765	1	Washer-Thrust
29	92-5836	1	Washer
30	93-5268	10	Nut-Lug

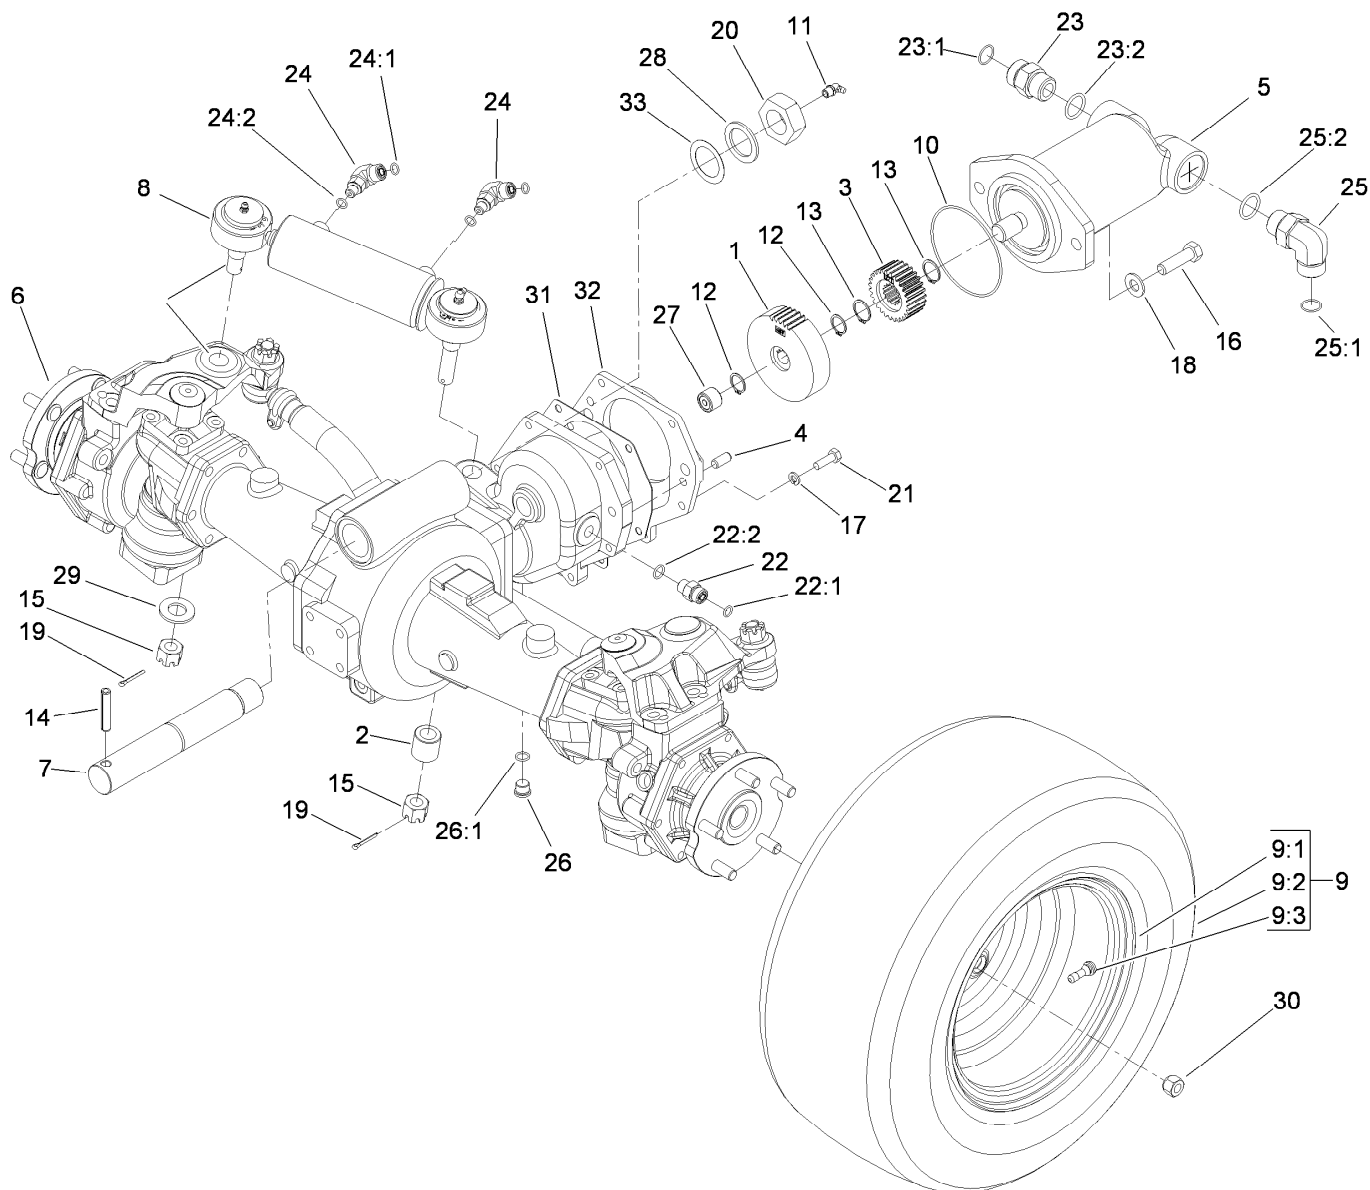 

Rear Axle Assembly (continued)

Ref.	Part Number	Qty.	Description
31	106-1140	1	Gasket

Ref.	Part Number	Qty.	Description
32	95-7541	1	Plate-Cover
33	98-3867	2	Washer-Thrust

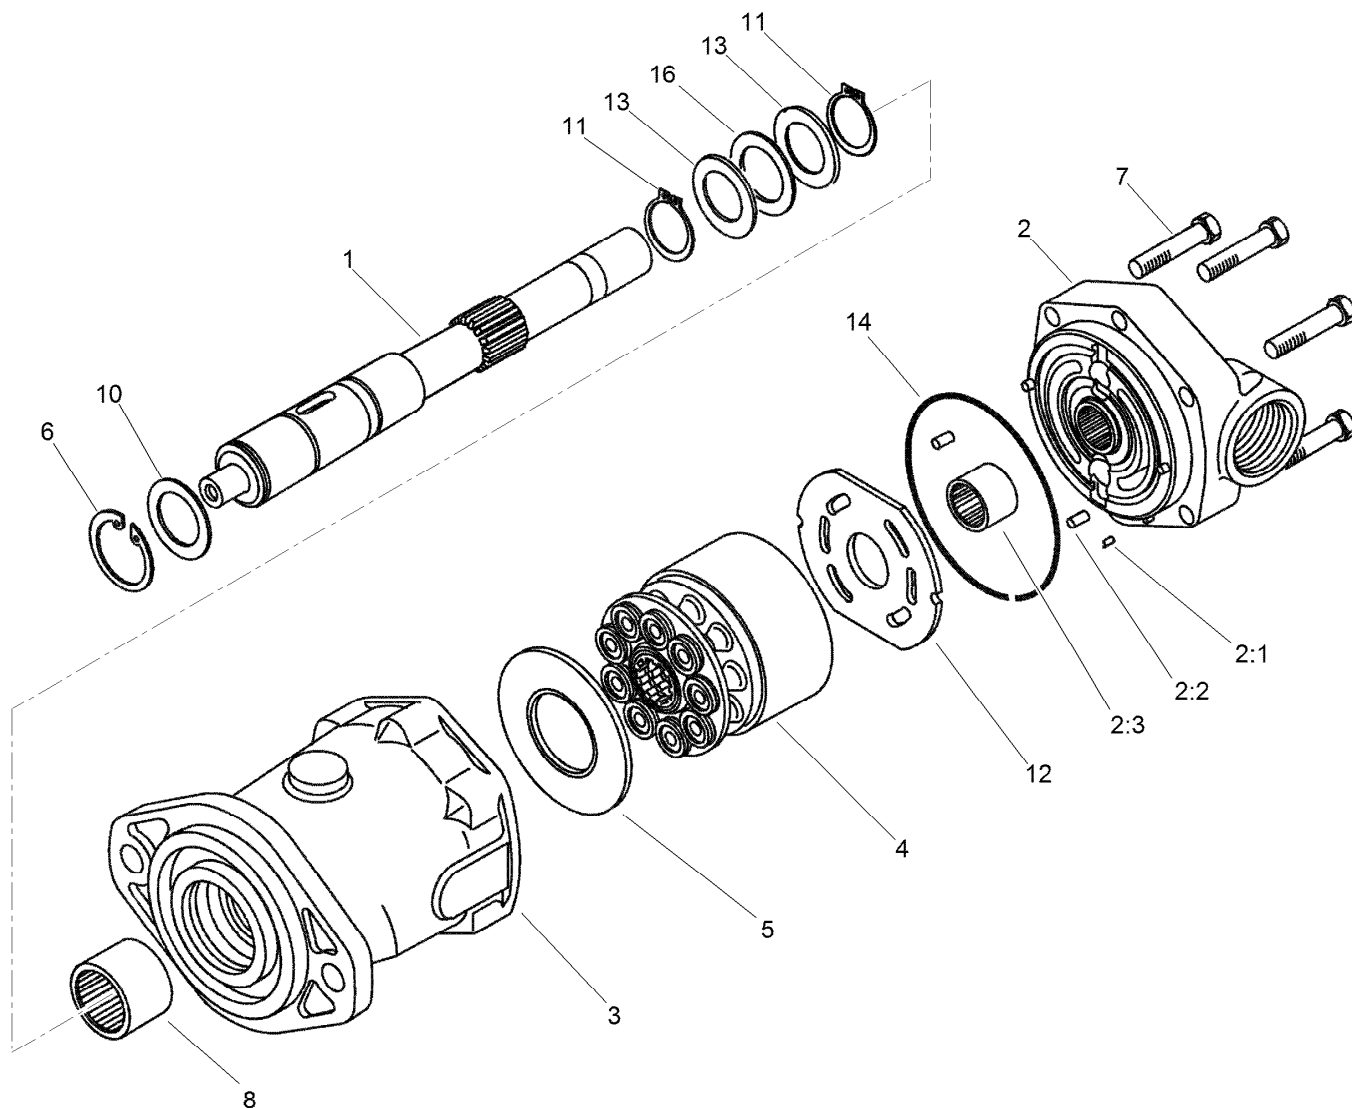 


Piston Motor Assembly No. 105-1219

Ref.	Part Number	Qty.	Description
1	105-2853	1	Shaft-Drive
2	100-2551	1	Backplate
2:1		3	Pin-Dowel ●
2:2		1	Pin-Dowel ●
2:3		1	Bearing-Needle ●
3		1	Housing ●
4	76-6910	1	Rotating Kit
5	76-6970	1	Insert-Plate, Cam
6	60-6260	1	Ring

Ref.	Part Number	Qty.	Description
7	94-3002	6	Capscrew
8	63-4390	1	Bearing-Needle
10	76-7020	1	Spacer
11	76-7000	2	Ring-Retaining
12	94-3003	1	Plate-Valve
13	76-6950	2	Race-Thrust
14	76-6980	1	O-Ring
16	76-6960	1	Bearing-Thrust

 
● Not serviced separately

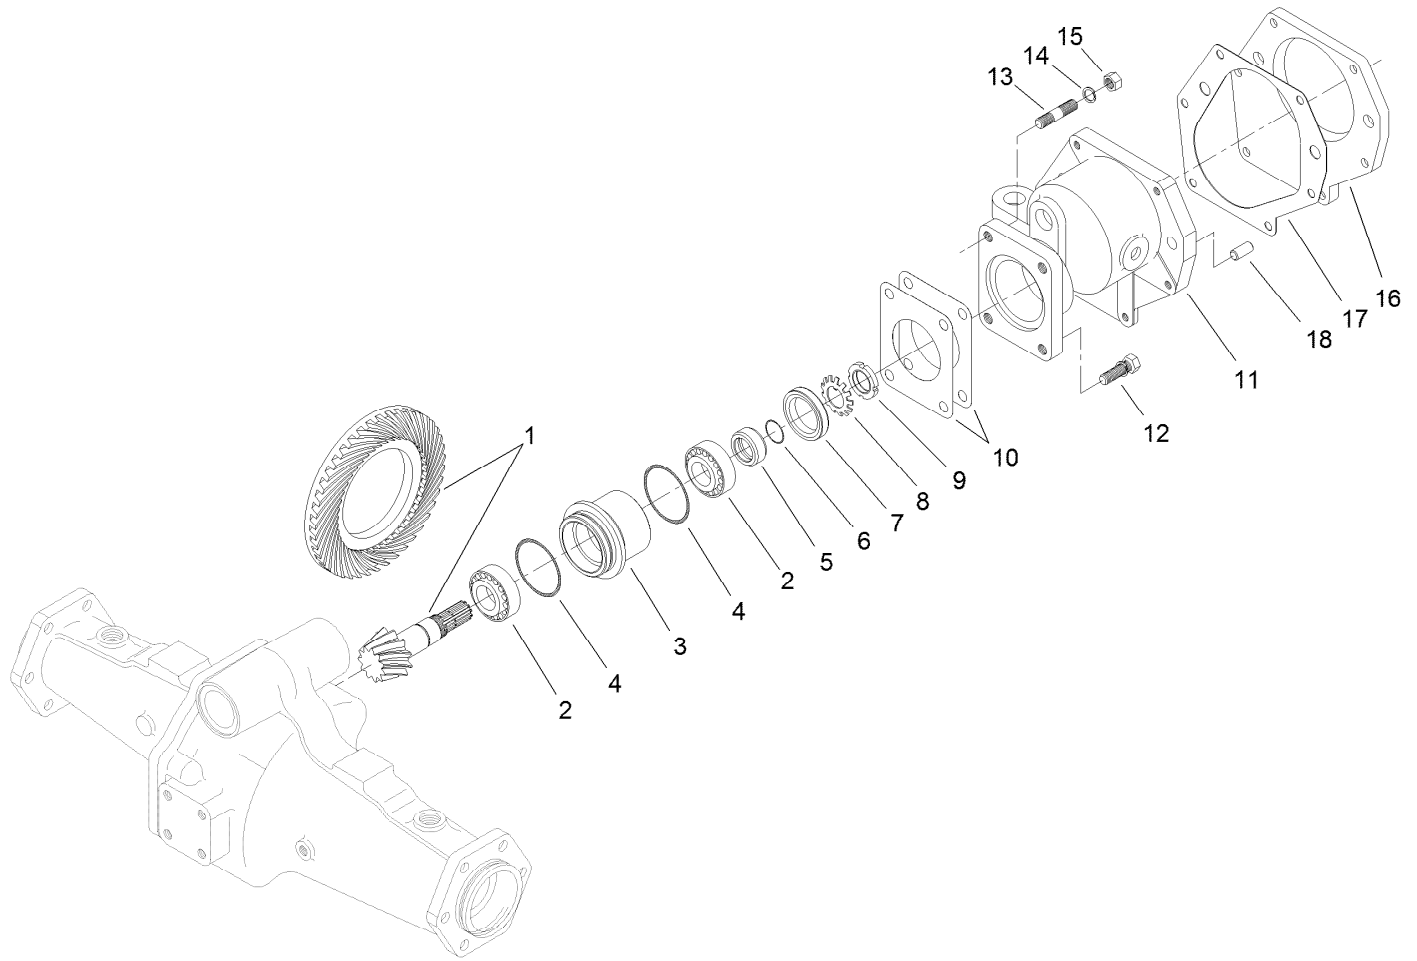

Bevel Pinion Shaft Assembly Rear Axle Assembly No. 110-4750

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	106-1093	1	Ring And Pinion, Matched Set
2	99-7570	2	Bearing-Roller, Taper
3	95-7534	1	Case-Bearing
4	106-1065	2	O-Ring
5	99-7572	1	Collar-Seal, Oil
6	106-1066	1	O-Ring
7	99-7574	1	Seal-Oil
8	99-7559	1	Washer-Lock
9	99-7560	1	Nut-Lock


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	99-7550	2	Shim 0.1
10	99-7551	2	Shim 0.2
11	95-7533	1	Case-Gear
12	99-7575	2	Bolt
13	98-7735	2	Stud
14	99-7527	2	Washer-Spring
15	99-7526	2	Nut
16	95-7541	1	Plate-Cover
17	106-1140	1	Gasket
18	104-2353	2	Pin-Dowel

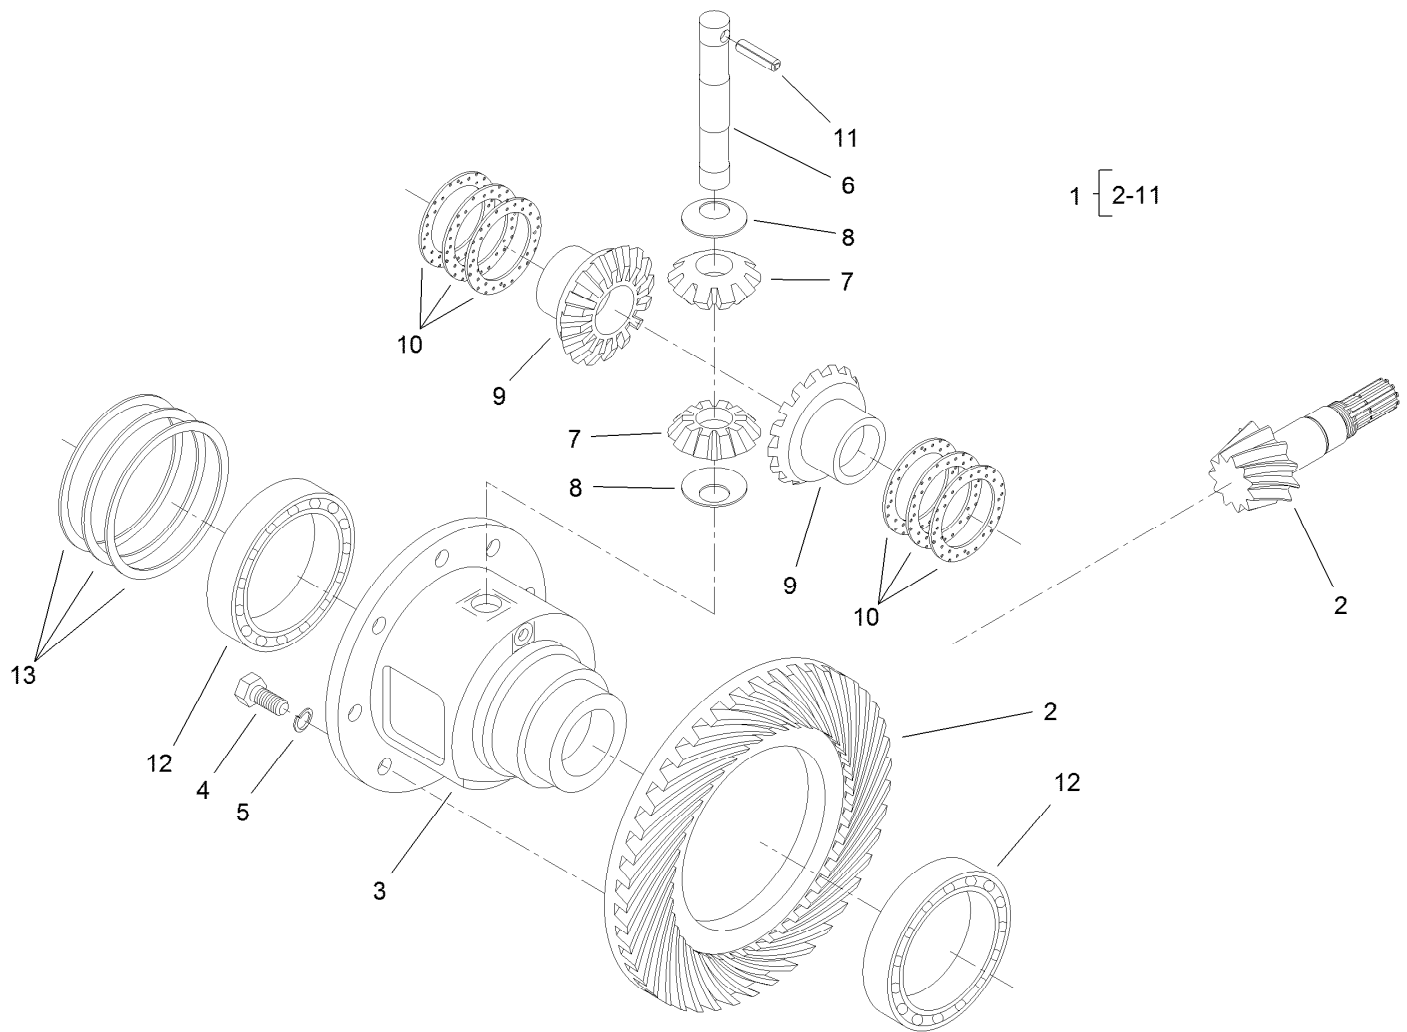 

Differential Assembly Rear Axle Assembly No. 110-4750


Ref.	Part Number	Qty.	Description
1	95-7503	1	Differential ASM
2	106-1093	1	Ring And Pinion, Matched Set
3	95-7502	1	Case-Differential
4	99-7576	8	Bolt
5	3253-4	8	Washer-Lock
6	99-7578	1	Shaft-Differential
7	99-7579	2	Pinion-Differential
8	99-7580	2	Washer-Differential

Ref.	Part Number	Qty.	Description
9	99-7581	2	Gear-Differential
10	99-7582	2	Washer-Differential
10	99-7583	2	Washer-Differential
10	99-7584	2	Washer-Differential
11	99-7588	1	Pin-Spring
12	99-7562	2	Bearing-Ball
13	99-7585	2	Shim 0.1
13	99-7586	2	Shim 0.2
13	99-7587	2	Shim 0.4

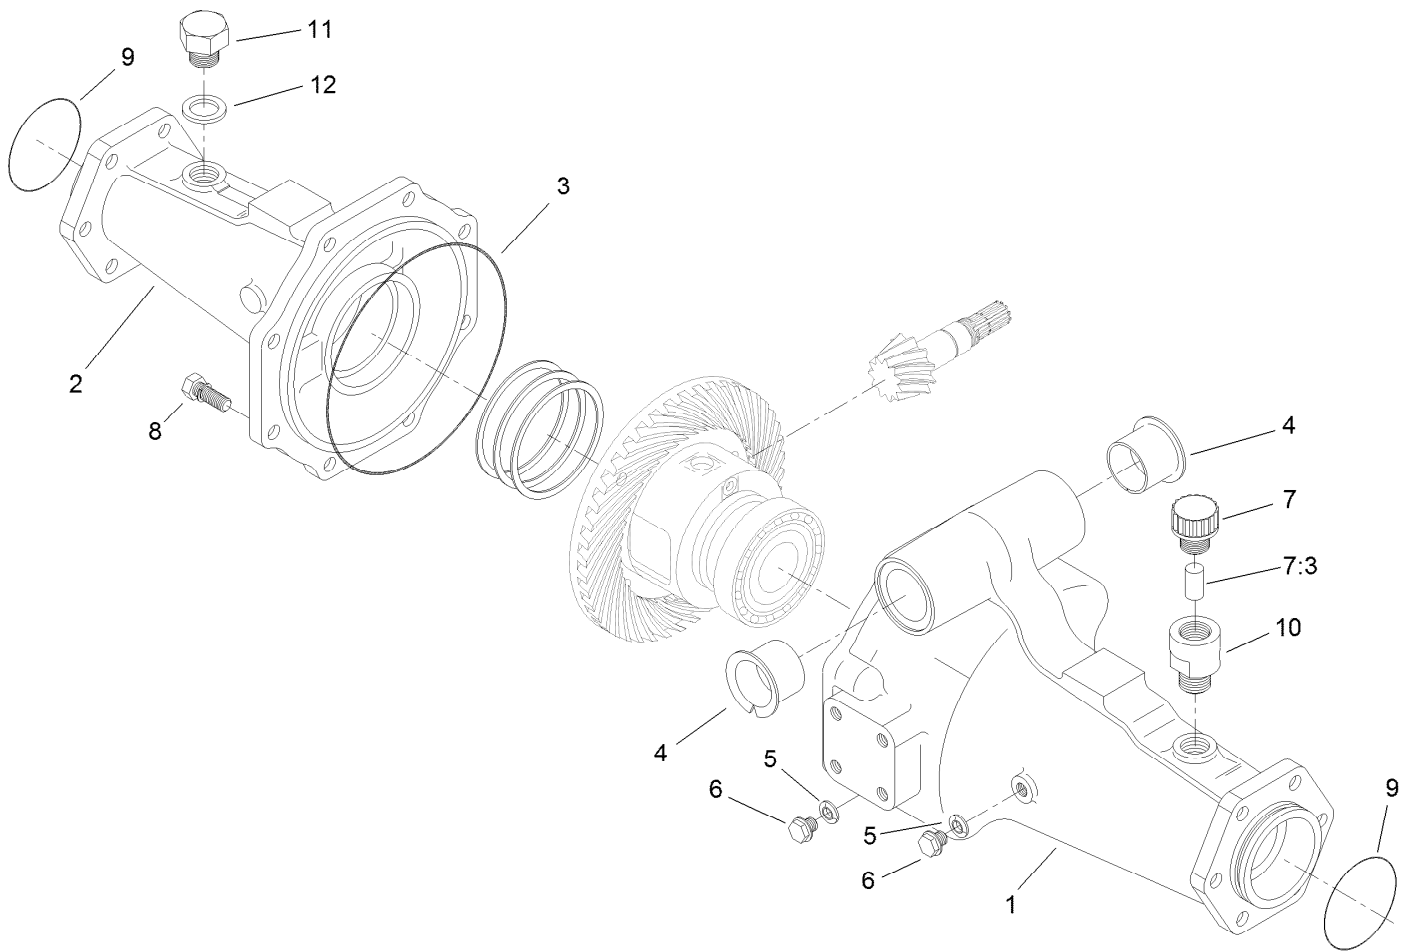 

Axle Support Assembly Rear Axle Assembly No. 110-4750


Ref.	Part Number	Qty.	Description
1	95-7508	1	Support-Axle
2	95-7506	1	Support-Axle
3	106-1067	1	O-Ring
4	95-7537	2	Bushing-Flanged
5	99-7590	2	Washer-Seal
6	99-7589	2	Plug
7	110-4812	1	Axle Vent ASM
7:3	110-4815	1	Insert-Filter, Foam
8	99-7592	8	Bolt
9	106-1068	2	O-Ring
10	104-2377	1	Extension-Vent
11	104-8643	1	Plug
12	104-8644	1	O-Ring

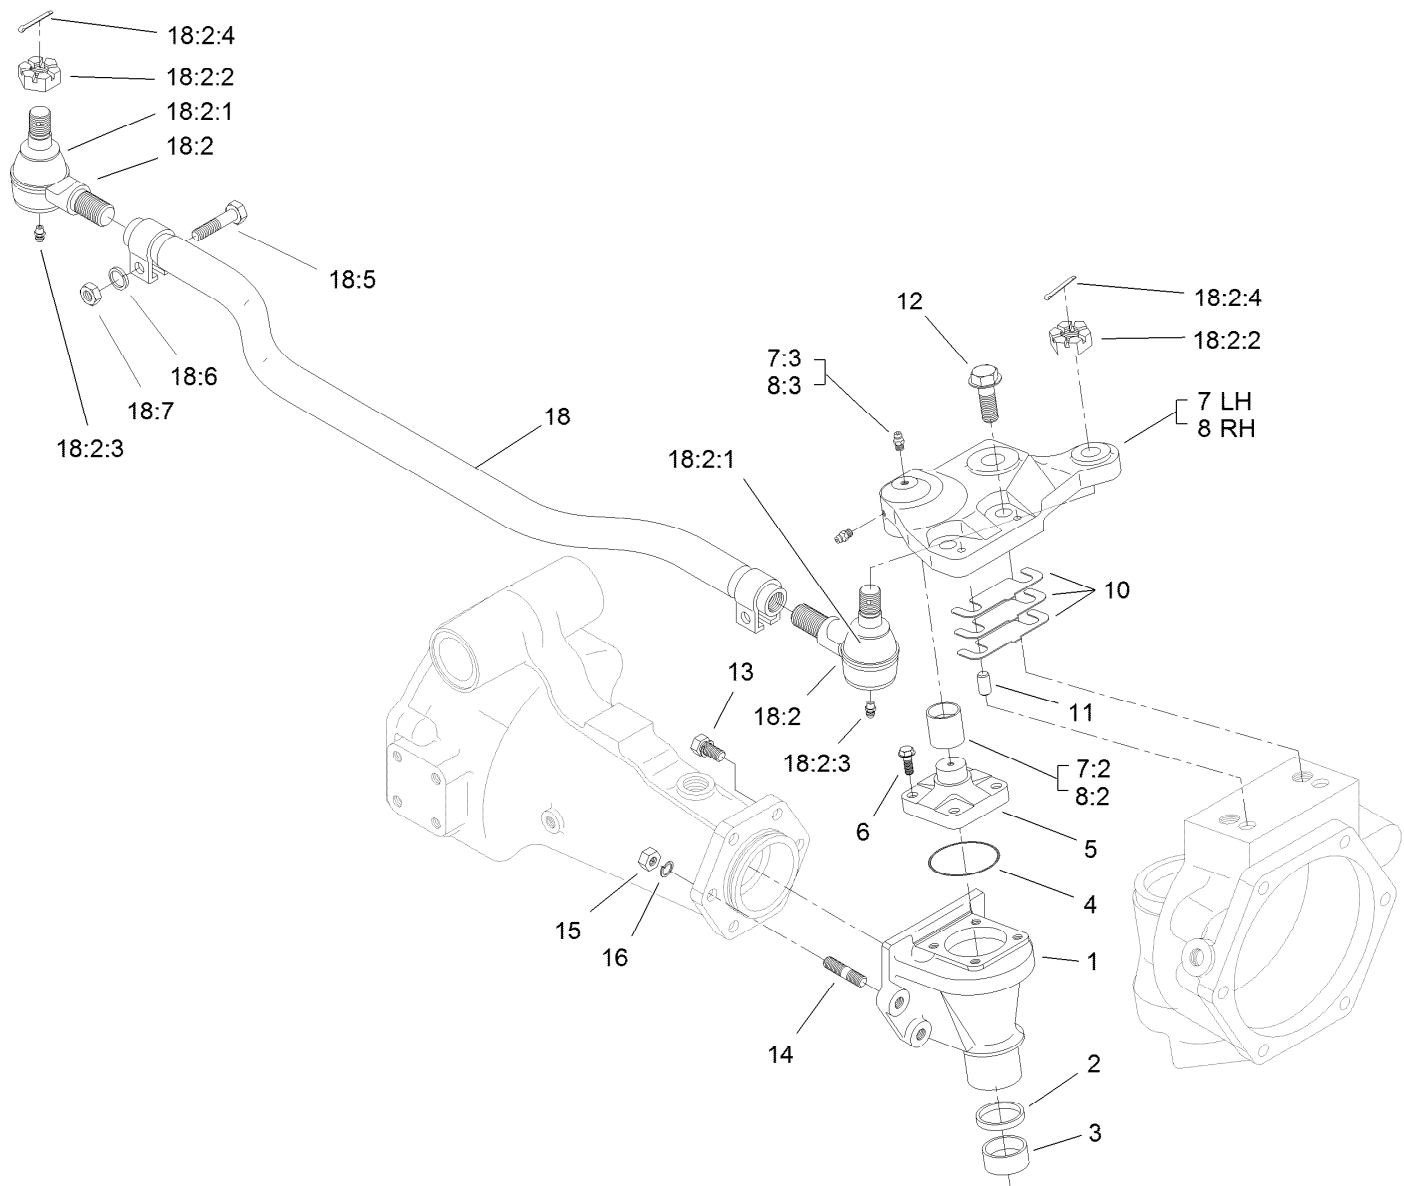 

Bevel Gear Case Assembly Rear Axle Assembly No. 110-4750


Ref.	Part Number	Qty.	Description
1	110-4752	2	Case-Gear, Bevel
2	110-4754	2	Seal-Oil
3	104-2378	2	Bushing
4	106-1069	2	O-Ring
5	104-2373	2	Knuckle
6	104-2374	8	Bolt
7	100-3768	1	LH Steering Arm ASM
7:2	104-8634	1	Bushing
7:3	106-1104	2	Fitting-Grease
8	100-3766	1	RH Steering Arm ASM
8:2	104-8634	1	Bushing
8:3	106-1104	2	Fitting-Grease
10	95-7547	2	Shim 0.1
10	95-7548	2	Shim 0.2
10	95-7549	2	Shim 0.3
11	99-7597	4	Pin-Dowel

Ref.	Part Number	Qty.	Description
12	104-2375	4	Bolt
13	99-7599	8	Bolt
14	99-7525	4	Stud
15	99-7526	4	Nut
16	99-7527	4	Washer-Spring
18	106-1141	1	Steering Tie Rod ASM
18:2	106-1113	2	Tie Rod End ASM - RH Thread
18:2:1	100-3853	1	Cover-Dust
18:2:2	100-3854	1	Nut-Castle
18:2:3	110-4755	1	Fitting-Grease
18:2:4	3272-11	1	Pin-Cotter
18:5	100-3855	2	Bolt
18:6	99-7527	2	Washer-Spring
18:7	99-7526	2	Nut

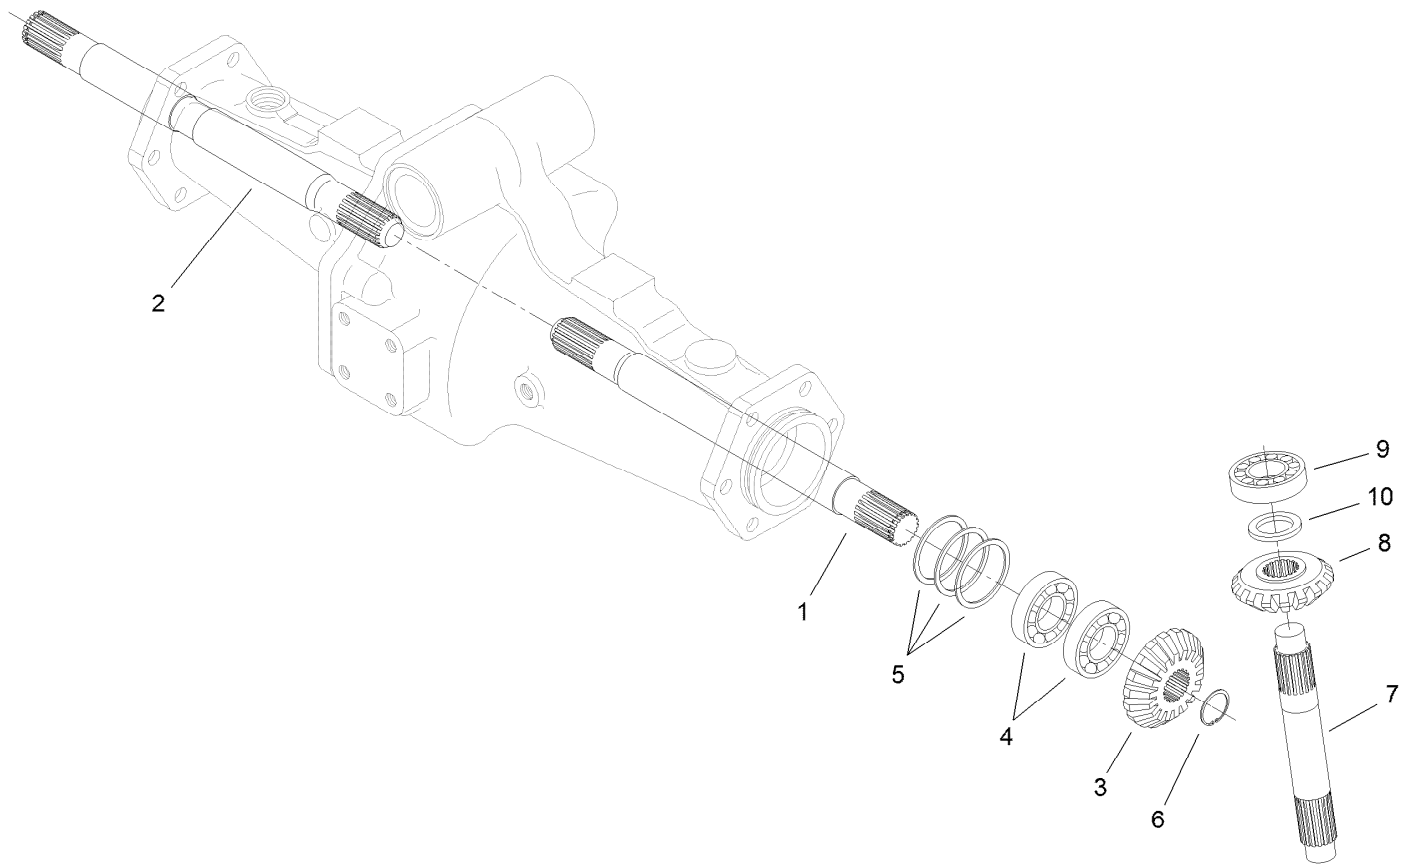 


Bevel Gear Shaft Assembly Rear Axle Assembly No. 110-4750

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	95-7509	1	Shaft-Gear, Differential
2	95-7512	1	Shaft-Gear, Differential
3	95-7517	2	Gear-Bevel, 15 Tooth
4	99-7530	4	Bearing-Ball
5	99-7552	2	Shim 0.1
5	99-7553	2	Shim 0.2
5	99-7554	2	Shim 0.5
6	99-7531	2	Clip
7	110-4753	2	Shaft-Gear, Bevel
8	95-7519	2	Gear-Bevel, 17 Tooth
9	99-7532	2	Bearing-Roller, Taper
10	99-7558	2	Collar

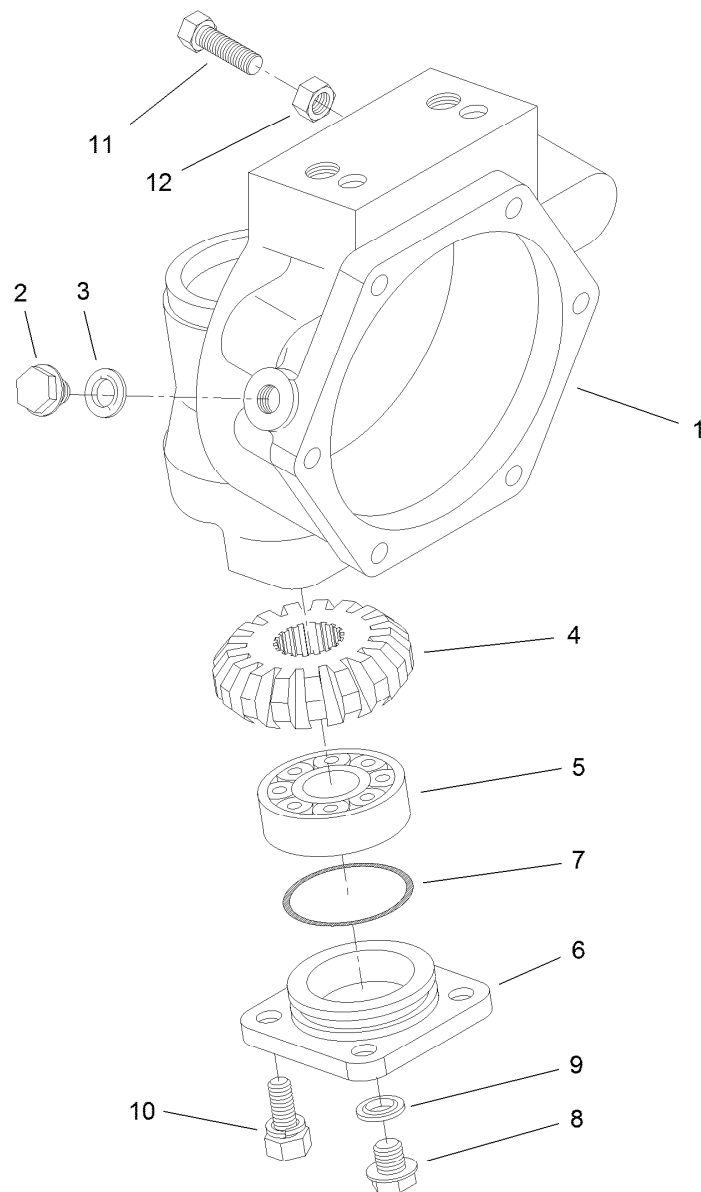 


Axle Case Assembly Rear Axle Assembly No. 110-4750

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	110-4751	2	Case-Axle
2	99-7535	2	Plug
3	99-7536	2	Washer-Seal
4	95-7527	2	Gear-Bevel, 17 Tooth
5	99-7532	2	Bearing-Roller, Taper
6	100-2560	2	Cover
7	106-1070	2	O-Ring
8	99-7589	2	Plug
9	99-7590	2	Washer-Seal
10	100-2562	8	Bolt
11	106-1102	2	Bolt-Stop
12	106-1103	2	Nut

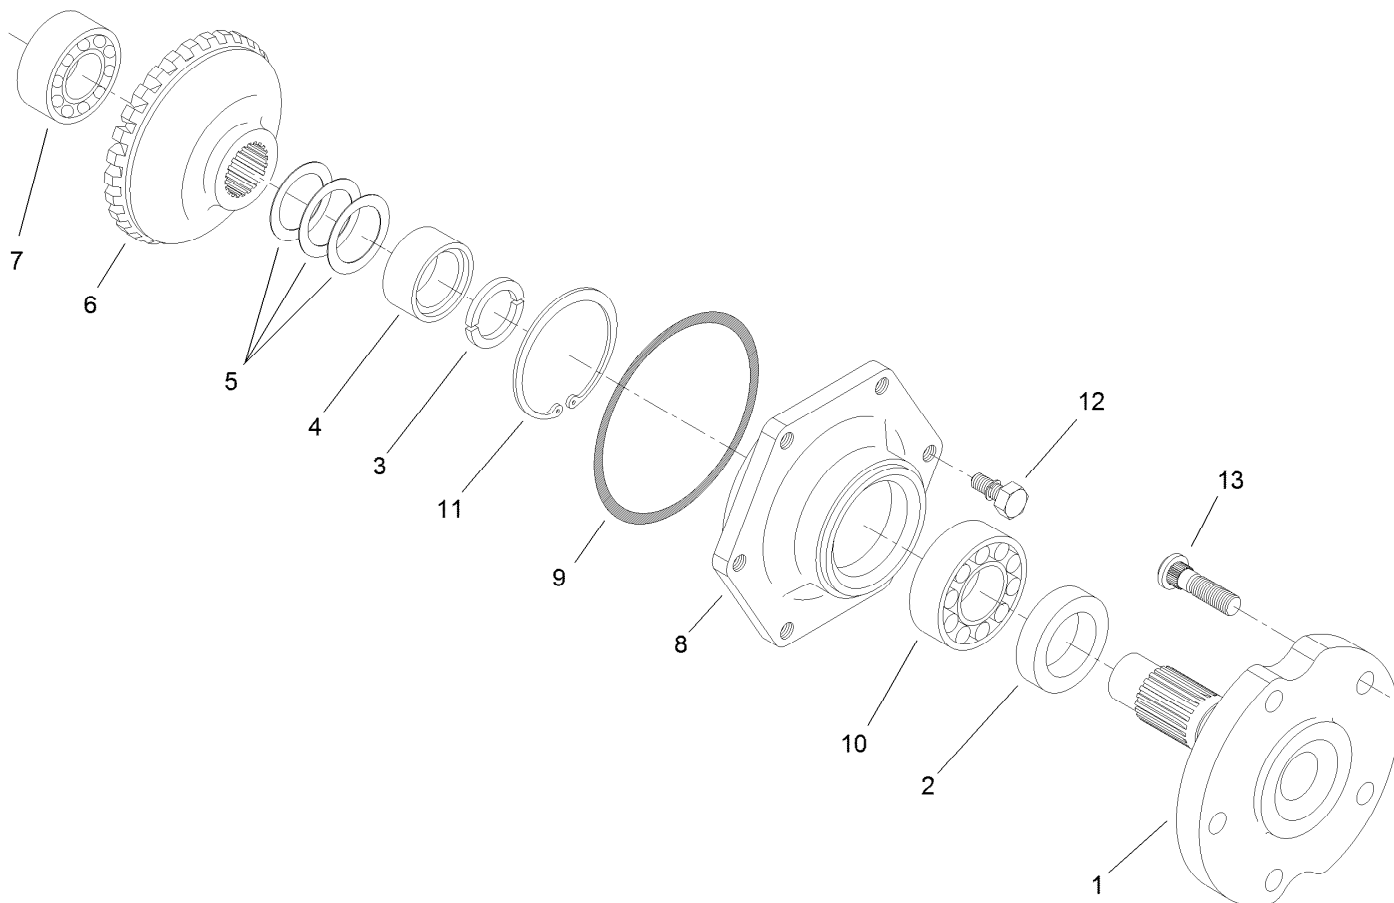 

Axle Assembly Rear Axle Assembly No. 110-4750


Ref.	Part Number	Qty.	Description
1	95-7522	2	Axle
2	99-7564	2	Seal-Oil
3	95-7544	4	Clip
4	95-7523	2	Spacer
5	99-7555	2	Shim 0.3
5	99-7556	2	Shim 0.2
5	99-7557	2	Shim 0.5
6	95-7524	2	Gear-Bevel, 29 Tooth
7	99-7534	2	Bearing-Ball
8	95-7521	2	Cover-Axle
9	106-1071	2	O-Ring
10	99-7561	2	Bearing-Ball
11	99-7539	2	Clip
12	99-7596	12	Bolt
13	99-7563	10	Stud

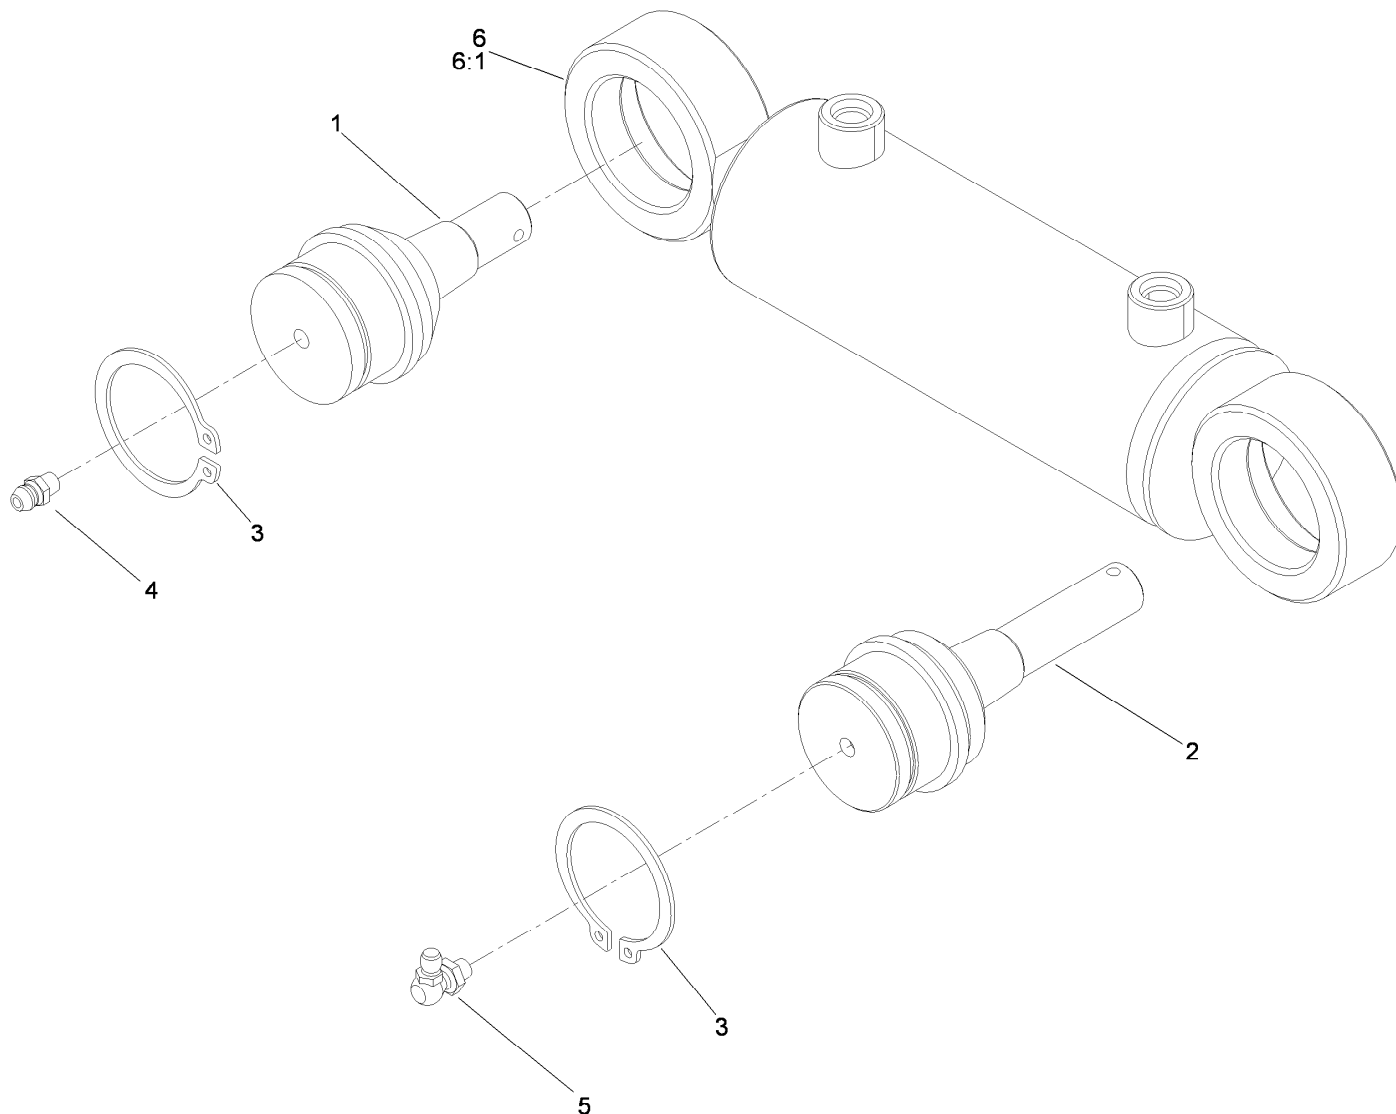 

Steer Cylinder Assembly No. 119-3903


Ref.	Part Number	Qty.	Description
1	106-6774	1	Joint-Ball
2	100-3795	1	Joint-Ball
3	32151-104	2	Ring-Retaining, External
4	302-5	1	Fitting-Grease
5	302-60	1	Fitting-Grease
6	119-3885	1	Cylinder-Steer
6:1	119-3945	1	Seal Kit ●

 ● Not illustrated

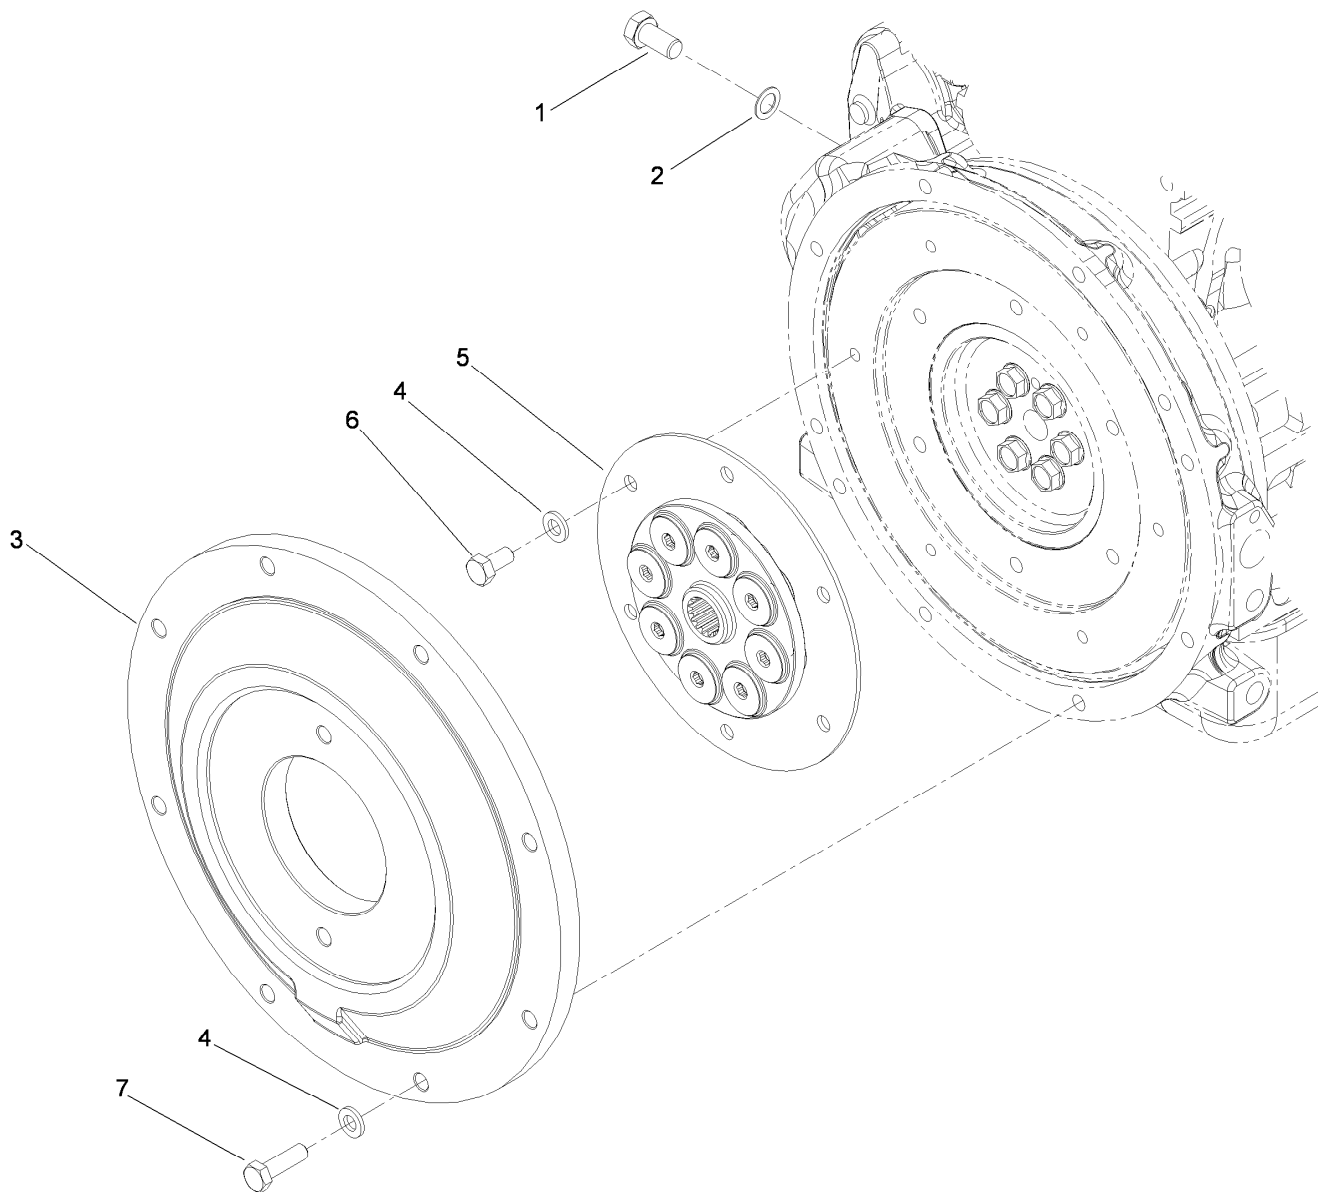


Flywheel Coupler Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	42-9250	1	Bolt
2	3255-2	1	Washer-Lock / EXT
3	115-6657-03	1	Plate-Flywheel
4	107-1413	14	Washer-Hardened
5	114-3848	1	Coupler-Spring, Flywheel
6	99-5130	6	Bolt
7	117-5663	8	Screw-HH

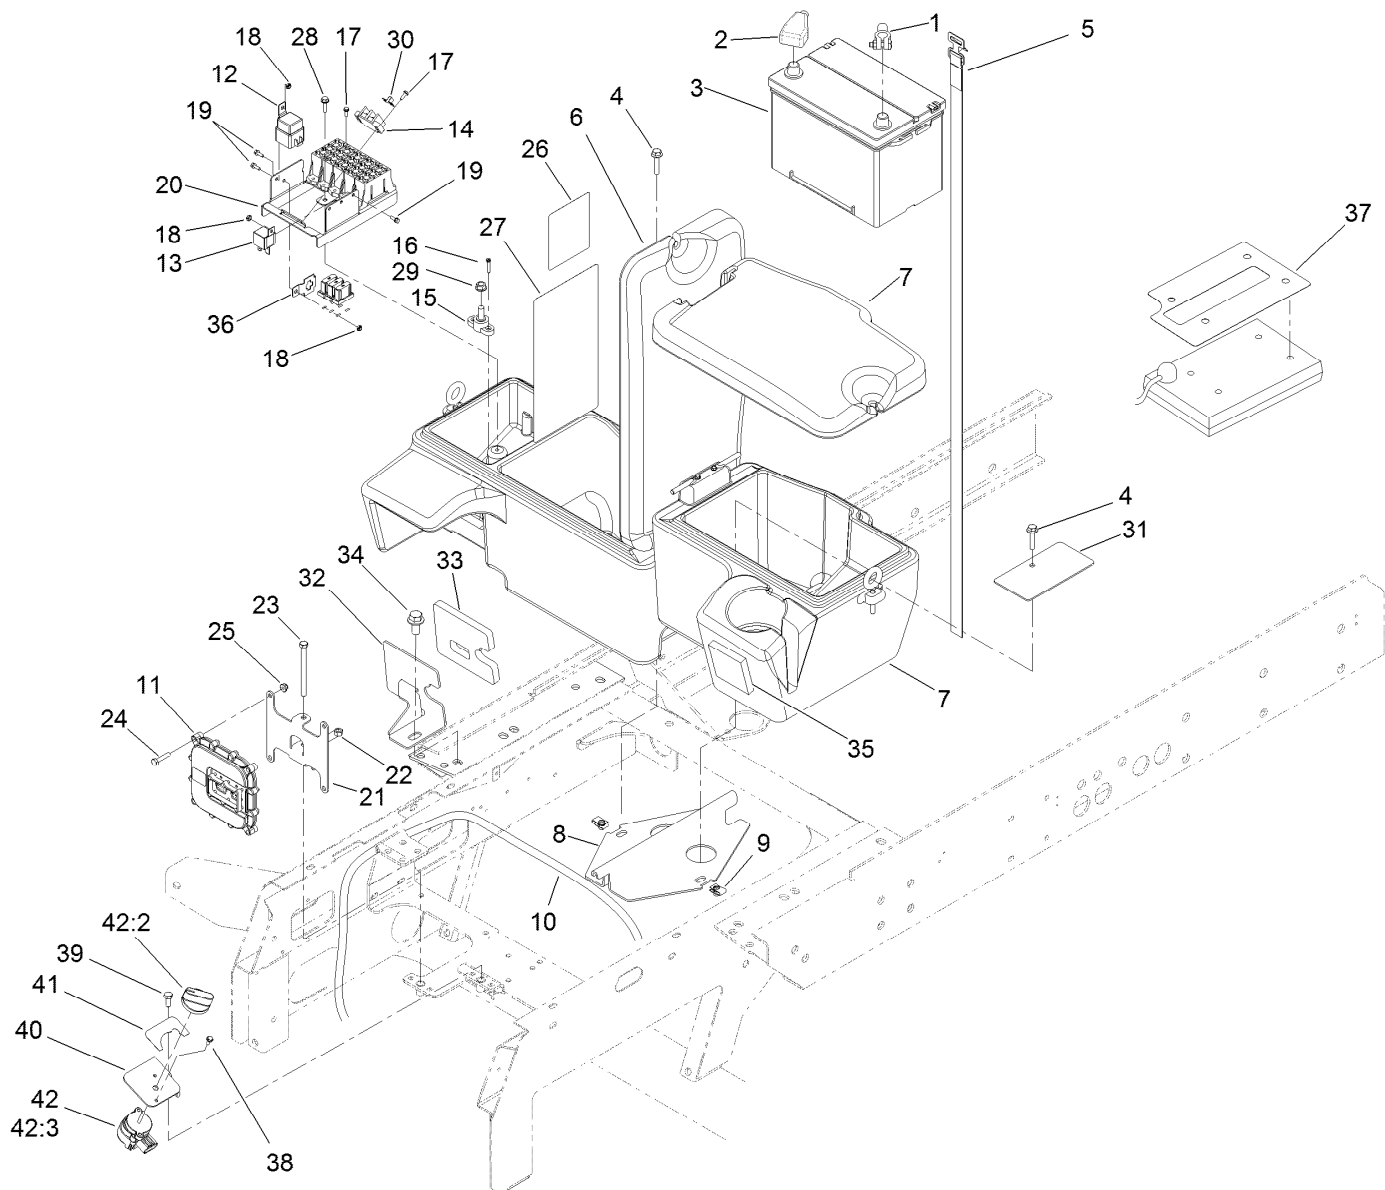 

Electrical Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	117-2377	1	Cable-Battery, Negative	21	117-2360-03	1	Bracket-Mount, Controller
2	117-2376	1	Cable-Battery, Positive	22	3217-6	1	Nut-Hex
3	106-5190	1	Battery-Dry	23	322-19	1	Screw-HH
4	115-1794	2	Screw-HHF	24	321-8	4	Screw-HH
5	3339-175	1	Strapping-Web	25	104-7201	4	Nut-HF
6	115-9100	1	Box-Storage, Battery	26	120-1672	1	Decal-Fuse
7	115-9101	1	Box-Storage	27	120-1671	1	Decal-Service
8	115-4387-03	1	Support-Box, Storage	28	46-8091	1	Screw-HWH
9	112-3306	2	Nut	29	3290-357	1	Nut-HHF, Whiz
10	119-1302	1	Harness-Wire, Power Center	30	42863	1	Strip-Jumper
11	114-3321	1	Controller-Tec	31	117-4768-03	1	Plate-Box, Storage
12	99-7430	1	Relay	32	117-4774-03	1	Clamp
13	99-7435	3	Relay-Power	33	117-4775	1	Seal-Battery Box
14	42862	1	Block-Terminal, Ground	34	3234-6	1	Screw-HHF
15	110-8822	1	Block-Junction	35	117-4783	2	Seal-Foam
16	93-0231	2	Screw-PPH	36	114-5502	1	Clip-Fuse
17	32144-87	6	Screw-HWHTF	37	120-1679	1	Decal-Diagnostic Controller
18	3296-54	5	Nut-Lock	38	112-6349	2	Screw-HWH
19	112-3169	5	Screw-HHF, Serrated	39	322-3	1	Screw-HH
20	115-4356-03	1	Mount-Fuse Block	40	119-3904-03	1	Bracket-Hmi Sensor
				41	119-3905	1	Decal-Sensor

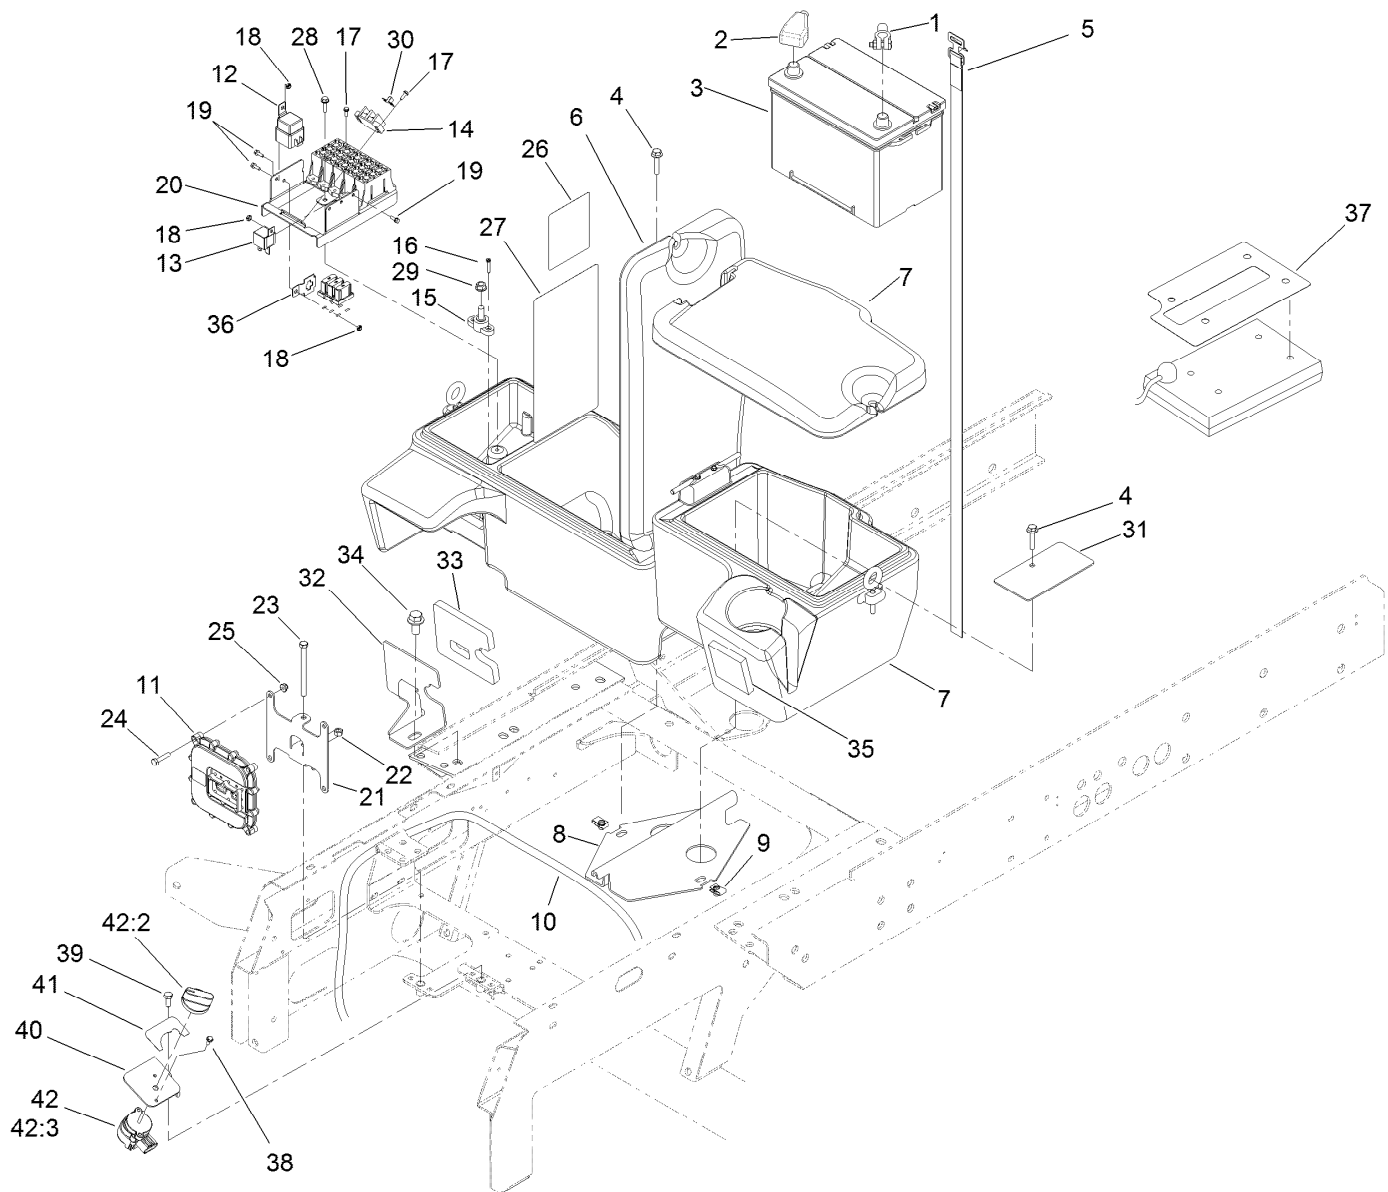 

Electrical Assembly (continued)


Ref.	Part Number	Qty.	Description
42	119-1081	1	Hmi ASM

Ref.	Part Number	Qty.	Description
42:2	119-1083	1	Knob-Hmi
42:3	119-0737	1	Sensor-Position

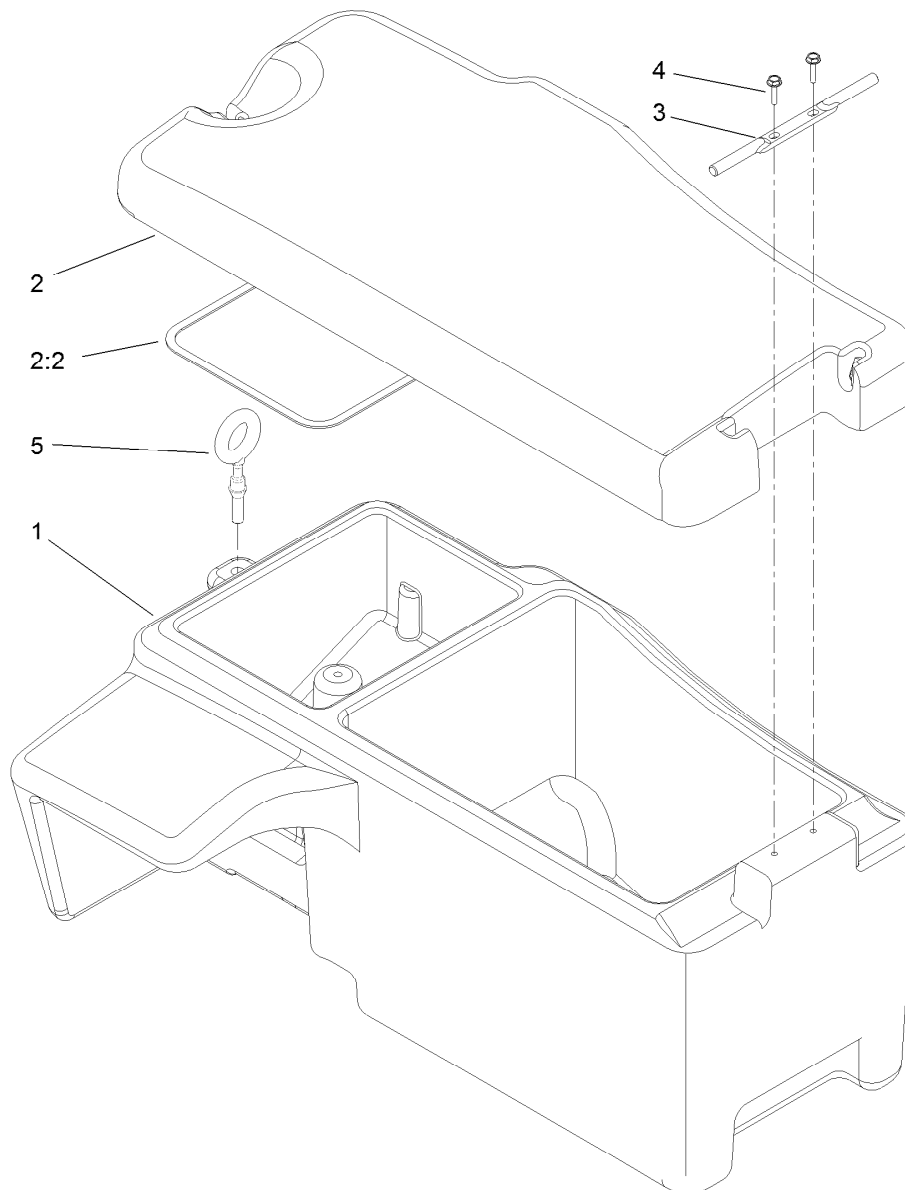 


Battery Storage Box Assembly No. 115-9100

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	114-8124	1	Box-Storage, RH
2	115-4368	1	Cover ASM
2:2	115-4367	1	Seal-Cover
3	114-8132	1	Hinge-Cover
4	98-1375	2	Screw-HWH
5	115-4366	1	Latch-Rubber

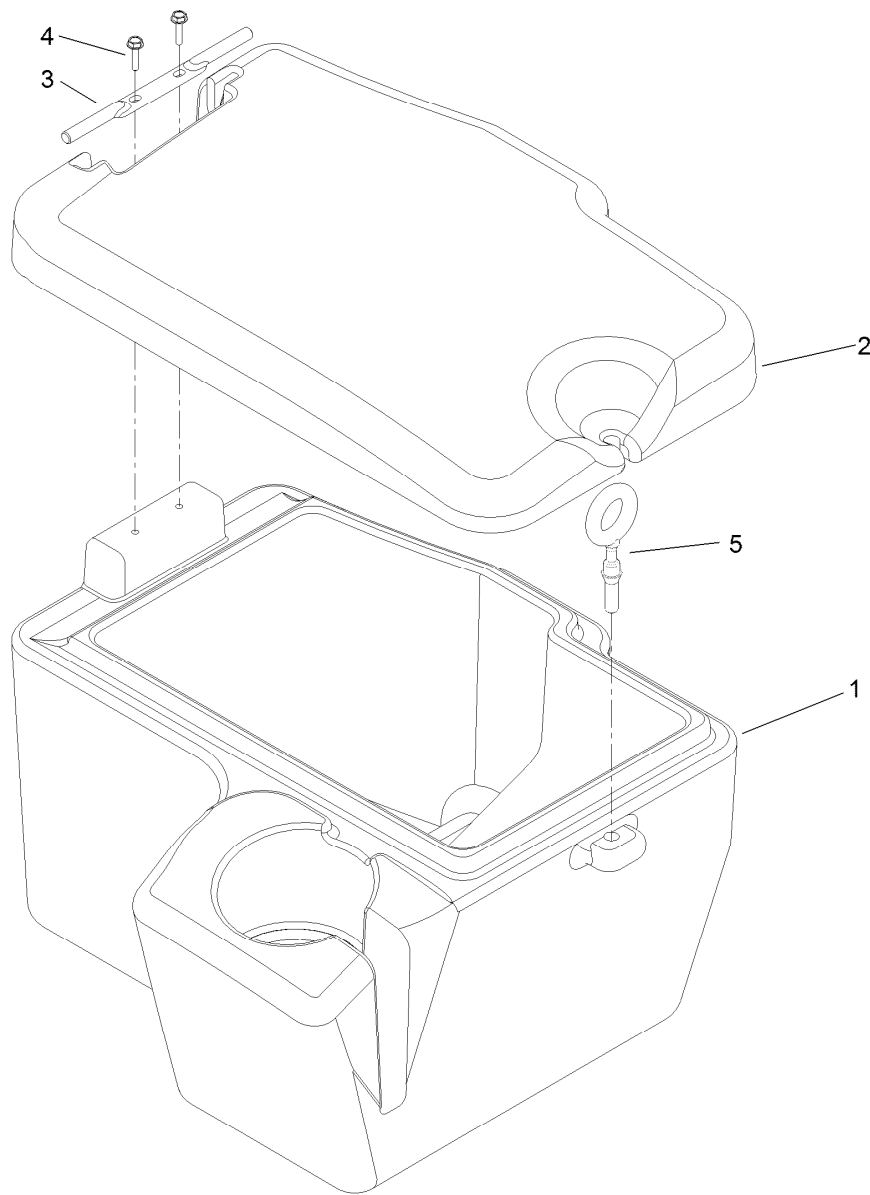 

Storage Box Assembly No. 115-9101


Ref.	Part Number	Qty.	Description
1	114-8123	1	Box-Storage, LH
2	114-8125	1	Cover-Storage Box, LH
3	114-8132	1	Hinge-Cover
4	98-1375	2	Screw-HWH
5	115-4366	1	Latch-Rubber

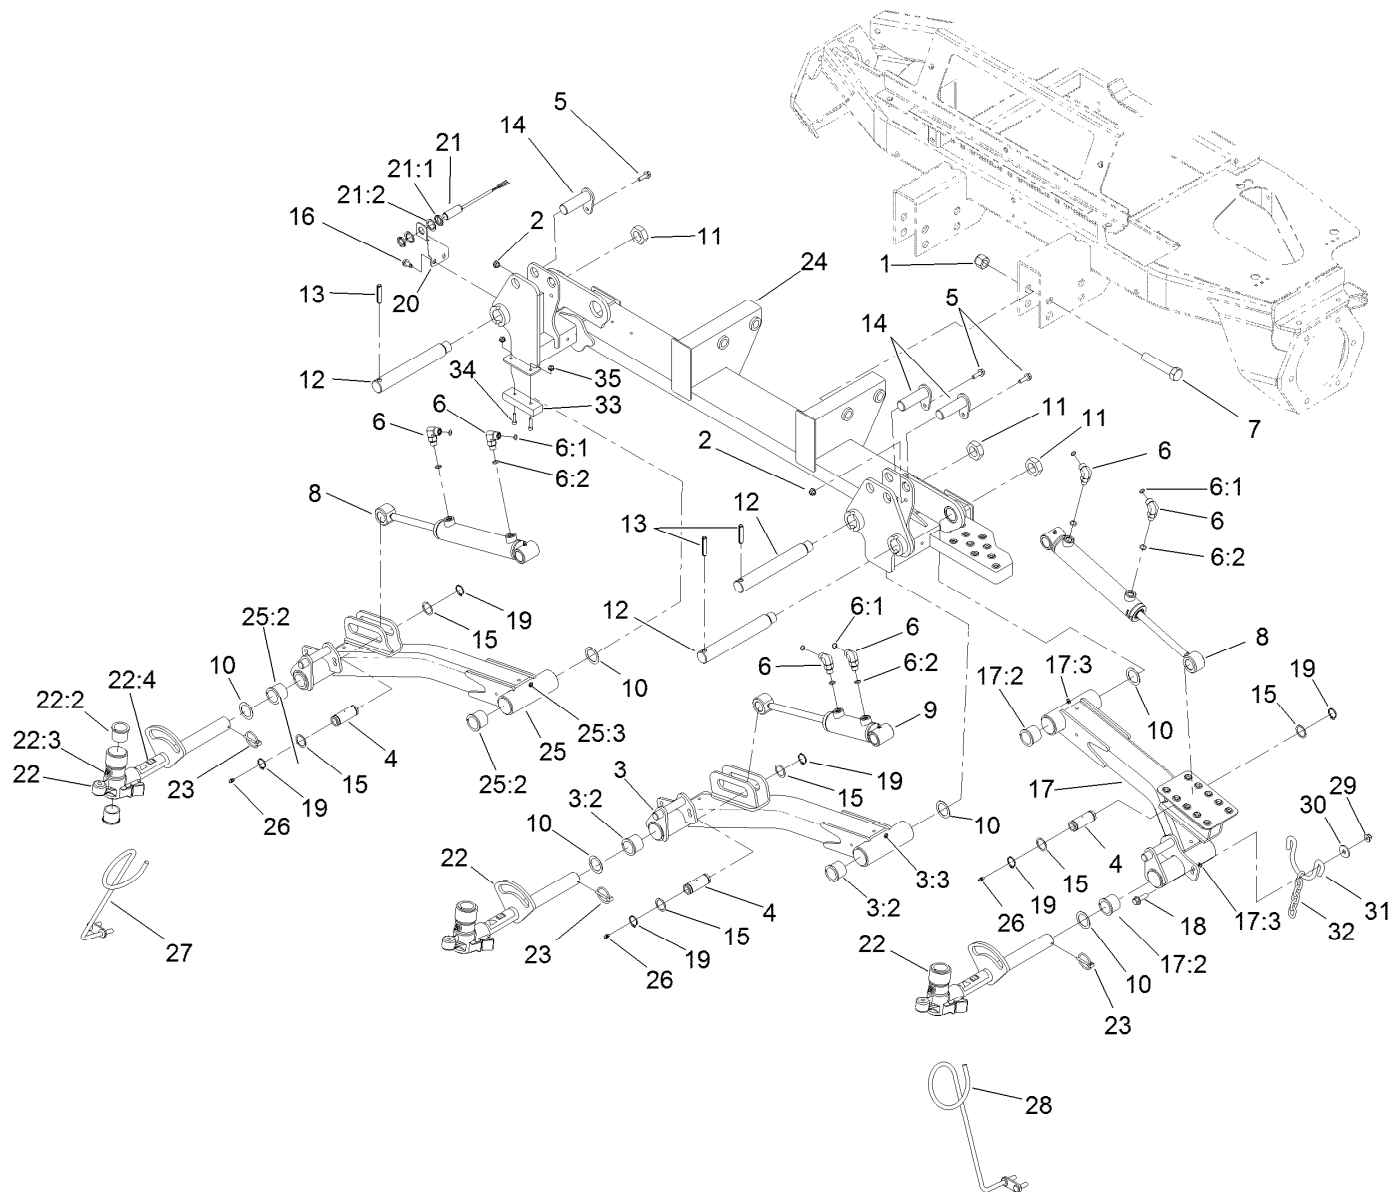 

Front Lift Arm Assembly


Ref.	Part Number	Qty.	Description
1	3296-51	4	Nut-Lock, NI
2	104-8300	3	Nut-Flange, NI
3	119-1501	1	#1 Lift Arm ASM
3:2	104-0015	4	Bushing-Flange
3:3	302-5	2	Fitting-Grease
4	119-3894	3	Pin-Plain
5	3234-17	3	Screw-HHF
6	340-77	6	Fitting-HYD, 90 DEG
6:1	237-22	1	O-Ring
6:2	237-42	1	O-Ring
7	328-7	4	Screw-HH
8	119-3852	2	HYD Cylinder ASM
9	119-3850	1	HYD Cylinder ASM
10	76-2980	6	Washer-Thrust
11	3296-49	3	Nut-Lock, NI
12	119-1499	3	Pin-Pivot
13	32121-110	3	Pin-Roll, Slotted
14	105-9889	3	Pin-Cylinder
15	5-1550	6	Washer
16	32104-32	2	Screw-HWH
17	119-1504	1	#4 Lift Arm ASM

Ref.	Part Number	Qty.	Description
17:2	104-0015	4	Bushing-Flange
17:3	302-5	2	Fitting-Grease
18	119-4061	6	Screw-HHF
19	32151-36	6	Ring-Retaining
20	119-1506	1	Bracket-Switch
21	115-5300	1	Proximity Switch ASM
21:1	117-3207	2	Nut-Hex
21:2	117-3208	2	Washer-Lock, Internal Tooth
22	117-0954	3	Pivot Yoke ASM
22:2	104-0015	2	Bushing-Flange
22:3	302-5	1	Fitting-Grease
22:4	110-9642	1	Decal-Warning
23	92-1298	3	Pin-Lynch
24	119-1508-03	1	Front Carrier Frame ASM
25	119-1505	1	#5 Lift Arm ASM
25:2	104-0015	4	Bushing-Flange
25:3	302-5	2	Fitting-Grease
26	302-5	3	Fitting-Grease
27	119-3920	1	Guide-Hose, RH
28	119-3921	1	Guide-Hose, LH
29	104-8301	6	Nut-Flange, NI

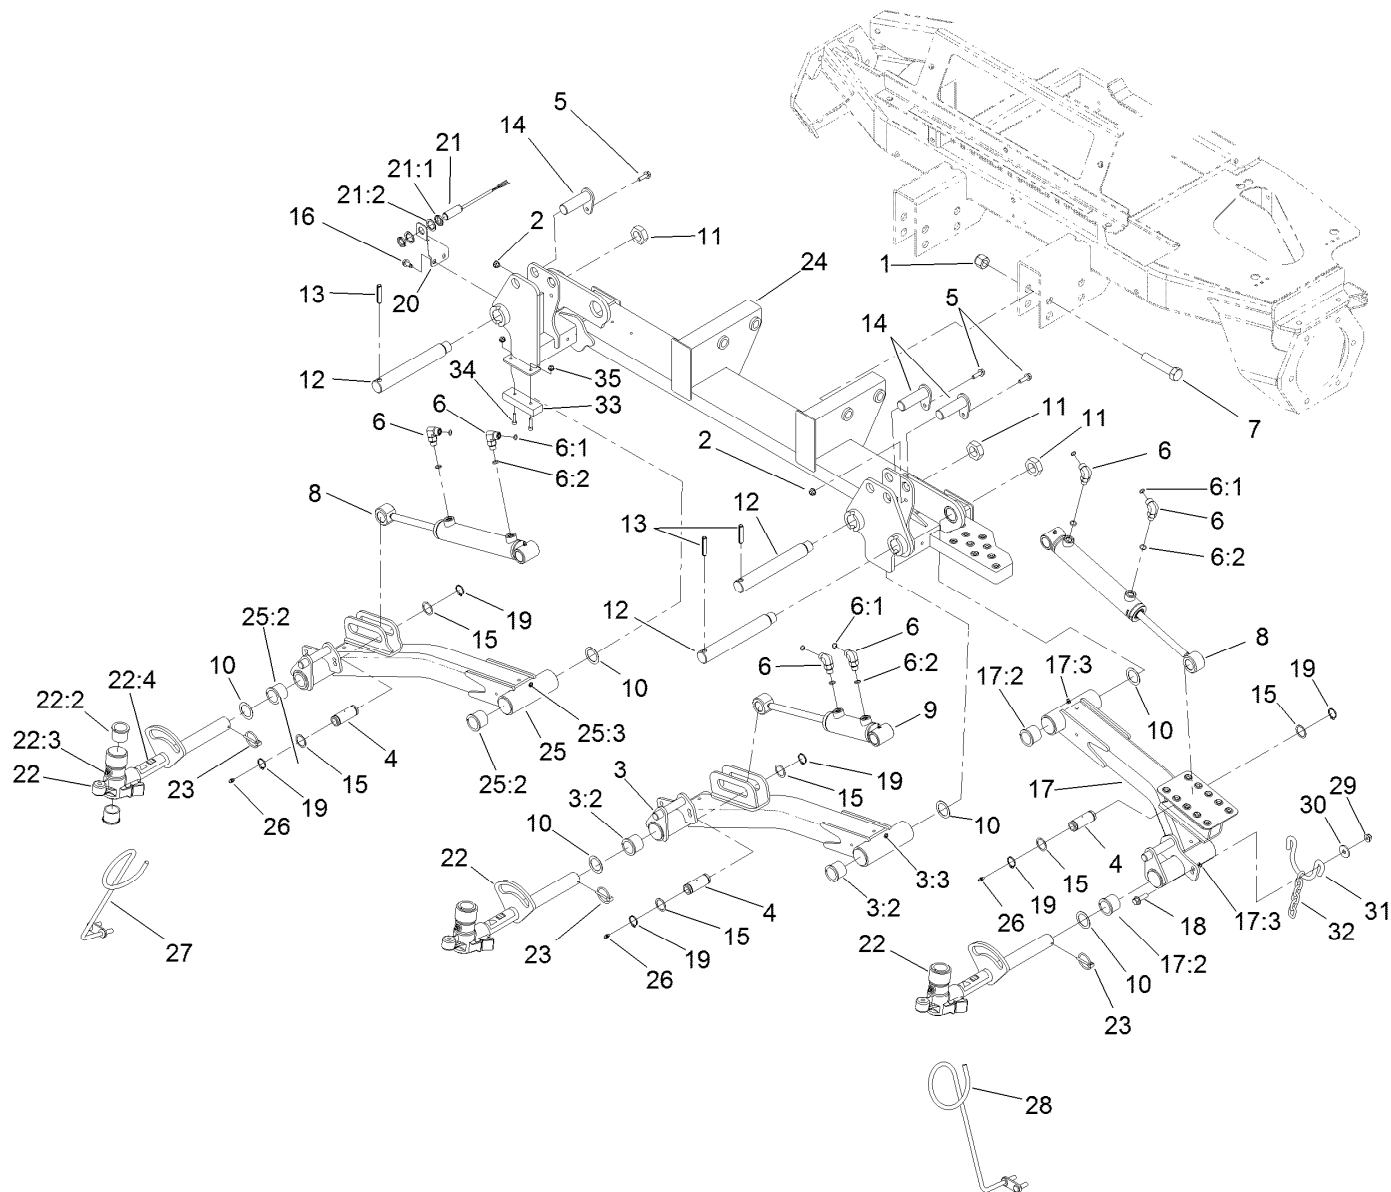 

Front Lift Arm Assembly (continued)


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
30	63-8410	6	Washer	33	125-1657	2	Bumper-Pad, Recessed
31	110-0922	3	Hoop-Chain	34	3274-9	4	Screw-HSH
32	5-1096	3	Chain-Lift	35	104-7201	4	Nut-HF

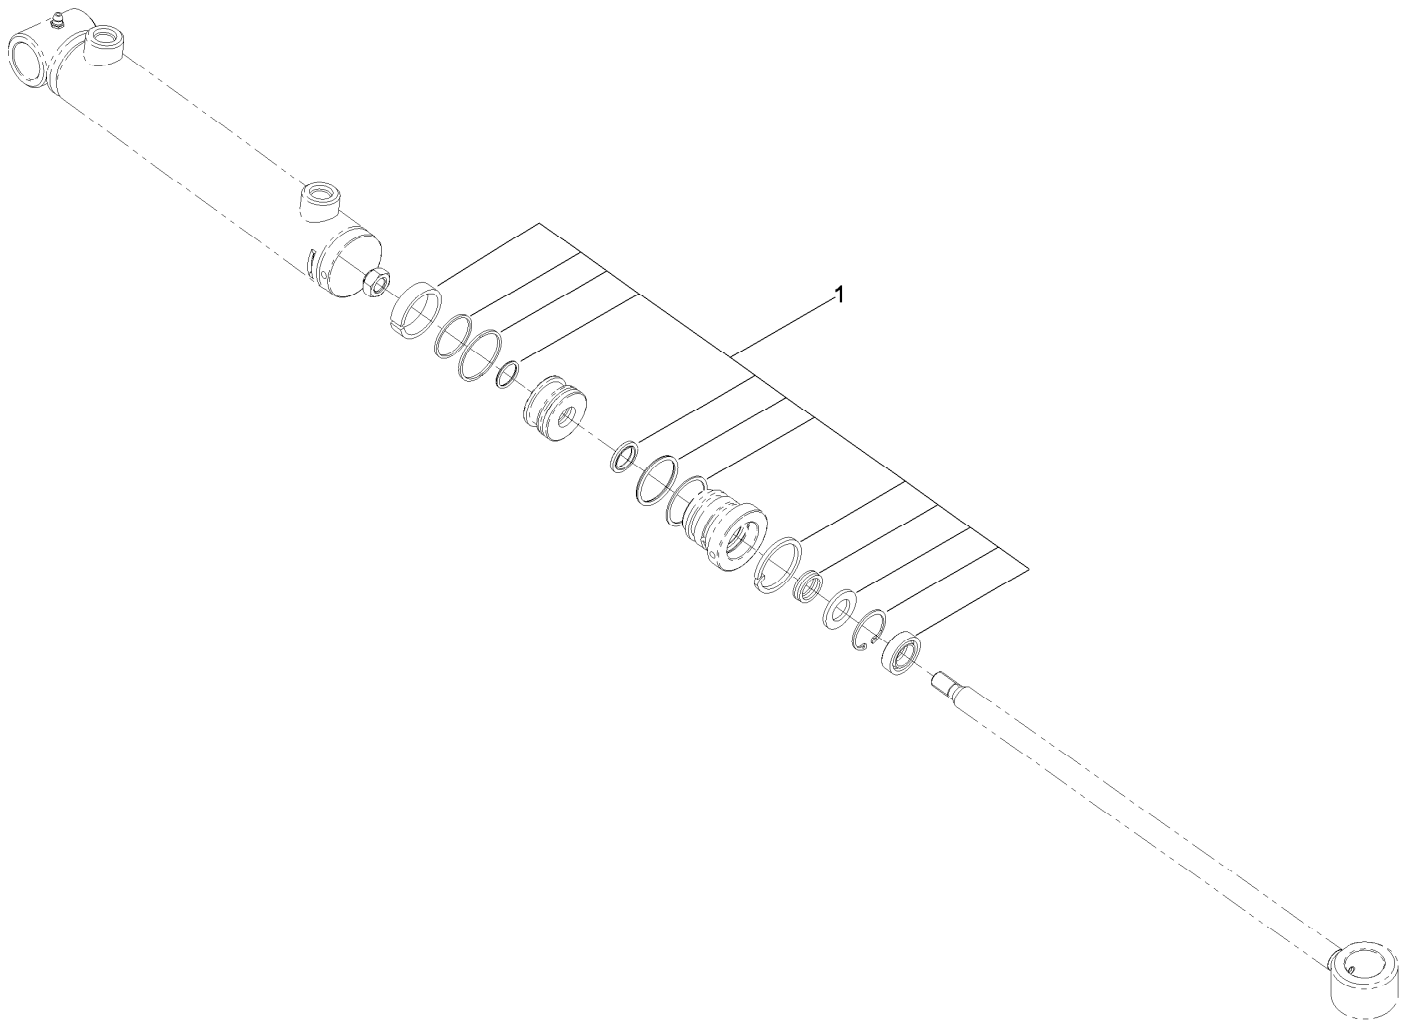 

Hydraulic Cylinder Assembly No. 119-3852

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-3853	1	Seal Kit ●

 
● Not illustrated

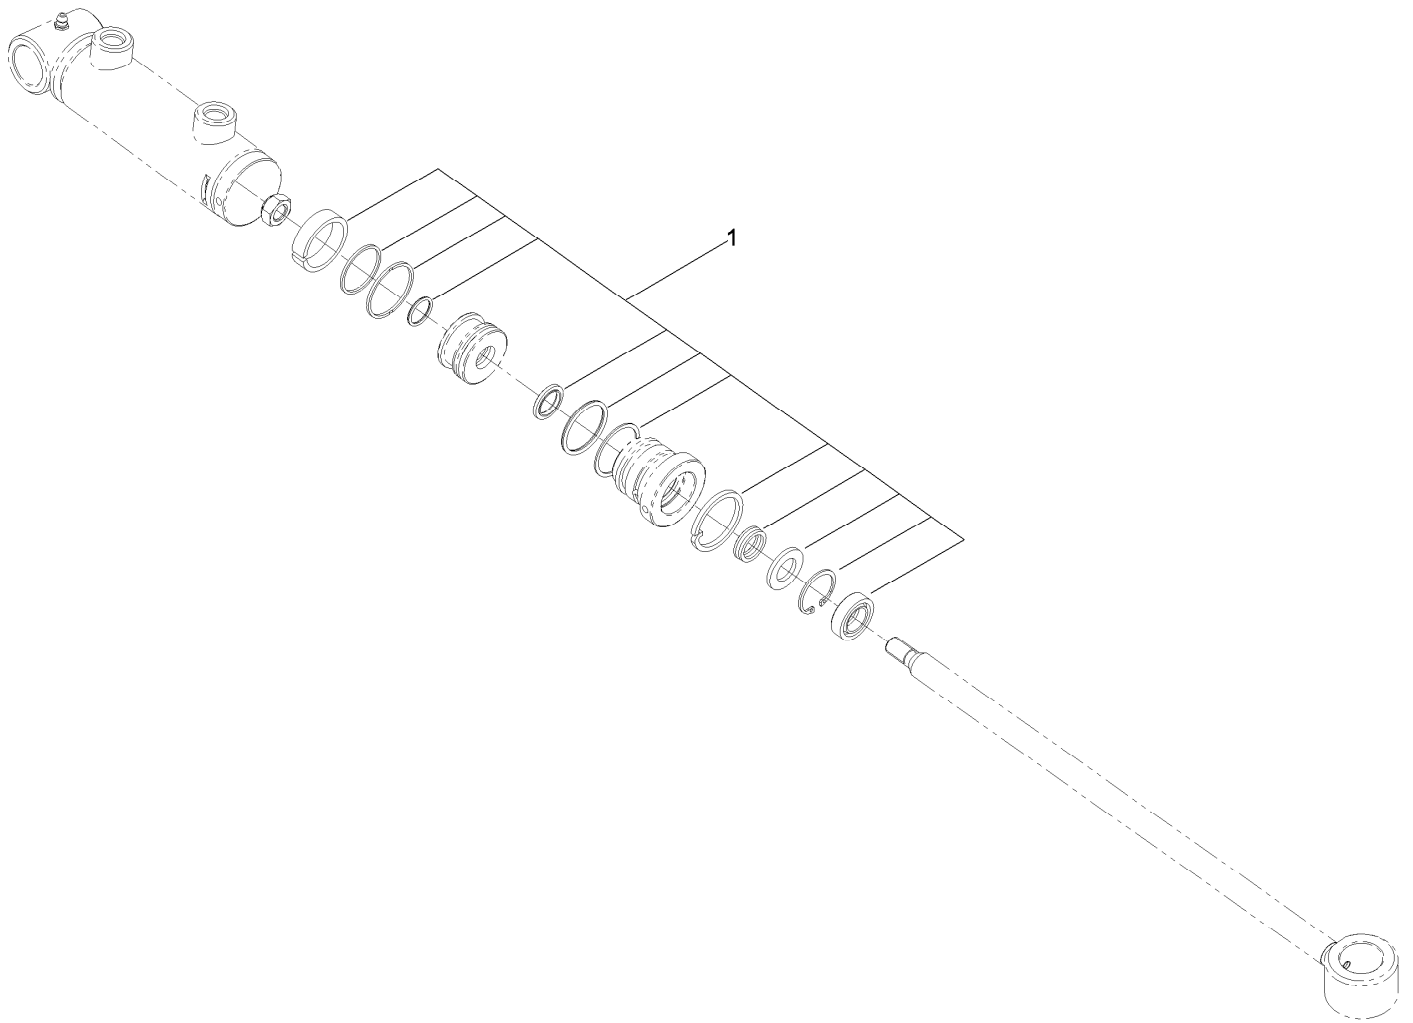

Hydraulic Cylinder Assembly No. 119-3850

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-3853	1	Seal Kit ●

 
● Not illustrated

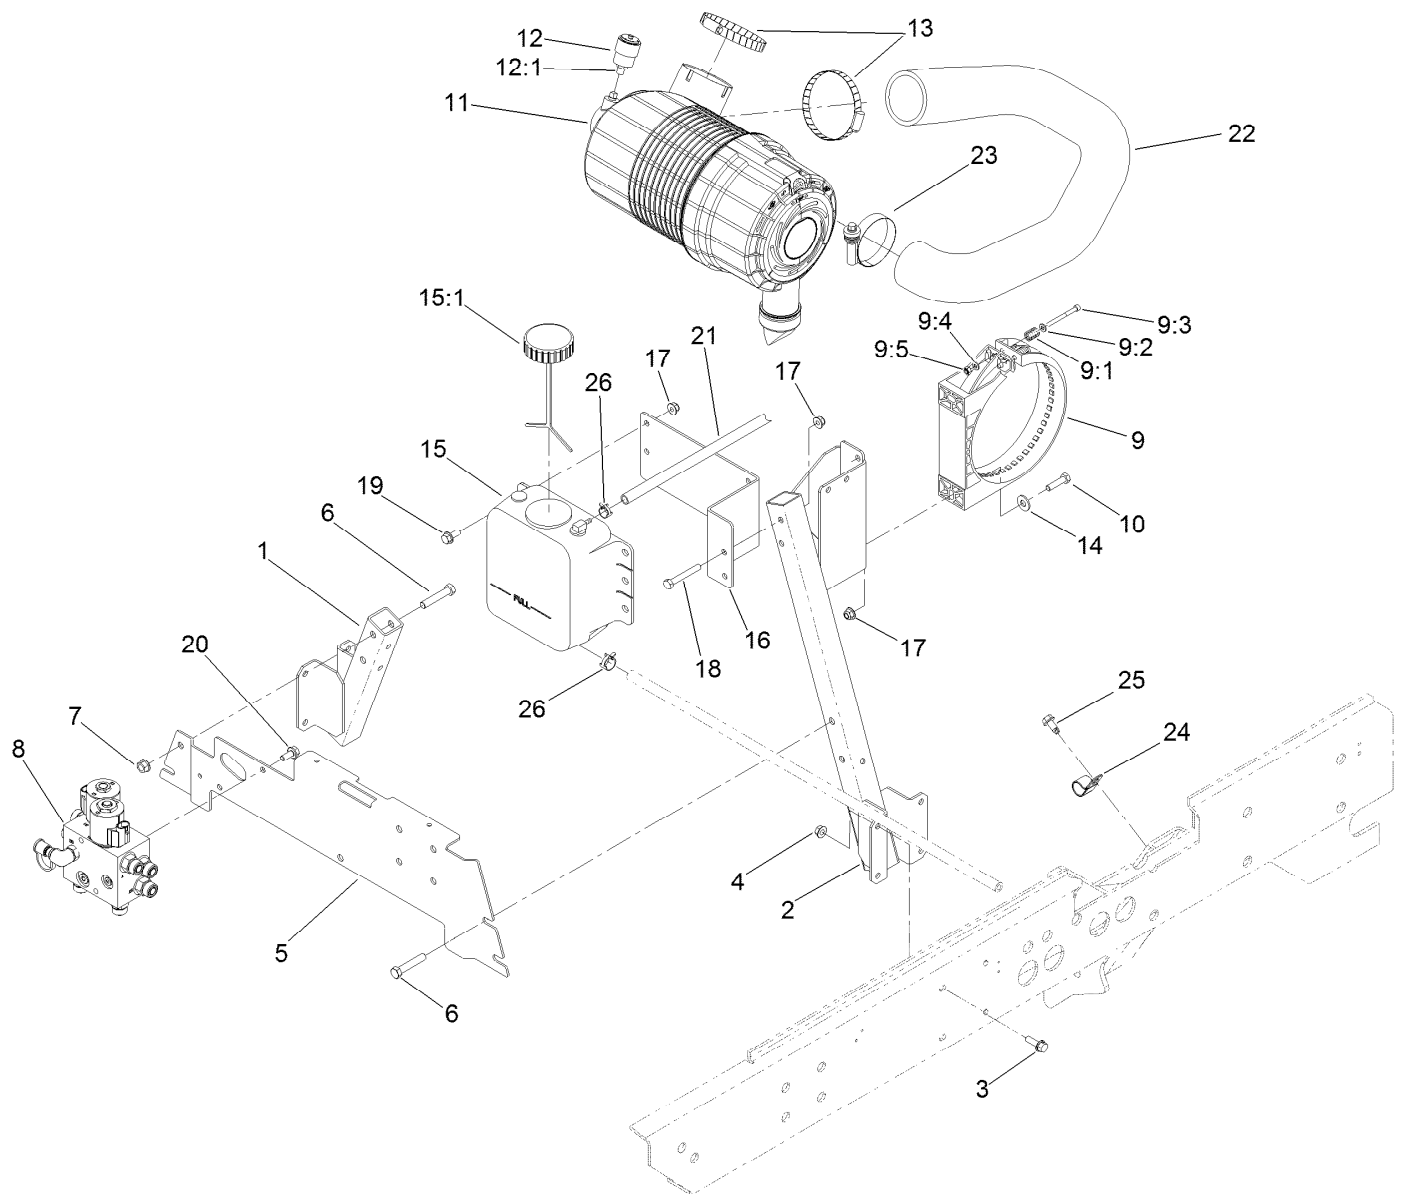

Air Cleaner and Fan Manifold Assembly

Ref.	Part Number	Qty.	Description
1	104-5420-03	1	Support-Battery
2	119-1549-03	1	A/C Bracket ASM
3	3234-29	8	Screw-HHF
4	32128-20	8	Nut-HF
5	114-8134-03	1	Bracket-Support
6	323-10	4	Screw-HH
7	32128-21	4	Nut-HF
8	119-3943	1	Fan Drive Manifold ASM
9	99-5414	1	Strap-Cleaner, Air
9:1	108-1512	2	Spring
9:2	3256-22	2	Washer-Flat
9:3	33113-050	2	Screw-HH
9:4	33093-00	2	Washer-Flat
9:5	33023-00	2	Nut-Lock
10	322-6	2	Screw-HH
11	99-5410	1	Air Cleaner ASM
12	104-3563	1	Indicator

Ref.	Part Number	Qty.	Description
12:1	94-1416	1	Adapter-Indicator
13	2412-110	2	Clamp-Hose
14	3256-3	2	Washer-Flat
15	104-2276	1	Reservoir-Coolant
15:1	87-7050	1	Cap-Reservoir
16	114-4187-03	1	Bracket-Tank
17	104-8300	8	Nut-Flange, NI
18	322-11	2	Screw-HH
19	3234-47	4	Screw-HHF
20	100-1668	2	Screw-Flange
21	110-3258	1	Hose-Fuel
22	119-1452	1	Hose-Air Cleaner
23	104-9240	1	Clamp-Hose
24	2412-4	1	Clamp
25	32104-32	1	Screw-HWH
26	92-2379	2	Clamp-Hose

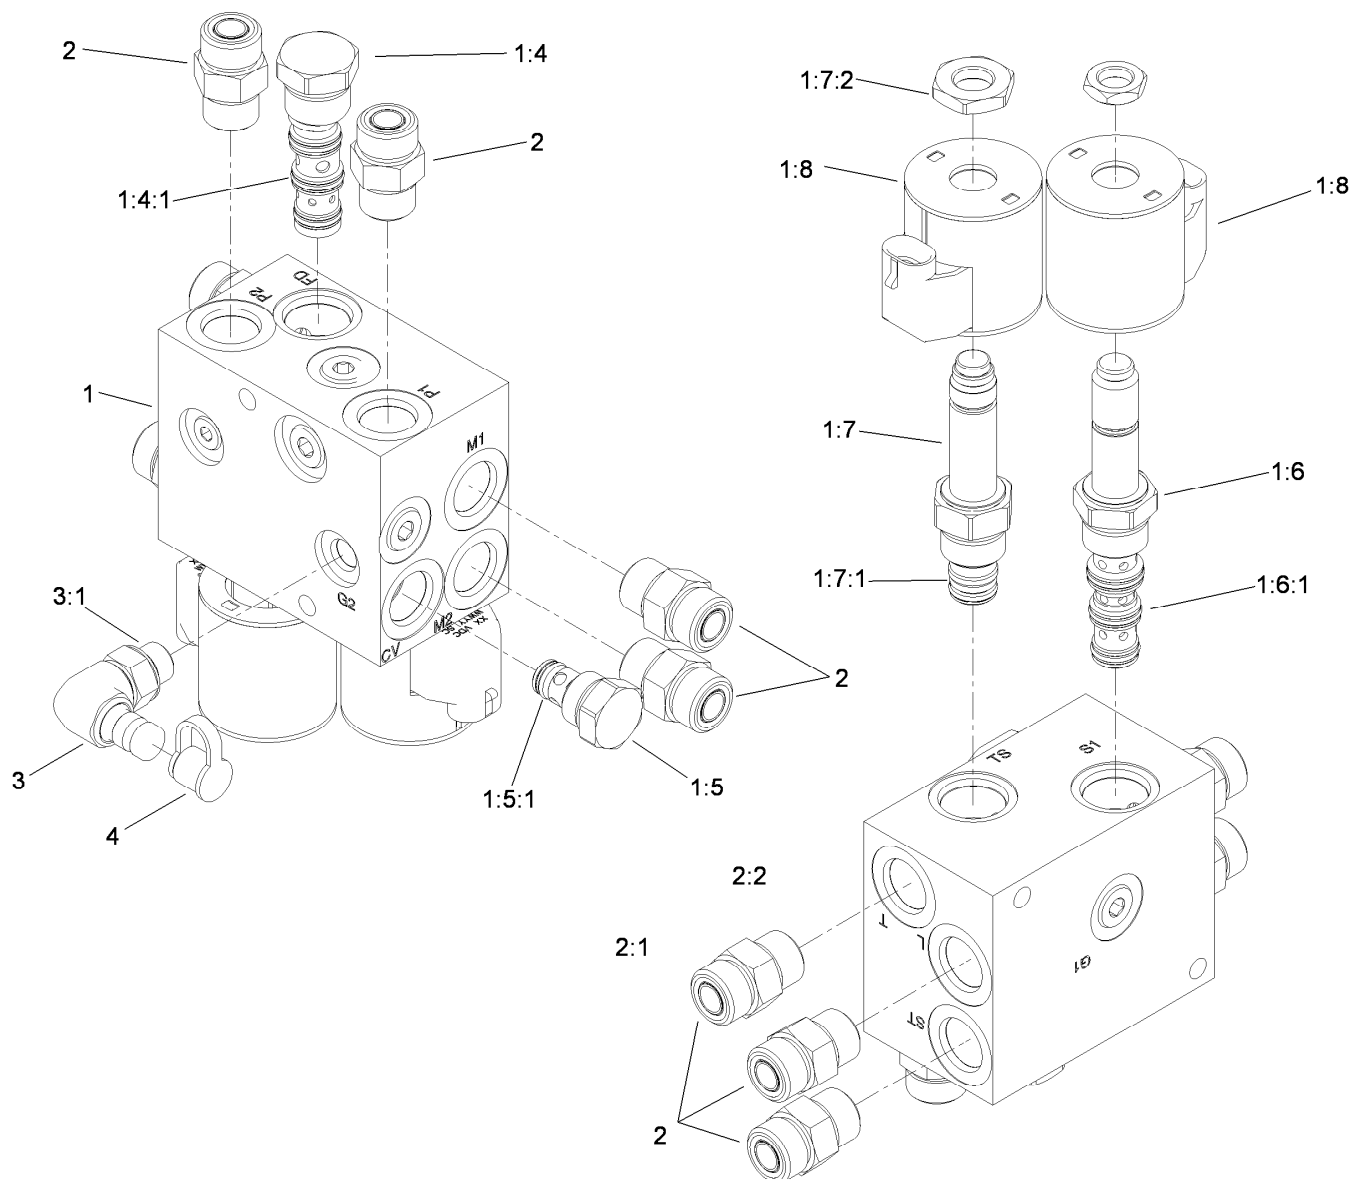 


Fan Drive Manifold Assembly No. 119-3943

Ref.	Part Number	Qty.	Description
1		1	Fan Drive Manifold ASM ●
1:4	115-3024	1	Flow Divider
1:4:1	115-3025	1	Seal Kit
1:5	105-9321	1	Check Valve ASM
1:5:1	105-9156	1	Seal Kit
1:6	115-3023	1	Solenoid Valve ASM
1:6:1	110-8908	1	Spool Valve Seal Kit
1:7	115-3022	1	Relief-Proportional
1:7:1	110-6316	1	Seal Kit

Ref.	Part Number	Qty.	Description
1:7:2	119-7715	1	Nut-Coil
1:8	110-6344	2	Coil-12V, Dc
2	340-4	7	Fitting-HYD, Straight
2:1	237-30	1	O-Ring
2:2	237-79	1	O-Ring
3	115-9147	1	Fitting-Elbow, 90 DEG
3:1	237-78	1	O-Ring
4	354-79	1	Cap-Dust

 
● Not serviced separately

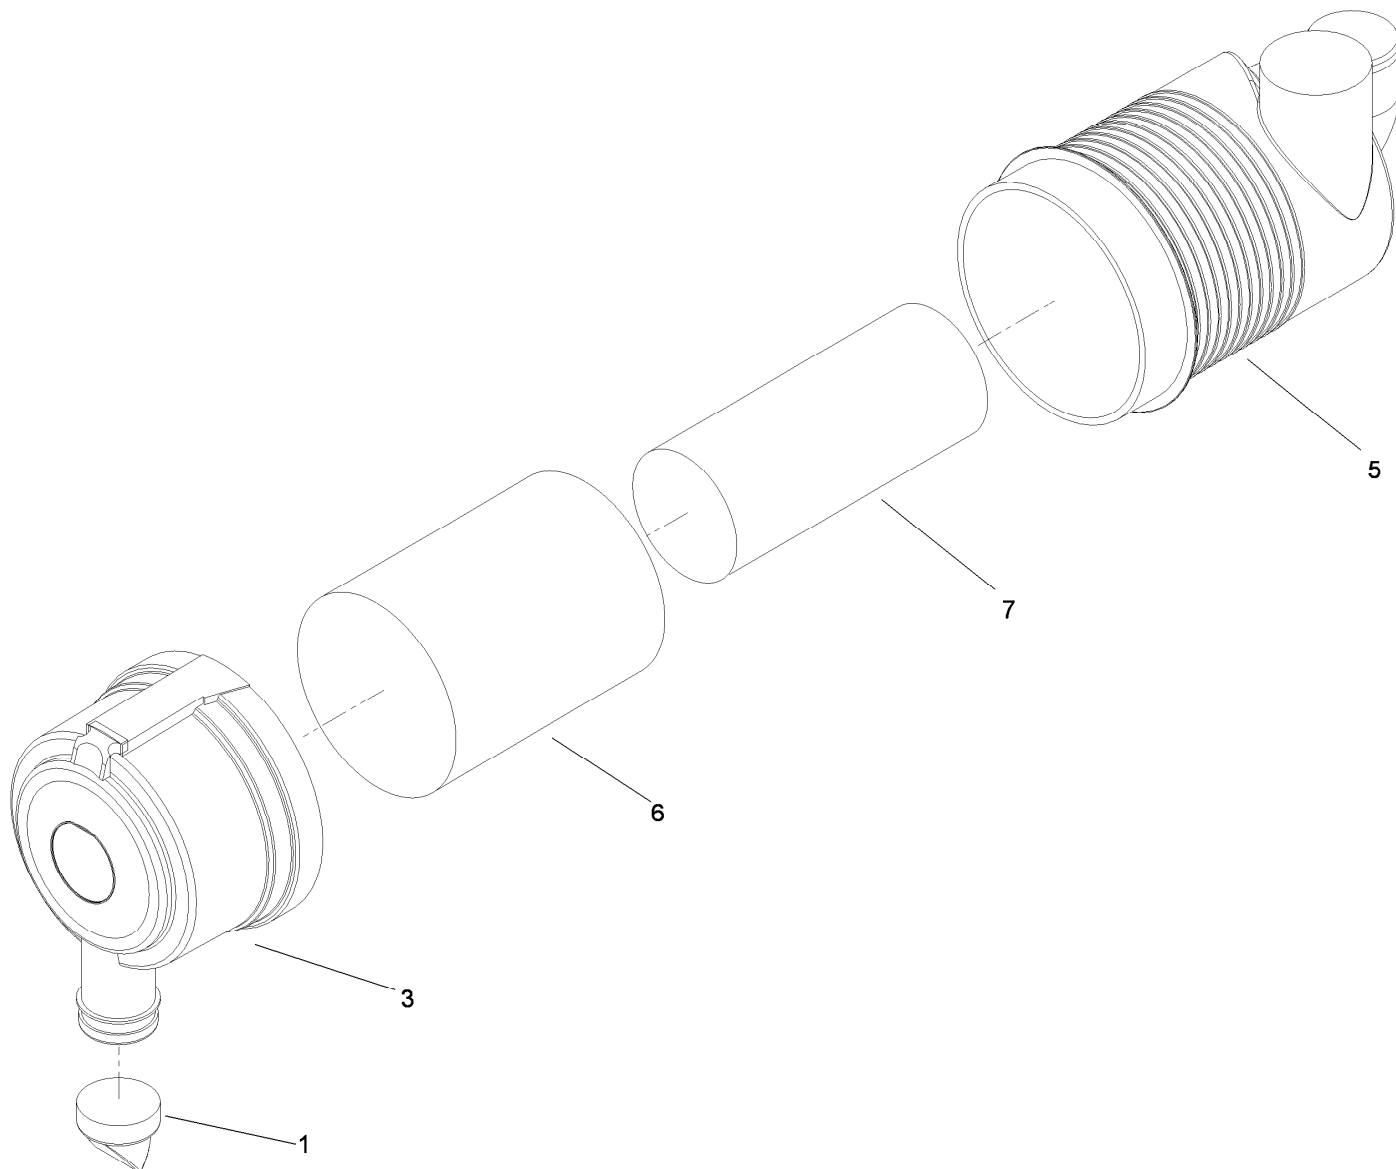

Air Cleaner Assembly No. 99-5410

Ref.	Part Number	Qty.	Description
1	104-4258	1	Valve-Vacuator
3	104-4259	1	Cover
5		1	Body ASM ●
6	108-3814	1	Filter-Air
7	108-3816	1	Filter-Air

 
● Not serviced separately

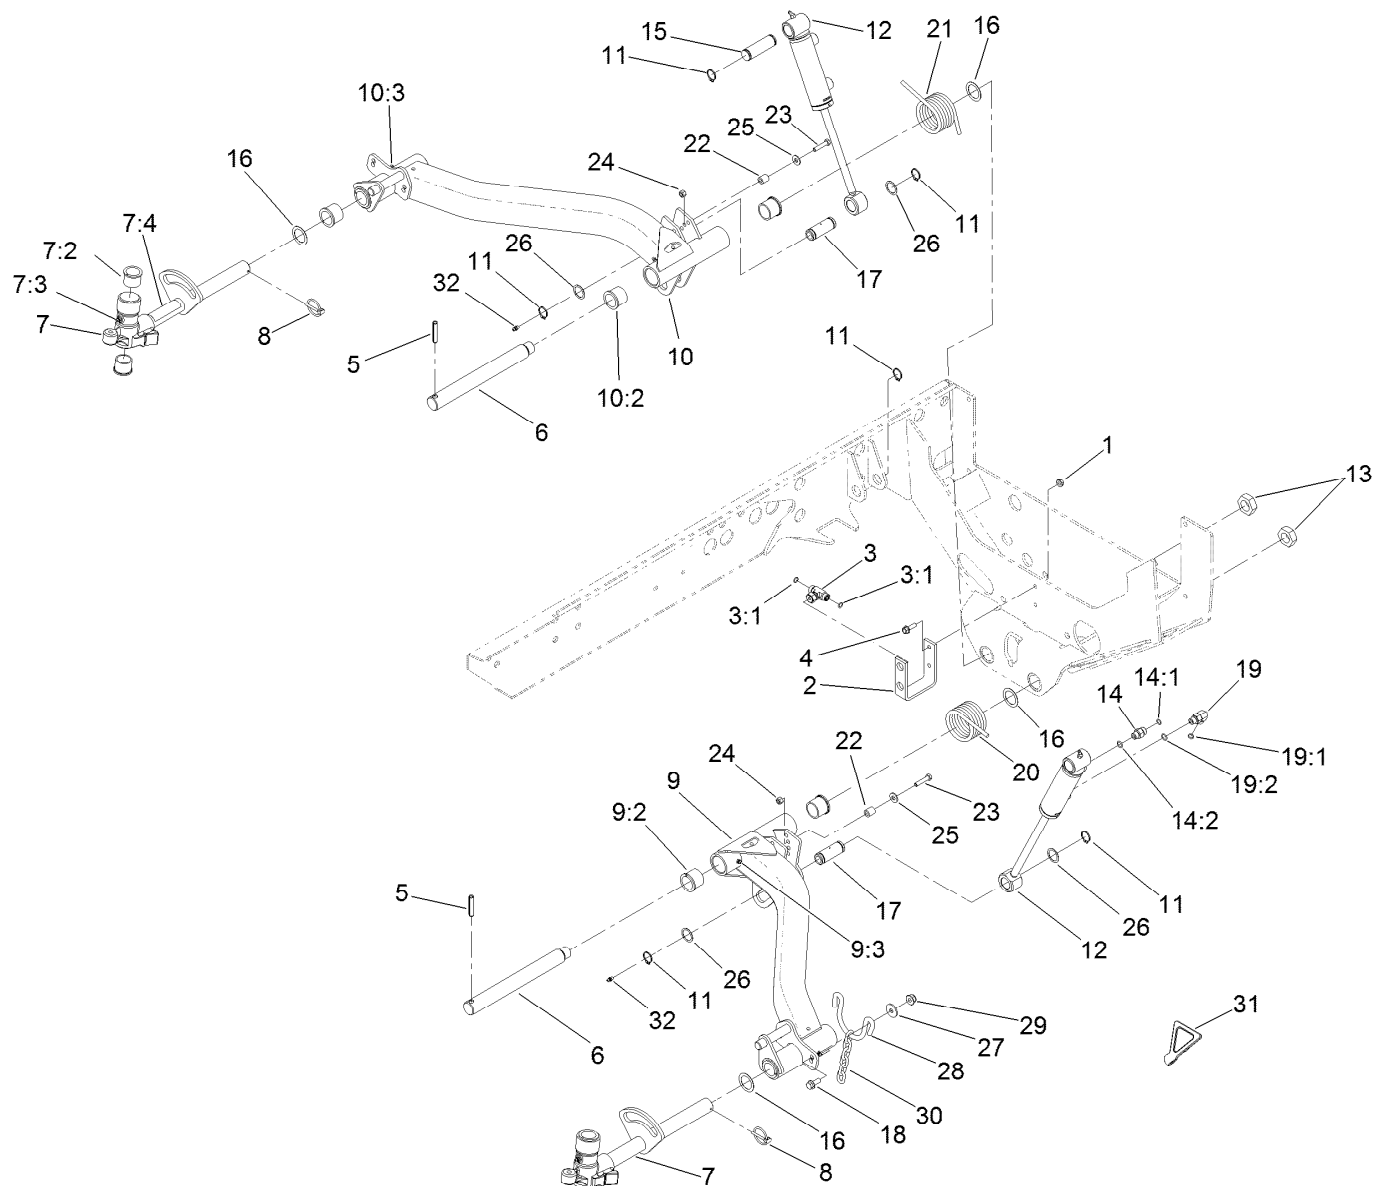

No. 2 and 3 Lift Arm Assembly


Ref.	Part Number	Qty.	Description
1	32128-20	2	Nut-HF
2	105-3992-03	1	Bracket-Bulkhead
3	340-166	2	Fitting-Tee, HYD
3:1	237-22	2	O-Ring
4	3234-17	2	Screw-HHF
5	32121-110	2	Pin-Roll, Slotted
6	95-7158	2	Pin-Pivot
7	117-0954	2	Pivot Yoke ASM
7:2	104-0015	2	Bushing-Flange
7:3	302-5	1	Fitting-Grease
7:4	110-9642	1	Decal-Warning
8	92-1298	2	Pin-Lynch
9	119-1502	1	#2 Lift Arm ASM
9:2	104-0015	4	Bushing-Flange
9:3	302-5	2	Fitting-Grease
10	119-1503	1	#3 Lift Arm ASM
10:2	104-0015	4	Bushing-Flange
10:3	302-5	2	Fitting-Grease
11	32151-36	8	Ring-Retaining
12	119-3851	2	HYD Cylinder ASM
13	3296-49	2	Nut-Lock, NI

Ref.	Part Number	Qty.	Description
14	340-2	2	Fitting-HYD, Straight
14:1	237-22	1	O-Ring
14:2	237-42	1	O-Ring
15	92-7548	2	Pin-Cylinder
16	76-2980	4	Washer-Thrust
17	119-3894	2	Pin-Plain
18	119-4061	4	Screw-HHF
19	340-77	2	Fitting-HYD, 90 DEG
19:1	237-22	1	O-Ring
19:2	237-42	1	O-Ring
20	119-1480	1	Spring-Torsion, LH
21	119-1481	1	Spring-Torsion, RH
22	82-6840	2	Spacer
23	322-7	2	Screw-HH
24	3296-29	2	Nut-Lock, NI
25	3256-3	2	Washer-Flat
26	5-1550	4	Washer
27	63-8410	4	Washer
28	110-0922	2	Hoop-Chain
29	104-8301	4	Nut-Flange, NI
30	5-1096	2	Chain-Lift

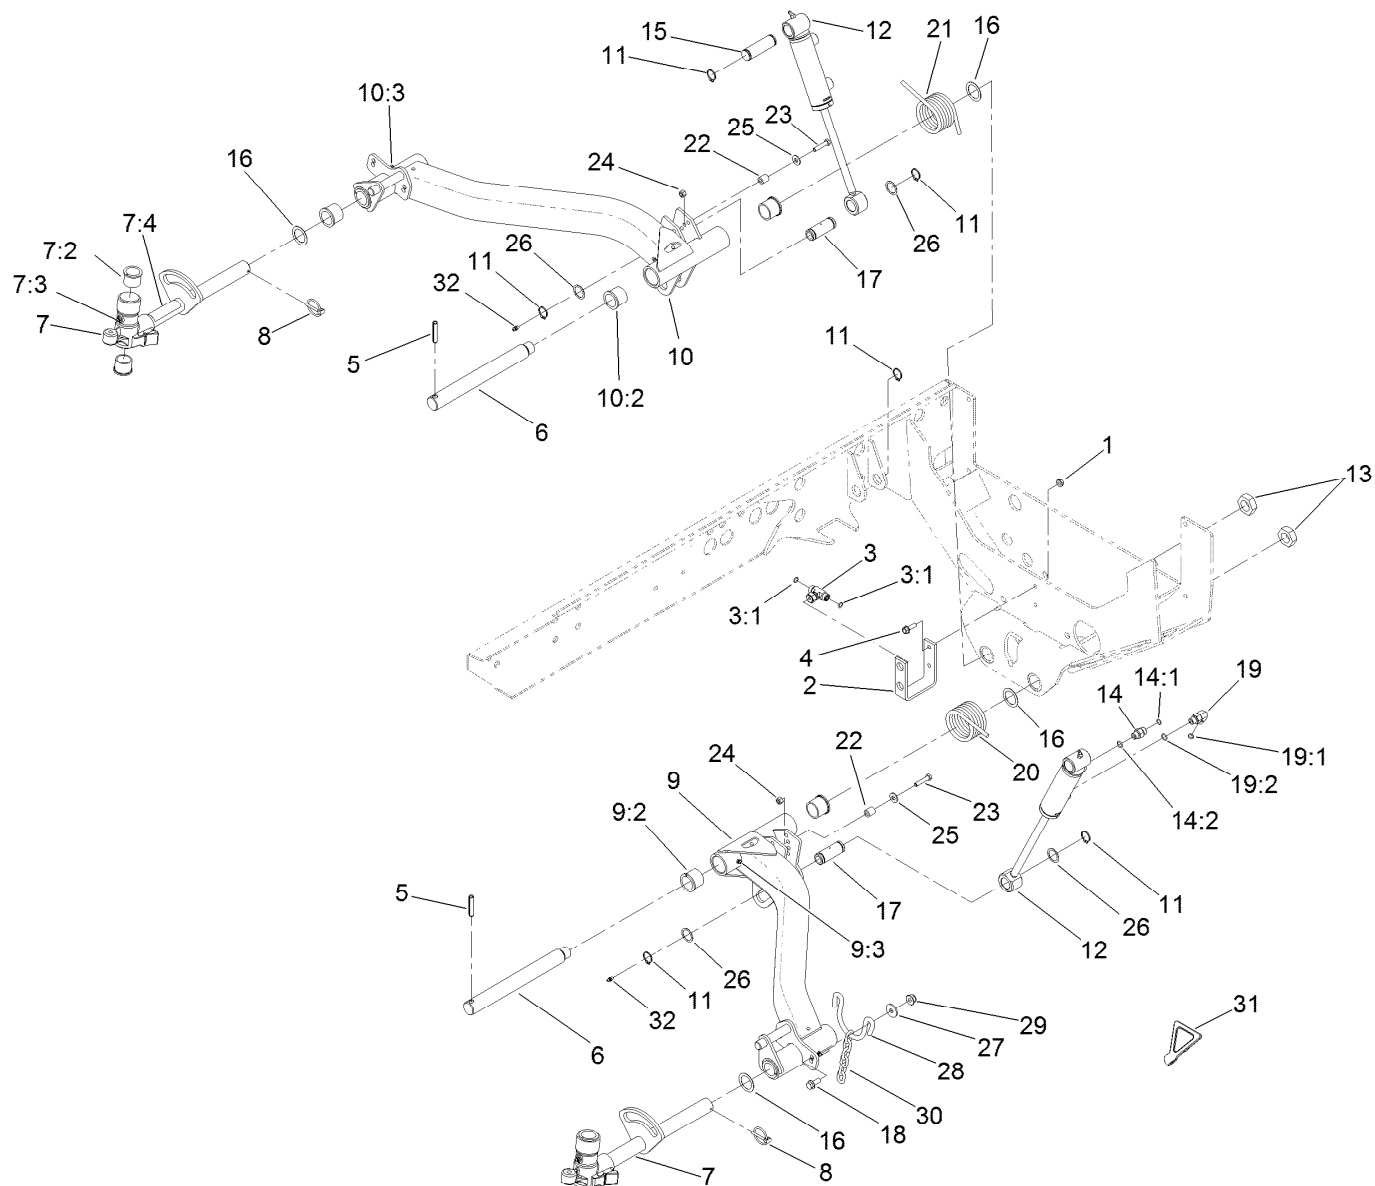 


No. 2 and 3 Lift Arm Assembly (continued)

Ref.	Part Number	Qty.	Description
31	119-8010-03	1	Kickstand
32	302-5	2	Fitting-Grease

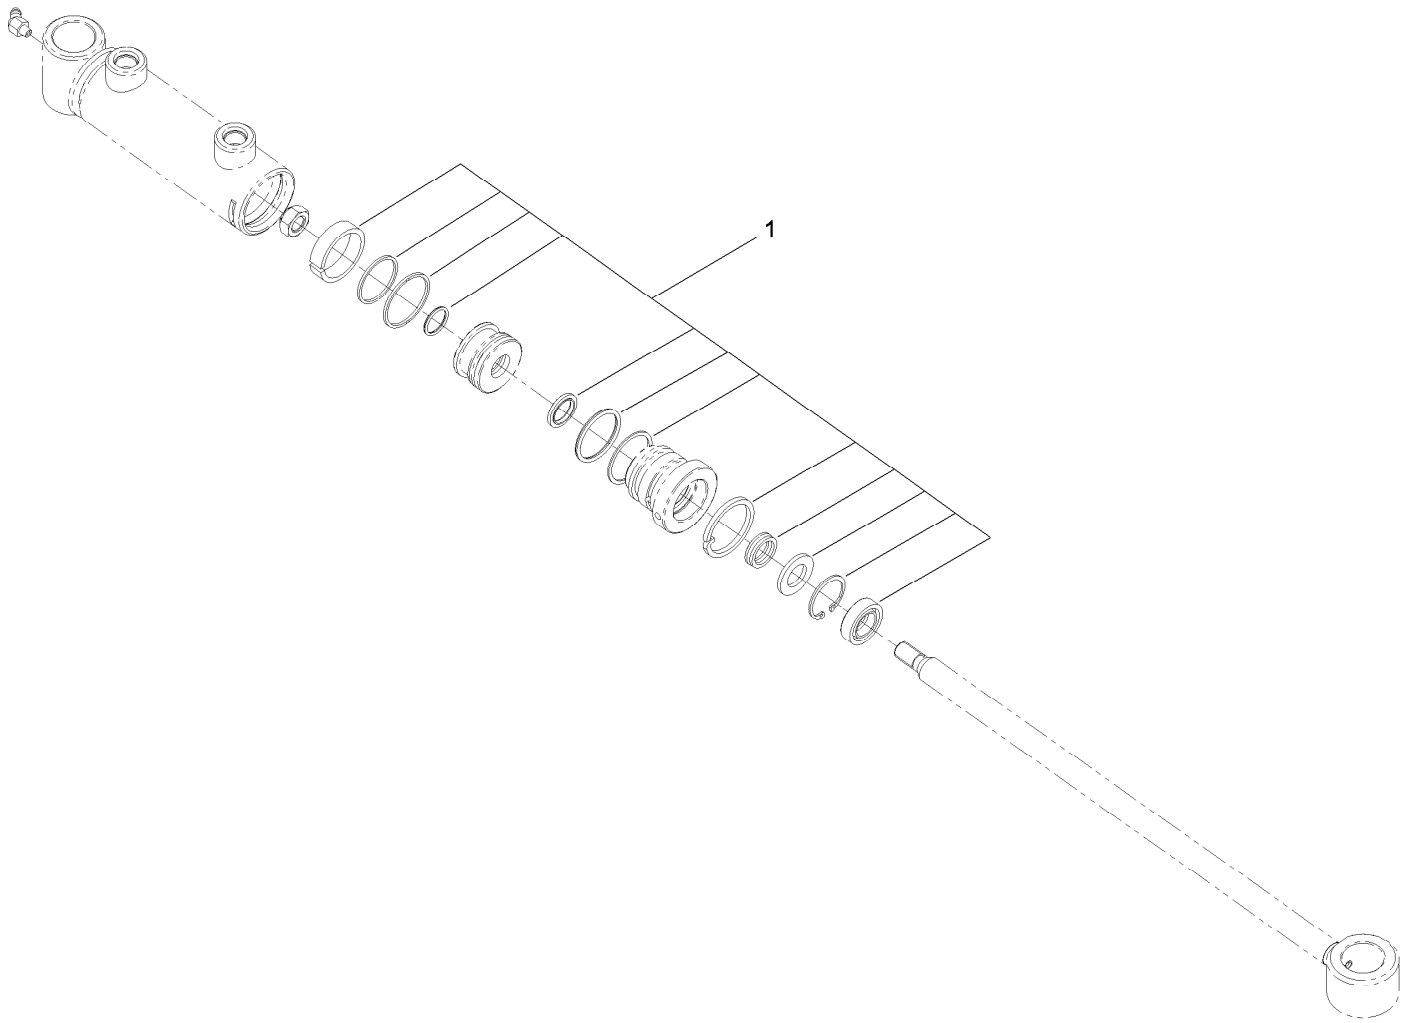 


Hydraulic Cylinder Assembly No. 119-3851

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-3853	1	Seal Kit

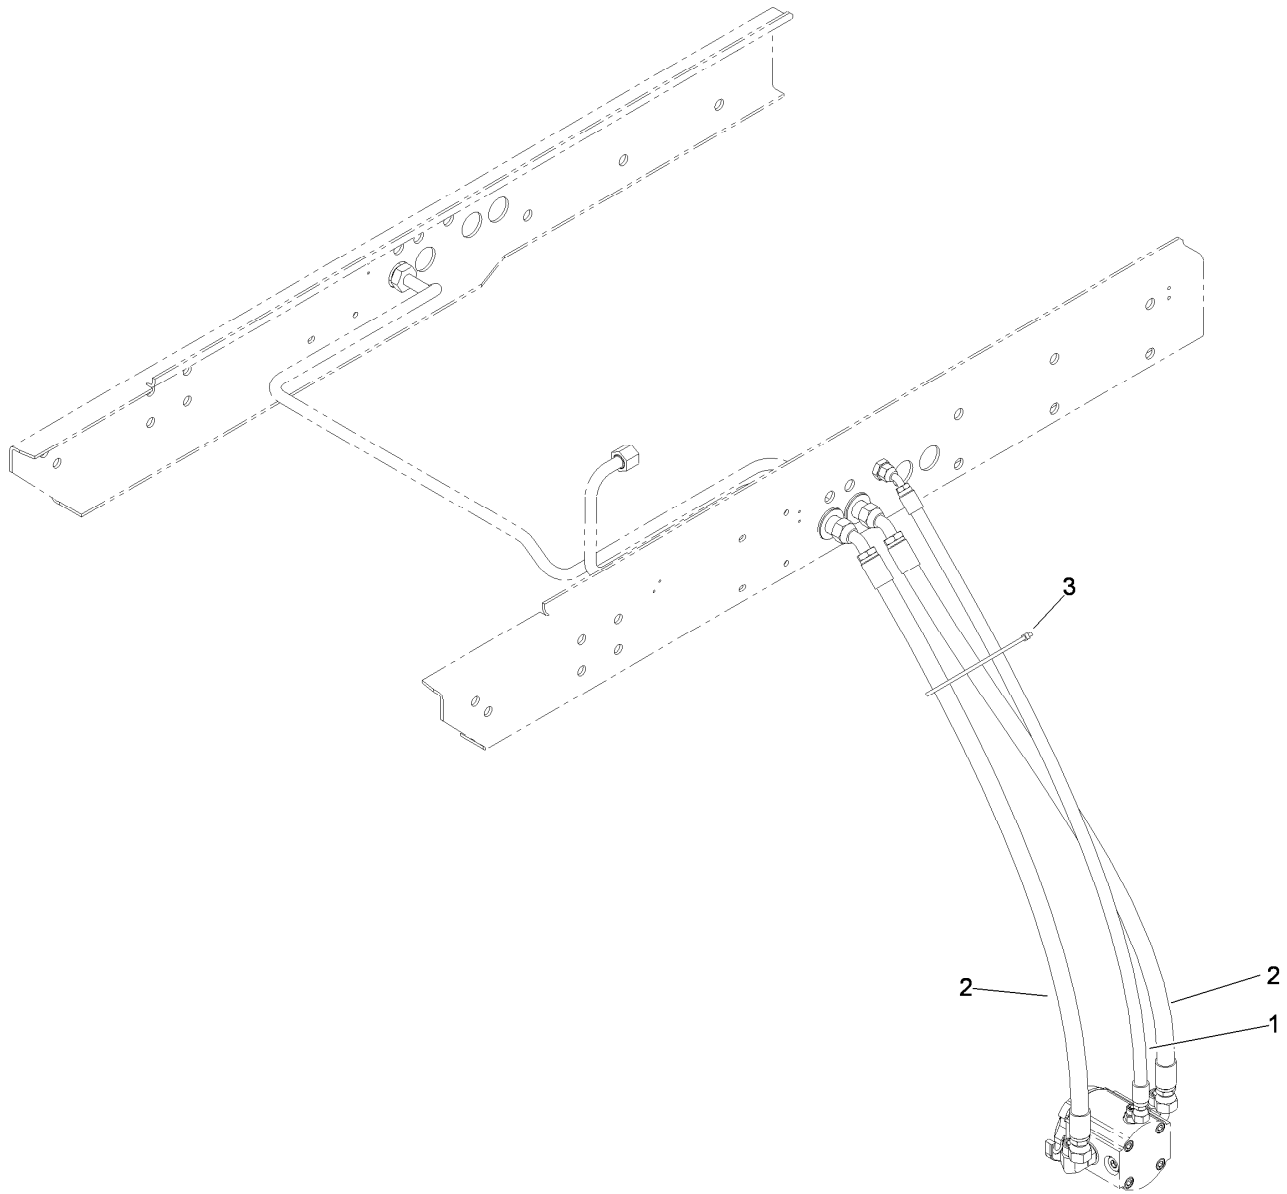 

No. 2 and 3 Hydraulic Hose Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-3914	2	Hose ASM
2	119-3913	4	Hose ASM
3	3334-945	2	Tie-Cable

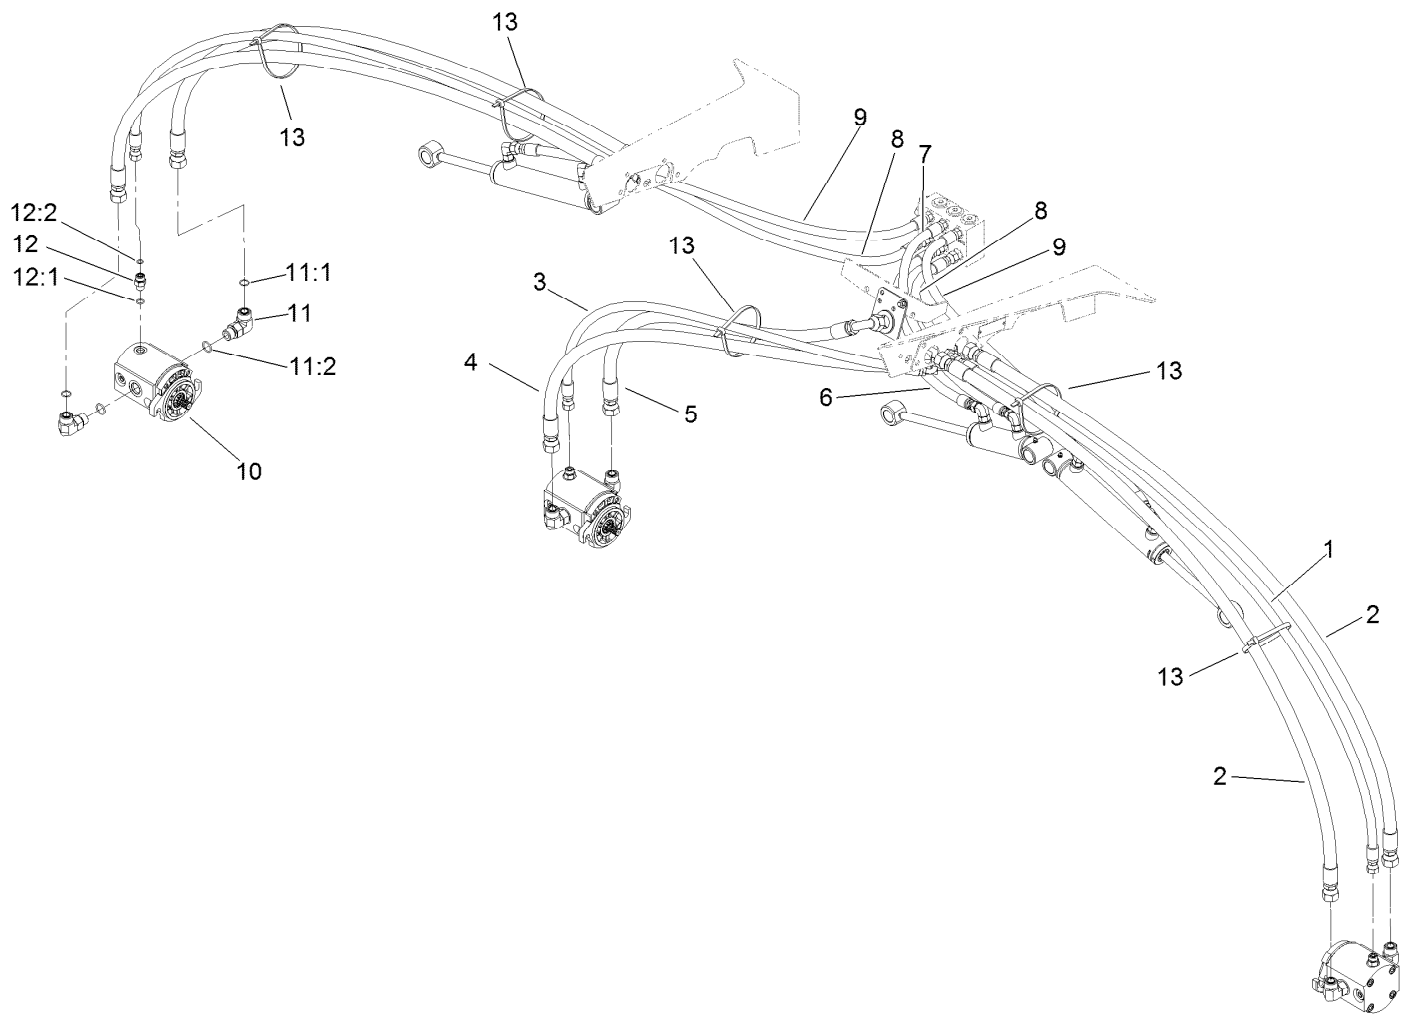 

No. 1, 4 and 5 Hydraulic Hose Assembly

Ref.	Part Number	Qty.	Description
1	125-1654	2	Hose ASM
2	125-1653	4	Hose ASM
3	125-1656	1	Hose ASM
4	98-7402	1	Hose ASM
5	125-1655	1	Hose ASM
6	119-1433	1	Hose ASM
7	119-3923	1	Hose ASM
8	119-3924	2	Hose ASM
9	119-3925	2	Hose ASM


Ref.	Part Number	Qty.	Description
10	115-8250	5	Gear Motor ASM
11	340-17	10	Fitting-HYD, 90 DEG
11:1	237-65	1	O-Ring
11:2	237-80	1	O-Ring
12	340-2	5	Fitting-HYD, Straight
12:1	237-22	1	O-Ring
12:2	237-42	1	O-Ring
13	3334-945	5	Tie-Cable

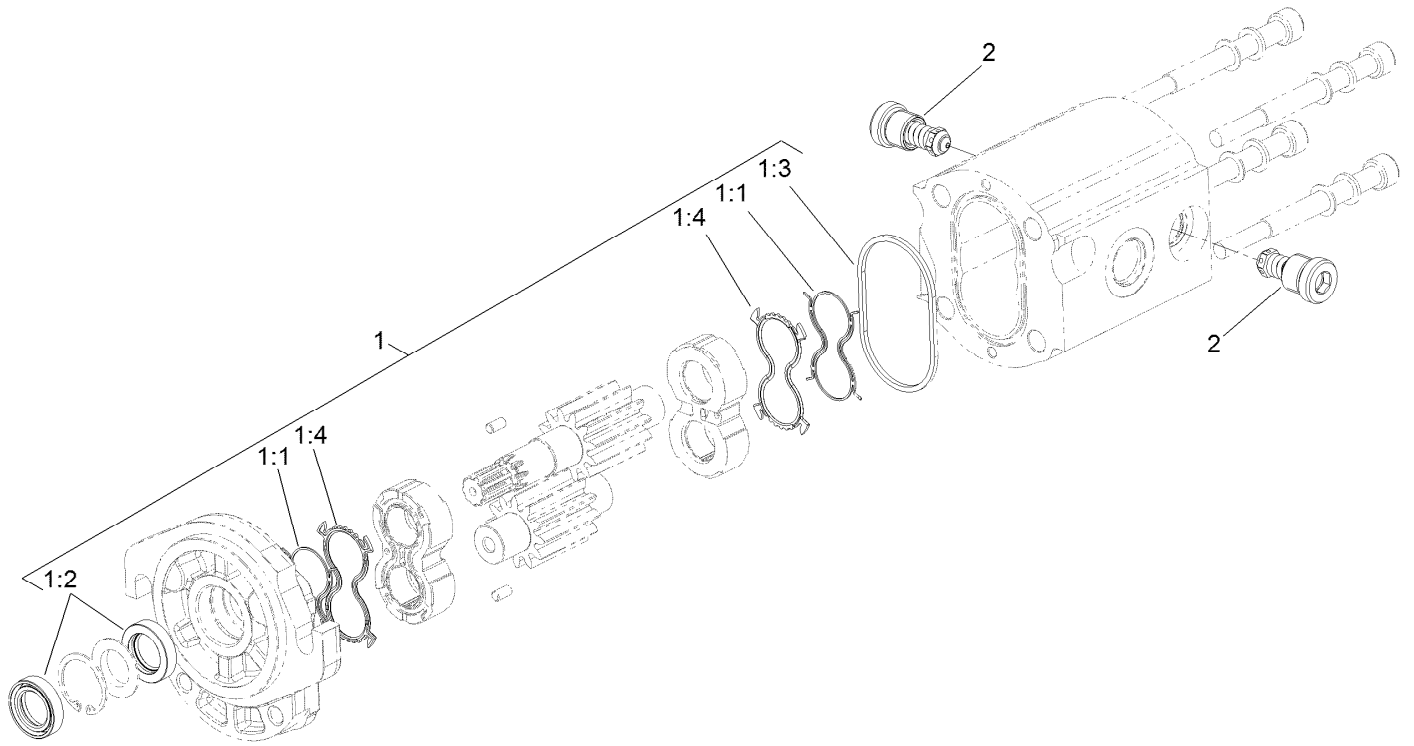 

Gear Motor Assembly No. 115-8250


Ref.	Part Number	Qty.	Description
1	125-1682	1	Motor Seal Kit
1:1		2	Seal-Anti Extrusion ●
1:2		2	Seal-Shaft ●
1:3		1	Seal-Quad ●
1:4		2	Seal ●
2	117-5107	2	Valve-Check

 ● Not serviced separately

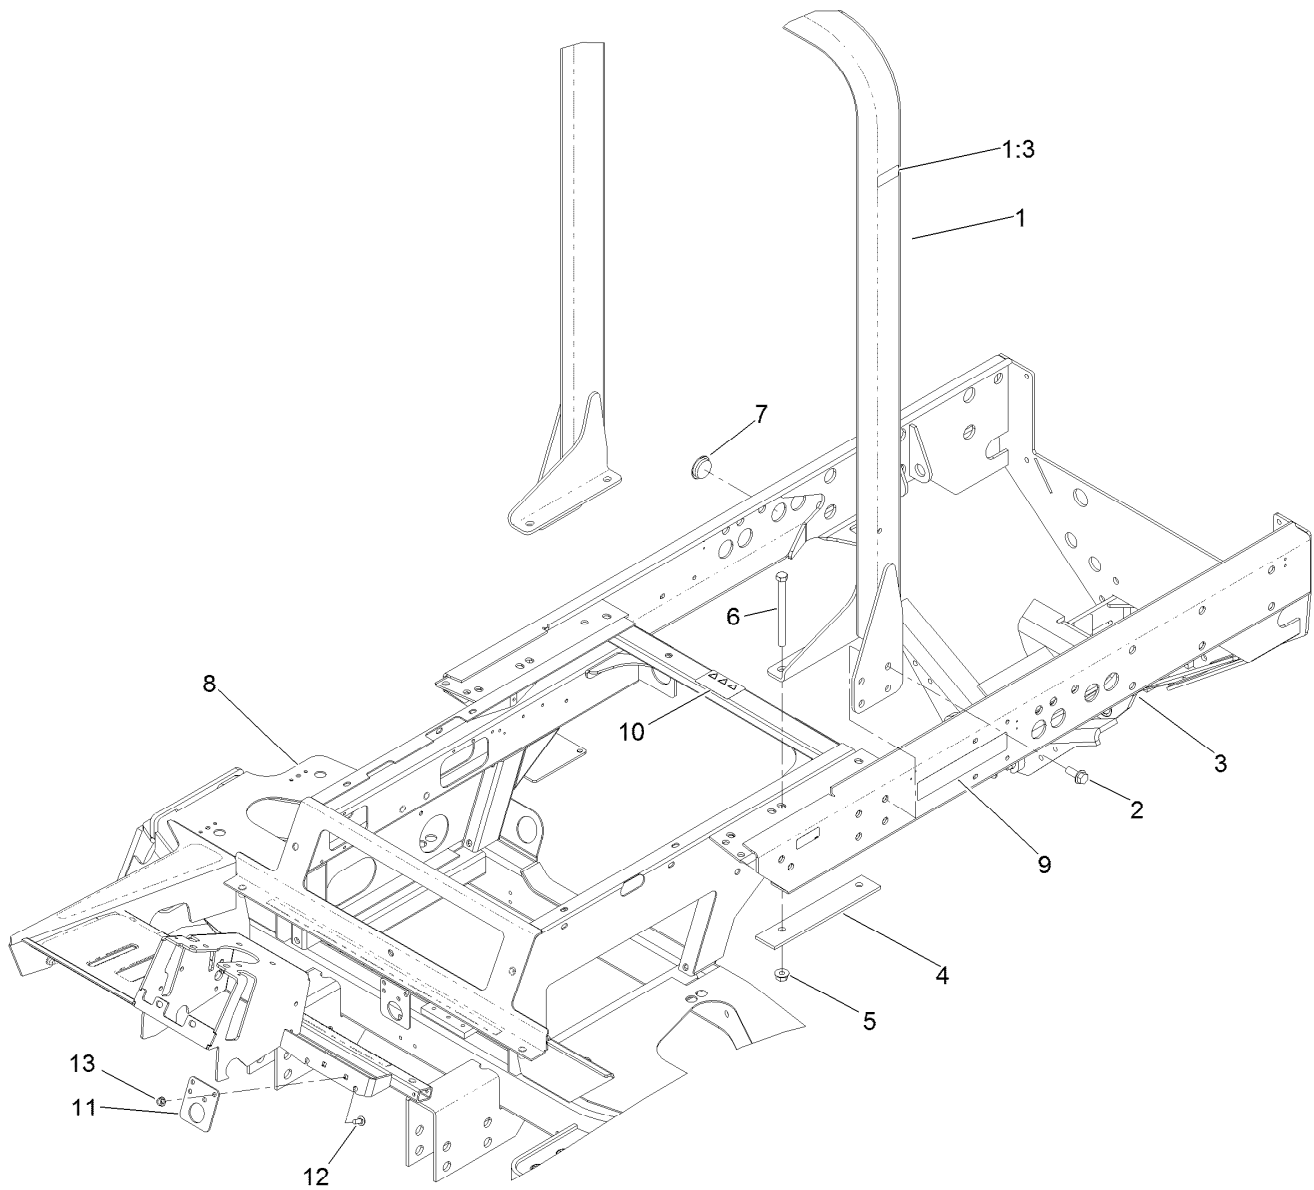


Frame and Roll-Over Protection Assembly

Ref.	Part Number	Qty.	Description
1	108-4018	1	ROPS ASM
1:3	98-4387	1	Decal-Protection, Ear
2	3234-38	12	Screw-HHF
3	115-4394-03	1	Frame-Rear
4	104-5584-03	2	Plate-Reinforcement, ROPS
5	32128-49	4	Nut-HHF
6	325-20	4	Screw-HH
7	105-9194	4	Plug
8	119-3872	1	Front Frame ASM
9	72-3560	2	Decal
10	106-6754	1	Decal-Danger
11	104-5516-01	1	Support-Tube
12	3230-23	2	Screw-CARR
13	32128-20	2	Nut-HF

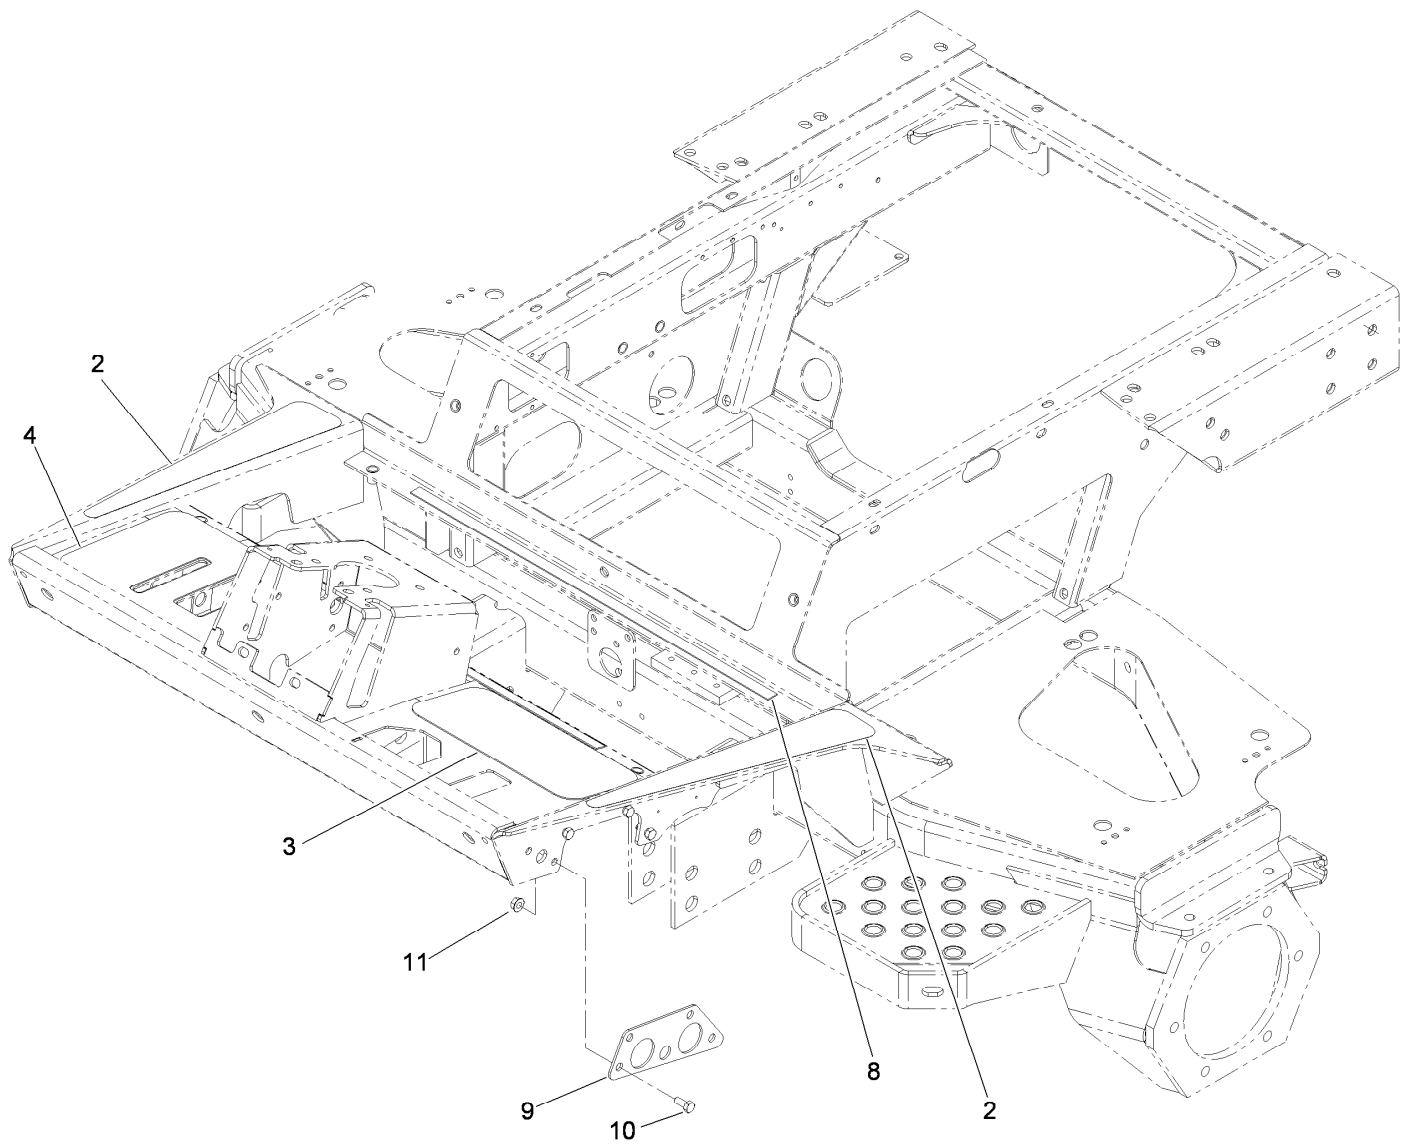 

Front Frame Assembly No. 119-3872


Ref.	Part Number	Qty.	Description
2	93-7592	2	Tread-Rest, Foot
3	75-0620	1	Tread-Foot, LH
4	119-1497	1	Tread-Foot, RH
8	105-9860	2	Seal-Foam
9	106-7794-01	2	Plate-Mount, HYD Fitting
10	322-3	8	Screw-HH
11	32128-20	8	Nut-HF

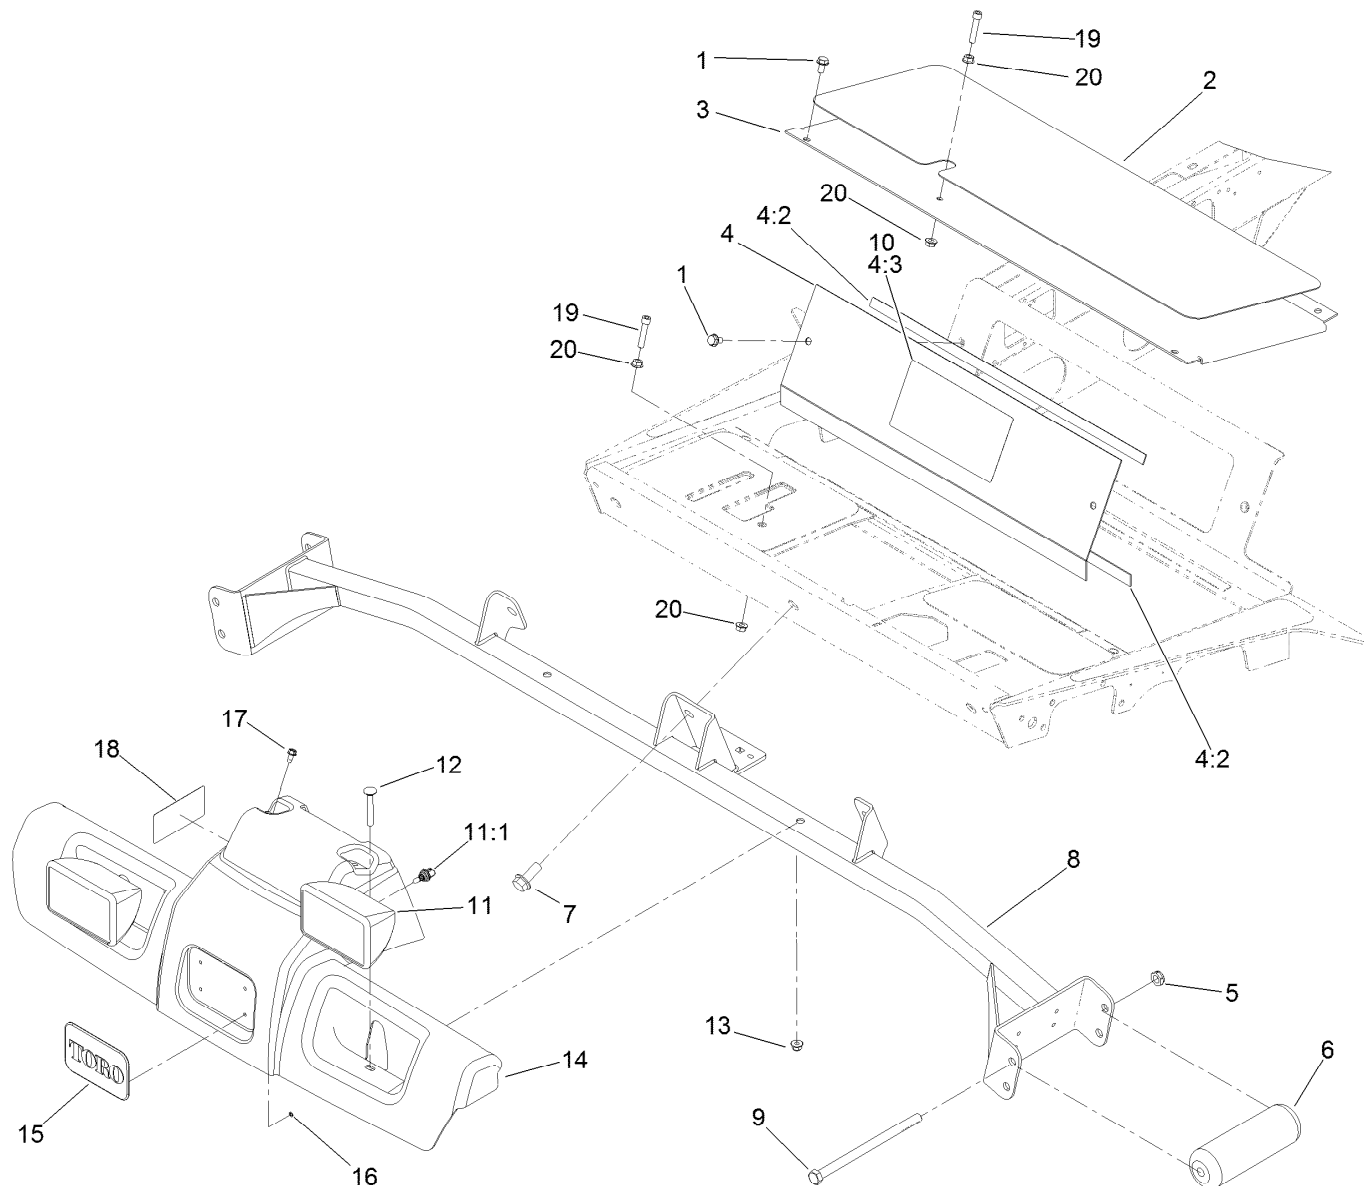 

Front Shroud and Work Light Assembly


Ref.	Part Number	Qty.	Description
1	3234-7	7	Screw-HHF
2	75-0630	1	Tread-Foot, Center
3	75-1410-01	1	Plate-Access, Floor
4	120-1687	1	Plate-Access ASM
4:2	105-9860	2	Seal-Foam
4:3	120-1683	1	Decal-Danger
5	3296-45	2	Nut-Lock, NI
6	31-0750	2	Roller-Front
7	3234-38	3	Screw-HHF
8	125-1663-01	1	Support-Roller
9	325-42	2	Screw-HH
10	120-1686	1	Decal-Danger, Ce

Ref.	Part Number	Qty.	Description
11	94-9024	2	Lamp ASM
11:1	95-0909	1	Lamp-12 Volt
12	3230-7	2	Bolt-CARR
13	104-8300	2	Nut-Flange, NI
14	115-9137	1	Shroud-Platform
15	93-6028	1	Plate-Logo
16	3254-9	4	Washer-Lock, Internal
17	32104-17	2	Screw-HWH
18	120-1670	1	Decal-Mow Speed
19	3274-18	2	Screw-HSH
20	32128-20	4	Nut-HF

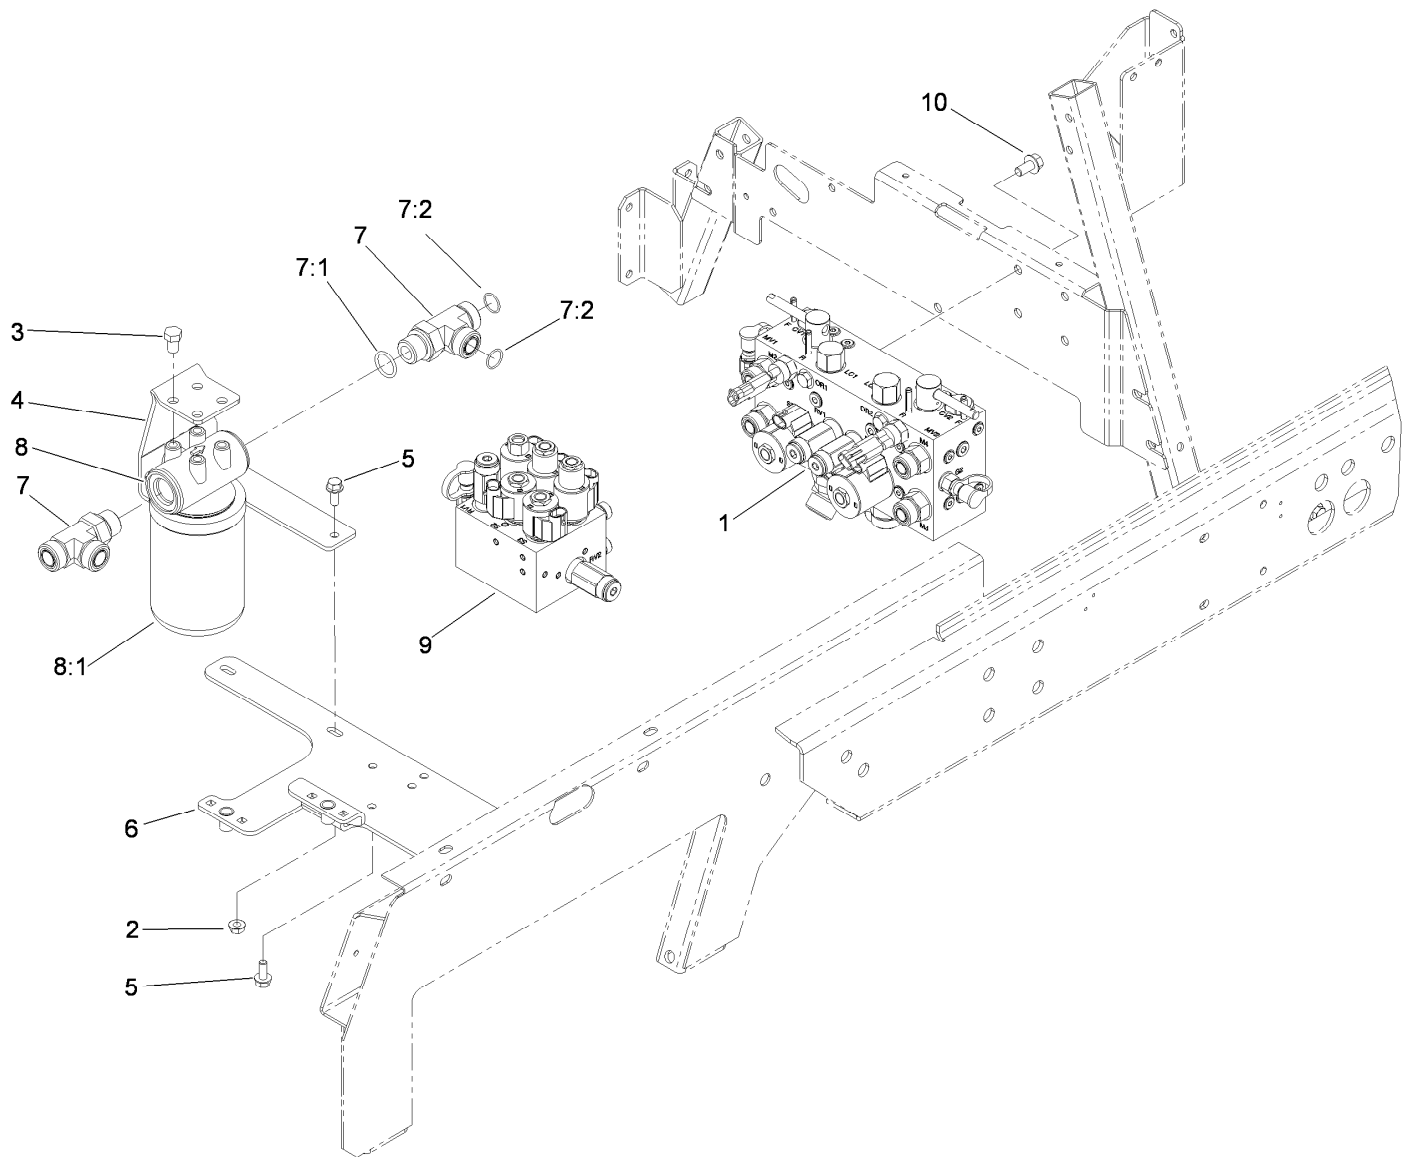 

Mow and Lift Manifold Assembly

Ref.	Part Number	Qty.	Description
1	119-1461	1	Mow Manifold ASM
2	32128-20	2	Nut-HF
3	33115-016	4	Screw-HH
4	104-5492-03	1	Bracket-Mount, Filter
5	3234-5	8	Screw-HHF
6	117-2362	1	Bracket-Mount, Valve
7	340-148	2	Fitting-Tee
7:1	237-81	1	O-Ring
7:2	237-58	2	O-Ring
8	93-2242	1	Filter-Oil
8:1	75-1310	1	Filter-HYD
9	119-1463	1	Lift Manifold ASM
10	110-1718	4	Screw-HHF

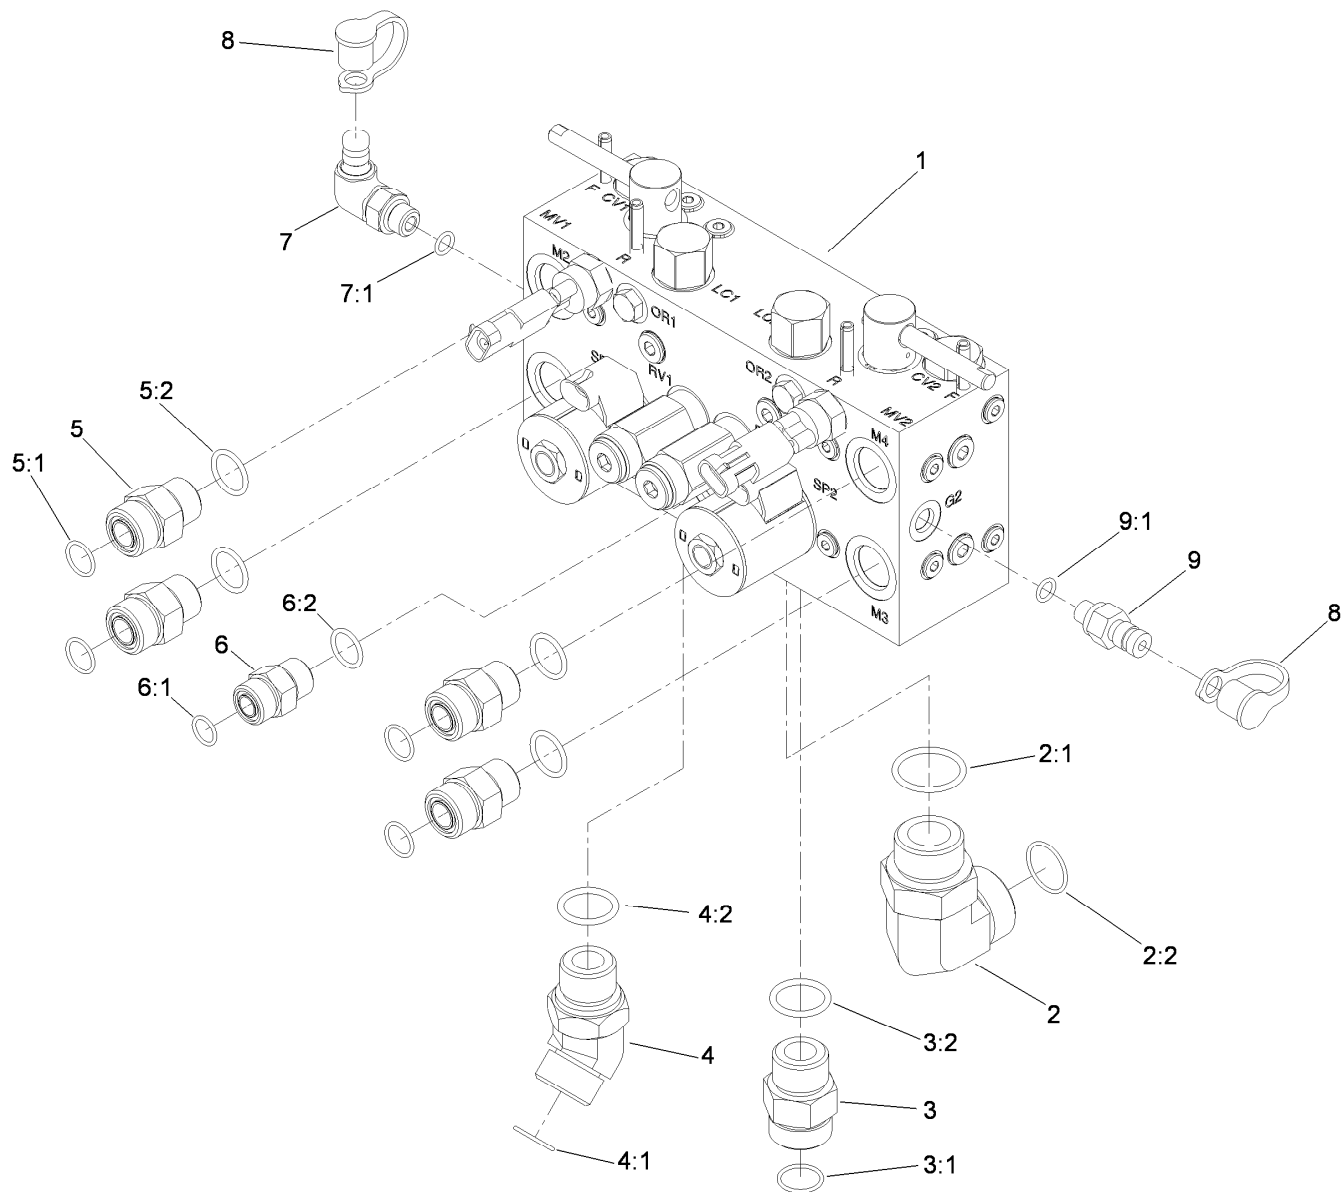 


Mow Manifold Assembly No. 119-1461

Ref.	Part Number	Qty.	Description
1		1	Manifold-Mow 5-Plex ●
2	340-129	1	Fitting-HYD, 90
2:1	237-146	1	O-Ring
2:2	340-65	1	O-Ring
3	340-9	1	Fitting-HYD, Straight
3:1	237-58	1	O-Ring
3:2	237-81	1	O-Ring
4	100-5530	1	Fitting-HYD, 45 DEG
4:1	237-58	1	O-Ring
4:2	237-81	1	O-Ring
5	340-7	4	Adapter

Ref.	Part Number	Qty.	Description
5:1	237-65	1	O-Ring
5:2	237-80	1	O-Ring
6	340-4	1	Fitting-HYD, Straight
6:1	237-30	1	O-Ring
6:2	237-79	1	O-Ring
7	115-9147	1	Fitting-Elbow, 90 DEG
7:1	237-78	1	O-Ring
8	354-79	2	Cap-Dust
9	354-77	1	Fitting-Quick
9:1	237-78	1	O-Ring

 ● Not serviced separately

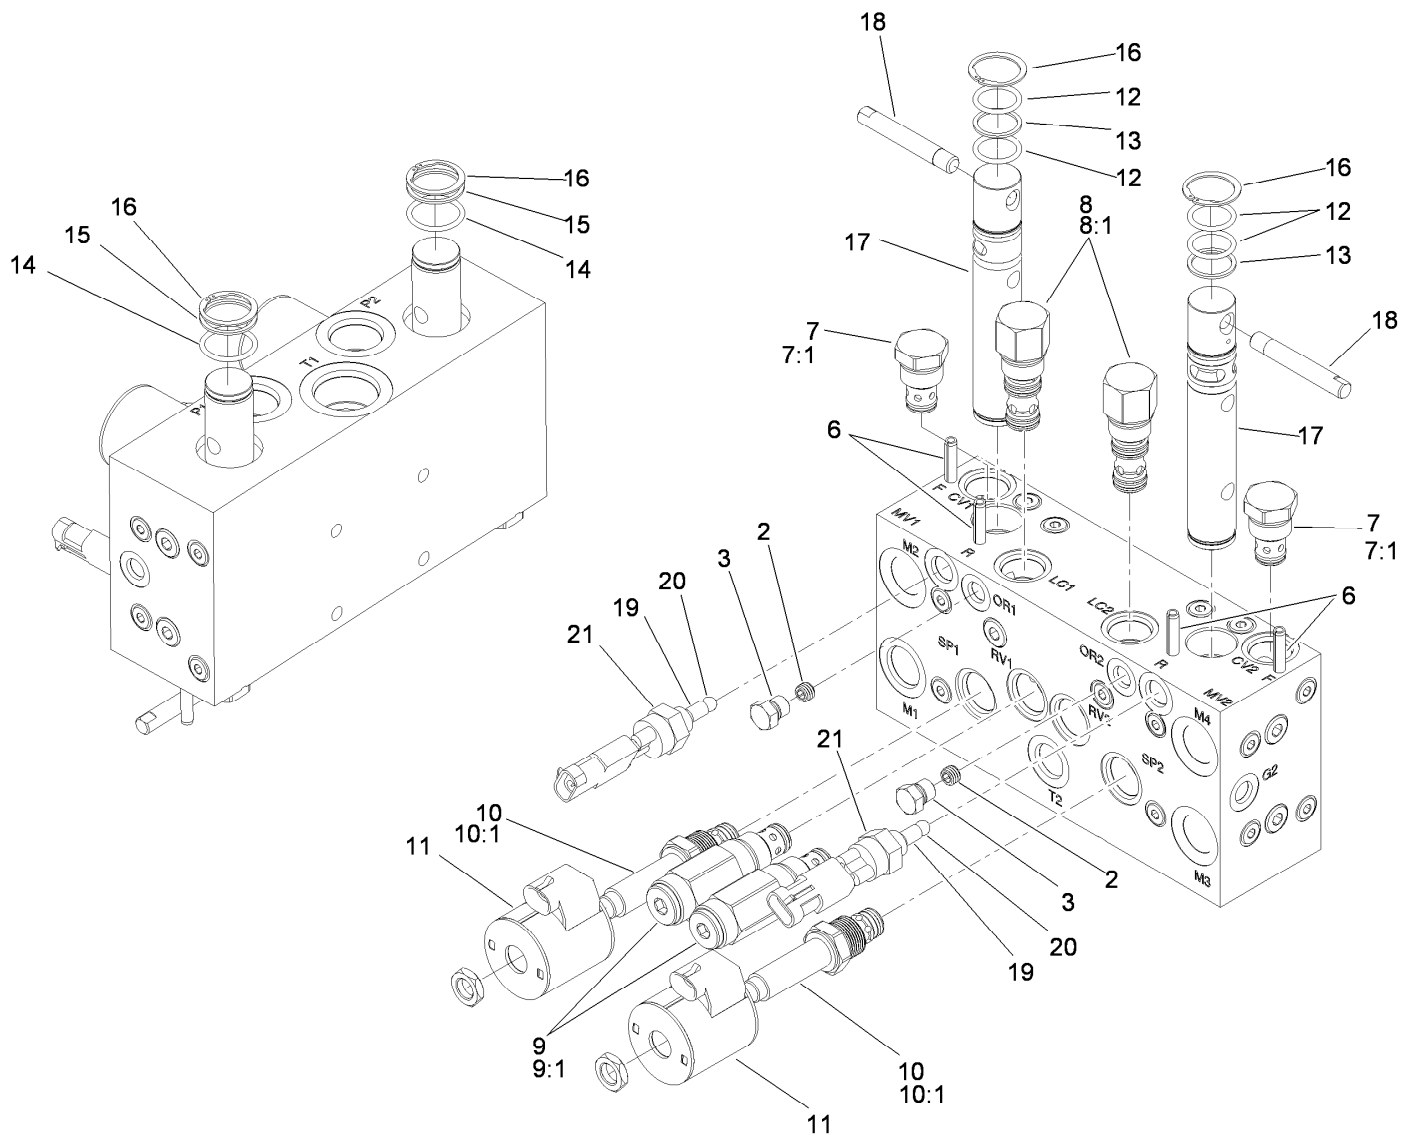


Manifold Mow Block Assembly

Ref.	Part Number	Qty.	Description
2	110-8883	2	Plug-Orifice (0.040)
3		2	Plug ■
6	112-6531	4	Pin-Spring
7	110-8881	2	Valve-Check
7:1	105-9159	1	Seal Kit ●
8	120-1693	2	Compensator-Pressure
8:1	119-2159	1	Seal Kit
9	120-1659	2	Valve-Relief, 3000 Psi
9:1	105-9159	1	Seal Kit ●
10	120-1694	2	Valve-Proportional, Nc
10:1	105-9159	1	Seal Kit

Ref.	Part Number	Qty.	Description
11	110-6344	2	Coil-12V, Dc
12	120-1657	4	O-Ring
13	120-1656	2	Ring-Backup
14	125-1652	2	O-Ring
15	120-1654	2	Ring-Backup
16	120-1653	4	Ring-Retaining, External
17	120-1652	2	Spool-Backlap
18	120-1651	2	Handle-Spool
19	120-1650	2	Pin
20	117-4605	2	Ball-Ss
21	72-4320	2	Switch-Ball

● Not illustrated

 
■ Not serviced separately

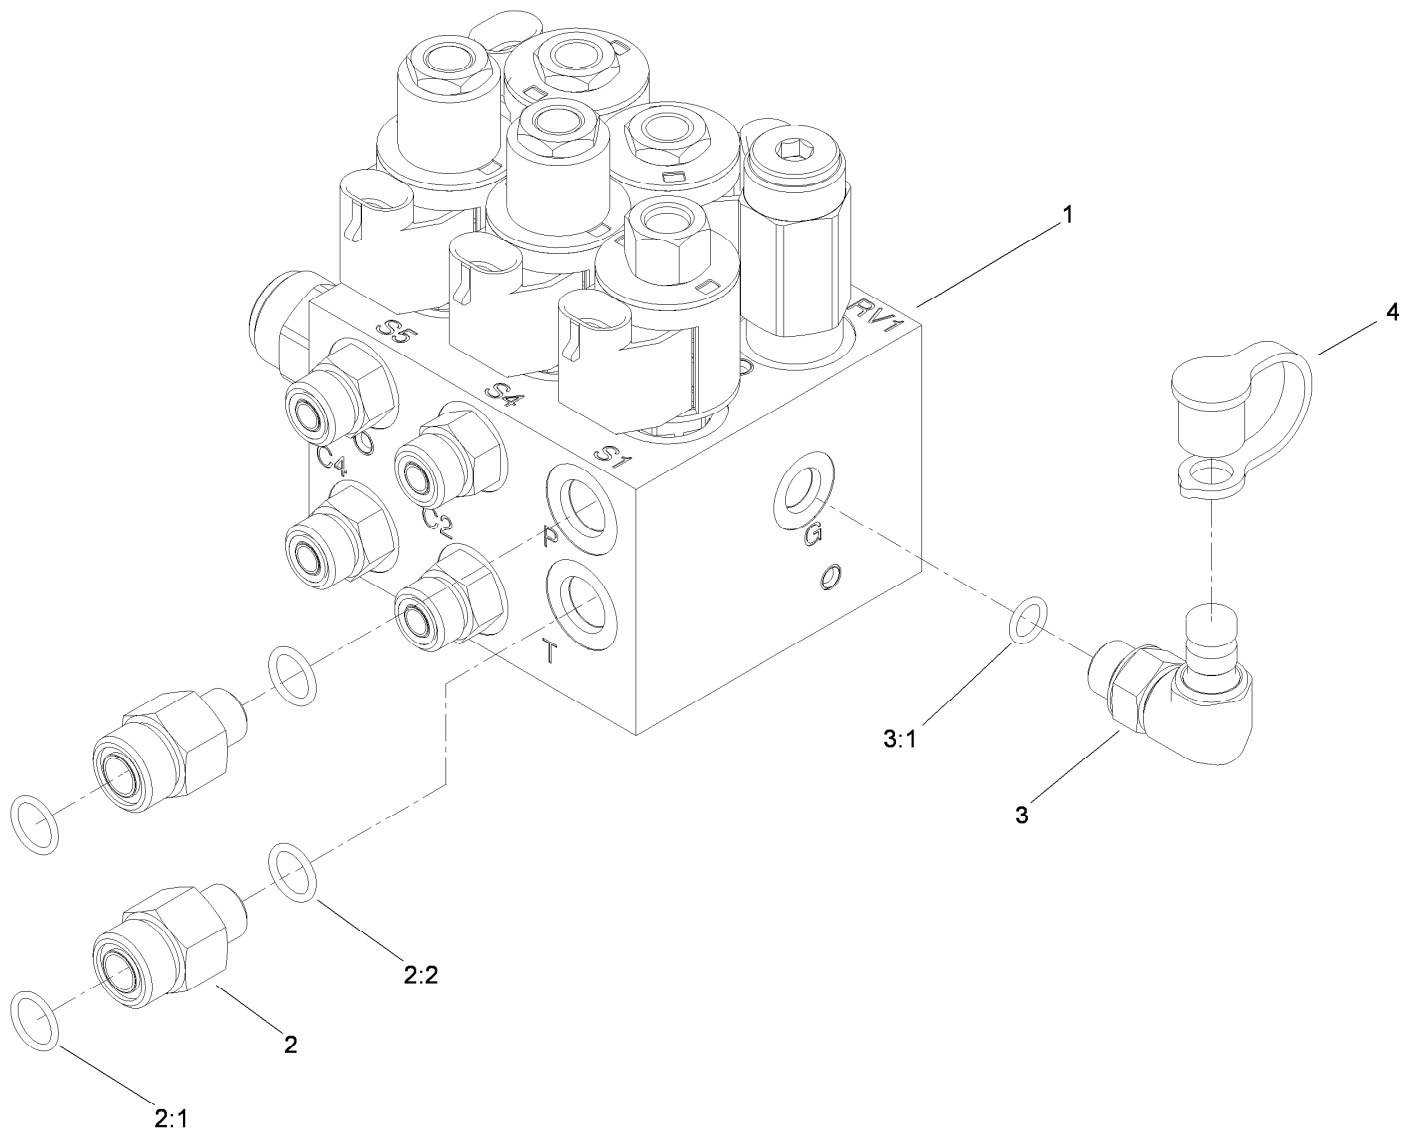

Lift Manifold Assembly No. 119-1463

Ref.	Part Number	Qty.	Description
1		1	Manifold-Lift 5-Plex ●
2	340-5	2	Fitting-Straight
2:1	237-42	1	O-Ring
2:2	237-30	1	O-Ring
3	115-9147	1	Fitting-Elbow, 90 DEG
3:1	237-78	1	O-Ring
4	354-79	1	Cap-Dust

 
● Not serviced separately

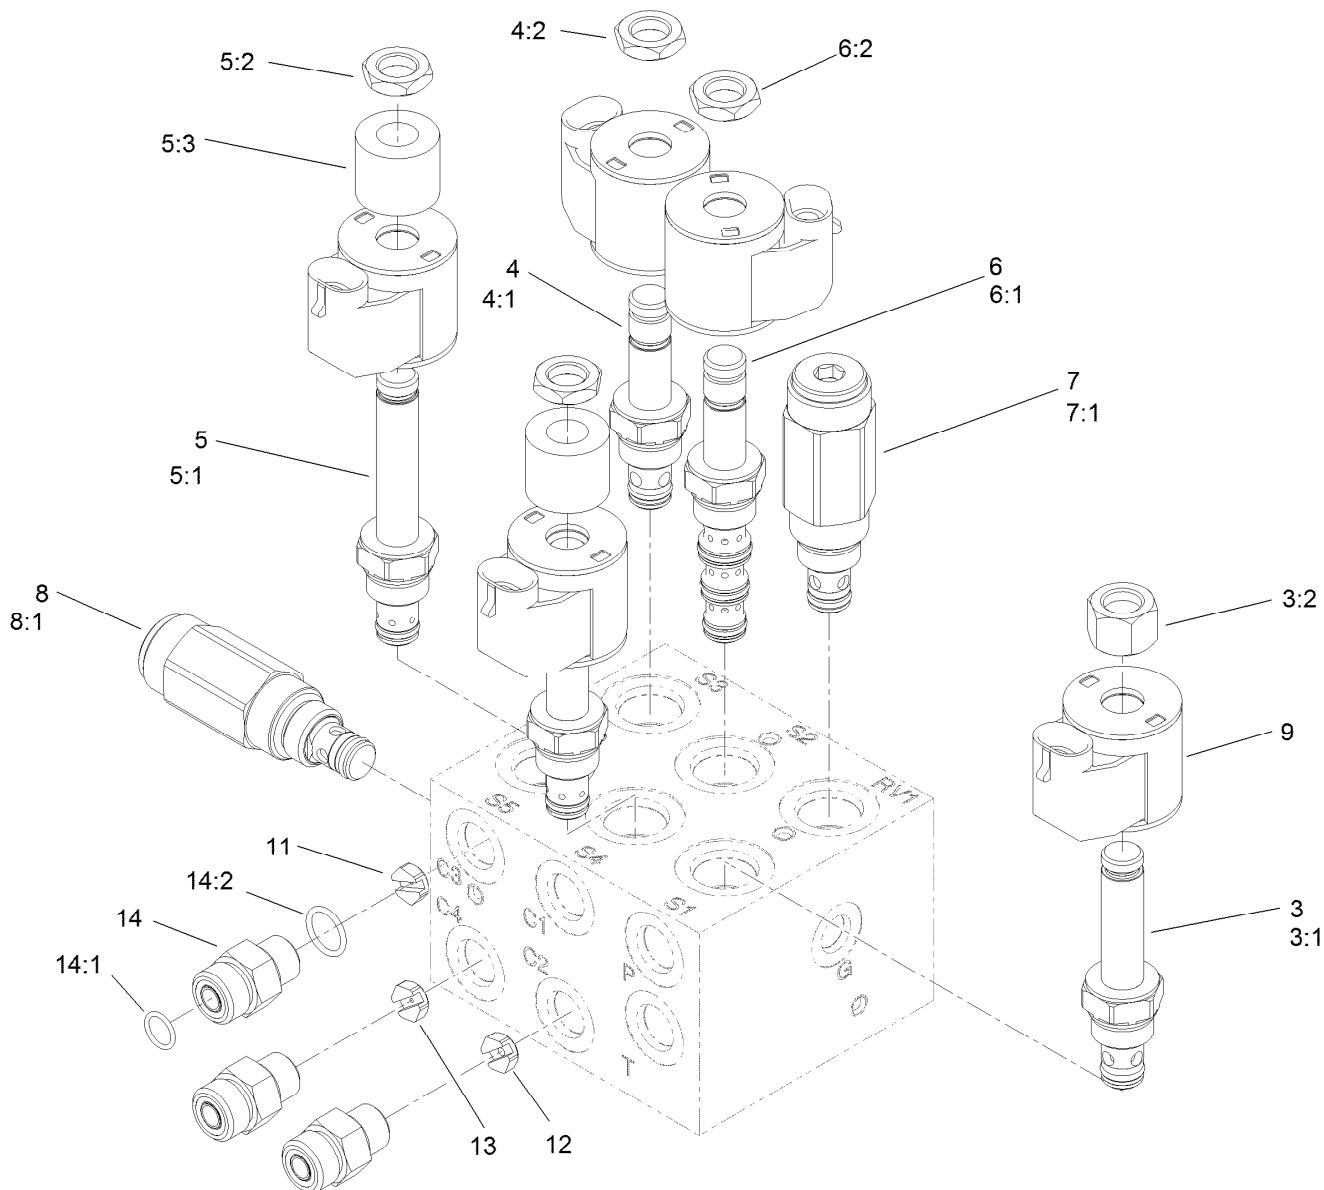

5 Plex Lift Manifold Assembly

Ref.	Part Number	Qty.	Description
3	107-7517	1	Valve-Solenoid
3:1	105-9156	1	Seal Kit
3:2	107-7812	1	Nut-Solenoid
4	112-9206	1	Solenoid Valve ASM
4:1	105-9156	1	Seal Kit
4:2	110-2634	1	Nut-Coil
5	110-8898	2	Valve-Solenoid
5:1	107-7527	1	Seal Kit
5:2	110-2634	1	Nut-Coil
5:3	110-8909	1	Spacer-Coil
6	120-1665	1	Valve-Solenoid
6:1	112-6520	1	Seal Kit


Ref.	Part Number	Qty.	Description
6:2	110-2634	1	Nut-Coil
7	120-1664	1	Valve-Relief, 1700 Psi
7:1	105-9156	1	Seal Kit
8	120-1663	1	Valve-Relief, 500 Psi
8:1	105-9156	1	Seal Kit
9	110-0497	5	Coil-Solenoid
11	120-1662	1	Orifice-Flow Control, .040
12	120-1661	1	Orifice-Flow Control, .109
13	119-2010	1	Orifice-Flow Control (0.055)
14	340-2	3	Fitting-HYD, Straight
14:1	237-22	1	O-Ring
14:2	237-42	1	O-Ring

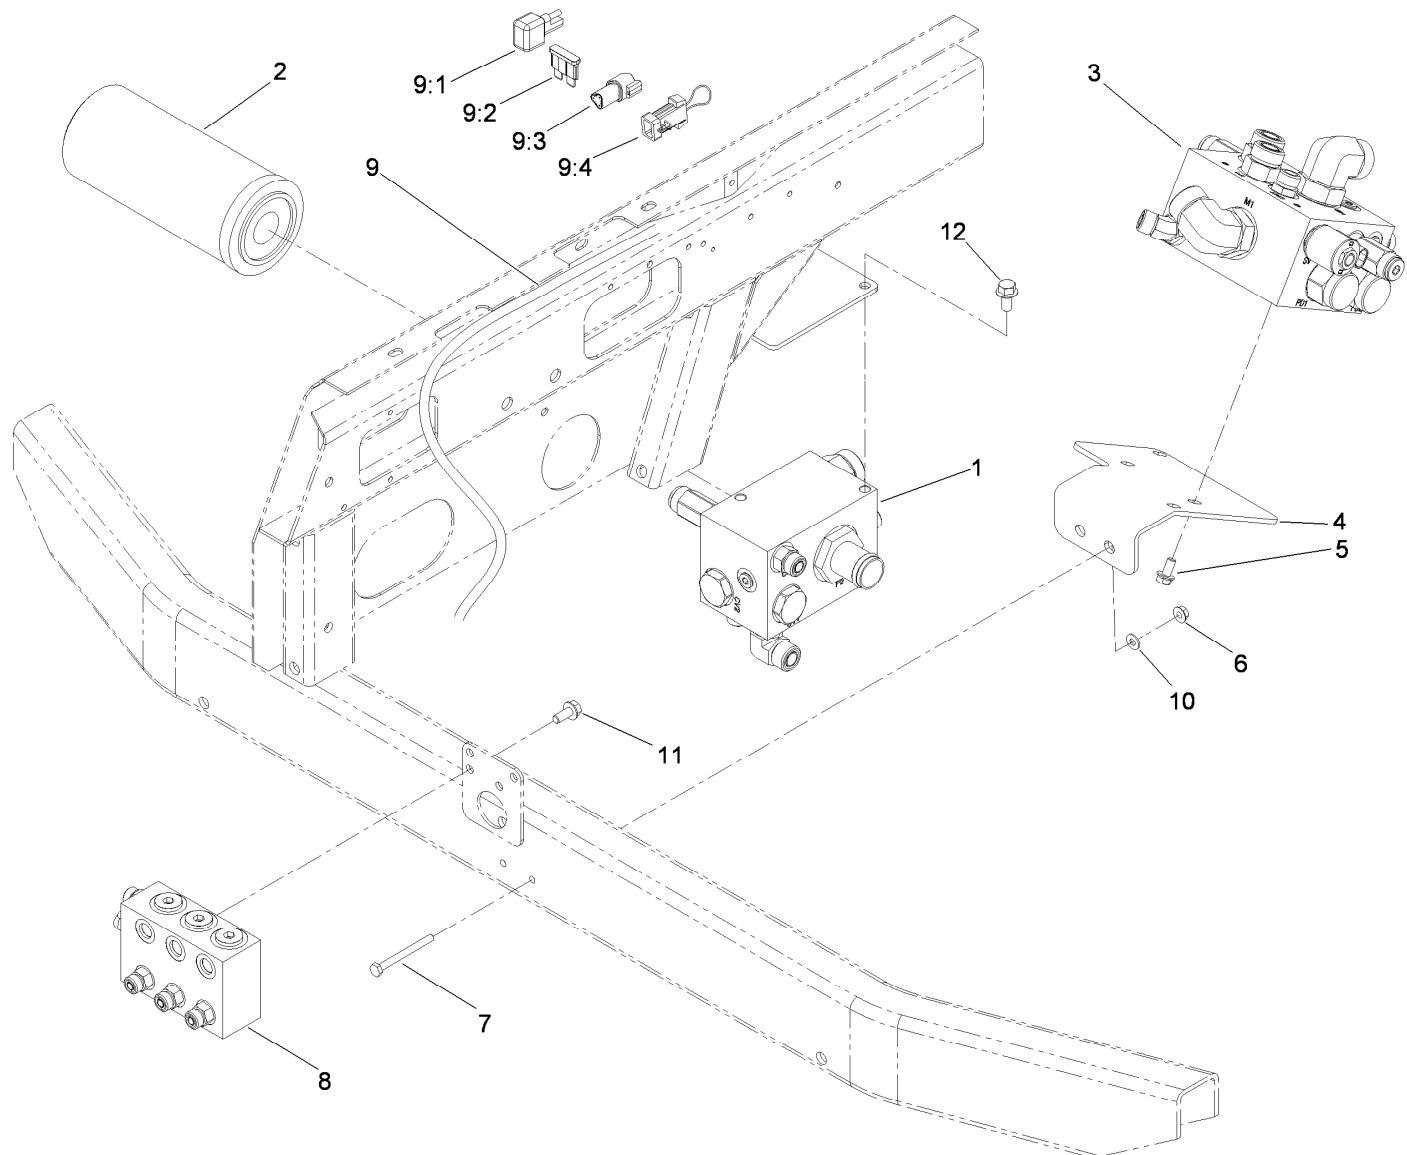 

4 Wheel Drive and Filter Manifold Assembly

Ref.	Part Number	Qty.	Description
1	119-3893	1	Filter Manifold ASM
2	94-2621	1	Element-Filter
3	119-3940	1	4 Wheel Drive Manifold ASM
4	104-5467-03	1	Bracket-Mount, Valve
5	3234-14	3	Screw-HHF
6	32128-33	2	Nut-HF
7	321-14	2	Screw-HH
8	119-3877	1	Junction Manifold ASM


Ref.	Part Number	Qty.	Description
9	119-1300	1	Harness-Wire, Main
9:1	100-4918	1	Diode-Over Molded
9:2	99-6124	1	Fuse-Blade, 40 Amp
9:3	32180-043	1	Resistor-120 Ohm
9:4	85-4650	1	Connector
10	3256-22	2	Washer-Flat
11	3234-5	2	Screw-HHF
12	110-1718	2	Screw-HHF

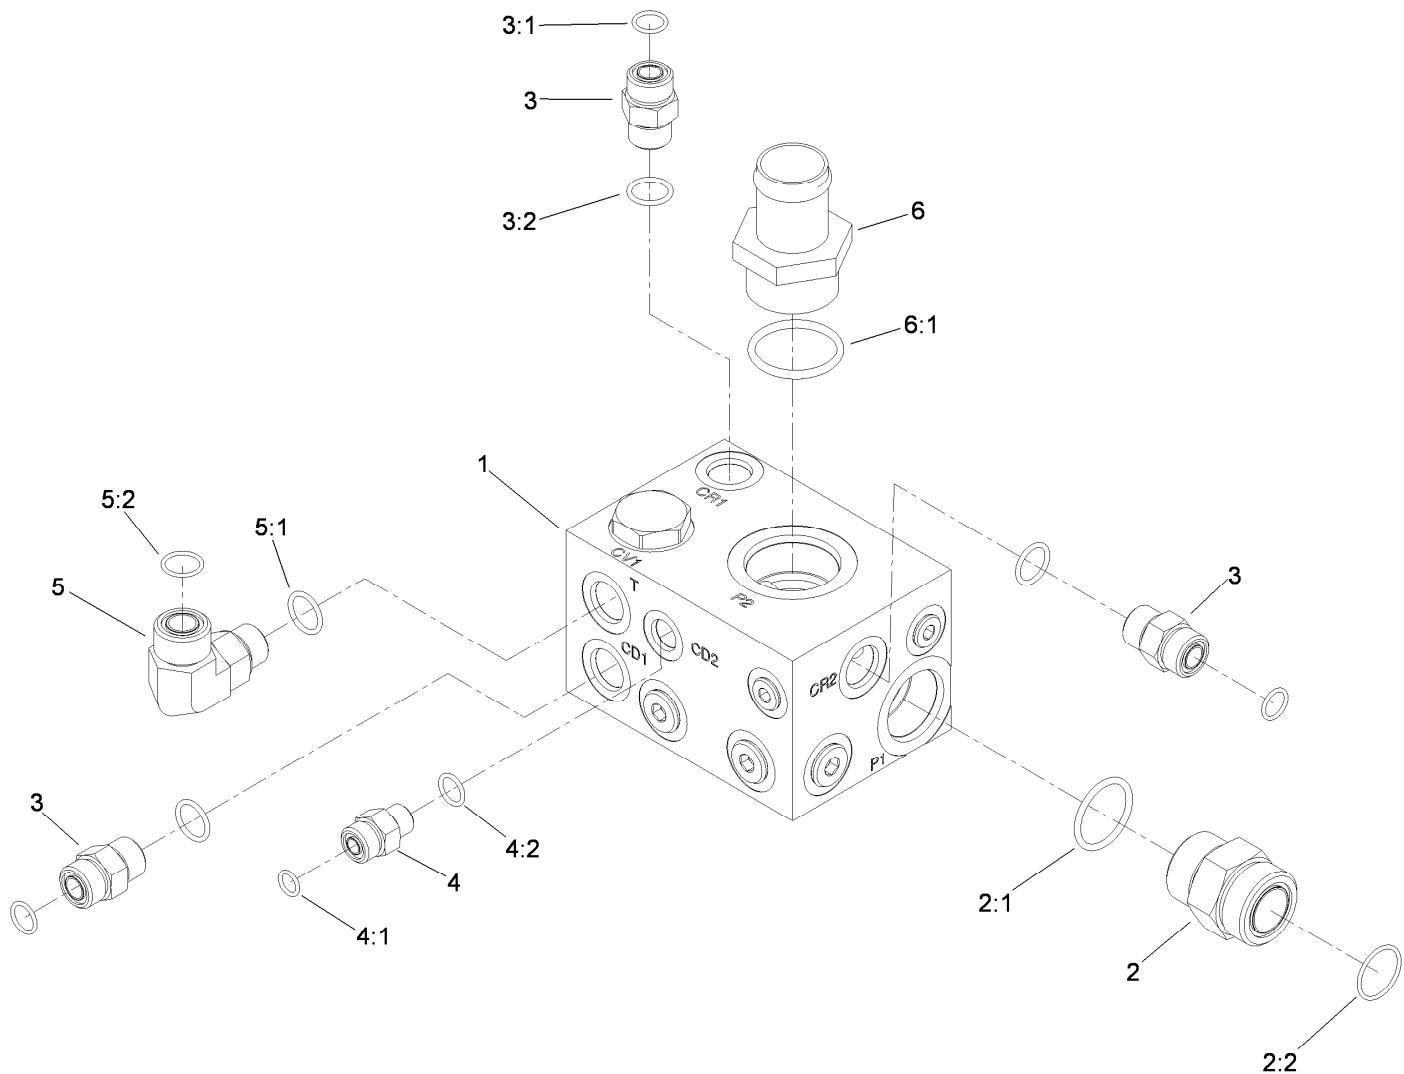 

Filter Manifold Assembly No. 119-3893


Ref.	Part Number	Qty.	Description
1		1	Manifold-Filter ●
2	104-3797	1	Fitting-HYD, Straight
2:1	237-146	1	O-Ring
2:2	340-65	1	O-Ring
3	340-4	3	Fitting-HYD, Straight
3:1	237-30	1	O-Ring
3:2	237-79	1	O-Ring
4	340-2	1	Fitting-HYD, Straight
4:1	237-22	1	O-Ring
4:2	237-42	1	O-Ring
5	340-153	1	Fitting-Elbow, 90 DEG
5:1	237-79	1	O-Ring
5:2	237-151	1	O-Ring
6	104-5480	1	Fitting-Hose, Straight
6:1	237-123	1	O-Ring

 ● Not serviced separately

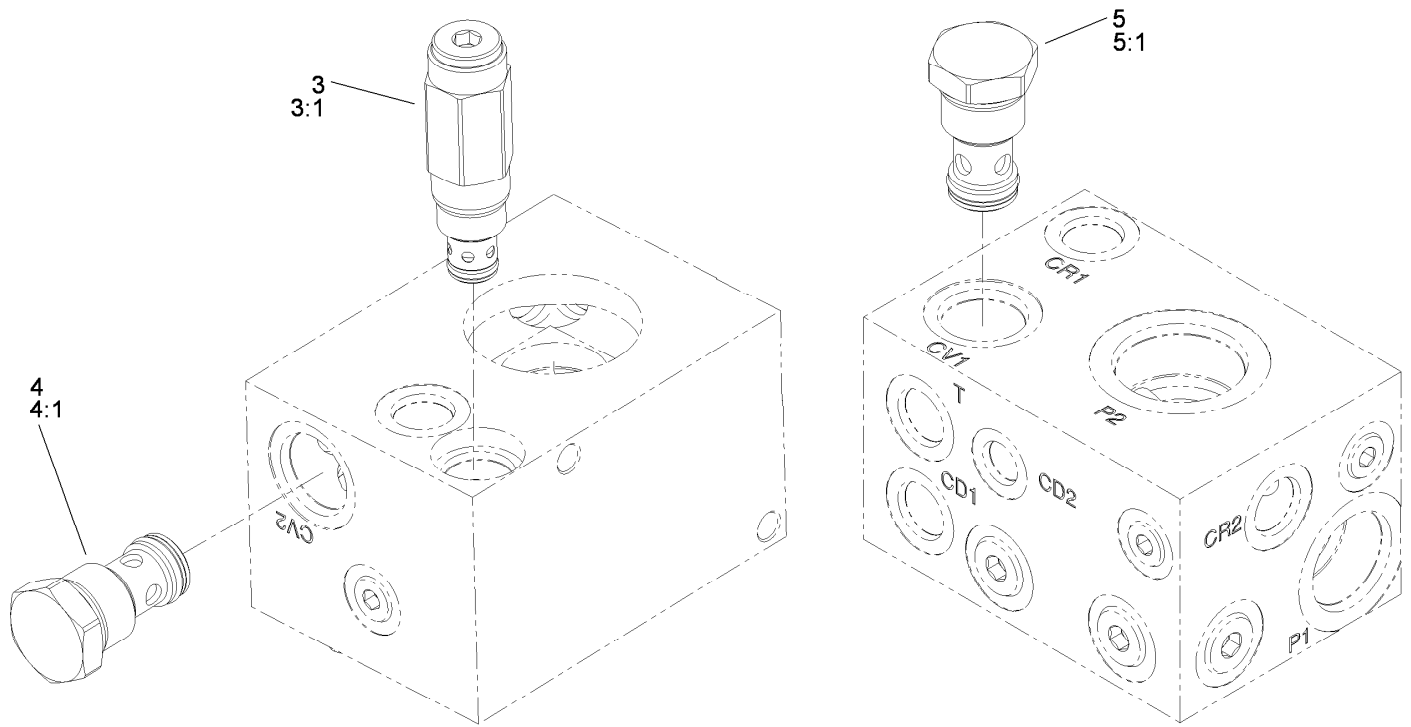

Filter Manifold Block Assembly

Ref.	Part Number	Qty.	Description
3	115-4140	1	Valve-Check
3:1	105-9159	1	Seal Kit
4	110-0467	1	Valve-Check, 40 Psi
4:1	110-0470	1	Seal Kit
5	110-0468	1	Valve-Check, 5 Psi
5:1	110-0470	1	Seal Kit

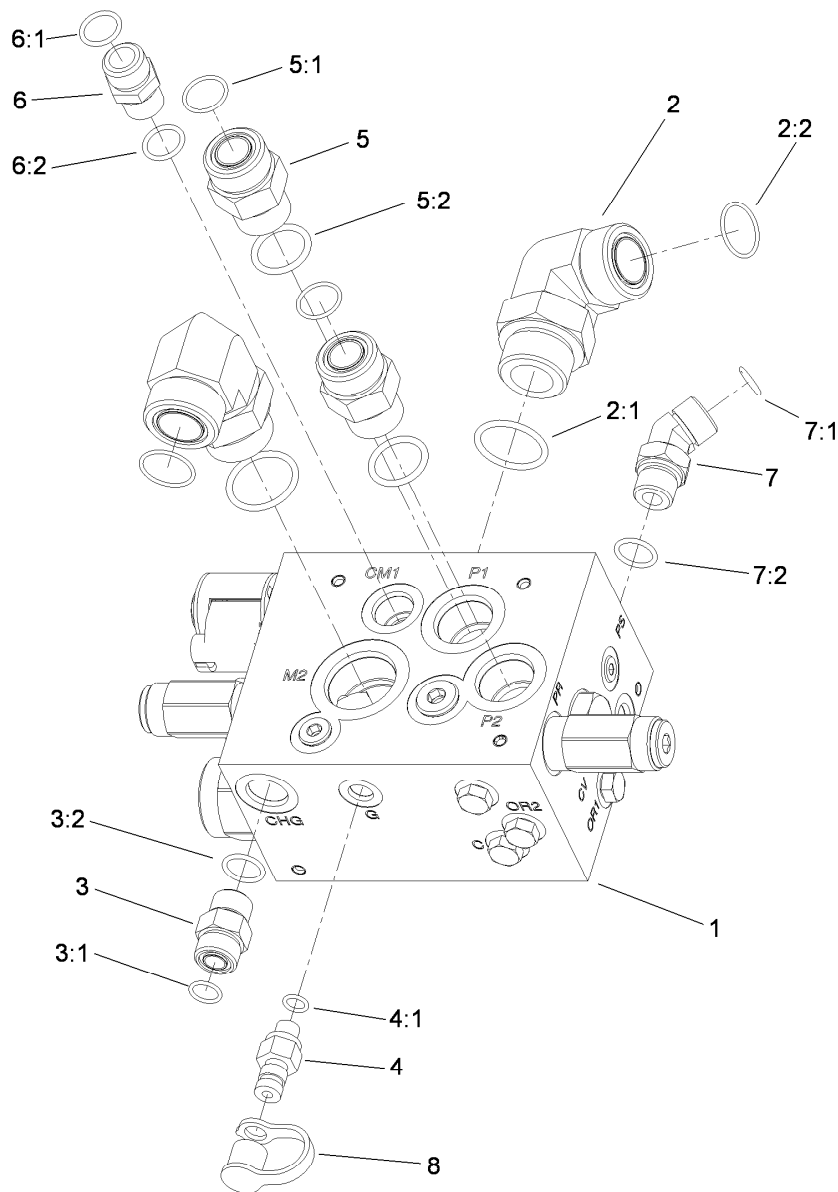 


4 Wheel Drive Manifold Block Assembly No. 119-3940

Ref.	Part Number	Qty.	Description
1		1	Manifold-4 Wheel Drive ●
2	340-129	2	Fitting-HYD, 90
2:1	237-146	1	O-Ring
2:2	340-65	1	O-Ring
3	340-4	1	Fitting-HYD, Straight
3:1	237-30	1	O-Ring
3:2	237-79	1	O-Ring
4	354-77	1	Fitting-Quick
4:1	237-78	1	O-Ring
5	340-9	2	Fitting-HYD, Straight

Ref.	Part Number	Qty.	Description
5:1	237-58	1	O-Ring
5:2	237-81	1	O-Ring
6	100-4890	1	Fitting-Check
6:1	237-79	1	O-Ring
6:2	237-30	1	O-Ring
7	340-101	1	Fitting-HYD, 45 DEG
7:1	237-30	1	O-Ring
7:2	237-79	1	O-Ring
8	354-79	1	Cap-Dust

 
● Not serviced separately

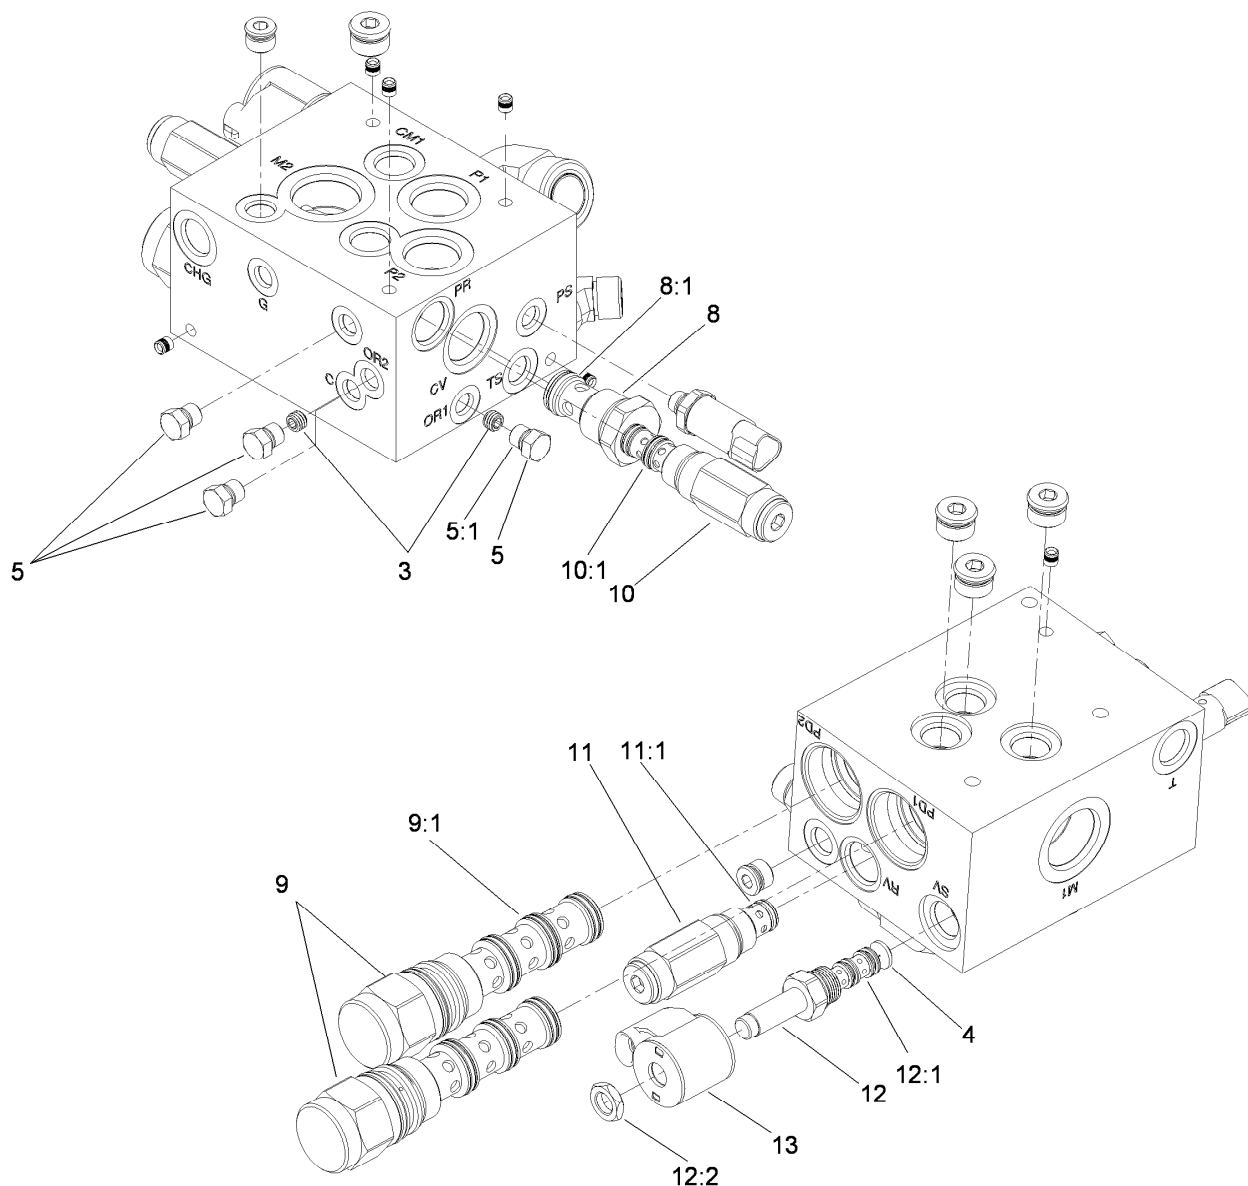

4-Wheel Drive Manifold Assembly

Ref.	Part Number	Qty.	Description
3	110-0495	2	Orifice (.050)
4	110-0498	1	Orifice (.030)
5	117-0115	4	Plug-HYD
5:1	237-78	1	O-Ring
8	110-0468	1	Valve-Check, 5 Psi
8:1	110-0470	1	Seal Kit
9	110-0491	2	Valve-Directional
9:1	106-6775	1	Seal Kit


Ref.	Part Number	Qty.	Description
10	110-0496	1	Valve-Reducing, Pressure
10:1	105-9154	1	Seal Kit
11	112-9205	1	Valve-Relief
11:1	105-9159	1	Seal Kit
12	110-0494	1	Valve-Solenoid
12:1	110-8773	1	Seal Kit
12:2	110-2634	1	Nut-Coil
13	110-0497	1	Coil-Solenoid

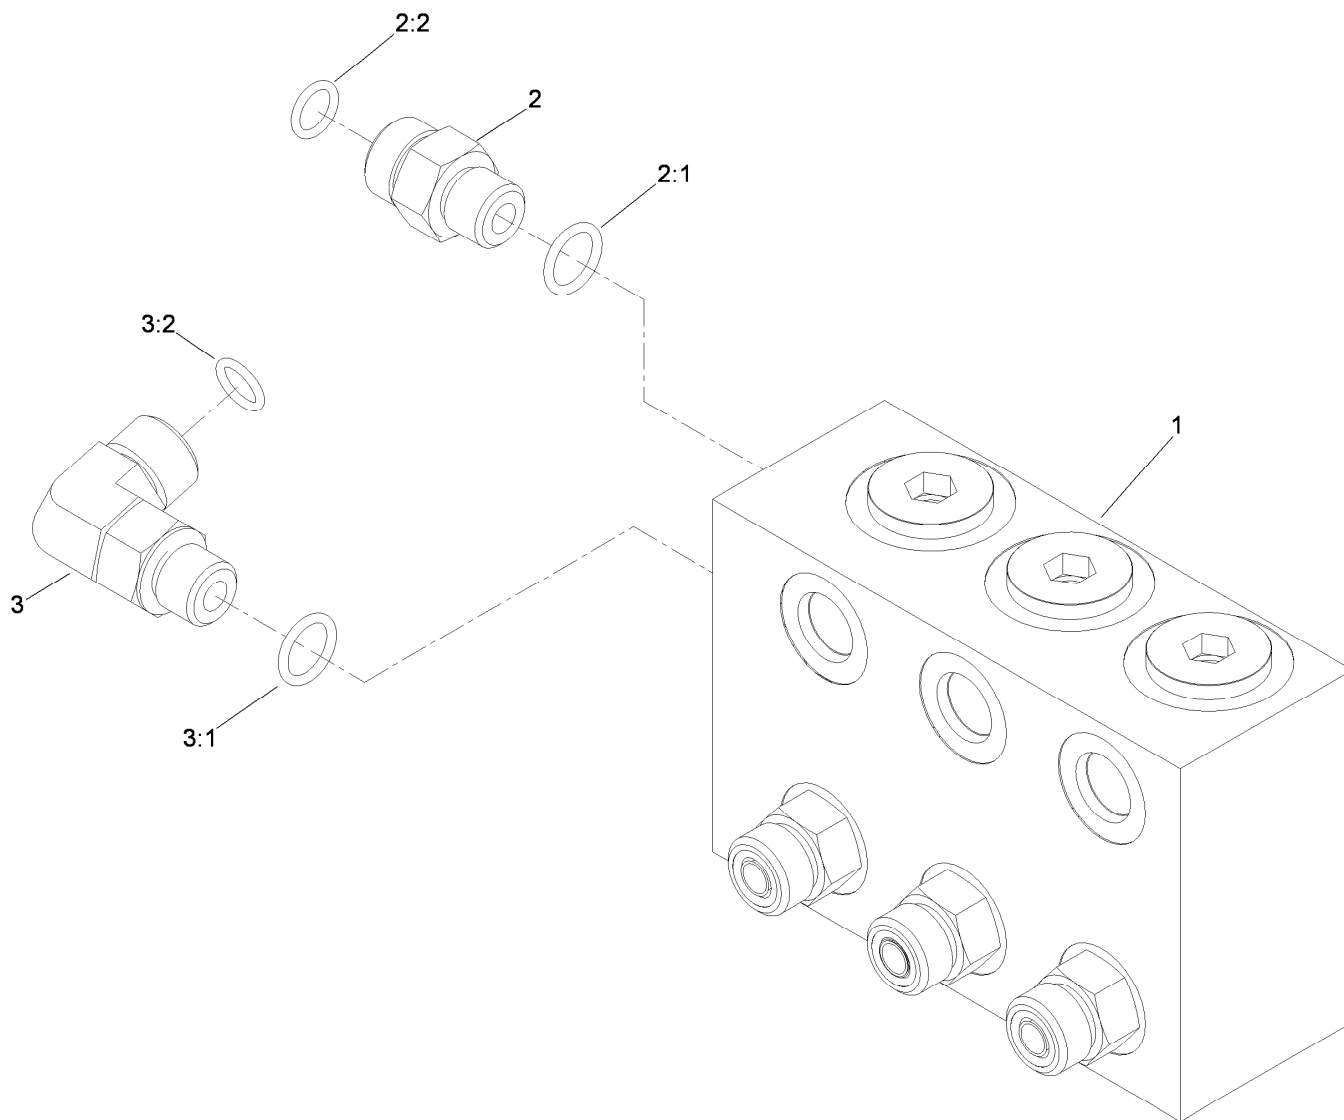 

Junction Manifold Assembly No. 119-3877

Ref.	Part Number	Qty.	Description
1		1	Manifold-Junction ●
2	340-2	1	Fitting-HYD, Straight
2:1	237-22	1	O-Ring
2:2	237-42	1	O-Ring
3	340-77	1	Fitting-HYD, 90 DEG
3:1	237-22	1	O-Ring
3:2	237-42	1	O-Ring

 
● Not serviced separately

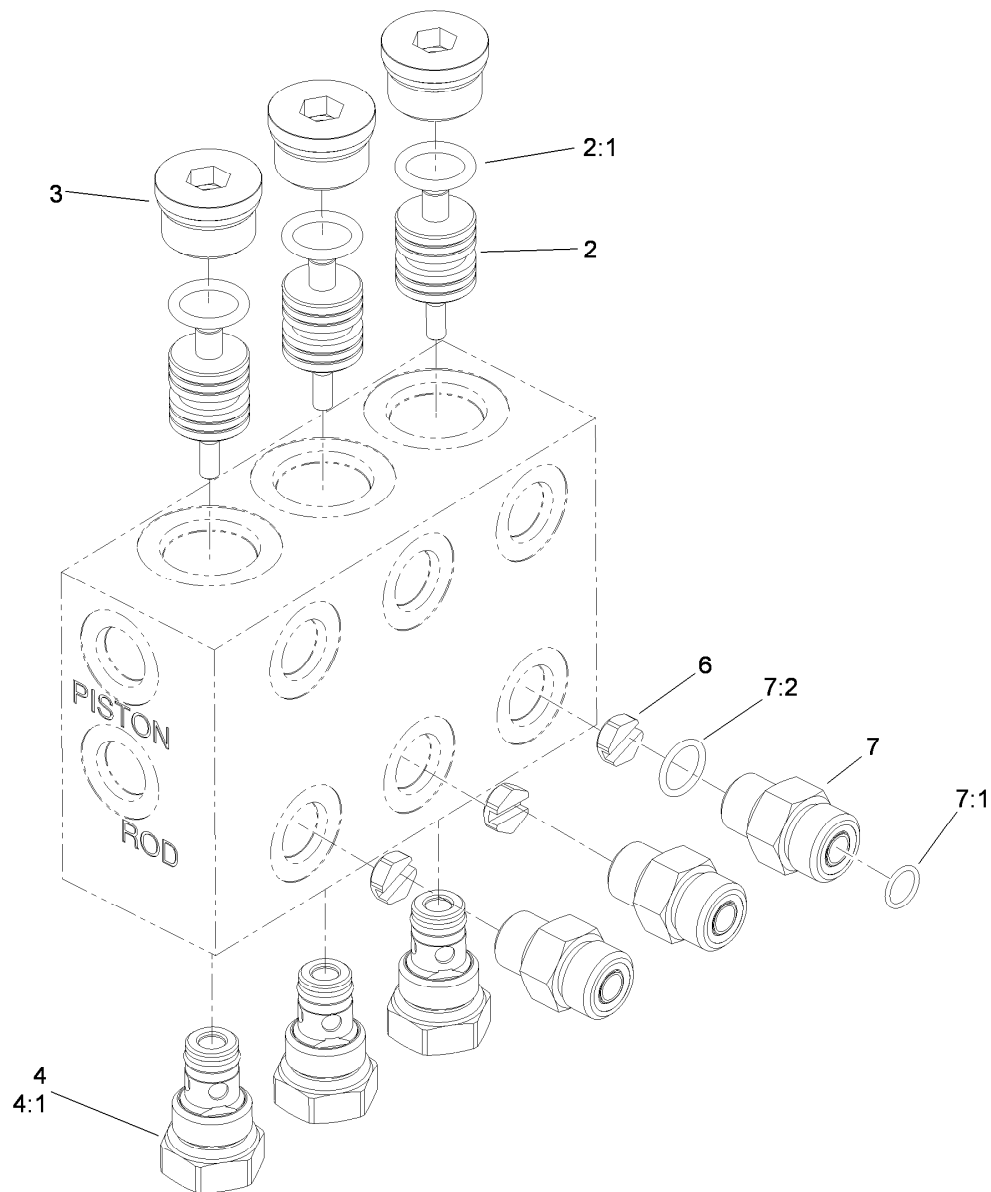

Juction Manifold Assembly

Ref.	Part Number	Qty.	Description
2	110-8901	3	Piston-Pilot
2:1	110-8900	1	O-Ring
3		3	Plug ●
4	110-9006	3	Valve-Check
4:1	105-9156	1	Seal Kit
6	119-2009	3	Orifice-Flow Control (0.030)
7	340-2	3	Fitting-HYD, Straight
7:1	237-22	1	O-Ring
7:2	237-42	1	O-Ring

 ● Not serviced separately

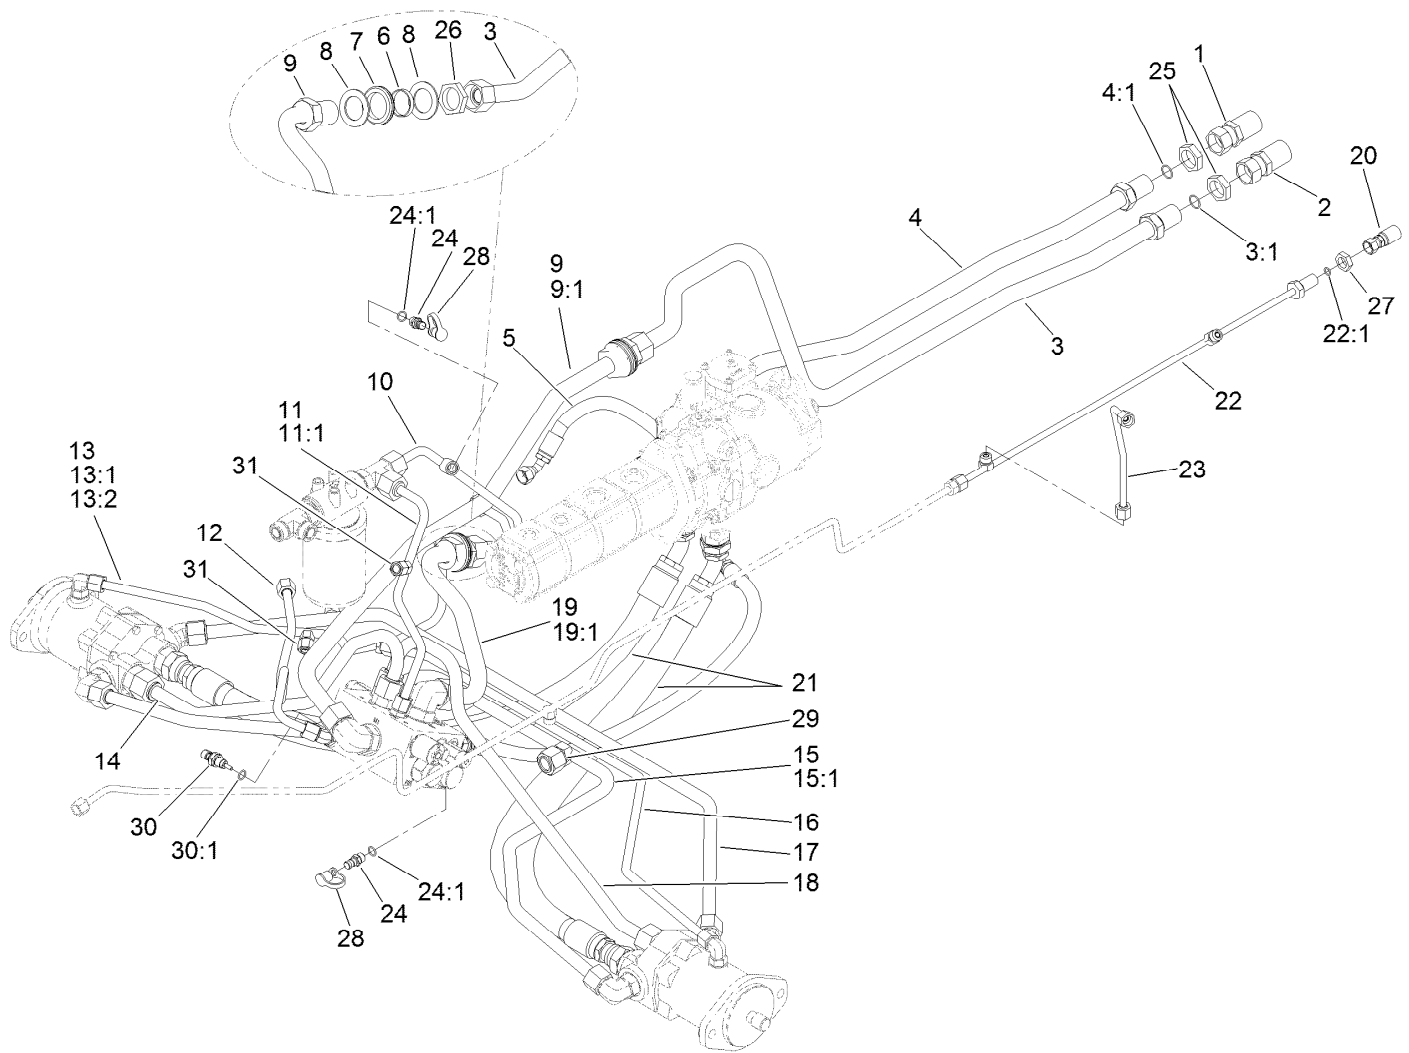


Traction Hydraulic Line Assembly

Ref.	Part Number	Qty.	Description
1	92-7536	1	Hose-HYD
2	105-9818	1	Hose-HYD
3	114-8118	1	Tube-HYD
3:1	237-58	1	O-Ring
4	119-3895	1	Tube-HYD
4:1	237-58	1	O-Ring
5	108-8440	1	Hose ASM
6	69-8950	2	Spacer
7	240-2	2	Grommet-Rubber
8	69-8920	4	Washer
9	114-8149	1	Tube-HYD
9:1	340-65	1	O-Ring ●
10	119-3901	1	Tube-HYD
11	114-8148	1	Tube-HYD
11:1	237-22	1	O-Ring ●
12	115-4351	1	Tube-HYD
13	119-3891	1	Tube-HYD
13:1	237-22	1	O-Ring ●

Ref.	Part Number	Qty.	Description
13:2	237-30	1	O-Ring ●
14	119-3890	1	Tube-HYD
15	119-3886	1	Tube-HYD
15:1	237-58	1	O-Ring ●
16	119-3888	1	Tube-HYD
17	119-3889	1	Tube-HYD
18	119-3887	1	Tube-HYD
19	114-8147	1	Tube-HYD
19:1	340-65	1	O-Ring ●
20	92-7534	1	Hose-HYD
21	104-5464	2	Hose-HYD
22	114-4194	1	Tube-HYD
22:1	237-22	3	O-Ring
23	115-9124	1	Tube-HYD
24	59-7410	3	Fitting-Diagnostic
24:1	237-42	1	O-Ring
25	340-126	2	Nut-Bulkhead
26	340-128	2	Nut-Bulkhead

 ● Not illustrated

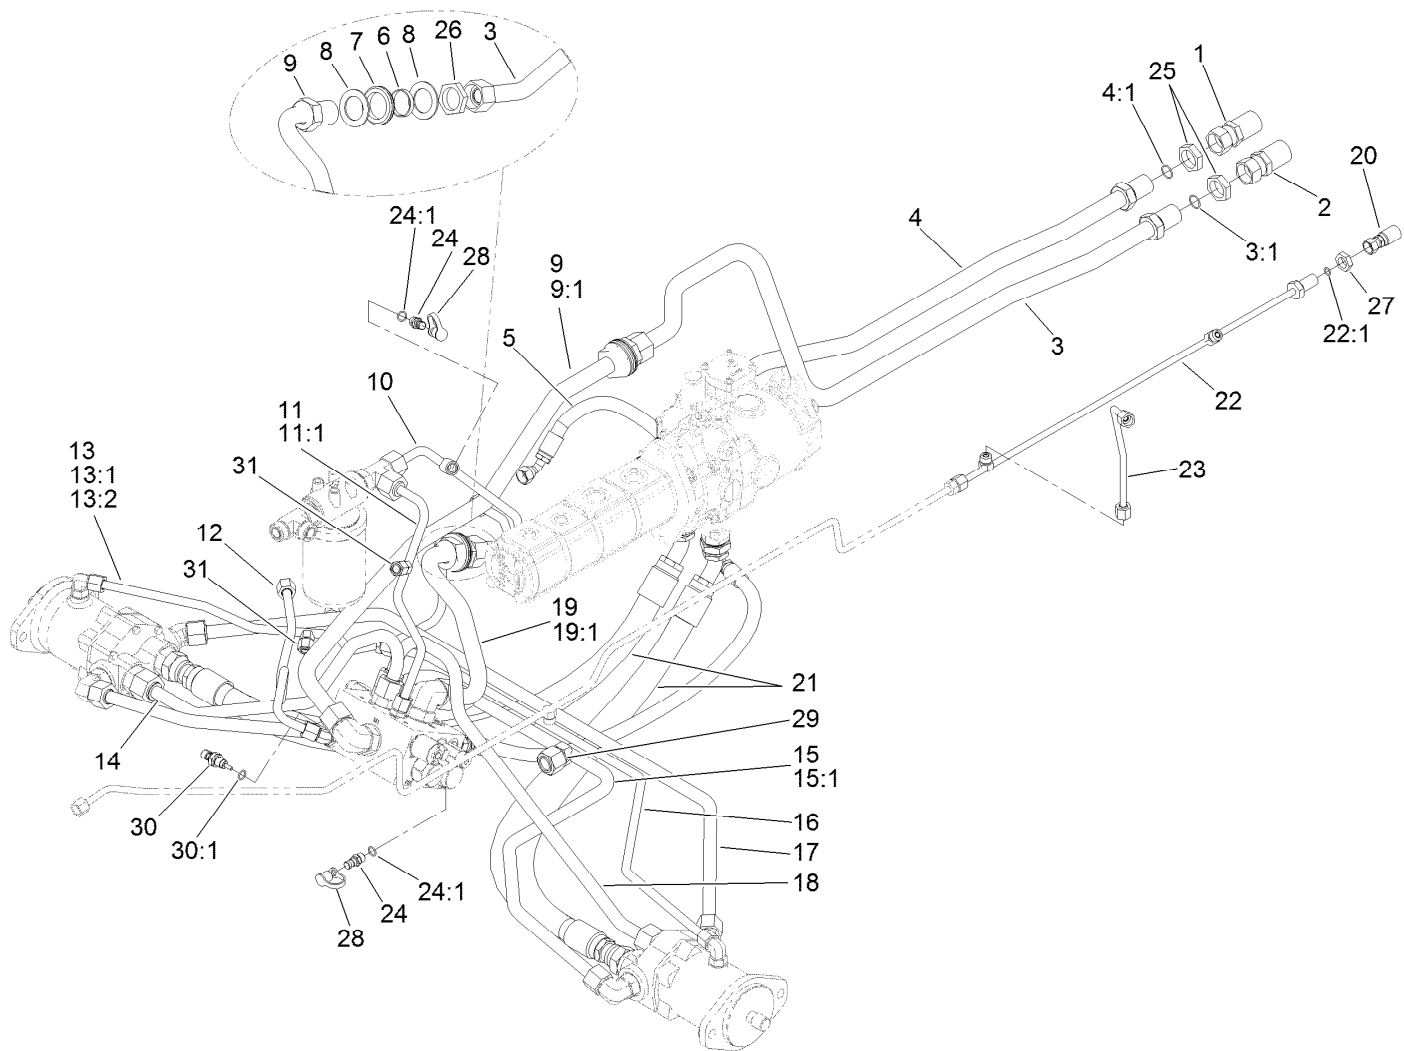


Traction Hydraulic Line Assembly (continued)

Ref.	Part Number	Qty.	Description
27	340-70	1	Nut-Lock
28	354-79	3	Cap-Dust
29	95-0979	1	Cap-Ors

Ref.	Part Number	Qty.	Description
30	110-8829	1	Sender-Temperature
30:1	237-42	1	O-Ring
31	340-117	2	Cap

 
● Not illustrated

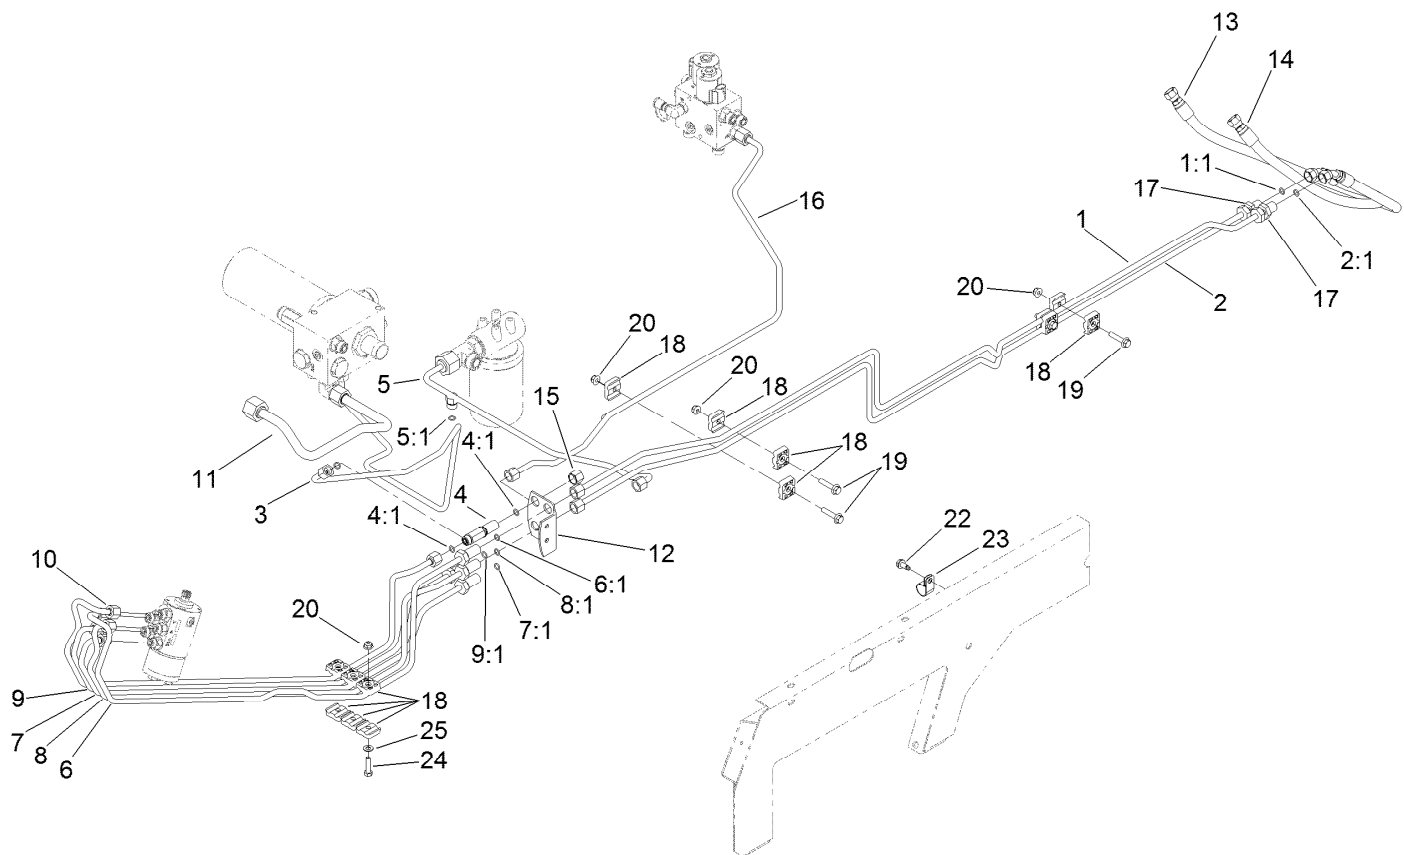

Steering Hydraulic Line Assembly


Ref.	Part Number	Qty.	Description
1	105-3871	1	Tube ASM
1:1	237-22	1	O-Ring
2	115-9128	1	Tube ASM
2:1	237-22	1	O-Ring
3	119-3900	1	Tube-HYD
4	340-68	1	Fitting-Tee, Bulkhead
4:1	237-22	3	O-Ring
5	115-4412	1	Tube ASM
5:1	237-22	1	O-Ring
6	115-4408	1	Tube ASM
6:1	237-22	1	O-Ring
7	115-4406	1	Tube ASM
7:1	237-22	1	O-Ring
8	115-4409	1	Tube ASM
8:1	237-22	1	O-Ring
9	115-4405	1	Tube ASM

Ref.	Part Number	Qty.	Description
9:1	237-22	1	O-Ring
10	115-4407	1	Tube-HYD
11	119-3898	1	Tube-HYD
12	92-7606-03	1	Bracket-Bulkhead
13	105-9817	1	Hose-HYD
14	92-7539	1	Hose-HYD
15	340-117	1	Cap
16	115-4422	1	Tube-HYD
17	340-70	7	Nut-Lock
18	56-7973	14	Clamp-Tube
19	3234-36	4	Screw-HHF
20	104-8300	4	Nut-Flange, NI
22	32104-32	3	Screw-HWH
23	2412-41	1	Clamp
24	322-6	3	Screw-HH
25	3256-23	3	Washer-Flat

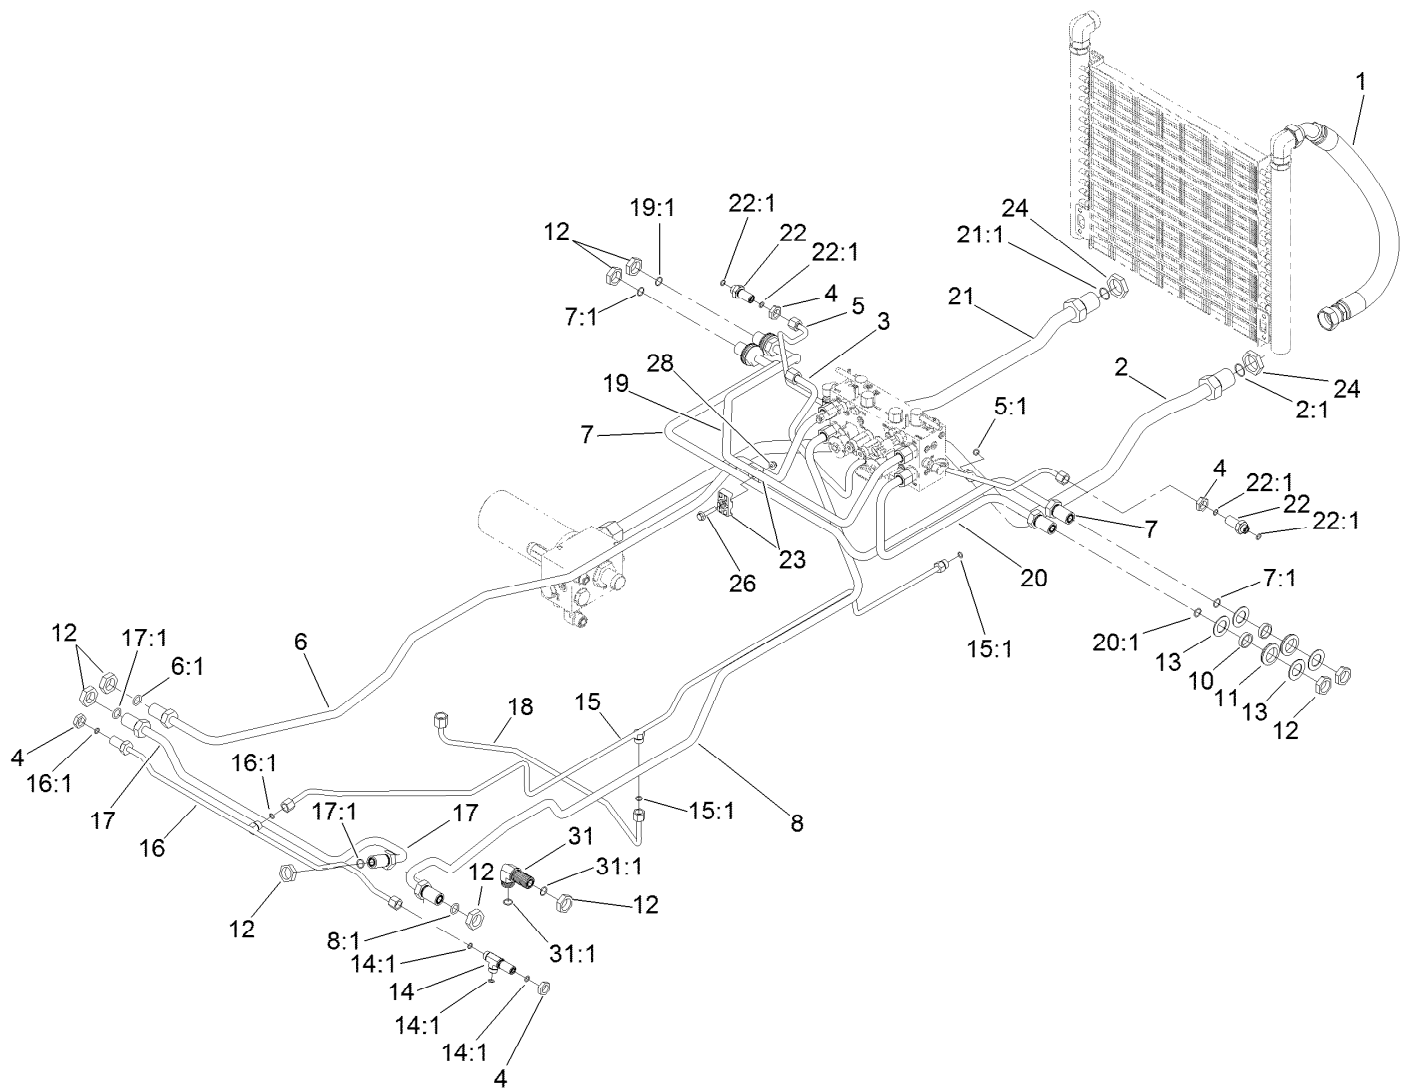 

Hydraulic Line Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	104-5483	2	Hose-HYD	15:1	237-22	2	O-Ring
2	115-4378	1	Tube-HYD	16	115-9139	1	Tube-HYD
2:1	340-65	1	O-Ring	16:1	237-22	2	O-Ring
3	119-1469	1	Tube-HYD	17	119-1466	1	Tube-HYD
4	340-70	4	Nut-Lock	17:1	237-65	2	O-Ring
5	115-9125	1	Tube-HYD	18	115-9127	1	Tube-HYD
5:1	237-22	1	O-Ring	19	119-1456	1	Tube-HYD
6	119-1454	1	Tube-HYD	19:1	237-65	1	O-Ring
6:1	237-65	1	O-Ring	20	119-1455	1	Tube-HYD
7	119-1465	1	Tube-HYD	20:1	237-65	1	O-Ring
7:1	237-65	2	O-Ring	21	119-3899	1	Tube-HYD
8	119-1453	1	Tube-HYD	21:1	340-65	1	O-Ring
8:1	237-65	1	O-Ring	22	340-71	2	Fitting-Straight, Bulkhead
10	69-9000	9	Spacer	22:1	237-22	2	O-Ring
11	240-3	9	Grommet-Rubber	23	56-7971	2	Clamp-Tube
12	340-74	9	Nut-Lock, Bulkhead	24	340-128	2	Nut-Bulkhead
13	69-9010	18	Washer	26	115-1794	1	Screw-HHF
14	340-68	1	Fitting-Tee, Bulkhead	28	104-8300	1	Nut-Flange, NI
14:1	237-22	3	O-Ring	31	340-72	1	Fitting-Bulkhead, 90 DEG
15	115-4433	1	Tube-HYD	31:1	237-65	2	O-Ring

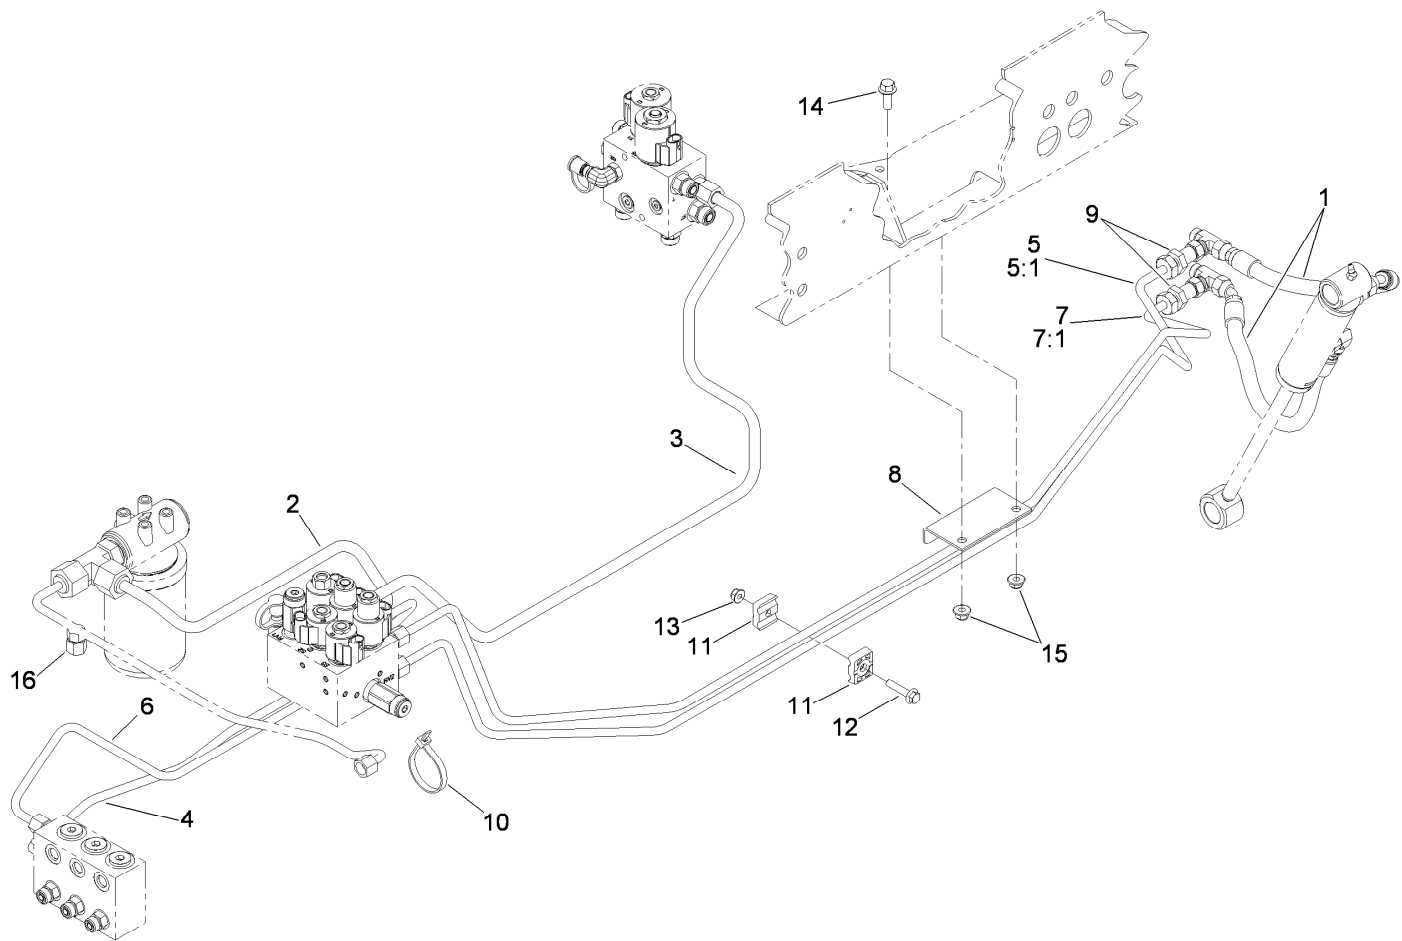 


Hydraulic Line Assembly 2

Ref.	Part Number	Qty.	Description
1	105-9238	4	Hose-HYD
2	119-1468	1	Tube-HYD
3	119-1467	1	Tube-HYD
4	119-1470	1	Tube-HYD
5	119-1473	1	Tube-HYD
5:1	237-22	1	O-Ring ●
6	119-1471	1	Tube-HYD
7	119-1472	1	Tube-HYD
7:1	237-22	1	O-Ring ●

Ref.	Part Number	Qty.	Description
8	105-3990-03	1	Bracket-Support, Tube
9	340-70	2	Nut-Lock
10	3334-945	1	Tie-Cable
11	56-7973	4	Clamp-Tube
12	3234-36	2	Screw-HHF
13	104-8300	2	Nut-Flange, NI
14	3234-11	2	Screw-HHF
15	104-8301	1	Nut-Flange, NI
16	340-117	1	Cap

 
● Not illustrated

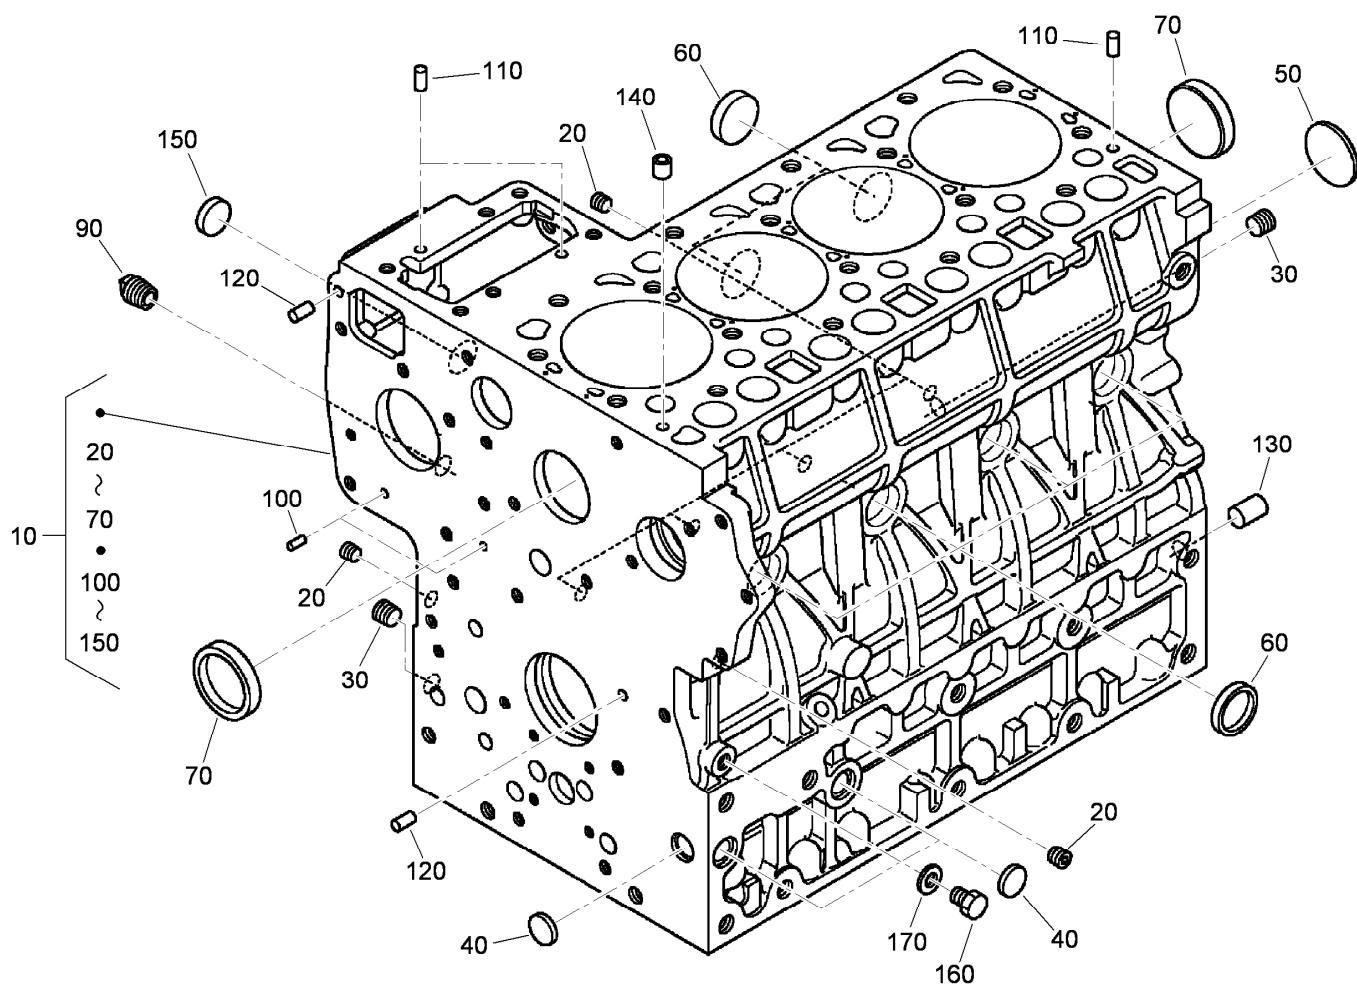

Crankcase Assembly


Ref.	Part Number	Qty.	Description
10	120-5161	1	Crankcase ASM
20	98-7487	6	Plug
30	107-0107	2	Plug
40	98-9379	3	Plug-Expansion
50	98-9668	1	Plug-Expansion
60	98-7500	6	Cap-Sealing
70	98-7501	2	Cap-Sealing
90	120-5842	1	Plug

Ref.	Part Number	Qty.	Description
100	98-7502	2	Pin-Straight
110	98-7503	3	Pin-Straight
120	98-7504	2	Pin-Straight
130	98-7505	1	Pin-Straight
140	98-7506	1	Pin-Pipe
150	100-2020	1	Cap-Sealing
160	120-2559	1	Plug
170	98-7428	1	Gasket

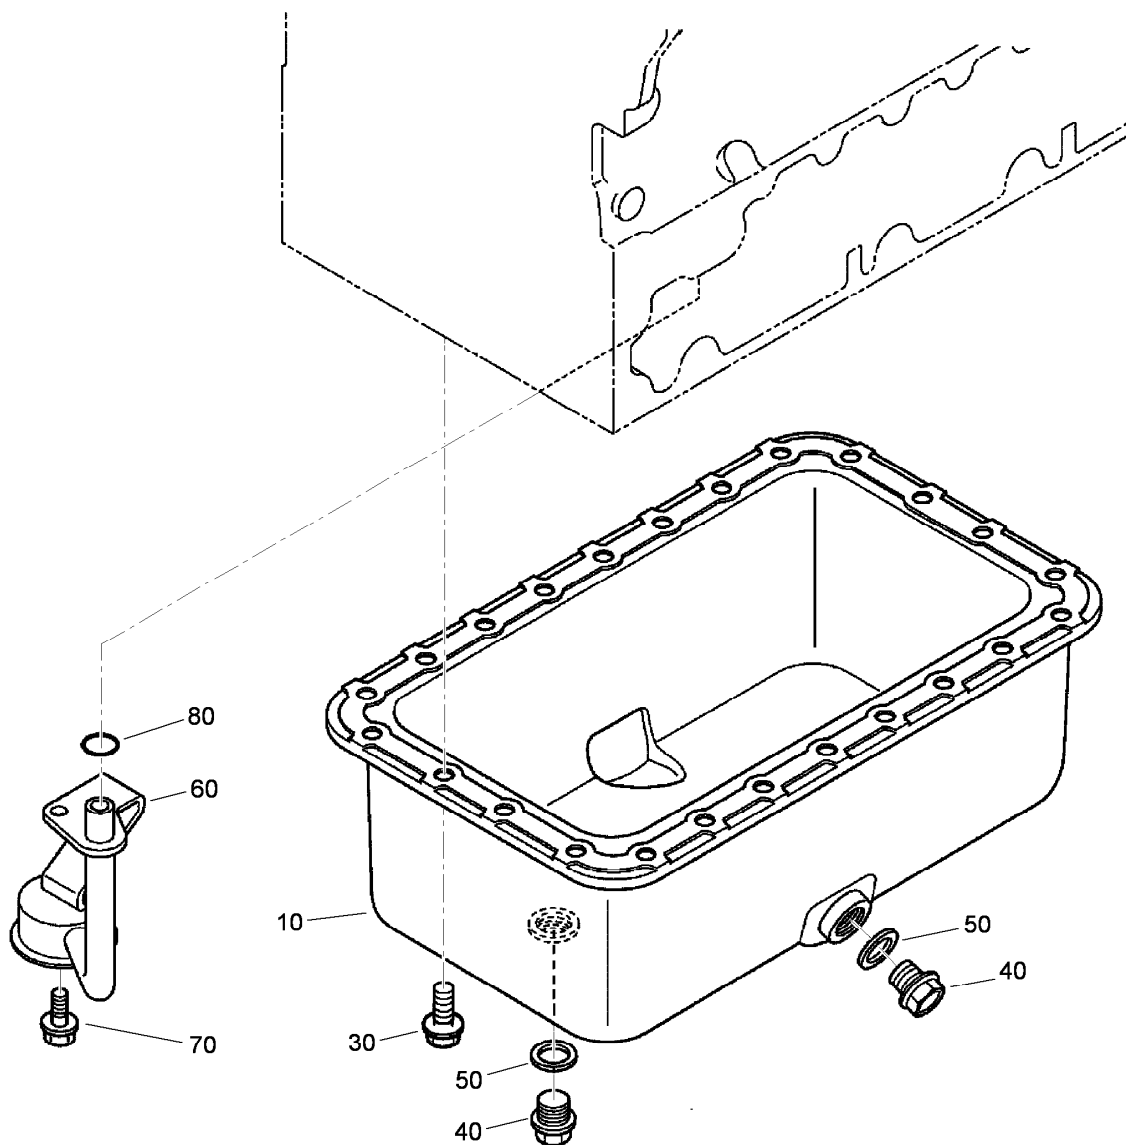 

Oil Pan Assembly


Ref.	Part Number	Qty.	Description
10	120-5836	1	Oil Pan ASM
30	110-6194	24	Bolt-Flange
40	98-9686	2	Plug-Drain
50	98-9399	2	Gasket
60	115-8503	1	Filter-Oil
70	115-8504	1	Bolt-Flange
80	108-7054	1	O-Ring

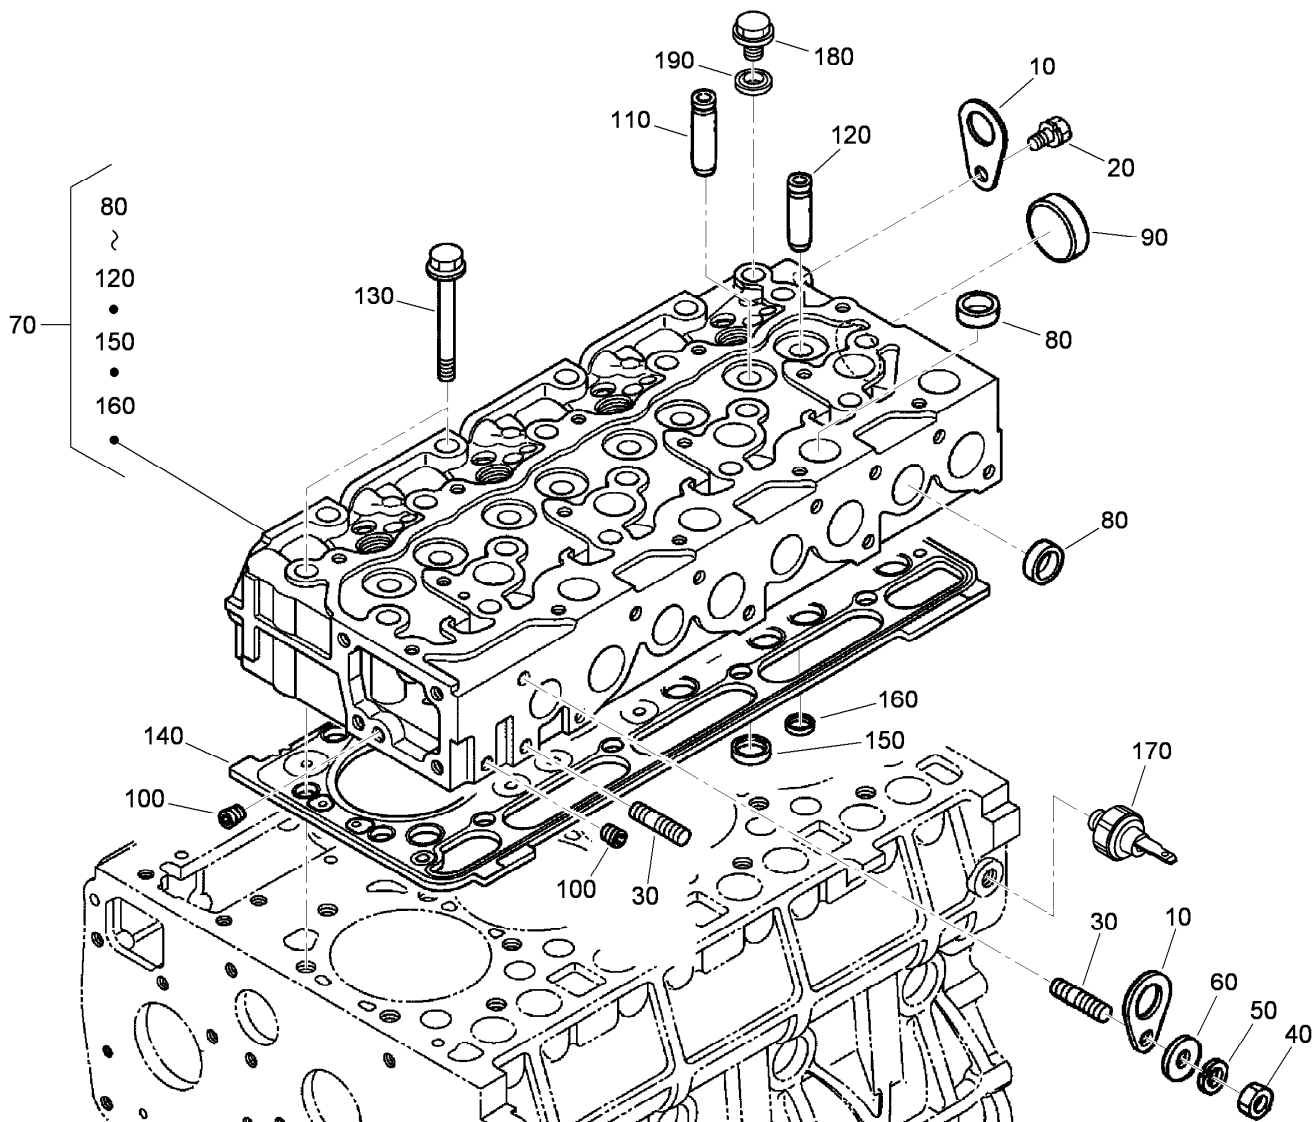 

Cylinder Head Assembly

Ref.	Part Number	Qty.	Description
10	98-7531	2	Hook-Engine
20	98-7526	1	Bolt
30	115-8506	2	Stud
40	98-7534	1	Nut
50	105-2893	1	Washer-Spring
60	98-7536	1	Washer-Plain
70	120-5162	1	Cylinder Head ASM
80	98-7538	12	Cap-Sealing
90	98-7539	1	Cap-Sealing
100	98-7540	2	Plug
110	120-5163	4	Guide-Valve, Inlet
120	115-8508	4	Guide-Valve, Exhaust
130	98-7543	18	Bolt-Head, Cylinder
140	115-8647	1	Gasket-Head, Cylinder (1.15Mm)


Ref.	Part Number	Qty.	Description
140	115-8509	1	Gasket-Head, Cylinder (1.20Mm)
140	115-8510	1	Gasket-Head, Cylinder (1.25Mm)
140	115-8511	1	Gasket-Head, Cylinder (1.30Mm)
140	115-8512	1	Gasket-Head, Cylinder (1.35Mm)
150	120-5164	4	Seat-Valve, Inlet
160	120-5165	4	Seat-Valve, Exhaust
170	98-9416	1	Switch-Oil
180	98-7762	1	Plug
190	98-7763	1	Washer-W/Rubber

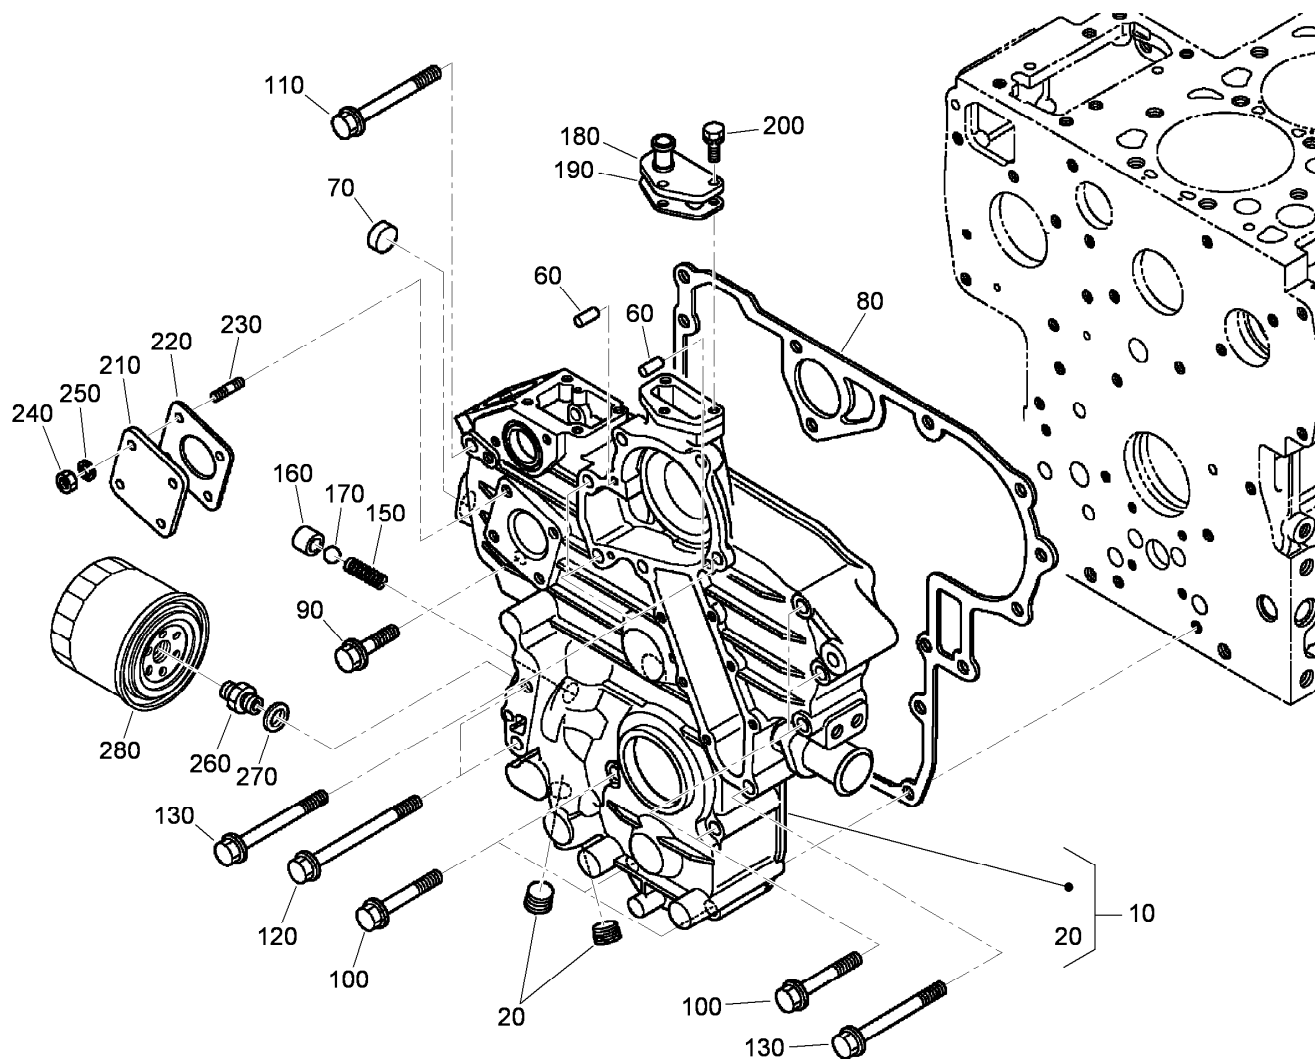 

Gear Case Assembly


Ref.	Part Number	Qty.	Description
10	115-8513	1	Gear Case ASM
20	98-9598	2	Plug
60	98-7504	2	Pin-Straight
70	115-8515	1	Cap-Sealing
80	120-5166	1	Gasket-Case, Gear
90	108-7085	1	Bolt-Flange
100	115-8517	7	Bolt-Flange
110	115-8518	1	Bolt-Flange
120	115-8519	2	Bolt-Flange
130	115-8520	4	Bolt-Flange
150	98-7563	1	Spring
160	98-7564	1	Seat-Valve

Ref.	Part Number	Qty.	Description
170	98-7565	1	Ball
180	98-7566	1	Flange-Return, Water
190	115-8521	1	Gasket-Flange, Return
200	98-7568	3	Bolt
210	98-7569	1	Cover
220	115-8522	1	Gasket-Meter, Hour
230	98-7571	4	Stud
240	98-7572	4	Nut
250	98-7699	4	Washer-Spring
260	120-5167	1	Joint-Pipe
270	108-4419	1	Collar-Valve Seat
280	104-5169	1	Filter-Oil

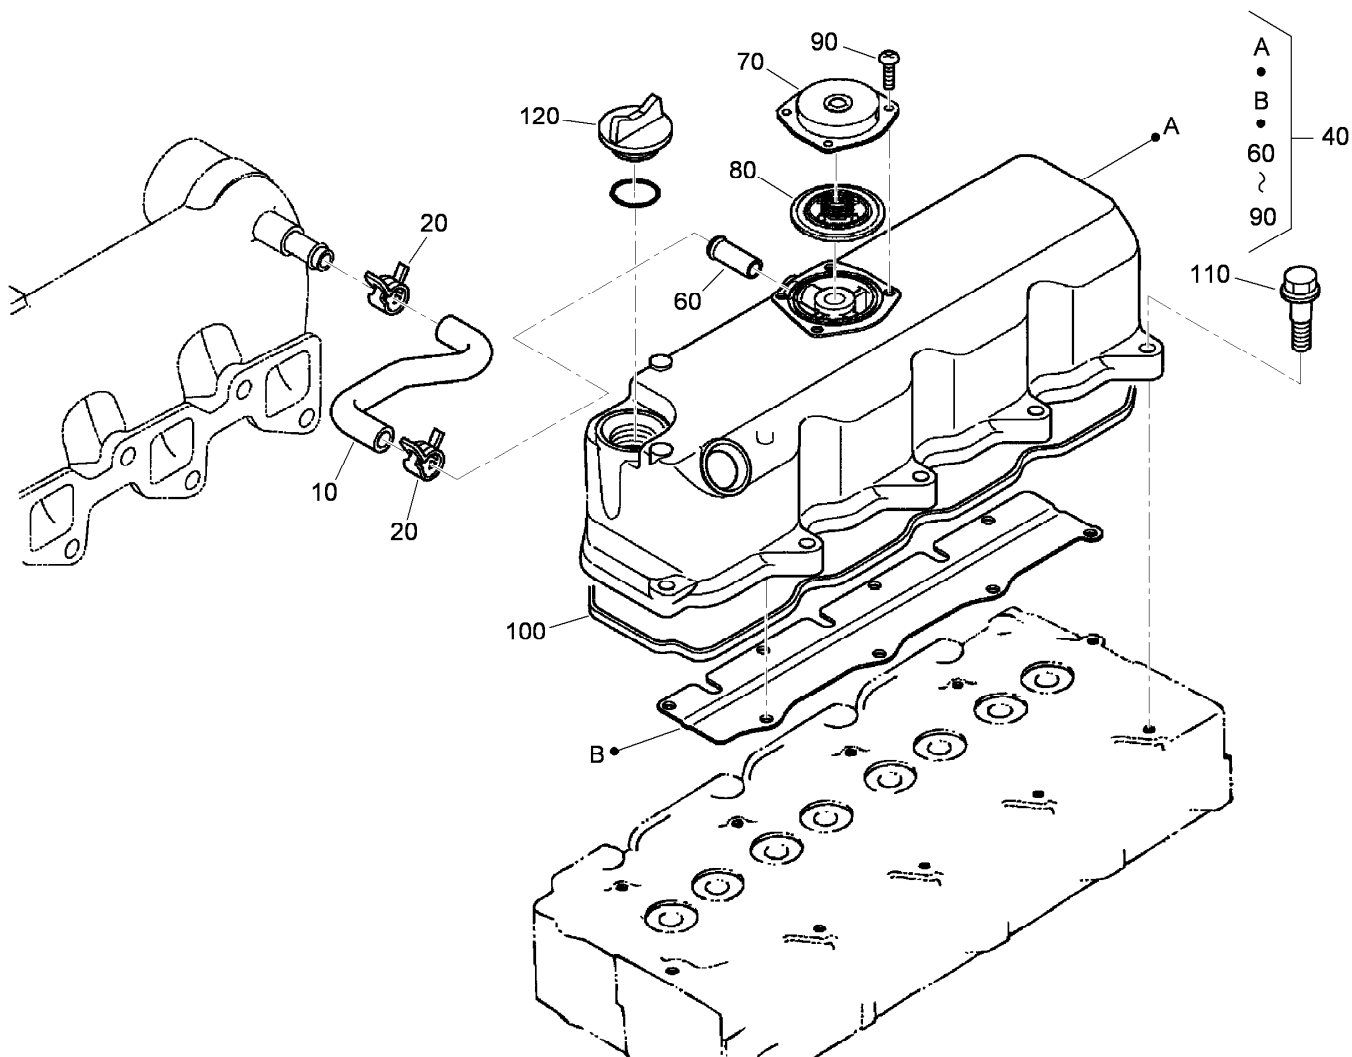 


Cylinder Head Cover Assembly

Ref.	Part Number	Qty.	Description
10	120-5168	1	Tube-Breather
20	115-8524	2	Clamp-Hose
40	115-8525	1	Cylinder Head Cover ASM
60	98-7766	1	Pipe-Return, Water
70	110-3714	1	Cover-Breather
80	110-3715	1	Valve-Breather
90	98-7421	4	Screw W/Washer
100	108-7062	1	Gasket-Cover, Head
110	108-7063	10	Bolt
120	107-9075	1	Plug-Filler, Oil

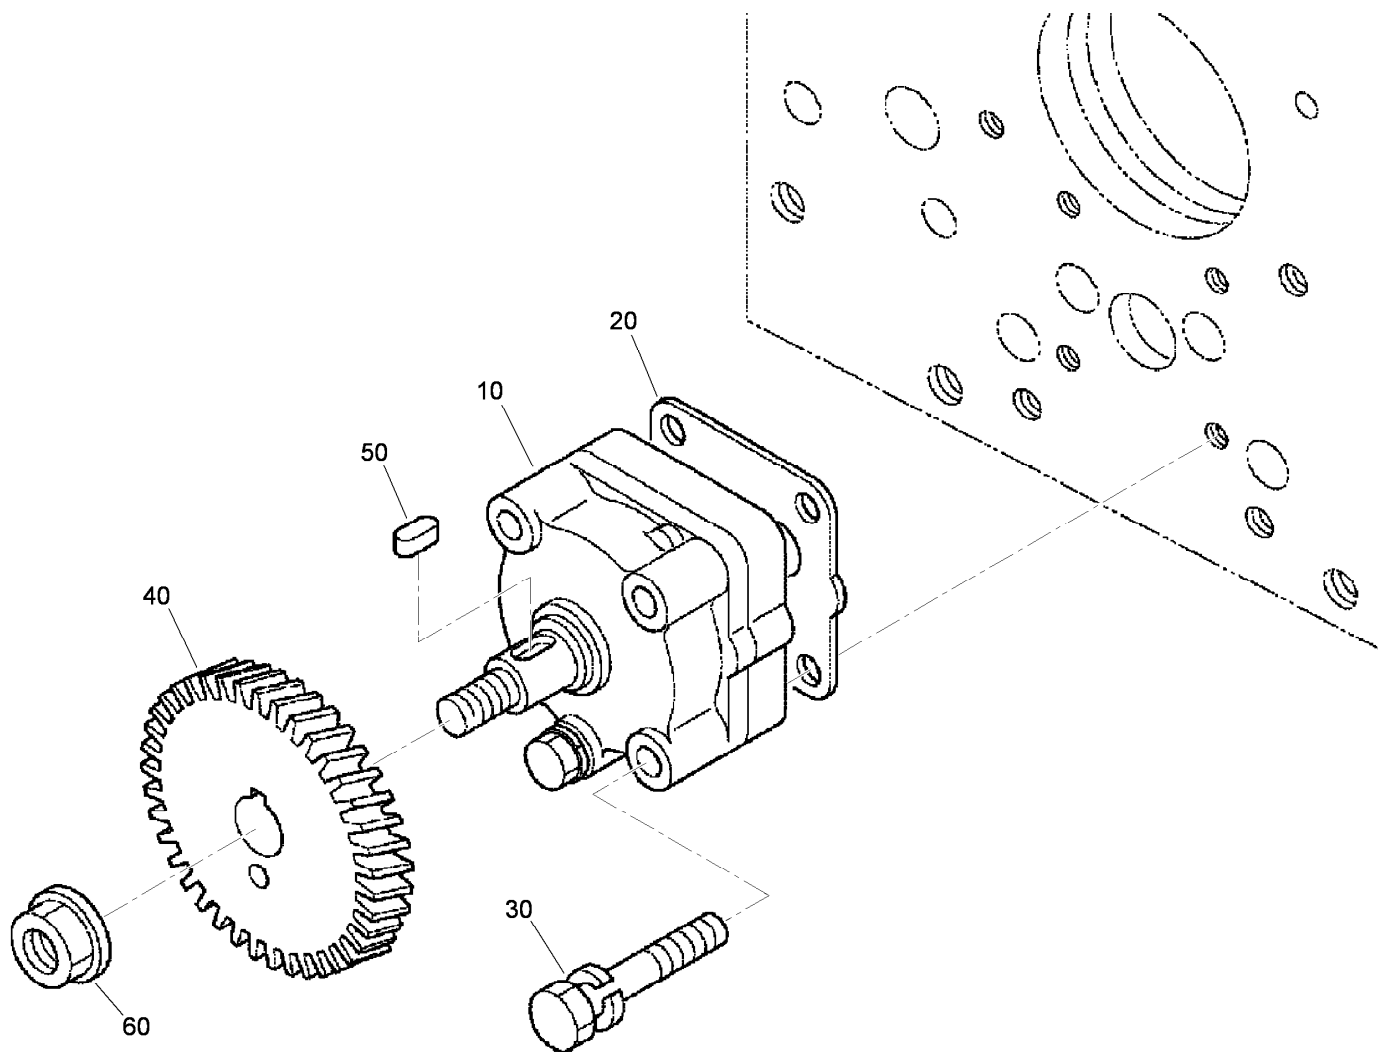 


Oil Pump Assembly

Ref.	Part Number	Qty.	Description
10	98-7512	1	Oil Pump ASM
20	115-8648	1	Gasket-Pump, Oil
30	105-3797	4	Bolt
40	115-8533	1	Gear-Drive, Oil Pump
50	98-7517	1	Key-Feather
60	98-7518	1	Nut-Flange

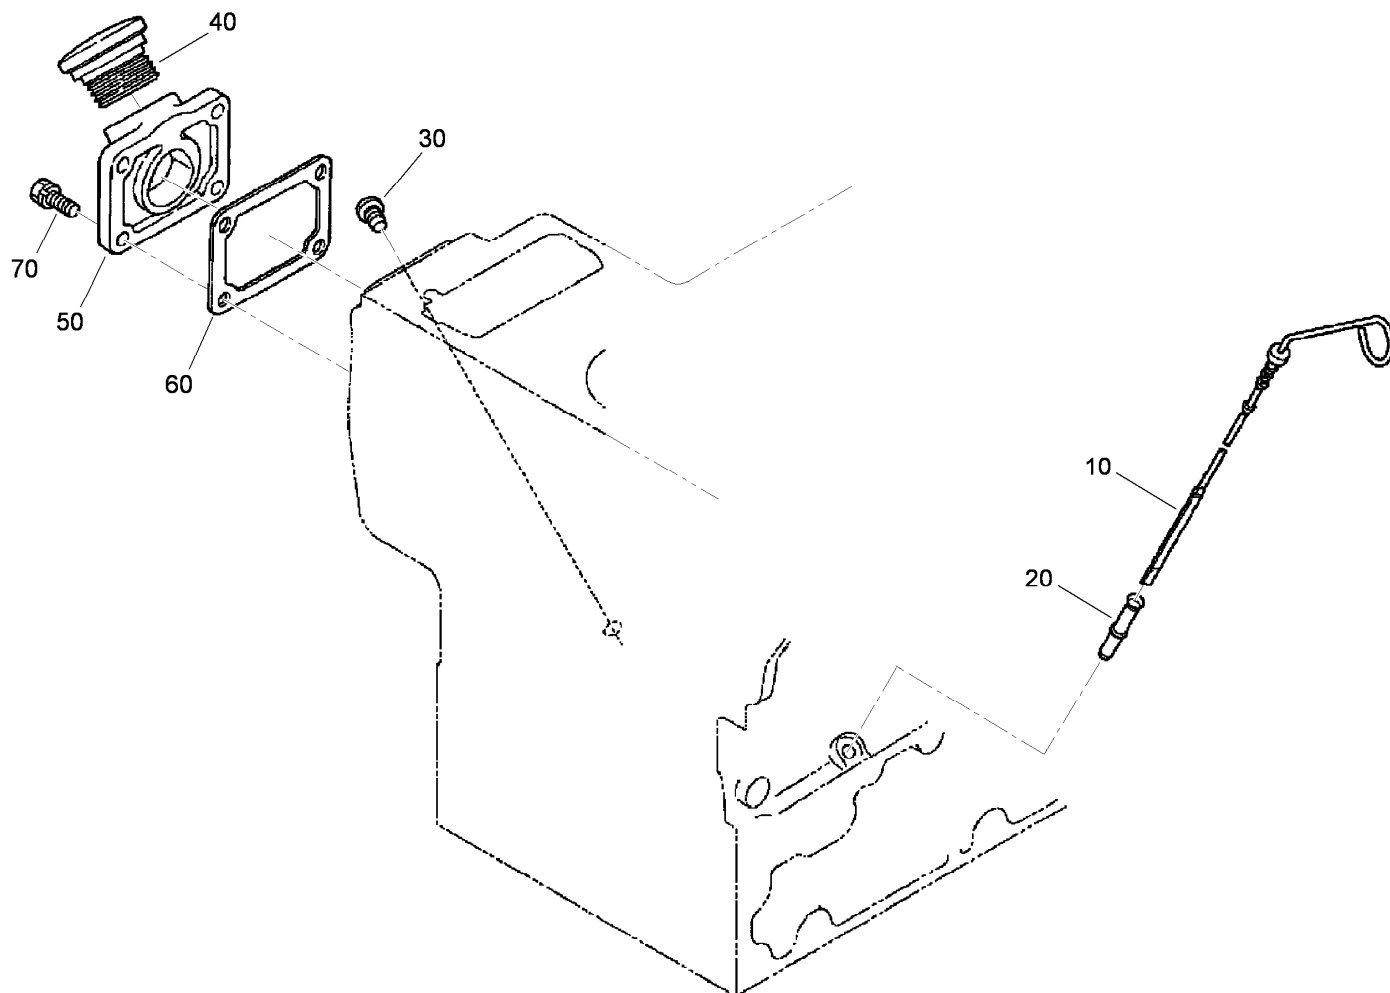 

Dipstick and Guide Assembly


Ref.	Part Number	Qty.	Description
10	120-5169	1	Gauge-Oil
20	105-4580	1	Guide-Gauge, Oil
30	110-3720	1	Plug-Gauge, Oil
40	120-5170	1	Plug-Oil Filler
50	115-8532	1	Flange-Filler, Oil
60	98-7604	1	Gasket-Cover, Pump
70	98-7605	4	Bolt

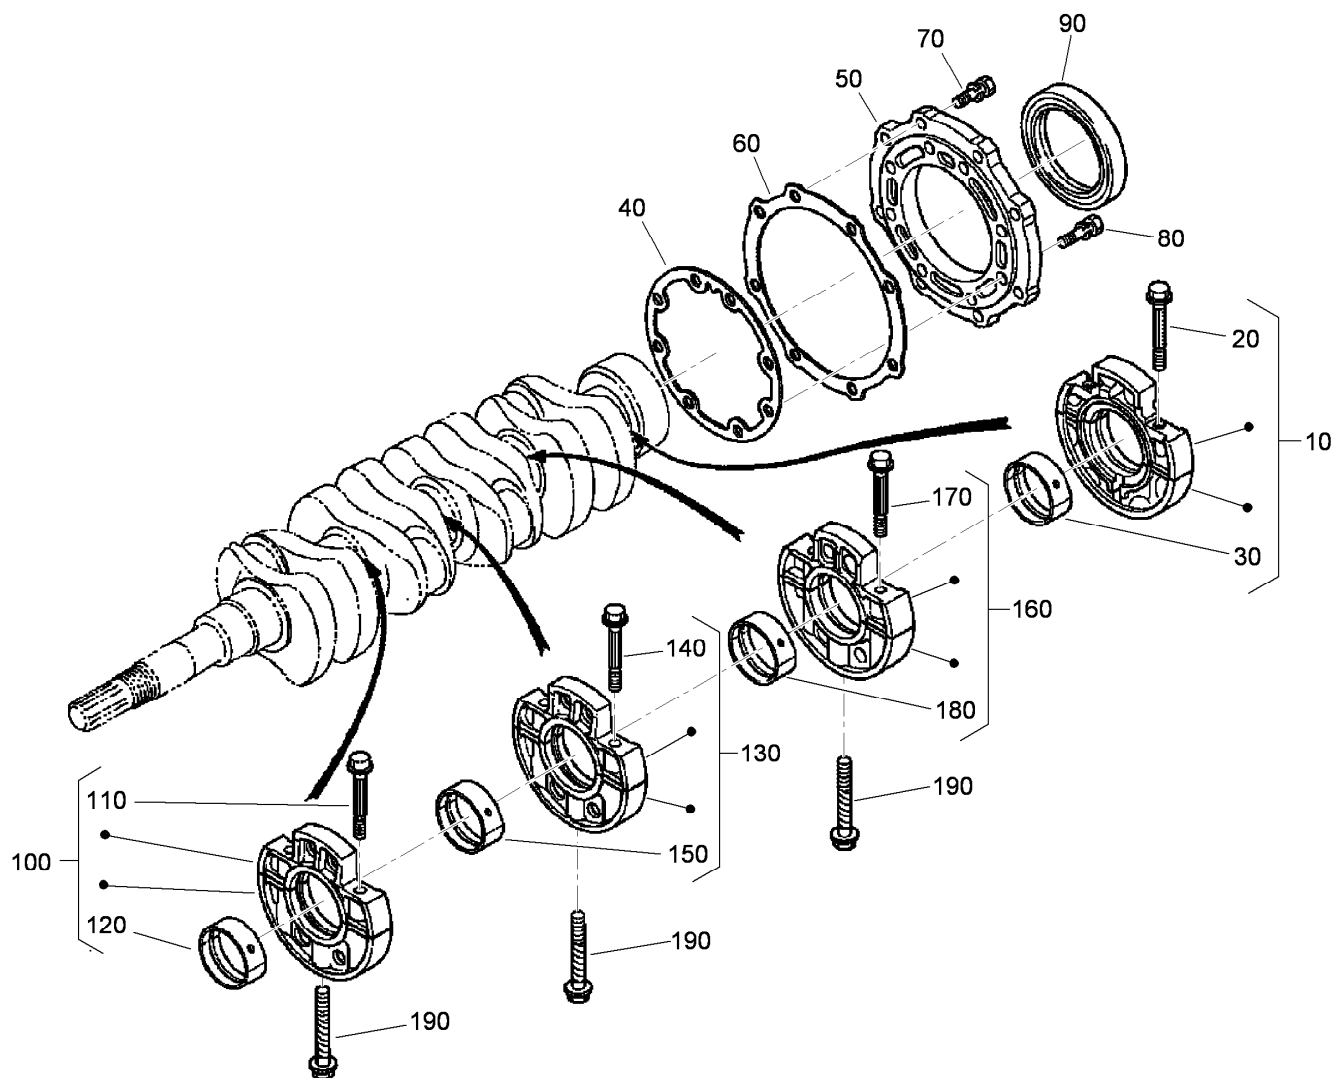 

Main Bearing Case Assembly


Ref.	Part Number	Qty.	Description
10	115-8534	1	Wheel Bearing Case ASM
20	108-7066	2	Bolt-Case, Bearing
30	108-7067	1	Metal-Crankshaft (STD)
30	108-7068	1	Metal-Crankshaft (-0.20Mm)
30	108-7069	1	Metal-Crankshaft (-0.40Mm)
40	108-7070	1	Gasket-Case, Bearing
50	117-8843	1	Cover-Case, Bearing
60	98-7437	1	Gasket-Case Cover, Bearing
70	98-7438	8	Bolt
80	98-7439	8	Bolt
90	108-7072	1	Seal-Oil
100	115-8535	1	Main Bearing Case ASM
110	108-7066	2	Bolt-Case, Bearing

Ref.	Part Number	Qty.	Description
120	108-7067	1	Metal-Crankshaft (STD)
120	108-7068	1	Metal-Crankshaft (-0.20Mm)
120	108-7069	1	Metal-Crankshaft (-0.40Mm)
130	108-7074	1	Main Bearing Case ASM
140	108-7066	2	Bolt-Case, Bearing
150	108-7069	1	Metal-Crankshaft (-0.40Mm)
150	108-7068	1	Metal-Crankshaft (-0.20Mm)
150	108-7067	1	Metal-Crankshaft (STD)
160	115-8536	1	Main Bearing Case ASM
170	108-7066	2	Bolt-Case, Bearing
180	108-7067	1	Metal-Crankshaft (STD)
180	108-7068	1	Metal-Crankshaft (-0.20Mm)
180	108-7069	1	Metal-Crankshaft (-0.40Mm)
190	98-7444	3	Bolt-Case, Bearing

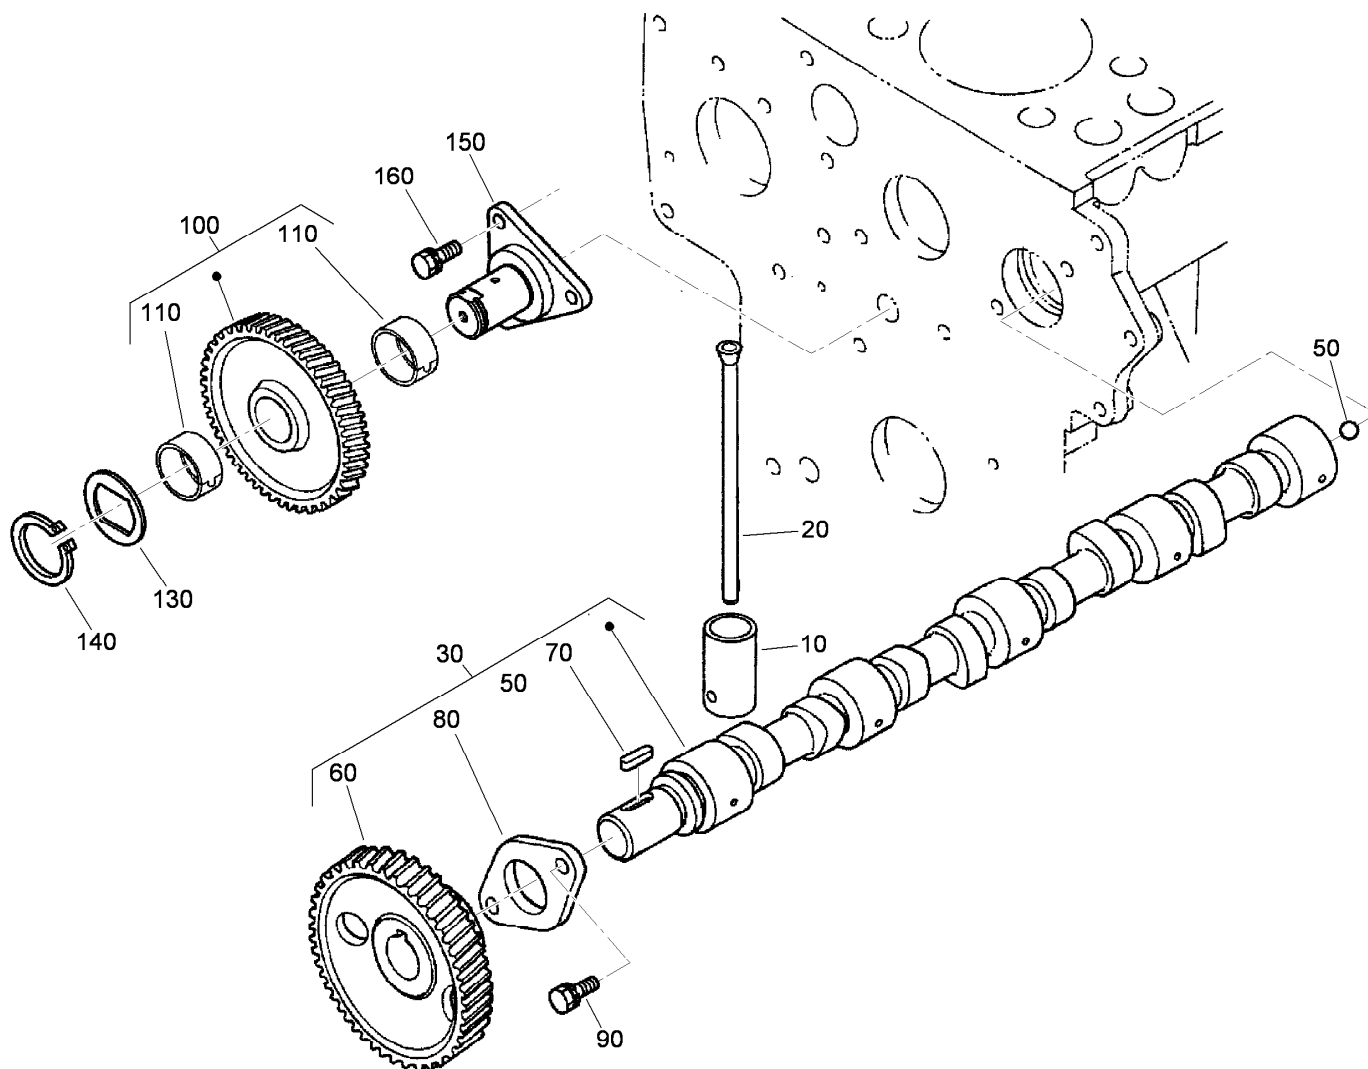 

Cam Shaft and Idle Gear Assembly


Ref.	Part Number	Qty.	Description
10	98-7445	8	Tappet
20	115-8537	8	Rod-Push
30	120-5171	1	Camshaft ASM
50	110-3729	1	Ball
60	120-5172	1	Gear-Cam
70	98-7451	1	Key-Feather
80	120-5173	1	Stopper-Camshaft
90	98-7453	2	Bolt
100	120-5174	1	Idle Gear ASM
110	120-5175	1	Bushing-Gear, Idle
130	107-0111	1	Collar
140	120-5176	1	Circlip
150	120-5177	1	Shaft-Gear, Idle
160	98-7453	3	Bolt

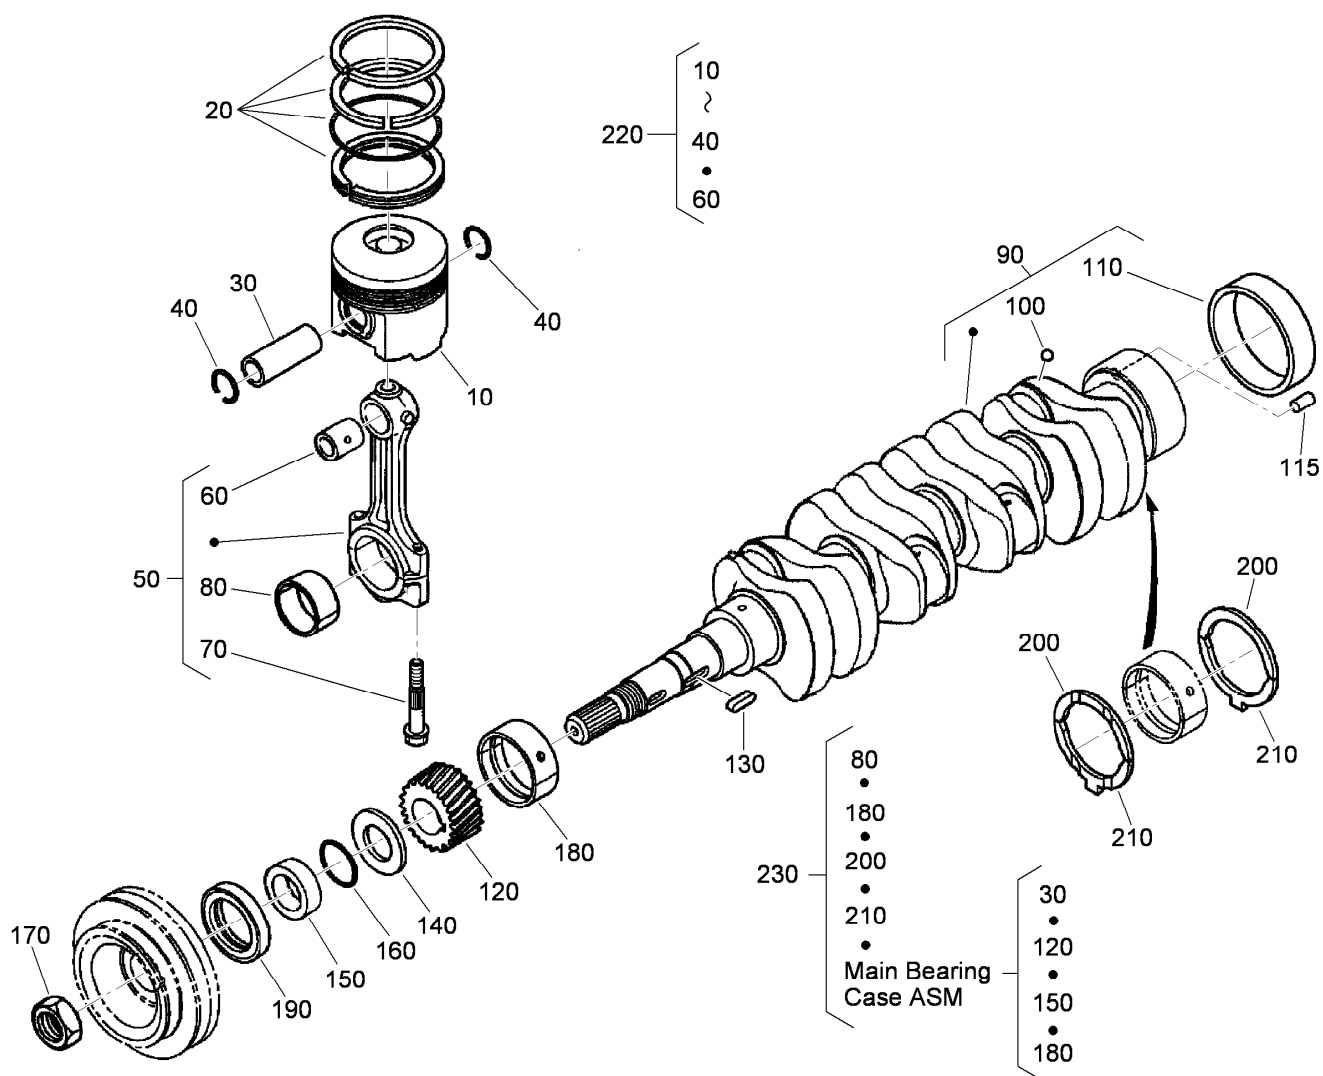 

Piston and Crankshaft Assembly


Ref.	Part Number	Qty.	Description
10	120-5180	4	Piston (STD)
10	120-5181	4	Piston (+0.25Mm)
20	120-5182	4	Piston Ring ASM (STD)
20	120-5183	4	Piston Ring ASM (+0.25Mm)
30	115-8544	4	Pin-Piston
40	112-7002	8	Circlip
50	120-5837	4	Connecting Rod ASM
60	120-5838	4	Bushing-Pin, Piston
70	98-7468	8	Bolt-Rod, Connecting
80	115-8547	4	Metal-Crankpin (-0.20Mm)
80	115-8548	4	Metal-Crankpin (-0.40Mm)
80	98-7469	4	Metal-Crankpin (STD)
90	120-5839	1	Crankshaft ASM
100	110-3729	4	Ball
110	98-7474	1	Sleeve-Crankshaft
115	120-5840	1	Pin-Straight
120	120-5185	1	Gear-Crankshaft
130	115-8552	1	Key-Feather
140	98-7476	1	Slinger-Oil
150	98-7477	1	Collar-Crankshaft

Ref.	Part Number	Qty.	Description
160	98-7478	1	O-Ring
170	98-7479	1	Nut-Crankshaft
180	108-7075	1	Metal-Crankshaft (STD)
180	108-7076	1	Metal-Crankshaft (-0.20Mm)
180	108-7077	1	Metal-Crankshaft (-0.40Mm)
190	98-7480	1	Seal-Oil
200	108-7078	2	Metal-Side (STD)
200	108-7079	2	Metal-Side (+0.20Mm)
200	108-7080	2	Metal-Side (+0.40Mm)
210	108-7081	2	Metal-Side (STD)
210	108-7082	2	Metal-Side (+0.20Mm)
210	108-7083	2	Metal-Side (+0.40Mm)
220	120-5186	1	Piston Kit (STD)
220	120-5187	1	Piston Kit (+0.25Mm)
230	120-5188	1	Engine Metal Kit (STD)
230	115-8555	1	Engine Metal Kit (-0.20Mm/+0.20Mm)
230	115-8556	1	Engine Metal Kit (-0.40Mm/+0.40Mm)

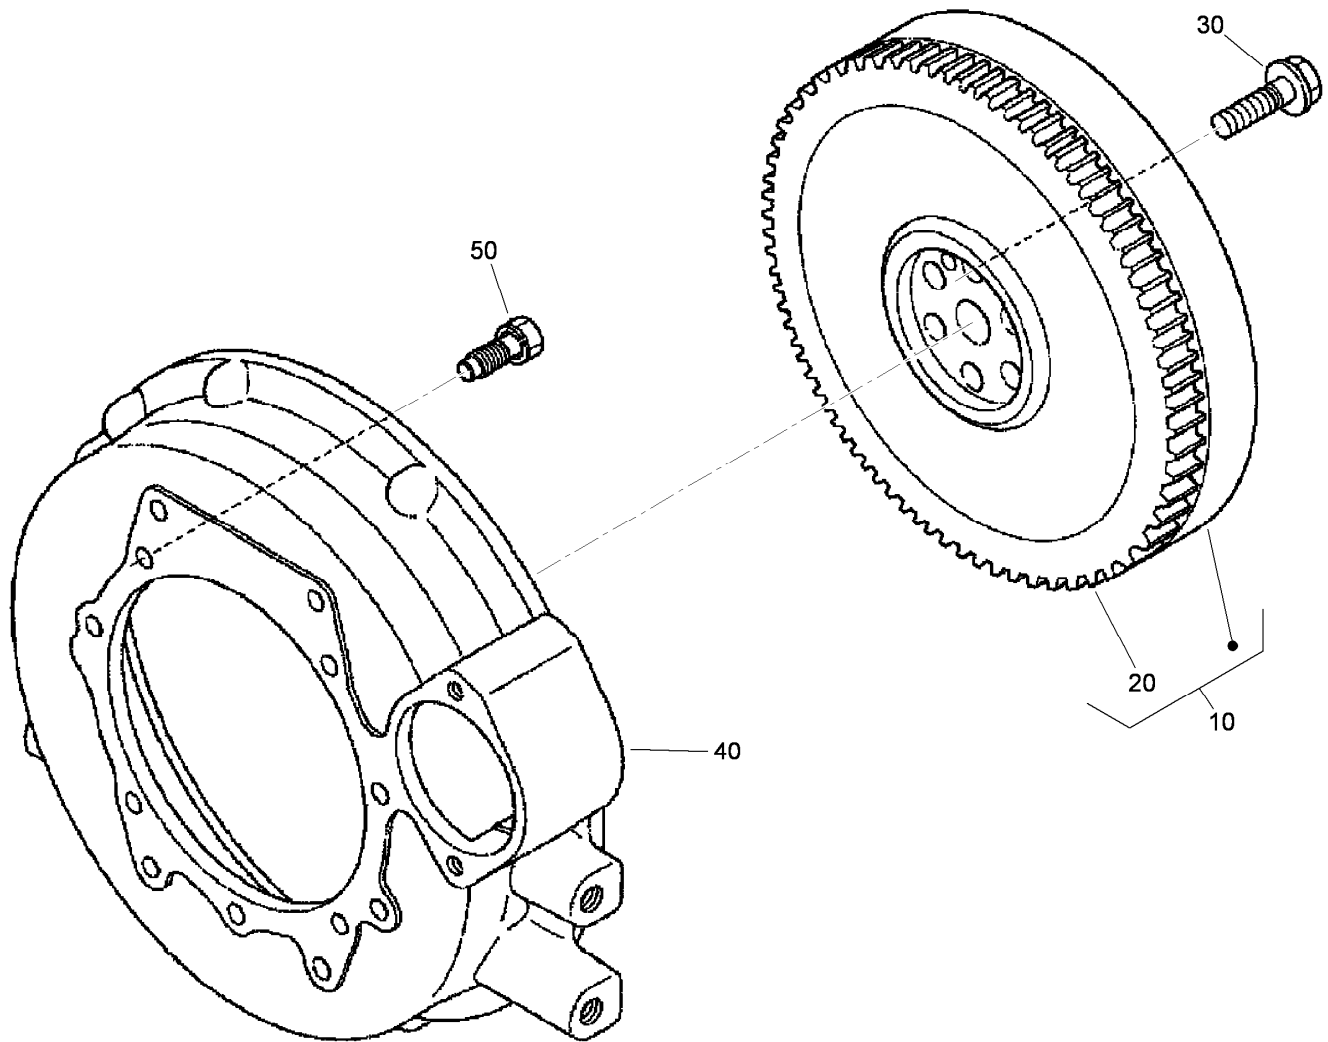 

Flywheel Assembly


Ref.	Part Number	Qty.	Description
10	115-8557	1	Flywheel ASM
20	115-8558	1	Gear-Ring
30	120-5189	6	Bolt-Flywheel
40	115-8559	1	Housing-Flywheel
50	98-7885	11	Bolt

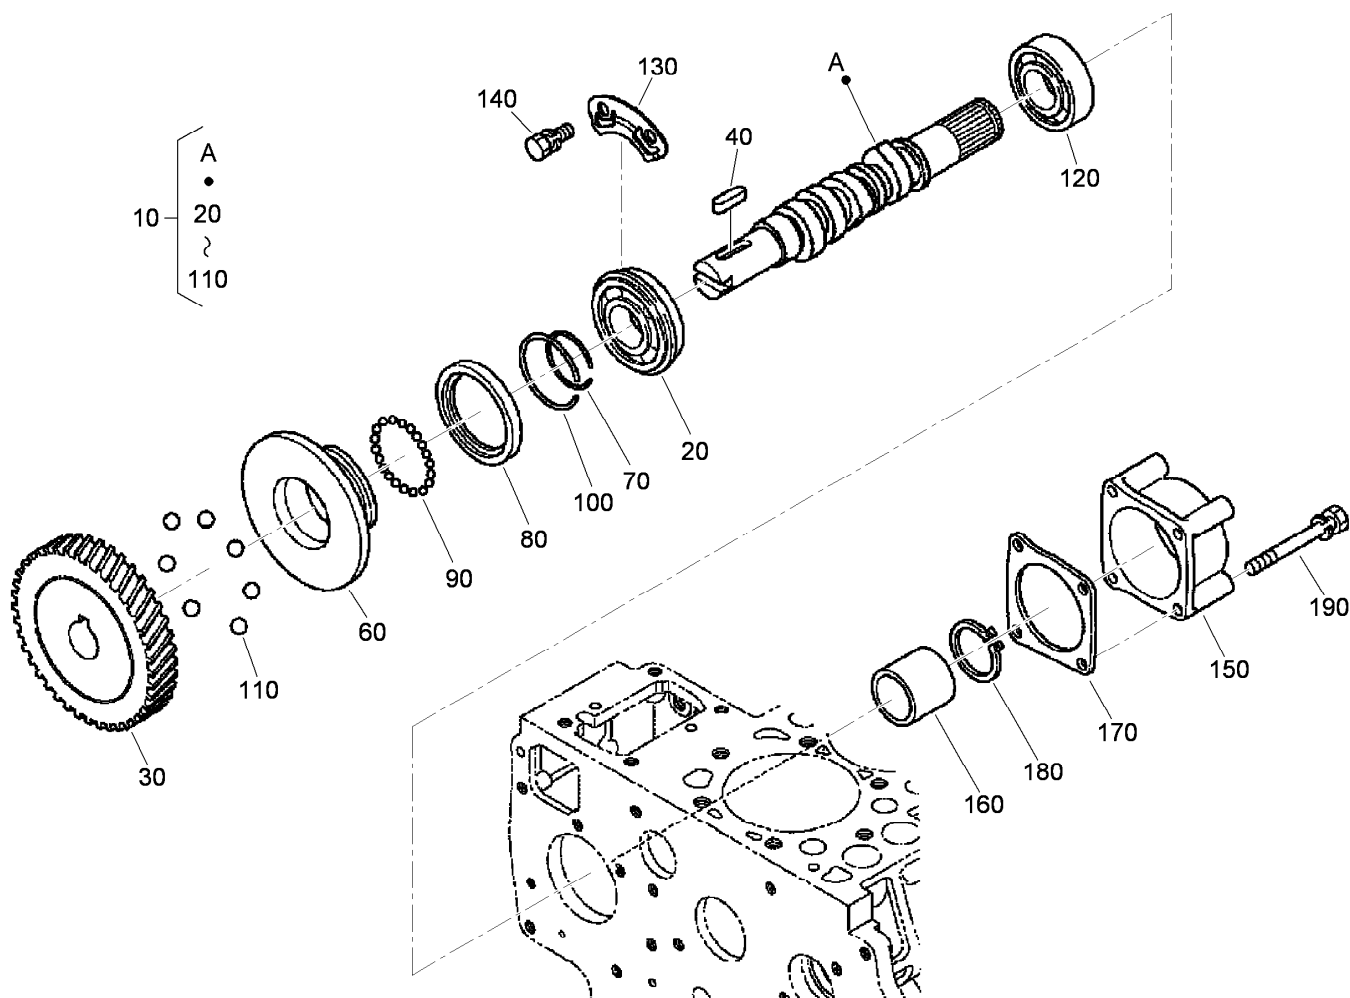 

Fuel Camshaft and Governor Shaft Assembly

Ref.	Part Number	Qty.	Description
10	120-5190	1	Fuel Camshaft ASM
20	120-5191	1	Bearing-Ball
30	98-7574	1	Gear-Pump, Injection
40	98-7575	1	Key-Feather
60	98-7577	1	Sleeve-Governor
70	98-7578	1	Circlip-Sleeve, Governor
80	120-5192	1	Case-Ball, Governor
90	98-7580	39	Ball
100	98-7581	1	Circlip


Ref.	Part Number	Qty.	Description
110	98-7582	7	Ball
120	115-8562	1	Bearing-Ball
130	120-5193	1	Stopper-Camshaft, Fuel
140	100-9195	2	Bolt
150	115-8564	1	Cover-Camshaft, Fuel
160	115-8565	1	Collar
170	115-8566	1	Gasket
180	120-5194	1	Circlip-External
190	98-7590	4	Bolt

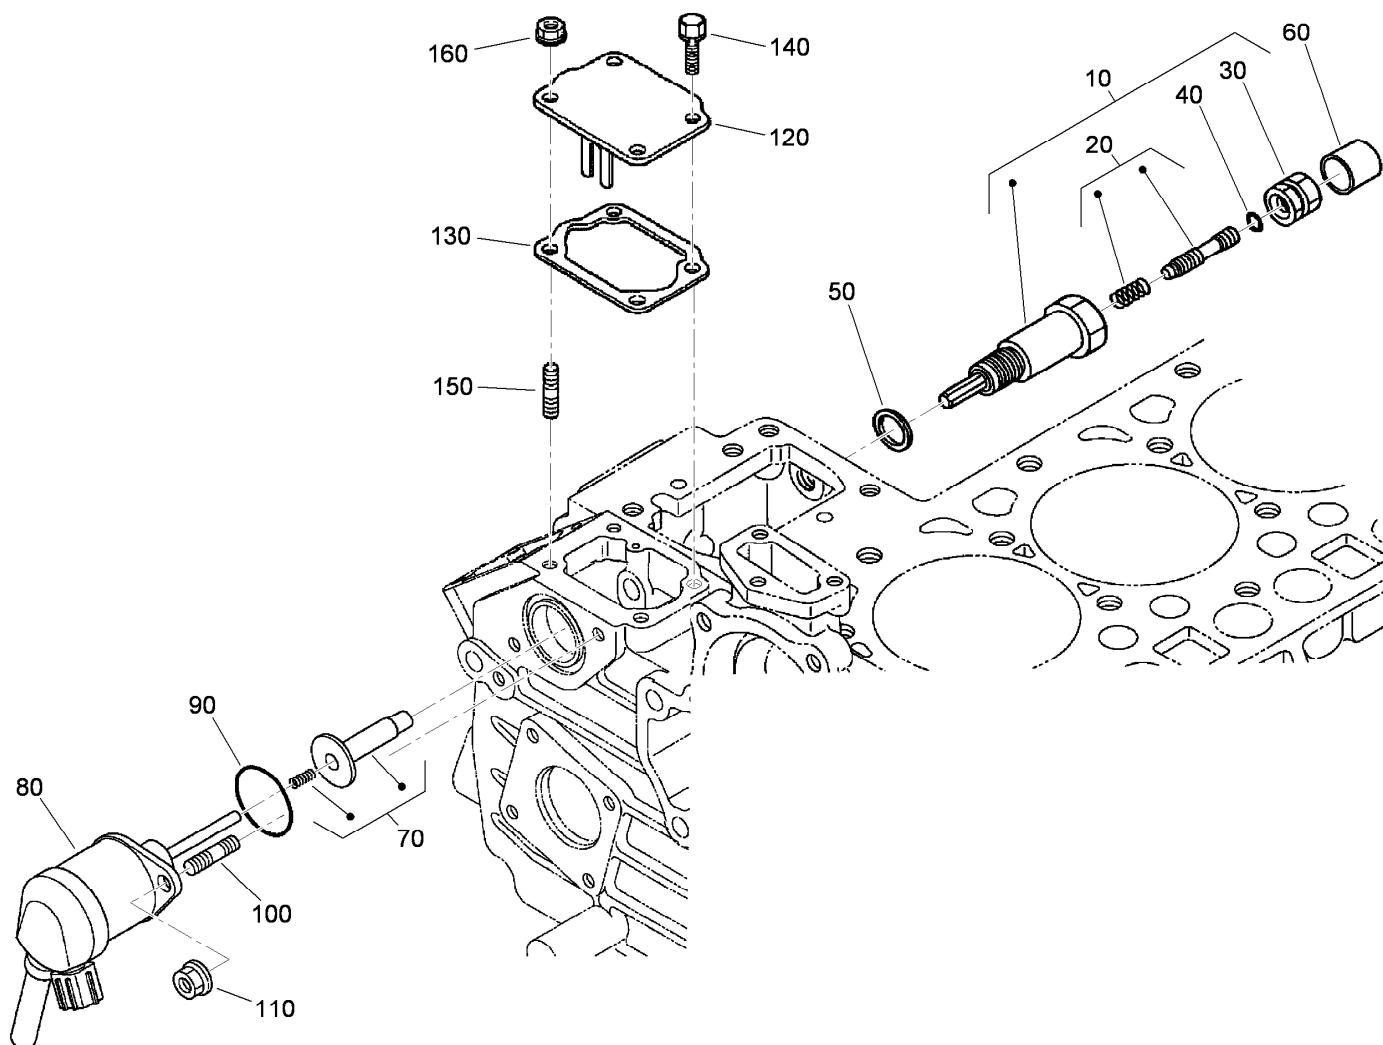 

Idle Apparatus and Stop Solenoid Assembly


Ref.	Part Number	Qty.	Description
10	120-5195	1	Apparatus-Idling
20	120-5196	1	Adjustment Bolt ASM
30	115-8569	1	Nut-Spring
40	115-8570	1	O-Ring
50	115-8571	1	Gasket
60	115-8572	1	Cap
70	115-8579	1	Guide-Solenoid
80	115-8580	1	Solenoid ASM

Ref.	Part Number	Qty.	Description
90	110-3762	1	O-Ring
100	98-7571	2	Stud
110	100-2203	2	Nut-Flange
120	120-5818	1	Cover
130	115-8578	1	Gasket-Plate
140	98-7692	2	Bolt
150	100-1924	2	Stud
160	100-2203	2	Nut-Flange

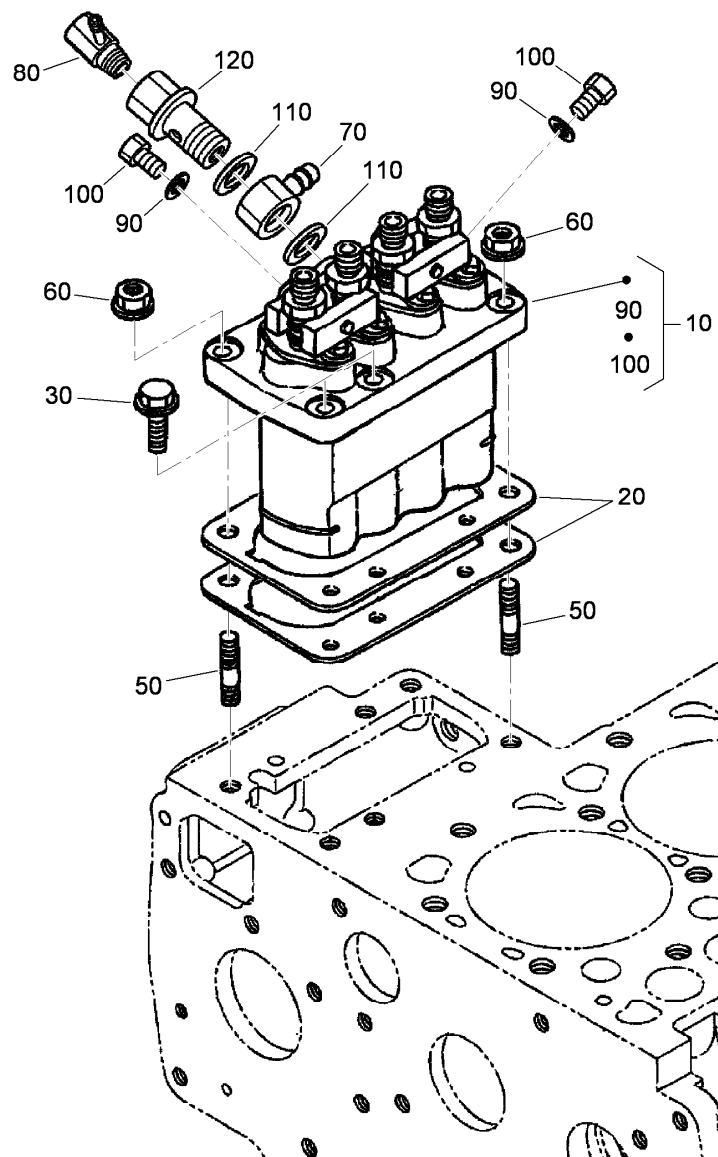 


Injection Pump Assembly

Ref.	Part Number	Qty.	Description
10	120-5197	1	Injection Pump ASM
20	115-8582	1	Shim-Pump, Injection (0.175Mm)
20	98-7607	1	Shim-Pump, Injection (0.200Mm)
20	107-0147	1	Shim-Pump, Injection (0.250Mm)
20	107-0148	1	Shim-Pump, Injection (0.300Mm)
20	120-5198	1	Shim-Pump, Injection (0.350Mm)
30	115-8583	4	Bolt-Flange
50	100-1558	2	Stud
60	112-2492	2	Nut-Flange
70	119-8045	1	Joint-Eye
80	107-4300	1	Orifice ASM
90	120-5199	2	Gasket
100	120-5800	2	Screw-Bleeder, Air
110	119-8047	2	Gasket
120	119-8046	1	Bolt-Joint, Eye

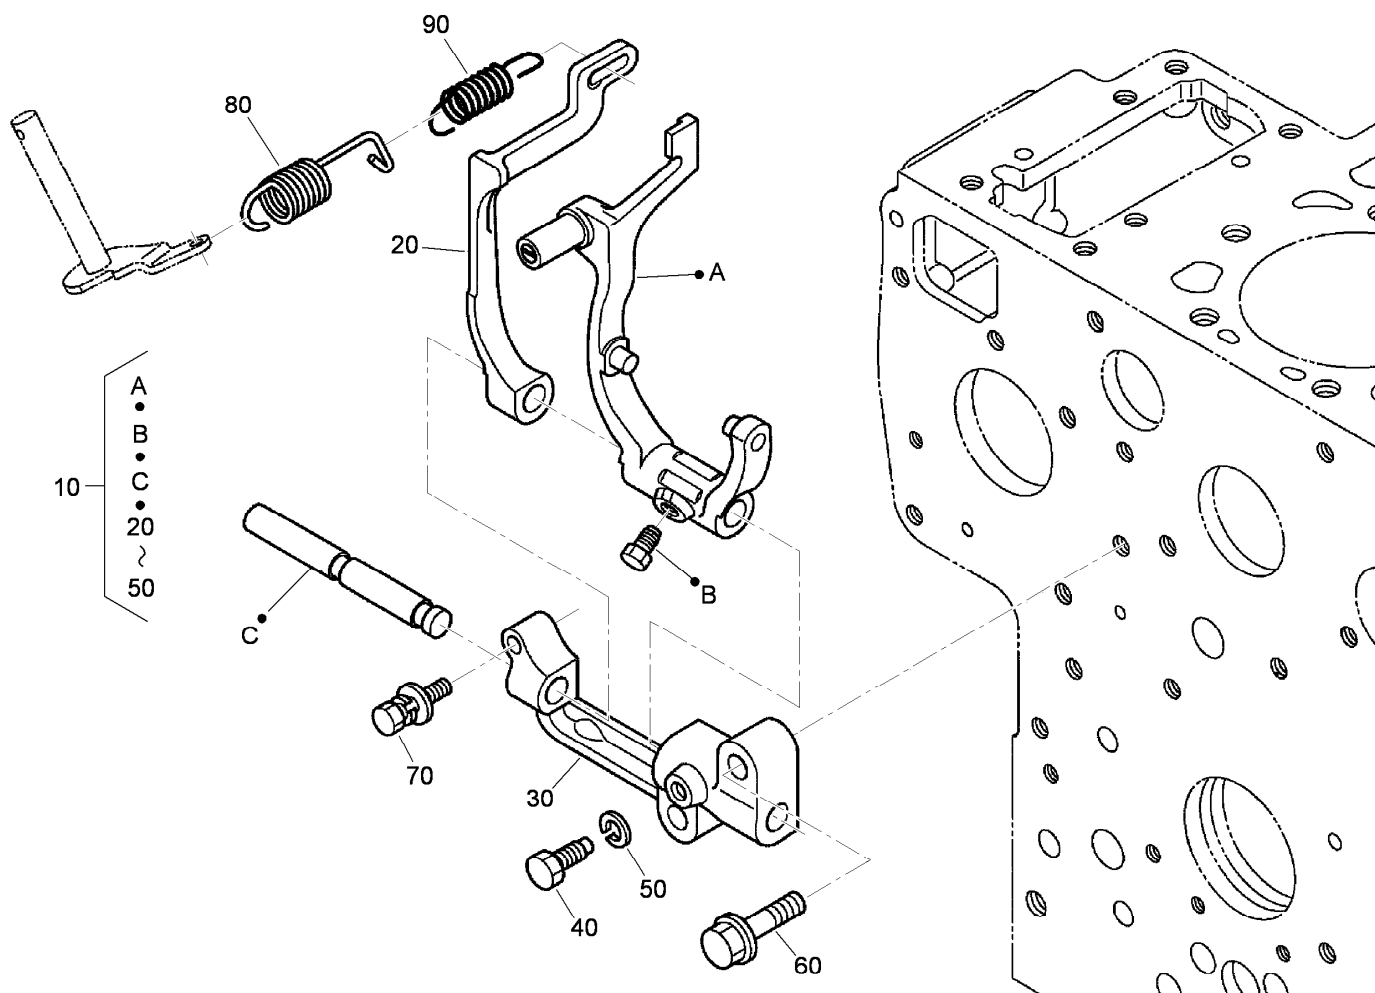 


Governor Assembly

Ref.	Part Number	Qty.	Description
10	120-5801	1	Fork Lever ASM
20	115-8585	1	Lever-Fork
30	98-7643	1	Holder-Lever, Fork
40	98-7644	1	Bolt
50	98-7699	1	Washer-Spring
60	108-7085	2	Bolt-Flange
70	108-7086	1	Bolt
80	120-5802	1	Spring-Governor
90	120-5803	1	Spring-Governor

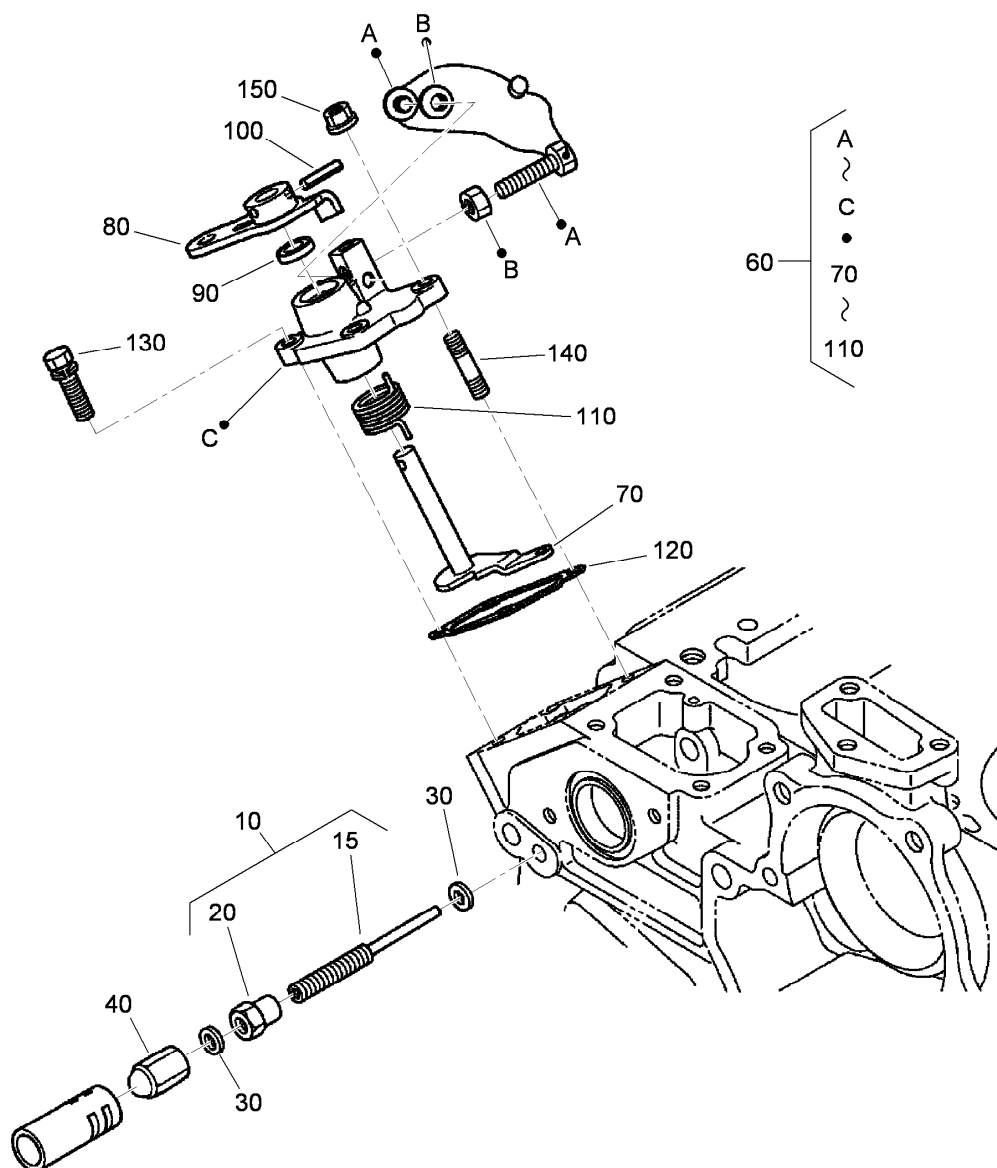 

Speed Control Plate Assembly


Ref.	Part Number	Qty.	Description
10	107-0132	1	Adjustable Bolt ASM
15	115-8588	1	Bolt-Adjusting
20	98-7653	1	Nut
30	98-7654	2	Gasket
40	98-7655	1	Nut-Cap
60	115-8589	1	Control Plate ASM
70	115-8590	1	Lever-Governor
80	115-8591	1	Lever-Control, Speed
90	115-8576	1	Seal-Oil
100	98-7602	1	Pin-Spring
110	115-8593	1	Spring-Return
120	115-8578	1	Gasket-Plate
130	98-7568	2	Bolt
140	98-7571	2	Stud
150	100-2203	2	Nut-Flange

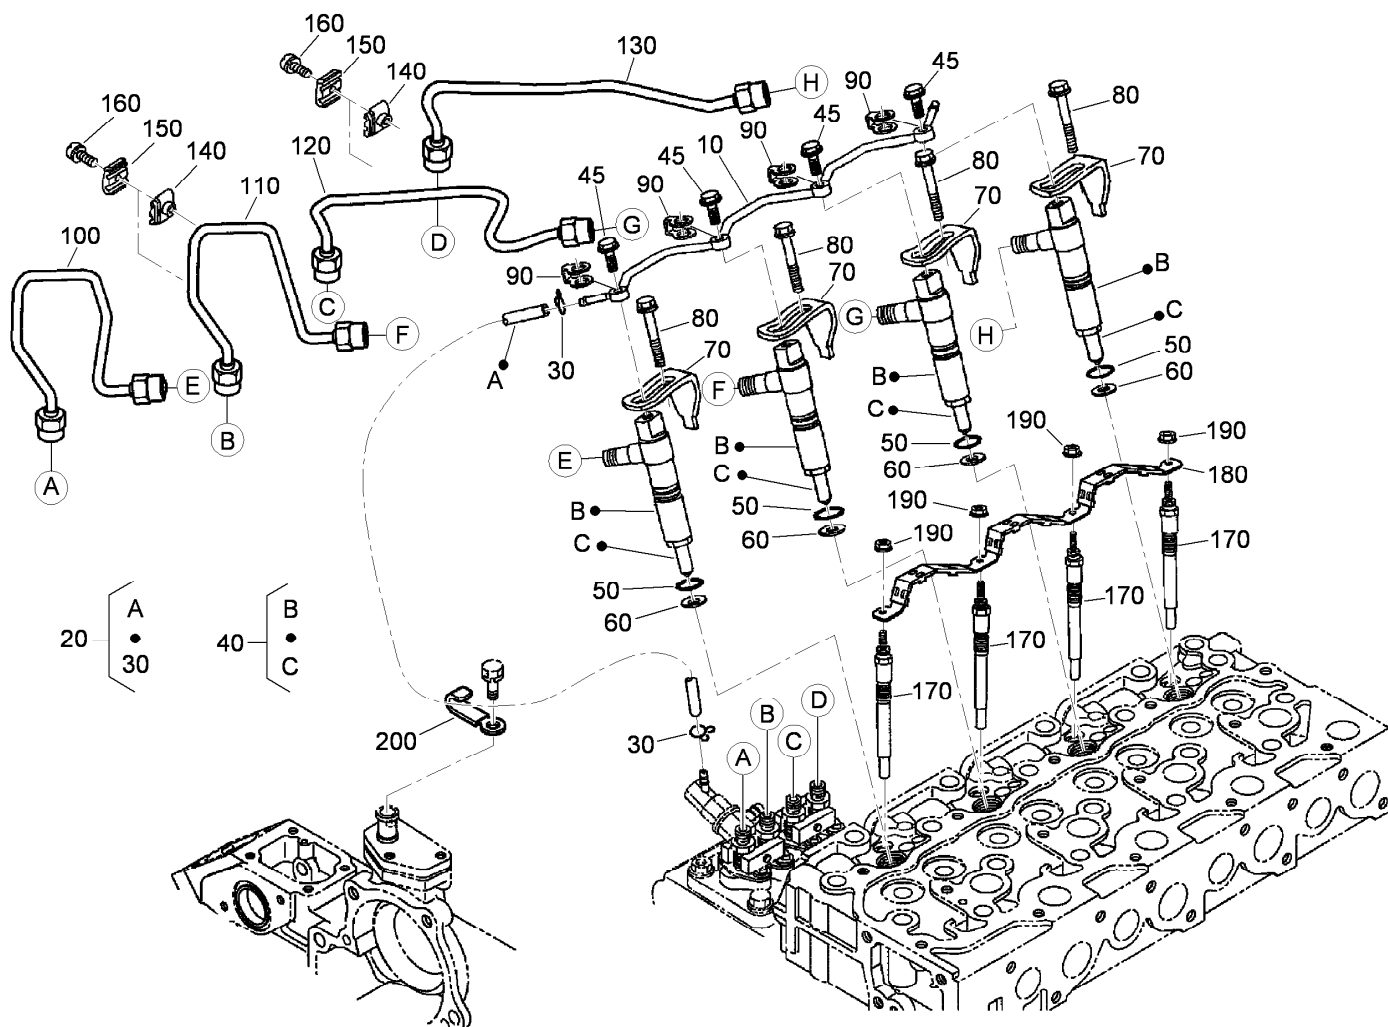 

Nozzle Holder and Glow Plug Assembly


Ref.	Part Number	Qty.	Description
10	120-5804	1	Overflow Pipe ASM
20	120-5805	1	Fuel Tube ASM
30	115-8595	2	Clip-Pipe
40	120-5806	4	Nozzle Holder ASM
45	120-5807	4	Bolt-Joint, Eye
50	98-7547	4	O-Ring
60	120-5808	4	Gasket
70	120-5809	4	Clamp-Nozzle
80	120-5810	4	Bolt-Clamp
90	120-5811	4	Gasket
100	120-5812	1	Pipe-Injection

Ref.	Part Number	Qty.	Description
110	120-5813	1	Pipe-Injection
120	120-5814	1	Pipe-Injection
130	120-5815	1	Pipe-Injection
140	98-7682	2	Clamp-Pipe
150	98-7683	2	Clamp-Pipe
160	98-7684	2	Screw (W/Washer)
170	120-5816	4	Plug-Glow
180	120-5817	1	Cord-Plug, Glow
190	99-8377	4	Nut-Flange
200	98-7673	1	Clamp-Cord

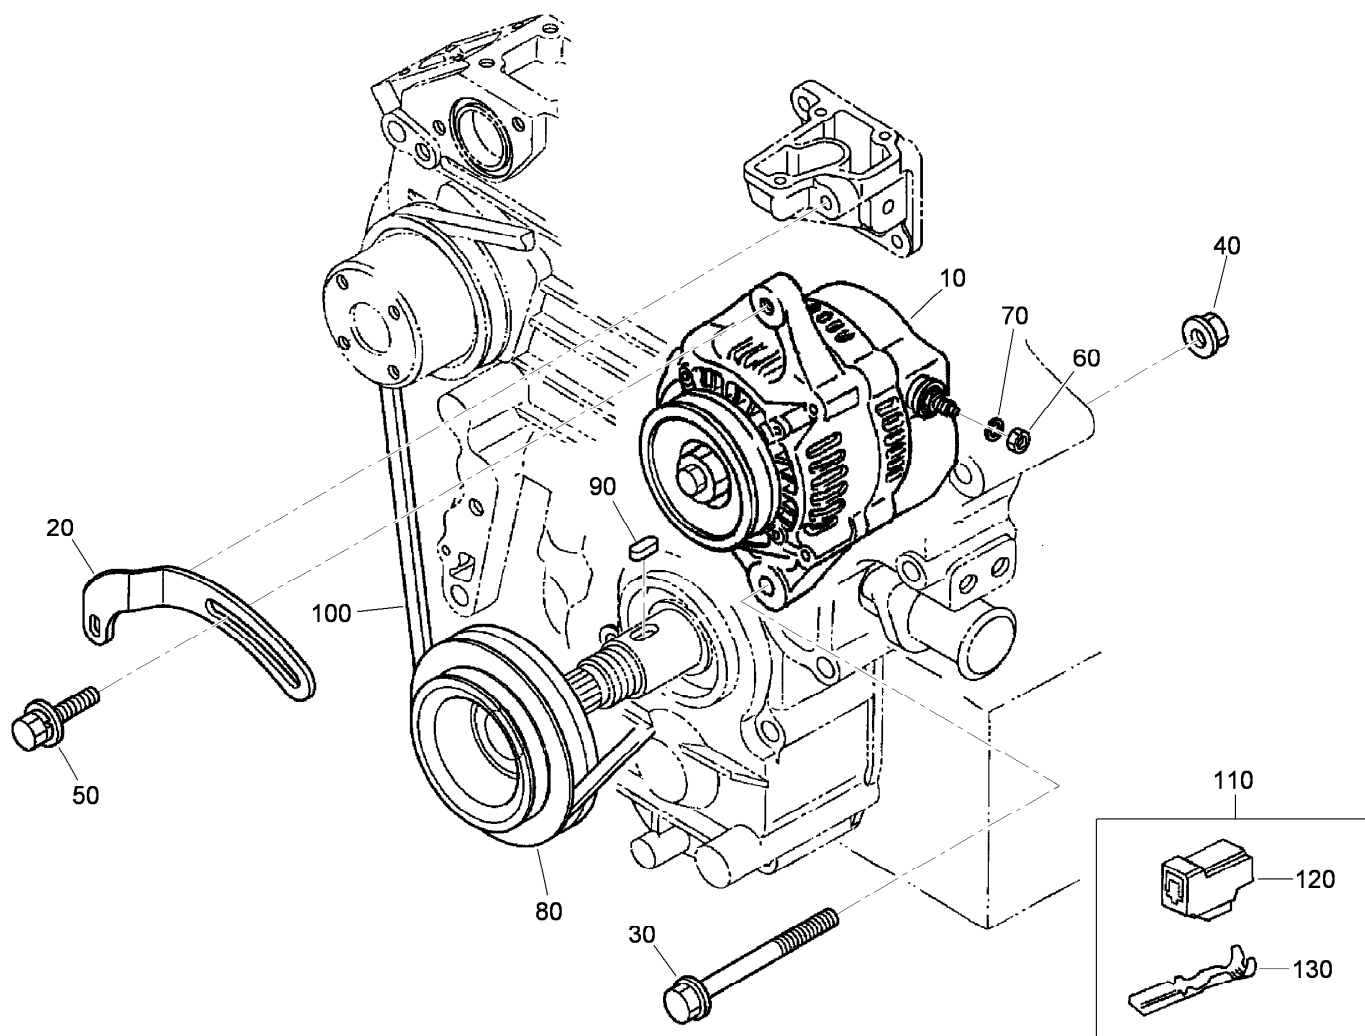 

Alternator and Pulley Assembly


Ref.	Part Number	Qty.	Description
10	120-5819	1	Alternator
20	120-5820	1	Stay-Dynamo
30	120-5821	1	Bolt-Flange
40	120-5822	1	Nut-Flange
50	108-7088	1	Bolt
60	98-7572	1	Nut
70	98-7699	1	Washer-Spring
80	120-5823	1	Pulley-Drive, Fan
90	98-7451	1	Key-Feather
100	120-5824	1	Belt-Fan
110	115-8600	1	Coupler ASM
120	115-8601	1	Connector
130	115-8602	2	Terminal

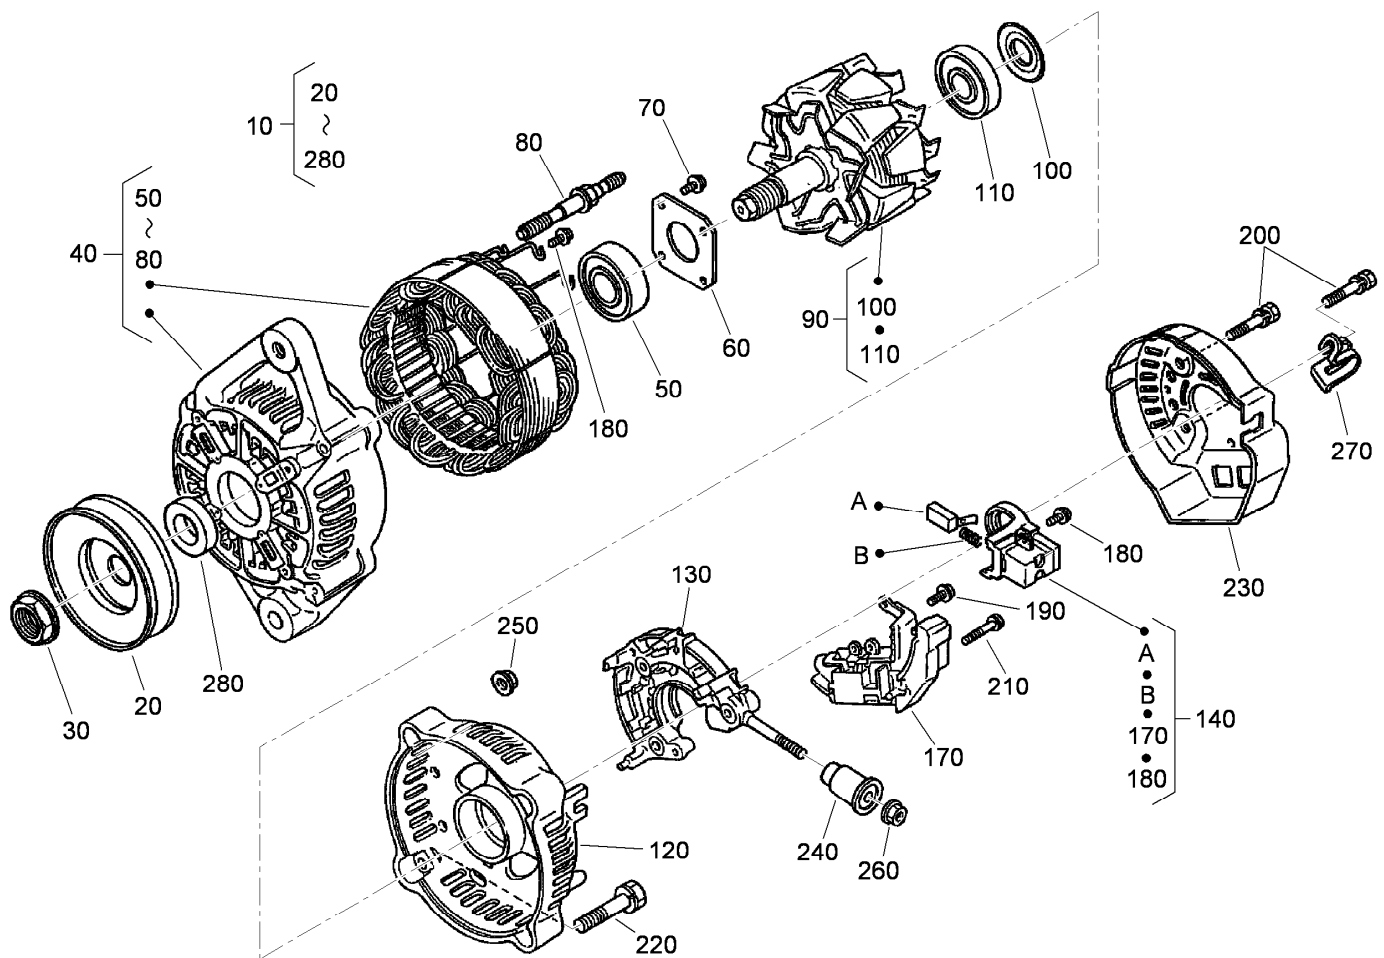 

Alternator Component Part Assembly


Ref.	Part Number	Qty.	Description
10	120-5819	1	Alternator
20	98-7707	1	Pulley-Alternator
30	98-7708	1	Nut
40	117-0316	1	Drive End Frame ASM
50	107-0137	1	Bearing-Ball
60	98-7715	1	Plate-Retainer
70	98-7716	4	Screw-Head, Round
80	98-7717	2	Bolt-Through
90	117-0317	1	Rotor ASM
100	98-7711	1	Cover-Bearing
110	107-0138	1	Bearing-Ball
120	117-0318	1	Frame-End
130	117-0322	1	Holder

Ref.	Part Number	Qty.	Description
140	107-0141	1	Brush Holder ASM
170	110-3799	1	Regulator ASM
180	98-7727	6	Screw-Head, Round
190	98-7728	1	Screw-Head, Round
200	98-7729	3	Bolt
210	98-7726	2	Screw-Head, Round
220	98-7731	2	Bolt
230	117-0320	1	Cover-End
240	98-7722	1	Bushing-Insulation
250	98-7730	2	Nut
260	98-7732	1	Nut
270	120-5841	1	Clamp-Cord
280	98-7709	1	Collar

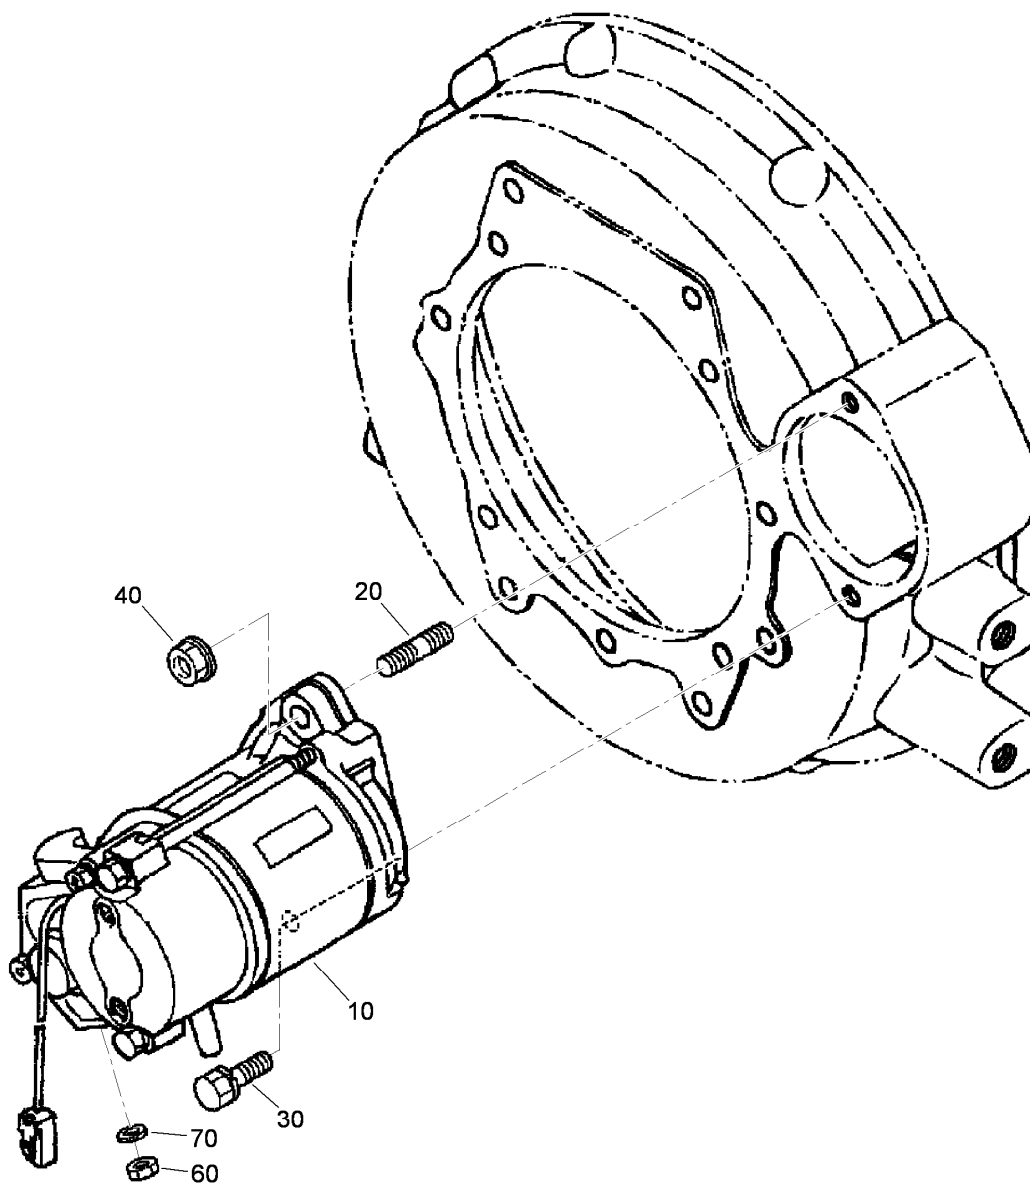 

Starter Assembly


Ref.	Part Number	Qty.	Description
10	115-8603	1	Starter ASM
20	98-7735	1	Stud
30	98-7736	1	Bolt
40	115-8597	1	Nut-Flange
60	98-7739	1	Nut
70	105-2893	1	Washer-Spring

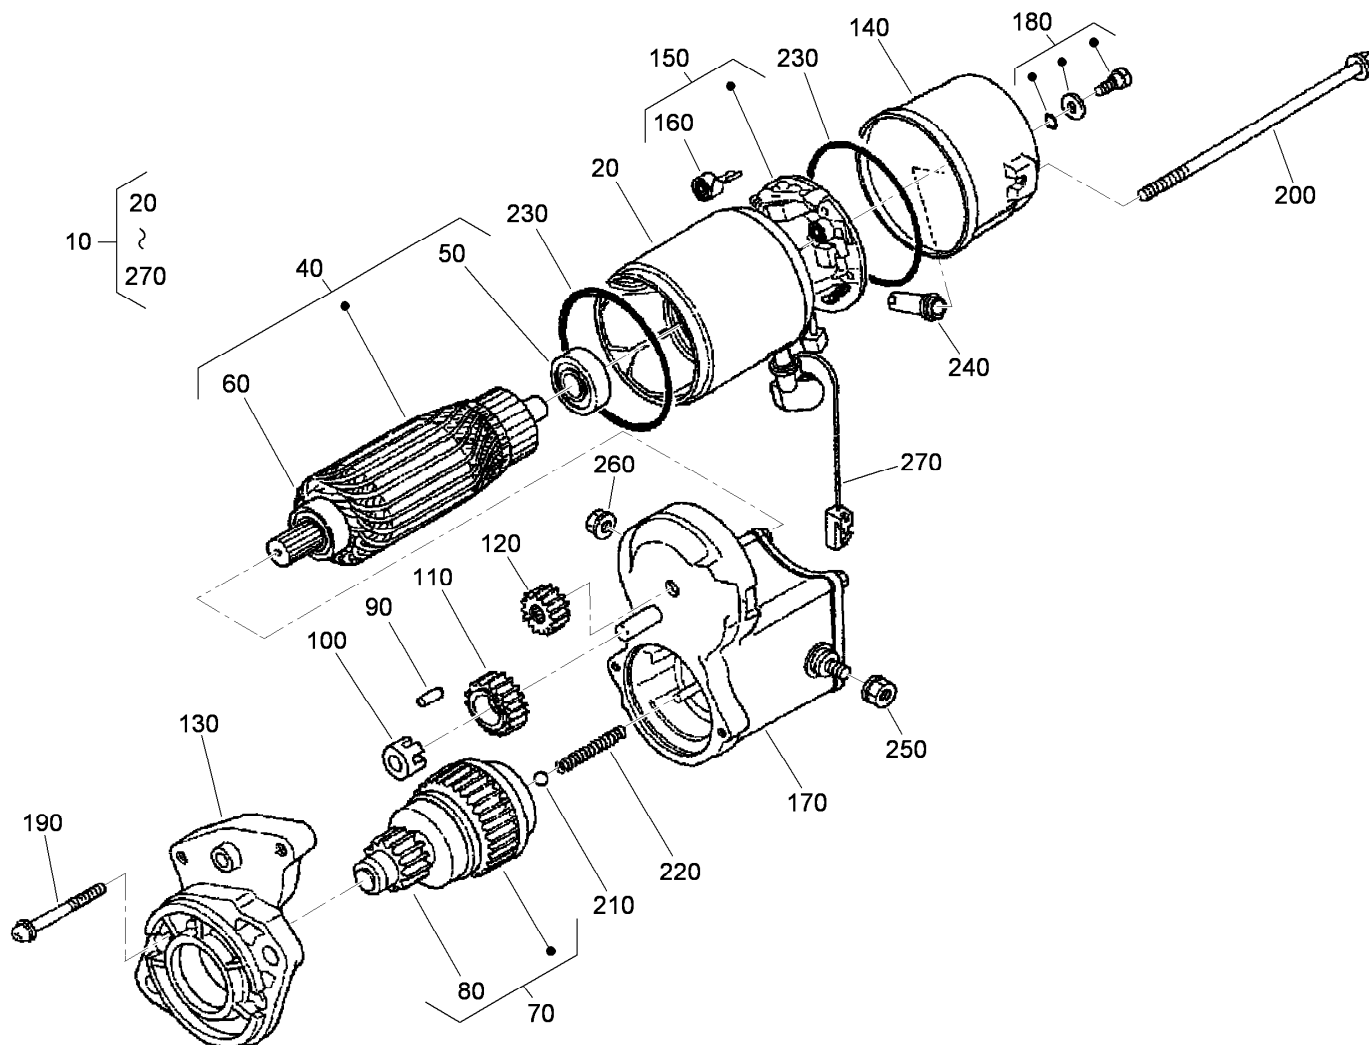 

Starter Components Assembly

Ref.	Part Number	Qty.	Description
10	115-8603	1	Starter ASM
20	115-8604	1	Yoke
40	115-8606	1	Armature
50	115-8607	1	Bearing
60	98-7744	1	Bearing
70	115-8608	1	Clutch-Running, Over
80	112-2833	1	Gear-Pinion
90	98-9707	5	Roller
100	98-7752	1	Retainer
110	98-7751	1	Gear
120	115-8609	1	Gear
130	115-8610	1	Frame-End, Drive
140	115-8611	1	Frame-End


Ref.	Part Number	Qty.	Description
150	115-8612	1	Holder-Brush
160	115-8613	4	Spring
170	115-8615	1	Magnetic Switch ASM
180	115-8616	2	Screw
190	115-8617	2	Screw
200	115-8618	2	Bolt-Thru
210	98-7755	1	Ball
220	98-7754	1	Spring
230	98-7757	2	O-Ring
240	115-8619	1	Pipe-Drain
250	98-7760	1	Nut-Hex
260	99-8376	1	Nut-Hex
270	98-9711	1	Cord-Solenoid, Stop

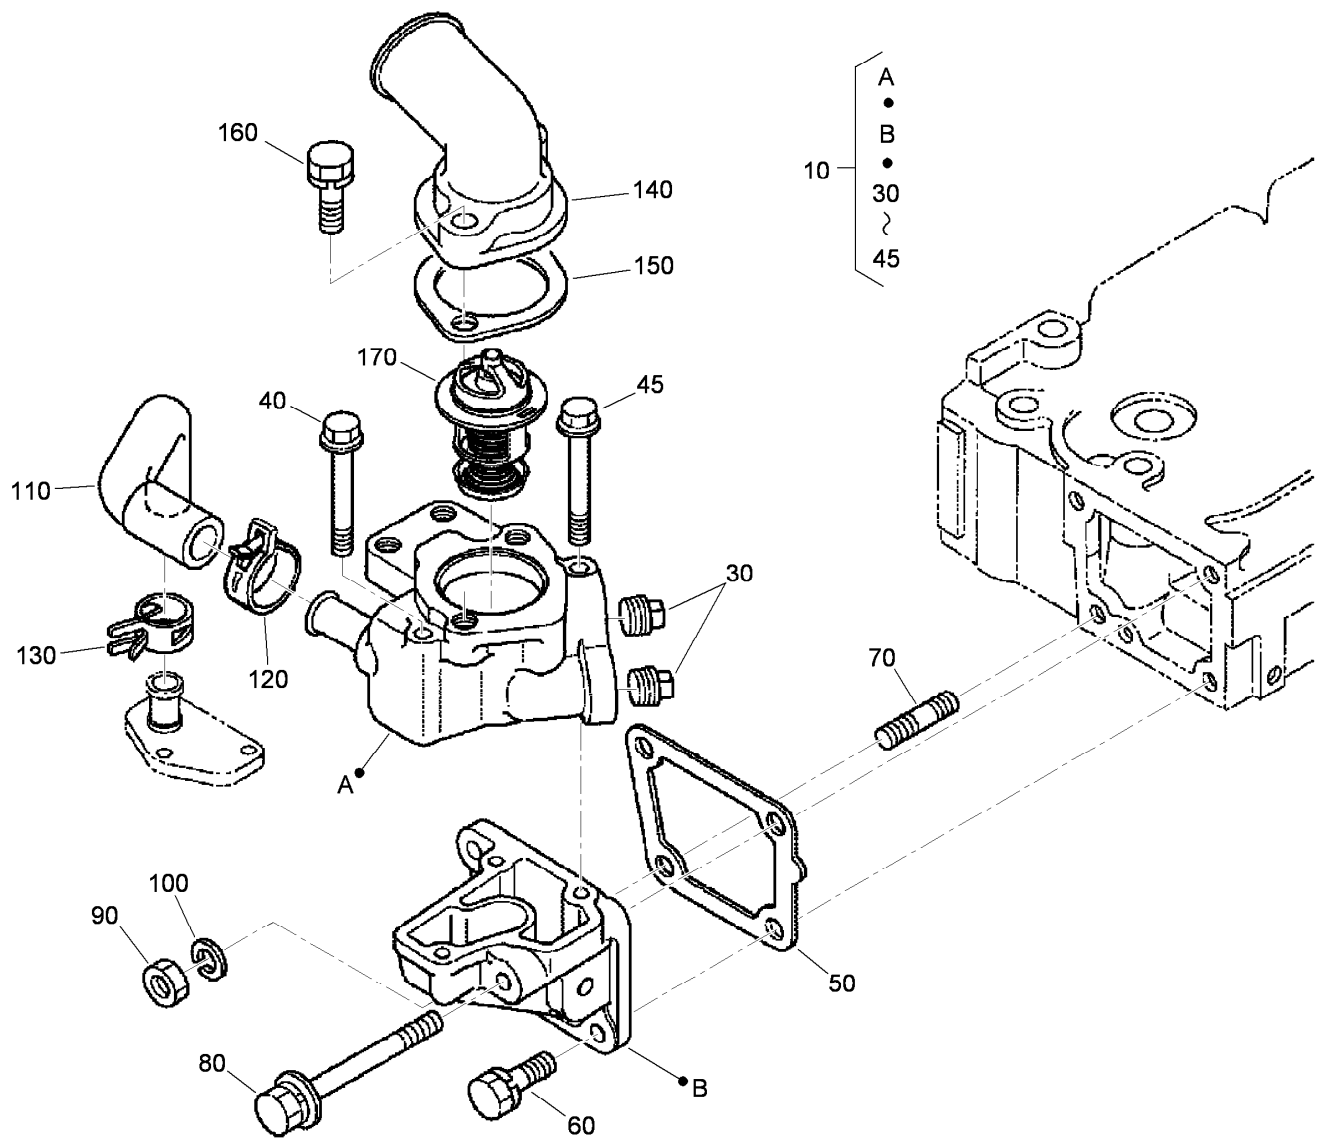 

Water Flange and Thermostat Assembly

Ref.	Part Number	Qty.	Description
10	105-4578	1	Water Flange ASM
30	110-3821	2	Plug
40	105-2875	2	Bolt-Flange
45	107-0117	1	Bolt-Flange
50	98-7767	1	Gasket-Flange, Water
60	98-9359	2	Bolt
70	100-1558	1	Stud
80	107-0115	1	Bolt
90	98-7534	1	Nut


Ref.	Part Number	Qty.	Description
100	105-2893	1	Washer-Spring
110	115-8620	1	Pipe-Return, Water
120	115-8621	1	Clamp-Hose
130	105-2879	1	Clamp-Hose
140	100-9244	1	Cover-Thermostat
150	105-3748	1	Gasket-Thermostat
160	98-7777	2	Bolt
170	120-5825	1	Thermostat ASM

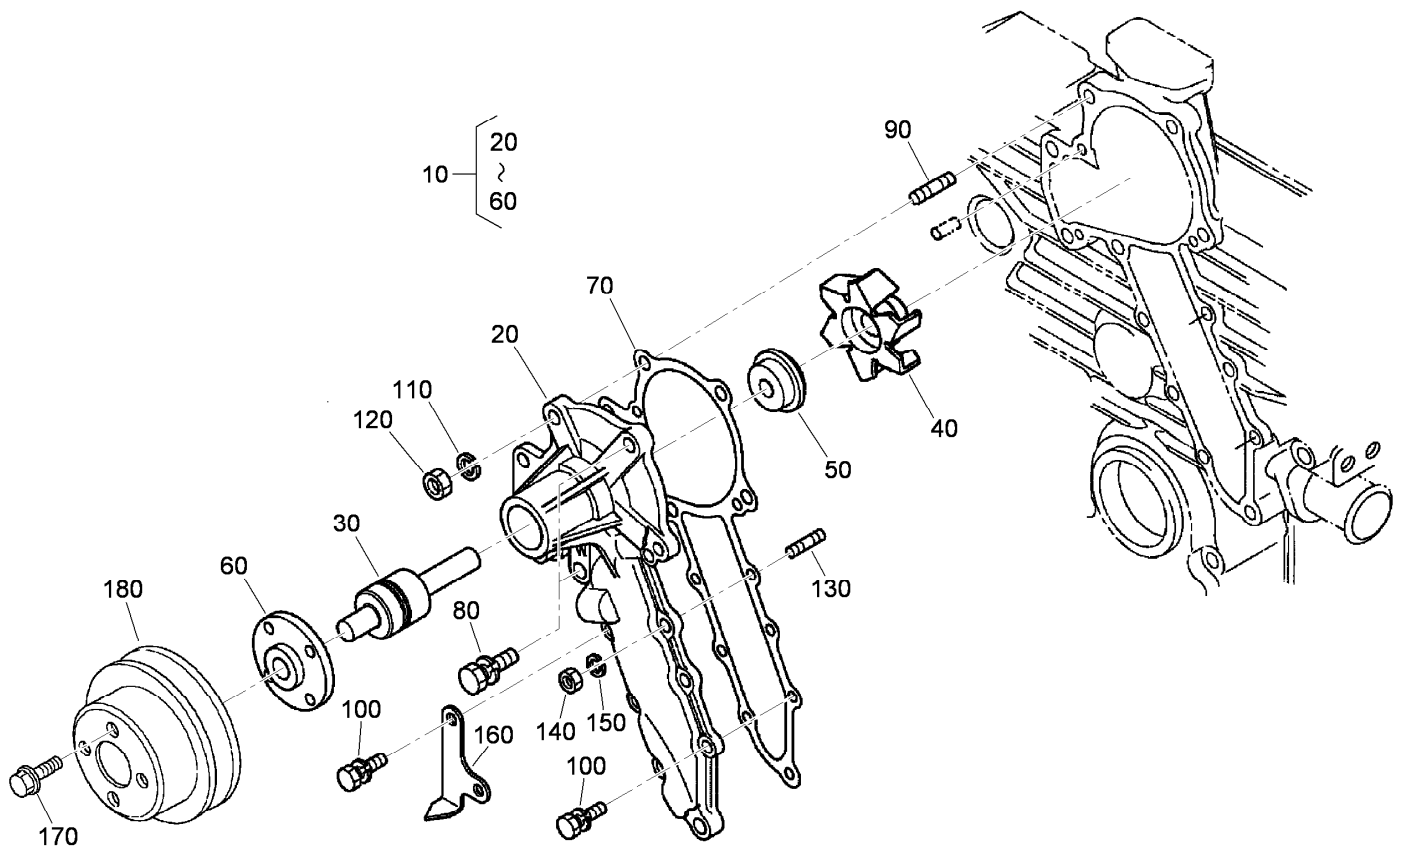 

Water Pump Assembly

Ref.	Part Number	Qty.	Description
10	120-5826	1	Water Pump ASM
20	120-5827	1	Body-Pump, Water
30	120-5828	1	Bearing
40	107-0130	1	Impeller-Pump, Water
50	120-5829	1	Mechanical Seal ASM
60	108-7089	1	Flange-Shaft, Water Pump
70	115-8624	1	Gasket-Pump, Water
80	98-7439	2	Bolt
90	108-7090	1	Stud


Ref.	Part Number	Qty.	Description
100	98-7605	5	Bolt
110	105-2893	1	Washer-Spring
120	98-7534	1	Nut
130	98-7571	1	Stud
140	98-7572	1	Nut
150	98-7699	1	Washer-Spring
160	100-9246	1	Indicator-Timing
170	107-4317	4	Bolt-Flange
180	98-7702	1	Pulley-Fan

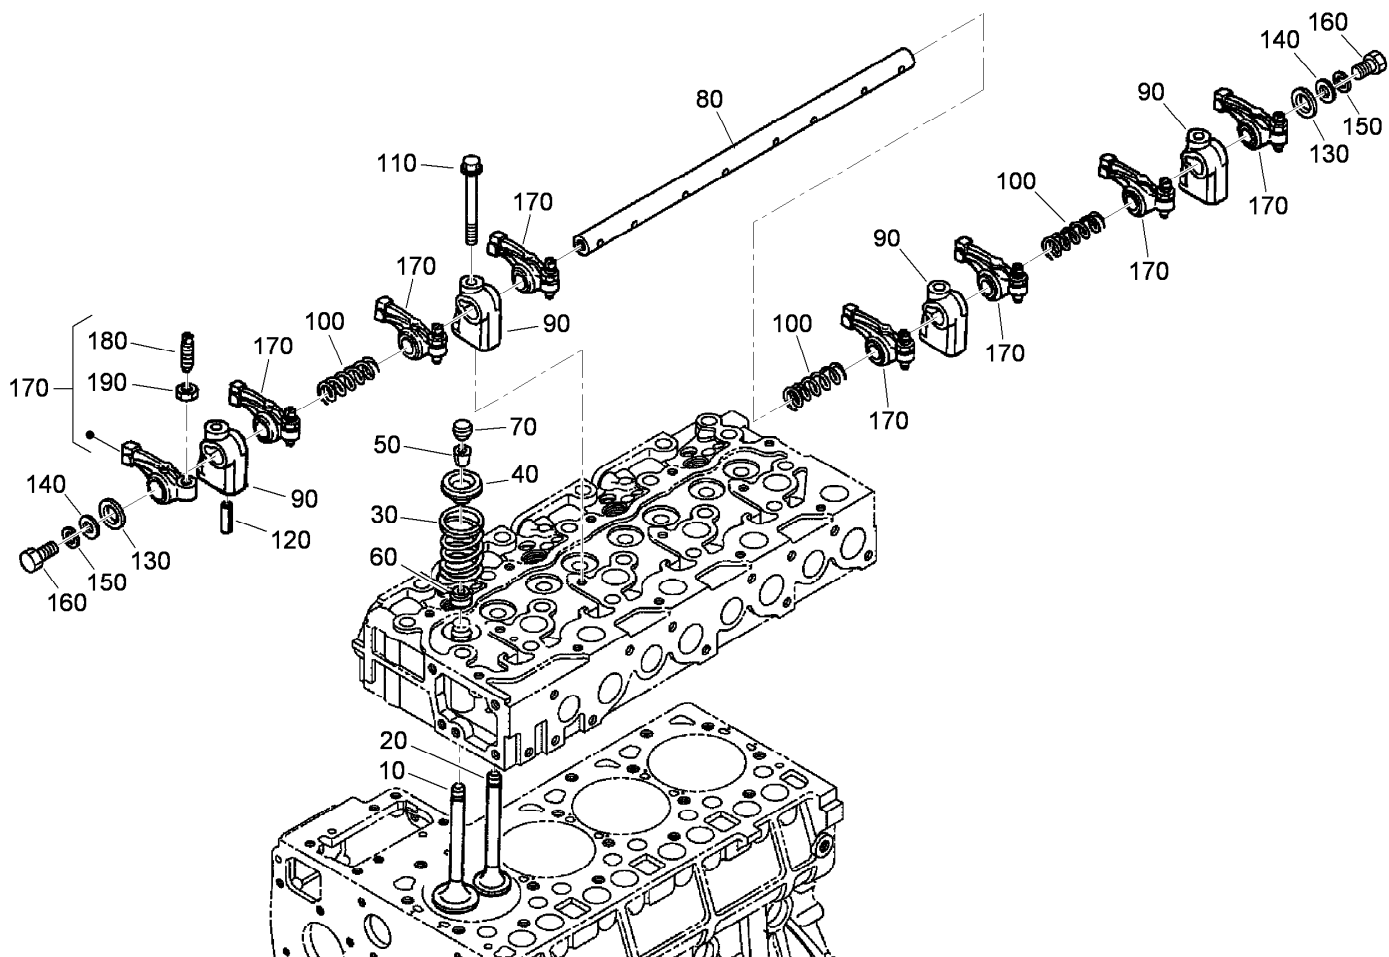 

Valve and Rocker Arm Assembly



Ref.	Part Number	Qty.	Description
10	120-5830	4	Valve-Inlet
20	120-5831	4	Valve-Exhaust
30	98-7793	8	Spring-Valve
40	98-7794	8	Retainer-Spring, Valve
50	98-7795	8	Collet-Spring, Valve
60	98-7796	8	Seal-Stem, Valve
70	98-7797	8	Cap-Valve
80	107-0134	1	Shaft-Arm, Rocker
90	98-7800	4	Bracket-Arm, Rocker
100	98-7807	3	Spring-Arm, Rocker

Ref.	Part Number	Qty.	Description
110	108-7091	4	Bolt-Flange
120	98-7805	1	Pin-Spring
130	98-7806	2	Washer
140	98-7660	2	Washer-Plain
150	105-2893	2	Washer-Spring
160	98-7884	2	Bolt
170	98-7809	8	Rocker Arm ASM
180	98-7810	8	Screw-Adjusting
190	98-7811	8	Nut

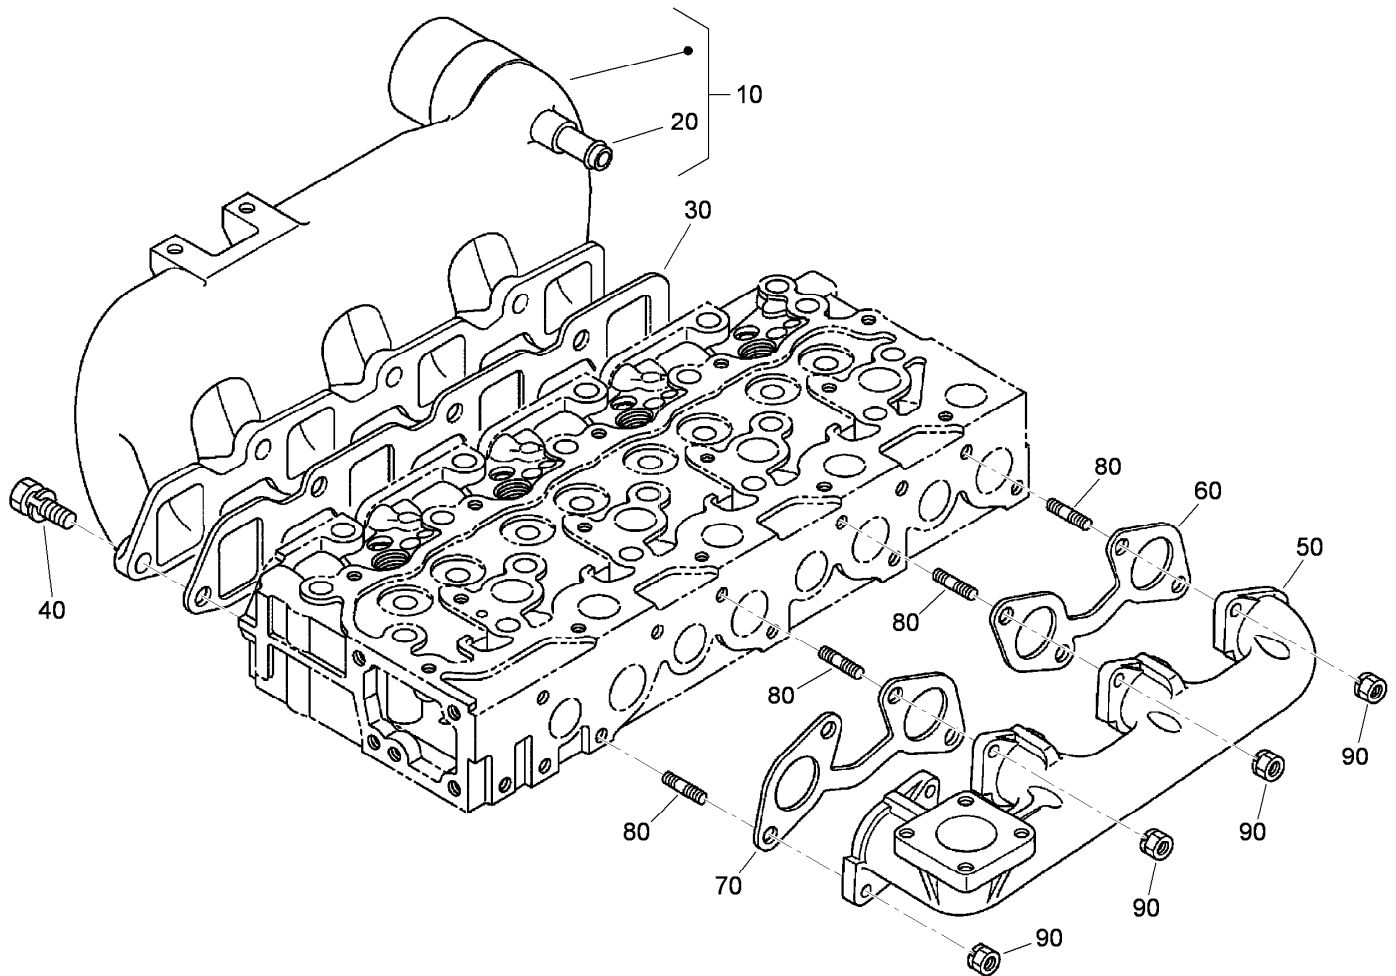 

Inlet and Exhaust Manifold Assembly

Ref.	Part Number	Qty.	Description
10	120-5833	1	Intake Manifold ASM
20	98-7766	1	Pipe-Return, Water
30	120-5834	1	Gasket-Intake Manifold
40	98-7610	7	Bolt
50	120-5835	1	Manifold-Exhaust
60	98-7802	1	Gasket
70	98-7803	1	Gasket
80	100-1558	8	Stud
90	100-9288	8	Nut

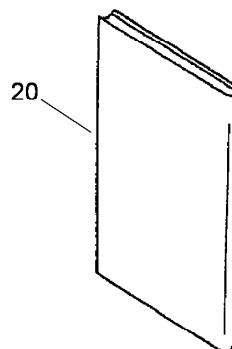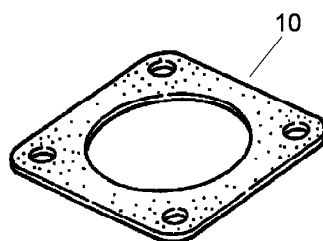  

Muffler Gasket and Operator Manual

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	100-9333	1	Gasket-Muffler
20	115-8642	1	Manual-Operator

Attachments and Accessories

For 03708N Reelmaster 7000-D 4-Wheel Drive Traction Unit

Product Name	Model/Part
27in Verticutter.....	03184
27in 8-Blade Cutting Unit.....	03710
27in 11-Blade Cutting Unit	03711
32in 8-Blade Cutting Unit.....	03712
Premium All Season Hydraulic Fluid (55 Gallon Drum)	108-1177
Premium All Season Hydraulic Fluid (5 Gallon Pail).....	108-1178
Premium All Purpose Grease (Tube)	108-1190
Gauge Bar Assembly.....	108-6715
Operator Fan Kit - US Sales Only, 3in ROPS Post	110-8804
Premium Synthetic Bio-Degradable Hydraulic Fluid (5 Gallon Pail)	119-2157
Premium Synthetic Bio-Degradable Hydraulic Fluid (55 Gallon Drum).....	119-2158
Brush and Handle Kit.....	29-9100
MVP Filter Kit.....	30056
Hardtop Sunshade.....	30359
Flow Divider Kit.....	30871
Diagnostic Display Box.....	85-4750

Notes:



Count on it.