



Form No. 3390-794 Rev A

Count on it.

Parts Catalog

Road Lights with Brake Lights Kit Groundsmaster® 3400 Traction Unit

Model No. 02917—Serial No. 315000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HP: high pressure

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: low pressure

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head


Contents

Headlight Assembly 4

Rearlight Assembly 6

Control Pod Assembly 8

Headlight Assembly

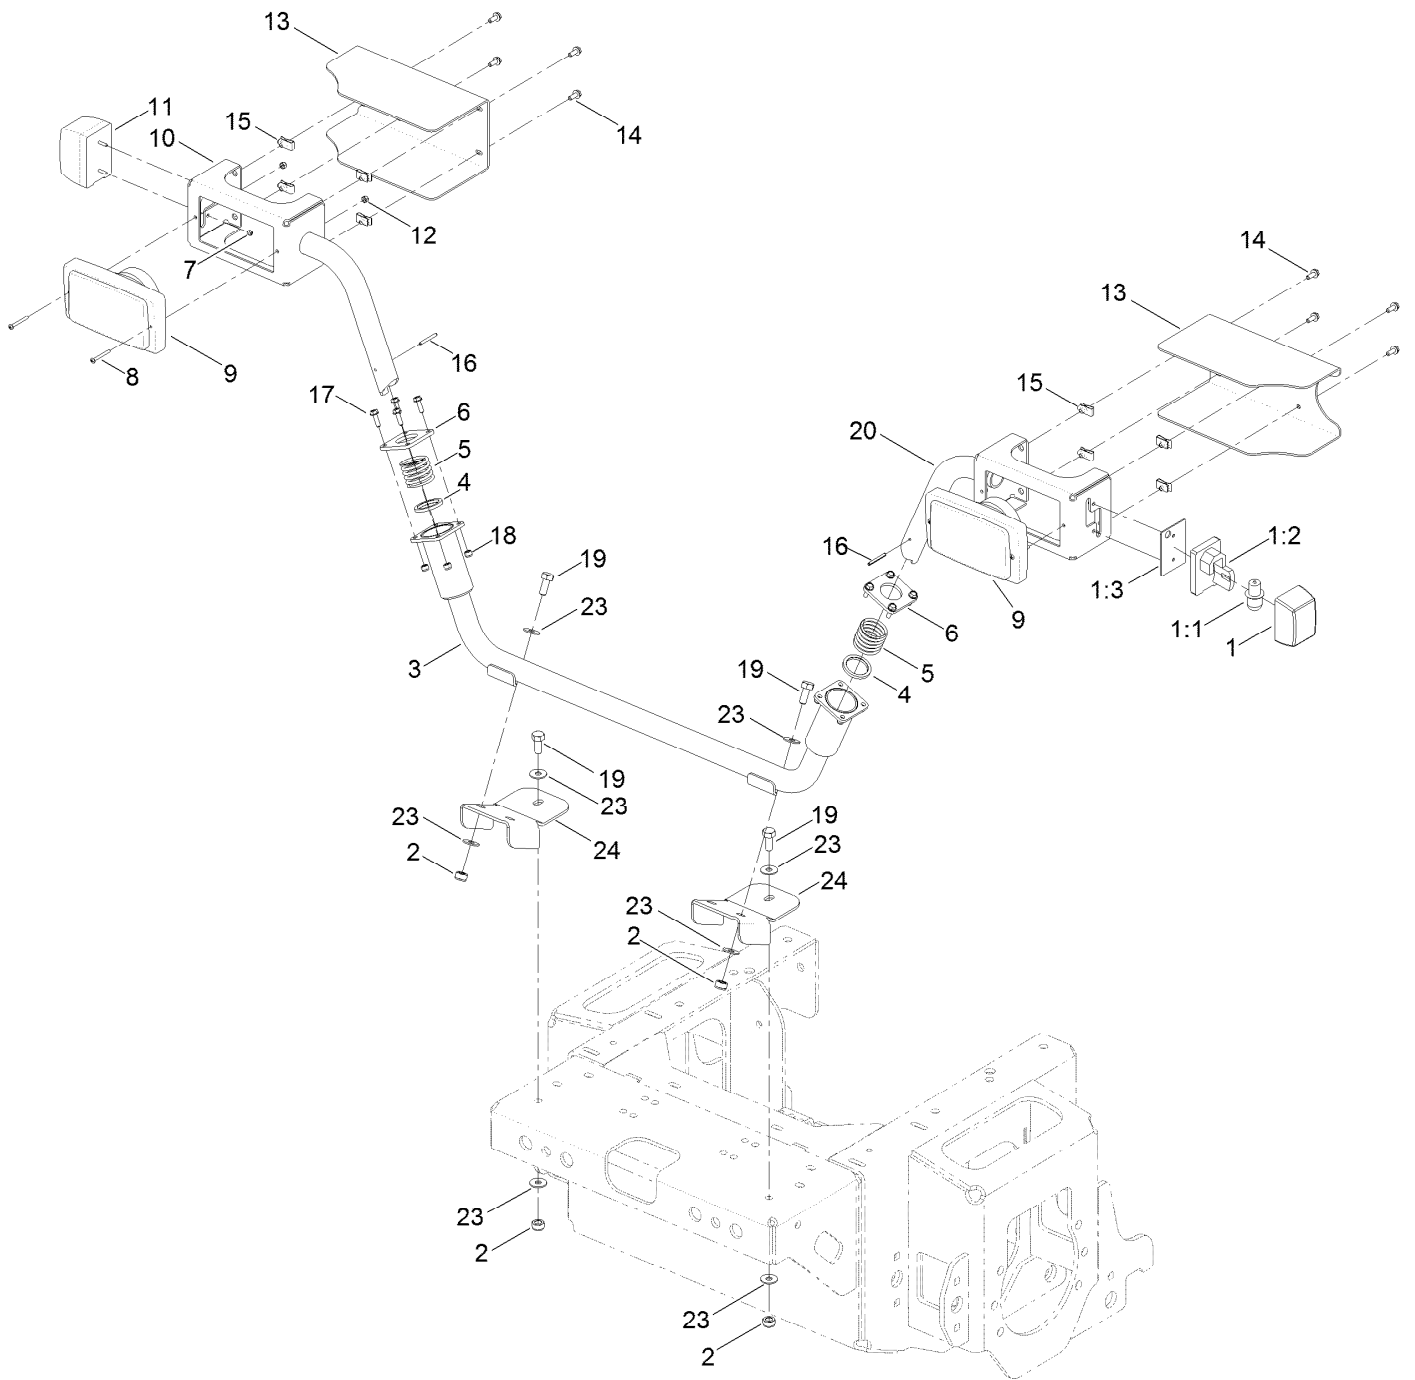


Headlight Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-8094	1	Lamp-Direction Indicator, LH	11:1	120-7552	1	Bulb-12V ●
1:1	120-7552	1	Bulb-12V	11:2	120-7550	1	Lens-Amber ●
1:2	120-7559	1	Lens-Amber	11:3	120-7551	1	Gasket-Lamp ●
1:3	120-7551	1	Gasket-Lamp	12	3296-1	4	Nut-Lock
2	ZNN1J000U	4	Nut-Hex, NI	13	111-5937-03	2	Shield-Headlight
3	119-9863-03	1	Headlight Mount ASM	14	09365	8	Screw-Taptite
4	119-9866	2	Washer-Stop	15	410076	8	Nut
5	92-9726	2	Spring-Compression	16	32121-35	2	Pin-Roll
6	111-5936	2	Flange-Retainer	17	09575	8	Screw-Taptite
7	09657	4	Nut-Insert, NI	18	09544	8	Nut-Nyloc
8	363-3205	4	Screw-PPH	19	09395	4	Screw-HH
9	119-8092	2	Headlamp	20	119-9867-03	1	LH Headlight Mount ASM
9:1	120-7562	1	Bulb-12V ●	23	HY03355	8	Washer-Plated
9:2	120-7563	1	Bulb-12V ●	24	111-5609-03	2	Bracket-Light, Front
9:3	120-7560	1	Optical Group ASM ●	99	111-0318	2	Connector ●
9:4	120-7561	1	Frame ●	99	111-6296	2	Lead-Connector, Light Front ●
10	119-9868-03	1	RH Headlight Mount ASM				
11	119-8099	1	Lamp-Direction Indicator, RH				

● Not illustrated

Rearlight Assembly

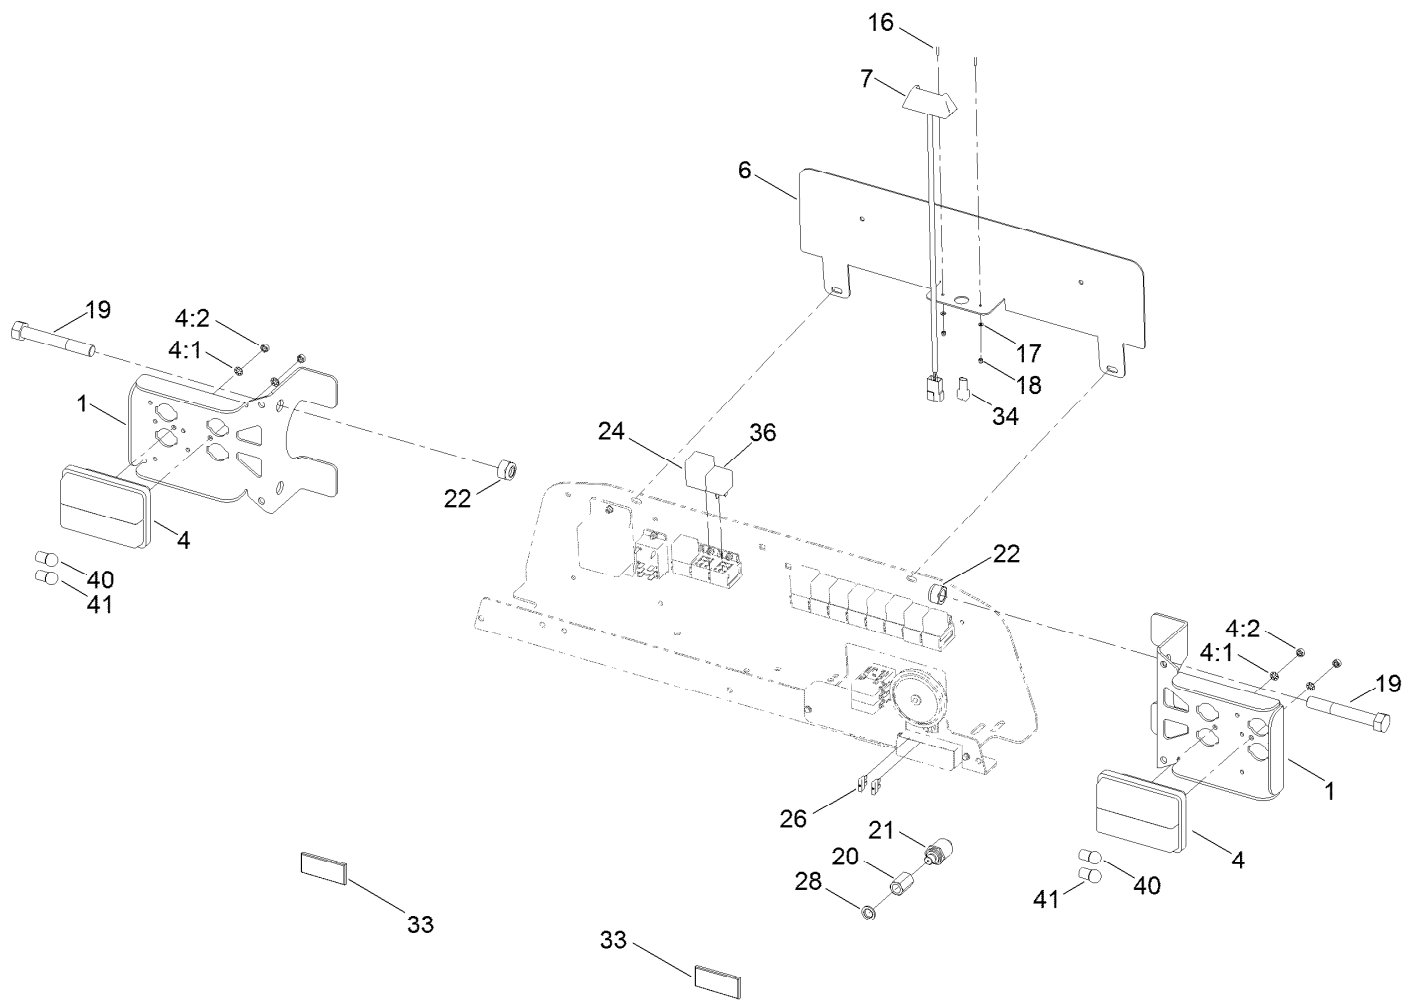


Rearlight Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	111-5632-03	2	Bracket-Light, Rear	22	09456	2	Nut
4	70-09-113	2	Lamp-Indicator, Rear	24	111-0347	1	Relay-Flasher
4:1	09473	2	Washer-Shakeproof	26	70-09-151	2	Fuse-15A
4:2	09437	2	Nut	28	10-06-030	1	Seal-Dowty
6	111-4710-03	1	Bracket-Number, Plate	33	111-5020	2	Reflector-Adhesive
7	111-6178	1	Plate-Number	34	924620	1	Connector
16	111-3764	2	Setscrew	36	111-0336	1	Relay-30A
17	HY09697	2	Washer-Plain	40	70-09-117	2	Bulb-Indicator
18	HY09698	2	Nut-Nyloc	41	70-09-119	2	Bulb
19	ZBH1P110U	2	Bolt	99	111-5108	1	Cable-Pressure, Switch ●
20	111-3765	1	Adaptor-Switch, Pressure	99	111-5813	2	Lead-Connector, Light Rear ●
21	111-5141	1	Switch-Pressure, Brake				

● Not illustrated

Control Pod Assembly

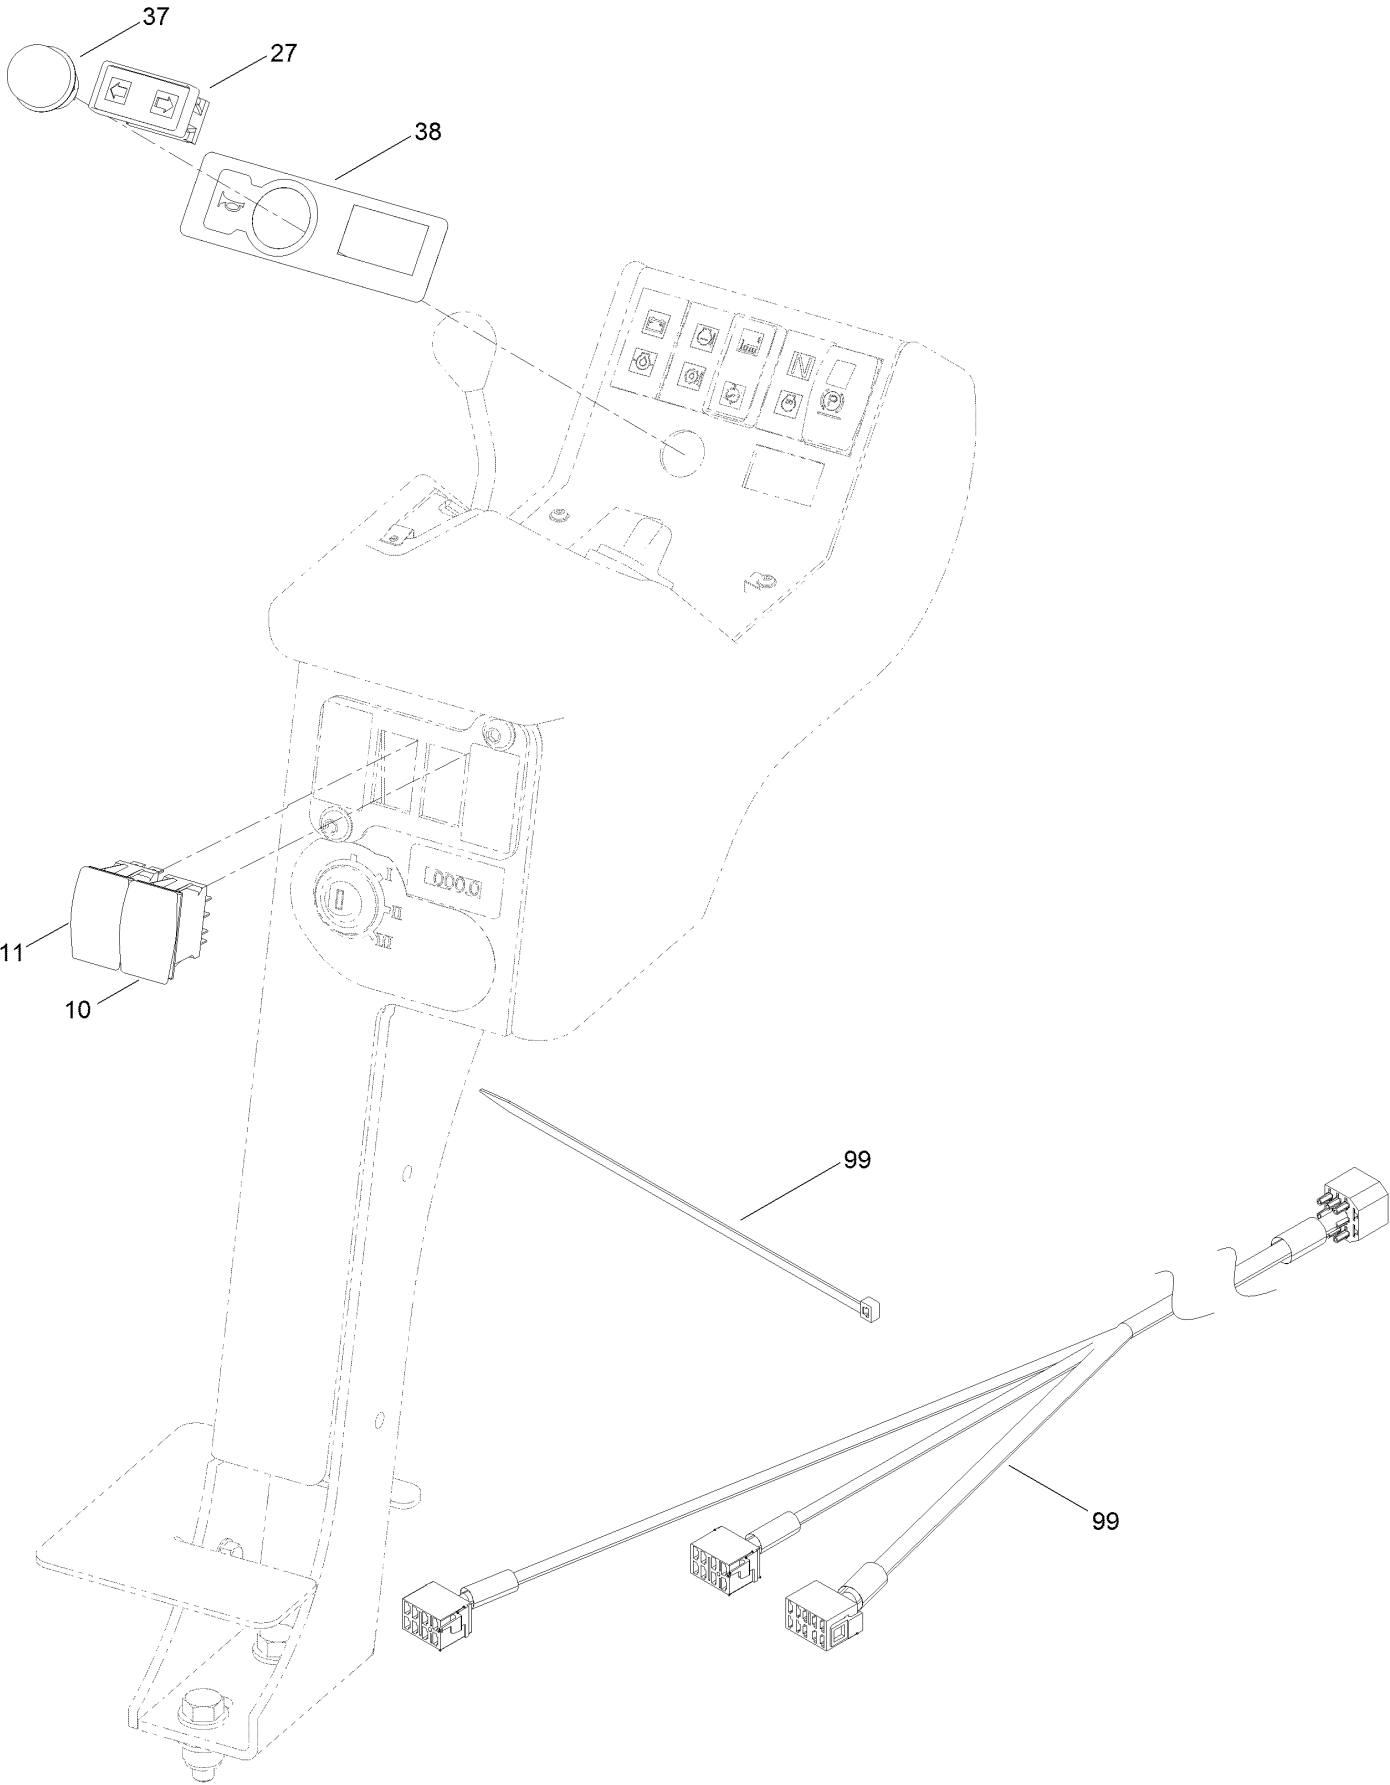

Control Pod Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	111-2223	1	Switch-Hazard Warning	99	111-3893	1	Lead-Connector, Instrument Panel
11	111-2252	1	Switch-Lights	99	74-07-020	10	Tie-Cable ●
27	111-2244	1	Switch-Indicator	99	HY3966	14	Tie-Cable
37	924618	1	Switch-Horn, Push				
38	111-5234	1	Decal-Horn				

● Not illustrated

Notes:

Notes:



Count on it.