



Count on it.

Operator's Manual

Verticutter

**Reelmaster® 5210/5410 Series
Cutting Unit with 5in Reel**

or

**Reelmaster® 5510/5610 Series
Cutting Unit with 7in Reel**

Model No. 03664—Serial No. 315000001 and Up

Model No. 03684—Serial No. 315000001 and Up



⚠ WARNING

CALIFORNIA Proposition 65 Warning

This product contains a chemical or chemicals known to the State of California to cause cancer, birth defects, or reproductive harm.

This product complies with all relevant European directives. For details, please see the Declaration of Incorporation (DOI) at the back of this publication.

Introduction

The verticutter kit is mounted on a ride-on machine and is intended to be used by professional, hired operators in commercial applications. It is primarily designed for verticutting grass on well-maintained lawns in parks, sports fields, and on commercial grounds.

Read this information carefully to learn how to operate and maintain your product properly and to avoid injury and product damage. You are responsible for operating the product properly and safely.

You may contact Toro directly at www.Toro.com for product safety and operation training materials, accessory information, help finding a dealer, or to register your product.

Whenever you need service, genuine Toro parts, or additional information, contact an Authorized Service Dealer or Toro Customer Service and have the model and serial numbers of your product ready. Write the numbers in the space provided.

Model No. _____

Serial No. _____

This manual identifies potential hazards and has safety messages identified by the safety alert symbol (Figure 1), which signals a hazard that may cause serious injury or death if you do not follow the recommended precautions.



Figure 1

1. Safety alert symbol

This manual uses 2 words to highlight information.

Important calls attention to special mechanical information and **Note** emphasizes general information worthy of special attention.

Contents

Safety	3
Safety and Instructional Decals	3
Setup	4
1 Inspecting the Verticutter	5
2 Installing the Transport Rollers	5
3 Adjusting the Blade Depth	5
4 Adjusting the Rear Grass Shield	6
5 Adjusting the Roller Scrapers	6
6 Adjusting the Transport Rollers	7
7 Mounting the Verticutter Reel	7
Product Overview	8
Specifications	8
Operation	8
Training Period	8
Operating Tips	8
Maintenance	9
Lubricating the Verticutter	9
Adjusting the Reel Bearings	9
Removing the Verticutter Blades from the Shaft	10
Install Verticutter Blades	10
Optional Blade Spacing	11
Servicing the Roller	12

Safety

This machine has been designed in accordance with EN ISO 5395:2013.

Hazard control and accident prevention are dependent upon the awareness, concern, and proper training of the personnel involved in the operation, transport, maintenance, and storage of the machine. Improper use or maintenance of the machine can result in injury or death. To reduce the potential for injury or death, comply with the following safety instructions.

- Read, understand, and follow all instructions in the traction unit operators manual before operating the verticutters.
- Read, understand, and follow all instructions in this operators manual before operating the verticutters.
- Never allow children to operate the traction unit or verticutters. Do not allow adults to operate traction unit or verticutters without proper instruction. Only trained operators who have read this manual should operate the verticutters.
- Never operate the verticutters when under the influence of drugs or alcohol.
- Lightning can cause severe injury or death. If lightning is seen or thunder is heard in the area, do not operate the machine; seek shelter.
- Keep all shields and safety devices in place. If a shield, safety device or decal is illegible or damaged, repair or replace it before operation is commenced. Also tighten any loose nuts, bolts, and screws to ensure verticutter is in safe operating condition.
- Always wear substantial, slip-resistant footwear. Do not operate verticutters while wearing sandals, tennis shoes, sneakers, or shorts. Also, do not wear loose fitting clothing which could get caught in moving parts. Always wear long pants. Wearing safety glasses, safety shoes and a helmet is advisable and required by some local ordinances and insurance regulations.
- Remove all debris or other objects that might be picked up and thrown by the verticutter reel blades. Keep all bystanders away from the working area.
- If the cutting blades strike a solid object or the unit vibrates abnormally, stop and shut the engine off. Check verticutter for damaged parts. Repair any damage before restarting and operating the verticutter.
- Lower the verticutters to the ground and remove key from ignition switch whenever machine is left unattended.
- Be sure verticutters are in safe operating condition by keeping nuts, bolts and screws tight.
- Remove key from ignition switch to prevent accidental starting of the engine when servicing, adjusting, or storing the machine.
- Perform only those maintenance instructions described in this manual. If major repairs are ever needed or assistance is desired, contact an Authorized Toro Distributor.
- To ensure optimum performance and continued safety certification of the machine, use only genuine Toro replacement parts and accessories. Replacement parts and accessories made by other manufacturers could be dangerous, and such use could void the product warranty.

Safety and Instructional Decals



Safety decals and instructions are easily visible to the operator and are located near any area of potential danger. Replace any decal that is damaged or lost.



93-6688

1. Warning—read the instructions before servicing or performing maintenance.
2. Cutting hazard of hand or foot—stop the engine and wait for moving parts to stop.

Setup

Loose Parts

Use the chart below to verify that all parts have been shipped.

Procedure	Description	Qty.	Use
1	Verticutter	1	Inspect the verticutter
2	Transport roller assembly Cotter pin	2 2	Install the transport rollers.
3	No parts required	–	Adjust the blade depth.
4	No parts required	–	Adjust the rear grass shield.
5	No parts required	–	Adjust the roller scrapers.
6	No parts required	–	Adjust the transport rollers.
7	No parts required	–	Mount the verticutter reel

Media and Additional Parts

Description	Qty.	Use
Parts Catalog	1	Review the material and save it in an appropriate place.
Operator's Manual	1	

Important: Without these parts, total setup cannot be completed.

Note: Determine the left and right sides of the machine from the normal operating position.

Note: Whenever the verticutter has to be tipped to expose the verticutter blades, use the kick stand (supplied with traction unit) (Figure 2).

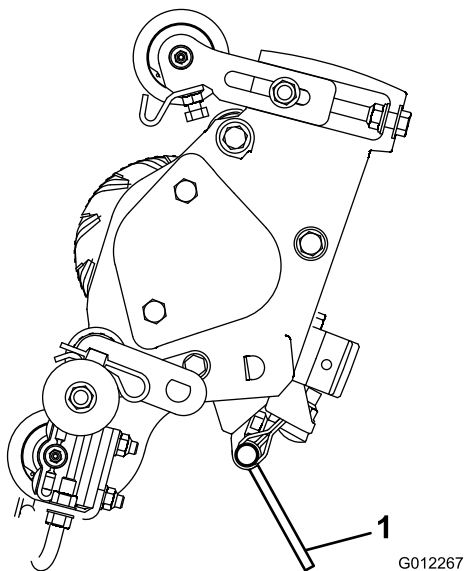


Figure 2

1. Kick stand

1

Inspecting the Verticutter

Parts needed for this procedure:

1	Verticutter
---	-------------

Procedure

After the verticutter is removed from the box, inspect the following:

1. Check each end of the reel for grease. Grease should be visibly evident in the reel bearings and internal splines of the reel shaft.
2. Ensure that all nuts and bolts are securely tightened.
3. Make sure the carrier frame suspension operates freely and does not bind when moved back and forth.

2

Installing the Transport Rollers

Parts needed for this procedure:

2	Transport roller assembly
2	Cotter pin

Procedure

Secure a transport roller bracket to each side plate pin with a cotter pin (Figure 3).

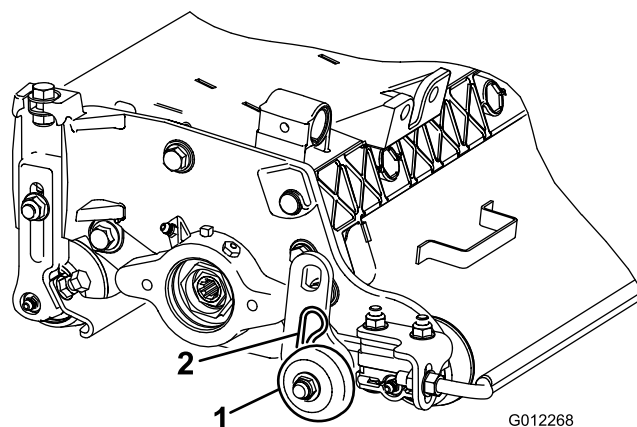


Figure 3

1. Transport roller assembly
2. Cotter pin

Note: The roller should be positioned to the rear of the verticutter.

3

Adjusting the Blade Depth

No Parts Required

Procedure

Note: The maximum recommended blade penetration depths are as follows:

- Model 03664 is 1/8 inch (3 mm).
 - Model 03684 is 1/4 inch (6 mm).
1. Place the verticutter reel on a level surface.
 2. Place 2 gauge bars, which have the desired depth of blade penetration below the ground, under the front and rear rollers of the verticutter reel (on each end of the reel) (Figure 4).

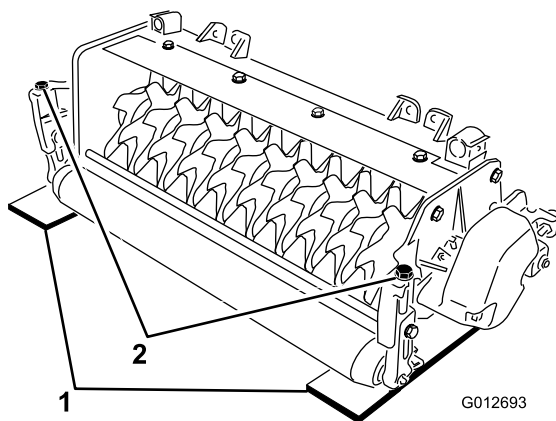


Figure 4

1. Gauge bar
2. Adjusting bolt

Note: The verticutter blades must not touch the gauge bars.

3. Turn the adjusting bolt on each height-of-cut bracket (Figure 4) so that the reel blades come in contact with the level surface on both ends.

Note: As the verticutter blades wear, the diameter of the reel will decrease and the depth setting will change. Check the depth setting periodically to ensure that the desired setting is achieved.

4

Adjusting the Rear Grass Shield

No Parts Required

Procedure

Note: When operating in turf conditions where much debris or unusually heavy thatch is encountered, open the rear discharge shield to help allow the debris to discharge from the reel.

1. Loosen the bolts on the pivot of the grass shield (Figure 5).

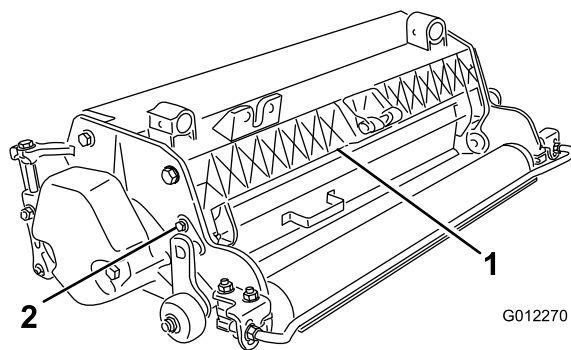


Figure 5

1. Rear grass shield
 2. Pivot bolt
2. Rotate the grass shield to the desired setting, and tighten the bolts (Figure 5).

⚠ CAUTION

Do not open the rear shield so that it is higher than level to ground.

Thrown debris could cause personal injury.

5

Adjusting the Roller Scrapers

No Parts Required

Procedure

1. Loosen the flange nuts that secure the roller scrapers (Figure 6).

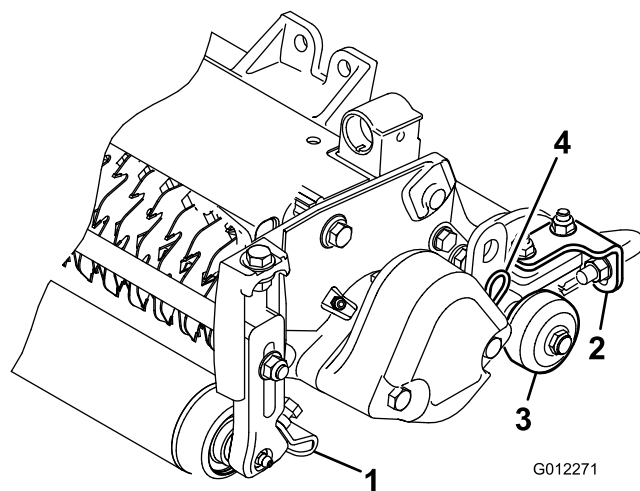


Figure 6

1. Front roller scraper
2. Rear roller scraper
3. Transport roller
4. Cotter pin

2. Move the scraper rods in or out to attain 0.0 to 0.03 inch (0.0 to 0.75 mm) clearance between the scraper and roller.
3. Ensure that the scraper rod is parallel to the roller and to the level surface.
4. Tighten the flange nuts to lock the adjustment.

6

Adjusting the Transport Rollers

No Parts Required

Procedure

Before the verticutters are lowered to the shop floor or removed from the traction unit, lower the transport rollers (Figure 6) to protect the blades from hard surface contact.

1. Remove the cotter pin that secures the transport roller bracket to the side plate pin.
2. Position the transport roller as follows:
 - Lower the roller bracket before the verticutter is lowered to the shop floor.
 - Raise the roller bracket after the verticutter is raised to the operating position.
3. Secure the transport roller bracket to the side plate pin with the cotter pin.
4. Repeat the procedure on the opposite end of the verticutter.

7

Mounting the Verticutter Reel

No Parts Required

Procedure

Important: When lowering the verticutter reels, care must be taken to prevent damage to the reel blades due to contact with a concrete floor or a paved surface. Lower the transport rollers before lowering the verticutters to a concrete floor or a paved surface.

The verticutters can be installed at any of the five locations on the traction unit. Figure 7 shows the orientation of the hydraulic drive motor for each of the locations. For any of the

locations requiring the motor to be mounted on the right end of the verticutter, install a counterweight on the left end of the verticutter. For the locations requiring the motor to be mounted on the left end, install a counterweight on the right end of the verticutter.

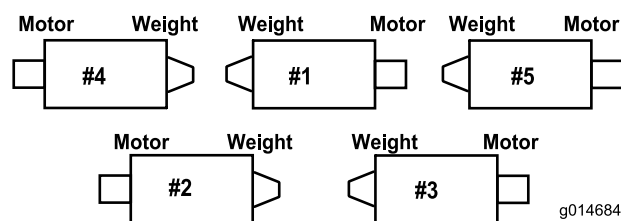


Figure 7

Note: A counterweight is shipped installed to the right end of each verticutter. The bolts on the left end are to be used for securing the hydraulic motor.

Verticutter reels are mounted to traction unit the same way cutting units are. Refer to Traction Unit Operator's Manual for mounting instructions.

Product Overview

Specifications

Model No.	Net Weight
03664	124 lb. (56 kg)
03684	145 lb. (66 kg)

Operation

Note: Determine the left and right sides of the machine from the normal operating position.

Training Period

Before operating the verticutter reels, evaluate the performance of the reel at the desired setting. Operate in a clear, unused area to determine if the desired results will be achieved. Adjust as desired.

Operating Tips

1. Operate the traction unit at full throttle, full reel speed (setting 9) and at desired traction speed.
2. The maximum recommended blade penetration depths are as follows:
 - Model 03664 is 1/8 inch (3 mm).
 - Model 03684 is 1/4 inch (6 mm).
3. Power requirements to operate the verticutter reels will vary with turf and soil conditions. Travel speed may need to be reduced in some conditions.
4. When operating in turf conditions where much debris is encountered, or unusually heavy thatch, open the front and rear discharge shields to help allow the debris to discharge from the reel.

⚠ CAUTION

Do not open rear shield so it is higher than level to ground

Thrown debris could cause personal injury

Maintenance

Lubricating the Verticutter

Each verticutter has 7 grease fittings (Figure 8) that must be lubricated weekly with No. 2 General Purpose Lithium Base Grease.

The lubrication points are the front roller (2), the rear roller (2) the reel bearings (2) and the bedknife adjuster.

Important: Lubricating the cutting units immediately after washing helps purge water out of the bearings and increases bearing life.

1. Wipe each grease fitting with a clean rag.
2. Apply grease until clean grease is seen coming out of the roller seals and the bearing relief valve (Figure 8).

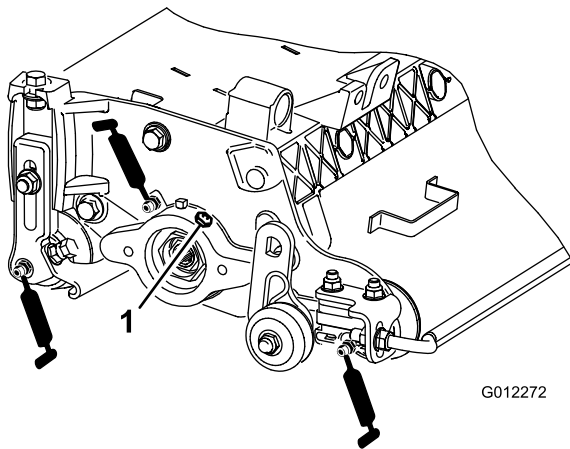


Figure 8

1. Relief valve

3. Wipe any excess grease away.

Adjusting the Reel Bearings

To ensure long life of the reel bearings, periodically check if there is any reel end play. The reel bearings can be checked and adjusted as follows:

1. Hold on to the reel shaft and try to move the reel assembly side to side (Figure 9).

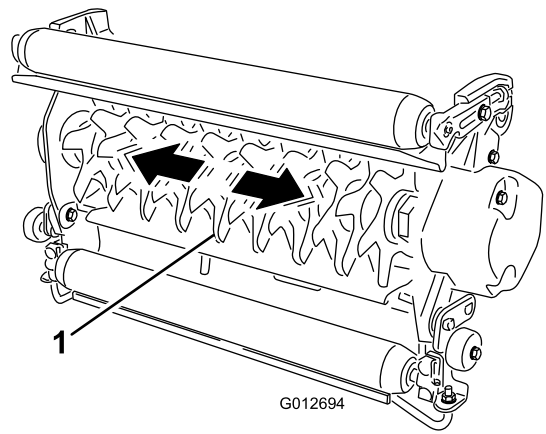


Figure 9

1. Reel shaft

2. If there is any end play, proceed as follows:

- A. Loosen the external set screw that secures the bearing adjusting nut to the bearing housing located on the left side of the cutting unit (Figure 10).

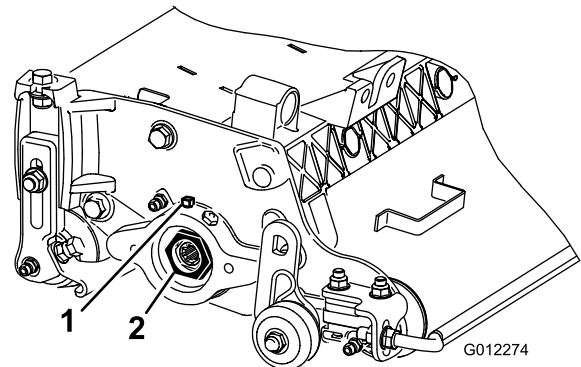


Figure 10

1. Set screw
2. Bearing adjusting nut

- B. Use a 1-3/8 inch socket wrench to slowly tighten the reel bearing adjustment nut until there is no end play in the reel. If adjusting the nut does not eliminate reel end play, replace the reel bearings.

Note: Reel bearings **do not** require pre-load. Overtightening the reel bearing adjuster nut will damage the reel bearings.

3. Tighten the set screw that secures the bearing adjusting nut to the bearing housing. Torque the set screw to 12-15 in-lb (1.4 to 1.6 N-m).

Removing the Verticutter Blades from the Shaft

1. Secure the end of the verticutter shaft, which has only one washer and nut, in a vise.
2. On other end of shaft, rotate the nut counter-clockwise and remove the nut.

⚠ CAUTION

The blades are extremely sharp and may have burrs that will cut your hands.

Use caution when removing the blades from the shaft.

3. Remove the small spacer, the washer, the blades and the large spacers. Clean and lubricate the square shaft with a light coating of grease to simplify the assembly (Figure 11).

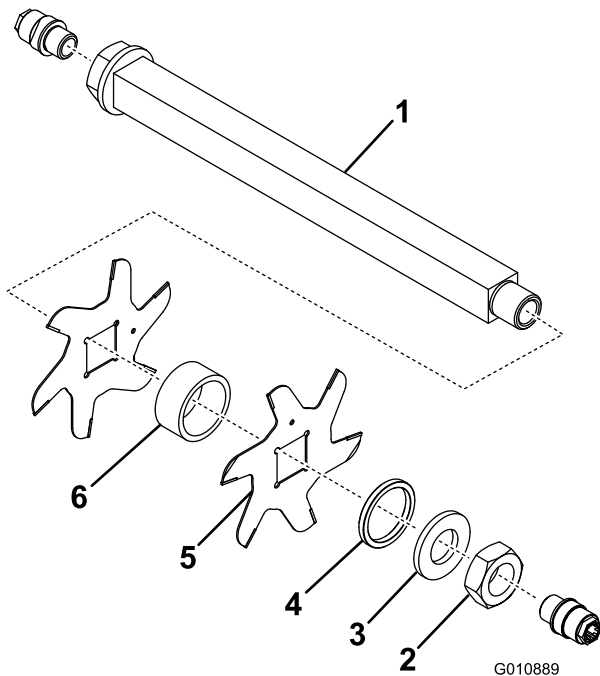


Figure 11

- | | |
|-----------|---|
| 1. Shaft | 4. Small spacer |
| 2. Nut | 5. Blade (25 for model 03664 & 16 for model 03684) |
| 3. Washer | 6. Large spacer (24 for model 03664 & 15 for model 03684) |

Important: Do not invert the verticutter reel blades. The order of disassembly is extremely important. Do not invert the verticutter reel blades when disassembling or reverse the order when assembling them. Note the verticutter blades index hole. The index hole is provided for assembly in order to obtain the proper helix for the verticutter reel.

Install Verticutter Blades

1. Assemble a reel blade (Figure 12).
2. Assemble a large spacer.
3. Do not invert the reel blades when reassembling on reel shaft.

Note: If the blades are inverted, the blades that are in use, (rounded) will be mixed with the sharp ends of the blades which were not in use. This will cause unsatisfactory performance in the verticutter reel unit. Attention should always be taken when disassembling the verticutter blades from reel.

4. Install the next blade clockwise so that the index reference hole (Figure 12) is not aligned with the first blade hole by one flat of the shaft.

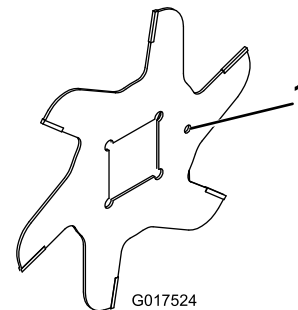


Figure 12

1. Index reference hole

5. Continue to install spacers and blades in this manner until the full complement of blades have been installed.

Note: When properly assembled, the blades will be staggered in such a manner as to appear like a helix.

6. Install the small spacer to the shaft.
7. Apply Blue Loctite 242 to the nut. Install the nut onto the shaft, (machined side of nut toward spacer) and tighten it to 80 to 100 ft-lb (108.5 to 135 N-m).

Optional Blade Spacing

.50 inch Blade Spacing for Model 03664

To change the configuration of the verticutter from the standard .75 inch spacing to .50 inch spacing requires an additional (34) spacers, part no. 17-1580 and an additional (10) carbide blades, part no. 106-6355 or an additional (10) regular blades, part no. 17-1590 (Figure 13).

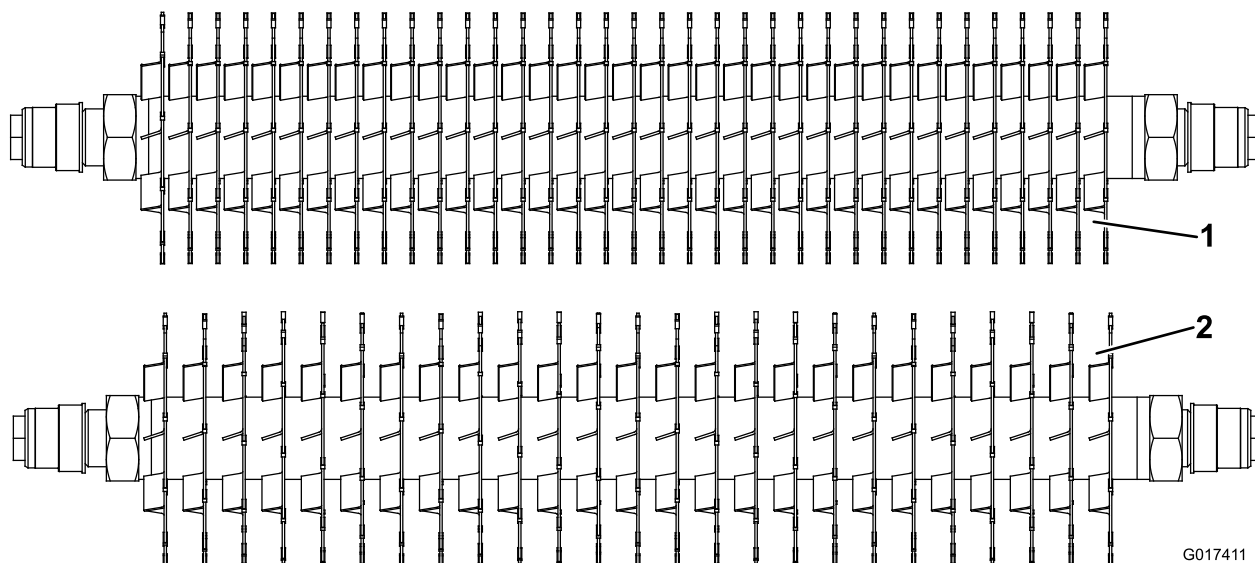


Figure 13

1. .50 inch spacing

2. .75 inch spacing

1.00 inch Blade Spacing for Model 03684

To change the configuration of the verticutter from the standard 1.25 inch spacing to 1.00 inch spacing requires (19) new spacers, part no. 93-3092 and an additional (4) carbide blades, part no. 106-8625 or an additional (4) regular blades, part no. 93-3038-03 (Figure 14).

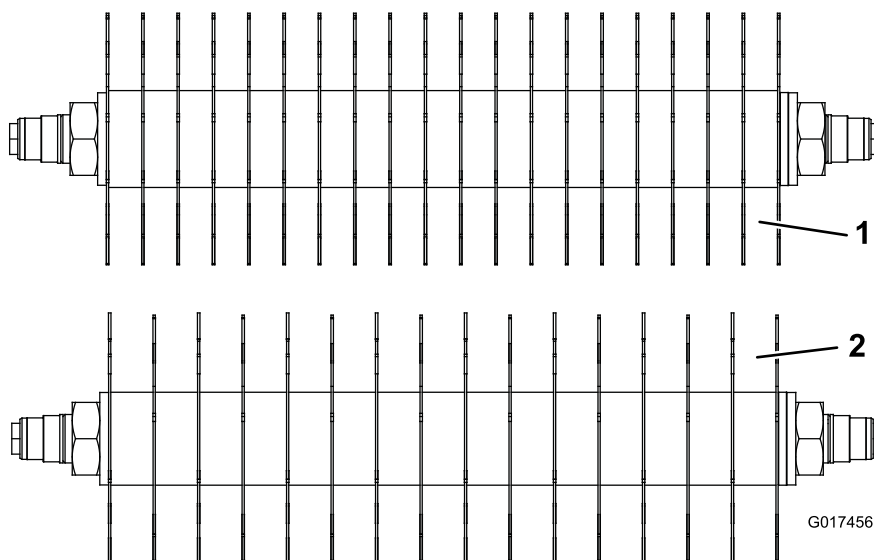


Figure 14


1. 1.00 inch spacing

2. 1.25 inch spacing

Servicing the Roller

A Roller Rebuild Kit, Part No. 114–5430 and a Roller Rebuild Tool Kit, Part No. 115–0803 ([Figure 15](#)) are available for servicing the roller. The Roller Rebuild Kit includes all the

bearings, bearing nuts, inner seals and outer seals to rebuild a roller. The Roller Rebuild Tool Kit includes all the tools and the installation instructions required to rebuild a roller with the roller rebuild kit. Refer to your parts catalog or contact your distributor for assistance.

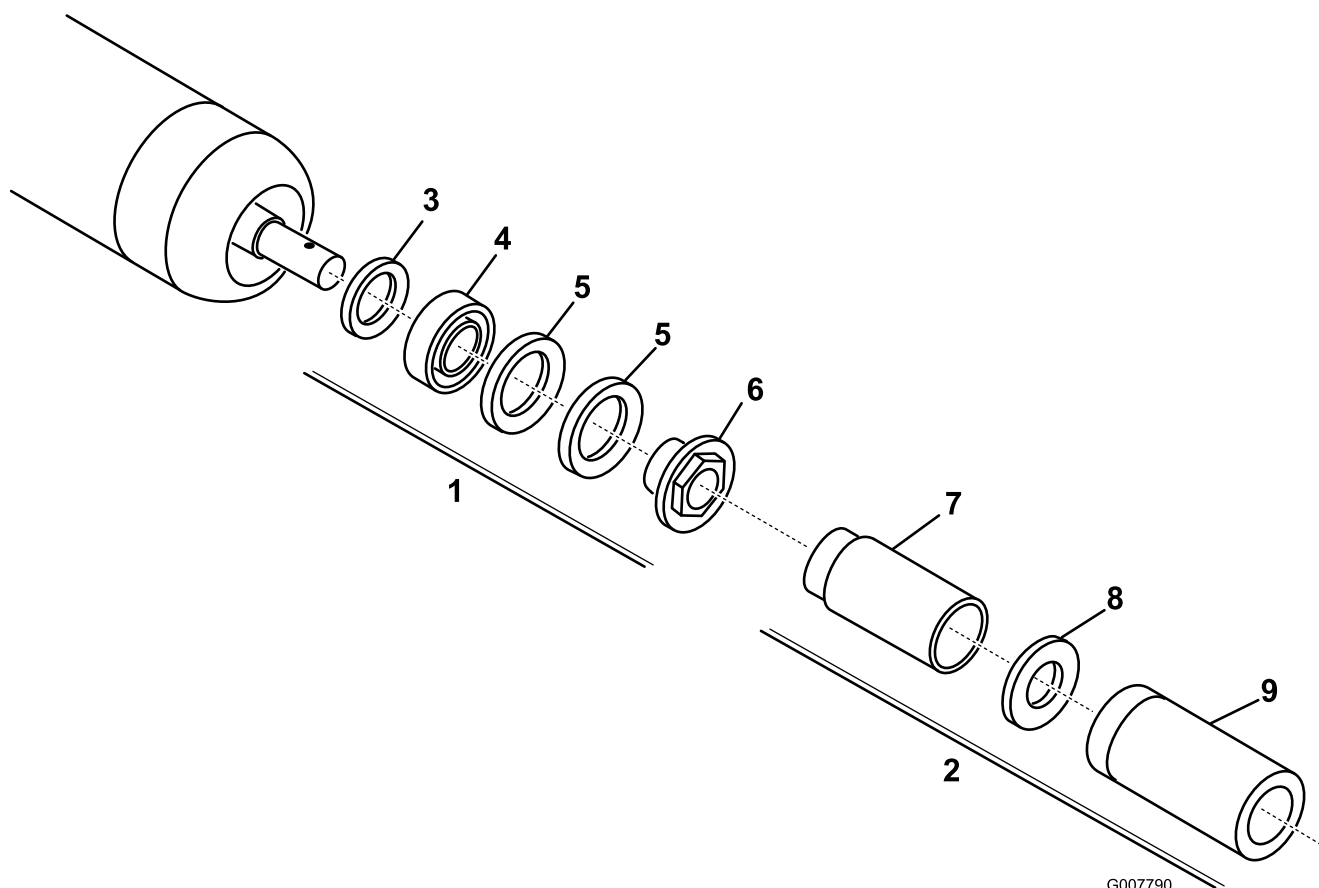

G007790

Figure 15

- | | |
|---|----------------------------|
| 1. Rebuild kit (Part No. 114–5430) | 6. Bearing nut |
| 2. Rebuild tool kit (Part No. 115–0803) | 7. Inner seal tool |
| 3. Inner seal | 8. Washer |
| 4. Bearing | 9. Bearing/outer seal tool |
| 5. Outer seal | |

Notes:

Declaration of Incorporation

The Toro Company, 8111 Lyndale Ave. South, Bloomington, MN, USA declares that the following unit(s) conform(s) to the directives listed, when installed in accordance with the accompanying instructions onto certain Toro models as indicated on the relevant Declarations of Conformity.

Model No.	Serial No.	Product Description	Invoice Description	General Description	Directive
03664	315000001 and Up	Verticutter	5" VERTICUTTER-RM5010	Verticutter	2006/42/EC
03684	315000001 and Up	Verticutter	7" VERTICUTTER-RM5010	Verticutter	2006/42/EC

Relevant technical documentation has been compiled as required per Part B of Annex VII of 2006/42/EC.

We will undertake to transmit, in response to requests by national authorities, relevant information on this partly completed machinery. The method of transmission shall be electronic transmittal.

This machinery shall not be put into service until incorporated into approved Toro models as indicated on the associated Declaration of Conformity and in accordance with all instructions, whereby it can be declared in conformity with all relevant Directives.

Certified:



David Klis
Sr. Engineering Manager
8111 Lyndale Ave. South
Bloomington, MN 55420, USA
January 13, 2015

EU Technical Contact:

Peter Tetteroo
Toro Europe NV
B-2260 Oevel-Westerloo
Belgium

Tel. 0032 14 562960
Fax 0032 14 581911

International Distributor List

Distributor:	Country:	Phone Number:	Distributor:	Country:	Phone Number:
Agrolanc Kft	Hungary	36 27 539 640	Maquiver S.A.	Colombia	57 1 236 4079
Balama Prima Engineering Equip.	Hong Kong	852 2155 2163	Maruyama Mfg. Co. Inc.	Japan	81 3 3252 2285
B-Ray Corporation	Korea	82 32 551 2076	Mountfield a.s.	Czech Republic	420 255 704 220
Casco Sales Company	Puerto Rico	787 788 8383	Mountfield a.s.	Slovakia	420 255 704 220
Ceres S.A.	Costa Rica	506 239 1138	Munditol S.A.	Argentina	54 11 4 821 9999
CSSC Turf Equipment (pvt) Ltd.	Sri Lanka	94 11 2746100	Norma Garden	Russia	7 495 411 61 20
Cyril Johnston & Co.	Northern Ireland	44 2890 813 121	Oslinger Turf Equipment SA	Ecuador	593 4 239 6970
Cyril Johnston & Co.	Republic of Ireland	44 2890 813 121	Oy Hako Ground and Garden Ab	Finland	358 987 00733
Equiver	Mexico	52 55 539 95444	Parkland Products Ltd.	New Zealand	64 3 34 93760
Femco S.A.	Guatemala	502 442 3277	Perfetto	Poland	48 61 8 208 416
ForGarder OU	Estonia	372 384 6060	Pratoverde SRL.	Italy	39 049 9128 128
G.Y.K. Company Ltd.	Japan	81 726 325 861	Prochaska & Cie	Austria	43 1 278 5100
Geomechaniki of Athens	Greece	30 10 935 0054	RT Cohen 2004 Ltd.	Israel	972 986 17979
Golf international Turizm	Turkey	90 216 336 5993	Riversa	Spain	34 9 52 83 7500
Guandong Golden Star	China	86 20 876 51338	Lely Turfcare	Denmark	45 66 109 200
Hako Ground and Garden	Sweden	46 35 10 0000	Solvart S.A.S.	France	33 1 30 81 77 00
Hako Ground and Garden	Norway	47 22 90 7760	Spypros Stavrinides Limited	Cyprus	357 22 434131
Hayter Limited (U.K.)	United Kingdom	44 1279 723 444	Surge Systems India Limited	India	91 1 292299901
Hydroturf Int. Co Dubai	United Arab Emirates	97 14 347 9479	T-Markt Logistics Ltd.	Hungary	36 26 525 500
Hydroturf Egypt LLC	Egypt	202 519 4308	Toro Australia	Australia	61 3 9580 7355
Irrimac	Portugal	351 21 238 8260	Toro Europe NV	Belgium	32 14 562 960
Irrigation Products Int'l Pvt Ltd.	India	0091 44 2449 4387	Valtech	Morocco	212 5 3766 3636
Jean Heybroek b.v.	Netherlands	31 30 639 4611	Victus Emak	Poland	48 61 823 8369

European Privacy Notice

The Information Toro Collects

Toro Warranty Company (Toro) respects your privacy. In order to process your warranty claim and contact you in the event of a product recall, we ask you to share certain personal information with us, either directly or through your local Toro company or dealer.

The Toro warranty system is hosted on servers located within the United States where privacy law may not provide the same protection as applies in your country.

BY SHARING YOUR PERSONAL INFORMATION WITH US, YOU ARE CONSENTING TO THE PROCESSING OF YOUR PERSONAL INFORMATION AS DESCRIBED IN THIS PRIVACY NOTICE.

The Way Toro Uses Information

Toro may use your personal information to process warranty claims, to contact you in the event of a product recall and for any other purpose which we tell you about. Toro may share your information with Toro's affiliates, dealers or other business partners in connection with any of these activities. We will not sell your personal information to any other company. We reserve the right to disclose personal information in order to comply with applicable laws and with requests by the appropriate authorities, to operate our systems properly or for our own protection or that of other users.

Retention of your Personal Information

We will keep your personal information as long as we need it for the purposes for which it was originally collected or for other legitimate purposes (such as regulatory compliance), or as required by applicable law.

Toro's Commitment to Security of Your Personal Information

We take reasonable precautions in order to protect the security of your personal information. We also take steps to maintain the accuracy and current status of personal information.

Access and Correction of your Personal Information

If you would like to review or correct your personal information, please contact us by email at legal@toro.com.

Australian Consumer Law

Australian customers will find details relating to the Australian Consumer Law either inside the box or at your local Toro Dealer.



Toro General Commercial Product Warranty

A Two-Year Limited Warranty

Conditions and Products Covered

The Toro Company and its affiliate, Toro Warranty Company, pursuant to an agreement between them, jointly warrant your Toro Commercial product ("Product") to be free from defects in materials or workmanship for two years or 1500 operational hours*, whichever occurs first. This warranty is applicable to all products with the exception of Aerators (refer to separate warranty statements for these products). Where a warrantable condition exists, we will repair the Product at no cost to you including diagnostics, labor, parts, and transportation. This warranty begins on the date the Product is delivered to the original retail purchaser.

* Product equipped with an hour meter.

Instructions for Obtaining Warranty Service

You are responsible for notifying the Commercial Products Distributor or Authorized Commercial Products Dealer from whom you purchased the Product as soon as you believe a warrantable condition exists. If you need help locating a Commercial Products Distributor or Authorized Dealer, or if you have questions regarding your warranty rights or responsibilities, you may contact us at:

Toro Commercial Products Service Department
Toro Warranty Company
8111 Lyndale Avenue South
Bloomington, MN 55420-1196

952-888-8801 or 800-952-2740
E-mail: commercial.warranty@toro.com

Owner Responsibilities

As the Product owner, you are responsible for required maintenance and adjustments stated in your *Operator's Manual*. Failure to perform required maintenance and adjustments can be grounds for disallowing a warranty claim.

Items and Conditions Not Covered

Not all product failures or malfunctions that occur during the warranty period are defects in materials or workmanship. This warranty does not cover the following:

- Product failures which result from the use of non-Toro replacement parts, or from installation and use of add-on, or modified non-Toro branded accessories and products. A separate warranty may be provided by the manufacturer of these items.
- Product failures which result from failure to perform recommended maintenance and/or adjustments. Failure to properly maintain your Toro product per the Recommended Maintenance listed in the *Operator's Manual* can result in claims for warranty being denied.
- Product failures which result from operating the Product in an abusive, negligent, or reckless manner.
- Parts subject to consumption through use unless found to be defective. Examples of parts which are consumed, or used up, during normal Product operation include, but are not limited to, brake pads and linings, clutch linings, blades, reels, rollers and bearings (sealed or greasable), bed knives, spark plugs, castor wheels and bearings, tires, filters, belts, and certain sprayer components such as diaphragms, nozzles, and check valves, etc.
- Failures caused by outside influence. Conditions considered to be outside influence include, but are not limited to, weather, storage practices, contamination, use of unapproved fuels, coolants, lubricants, additives, fertilizers, water, or chemicals, etc.
- Failure or performance issues due to the use of fuels (e.g. gasoline, diesel, or biodiesel) that do not conform to their respective industry standards.

- Normal noise, vibration, wear and tear, and deterioration.
- Normal "wear and tear" includes, but is not limited to, damage to seats due to wear or abrasion, worn painted surfaces, scratched decals or windows, etc.

Parts

Parts scheduled for replacement as required maintenance are warranted for the period of time up to the scheduled replacement time for that part. Parts replaced under this warranty are covered for the duration of the original product warranty and become the property of Toro. Toro will make the final decision whether to repair any existing part or assembly or replace it. Toro may use remanufactured parts for warranty repairs.

Deep Cycle and Lithium-Ion Battery Warranty:

Deep cycle and Lithium-Ion batteries have a specified total number of kilowatt-hours they can deliver during their lifetime. Operating, recharging, and maintenance techniques can extend or reduce total battery life. As the batteries in this product are consumed, the amount of useful work between charging intervals will slowly decrease until the battery is completely worn out. Replacement of worn out batteries, due to normal consumption, is the responsibility of the product owner. Battery replacement may be required during the normal product warranty period at owner's expense. Note: (Lithium-Ion battery only): A Lithium-Ion battery has a part only prorated warranty beginning year 3 through year 5 based on the time in service and kilowatt hours used. Refer to the *Operator's Manual* for additional information.

Maintenance is at Owner's Expense

Engine tune-up, lubrication, cleaning and polishing, replacement of filters, coolant, and completing recommended maintenance are some of the normal services Toro products require that are at the owner's expense.

General Conditions

Repair by an Authorized Toro Distributor or Dealer is your sole remedy under this warranty.

Neither The Toro Company nor Toro Warranty Company is liable for indirect, incidental or consequential damages in connection with the use of the Toro Products covered by this warranty, including any cost or expense of providing substitute equipment or service during reasonable periods of malfunction or non-use pending completion of repairs under this warranty. Except for the Emissions warranty referenced below, if applicable, there is no other express warranty. All implied warranties of merchantability and fitness for use are limited to the duration of this express warranty.

Some states do not allow exclusions of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions and limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Note regarding engine warranty:

The Emissions Control System on your Product may be covered by a separate warranty meeting requirements established by the U.S. Environmental Protection Agency (EPA) and/or the California Air Resources Board (CARB). The hour limitations set forth above do not apply to the Emissions Control System Warranty. Refer to the Engine Emission Control Warranty Statement supplied with your product or contained in the engine manufacturer's documentation for details.

Countries Other than the United States or Canada

Customers who have purchased Toro products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province, or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the Toro importer.