



Form No. 3392-714 Rev A

Count on it.

Parts Catalog

1/3 Area Platform Lift Workman® Heavy-Duty Utility Vehicle

Model No. 07347—Serial No. 315000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HP: high pressure

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: low pressure

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping



TTH: torx truss head

Contents

Lift Assembly..... 4

Solenoid, Push Button Control and Hydraulic Cylinder Assembly..... 5


Lift Base, Power Pack, Leveling Switch and Brake Switch Assembly..... 6

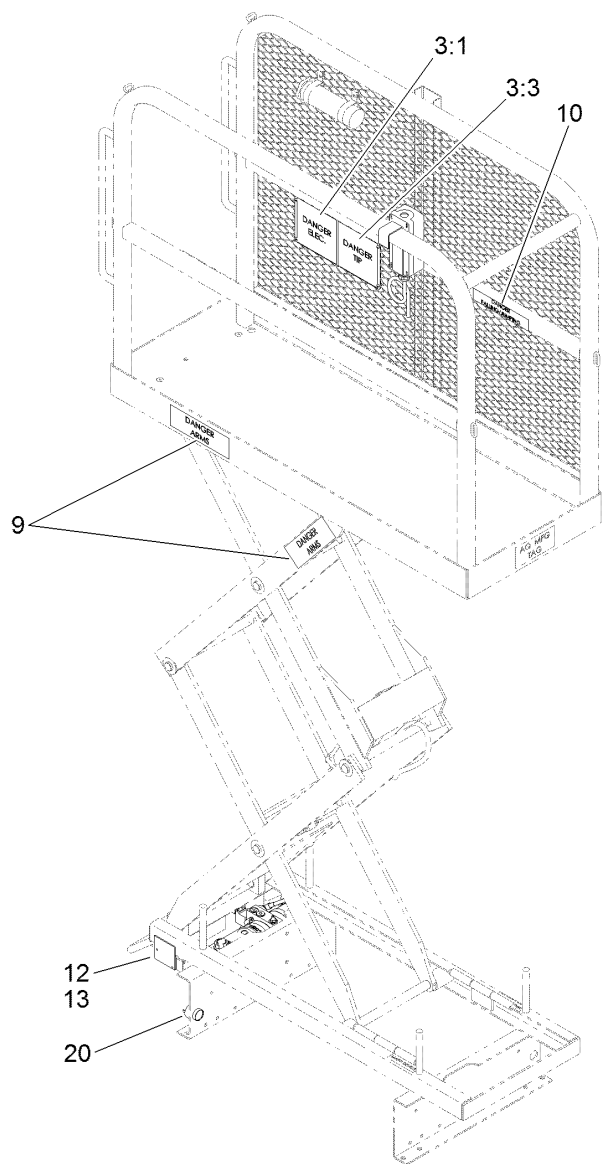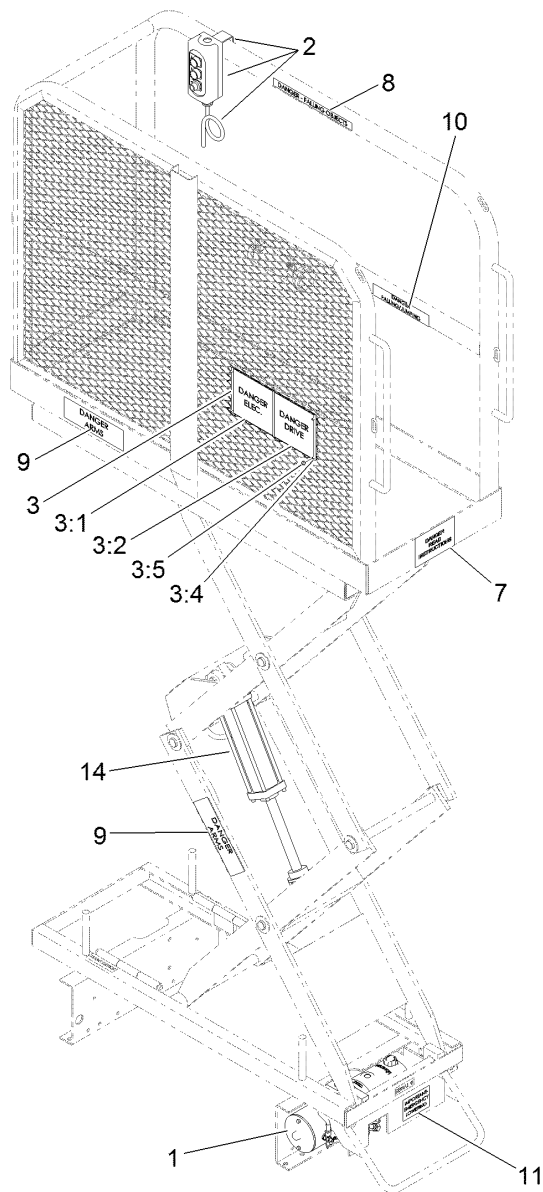

Lift Assembly

Ref.	Part Number	Qty.	Description
1	120-4951	1	Motor And Pump ASM
2	120-4955	1	Pushbutton Control ASM
3	93-3738	2	Plate-Decal
3:1	93-3702	2	Decal-Danger
3:2	93-3703	1	Decal-Danger
3:3	93-3704	1	Decal-Danger
3:4	3250-12	4	Screw-PPH
3:5	3296-2	4	Nut-Lock, NI
7	93-3701	1	Decal-Danger


Ref.	Part Number	Qty.	Description
8	93-3705	1	Decal-Danger
9	93-3706	4	Decal-Danger
10	93-3707	2	Decal-Danger
11	93-3711	1	Decal-Important
12	120-4957	1	Switch-Limit
13	120-4958	1	Arm-Roller (For Limit Switch)
14	120-4963	1	Cylinder-HYD
20	93-3715	1	Sonalert-Intermittent

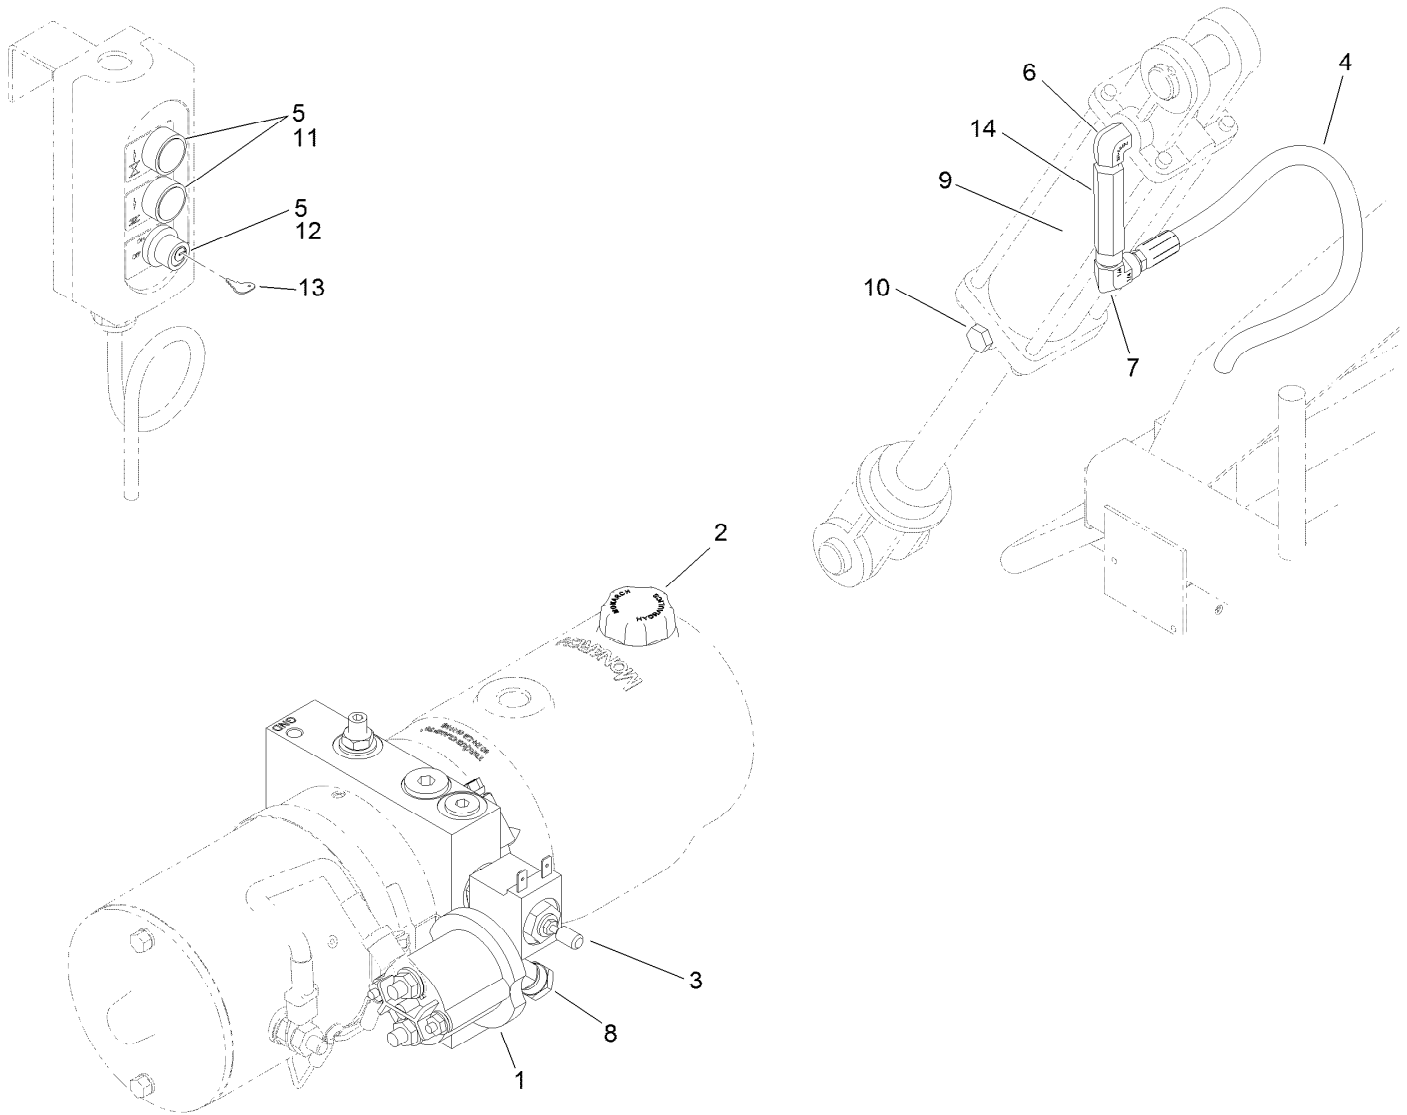

Solenoid, Push Button Control and Hydraulic Cylinder Assembly

Ref.	Part Number	Qty.	Description
1	120-4952	1	Solenoid-Motor, Start Switch
2	120-4953	1	Cap-Breather, Reservoir
3	120-4954	1	Valve-Down (W/Coil)
4	93-3735	1	HYD Hose ASM
5	120-4956	3	Contact-Switch
6	120-4960	1	Fitting-HYD (3/8 X 1/4 Npt)
7	120-4961	1	Fitting-HYD (1/4 Mnpt X 1/4 Fnpt)
8	120-4962	1	Fitting-HYD (6Sae X 1/4 Fnps)
9	120-4964	1	Seal Kit (HYD Cylinder)
10	120-4965	1	Breather-Cylinder
11	117-4858	2	Switch-Pushbutton
12	120-4966	1	Keyswitch
13	120-4967	1	Key
14	120-4959	1	Valve-Fuse, Velocity

Lift Base, Power Pack, Leveling Switch and Brake Switch Assembly

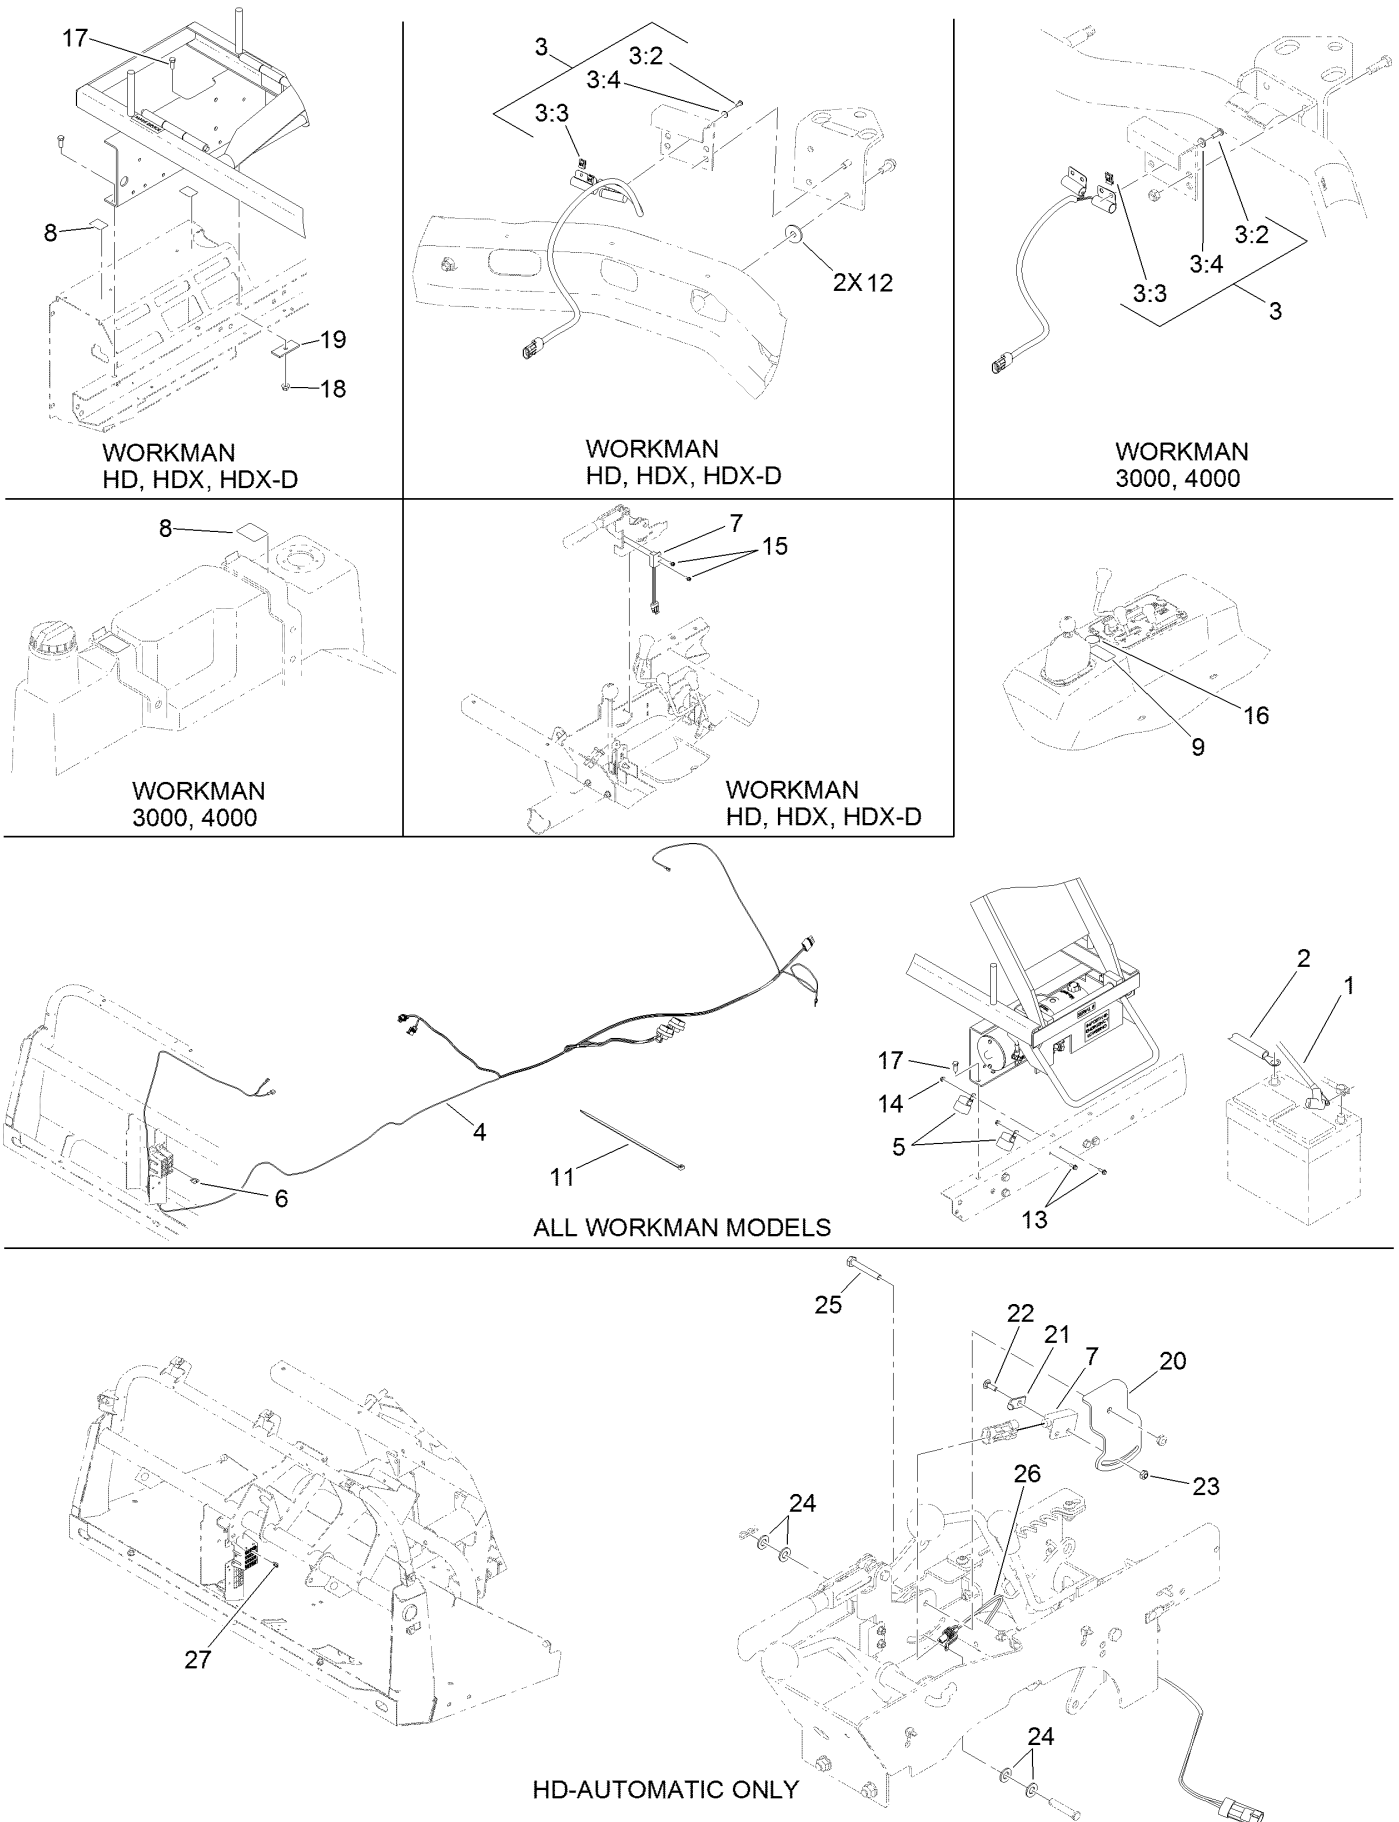

Lift Base, Power Pack, Leveling Switch and Brake Switch Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	93-3725	1	Cable-Battery	14	32128-33	2	Nut-HF
2	93-3745	1	Cable-Battery, Negative	15	32104-60	2	Screw-HWH
3	112-3359	1	Leveling Switch Kit	16	93-3726	1	Level-Circular
3:2	3250-26	4	Screw-PPH	17	323-6	4	Screw-HH
3:3	95-4115	4	Nut-Speed	18	32128-29	4	Nut-Lock, Flange
3:4	3256-21	4	Washer-Flat	19	93-3742	2	Plate-Reinforcement
4	120-3997	1	Harness-Wire	20	131-8303	1	Bracket-Switch, Brake
5	99-7430	2	Relay	21	100-4872	1	Plate-Switch, Neutral
6	218-578	1	Fuse-Blade, 10 Amp	22	3229-34	1	Screw-CARR
7	104-1414	1	Sensor-Proximty, Ferrous	23	3296-12	1	Nut-Lock, NI
8	93-3709	2	Decal-No Step	24	3256-23	3	Washer-Flat
9	93-3710	1	Decal-Warning	25	321-10	1	Screw-HH
11	250-5	12	Tie-Cable	26	122-0577	1	Harness-Wire, Extension
12	2844	2	Washer	27	121-8866	1	Fuse-Mini Blade, 10 Amp
13	3234-4	2	Screw-HHF				



Count on it.