



Form No. 3369-572 Rev D

Count on it.

Parts Catalog

Power Max HD 926 OXE Snowthrower

Model No. 38820—Serial No. 313000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HP: high pressure

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: low pressure

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

 
STD: standard

TAP: self tapping

TTH: torx truss head

Contents


Housing Assembly	4
Traction Frame Assembly	5
Idler and Linkage Assembly	6
Auger and Impeller Assembly	8
26 Inch Auger Gearcase Assembly No. 108-7328	9
Impeller Assembly	10
Engine Assembly	11
No. 1 Engine Assembly No. 120-4424	12
No. 2 Engine Assembly No. 120-4424	14
No. 3 Engine Assembly No. 120-4424	16
Engine Decal Assembly	18
Chute Assembly	19
Lever Chute Control Assembly	20
Lower Handle and Headlamp Assembly	21
Controls Assembly	22
Wheel Clutch Assembly	23
Wheel Clutch Sprocket Assembly	25
Attachments and Accessories	26

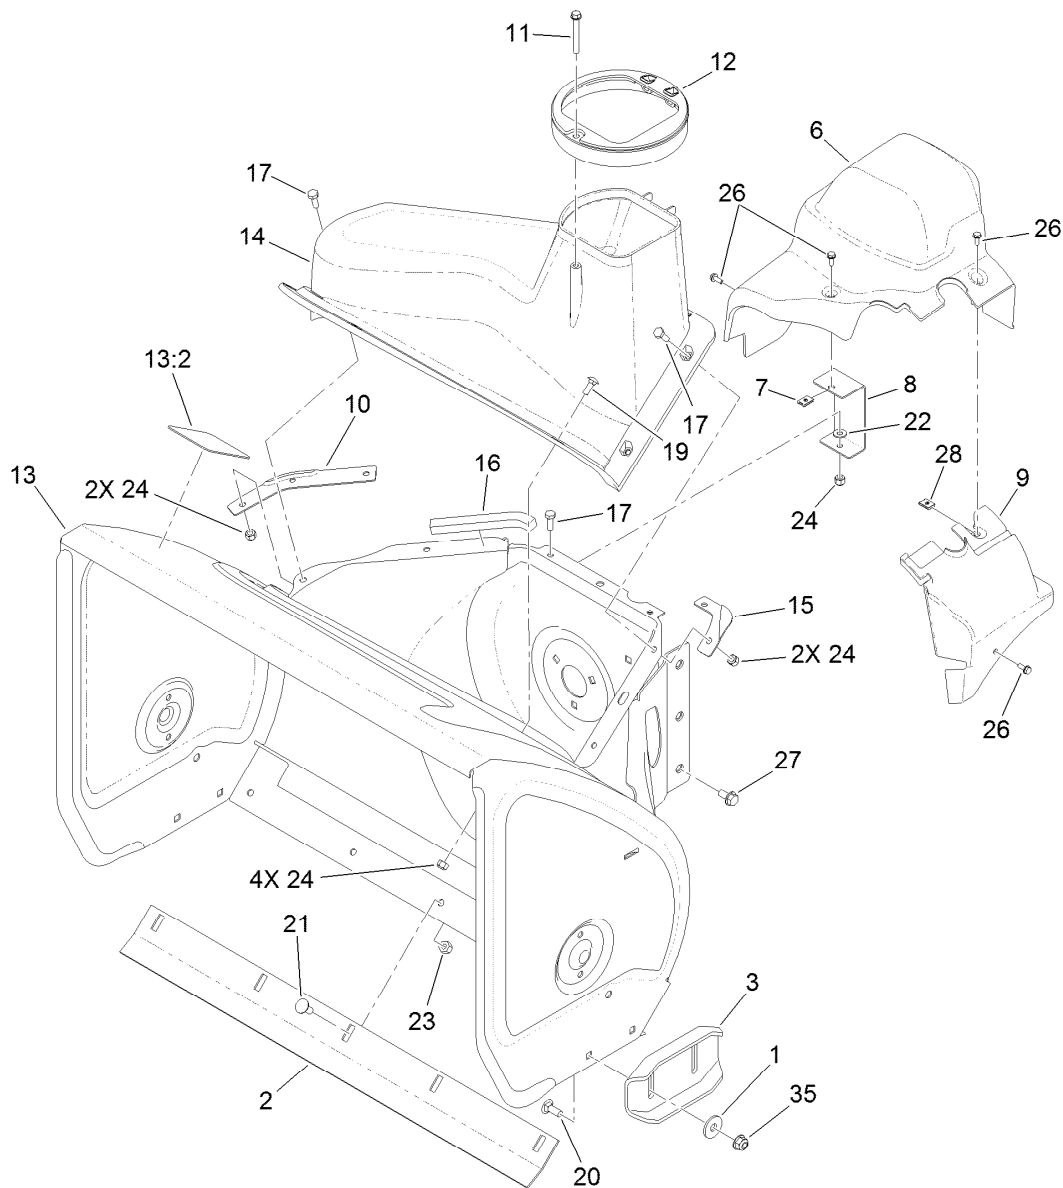

Housing Assembly


Ref.	Part Number	Qty.	Description
1	52-2861	4	Washer
2	105-9976-01	1	Scraper-Fixed
3	106-4588-01	2	Skid
6	119-1563	1	Cover-Belt
7	107-1013	1	Nut-Speed, U-Type
8	107-1014-03	1	Bracket-Cover, Clip Nut
9	107-1016	1	Cover-Extension, Belt
10	107-1017-03	1	Seal-Flange, Cover
11	107-3003	1	Screw-Plastite
12	107-3006	1	Guide-Chute
13	107-3822	1	Housing-Auger, 26 Inch
13:2	107-3040	1	Decal-Danger, Auger
14	108-0017	1	Cover

Ref.	Part Number	Qty.	Description
15	108-0039-03	1	Seal
16	120-0124	1	Seal-Housing
17	321-4	7	Screw-HH
19	3229-1	4	Bolt-CARR
20	3230-16	4	Screw-CARR
21	3230-23	5	Screw-CARR
22	3256-22	1	Washer-Flat
23	3296-29	5	Nut-Lock, NI
24	3296-42	11	Nut-Lock, NI
26	32144-112	4	Screw-HWH
27	32144-14	6	Screw-HWHTF
28	701493	1	Nut-Speed
35	104-8300	4	Nut-Flange, NI

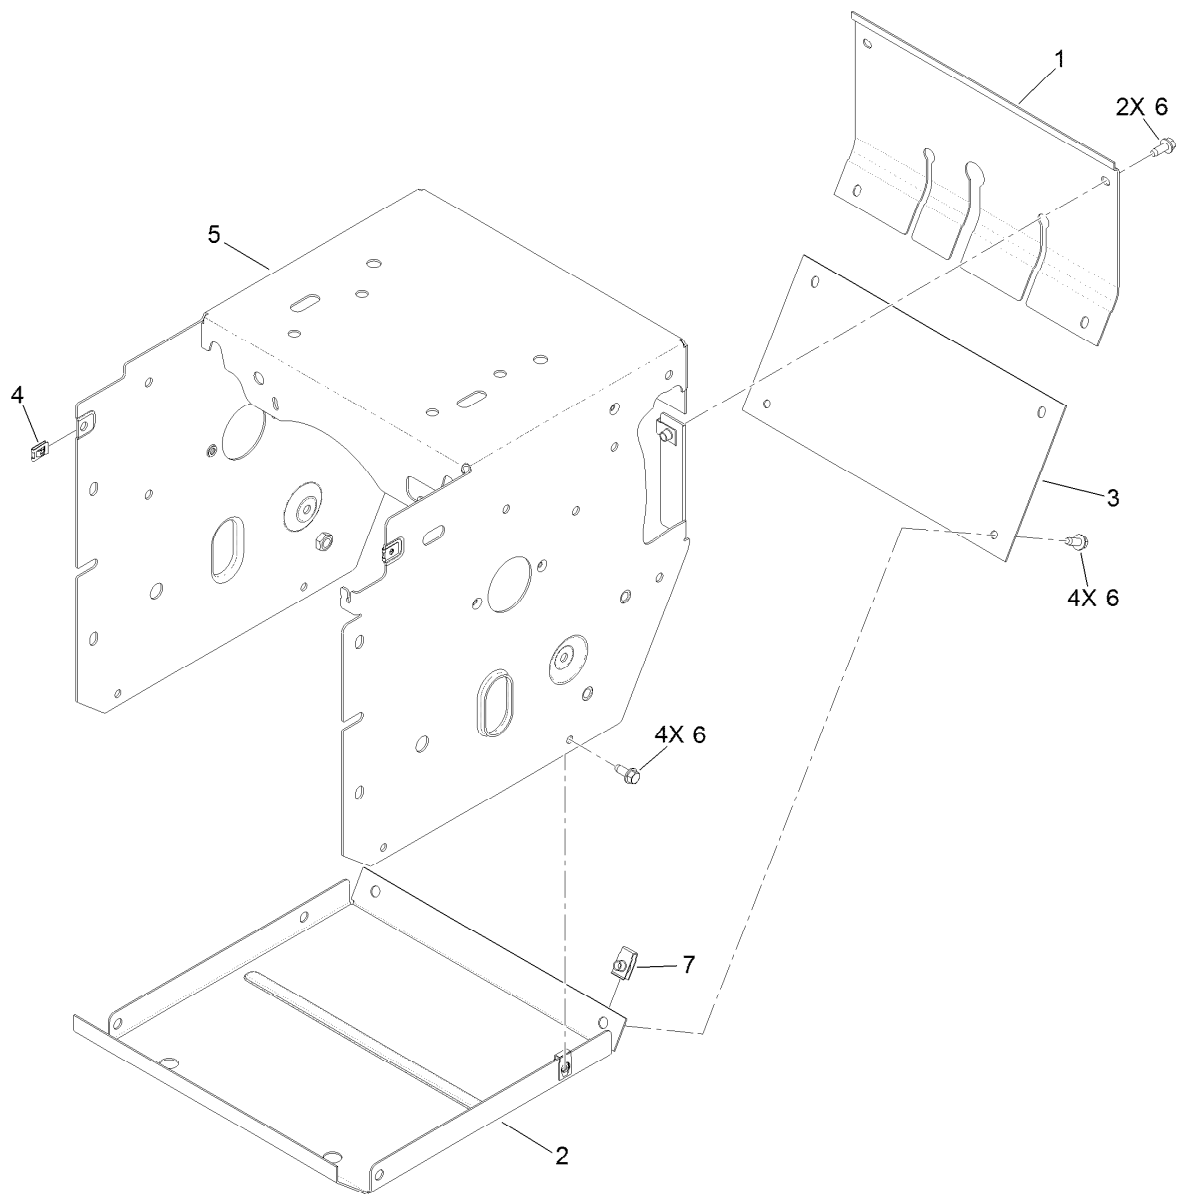 

Traction Frame Assembly


Ref.	Part Number	Qty.	Description
1	108-0022-01	1	Cover-Upper
2	106-7330-01	1	Pan-Bottom
3	106-7345-01	1	Cover-Lower
4	107-1013	2	Nut-Speed, U-Type
5	120-9832-01	1	Traction Frame ASM
6	32144-10	10	Screw-HWH
7	107069	7	Clip

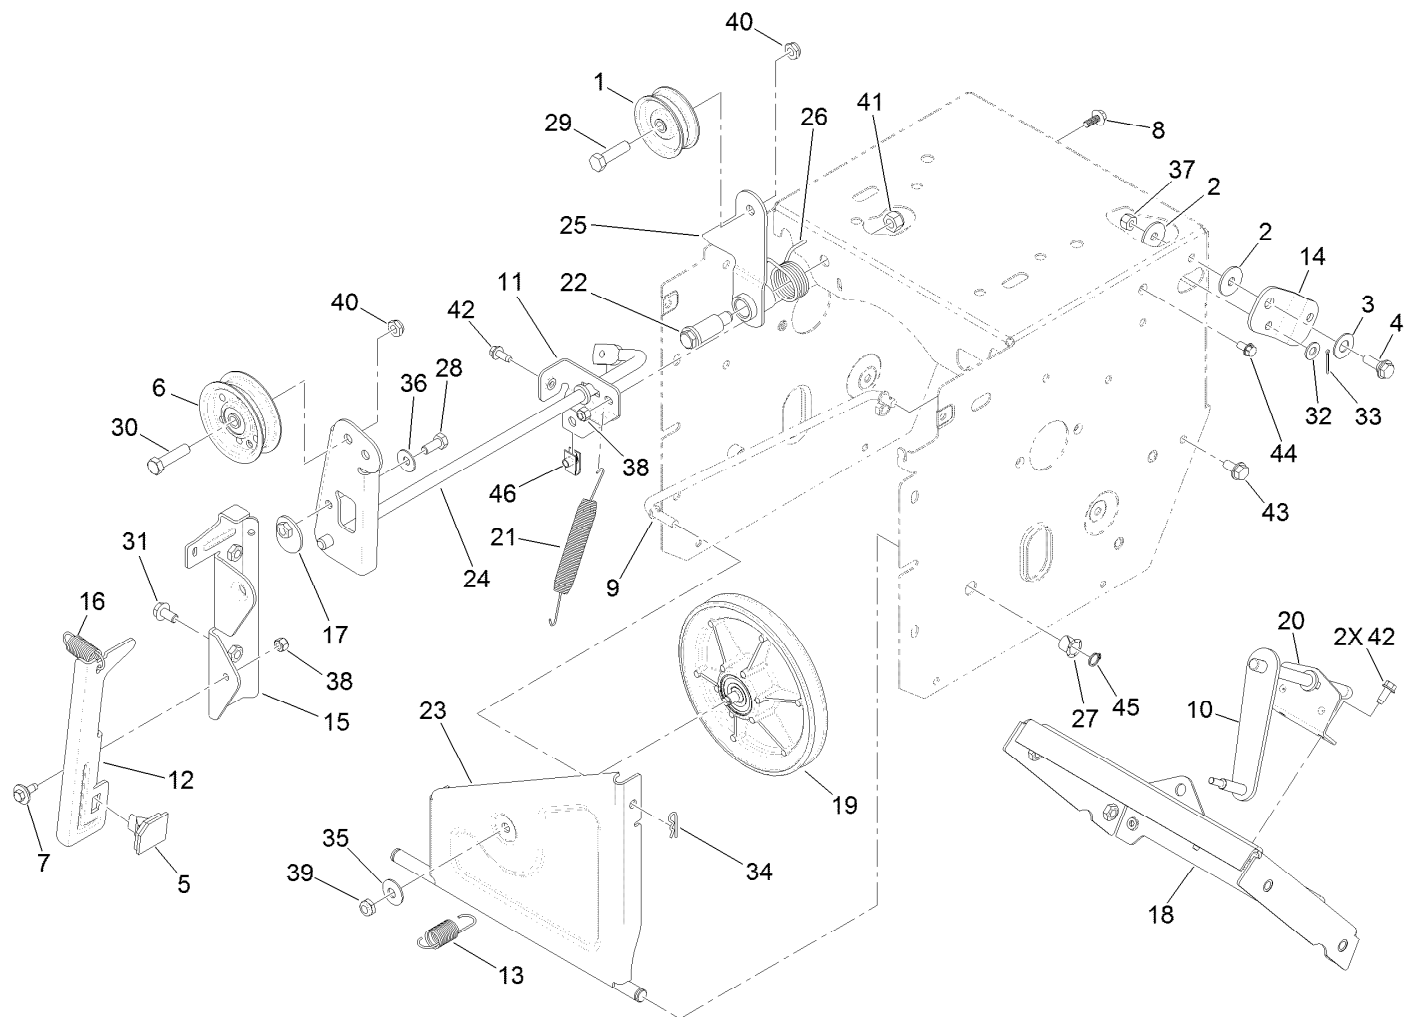 

Idler and Linkage Assembly

Ref.	Part Number	Qty.	Description
1	3-4244	1	Pulley-Idler
2	5-4460	2	Washer-Pivot
3	25-5640	1	Washer
4	27-0410	1	Screw-Shoulder
5	66-8060	1	Pad-Brake
6	92-7104	1	Pulley-Idler
7	92-9698	1	Screw-Shoulder
8	99-6810	1	Screw-HHF
9	106-4467	1	Link-Control, Speed
10	106-7268	1	Lever-Control, Traction
11	120-9824	1	Bracket-Clutch, Impeller
12	107-1000	1	Arm-Brake
13	107-1003	1	Spring-Extension
14	107-1011	1	Bellcrank-Drive
15	107-1039	1	Bracket-Idler, Impeller
16	107-1045	1	Spring-Extension
17	107-1047	1	Nut
18	108-0026-01	1	Shift Plate ASM
19	108-0031	1	Pulley-Traction
20	108-0036	1	Bracket-Rod, Shift
21	108-2976	1	Spring-Extension


Ref.	Part Number	Qty.	Description
22	108-5056	1	Bolt-Shoulder
23	108-7307	1	Bracket-Wheel, Friction
24	120-0144-03	1	Impeller Clutch ASM
25	120-0148	1	Arm-Traction Idler ASM
26	120-3060	1	Spring-Torsion
27	256-257	2	Bushing-Nyliner
28	322-3	1	Screw-HH
29	323-29	1	Screw-HH
30	323-8	1	Screw-HH
31	3234-7	2	Screw-HHF
32	3256-23	1	Washer-Flat
33	3272-4	1	Pin-Cotter
34	3290-307	1	Pin-Hair
35	3290-340	1	Washer-Belleville
36	3290-456	1	Washer-Belleville
37	3296-29	1	Nut-Lock, NI
38	3296-42	2	Nut-Lock, NI
39	3296-5	1	Nut-Lock
40	3296-59	2	Nut-Lock, NI
41	3296-76	1	Nut-Lock, NI
42	32144-10	3	Screw-HWH

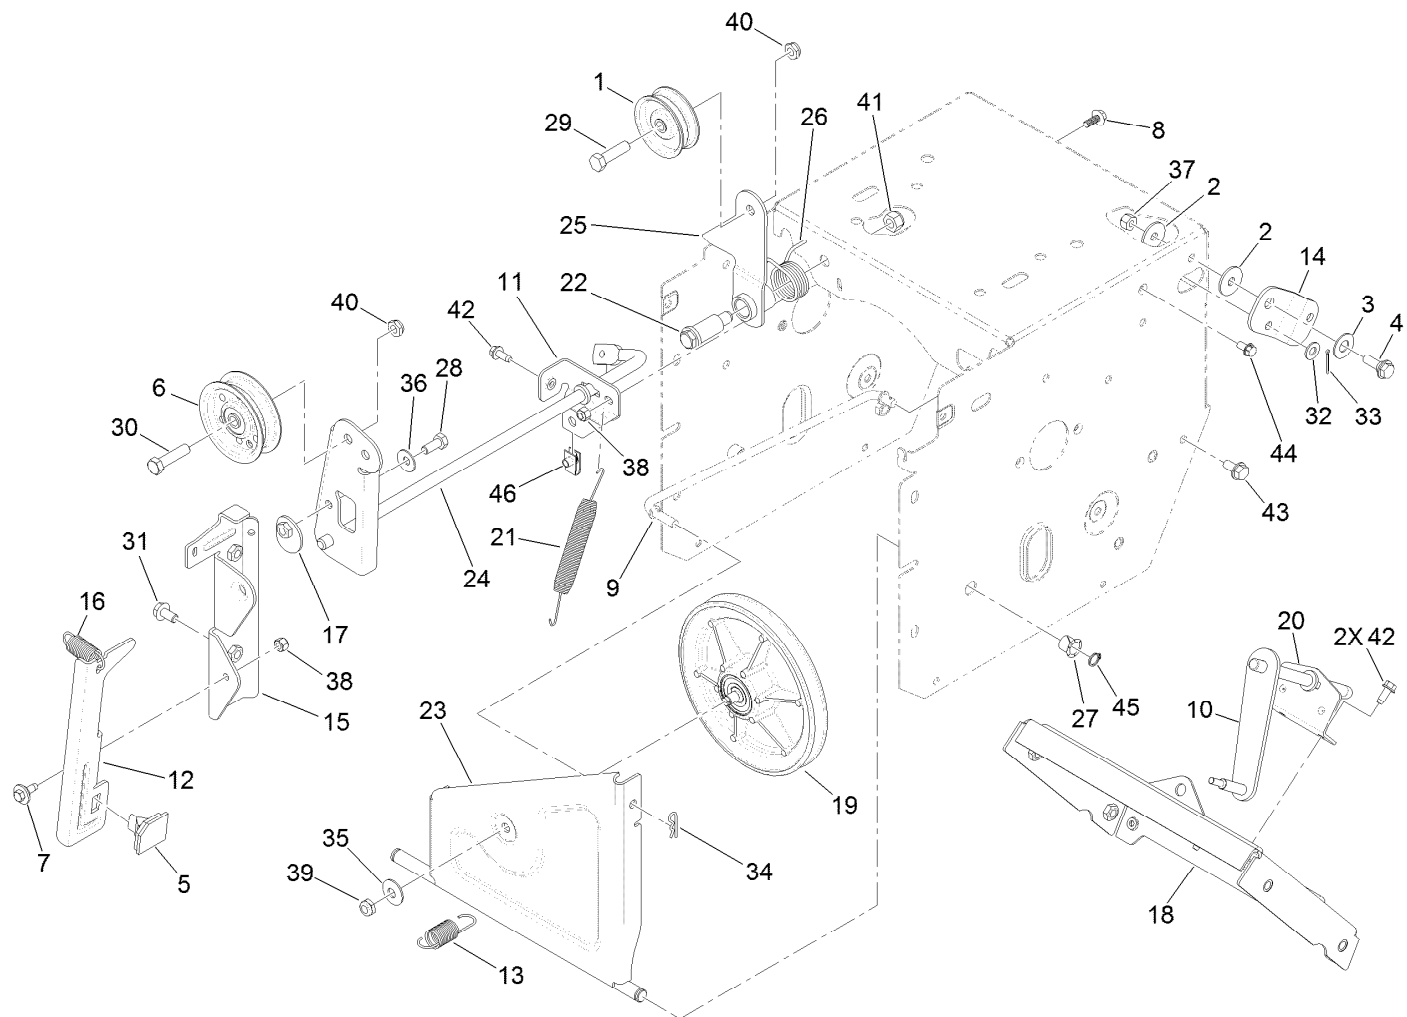 

Idler and Linkage Assembly (continued)


Ref.	Part Number	Qty.	Description
43	32144-14	4	Screw-HWHTF
44	32144-4	1	Screw-HWH

Ref.	Part Number	Qty.	Description
45	32151-61	2	Ring-Retaining
46	107069	1	Clip

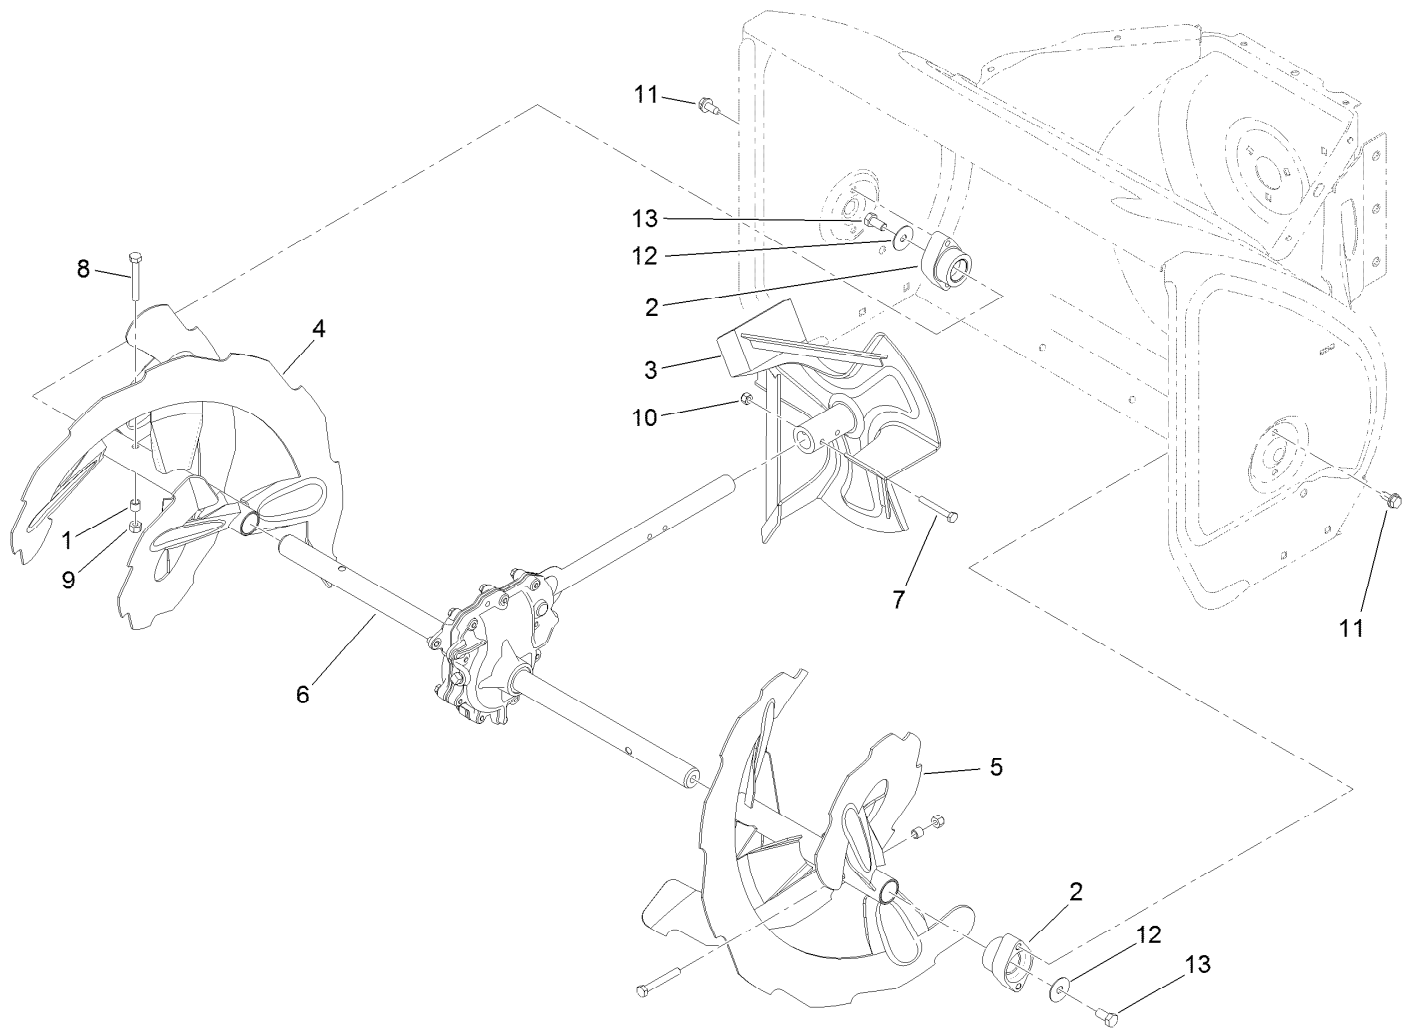 

Auger and Impeller Assembly

Ref.	Part Number	Qty.	Description
1	1-633545	2	Spacer
2	106-4570	2	Bearing-Auger
3	106-4576-03	1	Impeller ASM
4	106-7289-03	1	RH Auger ASM
5	106-7299-03	1	LH Auger ASM
6	108-7328	1	26 Inch Auger Gearcase ASM
7	321-11	2	Screw-HH
8	322-11	2	Screw-HH
9	3296-29	2	Nut-Lock, NI
10	3296-42	2	Nut-Lock, NI
11	32144-70	4	Screw-HWHTF
12	3-0750	2	Washer
13	323-4	2	Screw-HH

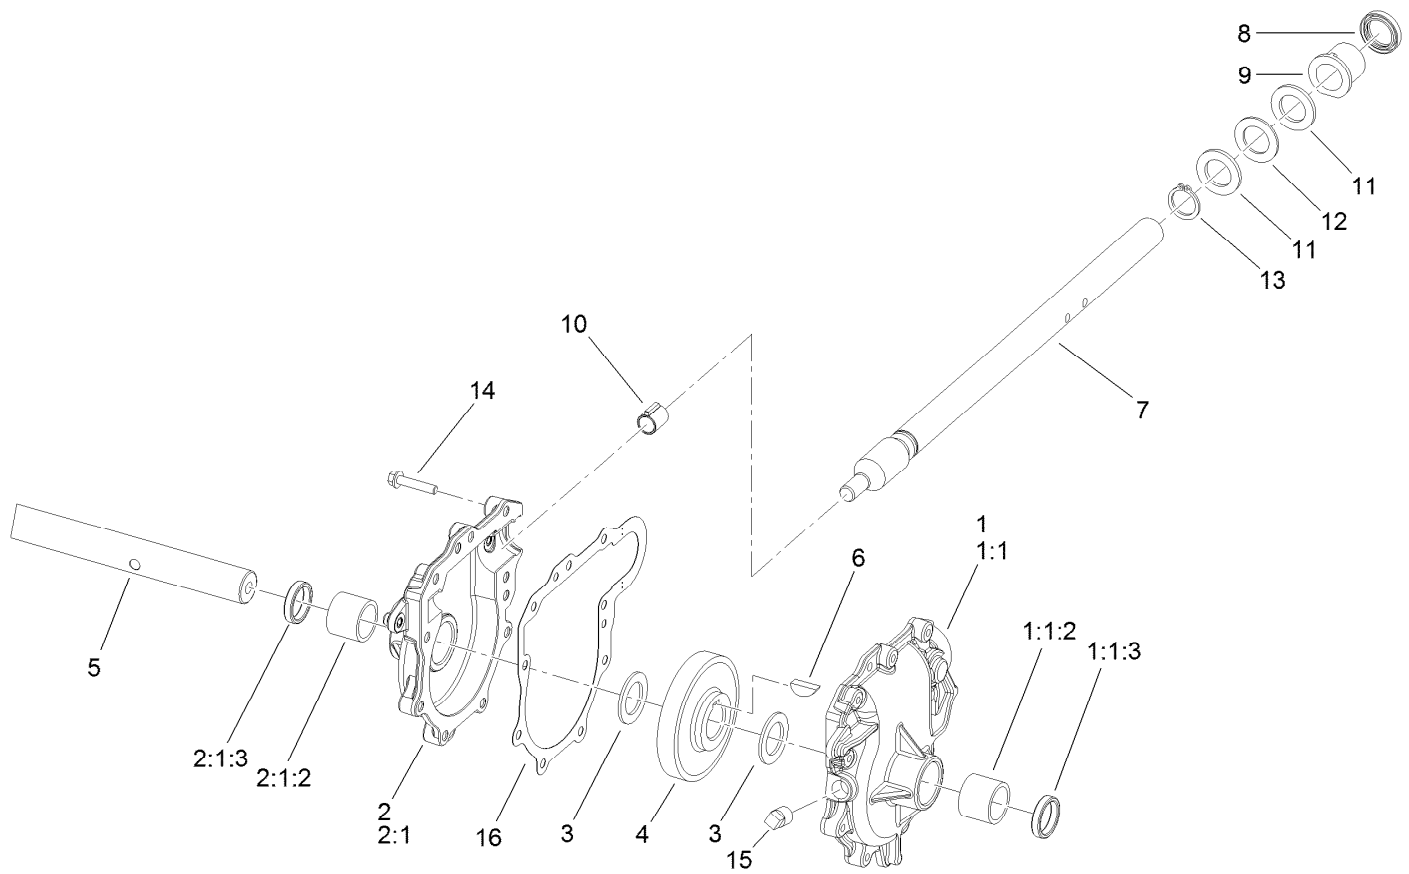 


26 Inch Auger Gearcase Assembly No. 108-7328

Ref.	Part Number	Qty.	Description
1	108-7325	1	LH Auger Gearcase ASM
1:1		1	Gearcase-Auger, LH ●
1:1:2	112-6635	1	Bushing-Sleeve
1:1:3	7-0045	1	Seal-Oil
2	108-7327	1	RH Auger Gearcase ASM
2:1		1	Gearcase-Auger, RH ●
2:1:2	112-6635	1	Bushing-Sleeve
2:1:3	7-0045	1	Seal-Oil
3	252-71	2	Washer-Thrust
4	62-0120	1	Gear-Helical
5	106-4579	1	Shaft-Auger


Ref.	Part Number	Qty.	Description
6	3257-10	1	Key-Woodruff
7	66-7811	1	Shaft-Impeller
8	253-149	1	Seal-Oil
9	37-6560	1	Bushing-Input
10	62-1150	1	Bushing-Worm
11	252-78	2	Washer-Thrust
12	252-76	1	Bearing-Thrust
13	32151-33	1	Ring-Retaining, Ext
14	108-4862	9	Screw-HWHTF
15	281-1	1	Plug-Pipe, SQH
16	108-7330	1	Gasket-Gearcase, Auger

 ● Not serviced separately

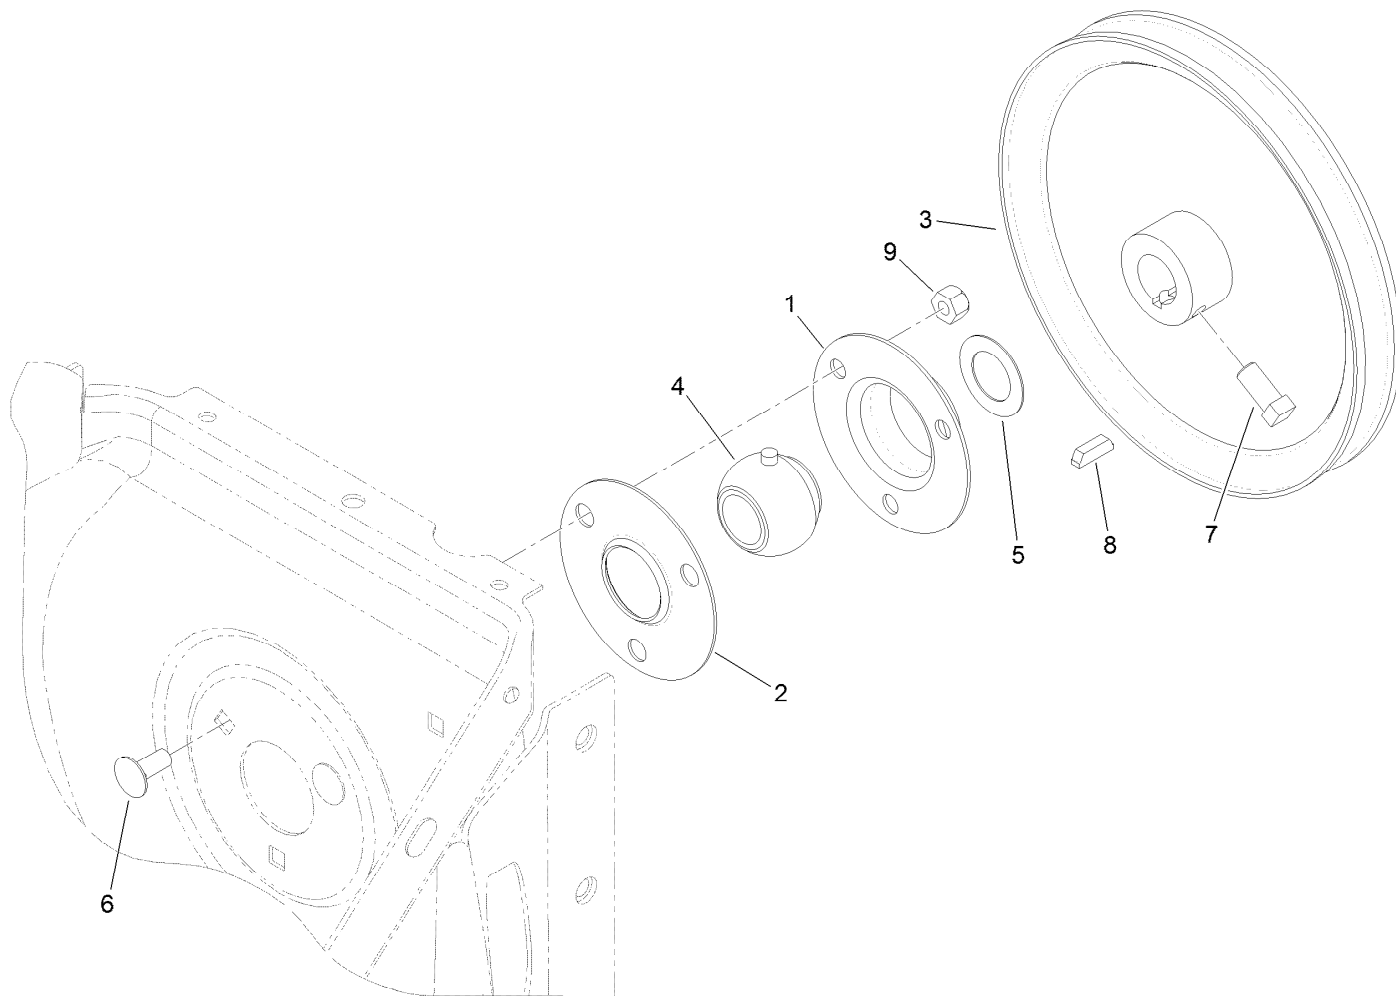

Impeller Assembly

Ref.	Part Number	Qty.	Description
1	26-6110	1	Flange-Cup, Bearing
2	26-6120	1	Flange-Cup, Bearing
3	62-1300	1	Pulley-Impeller
4	63-3450	1	Bearing-Ball
5	252-80	1	Washer-Thrust
6	3230-23	3	Screw-CARR
7	3242-4	2	Screw-Set, SQH
8	3257-23	1	Key-Woodruff
9	3296-29	3	Nut-Lock, NI

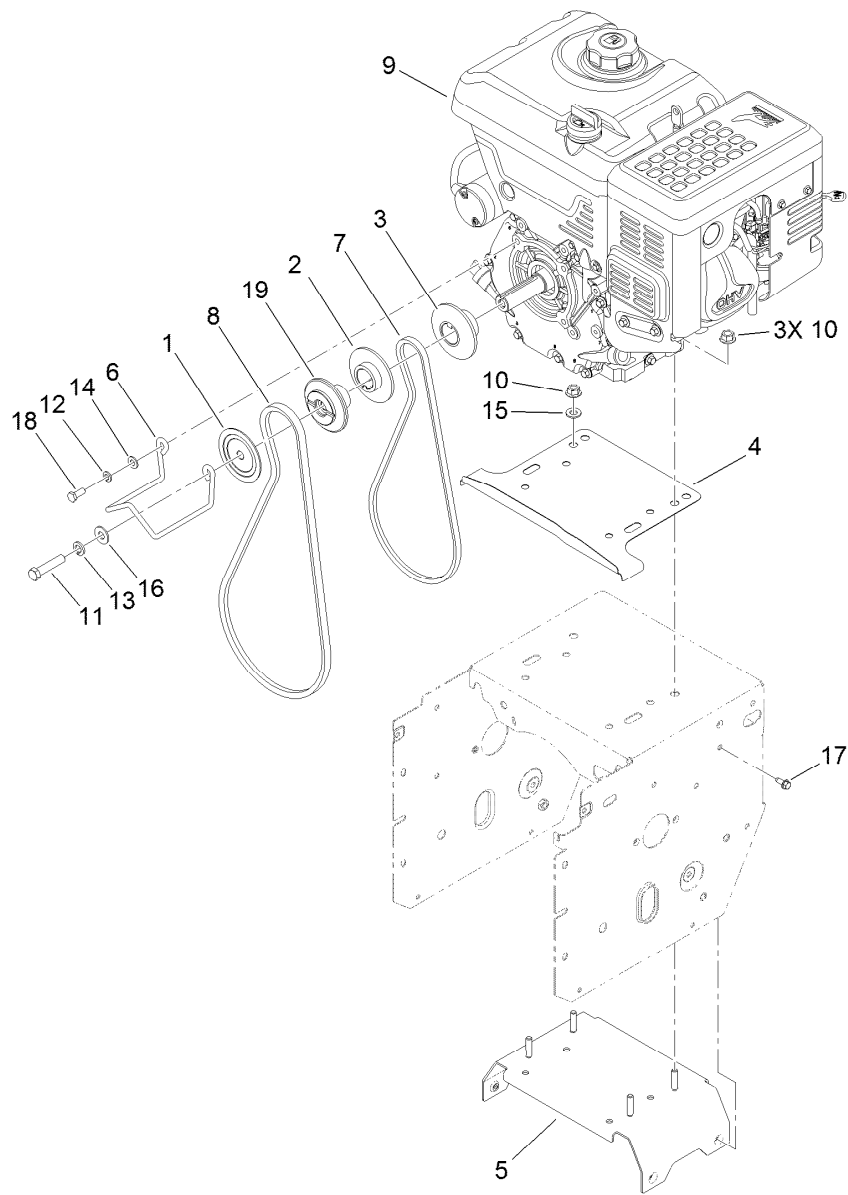 


Engine Assembly

Ref.	Part Number	Qty.	Description
1	62-0940	1	Sheave-Half, Impeller
2	121-6603	1	Pulley-Engine, Traction
3	106-7334	1	Sheave-Half, Traction
4	117-6022-01	1	Shield-Drive
5	119-1560	1	Frame Brace ASM
6	119-1562	1	Guide-Belt
7	119-1564	1	Belt-V
8	125-1145	1	Belt-V
9	120-4424	1	Engine-Lc175Fds-1
10	120-3067	4	Nut-Flange

Ref.	Part Number	Qty.	Description
11	3212-8	1	Screw-HH
12	3253-4	2	Washer-Lock
13	3253-6	1	Washer-Lock
14	3256-23	2	Washer-Flat
15	3256-24	1	Washer-Flat
16	3256-4	1	Washer-Flat
17	32144-10	4	Screw-HWH
18	33114-020	2	Screw-HH
19	121-6602	1	Pulley-Engine, Impeller

 No. 1 Engine Assembly No. 120-4424

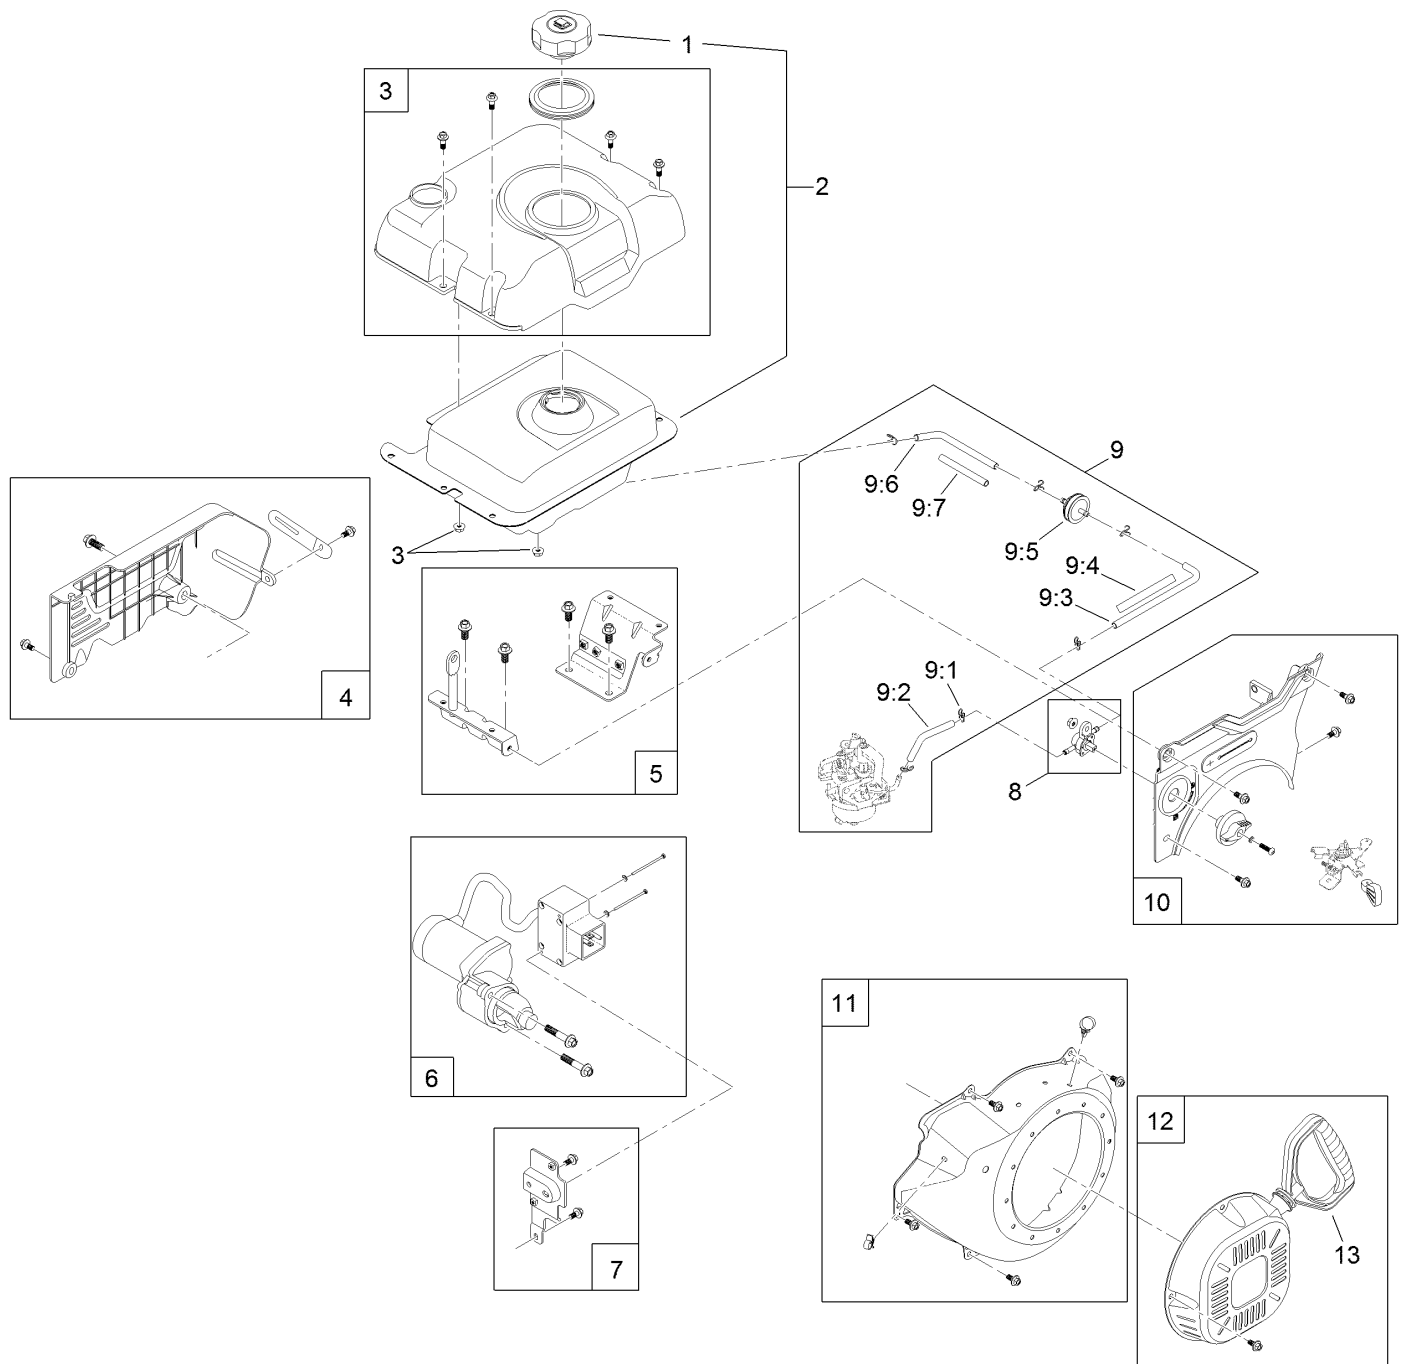


No. 1 Engine Assembly No. 120-4424 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-0257	1	Cap-Fuel	9:2		1	Hose-Fuel ●
2	121-0414	1	Fuel Tank And Cap Kit	9:3		1	Hose-Fuel ●
3	121-0349	1	Fuel Tank Cover Kit	9:4		1	Sleeve-Abrasion ●
4	121-0347	1	Rear Panel And Hardware Kit	9:5		1	Filter-Fuel ●
				9:6		1	Hose-Fuel ●
5	121-0351	1	Tank Mount Bracket Kit	9:7		1	Sleeve-Abrasion ●
6	121-0446	1	Starter Kit	10	121-4105	1	Front Panel Kit
7	121-4103	1	Switch Box Bracket Kit	11	121-0274	1	Recoil Shroud Kit
8	121-4109	1	Fuel Shut-Off Valve Kit	12	121-0342	1	Recoil Kit
9	121-0353	1	Complete Fuel Line Kit	13	121-0287	1	Handle-Recoil
9:1		6	Clamp-Hose ●				

● Not serviced separately

 No. 2 Engine Assembly No. 120-4424

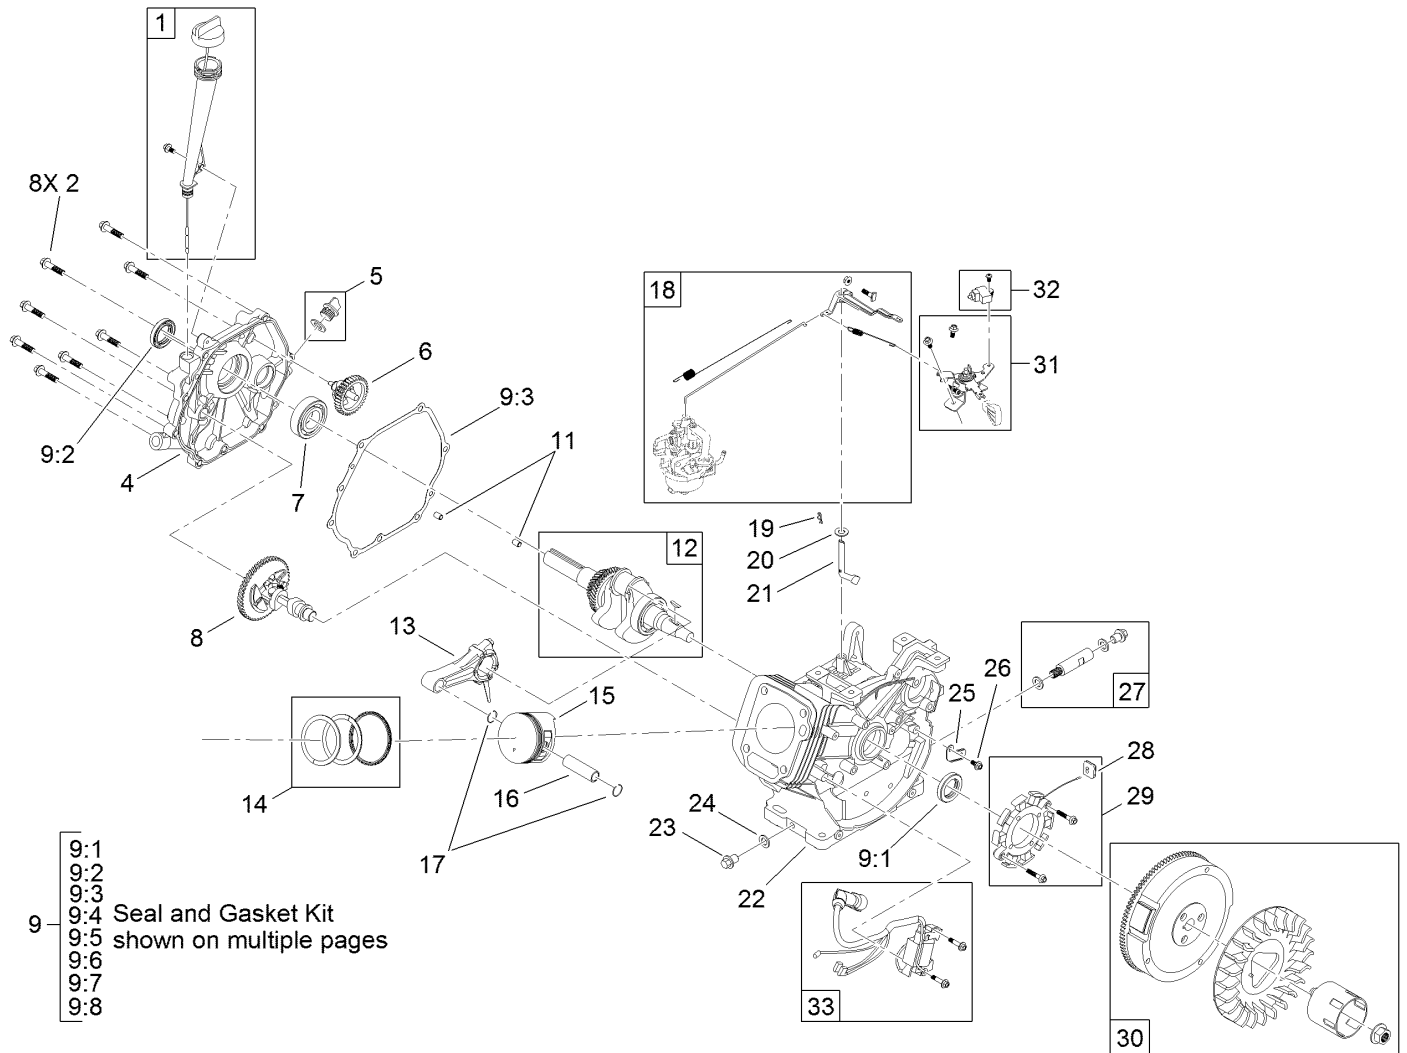


No. 2 Engine Assembly No. 120-4424 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-0361	1	Oil Fill Kit	15	121-0236	1	Piston
2	121-0299	8	Screw-HHF	16	121-0237	1	Pin-Piston
4	121-0227	1	Cover-Crankcase	17	121-0313	2	Clip-Pin, Piston
5	121-0223	1	Sump Plug ASM	18	121-0352	1	Complete Governor Kit
6	121-0265	1	Governor Gear ASM	19	120-4256	1	Pin-Hair
7	121-0315	1	Bearing-Main	20	121-0311	1	Washer-Plain
8	121-0242	1	Camshaft ASM	21	121-0263	1	Shaft-Governor
9	121-0356	1	Seal And Gasket Kit	22	121-0439	1	Crankcase
9:1		1	Seal-Oil ●	23	121-0222	1	Screw-HHF
9:2		1	Seal-Oil ●	24	121-0310	1	Washer-Plain
9:3	121-0228	1	Gasket-Cover, Crankcase	25	121-0278	1	Clamp
9:4	121-0232	1	Gasket-Head, Cylinder	26	121-0118	1	Screw-HHF
9:5	121-0234	1	Gasket-Cover, Valve	27	121-0341	1	Drain Plug Kit
9:6		1	Gasket-Exhaust ●	28	121-0325	1	Grommet-Rubber
9:7		1	Gasket-Carburetor ●	29	121-0362	1	Stator Kit
9:8		1	Gasket-Carburetor ●	30	121-0354	1	Fan And Flywheel Kit
11	121-0314	2	Pin-Dowel	31	121-4107	1	Throttle Control Kit
12	121-0241	1	Crankshaft ASM	32	121-4106	1	Kill Switch Kit
13	121-0240	1	Connecting Rod ASM	33	121-0334	1	Ignition Module Kit
14	121-0239	1	Set-Ring, Piston				

● Not serviced separately

 
No. 3 Engine Assembly No. 120-4424

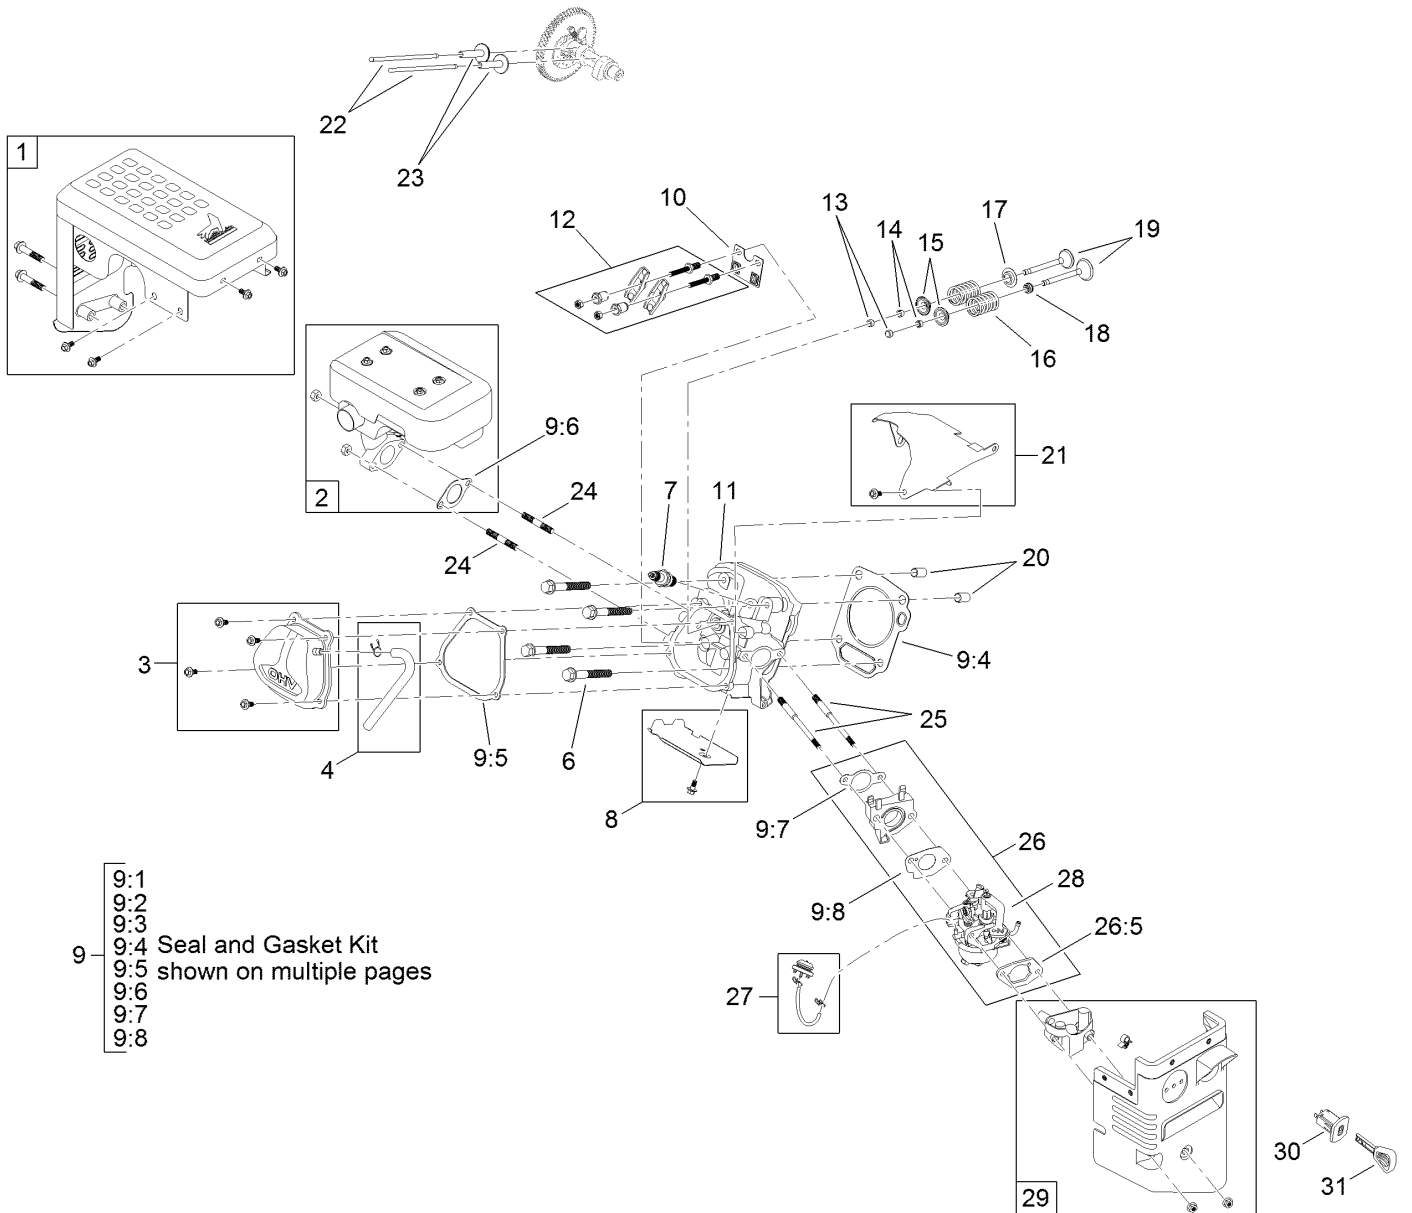

No. 3 Engine Assembly No. 120-4424 (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-4101	1	Muffler Shield Kit	14	120-4307	2	Keeper-Valve
2	121-4100	1	Muffler Kit	15	120-4306	2	Retainer-Spring, Valve
3	121-0343	1	Valve Cover Kit	16	120-4305	2	Spring-Valve
4	121-0340	1	Breather Tube Kit	17	120-4303	1	Seat-Spring, Valve
6	121-0302	4	Screw-HHF	18	120-4304	1	Seal-Stem, Valve
7	119-1901	1	Plug-Spark	19	121-0328	1	Valve Kit
8	121-0348	1	Lower Heat Shroud Kit	20	120-4200	2	Pin-Dowel
9	121-0356	1	Seal And Gasket Kit	21	121-4102	1	Upper Heat Shroud Kit
9:1		1	Seal-Oil ●	22	121-0246	2	Rod-Push
9:2		1	Seal-Oil ●	23	120-4298	2	Lifter-Valve
9:3	121-0228	1	Gasket-Cover, Crankcase	24	121-0304	2	Stud-Mount, Muffler
9:4	121-0232	1	Gasket-Head, Cylinder	25	121-0303	2	Stud-Mount, Carburetor
9:5	121-0234	1	Gasket-Cover, Valve	26	121-0345	1	Complete Carb Service Kit
9:6		1	Gasket-Exhaust ●	26:5	121-0254	1	Gasket-Coated, Rubber
9:7		1	Gasket-Carburetor ●	27	121-0344	1	Primer Kit
9:8		1	Gasket-Carburetor ●	28	127-9143	1	Carb Repair Kit With Gaskets
10	121-0247	1	Plate-Guide, Push Rod	29	121-0355	1	Heater Box Kit
11	121-0230	1	Head-Cylinder	30	121-0283	1	Switch-Key
12	121-0245	1	Rocker Arm ASM	31	117-7728	1	Key
13	121-0244	2	Rotator-Valve				

 ● Not serviced separately

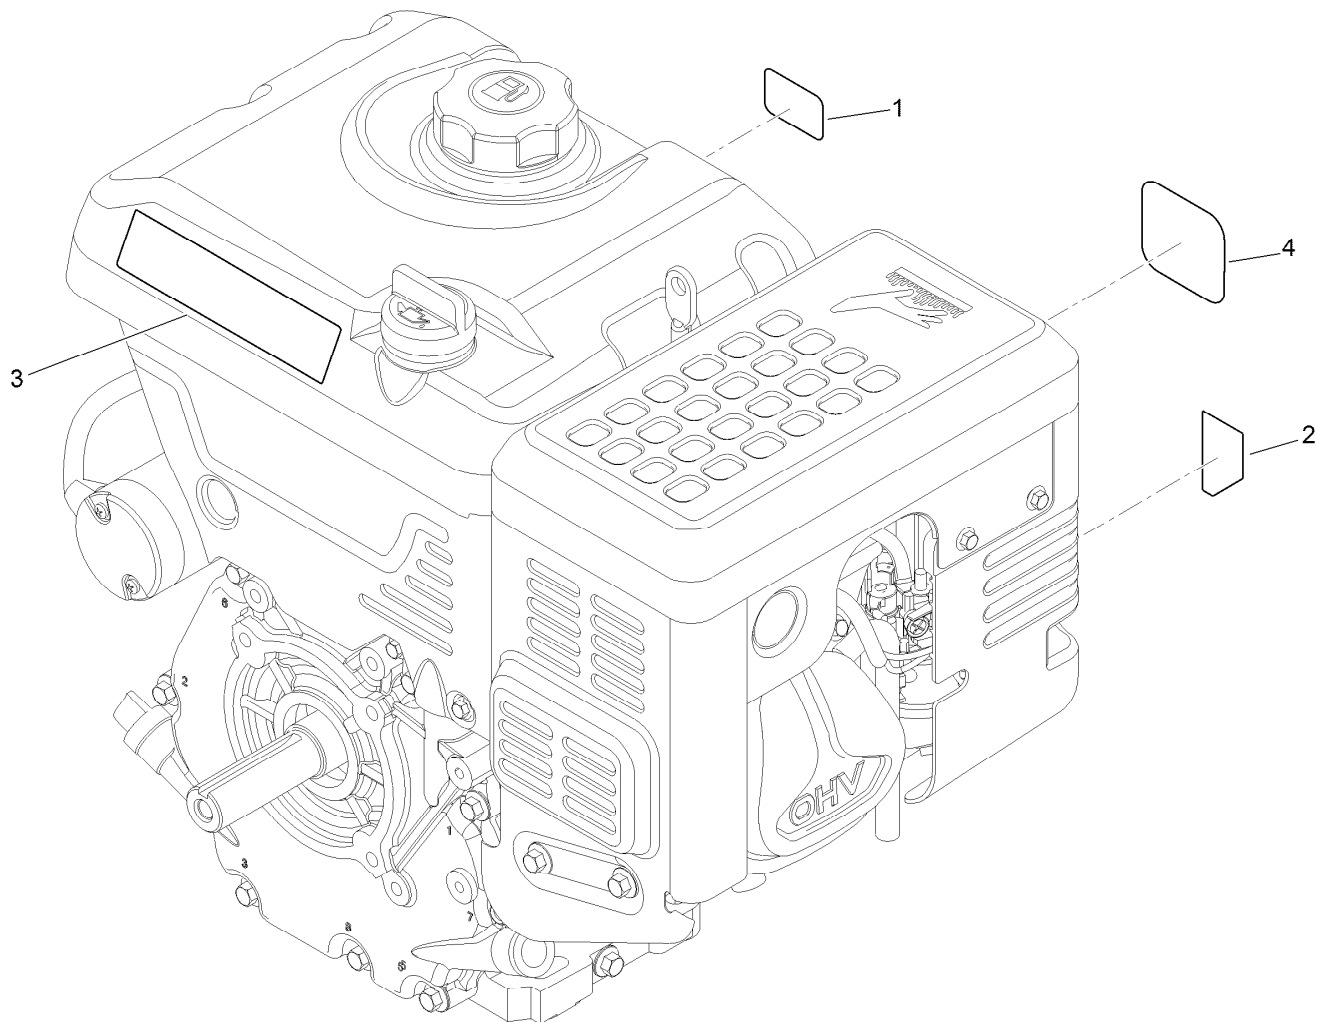

Engine Decal Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-1102	1	Decal-Throttle
2	120-9805	1	Decal-Control, Engine
3	120-9807	1	Decal-Engine
4	120-9810	1	Decal-Recoil

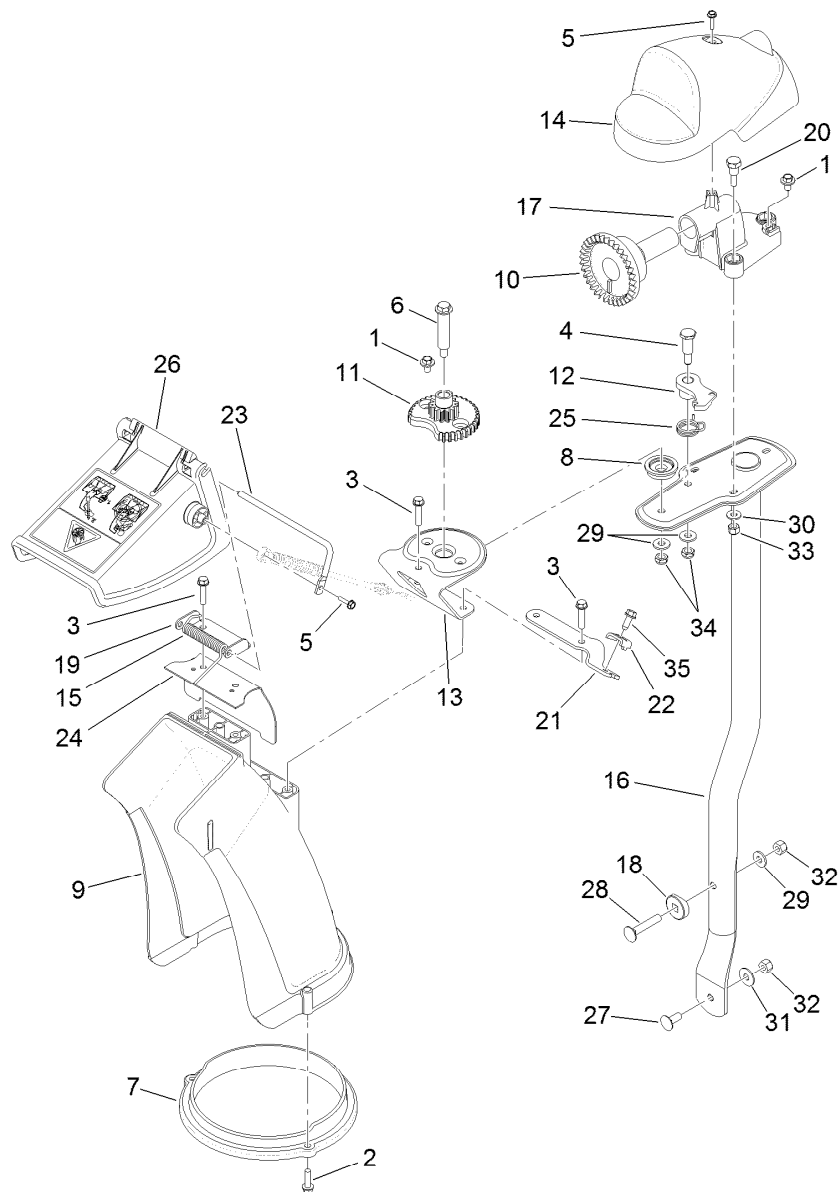 

Chute Assembly

Ref.	Part Number	Qty.	Description
1	46-6810	3	Screw And Washer ASM
2	46-8091	3	Screw-HWH
3	46-8092	5	Screw-Plastite
4	63-2650	1	Screw-Shoulder
5	98-1375	2	Screw-HWH
6	100-9880	1	Bolt-Shoulder
7	105-9991	1	Ring-Chute
8	106-4422	1	Spacer-Chute
9	106-4440	1	Chute-Discharge
10	106-4471	1	Gear-Face
11	106-4472	1	Gear-Chute
12	106-4476	1	Latch-Chute
13	106-4582-03	1	Bracket-Support, Chute
14	106-4585	1	Cover-Gear, Chute
15	106-4594	1	Spring-Torsion
16	106-7253-03	1	Tube-Support
17	106-7257	1	Mount-Gear, Face
18	106-7260	1	Washer-Curved


Ref.	Part Number	Qty.	Description
19	106-7266	1	Bracket-Deflector
20	106-7276	3	Screw-Shoulder
21	106-7296	1	Bracket-Cable, Clamp
22	106-7297	1	Clamp-Cable
23	107-1021	1	Rod-Deflector
24	108-5052	1	Seal-Chute
25	108-7315	1	Spring-Torsion
26	112-6629	1	Deflector-Chute, Ce
27	3230-23	1	Screw-CARR
28	3230-5	1	Screw-CARR
29	3256-2	3	Washer-Flat
30	3256-22	3	Washer-Flat
31	3290-456	1	Washer-Belleville
32	3296-29	2	Nut-Lock, NI
33	3296-42	3	Nut-Lock, NI
34	3296-47	2	Nut-Lock, NI
35	32144-10	1	Screw-HWH

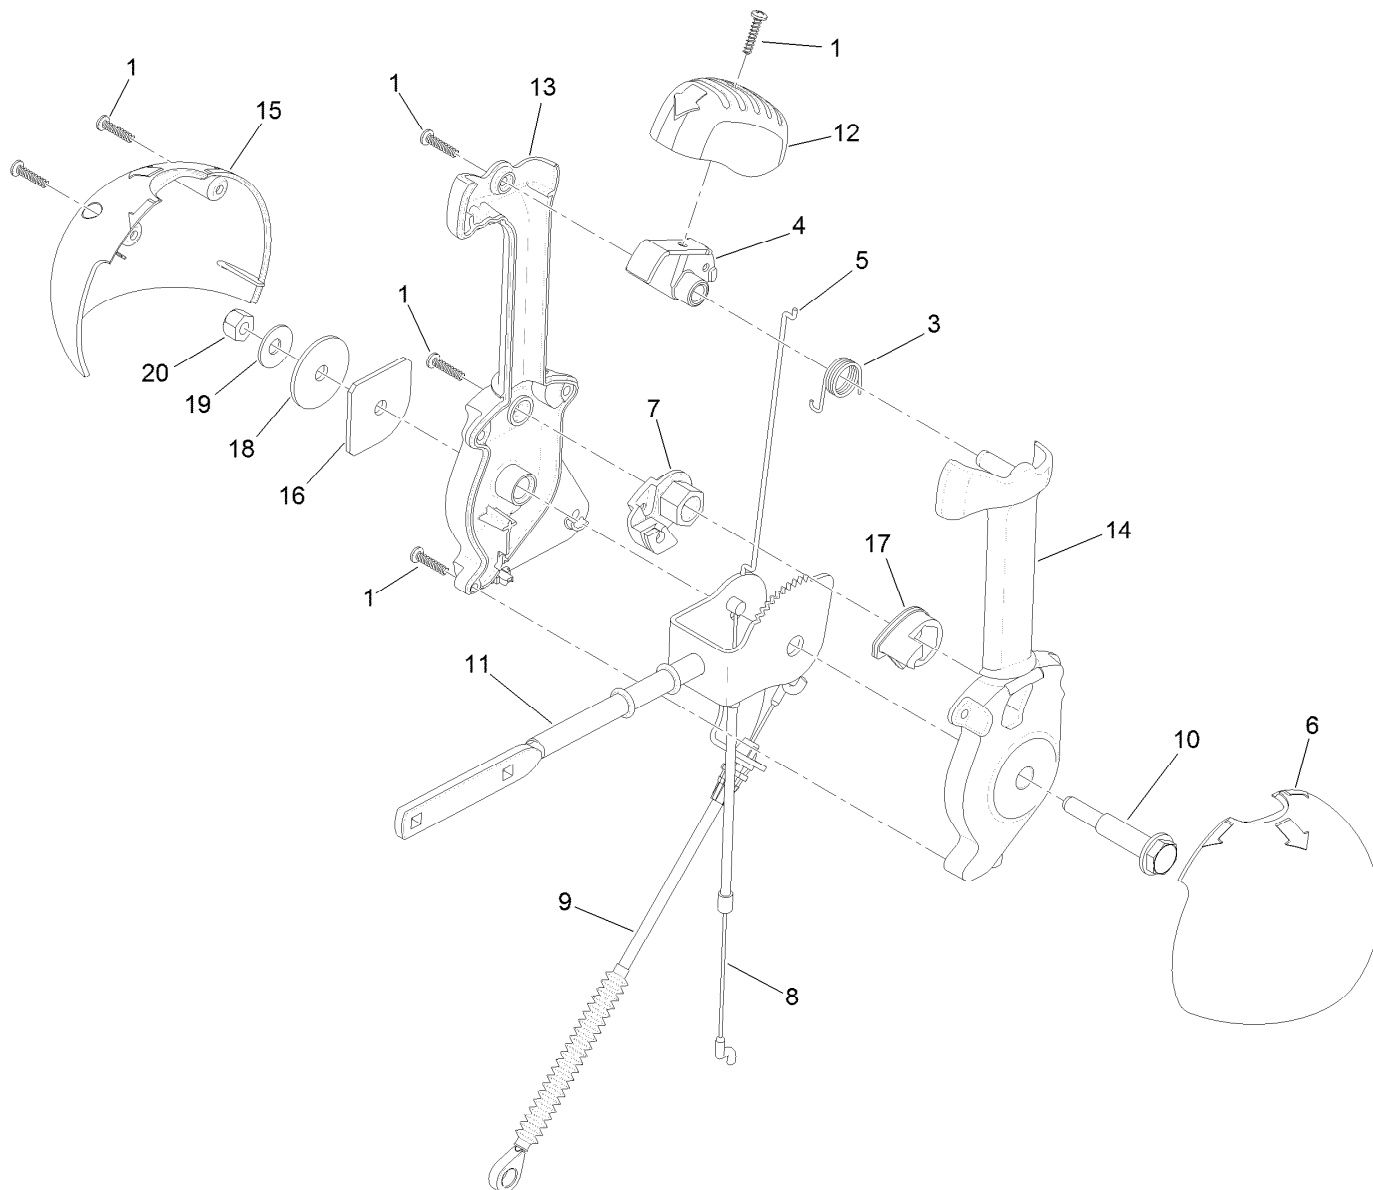 

Lever Chute Control Assembly

Ref.	Part Number	Qty.	Description
1	94-4496	6	Screw-PPH
3	105-9982	1	Spring-Torsion
4	105-9984	1	Trigger-Latch
5	105-9985	1	Link-Latch
6	105-9986	1	Cover-Chute Lever, LH
7	105-9988	1	Lever-Cable, Deflector
8	125-1113	1	Cable-Release, Chute
9	105-9990	1	Cable-Control, Deflector
10	105-9995	1	Screw-Shoulder
11	106-4479	1	Rod-Control, Chute


Ref.	Part Number	Qty.	Description
12	106-7280	1	Cap-Lever
13	106-7281	1	Lever-Chute Control, RH
14	106-7282	1	Lever-Chute Control, LH
15	106-7292	1	Cover-Chute Lever, RH
16	106-7295	1	Plate-Friction
17	106-7310	1	Pawl-Latch
18	107-3002	1	Washer-Nylon
19	3290-456	1	Washer-Belleville
20	3296-29	1	Nut-Lock, NI

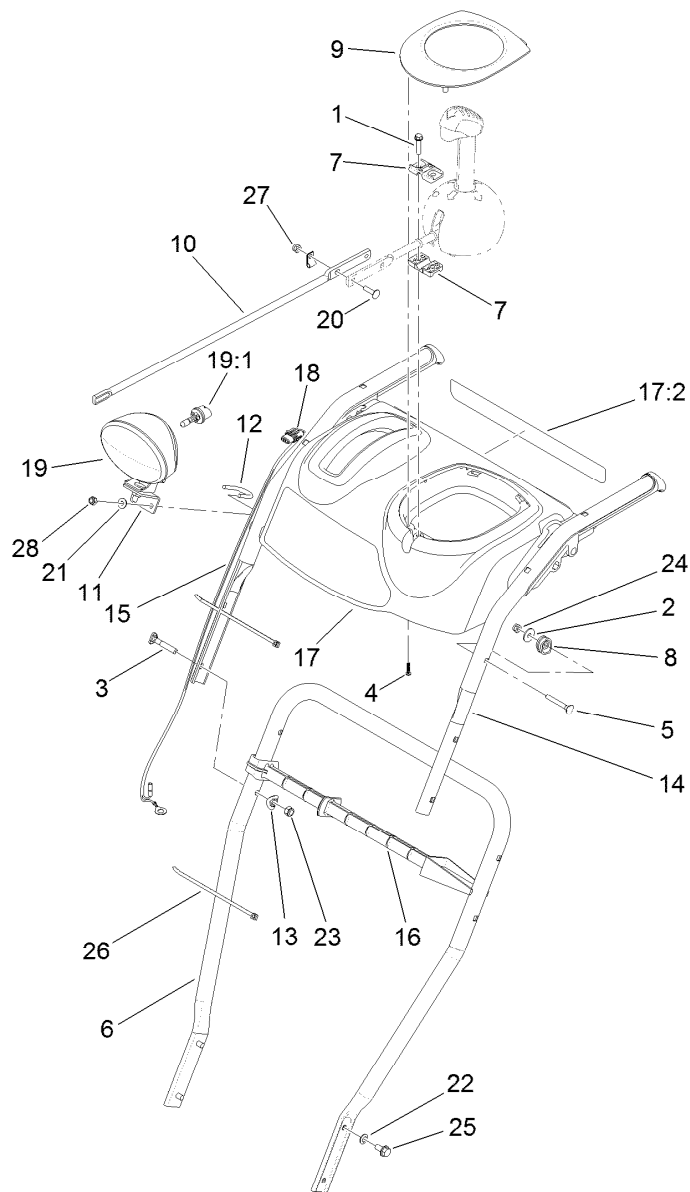 

Lower Handle and Headlamp Assembly

Ref.	Part Number	Qty.	Description
1	46-8092	2	Screw-Plastite
2	87-6630	2	Washer-Plain
3	92-2260	4	Screw-Handle
4	94-4496	2	Screw-PPH
5	95-4453	2	Screw
6	105-9981-03	1	Handle-Lower
7	105-9987	2	Support-Rod
8	106-4509	2	Clamp-Cable
9	106-4586	1	Cover-Panel, Control
10	106-7283	1	Rod-Chute, Front
11	107-1020-03	1	Bracket-Light
12	107-3024	1	Clamp
13	107-3844	4	Washer
14	108-0037-03	1	Handle-Upper, LH
15	108-0038-03	1	Handle-Upper, RH


Ref.	Part Number	Qty.	Description
16	110-3408	1	Stick-Cleanout
17	112-6633	1	Panel-Control
17:2	112-6627	1	Decal-Back, Control Panel
18	120-3062	1	Harness-Wire, Headlight
19	120-3074	1	Headlamp ASM
19:1	120-3075	1	Lamp-12 Volt
20	3229-30	2	Screw-CARR
21	3256-1	2	Washer-Flat
22	3290-475	4	Washer-Belleville
23	3296-72	4	Nut-Lock, NI
24	3296-73	2	Nut-Lock, NI
25	32144-14	4	Screw-HWHTF
26	614249	2	Tie-Cable
27	3296-73	2	Nut-Lock, NI
28	3296-73	2	Nut-Lock, NI

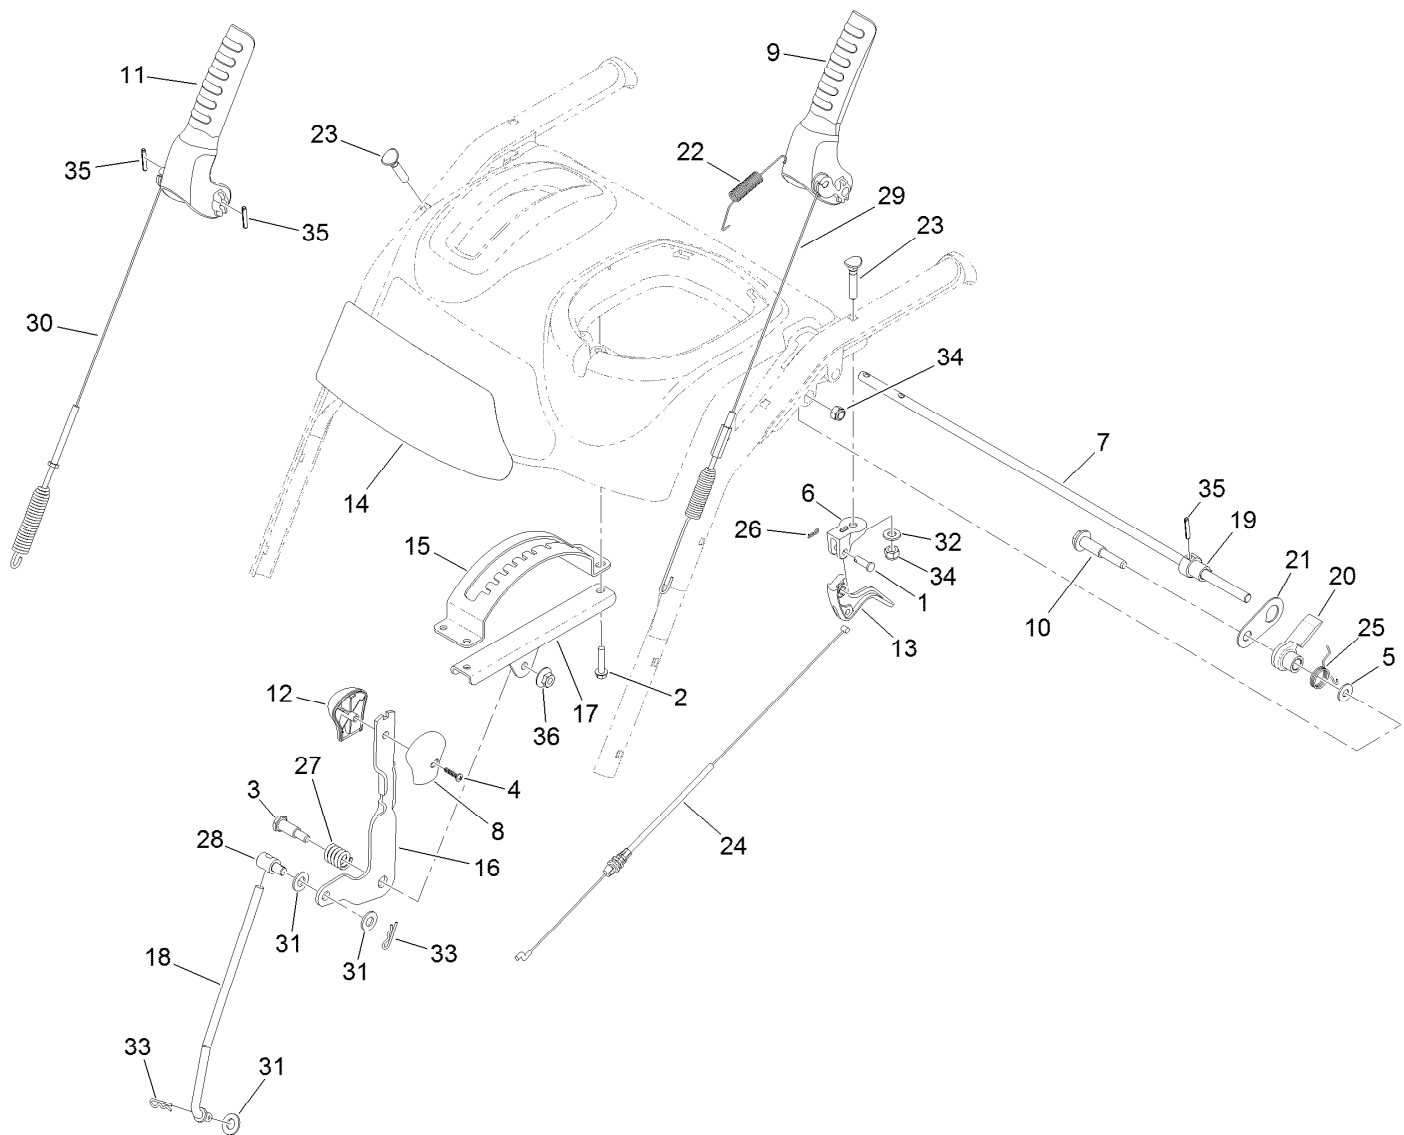 

Controls Assembly

Ref.	Part Number	Qty.	Description
1	1-808265	2	Pin-Clevis
2	46-8092	4	Screw-Plastite
3	63-2650	1	Screw-Shoulder
4	94-4496	1	Screw-PPH
5	98-3499	1	Washer-Flat
6	105-9980	2	Mount-Clutch, Lever
7	105-9996	1	Rod-Lockout
8	105-9999	1	Knob-Shift, LH
9	106-4410	1	Lever-Traction
10	106-4412	1	Screw-Shoulder
11	106-4413	1	Lever-Auger
12	106-4423	1	Knob-Shift, RH
13	106-4505	2	Lever-Clutch
14	121-6641	1	Decal-Control Panel
15	106-7277-03	1	Guide-Selector, Speed
16	106-7278-03	1	Selector-Speed
17	106-7279-03	1	Mount-Selector, Speed
18	107-1005	1	Rod-Shift

Ref.	Part Number	Qty.	Description
19	107-1043	1	Cam-Lockout
20	108-0023	1	Latch-Lockout
21	107-3000	1	Link-Lockout
22	107-3001	1	Spring-Tension
23	107-3018	4	Screw-Handle
24	107-8896	2	Cable-Clutch
25	108-0024	1	Spring-Torsion
26	108-2992	2	Pin-Hair
27	108-7313	1	Spring-Compression
28	110-3446	1	Trunnion-Rod
29	120-0132	1	Cable-Traction
30	120-3086	1	Cable-Auger
31	3256-24	3	Washer-Flat
32	3256-70	4	Washer-Flat
33	3290-307	2	Pin-Hair
34	3296-72	5	Nut-Lock, NI
35	32121-125	3	Pin-Spring
36	32128-13	1	Nut-HHF

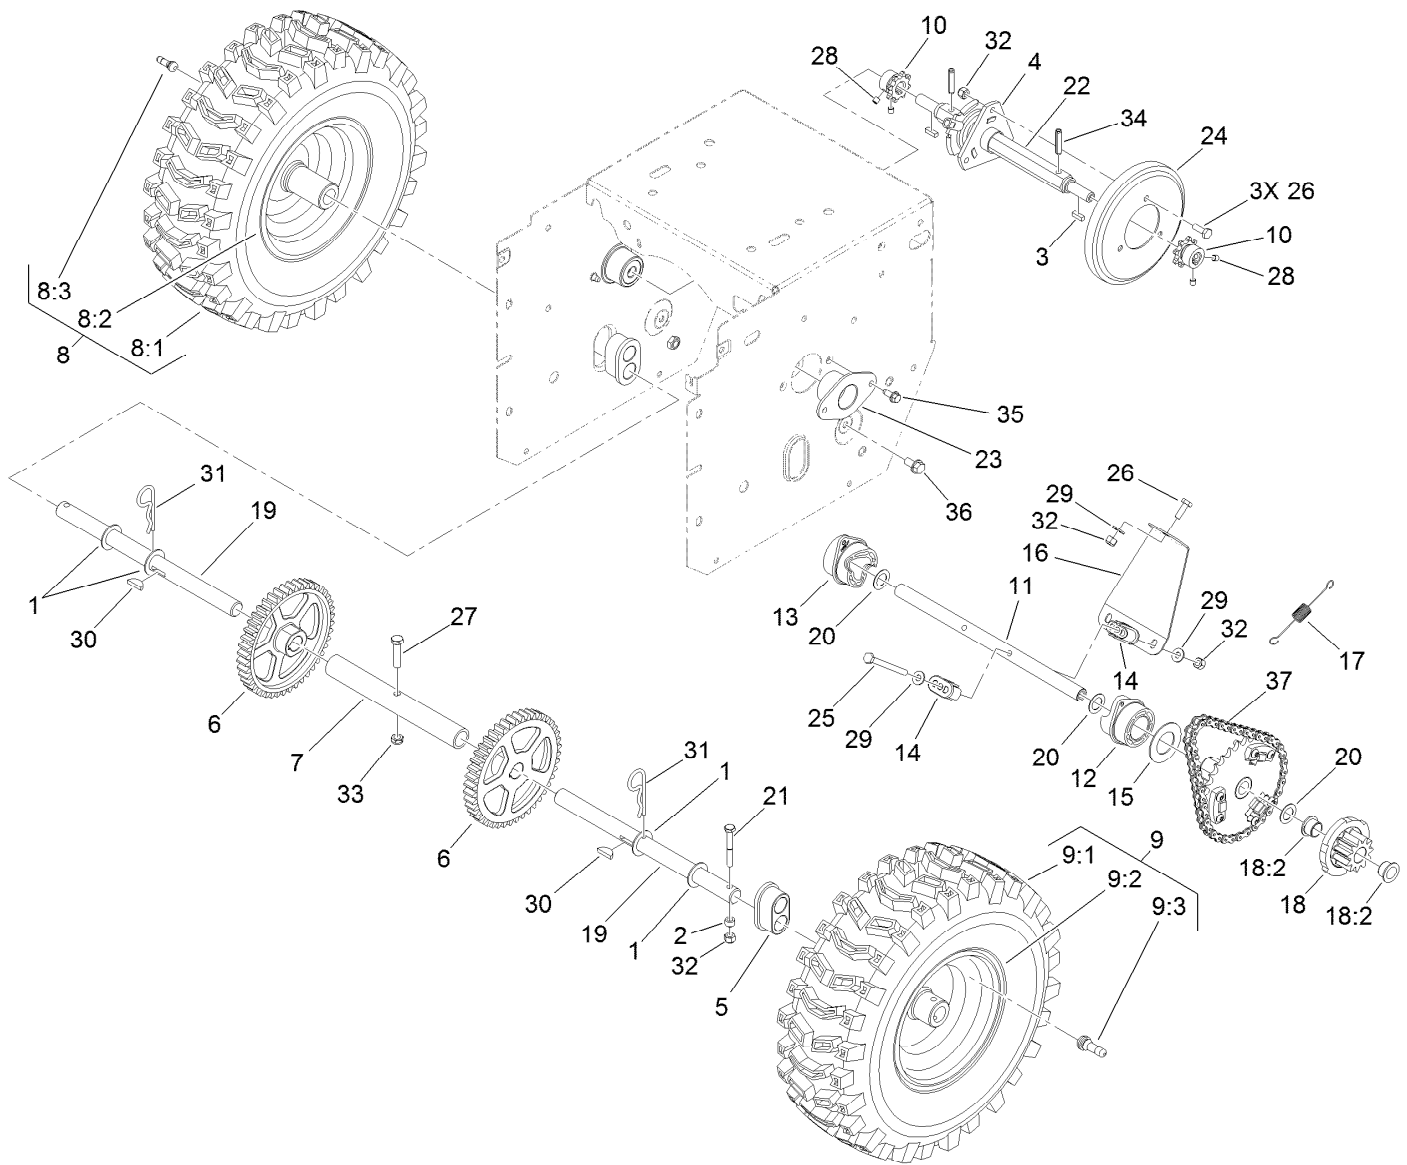 


Wheel Clutch Assembly

Ref.	Part Number	Qty.	Description
1	3-8664	4	Washer-Thrust
2	55-9370	2	Spacer-Blade, Rotor
3	94-8850	2	Key-Square
4	106-4434	1	Trunnion-Hex
5	106-4558	2	Bearing-Axle
6	106-4572	2	Gear-Axle, 44 Tooth
7	106-7259	1	Tube-Axle
8		1	RH Wheel And Tire ASM ●
8:1	107-3042	1	Tire
8:2	107-3043	1	Rim-Tire
8:3	232-27	1	Stem-Valve
9		1	LH Wheel And Tire ASM ●
9:1	107-3042	1	Tire
9:2	107-3043	1	Rim-Tire
9:3	232-27	1	Stem-Valve
10	106-7317	2	Sprocket-8 Tooth
11	107-8883	1	Shaft-Intermediate
12	107-8887	1	Collar-Shift, LH

Ref.	Part Number	Qty.	Description
13	107-8888	1	Collar-Shift, RH
14	107-8889	4	Guide-Collar
15	107-8891	2	Washer-Thrust
16	107-8892-03	1	Brace-Collar, Shift
17	107-8893	2	Spring-Extension
18	107-8894	2	11T Gear ASM
18:2	108-2973	2	Bushing-Flange
19	107-8898	2	Shaft-Axle
20	108-0015	4	Washer-Flat
21	108-2975	2	Screw-HH
22	108-7314	1	Shaft-Hex
23	108-7319	2	Retainer-Bearing
24	119-1567	1	Wheel-Friction
25	321-23	2	Screw-HH
26	321-4	4	Screw-HH
27	322-17	1	Screw-HH
28	3245-32	4	Screw-HSH
29	3256-22	5	Washer-Flat

 ● Not serviced separately

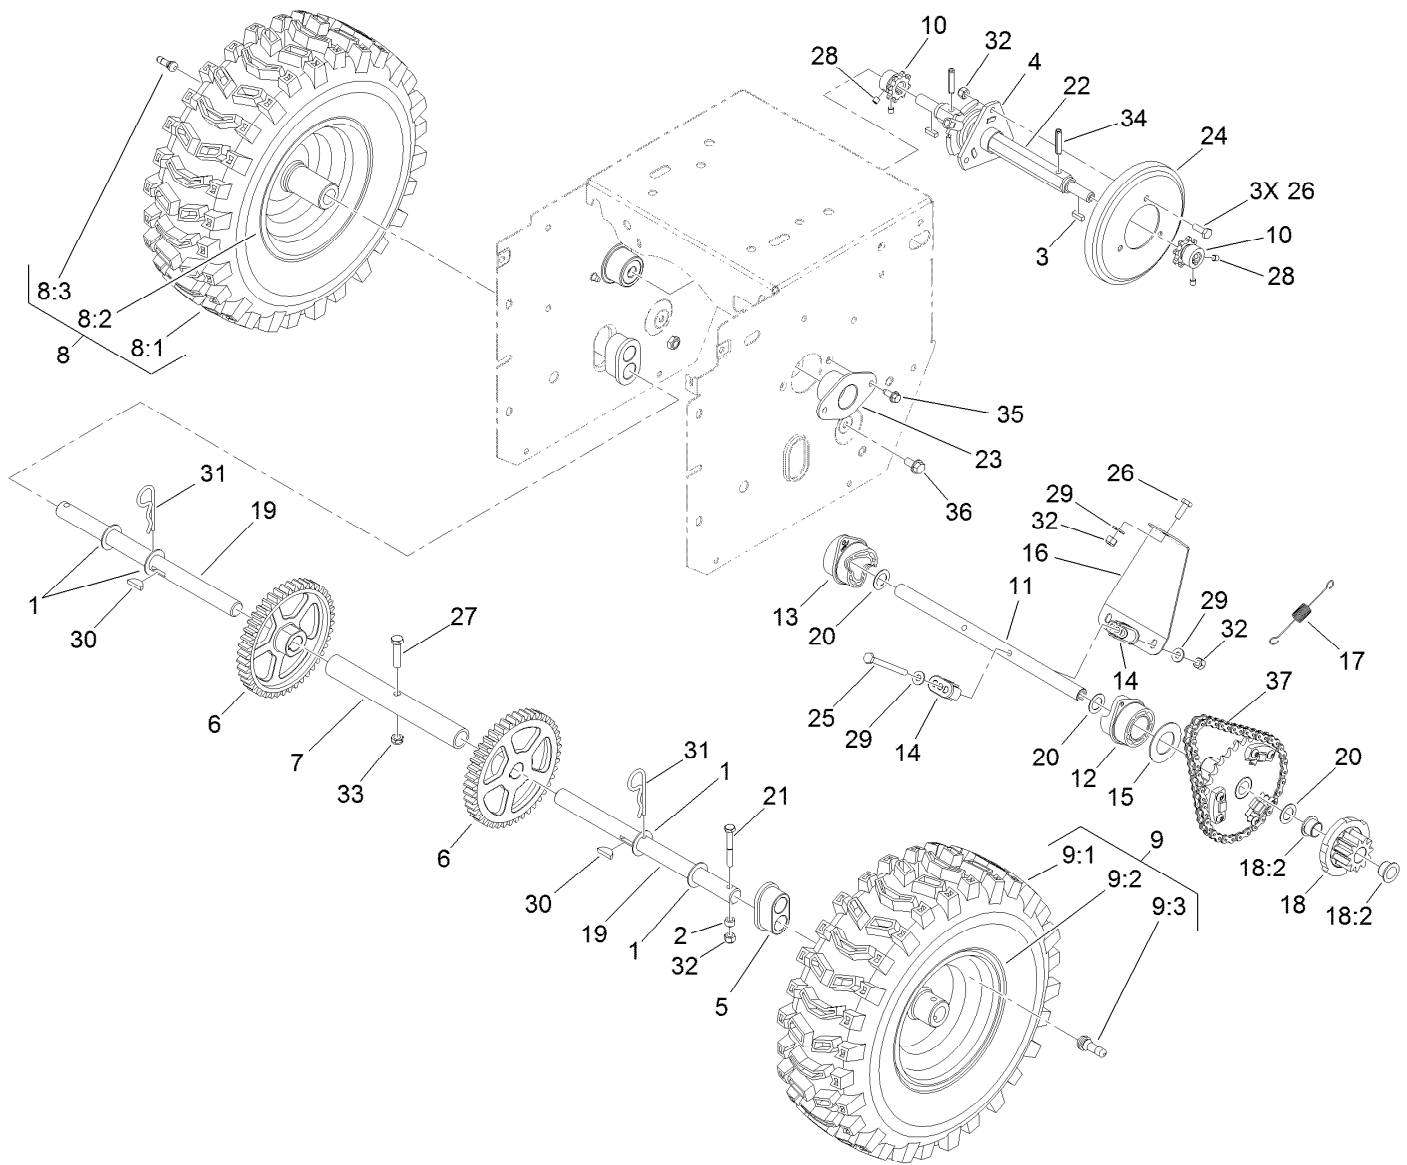


Wheel Clutch Assembly (continued)

Ref.	Part Number	Qty.	Description
30	3257-7	2	Key-Woodruff
31	3290-343	2	Pin-Hair
32	3296-42	8	Nut-Lock, NI
33	3296-47	1	Nut-Lock, NI
34	32121-9	2	Pin-Roll, Slotted

Ref.	Part Number	Qty.	Description
35	32144-10	4	Screw-HWH
36	32144-14	2	Screw-HWHTF
37	108-0016	2	Chain-Roller
37	2710-6	2	Link-Connecting

 ● Not serviced separately

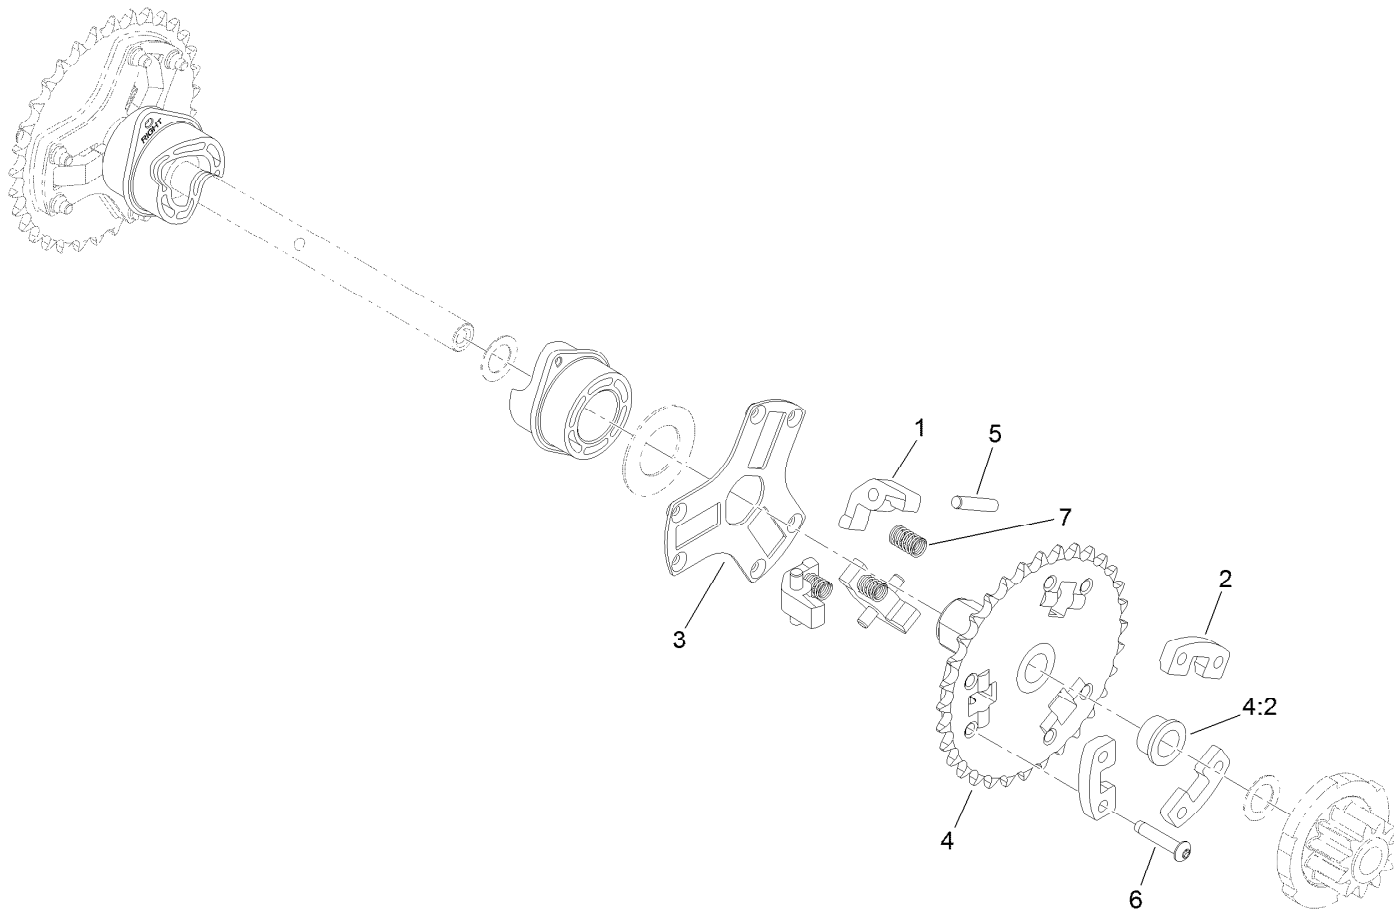

Wheel Clutch Sprocket Assembly

Ref.	Part Number	Qty.	Description
1	107-8879	6	Pawl-Clutch
2	107-8880	6	Support-Pawl
3	107-8886	2	Retainer-Pin, Pawl
4	107-8895	2	32T Sprocket ASM
4:2	108-2973	2	Bushing-Flange
5	107-8899	6	Pin-Dowel
6	108-0035	12	Screw-Torx Button Head
7	107-8885	6	Spring-Compression

Attachments and Accessories

For 38820 Power Max HD 926 OXE Snowthrower

Product Name	Model/Part
Tire Chain Kit	107-3813
Snow Cab	107-3814
Weight Kit	107-3815
26in Drift Breaker	107-3816
Heavy-Duty Skid Kit.....	125-1104
Non-Marking Skid Kit.....	38211
Toro 2-Stage Cover.....	490-7466
Plain 2-Stage Cover.....	490-7467

Notes:



Count on it.