




**T4240 4-Wheel Drive 5-Plex Tractor Unit**  
Model No. 02750—Serial No. 31500001 and Up

Model No. 02750

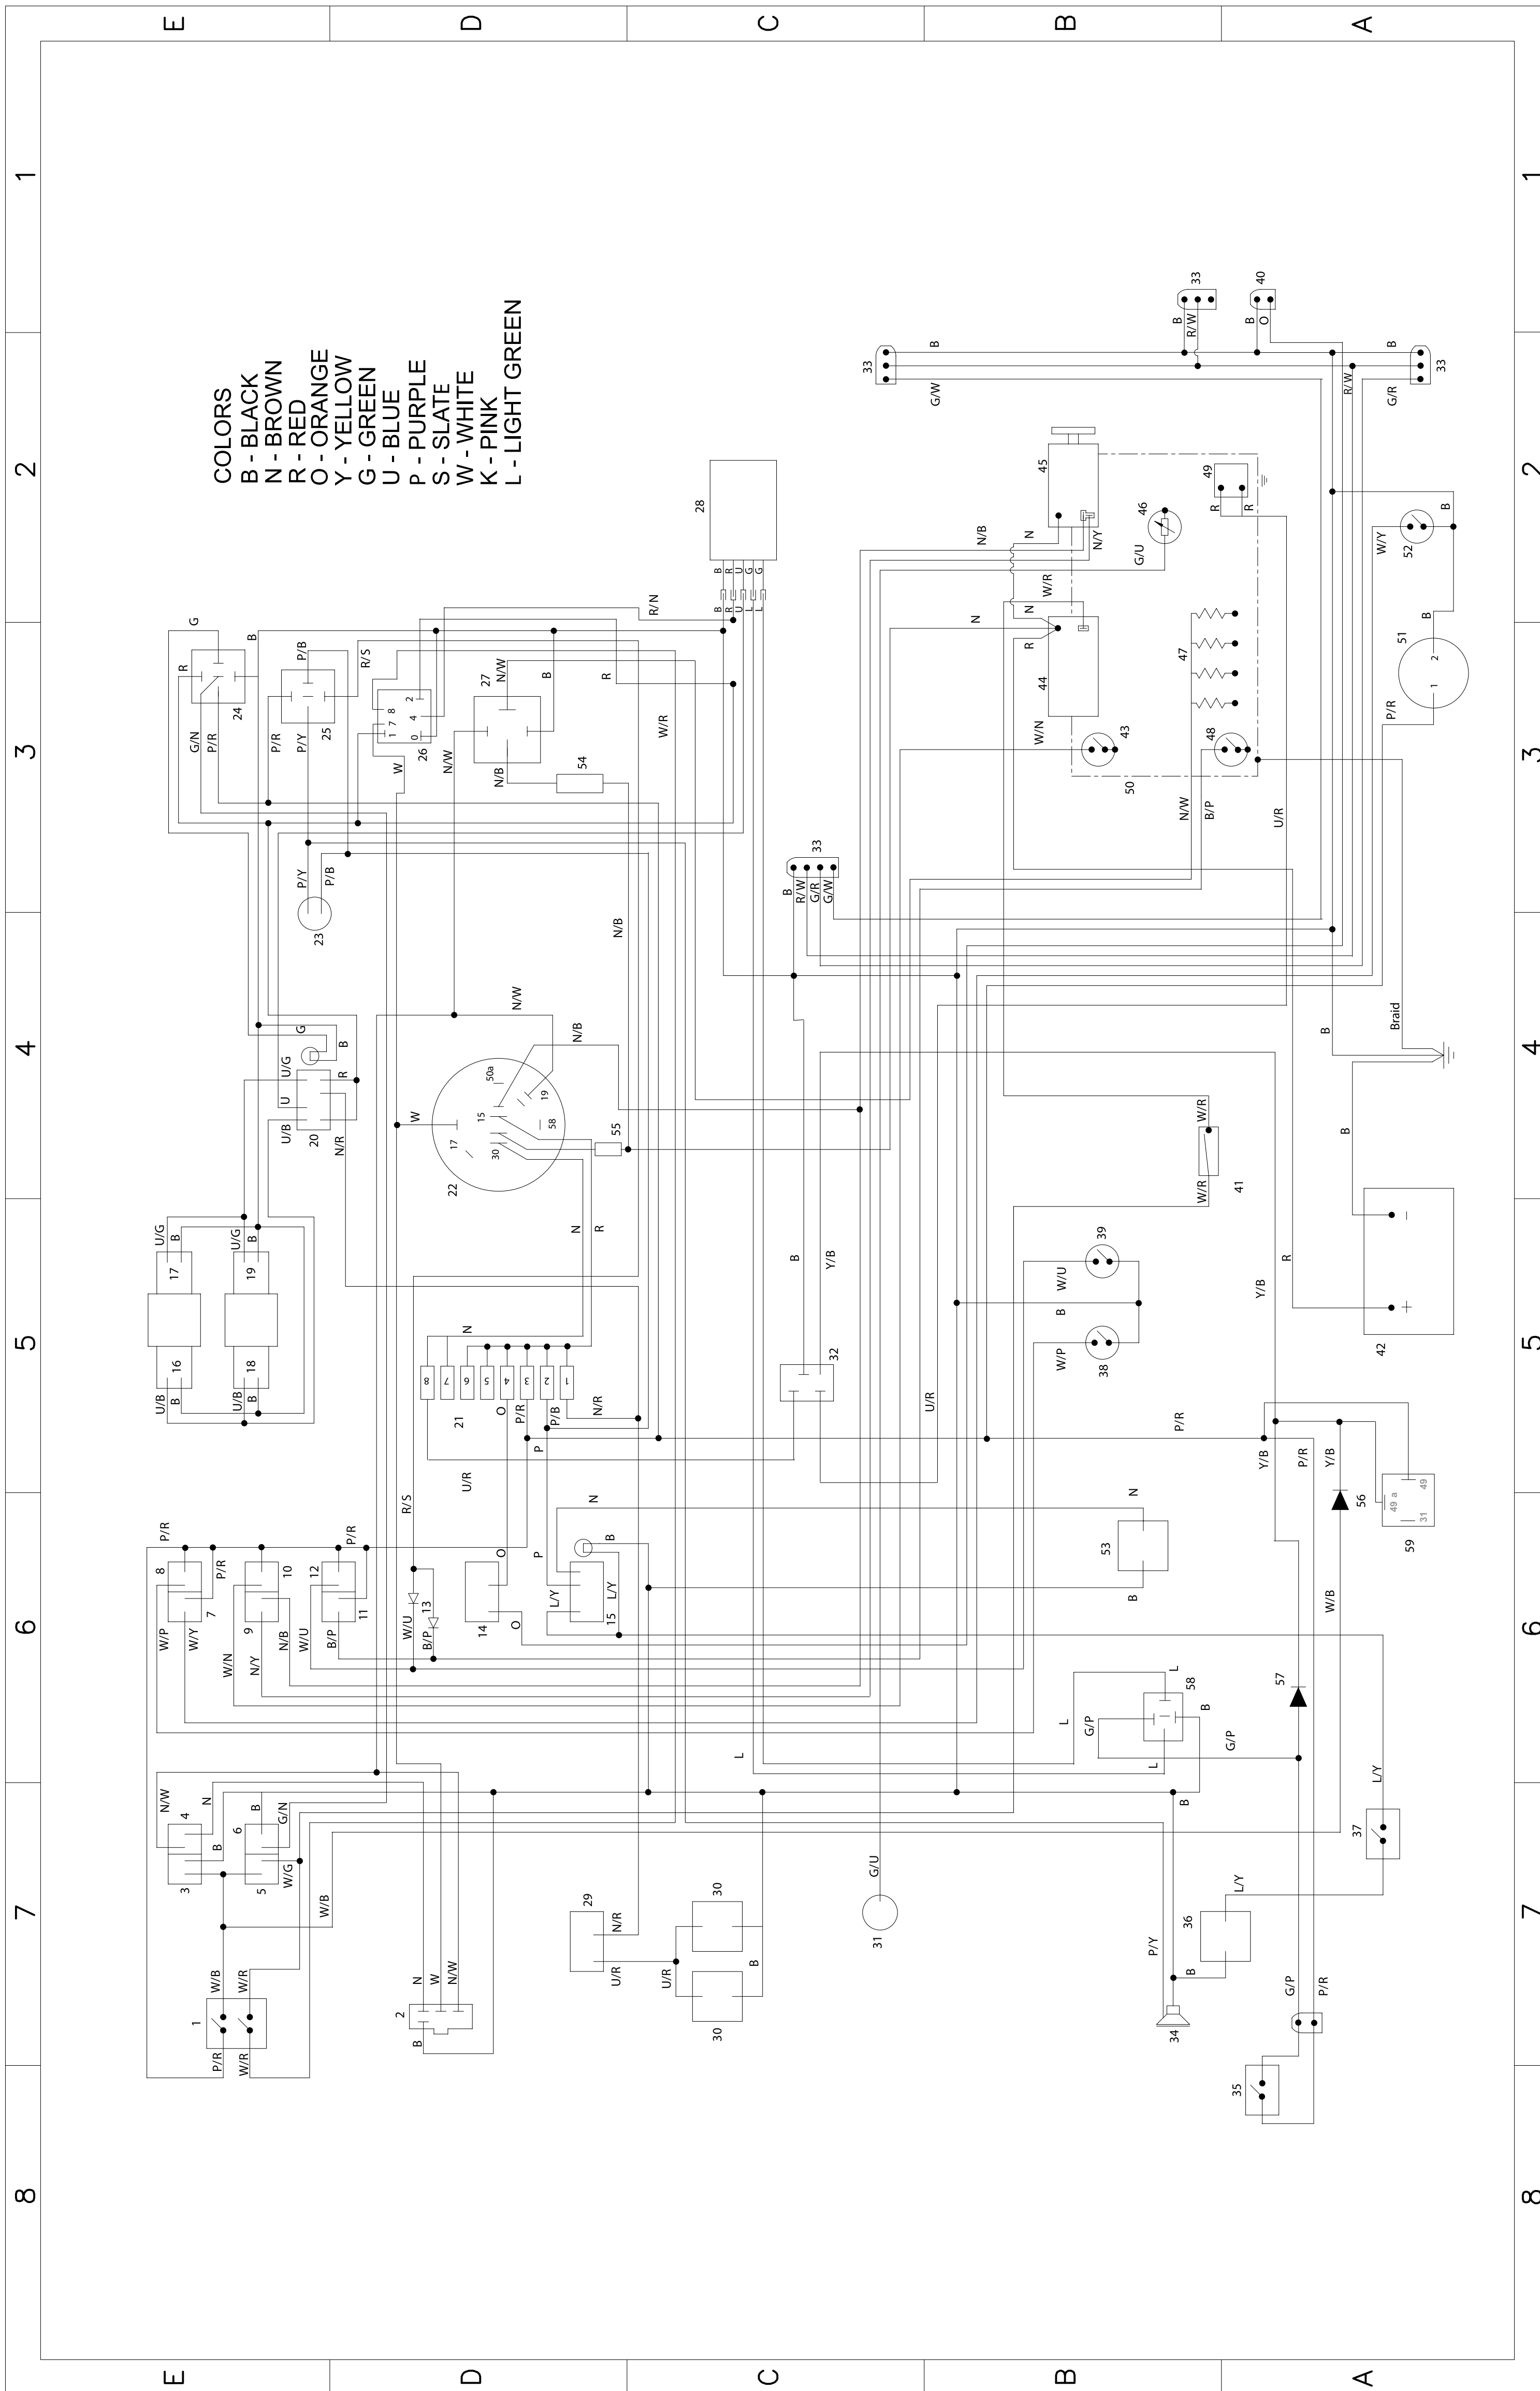

- |  |  |  |  |
|--|--|--|--|
| 1. Switch—parking-brake interlock (950865)           | 4. Blank (beacon)                                      | 29. Switch—cutting unit lift configuration (924608)    | 53. Solenoids—work/transport mode (910627) |
| 2. Glow-plug timer (15694-65992)                     | 5. Blank (cab wipers or air-suspension seat)           | 30. Solenoids—lift configuration (63-06-082)           | 54. Fuse—engine glow plugs, 60A            |
| 3. Light—parking brake (924601/950858)               | 6. Blank (lighting kit)                                | 31. Temperature-gauge kit (obsolete)                   | 55. Fuse—main, 60A                         |
| 4. Light—glow plugs (924601/950857)                  | 7. Blank (lighting kit)                                | 32. Relay—fuel solenoid (16259-60250)                  | 56. Diode—parking brake (950868)           |
| 5. Light—Neutral (924601/950862)                     | 8. 30A—engine start (fuel solenoid) (70-09-027)        | 33. Connectors for lighting kit                        | 57. Diode—seat switch (950868)             |
| 6. Light—cutting unit, drive off (924601/950861)     | 22. Switch—Ignition (74-09-009)                        | 34. Horn (70-09-108)                                   | 58. Relay—seat switch (70-09-148)          |
| 7. Light—return filter (924601/950866)               | 23. Switch—horn (924616)                               | 35. Switch—operator seat (111-0410)                    | 59. Delay Module—seat (924722)             |
| 8. Light—pressure filter (924601/950863)             | 24. Relay—cutting unit drive warning lamps (70-09-148) | 36. Solenoid—differential lock (910627)                |  |
| 9. Light—battery warning (924601/924605)             | 25. Relay—overheat audible warning (70-09-148)         | 37. Switch—differential lock (994860)                  |  |
| 10. Light—engine oil pressure (924601/924606)        | 26. Relay—neutral start (995718)                       | 38. Switch—pressure filter                             |  |
| 11. Light—engine coolant temperature (924601/924602) | 27. Relay—glow plugs (924625)                          | 39. Switch—hydraulic oil temperature (940852)          |  |
| 12. Light—hydraulic oil temperature (924601/924603)  | 28. Timer—operator presence interlock (70-01-512)      | 40. Connection for beacon kit                          |  |
|  |  | 41. Switch—neutral/starter interlock (111-0143)        |  |
|  |  | 42. Battery (70-09-015)                                |  |
|  |  | 43. Switch—engine oil pressure                         |  |
|  |  | 44. Starter motor                                      |  |
|  |  | 45. Alternator/regulator                               |  |
|  |  | 46. Engine temperature sender (supplied with temp kit) |  |
|  |  | 47. Glow plugs   |  |
|  |  | 48. Switch—engine overheat                             |  |
|  |  | 49. Solenoid—fuel (1A021-60014)                        |  |
|  |  | 50. Engine (950950)                                    |  |
|  |  | 51. Hour meter (910850)                                |  |
|  |  | 52. Switch—return filter                               |  |