



Form No. 3393-312 Rev A

Count on it.

Parts Catalog

Chemical Pre-Mix Kit Multi Pro® WM Turf Sprayer

Model No. 41244—Serial No. 315000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HP: high pressure

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: low pressure

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head


Contents

Eductor Mount Assembly 4

Eductor, Hose and Valve Assembly 5

Eductor Valve Assembly No. 130-7324 7


Eductor Assembly No. 127-2949..... 8

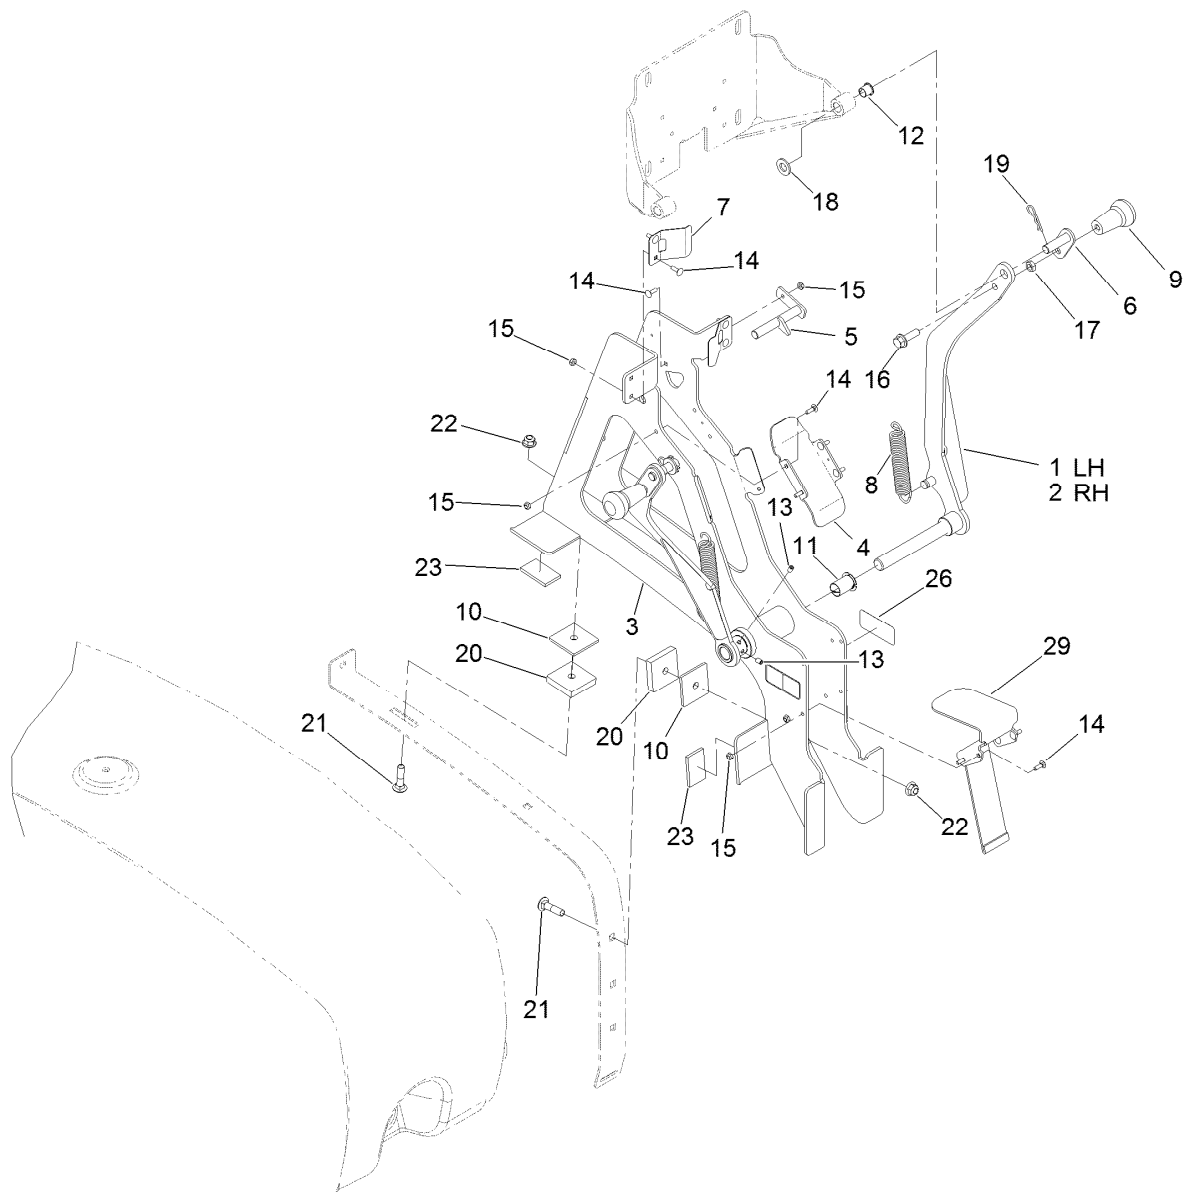

Educator Mount Assembly

Ref.	Part Number	Qty.	Description
1	119-4907-03	1	Arm-Pivot, LH
2	119-4908-03	1	Arm-Pivot, RH
3	125-0962-03	1	Mount-Educator
4	119-4962	1	Plate-Strike
5	120-8640	1	Latch-Rod
6	120-0718	2	Pivot-Pin
7	119-4951	2	Tab-Spring
8	120-0722	2	Spring-Extension
9	99-7981	2	Knob-Grip, Soft
10	125-0960	2	Spacer-Educator
11	100-8541	2	Bushing-A Arm
12	256-257	2	Bushing-Nyliner
13	3245-41	2	Screw-HSH


Ref.	Part Number	Qty.	Description
14	1-807533	13	Bolt-CARR
15	3296-12	13	Nut-Lock, NI
16	3234-24	2	Screw-HHF
17	3218-3	2	Nut-Jam
18	106-9888	2	Washer-Flat
19	3290-467	2	Pin-Hair
20	125-0974	2	Spacer-Educator
21	3231-4	2	Screw-CARR
22	104-8301	2	Nut-Flange, NI
23	120-4944	4	Pad-Foam
26	93-6674	2	Decal-Warning
29	127-3947	1	Plate-Guide

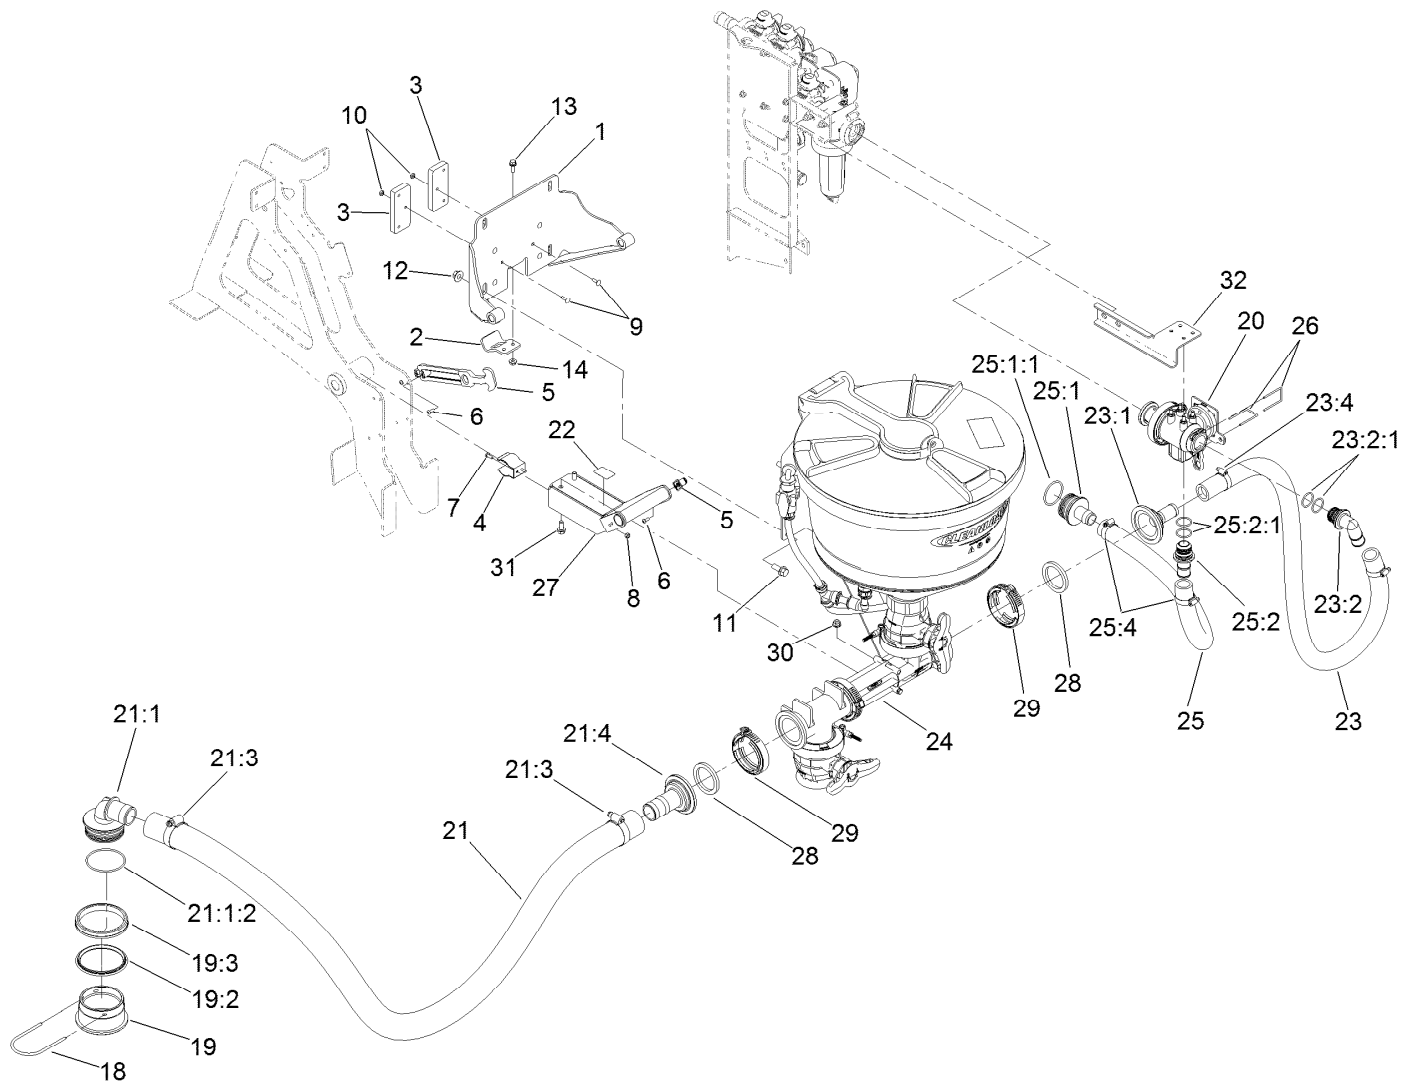

Eductor, Hose and Valve Assembly


Ref.	Part Number	Qty.	Description
1	119-4912-03	1	Plate-Pivot
2	119-4928	1	Bracket-Latch
3	119-4963	2	Pad-Wear
4	119-4937	1	Clip-Spring
5	115-8215	1	Draw Latch ASM
6	115-9830	3	Screw-HSBH
7	3250-12	2	Screw-PPH
8	3296-2	2	Nut-Lock, NI
9	1-807533	6	Bolt-CARR
10	3296-12	6	Nut-Lock, NI
11	3234-11	4	Screw-HHF
12	32128-43	4	Nut-Flange
13	3234-4	2	Screw-HHF
14	32128-33	2	Nut-HF
18	117-7996	1	Fork
19	117-7851	1	Bulkhead ASM
19:2	100-8646	1	Gasket-Bulkhead
19:3	100-8647	1	Nut-Bulkhead
20	130-7324	1	Eductor Valve ASM
21	127-9737	1	Eductor Hose ASM
21:1	117-7870	1	Hosebarb ASM

Ref.	Part Number	Qty.	Description
21:1:2	100-6989	1	O-Ring
21:3	41327	2	Clamp-Hose
21:4	125-5895	1	Fitting-Hose Barb
22	119-4988	1	Decal-Lock
23	131-5840	1	Supply-Hose ASM
23:1	125-5894	1	Fitting-Hose Barb
23:2	131-3727	1	Fitting-Valve, Eductor
23:2:1	131-0231	2	O-Ring
23:4	2412-34	2	Clamp-Hose
24	127-2949	1	Eductor ASM
25	131-5839	1	Main-Supply Hose, ASM
25:1	106-4932	1	Hosebarb-Straight
25:1:1	100-8637	1	O-Ring
25:2	131-0229	1	Fitting-Valve, Eductor
25:2:1	131-0231	2	O-Ring
25:4	2412-34	2	Clamp-Hose
26	131-0235	2	Fork-Fitting, Eductor Valve
27	127-5000-03	1	Handle-Eductor
28	127-5004	2	Gasket
29	127-5005	1	Clamp-Worm Screw
30	104-8300	2	Nut-Flange, NI

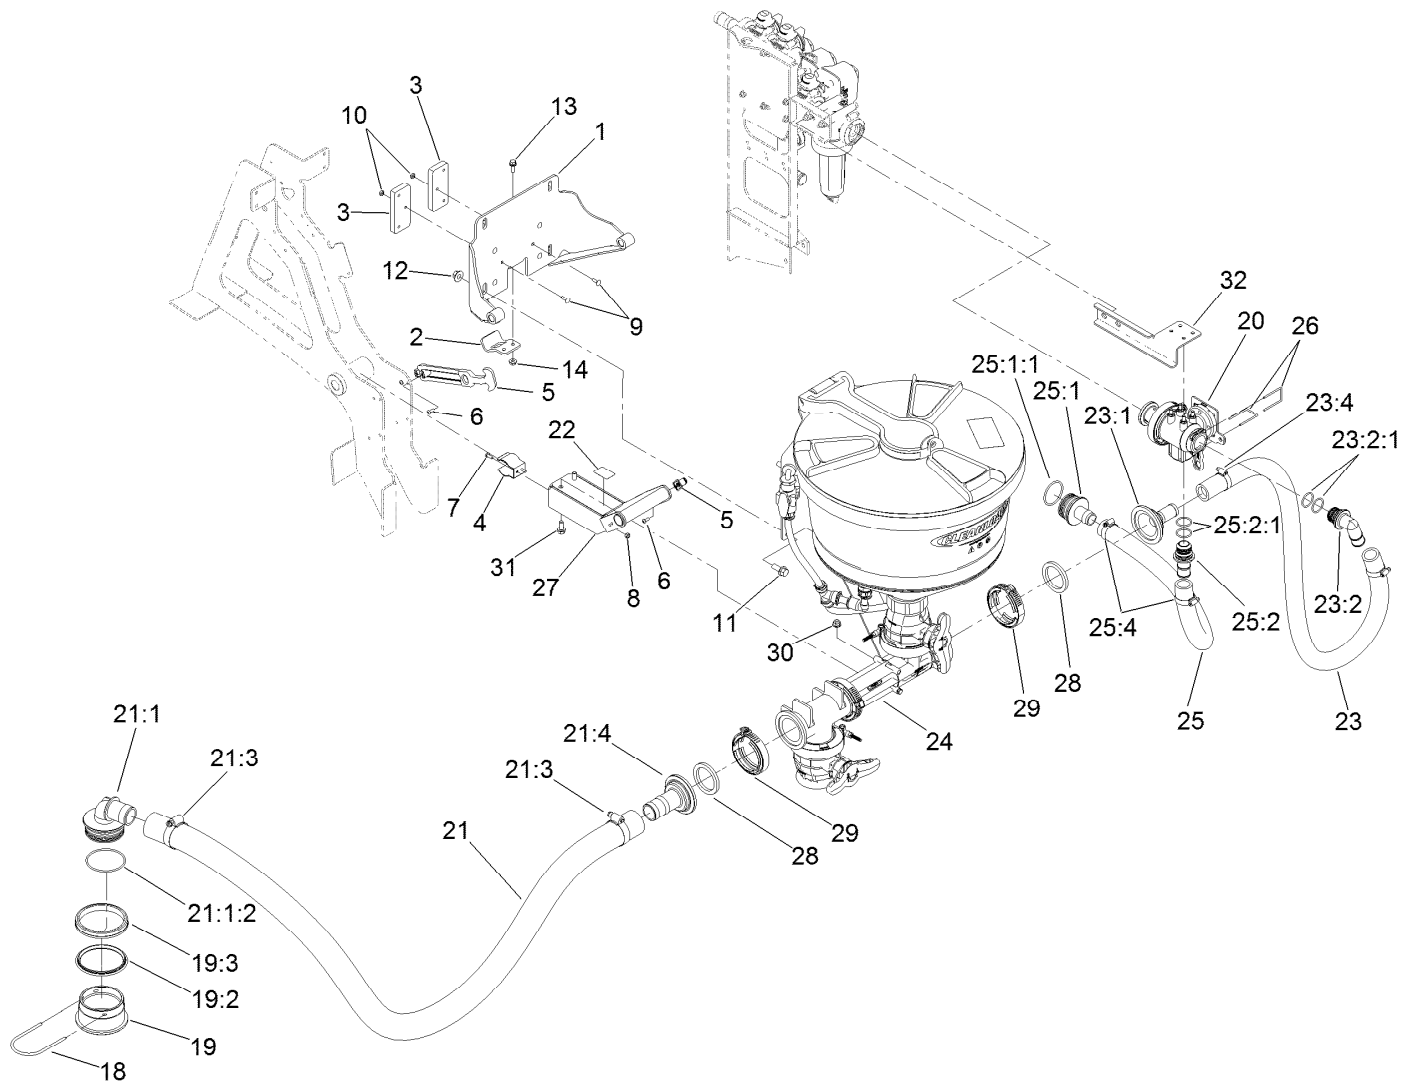

Eductor, Hose and Valve Assembly (continued)

Ref.	Part Number	Qty.	Description
31	3234-47	2	Screw-HHF
32	131-3725-03	1	Mount-Vave, Eductor

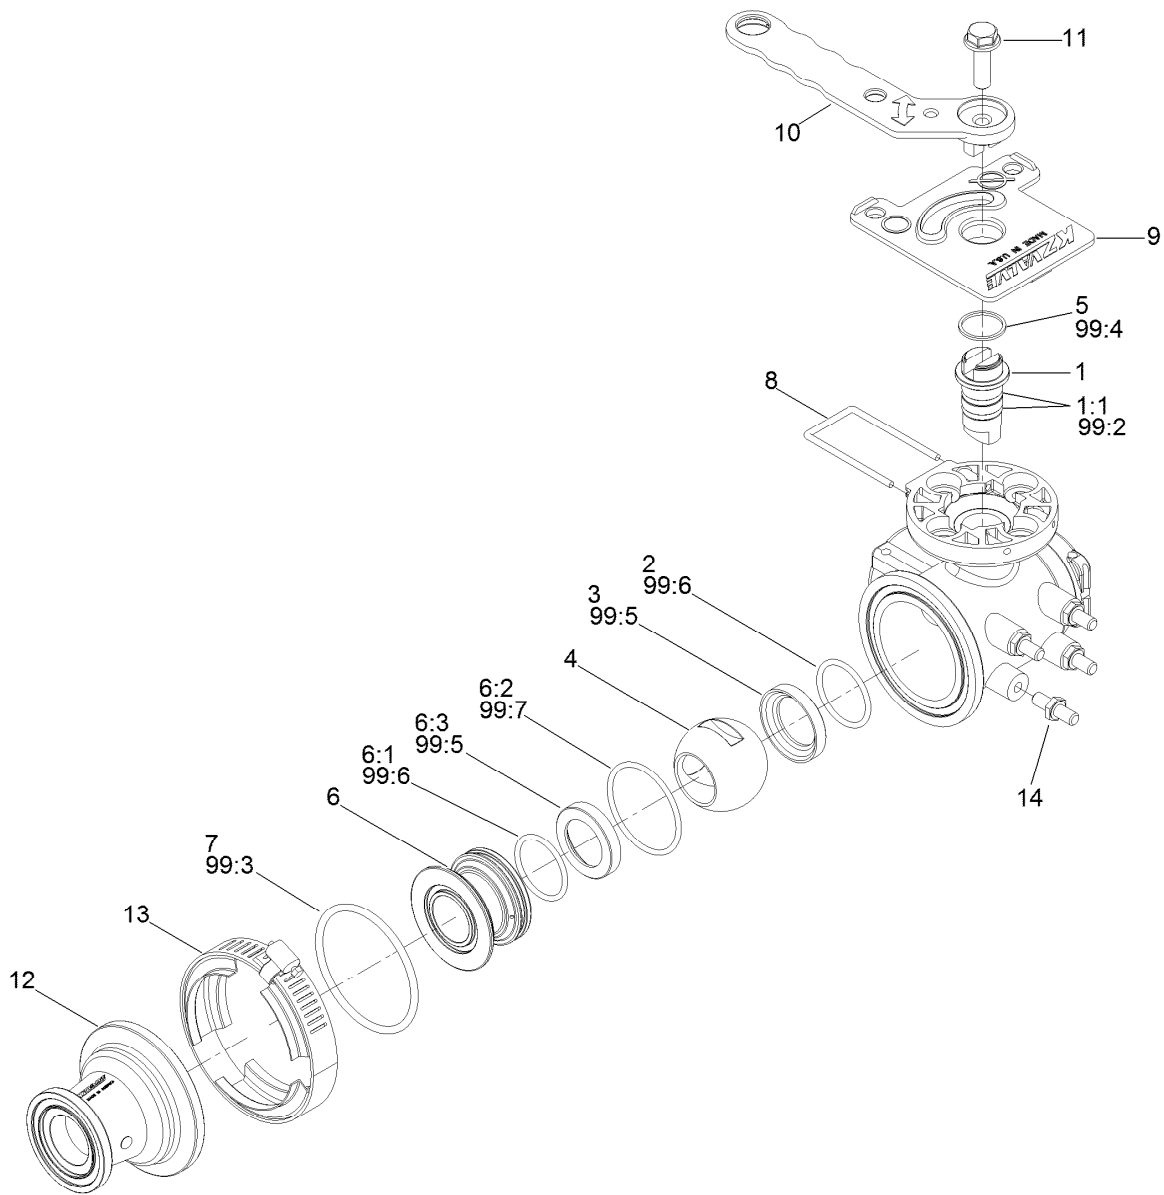


Eductor Valve Assembly No. 130-7324

Ref.	Part Number	Qty.	Description
1	131-0215	1	Stem-Valve, Eductor
1:1	131-0217	2	Oring-Stem, Valve
2	131-0218	1	Oring-Seat, Valve
3	131-0219	1	Seat-Valve, Eductor
4	131-0220	1	Ball-3Way, Eductor Valve
5	131-0221	1	Seat-Stem, Eductor Valve
6	131-0222	1	Cap-End, Eductor Valve
6:1	131-0218	1	Oring-Seat, Valve
6:2	131-0224	1	Oring-End Cap, Eductor
6:3	131-0219	1	Seat-Valve, Eductor
7	131-0225	1	Oring-Fitting
8	131-0226	1	Fork-Handle Plate
9	131-0232	1	Plate-Face, Eductor Valve

Ref.	Part Number	Qty.	Description
10	131-0233	1	Handle-Valve, Eductor
11	131-0234	1	Bolt-Faceplate, Eductor
12	127-1144	1	Fitting-Adapter
13	104-9089	1	Clamp-Screw, Worm
14	131-3799	4	Stud
99	131-3798	1	Repair Kit ●
99:2	131-0217	2	Oring-Stem, Valve
99:3	131-0225	1	Oring-Fitting
99:4	131-0221	1	Seat-Stem, Eductor Valve
99:5	131-0219	2	Seat-Valve, Eductor
99:6	131-0218	2	Oring-Seat, Valve
99:7	131-0224	1	Oring-End Cap, Eductor Valve

● Not illustrated

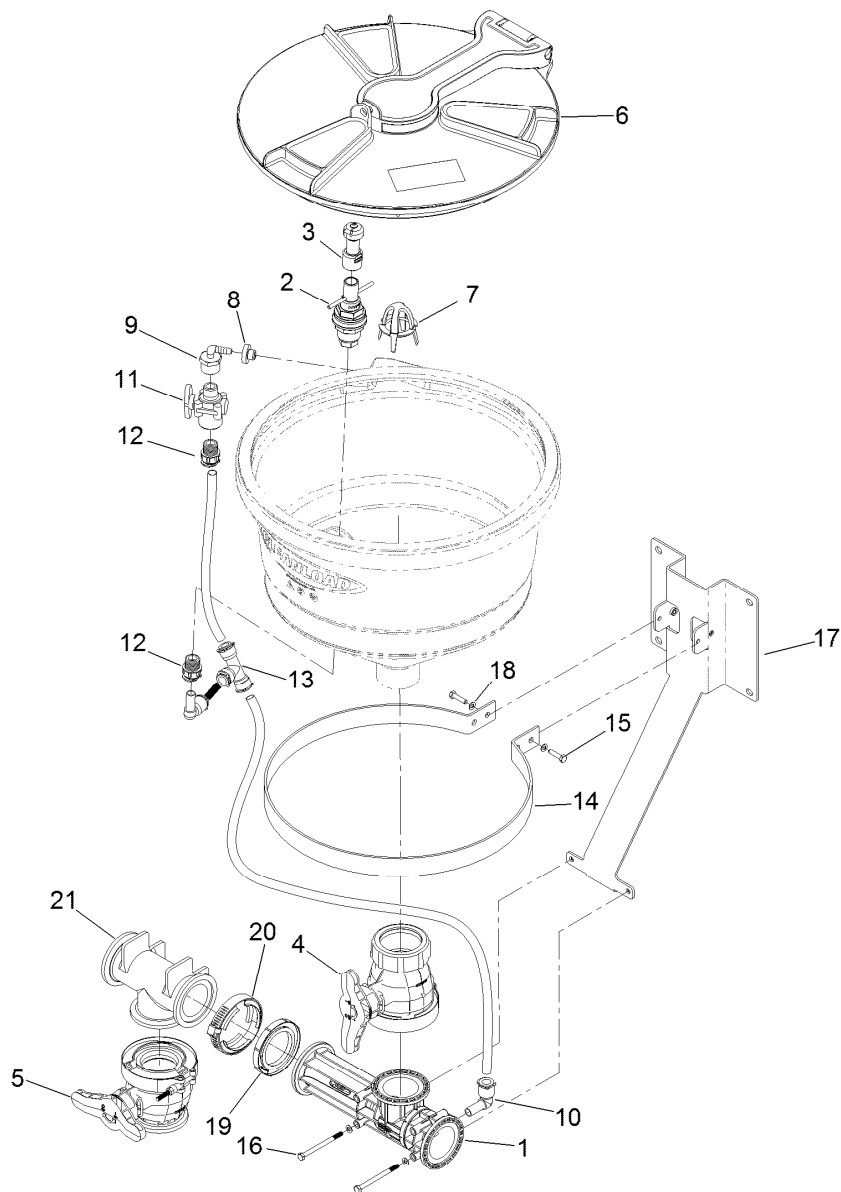

Eductor Assembly No. 127-2949

Ref.	Part Number	Qty.	Description
1	127-5027	1	Eductor
2	127-5042	1	Container-Rinse
3	127-5048	1	Nozzle-Rinse Container
4	127-6934	1	Valve-Tank
5	127-6923	1	Valve-Drain
6	127-6916	1	Lid
7	127-6939	1	Strainer
8	127-6900	1	Grommet
9	127-6904	1	Elbow-Fitting
10	127-6903	2	Elbow-Fitting
11	127-6905	1	Valve-Two Way

Ref.	Part Number	Qty.	Description
12	127-5049	2	Fitting
13	127-6906	1	Fitting-Tee
14	127-5030	1	Ring-Mounting
15	127-6922	2	Screw-HH
16	127-5031	2	Screw-HH
17	127-5029	1	Bracket
18	127-6938	4	Washer
19	127-6932	1	Gasket
20	127-5005	1	Clamp-Worm Screw
21	127-6941	1	Fitting-Tee

Notes:

Notes:

Notes:



Count on it.