Installation Instructions

A WARNING

CALIFORNIA

Proposition 65 Warning

This product contains a chemical or chemicals known to the State of California to cause cancer, birth defects, or reproductive harm.

Installation

Loose Parts

Use the chart below to verify that all parts have been shipped.

Procedure	Description	Qty.	Use
1	Seat and seat-pan assembly	1	Install the seat assembly.
2	No parts required	_	Test the safety-interlock system.




Installing the Seat Assembly

Parts needed for this procedure:

1 Seat and seat-pan assembly

Procedure


- 1. Tilt the seat up.
- 2. Disconnect the harness from the seat switch.

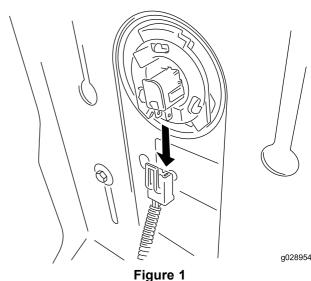

i iguie i




- Remove the existing seat and seat-pan from the machine (Figure 2).
- Install the new seat seat-pan assembly to the frame with the seat rod, 2 hairpin cotter pins, and 2 spacers (certain models only) (Figure 2).

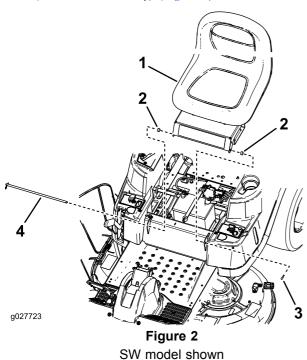

- Existing seat and seat-pan 3. Hairpin cotter pin assembly
- 2. Spacers (certain models only)
- 4. Seat rod with hairpin cotter pin installed

5. Connect the seat switch (Figure 3).

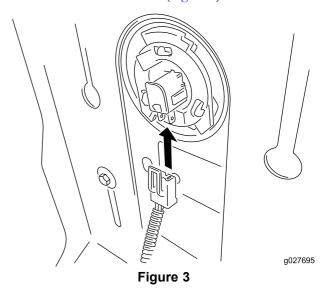

Testing the Safety-Interlock System

No Parts Required

Procedure

A CAUTION

If safety interlock switches are disconnected or damaged the machine could operate unexpectedly causing personal injury.

- Do not tamper with the interlock switches.
- Check the operation of the interlock switches daily and replace any damaged switches before operating the machine.

Refer to your Operator's Manual for the correct procedure to check the safety-interlock system.

Test the safety-interlock system before you use the machine each time. If the safety system does not operate as described below, have an Authorized Service Dealer repair the safety system immediately.

Operation

Positioning the Seat

The seat can move forward and backward. Position the seat where you have the best control of the machine and are most comfortable.

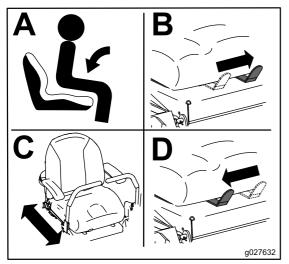


Figure 4
Control lever model shown

