



TimeCutter® SW 4200 Riding Mower

Model No. 74675—Serial No. 315000001 through 315000205

Form No. 3395-201 Rev A

Addendum

Note: Use this instruction sheet to check and change the engine speed for the machines with the serial numbers listed above. Discard this instruction sheet when finished.

Setting the Engine Speed

Note: Use a tachometer to test the engine speed.

1. Start and run the machine for ten minutes to warm the engine.
2. Set the machine to the maximum throttle position.
3. Engage the mower deck and check the engine speed with a tachometer.

Note: If loaded engine speed is greater than 2800 rpm, the unit needs to be adjusted. If the engine speed is equal to or less than 2800 rpm, no action is necessary.

4. Disengage the mower deck.
5. If the engine speed needs to be changed, locate the throttle plate assembly (Figure 1).

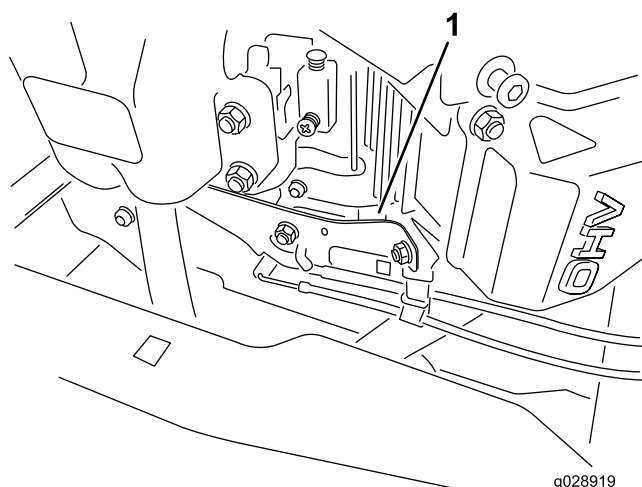


Figure 1

1. Throttle plate

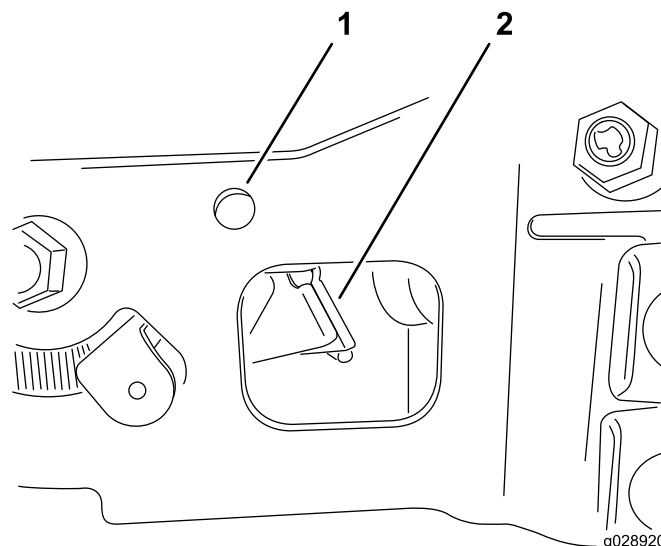


Figure 2

1. Install 4 mm (5/32 inch) drill bit or pin into this hole
2. Bend this tab to set the desired speed

6. Insert a 4 mm (5/32 inch) pin or drill bit into the locking hole (Figure 2).
- Note:** Inserting the pin makes bending the tab easier.
7. Use a needle nose pliers to bend the tab to obtain desired speed (Figure 2).
 8. Let the engine run for 10 seconds.
 9. Engage mower deck and check engine speed.
 10. Repeat steps 2 through 9 until the maximum engine speed with the mower deck engaged is 2800 rpm or less.





Count on it.