



Count on it.

Form No. 3395-766 Rev A

Parts Catalog

Rear Quick-Attach System

**2013 and After Groundsmaster® 7200 Series
Mower with Kubota Engine**

Model No. 30812—Serial No. 315000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HP: high pressure

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: low pressure

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head

Contents

Cylinder Support, Lift-Arm and Adapter Assembly 4


Hydraulic Manifold Assembly No. 112-1493 6

Hydraulic Cylinder Assembly No. 110-5424. 8

Hydraulic Hose and Fitting Assembly 10

Wire Harness and Switch Assembly 12

Cylinder Support, Lift-Arm and Adapter Assembly

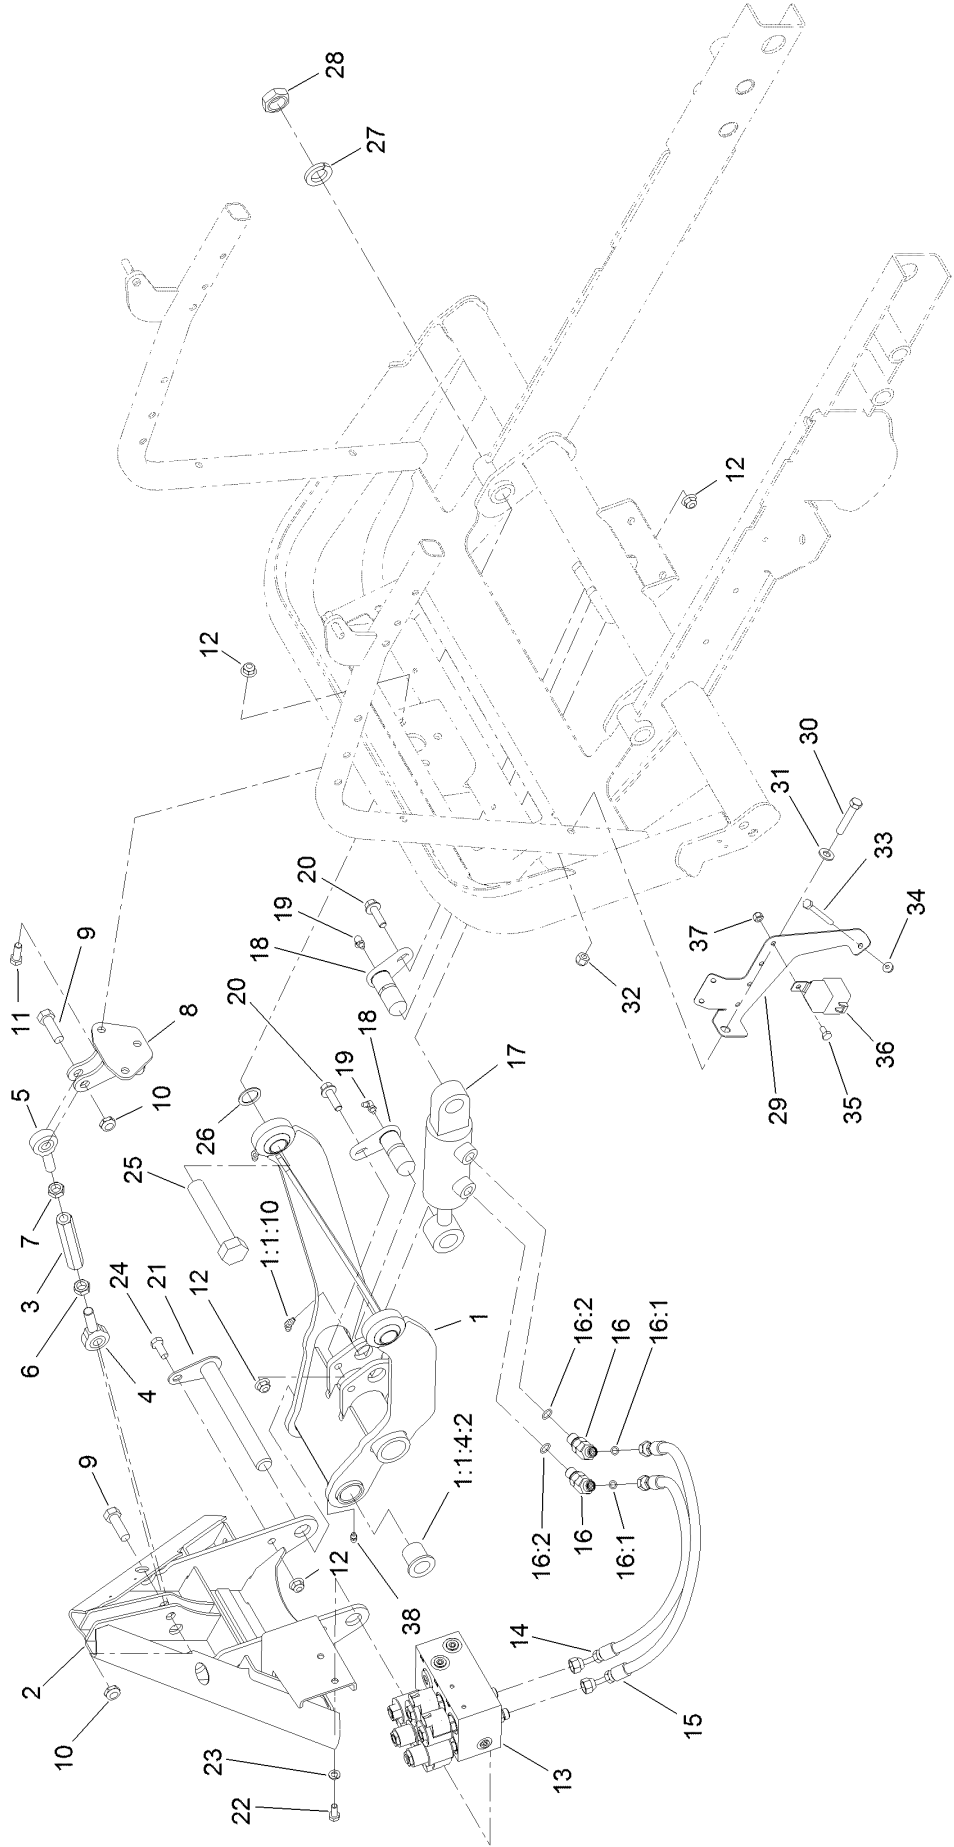


Cylinder Support, Lift-Arm and Adapter Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	110-3520-03	1	Rear Lift Arm ASM	17	110-5424	1	Cylinder-HYD
1:1		1	Arm-Lift, Rear ●■	18	125-1910	2	Pin-Pivot
1:1:4		1	Hub ASM ●■	19	302-60	2	Fitting-Grease
1:1:4:2	95-3577	2	Bushing	20	3234-24	2	Screw-HHF
1:1:10	1481	2	Fitting-Grease	21	110-5362	1	Pin
2	112-6320-03	1	Adapter	22	322-3	2	Screw-HH
3	110-5367	1	Tube-Hex	23	3253-4	2	Washer-Lock
4	61-3530	1	Bearing-Rod End, RH	24	323-5	1	Screw-HH
5	61-3540	1	Bearing-Rod End, LH	25	98-9062	2	Screw
6	3220-5	1	Nut-Jam	26	1-303352	8	Washer-Spindle
7	3220-12	1	Nut-HJ (LH Thread)	27	3253-28	2	Washer-Lock/Sp
8	112-6340-03	1	Mount-Link	28	103-8496	2	Nut-Jam
9	325-6	2	Screw-HH	29	130-8760-03	1	Bracket-Relay
10	3296-45	2	Nut-Lock, NI	30	323-10	1	Screw-HH
11	323-6	3	Screw-HH	31	3256-24	1	Washer-Flat
12	104-8301	6	Nut-Flange, NI	32	3296-39	1	Nut-Lock, NI
13	112-1493	1	HYD Manifold ASM	33	321-15	1	Screw-HH
14	112-9546	1	Hose-HYD	34	104-7201	1	Nut-Flange, NI
15	112-9547	1	Hose-HYD	35	321-2	6	Screw-HH
16	340-137	2	Fitting	36	99-7430	6	Relay
16:1	237-21	1	O-Ring	37	3296-42	6	Nut-Lock, NI
16:2	237-42	1	O-Ring	38	302-5	1	Fitting-Grease

● Not illustrated

■ Not serviced separately


Hydraulic Manifold Assembly No. 112-1493

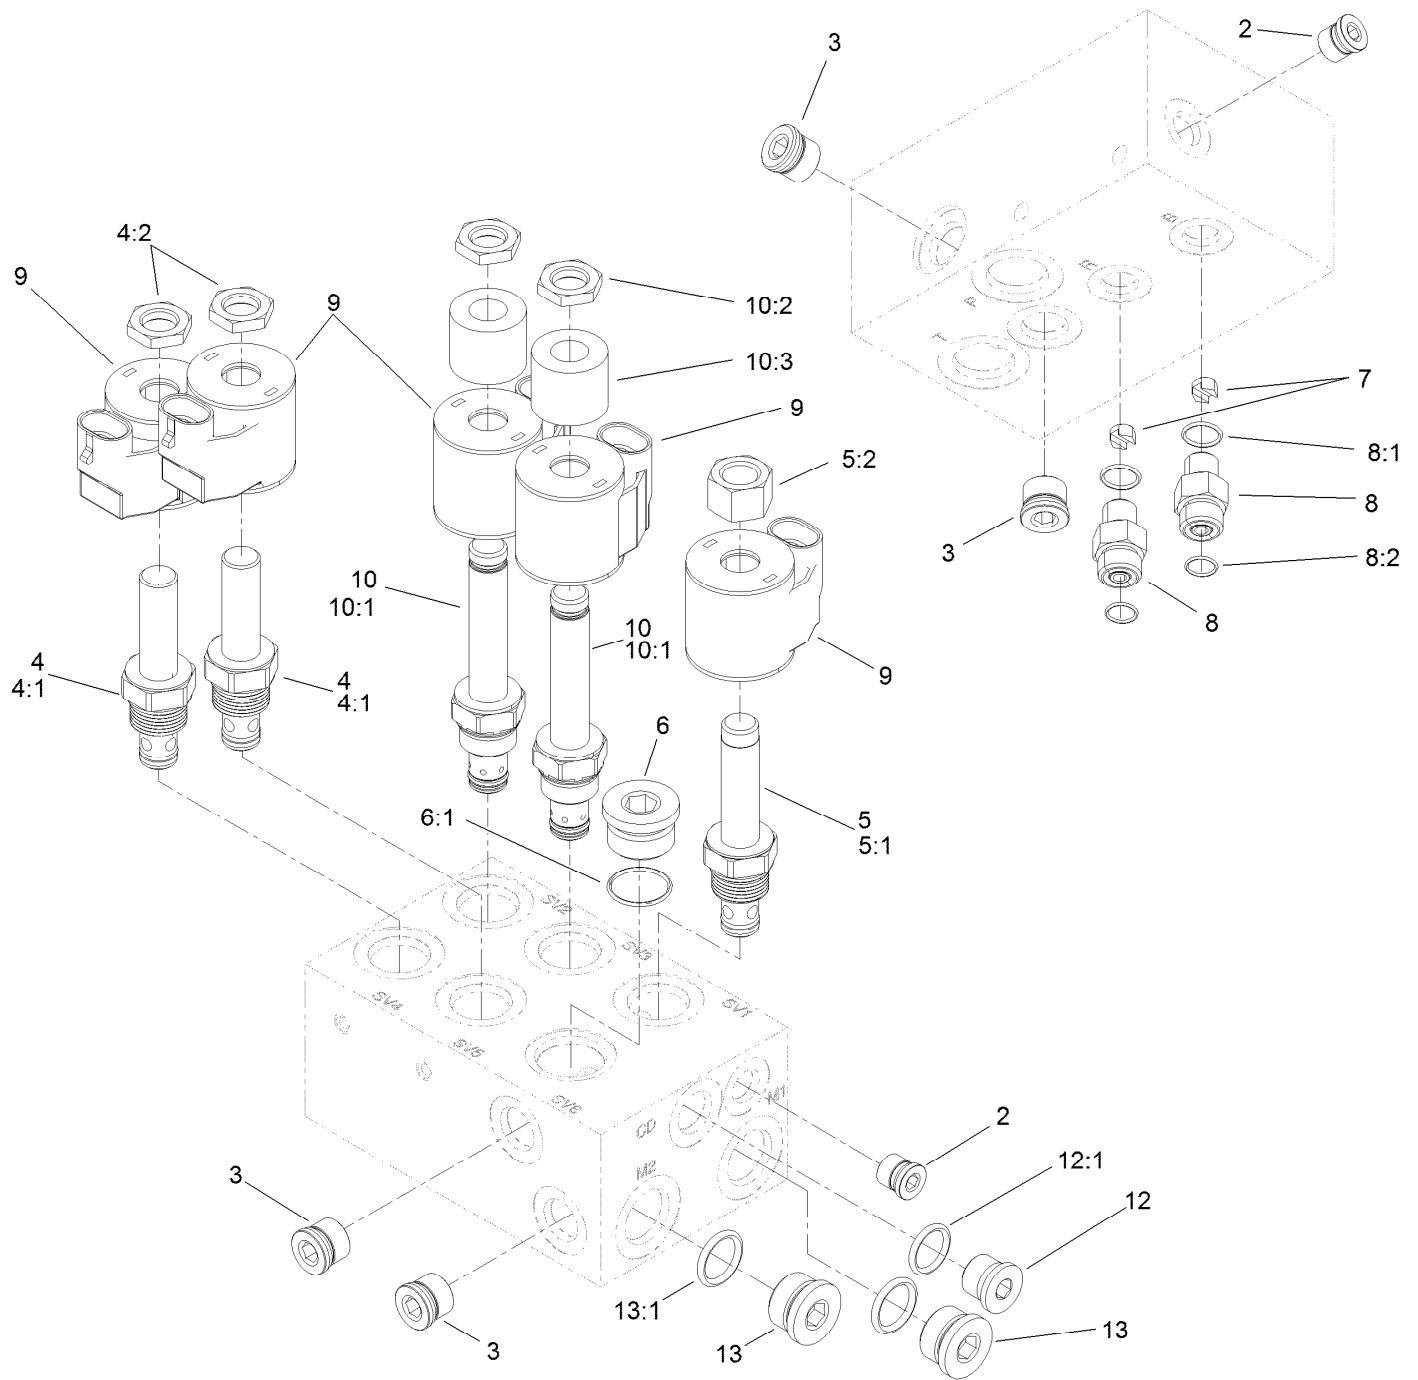

Hydraulic Manifold Assembly No. 112-1493 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	106-1025	2	Plug-HYD	8:1	237-78	1	O-Ring
3	106-1026	4	Plug-HYD	8:2	237-21	1	O-Ring
4	107-7516	2	Solenoid Valve ASM	9	105-9333	5	Coil-12Vdc
4:1	105-9156	1	Seal Kit	10	110-8898	2	Valve-Solenoid
4:2	110-2634	1	Nut-Coil	10:1	107-7527	1	Seal Kit
5	107-7517	1	Valve-Solenoid	10:2	110-2634	1	Nut-Coil
5:1	105-9156	1	Seal Kit	10:3	110-8909	1	Spacer-Coil
5:2	107-7812	1	Nut-Solenoid	12	353-989	1	Plug-Hex, Hollow
6	353-551	1	Plug-HH	12:1	237-42	1	O-Ring
6:1	237-80	1	O-Ring	13	353-988	2	Plug-Hex
7	110-8904	2	Orifice-Control, Flow (0.028)	13:1	237-79	1	O-Ring
8	340-92	2	Fitting-HYD, Straight				


Hydraulic Cylinder Assembly No. 110-5424

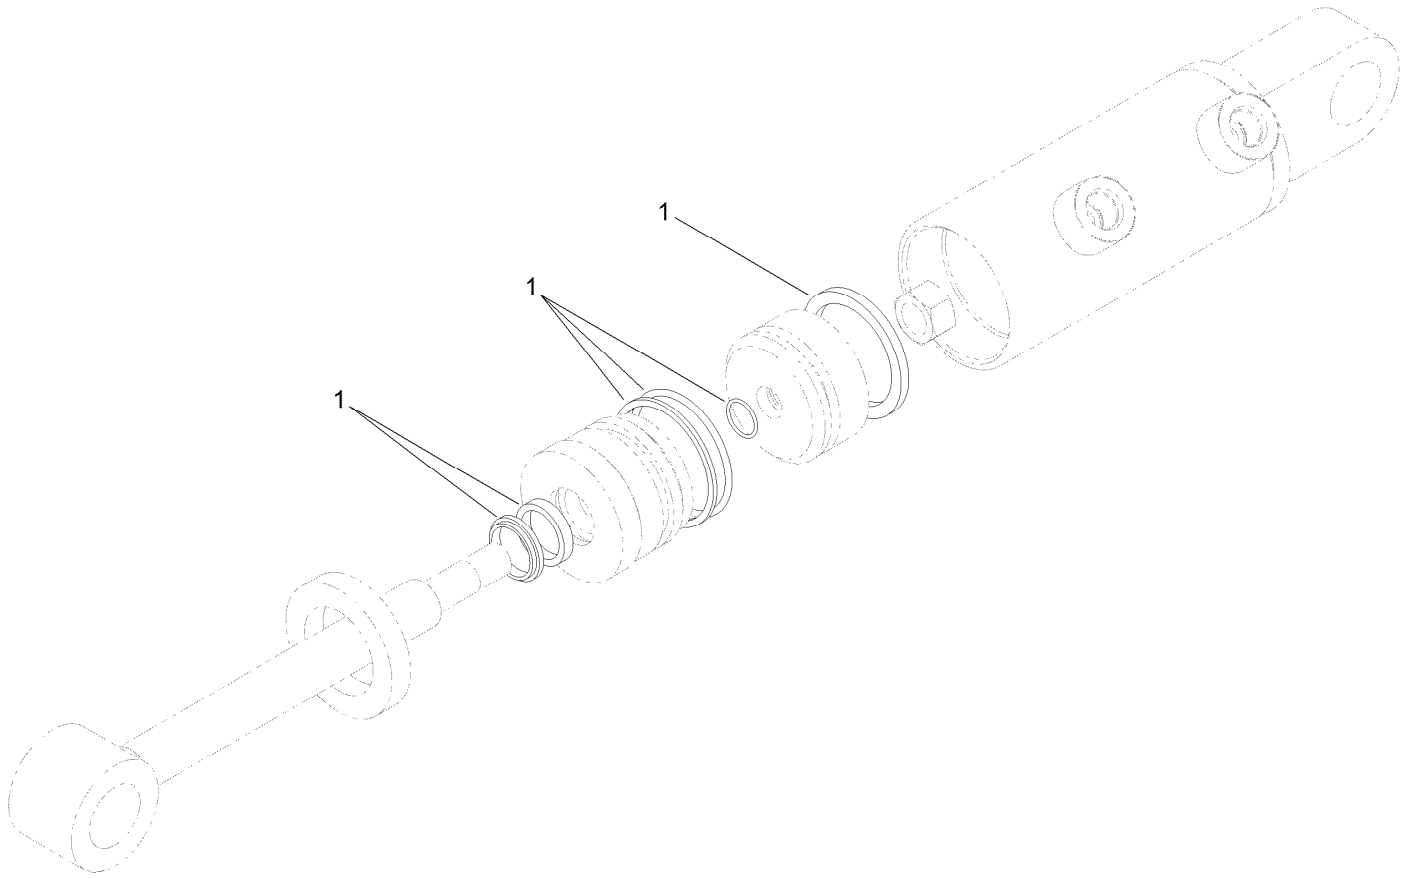

Hydraulic Cylinder Assembly No. 110-5424 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	112-6352	1	Seal Kit

Hydraulic Hose and Fitting Assembly

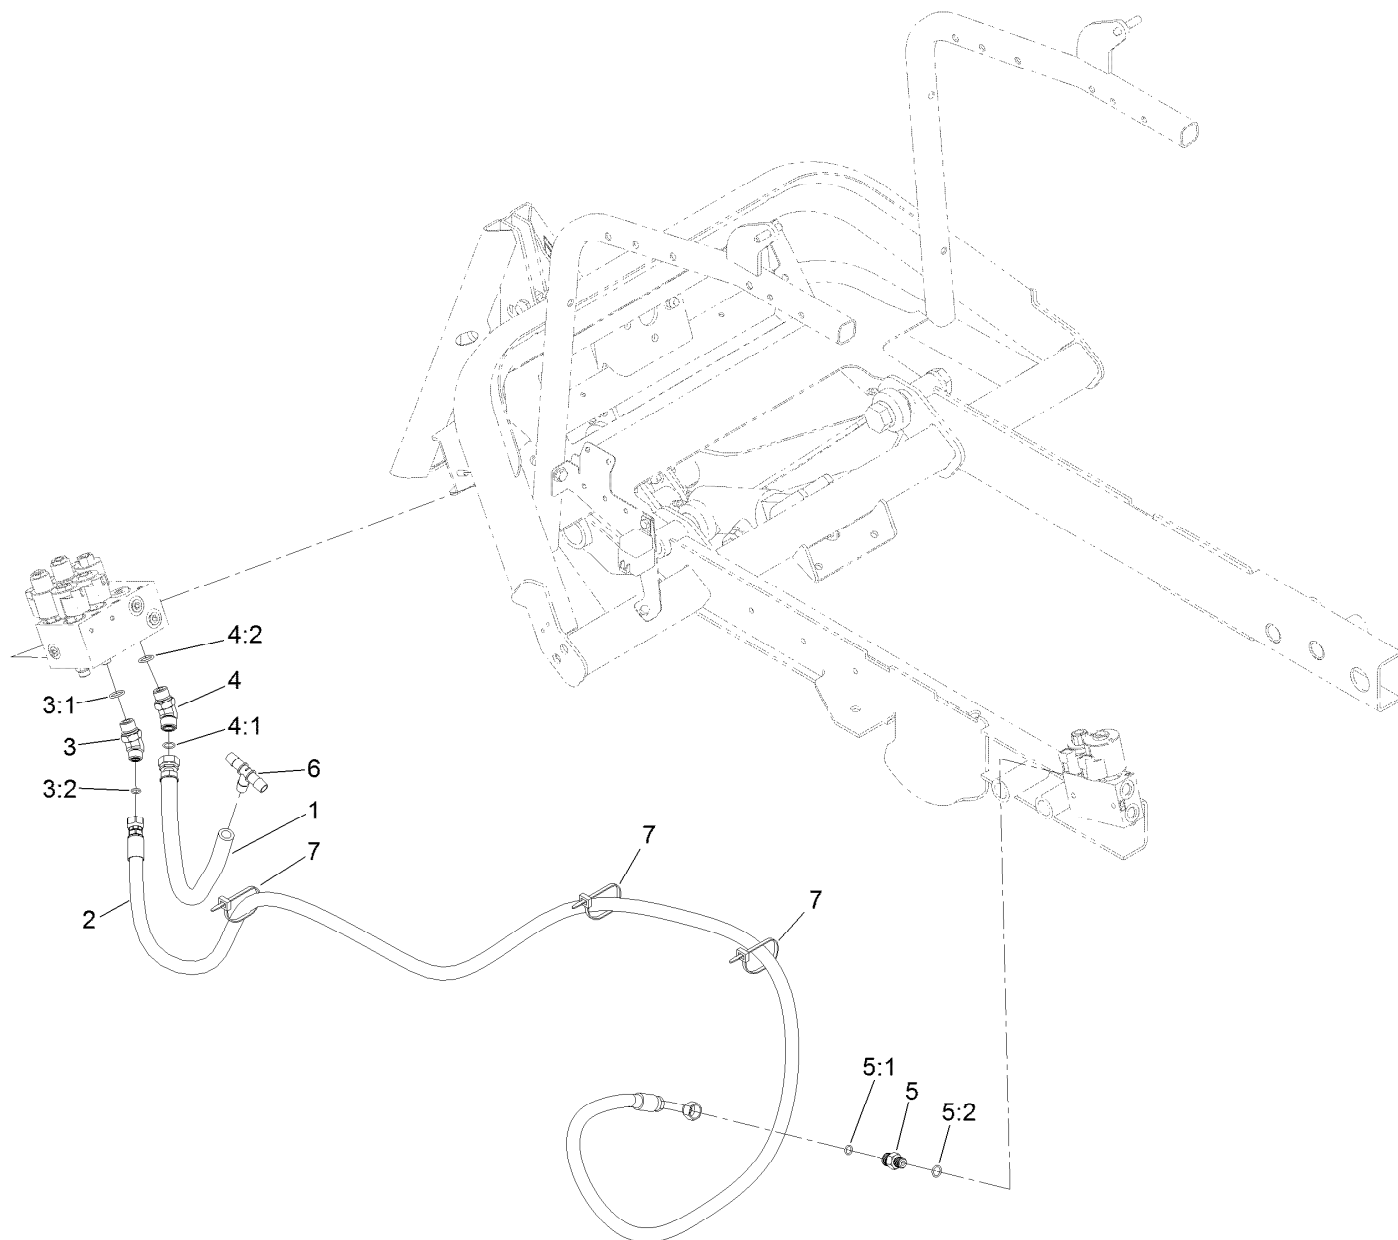


Hydraulic Hose and Fitting Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	112-9548	1	Hose-HYD
2	131-3383	1	Hose-HYD
3	340-138	1	Fitting-HYD, 45 DEG
3:1	237-79	1	O-Ring
3:2	237-22	1	O-Ring
4	340-101	1	Fitting-HYD, 45 DEG
4:1	237-30	1	O-Ring

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4:2	237-79	1	O-Ring
5	340-2	1	Fitting-HYD, Straight
5:1	237-22	1	O-Ring
5:2	237-42	1	O-Ring
6	112-6348	1	Fitting-HYD, Tee
7	3290-378	3	Tie-Cable

Wire Harness and Switch Assembly

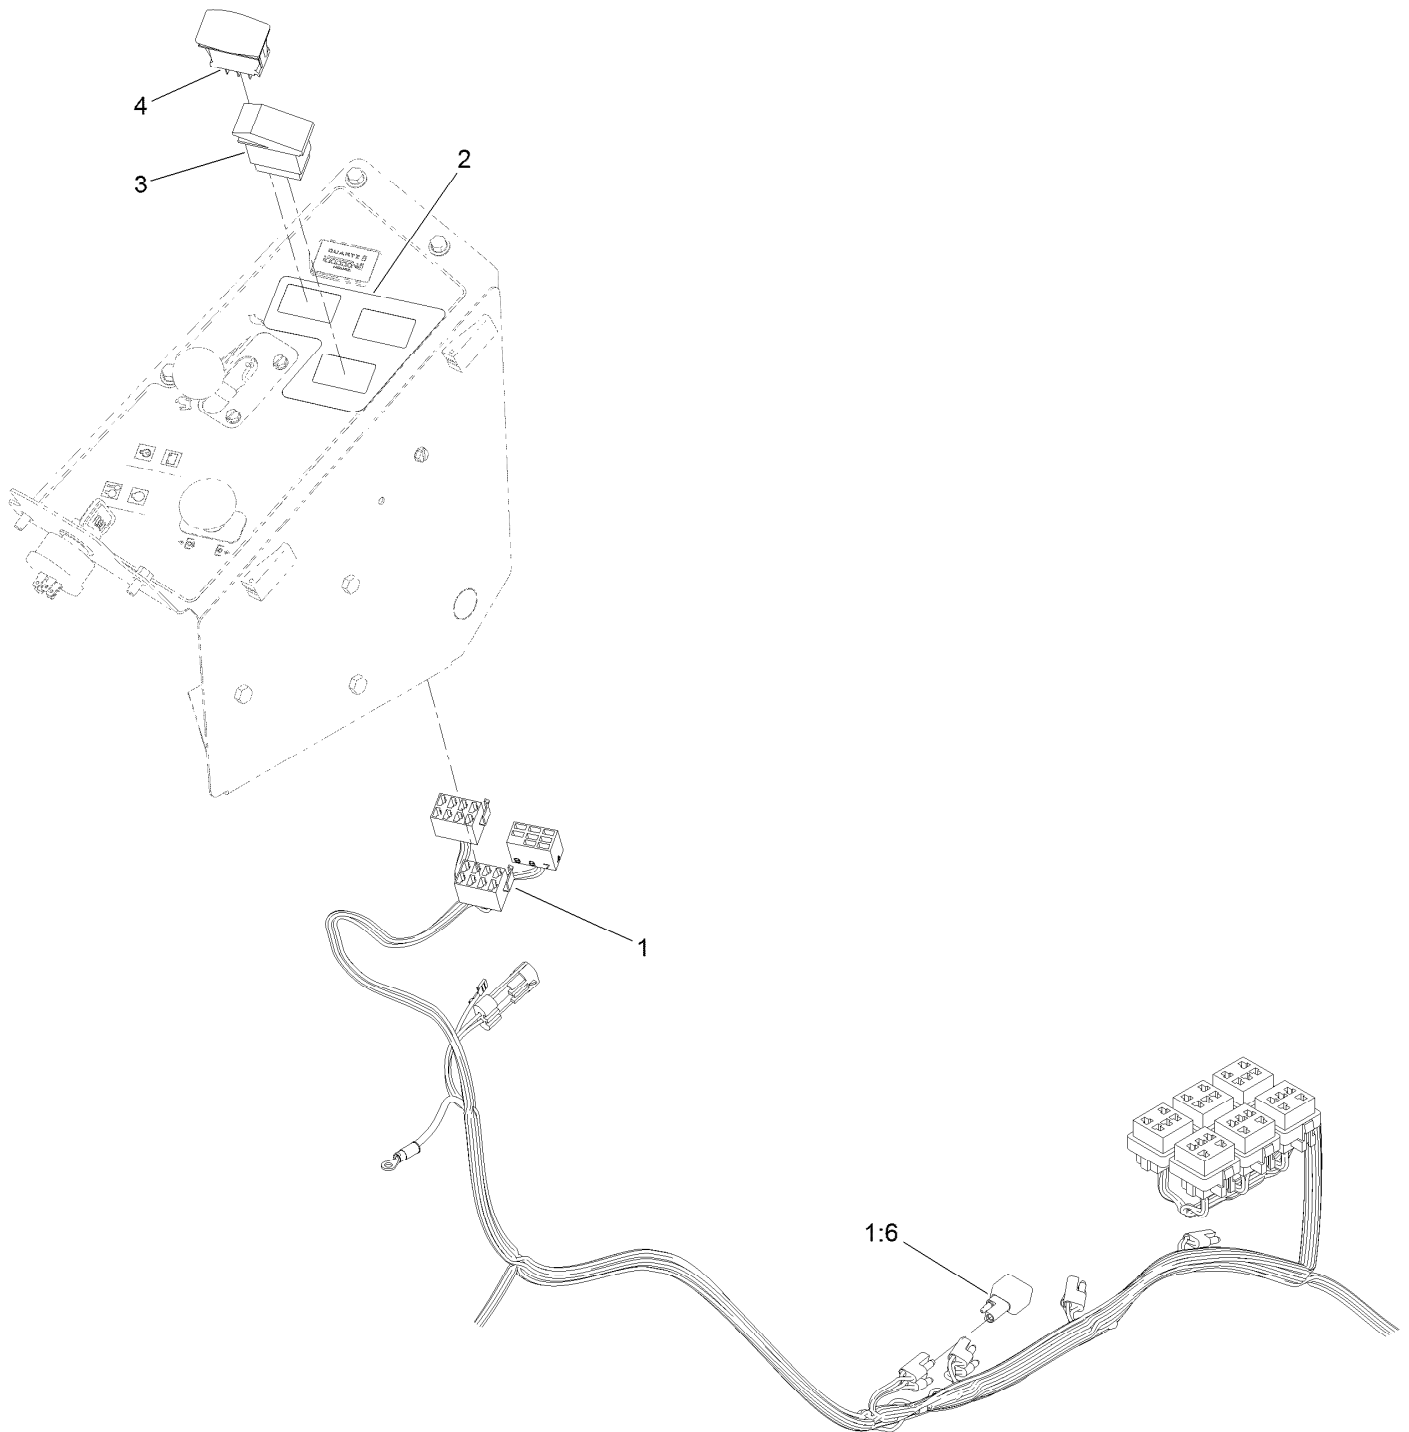

Wire Harness and Switch Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	122-0418	1	Harness-Wire, Blower (Rear Lift)	2	110-8268	1	Decal-Auxiliary
1:6	100-4918	7	Diode-Over Molded	3	95-8999	1	Switch
				4	100-1535	1	Switch

Notes:

Notes:



Count on it.