



# **1438 HXL LAWN TRACTOR**

**Model No. 71219 – 7900001 & Up**

---

## **Parts Catalog**

## ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

## Contents

| Description                            | Page | Description                                     | Page  |
|----------------------------------------|------|-------------------------------------------------|-------|
| Frame Assembly .....                   | 1    | Pulley & Belt Assembly (38" Cutting Unit) ..... | 12    |
| Hood Assembly .....                    | 2    | Suspension Assembly (38" Cutting Unit) .....    | 13    |
| Seat Assembly .....                    | 3    | Height of Cut Assembly .....                    | 14    |
| Front Axle Assembly .....              | 4    | Electrical Assembly .....                       | 15    |
| Steering Assembly .....                | 5    | Electrical Schematic .....                      | 16    |
| Engine & Gas Assembly .....            | 6    | Engine Briggs & Stratton Model No.              |       |
| Clutch Assembly .....                  | 7    | 28N777–0174–01 .....                            | 17–26 |
| Rear Wheel Assembly .....              | 8    | Toro Part Number Index .....                    | 27–33 |
| Transaxle Assembly .....               | 9    |                                                 |       |
| Speed Control Assembly .....           | 10   |                                                 |       |
| Deck Assembly (38" Cutting Unit) ..... | 11   |                                                 |       |

**Note:**

## Accessories

| Description                      | Model / Parts No.                     | Description                     | Model / Parts No. |
|----------------------------------|---------------------------------------|---------------------------------|-------------------|
| Easy Empty Bagging Kit .....     | Model No. 79116 or<br>Model No. 79117 | Tire Chains .....               | Part No. 11–0430  |
| Twin Bag Bagger Kit .....        | Model No. 79101 or<br>79103           | Headlight Kit (Std.) .....      | Model No. 79180   |
| Recycler Kit (Std.) .....        | Model No. 79170                       | 42" (106.7cm) Snowblade Kit ... | Model No. 79150   |
| Hi-Sail Bagging Blade (Std.) ... | Part No. 57–4700                      | Wheel Weight Kit .....          | Model No. 59159   |
|                                  |                                       | Anti-Scalp Kit (Std.) .....     | Model No. 79182   |

## Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

| Abbreviation | Meaning                | Abbreviation | Meaning                           |
|--------------|------------------------|--------------|-----------------------------------|
| AR .....     | as required            | HWH .....    | hex washer head                   |
| ASM .....    | assembly               | HWHTF .....  | hex washer head<br>thread forming |
| CARR .....   | carriage               | INC .....    | incorporated                      |
| DEG .....    | degrees                | LH .....     | left hand                         |
| FH .....     | flat head              | PH .....     | pan head                          |
| GA .....     | gauge                  | PPH .....    | Phillips pan head                 |
| HF .....     | hex flange             | PTO .....    | power take off                    |
| HFW .....    | hex flange washer      | RH .....     | right hand                        |
| HH .....     | hex head               | SFH .....    | slotted fillister head            |
| HHF .....    | hex head flange        | SH .....     | square head                       |
| HHST .....   | hex head self tapping  | SHWH .....   | slotted hex washer head           |
| HJ .....     | hex jam                | SPH .....    | slotted pan head                  |
| HOC .....    | height-of-cut          | STD .....    | standard                          |
| HS .....     | hex socket             | TAP .....    | self tapping                      |
| HSBH .....   | hex socket button head | TH .....     | truss head                        |
| HSFH .....   | hex socket flat head   | TTH .....    | Torx truss head                   |
| HSH .....    | hex socket head        |              |                                   |

WH ..... wing head

## Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

### Service Assemblies

Parts within service assemblies have reference numbers in the form  $X:Y$ .  $X$  is the reference number of the service assembly and  $Y$  is a sequential number unique to each part within the service assembly.

 
For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

### Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form  $X(Y)$ .  $X$  is the reference number.  $Y$  in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

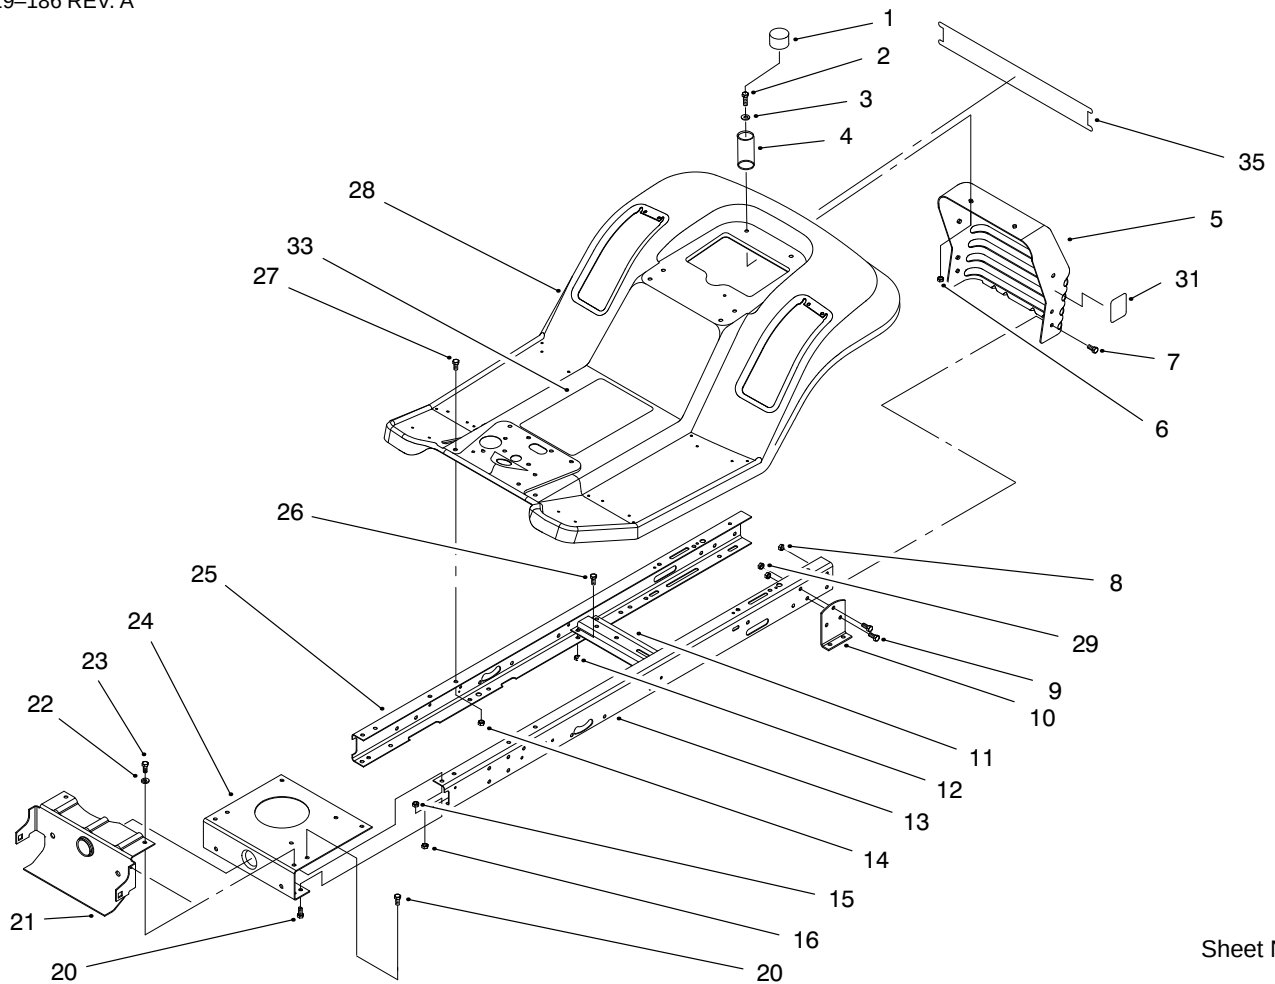


Sheet No.:2

## Frame Assembly
 
| Ref. No. | Part No.   | Qty. | Description                |
|----------|------------|------|----------------------------|
| 1        | 701178     | 2    | Cap-Protector              |
| 2        | 322-5      | 2    | Screw-HH                   |
| 3        | 3256-23    | 2    | Washer-Flat                |
| 4        | 88-6220    | 2    | Spring - Compression       |
| 5        | 88-3940-03 | 1    | Panel - Rear               |
| 6        | 3296-29    | 2    | Nut-Lock                   |
| 7        | 322-3      | 4    | Screw-HH                   |
| 8        | 3296-29    | 4    | Nut-Lock                   |
| 9        | 322-3      | 4    | Screw-HH                   |
| 10       | 88-5260-03 | 2    | Bracket-Transaxle Mounting |
| 11       | 88-4620-03 | 1    | Bracket - Idler Pivot      |
| 12       | 3296-29    | 4    | Nut-Lock                   |
| 13       | 94-1999-03 | 1    | Frame Rail-LH              |
| 14       | 3296-29    | 2    | Nut-Lock                   |
| 15       | 3296-29    | 6    | Nut-Lock                   |
| 16       | 3296-29    | 2    | Nut-Lock                   |
| 20       | 322-3      | 6    | Screw-HH                   |
| 21       | 88-5120-03 | 1    | Support - Front Axle       |
| 22       | 3256-23    | 2    | Washer-Flat                |
| 23       | 322-3      | 2    | Screw-HH                   |
| 24       | 88-4630-03 | 1    | Plate - Engine Mounting    |
| 25       | 94-1998-03 | 1    | Frame Rail-RH              |
| 26       | 322-3      | 4    | Screw-HH                   |
| 27       | 322-3      | 2    | Screw-HH                   |


| Ref. No. | Part No. | Qty. | Description        |
|----------|----------|------|--------------------|
| 28       | 88-3840  | 1    | Body - Rear        |
| 29       | 3296-29  | 4    | Nut-Lock           |
| 31       | 93-6678  | 1    | Decal - Dump Valve |
| 33       | 93-6676  | 1    | Decal-Instruction  |
| 35       | 94-3529  | 1    | Decal-Rear Body    |

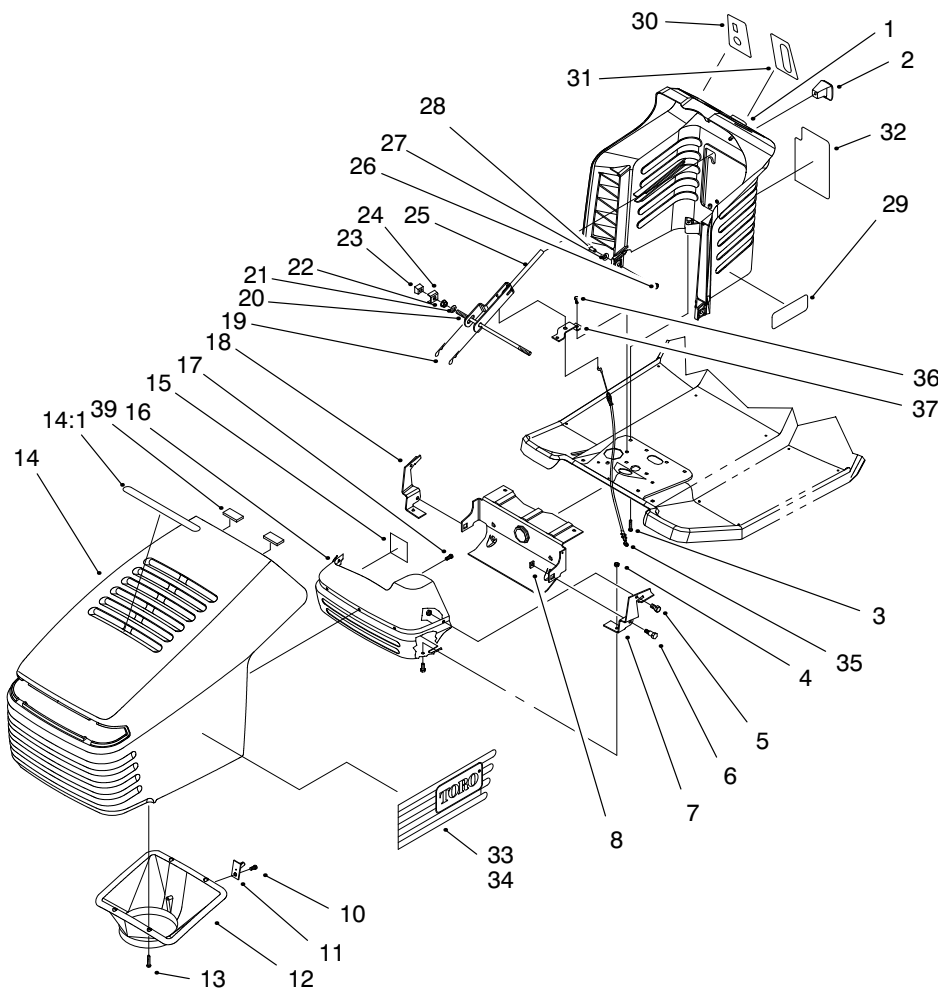

Sheet No.:3

## Hood Assembly
 
| Ref. No. | Part No.   | Qty. | Description              | Ref. No. | Part No. | Qty. | Description           |
|----------|------------|------|--------------------------|----------|----------|------|-----------------------|
| 1        | 93-0303    | 1    | Tower-Steering Toro      | 26       | 3296-29  | 2    | Nut-Lock              |
| 2        | 94-5565    | 1    | Knob - Control           | 27       | 3256-23  | 2    | Washer-Flat           |
| 3        | 46-8091    | 2    | Screw-Tapping            | 28       | 322-3    | 2    | Screw-HH              |
| 4        | 3296-42    | 4    | Nut-Lock                 | 29       | 94-3527  | 2    | Decal-Tower           |
| 5        | 321-2      | 4    | Screw-HH                 | 30       | 92-5731  | 1    | Decal-Ign/Lights      |
| 6        | 28-0540    | 2    | Bolt-Shoulder            | 31       | 92-5730  | 1    | Decal - Throttle      |
| 7        | 88-6050-03 | 1    | Bracket - Hinge          | 32       | 93-6673  | 1    | Decal - Deck Engage   |
| 8        | 3290-496   | 2    | Nut - Retained           | 33       | 92-2468  | 1    | Decal - Hood Left     |
| 10       | 46-8091    | 2    | Screw-Tapping            | 34       | 92-2467  | 1    | Decal - Hood Right    |
| 11       | 94-1984    | 1    | Pin-Latch                | 35       | 94-4293  | 1    | Cable ASM-Deck Engage |
| 12       | 88-4050    | 1    | Duct - Hood Air          | 36       | 9266714  | 2    | Screw-HWHTF           |
| 13       | 46-8090    | 4    | Screw-Tapping            | 37       | 93-3849  | 1    | Brkt-Cable            |
| 14       | 92-8650    | 1    | Hood-Toro                | 39       | 94-1980  | 2    | Foam-Hood             |
| 14:1     | 92-5748    | 1    | Decal - Air Duct         |          |          |      |                       |
| 15       | 92-5782    | 1    | Patch - Heat Tape        |          |          |      |                       |
| 16       | 93-3864    | 1    | Shield - Heat            |          |          |      |                       |
| 17       | 46-8090    | 3    | Screw-Tapping            |          |          |      |                       |
| 18       | 88-6040-03 | 1    | Bracket - Hinge          |          |          |      |                       |
| 19       | 3290-307   | 2    | Pin-Cotter               |          |          |      |                       |
| 20       | 88-4170    | 1    | Rod - Pivot              |          |          |      |                       |
| 21       | 3256-24    | 2    | Washer-Flat              |          |          |      |                       |
| 22       | 32128-43   | 2    | Nut-Flange               |          |          |      |                       |
| 23       | 88-4140    | 2    | Nut - Wedge              |          |          |      |                       |
| 24       | 88-4160    | 2    | Clamp - Pivot Rod        |          |          |      |                       |
| 25       | 88-5190-03 | 1    | Lever W.a. - Deck Engage |          |          |      |                       |

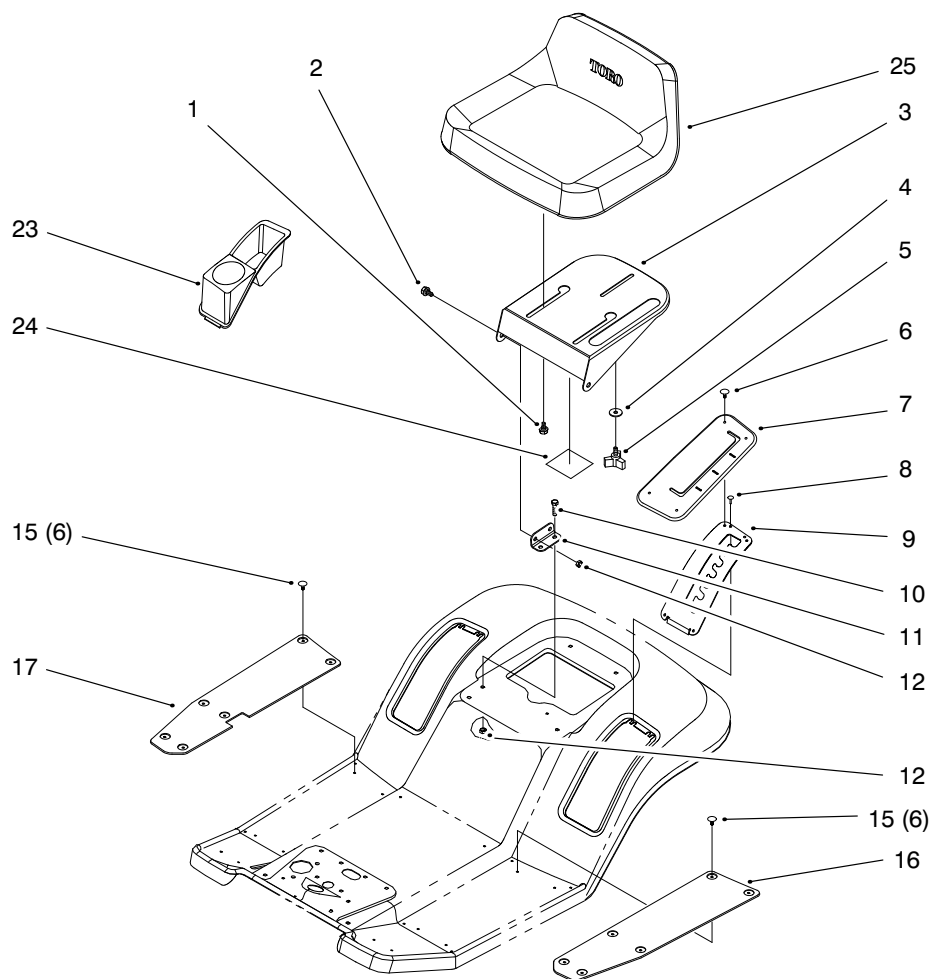


Sheet No.:4

## Seat Assembly
 
| Ref. No. | Part No.   | Qty. | Description          |
|----------|------------|------|----------------------|
| 1        | 37-8770    | 2    | Bolt-Shldr           |
| 2        | 37-8770    | 2    | Bolt-Shldr           |
| 3        | 88-4910-03 | 1    | Support - Seat       |
| 4        | 5-4460     | 1    | Washer-Fender        |
| 5        | 92-9674    | 1    | Knob-Studded         |
| 6        | 3290-479   | 4    | Fastener-Panel       |
| 7        | 93-7657    | 1    | Cover - HOC          |
| 8        | 3290-282   | 2    | Pop Rivet            |
| 9        | 88-5030-03 | 1    | Gate - HOC           |
| 10       | 322-3      | 4    | Screw-HH             |
| 11       | 88-4820-03 | 2    | Bracket - Seat Hinge |
| 12       | 3296-29    | 6    | Nut-Lock             |
| 15       | 3290-479   | 12   | Fastener-Panel       |
| 16       | 88-5240    | 1    | Foot Mat             |
| 17       | 88-5230    | 1    | Foot Mat - RH        |
| 23       | 88-4990    | 1    | Tray - Fender        |
| 24       | 114621     | 1    | Decal-Noise          |
| 25       | 88-3950    | 1    | Seat                 |


| Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|-------------|
|          |          |      |             |

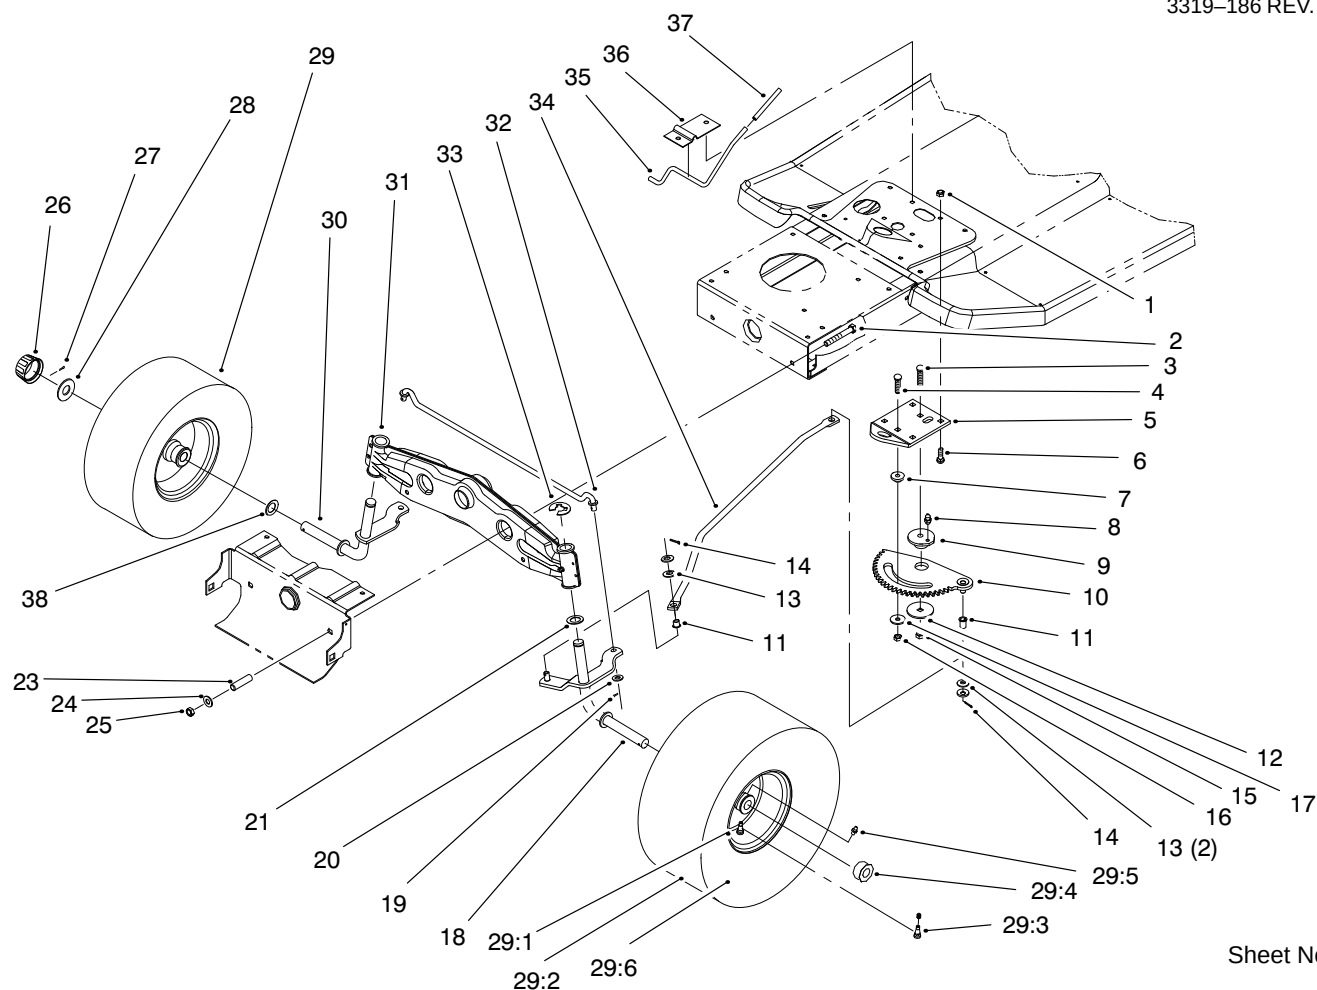

Sheet No.:5

## Front Axle Assembly
 
| Ref. No. | Part No.   | Qty. | Description              | Ref. No. | Part No.   | Qty. | Description               |
|----------|------------|------|--------------------------|----------|------------|------|---------------------------|
| 1        | 3296-29    | 4    | Nut-Lock                 | 25       | 3296-39    | 2    | Nut-Lock                  |
| 2        | 323-13     | 2    | Screw-HH                 | 26       | 61-9780    | 2    | Hubcap                    |
| 3        | 3231-4     | 1    | Bolt-CARR                | 27       | 3272-12    | 2    | Pin-Cotter                |
| 4        | 3230-3     | 1    | Screw-CARR               | 28       | 28-2480    | 2    | Washer-Flat               |
| 5        | 88-5130-03 | 1    | Bracket - Steering Rack  | 29:1     | 88-4370    | 2    | Rim ASM - 15" Front       |
| 6        | 3230-1     | 4    | Bolt-CARR                | 29:2     | 88-4070    | 2    | Tire 15 X 6.00-6          |
| 7        | 88-5010    | 1    | Spacer - Steering Rack   | 29:3     | 232-27     | 2    | Valve Stem & Cap Assembly |
| 8        | 302-26     | 1    | Fitting-Grease           | 29:4     | 88-4400    | 2    | Bearing - Wheel           |
| 9        | 88-4670    | 1    | Bushing - Eccentric      | 29:5     | 302-5      | 2    | Fitting - Grease          |
| 10       | 88-5200    | 1    | Steering Rack W.a.       | 29:6     | 232-39     | 2    | Tube Inner 15 X 6-6       |
| 11       | 52-2891    | 2    | Bushing - Steering Links | 30       | 92-7889-03 | 1    | Spindle Wa-RH             |
| 12       | 111419     | 1    | Washer-Bearing           | 31       | 94-1962-03 | 1    | Front Axle Wa             |
| 13       | 3256-25    | 4    | Washer-Flat              | 32       | 88-5380    | 1    | Tie Rod - Steering        |
| 14       | 3272-10    | 2    | Pin-Cotter               | 33       | 32151-48   | 2    | Ring-Retaining            |
| 15       | 3296-39    | 1    | Nut-Lock                 | 34       | 88-4830    | 1    | Link - Drag               |
| 16       | 3296-29    | 1    | Nut-Lock                 | 35       | 88-5510    | 1    | Rod-Parking Brake         |
| 17       | 5-4460     | 1    | Washer-Fender            | 36       | 88-5520-03 | 1    | Bracket-Parking Brake     |
| 18       | 92-7890-03 | 1    | Spindle Wa-LH            | 37       | 88-0890    | 1    | Grip - Parking Brake      |
| 19       | 3272-10    | 2    | Pin-Cotter               | 38       | 3-6498     | 4    | Washer-Thrust             |
| 20       | 3256-24    | 2    | Washer-Flat              |          |            |      |                           |
| 21       | 3-6498     | 2    | Washer-Thrust            |          |            |      |                           |
| 23       | 88-5470    | 2    | Spacer - Front Axle      |          |            |      |                           |
| 24       | 3256-24    | 2    | Washer-Flat              |          |            |      |                           |

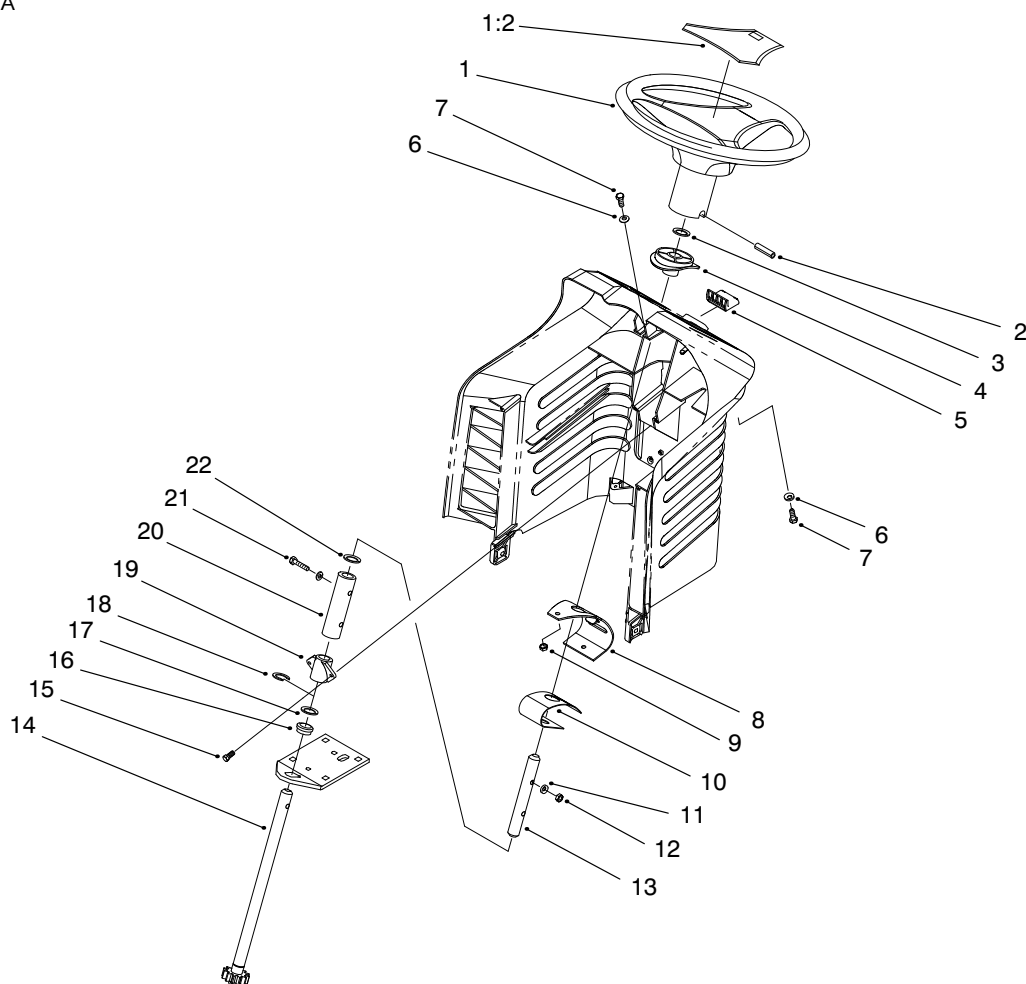


Sheet No.:6

## Steering Assembly
 
| Ref. No. | Part No.   | Qty. | Description               |
|----------|------------|------|---------------------------|
| 1        | 88-3850    | 1    | Steering Wheel            |
| 1:2      | 88-3870    | 1    | Cover-Steering Wheel      |
| 2        | 32121-111  | 1    | Pin-Spiral                |
| 3        | 32151-81   | 1    | Retaining Ring<br>Push-On |
| 4        | 88-4190    | 1    | Bushing – Sliding         |
| 5        | 88-4180    | 1    | Button – Release          |
| 6        | 3256-22    | 2    | Washer-Flat               |
| 7        | 321-4      | 2    | Screw-HH                  |
| 8        | 88-5180-01 | 1    | Bracket – Backup          |
| 9        | 3296-42    | 2    | Nut-Lock                  |
| 10       | 88-4890    | 1    | Spring – Leaf             |
| 11       | 3-7501     | 4    | Washer-Curved             |
| 12       | 3296-42    | 2    | Nut-Lock                  |
| 13       | 88-6300    | 1    | Shaft – Steering          |
| 14       | 88-6370    | 1    | Shaft W.a. – Steering     |
| 15       | 27-0220    | 2    | Screw-Special HWH         |
| 16       | 88-5150    | 1    | Bushing – Flange          |
| 17       | 3-6498     | 1    | Washer-Thrust             |
| 18       | 32151-48   | 1    | Ring-Retaining            |
| 19       | 88-4210    | 1    | Bushing – Stationary      |
| 20       | 88-6090    | 1    | Coupling – Steering       |
| 21       | 321-9      | 2    | Screw-HH                  |
| 22       | 3-6498     | 1    | Washer-Thrust             |


| Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|-------------|
|          |          |      |             |

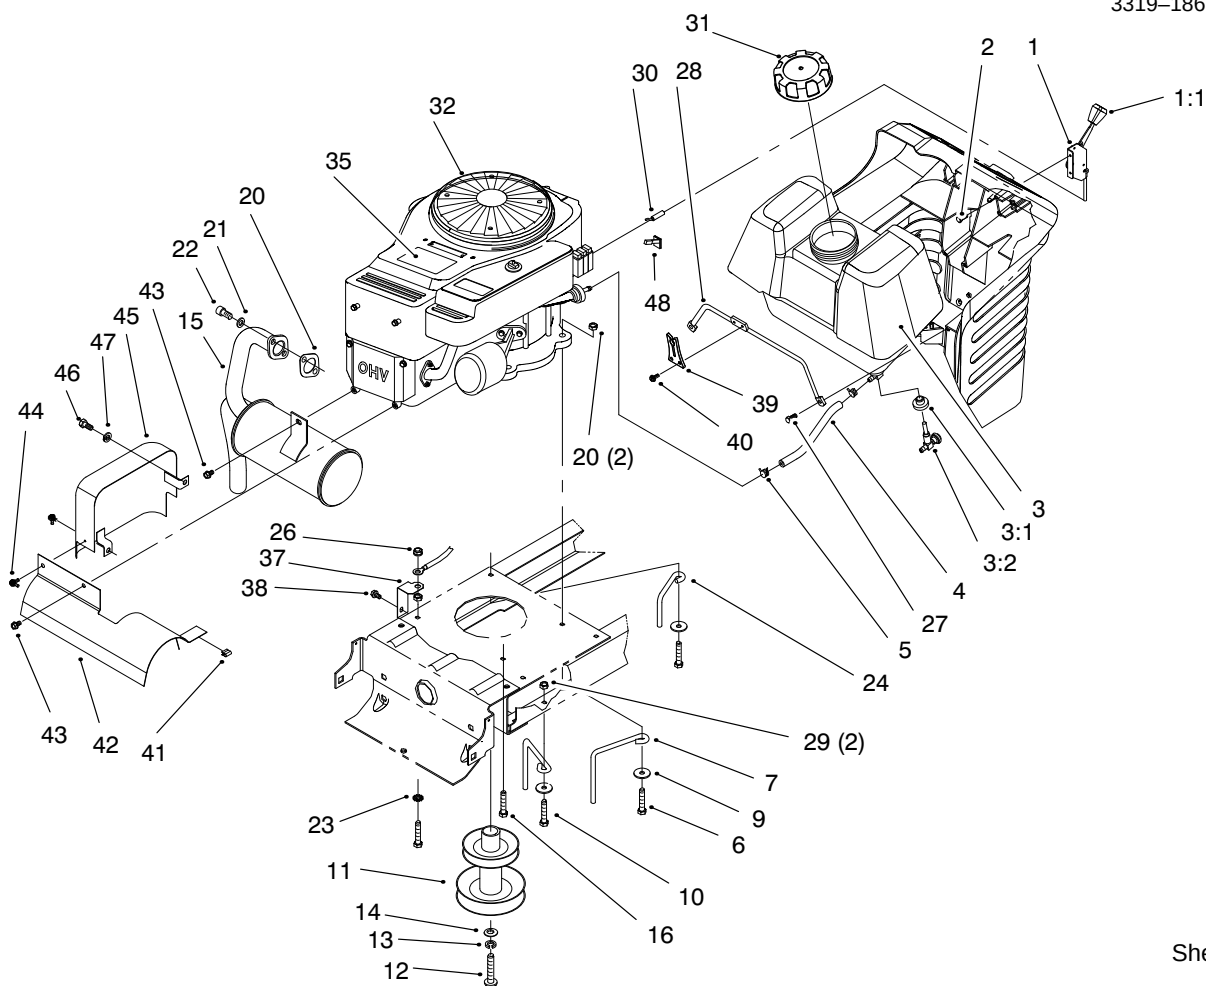

Sheet No.:8

## Engine & Gas Tank Assembly
 
| Ref. No. | Part No. | Qty. | Description           | Ref. No. | Part No.   | Qty. | Description            |
|----------|----------|------|-----------------------|----------|------------|------|------------------------|
| 1        | 88-4340  | 1    | Throttle Control ASM  | 29       | 3296-29    | 4    | Nut-Lock               |
| 1:1      | 66-0120  | 1    | Knob                  | 30       | 88-4350    | 1    | Cable ASM-Throttle     |
| 2        | 27-0220  | 2    | Screw-Special HWH     | 31       | 88-3980    | 1    | Gas Cap ASM            |
| 3        | 88-3880  | 1    | Gas Tank Assembly     | 32       |            | 1    | Engine-14.5hp Ohv Tq+  |
| 3:1      | 104047   | 1    | Bushing               | 35       | 94-3525    | 1    | Decal-Engine           |
| 3:2      | 104048   | 1    | Assembly-Valve        | 37       | 93-3809    | 1    | Bracket-Ground         |
| 4        | 47-2963  | 1    | Fuel Line             | 38       | 9266714    | 1    | Screw-HWHTF            |
| 5        | 2412-98  | 2    | Clamp-Hose            | 39       | 94-1951    | 1    | Latch-Hood             |
| 6        | 322-9    | 3    | Screw-HH              | 40       | 32144-112  | 2    | Screw-Thd Form         |
| 7        | 93-3854  | 3    | Belt Guide - Engine   | 41       | 93-3882    | 1    | Clip-Tinnerman         |
| 9        | 5-4460   | 4    | Washer-Fender         | 42       | 93-3880-03 | 1    | Shield - Muffler       |
| 10       | 322-5    | 2    | Screw-HH              | 43       | 9266714    | 2    | Screw-HWHTF            |
| 11       | 88-4850  | 1    | Pulley - Engine (38") | 44       | 32104-76   | 2    | Screw-Self TAP         |
| 12       | 26-0671  | 1    | Bolt-Blade            | 45       | 93-8450-03 | 1    | Exhaust Shield Wa      |
| 13       | 3253-22  | 1    | Washer-Lock           | 46       | 322-3      | 1    | Screw-HH               |
| 14       | 3256-25  | 1    | Washer-Flat           | 47       | 3253-4     | 1    | Washer-Lock            |
| 15       | 94-1953  | 1    | Muffler-Exhaust       | 48       | 88-4490    | 1    | Reducer - Throttle Rpm |
| 16       | 9267154  | 1    | Screw                 |          |            |      |                        |
| 20       | 88-4410  | 1    | Gasket - Muffler      |          |            |      |                        |
| 21       | 3253-4   | 2    | Washer-Lock           |          |            |      |                        |
| 22       | 3274-10  | 2    | Screw-Sckt Hd         |          |            |      |                        |
| 23       | 3255-8   | 1    | Washer-Lock           |          |            |      |                        |
| 24       | 93-3855  | 1    | Belt Guide - R.h.     |          |            |      |                        |
| 26       | 32149-1  | 2    | Nut-Keps              |          |            |      |                        |
| 27       | 27-0220  | 2    | Screw-Special HWH     |          |            |      |                        |
| 28       | 94-1952  | 1    | Rod-Gas Tank          |          |            |      |                        |

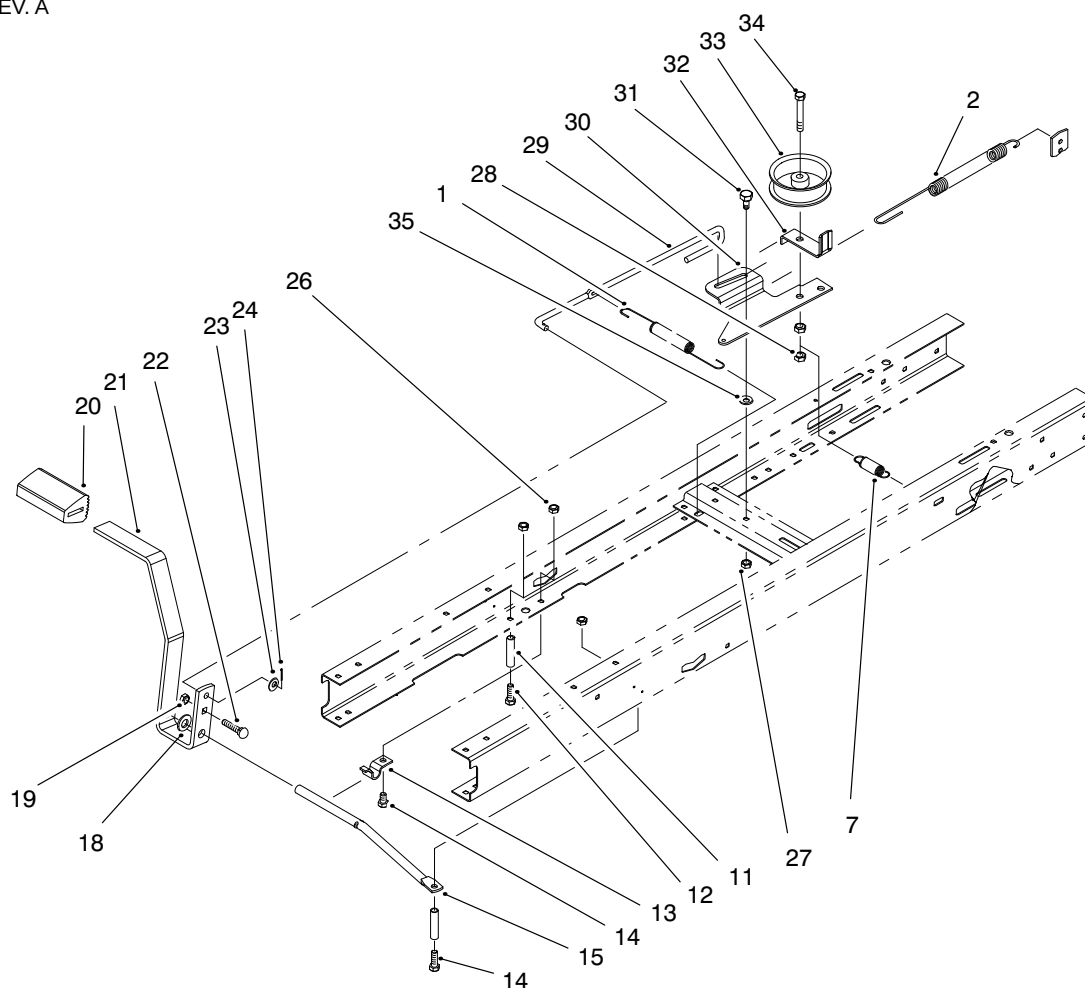


Sheet No.:9

## Clutch Assembly
 
| Ref. No. | Part No.   | Qty. | Description           |
|----------|------------|------|-----------------------|
| 1        | 27-8890    | 1    | Spring – Pedal Return |
| 2        | 88-6140    | 1    | Spring – Brake        |
| 7        | 88-6330    | 1    | Spring – Extension    |
| 13       | 88-4810    | 1    | Clamp – Shift Pivot   |
| 14       | 322-3      | 2    | Screw-HH              |
| 15       | 88-5500    | 1    | Rod – Pedal Pivot     |
| 18       | 3256-26    | 1    | Washer-Flat           |
| 19       | 3296-29    | 1    | Nut-Lock              |
| 20       | 65-2920    | 1    | Pad-Pedal             |
| 21       | 88-5000-03 | 1    | Pedal – Clutch/Brake  |
| 22       | 3230-3     | 1    | Screw-CARR            |
| 23       | 3256-23    | 1    | Washer-Flat           |
| 24       | 3272-10    | 1    | Pin-Cotter            |
| 26       | 3296-29    | 2    | Nut-Lock              |
| 27       | 3296-29    | 1    | Nut-Lock              |
| 28       | 3296-59    | 2    | Nut-Lock              |
| 29       | 88-5270    | 1    | Rod – Clutch/Brake    |
| 30       | 88-6070    | 1    | Arm –Idler            |
| 31       | 37-8770    | 1    | Bolt-Shldr            |
| 32       | 88-5560    | 1    | Belt Guide – Idler    |
| 33       | 88-5680    | 1    | Idler Pulley          |
| 34       | 323-11     | 1    | Screw                 |
| 35       | 5-4460     | 1    | Washer-Fender         |


| Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|-------------|
|          |          |      |             |

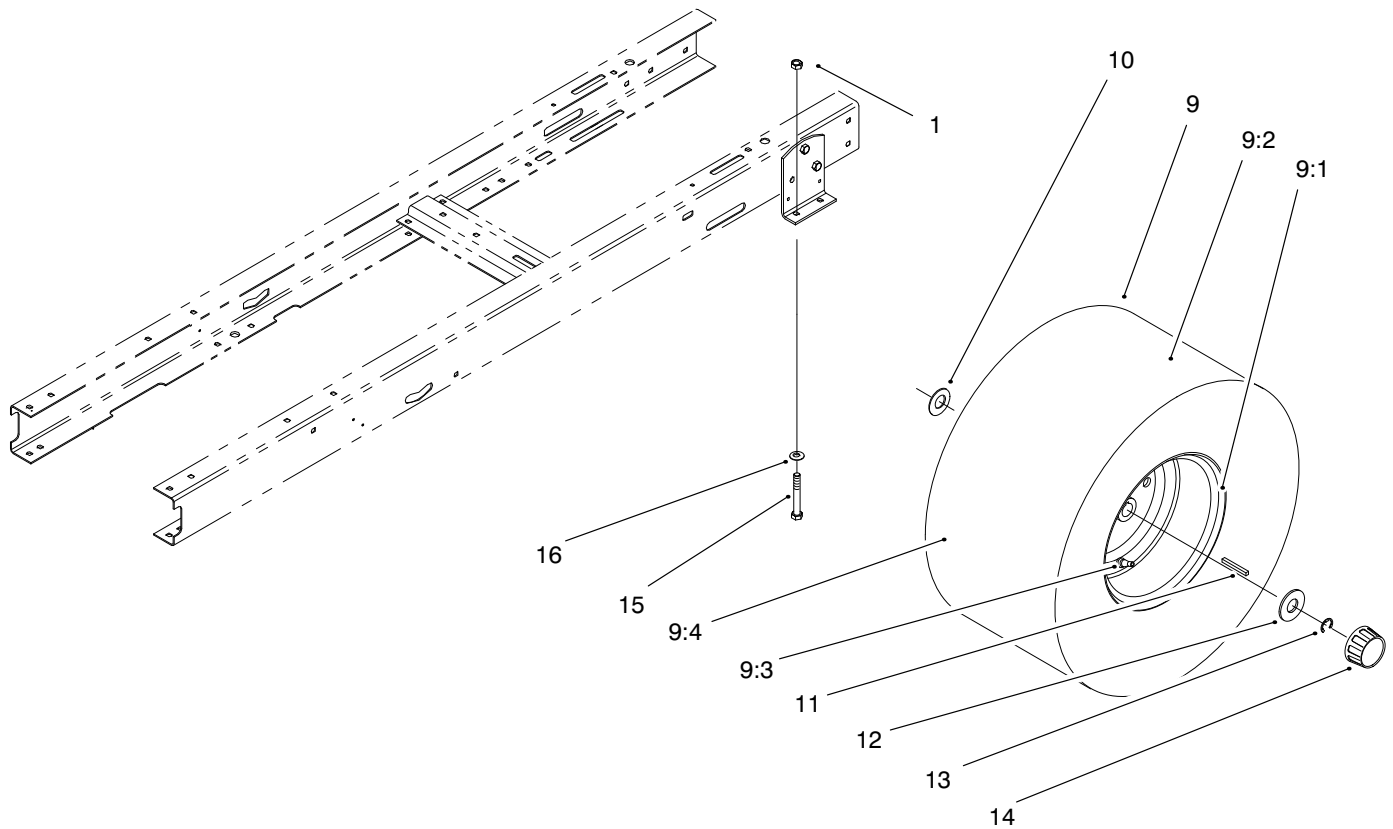

Sheet No.:11

## Rear Wheel Assembly
 
| Ref. No. | Part No. | Qty. | Description                  |
|----------|----------|------|------------------------------|
| 1        | 3296-29  | 4    | Nut-Lock                     |
| 9        | 88-4300  | 2    | Rear Wheel & Tire<br>ASM     |
| 9:1      | 88-4390  | 2    | Rim ASM - 18" Rear           |
| 9:2      | 88-4090  | 2    | Tire - 18 X 9.50-8           |
| 9:3      | 232-27   | 2    | Valve Stem & Cap<br>Assembly |
| 9:4      | 232-41   | 2    | Tube - Inner                 |
| 10       | 3-6498   | 2    | Washer-Thrust                |
| 11       | 7-0036   | 2    | Key-Square                   |
| 12       | 28-2480  | 2    | Washer-Flat                  |
| 13       | 32151-48 | 2    | Ring-Retaining               |
| 14       | 61-9780  | 2    | Hubcap                       |
| 15       | 322-12   | 4    | Screw HH                     |
| 16       | 3256-23  | 4    | Washer-Flat                  |

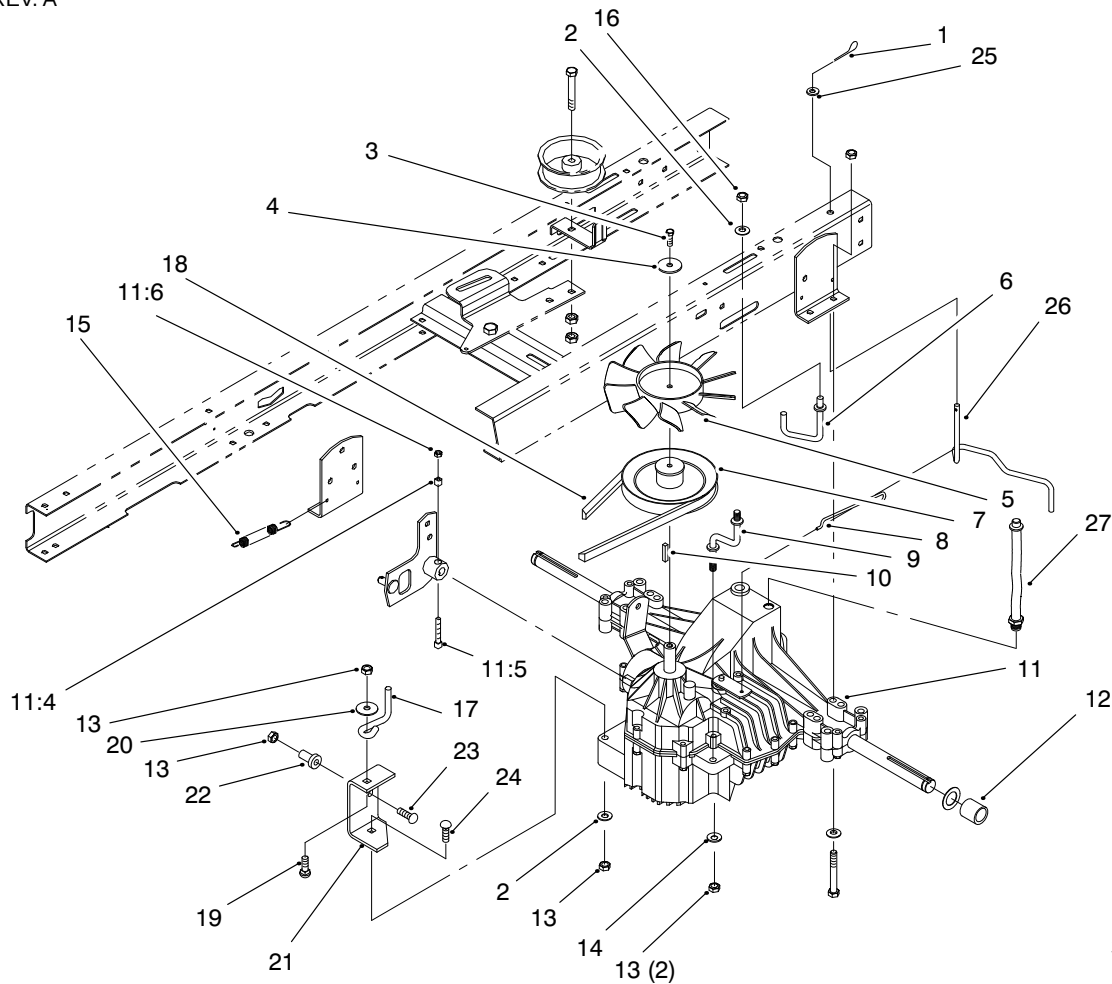


Sheet No.:12

## Transaxle Assembly
 
| Ref. No. | Part No.   | Qty. | Description                |
|----------|------------|------|----------------------------|
| 1        | 3290-307   | 1    | Pin-Cotter                 |
| 2        | 3256-23    | 2    | Washer-Flat                |
| 3        | 48-7620    | 1    | Screw                      |
| 4        | 3256-58    | 1    | Washer-Flt                 |
| 5        | 115271     | 1    | Fan-Hydro                  |
| 6        | 88-5960    | 1    | Belt Guide - Trans. LH     |
| 7        | 88-6180    | 1    | Pulley - Transmission      |
| 8        | 92-8856    | 1    | Wire - Bypass              |
| 9        | 88-5620    | 1    | Strap - Torque             |
| 10       | 80-6090    | 1    | Key-Square                 |
| 11       | 94-6775    | 1    | Transaxle<br>ASM-Hydro     |
| 12       | 88-5360    | 2    | Spacer - Pulley            |
| 13       | 3296-29    | 5    | Nut-Lock                   |
| 14       | 3256-23    | 2    | Washer-Flat                |
| 15       | 26-6701    | 1    | Spring - Extension         |
| 16       | 32149-1    | 1    | Nut-Keps                   |
| 17       | 88-5460    | 1    | Belt Guide - Trans         |
| 18       | 88-6280    | 1    | V-Belt                     |
| 19       | 3230-2     | 1    | Screw-CARR                 |
| 20       | 5-4460     | 1    | Washer-Fender              |
| 21       | 92-6013-03 | 1    | Bracket - Speed<br>Control |
| 22       | 65-5080    | 1    | Bushing - Flanged          |
| 23       | 3230-5     | 1    | Bolt-Carriage              |
| 24       | 3230-7     | 1    | Bolt-Carriage              |

| Ref. No. | Part No. | Qty. | Description       |
|----------|----------|------|-------------------|
| 25       | 3256-22  | 1    | Washer-Flat       |
| 26       | 92-8857  | 1    | Lever - Bypass    |
| 27       | 94-1945  | 1    | ASM-Breather Hose |

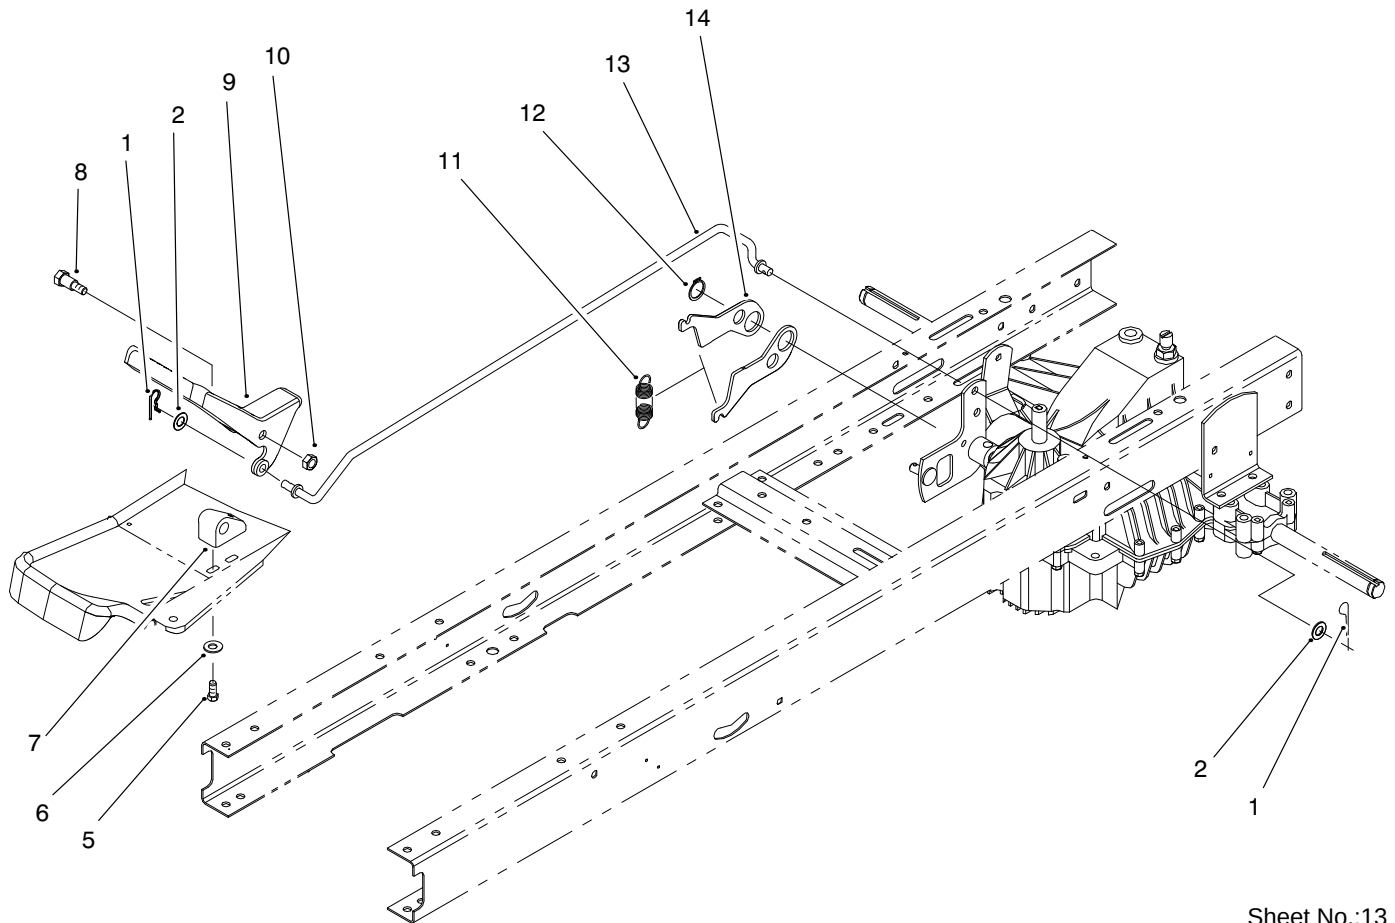


Sheet No.:13

## Speed Control Assembly
 
| Ref. No. | Part No. | Qty. | Description            |
|----------|----------|------|------------------------|
| 1        | 3290-307 | 2    | Pin-Cotter             |
| 2        | 3256-23  | 2    | Washer-Flat            |
| 5        | 46-8090  | 2    | Screw-Tapping          |
| 6        | 3256-22  | 2    | Washer-Flat            |
| 7        | 88-4690  | 1    | Block - Pivot          |
| 8        | 23-0310  | 1    | Shoulder Bolt          |
| 9        | 93-3812  | 1    | Pedal - Speed Control  |
| 10       | 3296-59  | 1    | Nut-Lock               |
| 11       | 92-7305  | 1    | Spring - Extension     |
| 12       | 32151-83 | 1    | Ring-Retaining         |
| 13       | 92-9793  | 1    | Rod-Speed Control      |
| 14       | 88-5610  | 2    | Lever - Neutral Return |

| Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|-------------|
|          |          |      |             |

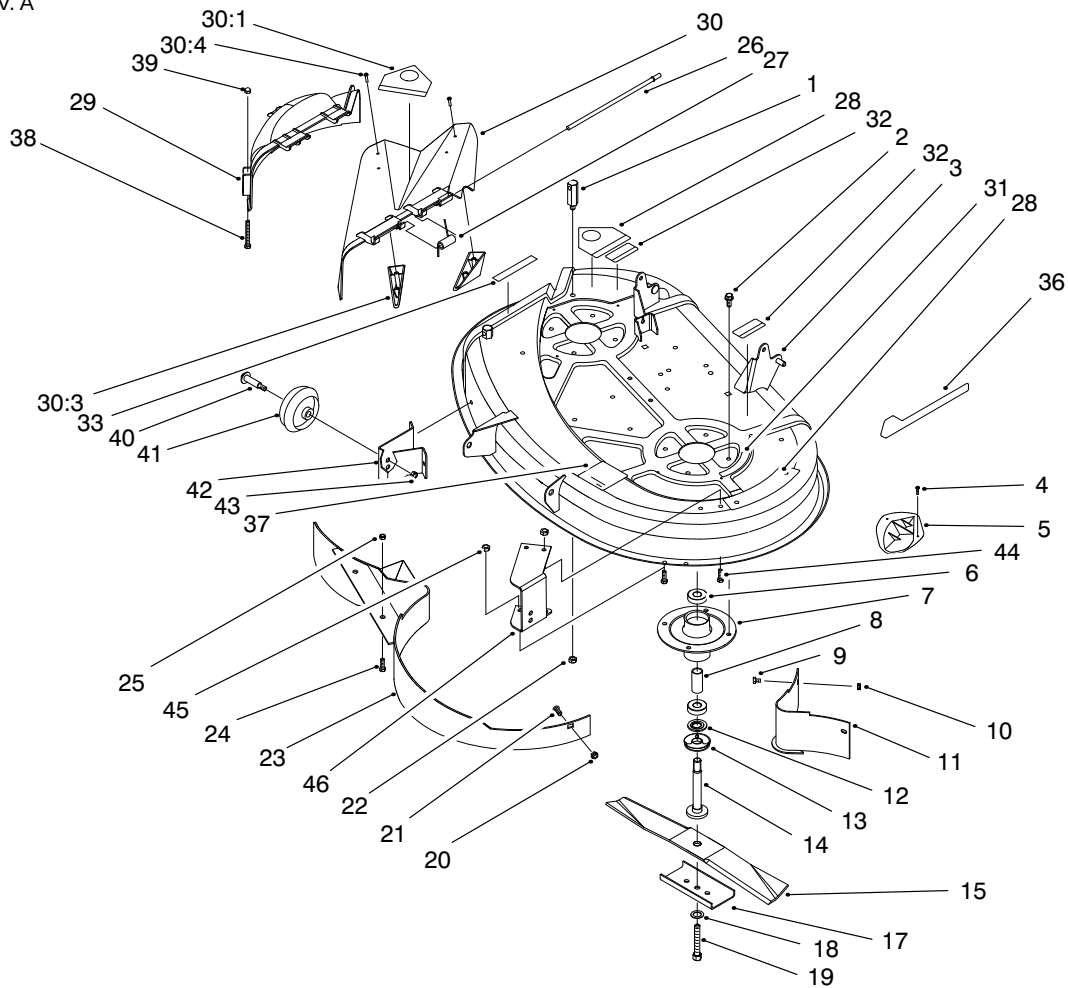


Sheet No.:16

## Deck Assembly (38" Cutting Unit)
 
| Ref. No. | Part No.   | Qty. | Description             |
|----------|------------|------|-------------------------|
| 1        | 57-4360    | 1    | Pivot Post – Rear       |
| 2        | 32144-41   | 8    | Screw-HWHTF             |
| 3        | 94-1949-01 | 1    | Deck Wa-38"             |
| 4        | 32144-111  | 8    | Screw – PPH             |
| 5        | 76-2160    | 4    | Plate-Kicker            |
| 6        | 38-7820    | 4    | Bearing-Ball            |
| 7        | 88-4510    | 2    | Spindle – Diecast Alum. |
| 8        | 62-3661    | 2    | Spacer – Bearing        |
| 9        | 321-4      | 2    | Screw-HH                |
| 10       | 3296-42    | 2    | Nut-Lock                |
| 11       | 79-1640-03 | 1    | Wa-Baffle               |
| 12       | 80-4380    | 2    | Spacer – Hardened       |
| 13       | 80-4360    | 2    | Shield – Bearing        |
| 14       | 80-4341    | 2    | Shaft – Spindle         |
| 15       | 79-3061    | 2    | Blade-19.32 Recycler    |
| 17       | 80-0510    | 2    | Stiffener – Blade       |
| 18       | 3290-465   | 2    | Washer-Spring           |
| 19       | 26-0671    | 2    | Bolt-Blade              |
| 20       | 3296-29    | 1    | Nut-Lock                |
| 21       | 3230-1     | 1    | Bolt-CARR               |
| 22       | 3296-39    | 1    | Nut-Lock                |
| 23       | 79-1600-03 | 1    | Wa-Baffle               |
| 24       | 323-5      | 2    | Screw-HH                |
| 25       | 3296-39    | 2    | Nut-Lock                |
| 26       | 57-4380    | 1    | Rod- Hinge Deflector    |

| Ref. No. | Part No.   | Qty. | Description              |
|----------|------------|------|--------------------------|
| 27       | 57-6950    | 1    | Spring-Torsion Deflector |
| 28       | 93-7010    | 2    | Decal-Danger             |
| 29       | 88-4430    | 1    | Recycler Cover ASM       |
| 30       | 93-7695    | 1    | ASM.-38" Deflector       |
| 30:1     | 93-7010    | 1    | Decal – Danger           |
| 30:3     | 93-7696    | 2    | Kicker – Ce              |
| 30:4     | 93-0231    | 4    | Screw – Plastite         |
| 31       | 93-6677    | 1    | Decal – Shield Danger    |
| 32       | 93-6674    | 2    | Decal-Warninig           |
| 33       | 93-7009    | 1    | Decal-Deflector Danger   |
| 36       | 92-9520    | 1    | Decal-Deck               |
| 37       | 93-6679    | 1    | Decal – Belt Routing     |
| 38       | 321-15     | 2    | Screw-HH                 |
| 39       | 32111-7    | 2    | Nut-Cap                  |
| 40       | 56-6591    | 2    | Wheel Bolt               |
| 41       | 701756     | 2    | Wheel – Deck             |
| 42       | 88-5740-03 | 1    | Bracket-Deck Wheel RH    |
| 43       | 3296-39    | 2    | Nut-Lock                 |
| 44       | 322-3      | 6    | Screw-HH                 |
| 45       | 3296-29    | 6    | Nut-Lock                 |
| 46       | 93-3896-03 | 1    | Bracket-Deck Wheel LH    |

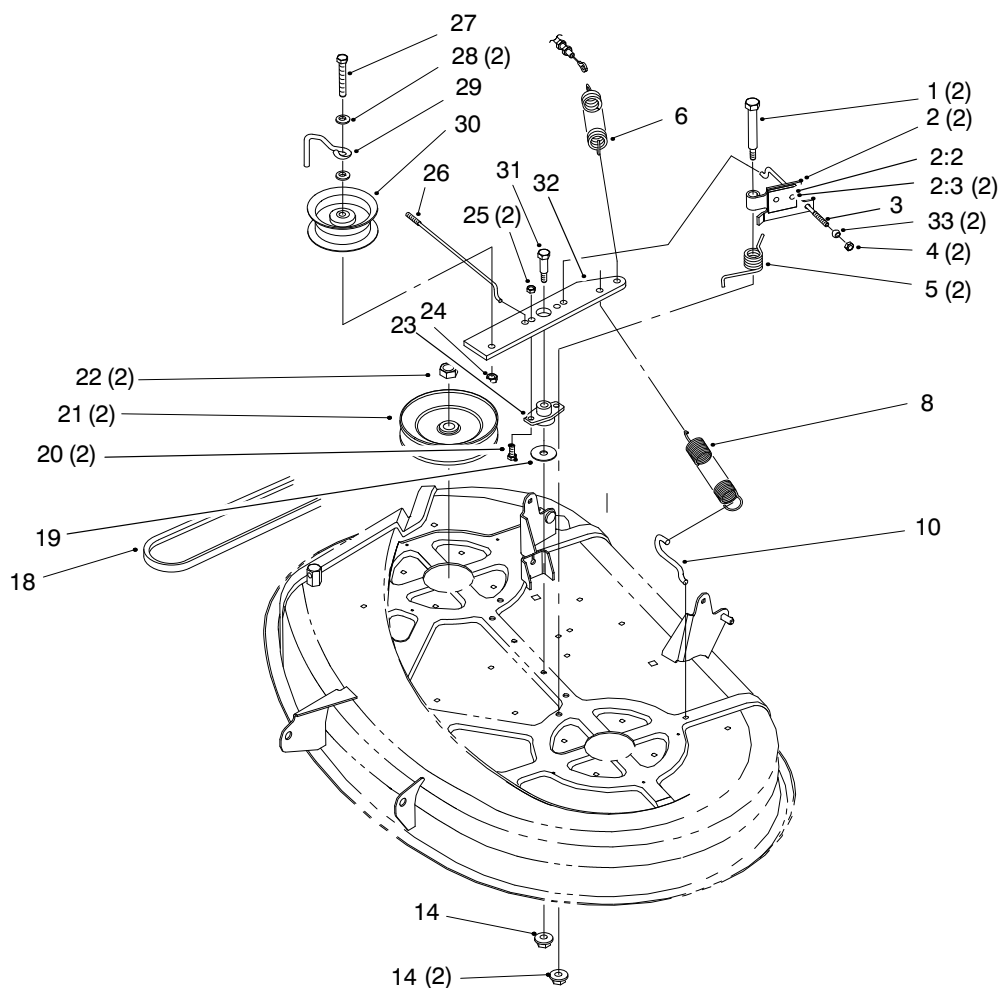


Sheet No.:17

## Pulley & Belt Assembly (38" Cutting Unit)
 
| Ref. No. | Part No. | Qty. | Description           | Ref. No. | Part No.   | Qty. | Description   |
|----------|----------|------|-----------------------|----------|------------|------|---------------|
| 1        | 88-4590  | 2    | Bolt-Shoulder         | 32       | 88-4870-03 | 1    | Arm - Idler   |
| 2        | 88-6100  | 2    | ASM. - Deck Brake     | 33       | 67-0710    | 2    | Ball - Swivel |
| 2:2      | 56-9830  | 2    | Brake Pad             |          |            |      |               |
| 2:3      | 3290-282 |      | Pop Rivet             |          |            |      |               |
| 3        | 88-5550  | 1    | Rod - L.h. Deck Brake |          |            |      |               |
| 4        | 3296-42  | 2    | Nut-Lock              |          |            |      |               |
| 5        | 88-5910  | 2    | Spring - Torsion      |          |            |      |               |
| 6        | 88-6130  | 1    | Spring - Deck Engage  |          |            |      |               |
| 8        | 92-8934  | 1    | Spring - Extension    |          |            |      |               |
| 10       | 88-5970  | 1    | Hook - Return Spring  |          |            |      |               |
| 14       | 3296-58  | 3    | Nut-Flange            |          |            |      |               |
| 18       | 88-6250  | 1    | V-Belt                |          |            |      |               |
| 19       | 3256-68  | 1    | Washer-Flt            |          |            |      |               |
| 20       | 322-5    | 2    | Screw-HH              |          |            |      |               |
| 21       | 88-5330  | 2    | Pulley - Deck         |          |            |      |               |
| 22       | 3219-6   | 2    | Nut-Hex               |          |            |      |               |
| 23       | 88-4980  | 1    | Bushing - Idler Arm   |          |            |      |               |
| 24       | 3296-39  | 1    | Nut-Lock              |          |            |      |               |
| 25       | 3296-29  | 2    | Nut-Lock              |          |            |      |               |
| 26       | 88-5540  | 1    | Rod -RH Deck Brake    |          |            |      |               |
| 27       | 323-12   | 1    | Screw                 |          |            |      |               |
| 28       | 3256-24  | 2    | Washer-Flat           |          |            |      |               |
| 29       | 88-5070  | 1    | Belt Guide - Idler    |          |            |      |               |
| 30       | 88-5630  | 1    | Pulley - Idler        |          |            |      |               |
| 31       | 7-0030   | 1    | Shoulder Bolt         |          |            |      |               |




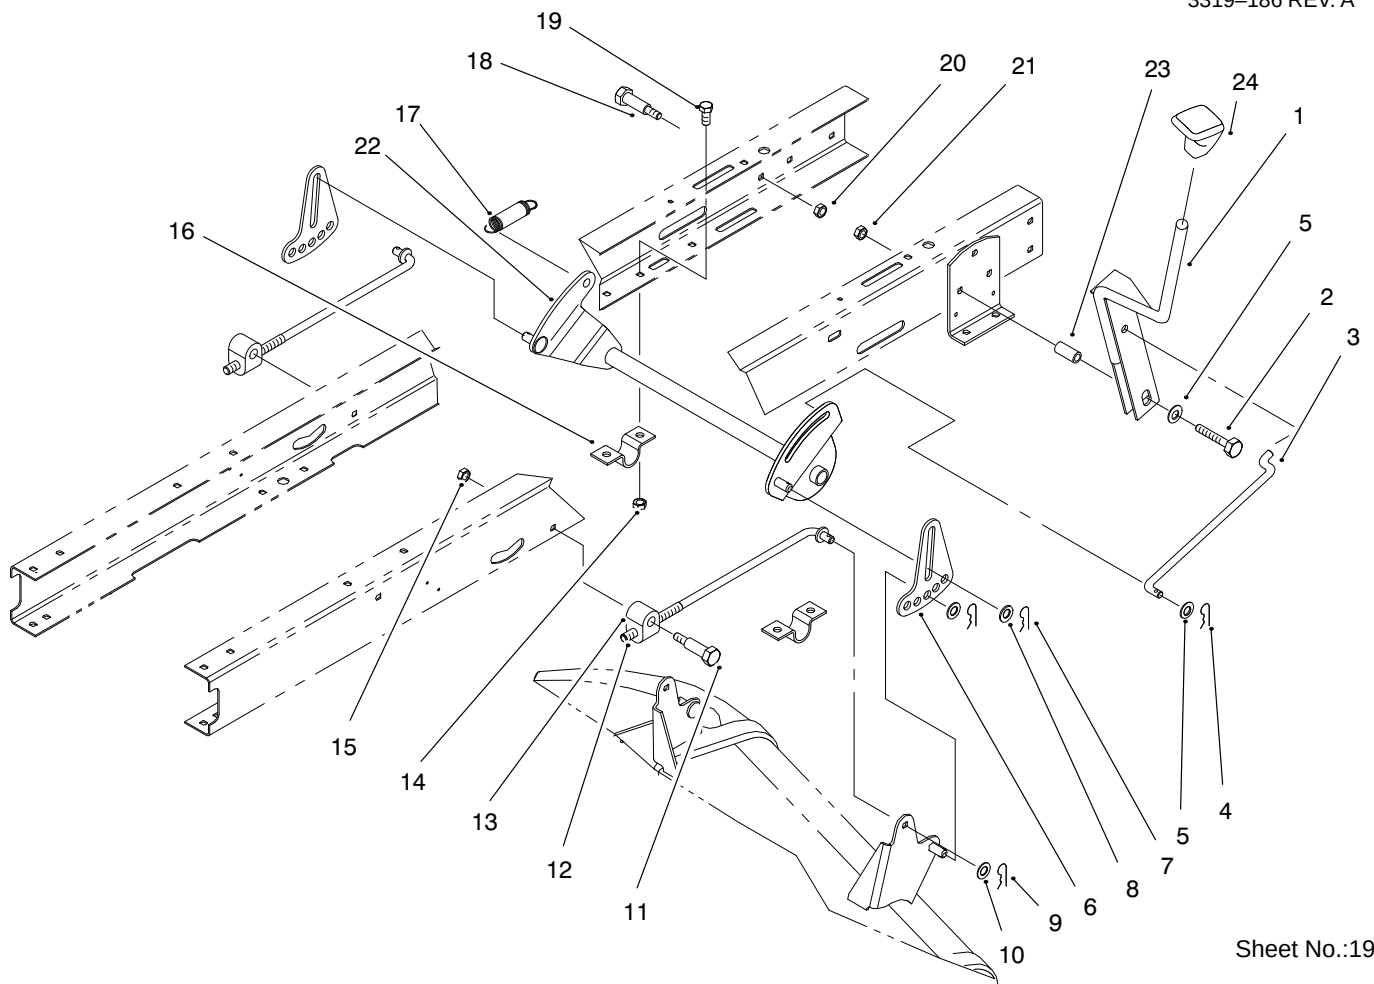

Sheet No.:19

## Height of Cut Assembly
 
| Ref. No. | Part No.   | Qty. | Description         | Ref. No. | Part No. | Qty. | Description |
|----------|------------|------|---------------------|----------|----------|------|-------------|
| 1        | 93-3822-03 | 1    | Lever-HOC           |          |          |      |             |
| 2        | 322-9      | 1    | Screw-HH            |          |          |      |             |
| 3        | 88-5900    | 1    | Link - HOC          |          |          |      |             |
| 4        | 3290-307   | 1    | Pin-Cotter          |          |          |      |             |
| 5        | 3256-24    | 2    | Washer-Flat         |          |          |      |             |
| 6        | 88-5570-03 | 2    | Link-Adjusting HOC  |          |          |      |             |
| 7        | 3290-307   | 4    | Pin-Cotter          |          |          |      |             |
| 8        | 80-6990    | 4    | Washer-Hardened     |          |          |      |             |
| 9        | 3290-307   | 2    | Pin-Cotter          |          |          |      |             |
| 10       | 3256-24    | 2    | Washer-Flat         |          |          |      |             |
| 11       | 7-0030     | 2    | Shoulder Bolt       |          |          |      |             |
| 12       | 88-5450    | 2    | Rod - Hanger        |          |          |      |             |
| 13       | 88-4230    | 2    | Trunnion - HOC      |          |          |      |             |
| 14       | 3296-29    | 4    | Nut-Lock            |          |          |      |             |
| 15       | 3296-29    | 2    | Nut-Lock            |          |          |      |             |
| 16       | 88-4730    | 2    | Clamp - HOC Pivot   |          |          |      |             |
| 17       | 88-6460    | 1    | Spring - Extension  |          |          |      |             |
| 18       | 7-0030     | 1    | Shoulder Bolt       |          |          |      |             |
| 19       | 322-3      | 4    | Screw-HH            |          |          |      |             |
| 20       | 3296-29    | 1    | Nut-Lock            |          |          |      |             |
| 21       | 3296-29    | 1    | Nut-Lock            |          |          |      |             |
| 22       | 88-5110-03 | 1    | Pivot W.a. (H.o.c.) |          |          |      |             |
| 23       | 65-7210    | 1    | Spacer              |          |          |      |             |
| 24       | 94-5565    | 1    | Knob - Control      |          |          |      |             |

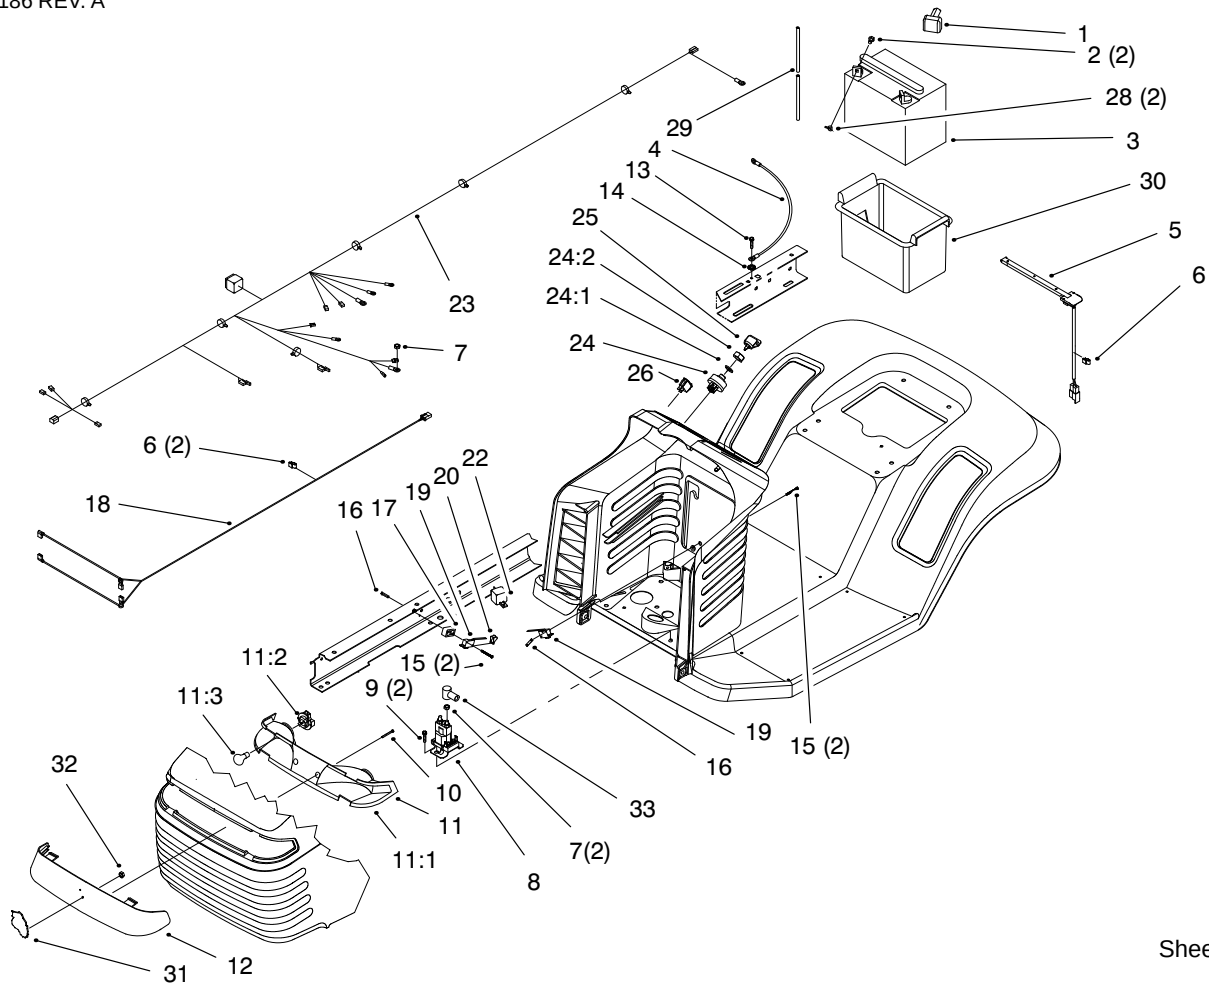


Sheet No.:20

## Electrical Assembly
 
| Ref. No. | Part No. | Qty. | Description           |
|----------|----------|------|-----------------------|
| 1        | 28-8080  | 1    | Boot-Battery Terminal |
| 2        | 321-4    | 2    | Screw-HH              |
| 3        | 80-2600  | 1    | Battery - 7 Plate     |
| 4        | 44-8110  | 1    | Battery Cable -Neg    |
| 5        | 38-1420  | 1    | Switch-Seat           |
| 6        | 702366   | 1    | Clip-Wire Retainer    |
| 6        | 702366   | 2    | Clip-Wire Retainer    |
| 7        | 32149-2  | 3    | Nut-Hex Lock          |
| 8        | 92-9845  | 1    | Solenoid              |
| 9        | 9266714  | 2    | Screw-HWHTF           |
| 10       | 32144-32 | 2    | Screw-Plastic         |
| 11       | 88-3970  | 1    | Reflector-Lamp        |
| 12       | 88-3960  | 1    | Lense - Headlights    |
| 13       | 9266714  | 1    | Screw-HWHTF           |
| 14       | 3255-7   | 1    | Washer-Lock           |
| 15       | 93-0539  | 4    | Screw-PPH             |
| 16       | 3290-354 | 2    | Nut-Speed             |
| 17       | 88-4880  | 1    | Spacer - Microswitch  |
| 18       | 88-4320  | 1    | Harness-Wire          |
| 19       | 88-9932  | 2    | Switch - Micro        |
| 20       | 93-3240  | 1    | Seal-Plunger          |
| 22       | 116397   | 1    | Relay                 |
| 23       | 93-3810  | 1    | Wire Harness          |
| 24       | 88-9830  | 1    | Switch-Ignition       |
| 24:1     | 3254-5   | 1    | Washer-Lock (F/W Sw)  |

| Ref. No. | Part No. | Qty. | Description             |
|----------|----------|------|-------------------------|
| 24:2     | 218-461  | 1    | Nut-HH (F/W Sw)         |
| 25       | 63-8360  | 1    | Key-Ignition            |
| 26       | 92-8875  | 1    | Switch-Rocker           |
| 28       | 32103-22 | 2    | Nut-Wing                |
| 29       | 56-2540  | 1    | Tube-Vent Use w/80-2600 |
| 30       | 88-4040  | 1    | Battery Box             |
| 31       | 80-2240  | 1    | Plate-Name Grille       |
| 32       | 3290-299 | 1    | Nut - Tinnerman         |
| 33       | 94-5362  | 1    | Boot-Terminal Insulator |

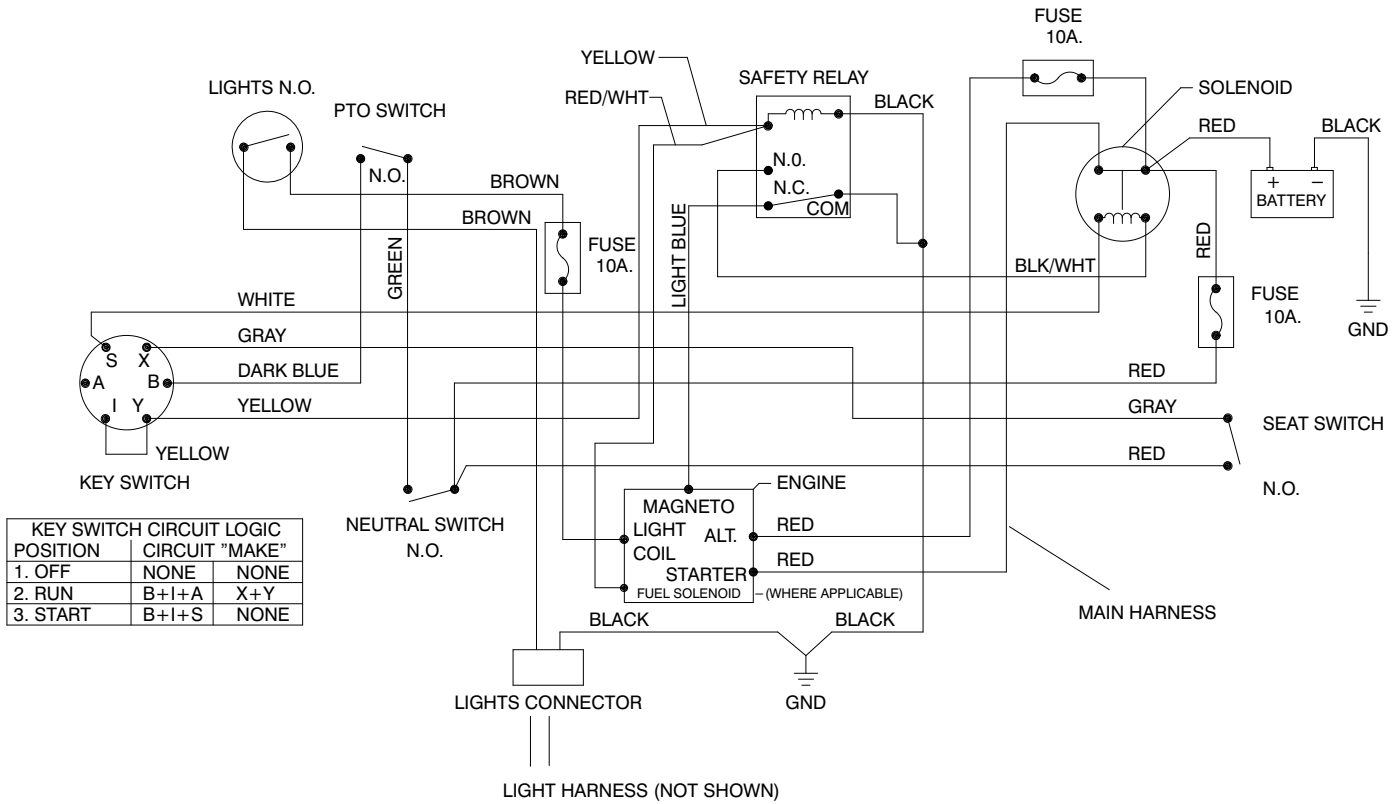

Sheet No.:21


# Electrical Schematic
 
| Ref. No. | Part No. | Qty. | Description   |
|----------|----------|------|---------------|
| *        | 218-578  | 3    | Fuse – 10 Amp |

| Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|-------------|
|          |          |      |             |

\* Not Illustrated



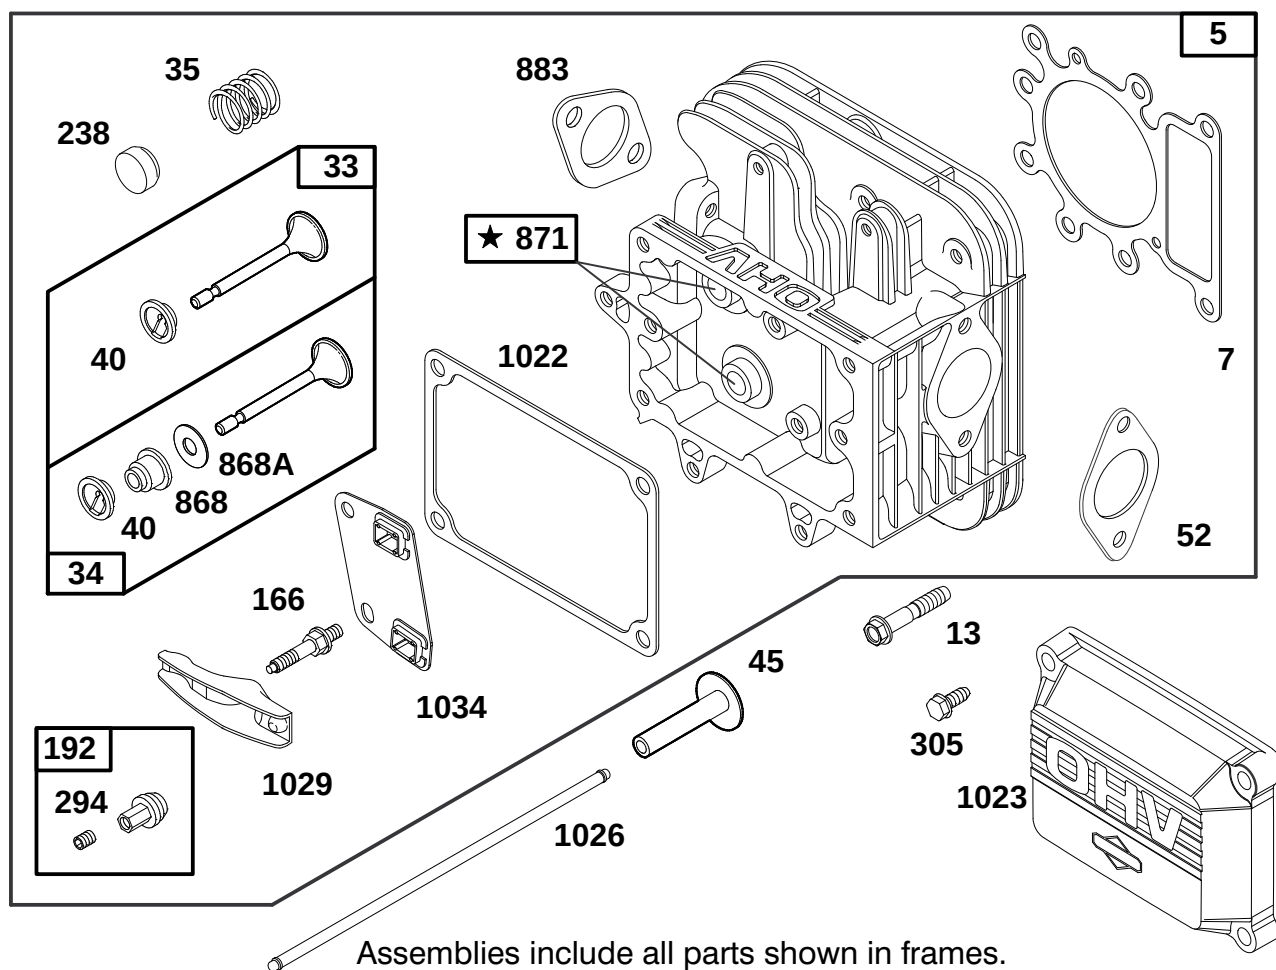

Assemblies include all parts shown in frames.

## ENGINE BRIGGS & STRATTON MODEL 28N777-0174-01

 
| Ref. No. | Part No. | Description          | No. Used | Ref. No.                                  | Part No. | Description                           | No. Used |
|----------|----------|----------------------|----------|-------------------------------------------|----------|---------------------------------------|----------|
| 5        | 495858   | Head—Cylinder        | 1        | Δ★868                                     | 494435   | Seal—Valve                            | 1        |
| Δ★7      | 272614   | Gasket—Cylinder Head | 1        | Δ★868A                                    | 272610   | Seal—Valve                            | 1        |
| 13       | 94728    | Screw—Cylinder Head  | 1        | 871                                       | 262835   | Bushing—Guide<br>(Intake and Exhaust) | 1        |
| 33       | 495856   | Valve—Exhaust        | 1        | Δ★883                                     | 272293   | Gasket—Exhaust                        | 1        |
| 34       | 495857   | Valve—Intake         | 1        | Δ★1022                                    | 272475   | Gasket—Rocker Cover                   | 1        |
| 35       | 262811   | Spring—Valve         | 1        | 1023                                      | 224552   | Cover—Rocker                          | 1        |
| 40       | 224641   | Retainer—Valve       | 1        | 1026                                      | 494432   | Rod—Push<br>(Intake)                  | 1        |
| 45       | 262411   | Tappet—Valve         | 1        | <b>Note:</b> 495136 Rod—Push<br>(Exhaust) |          |                                       | 1        |
| Δ★52     | 272569   | Gasket—Carburetor    | 1        | 1029                                      | 224554   | Arm—Rocker                            | 1        |
| 166      | 94555    | Stud—Rocker Arm      | 1        | 1034                                      | 494432   | Guide—Push Rod                        | 1        |
| 192      | 492160   | Adjuster—Valve       | 1        |                                           |          |                                       |          |
| 238      | 262836   | Cap—Valve            | 1        |                                           |          |                                       |          |
| 294      | 810068   | Screw—Set            | 1        |                                           |          |                                       |          |
| 305      | 94786    | Screw—Hex. Head      | 1        |                                           |          |                                       |          |

★ Included in Gasket Set—Part No. 495993.

Δ Included in Valve Overhaul Kit—Part No. 495992.

● Included in Carburetor Kit—Part No. 498116.

◆ Included in Carburetor Gasket Set—Part No. 494385.

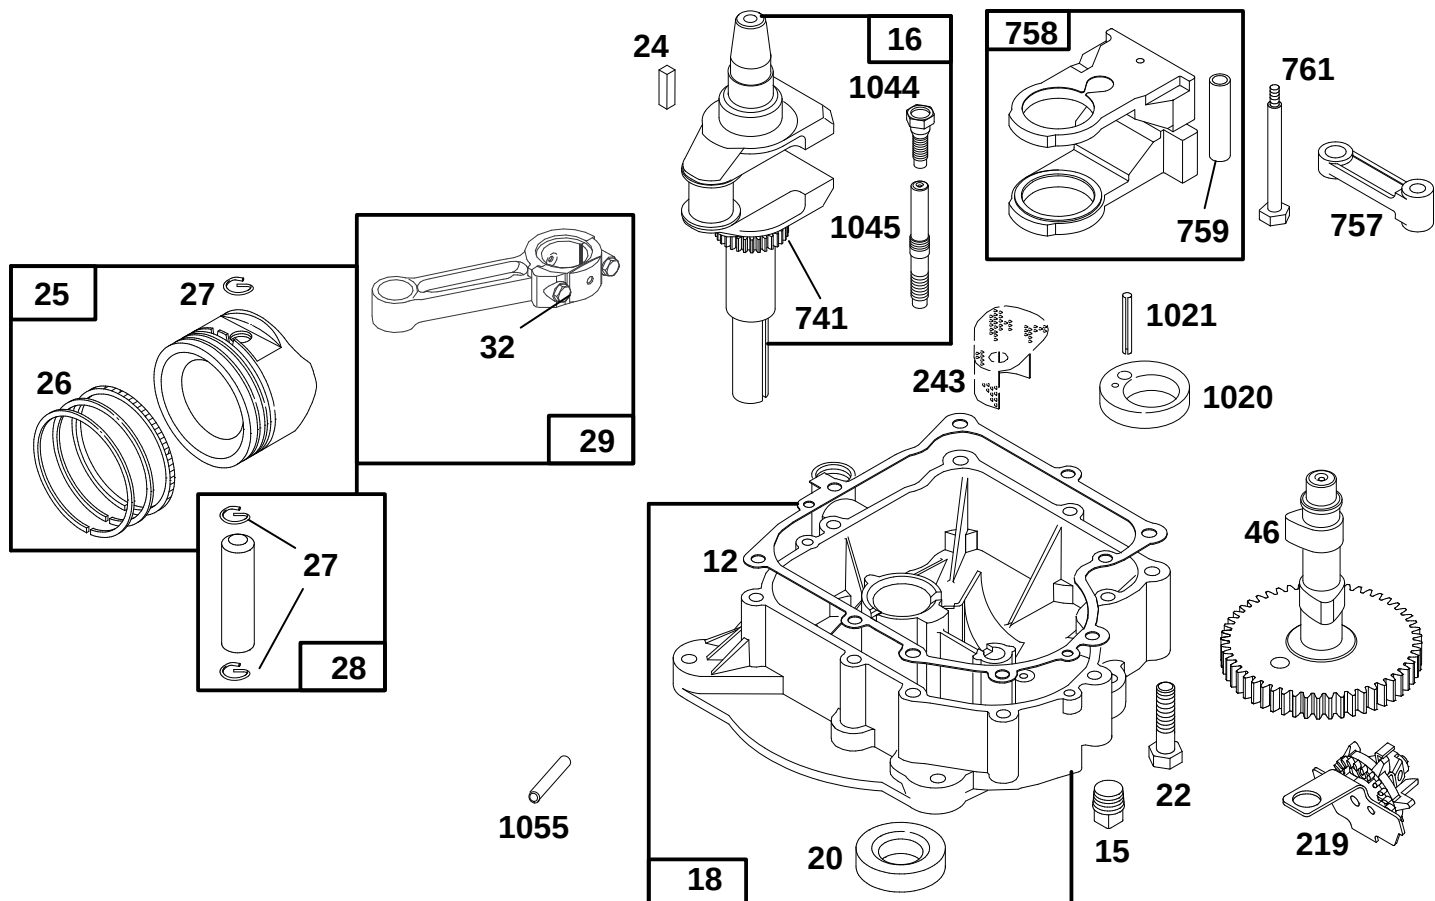

Assemblies include all parts shown in frames.

## ENGINE BRIGGS & STRATTON MODEL 28N777-0174-01

| Ref. No. | Part No. | Description                                   | No. Used |
|----------|----------|-----------------------------------------------|----------|
| ★12      | 271916   | Gasket-Crankcase (.015" Thick)                | 1        |
| ★        | 271997   | Gasket-Crankcase (.005" Thick)                | 1        |
| ★        | 271996   | Gasket-Crankcase (.009" Thick)                | 1        |
| 15       | 94239    | Plug-Oil Drain                                | 1        |
| 16       | 495162   | Crankshaft                                    | 1        |
|          |          | <b>Note:</b> For Timing Gear Key-Order 94196. | 1        |
| 18       | 496742   | Base-Engine                                   | 1        |
| ★20      | 291675   | Seal-Oil                                      | 1        |
| 22       | 94624    | Screw-Sem                                     | 1        |
| 24       | 222698   | Key-Flywheel                                  | 1        |
| 25       | 494860   | Piston Assembly (Standard)                    | 1        |
|          | 495977   | Piston Assy. (.010" O.S.)                     | 1        |
|          | 495978   | Piston Assy. (.020" O.S.)                     | 1        |
|          | 495979   | Piston Assy. (.030" O.S.)                     | 1        |
| 26       | 495854   | Ring Set (Standard)                           | 1        |
|          | 495852   | Ring Set (.010" O.S.)                         | 1        |
|          | 495851   | Ring Set (.020" O.S.)                         | 1        |
|          | 495855   | Ring Set (.030" O.S.)                         | 1        |

 
| Ref. No. | Part No. | Description                     | No. Used |
|----------|----------|---------------------------------|----------|
| 27       | 260924   | Lock-Piston Pin                 | 1        |
| 28       | 299691   | Pin-Piston (Standard)           | 1        |
|          | 391286   | Pin-Piston (.005" O.S.)         | 1        |
| 29       | 494504   | Rod-Connecting                  | 1        |
|          | 495490   | Rod-Conn. (.020" U.S.)          | 1        |
| 32       | 94695    | Screw-Conn. Rod (1 57/64" Long) | 1        |
|          | 94648    | Screw-Conn. Rod (1 5/8" Long)   | 1        |
| 46       | 496885   | Gear-Cam                        | 1        |
| 219      | 490815   | Gear-Governor                   | 1        |
| 243      | 225076   | Screen-Oil Pump                 | 1        |
| 741      | 262932   | Gear-Timing                     | 1        |
| 757      | 213998   | Link-Counterweight              | 1        |
| 758      | 399891   | Counterweight Assy.             | 1        |
| 759      | 298909   | Pin-Counterweight               | 1        |
| 761      | 94593    | Screw-Counterweight             | 1        |
| 1020     | 262243   | Eccentric                       | 1        |
| 1021     | 94160    | Pin-Eccentric                   | 1        |
| 1044     | 94673    | Screw-Shoulder                  | 1        |
| 1045     | 231828   | Extension-Crankshaft            | 1        |
| 1055     | 231931   | Tube-Oil Pump                   | 1        |

★ Included in Gasket Set-Part No. 495993.

△ Included in Valve Overhaul Kit-Part No. 495992.

● Included in Carburetor Kit-Part No. 498116.

◆ Included in Carburetor Gasket Set-Part No. 494385.

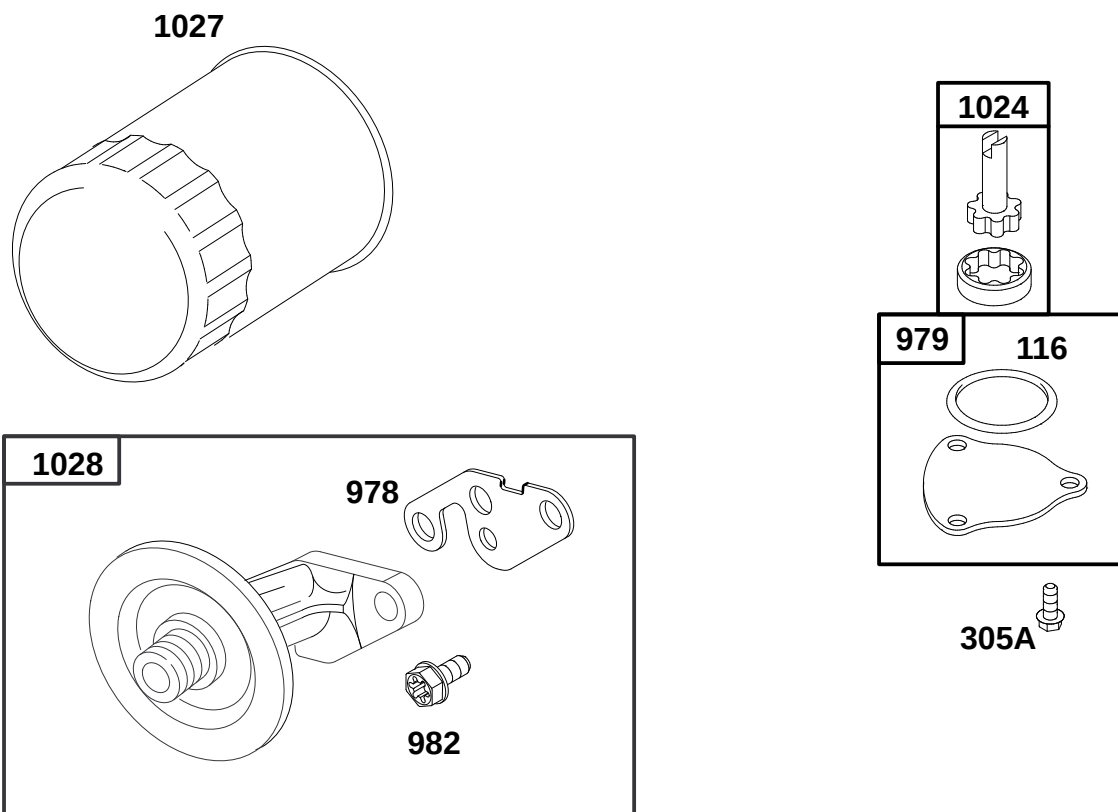

Assemblies include all parts shown in frames.

# ENGINE BRIGGS & STRATTON MODEL 28N777-0174-01

| Ref.<br>No. | Part No. | Description    | No.<br>Used |
|-------------|----------|----------------|-------------|
| ★116        | 281402   | Seal—O-Ring    | 1           |
| 305A        | 94619    | Screw—Sem      | 1           |
| ★978        | 272888   | Gasket—Adapter | 1           |
| 979         | 496745   | Cover—Pump     | 1           |
| 982         | 94773    | Screw—Sem      | 1           |

 
| Ref. No. | Part No. | Description      | No. Used |
|----------|----------|------------------|----------|
| 1024     | 493884   | Pump – Oil       | 1        |
| 1027     | 492932   | Filter – Oil     | 1        |
| 1028     | 496744   | Adapter – Filter | 1        |

★ Included in Gasket Set—Part No. 495993.


△ Included in Valve Overhaul Kit—Part No. 495992.

- Included in Carburetor Kit—Part No. 498116.

◆ Included in Carburetor Gasket Set—Part No. 494385.

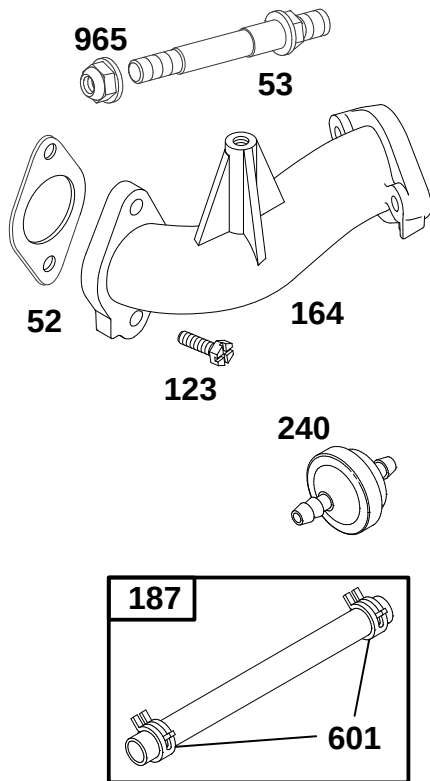

 ★ REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.

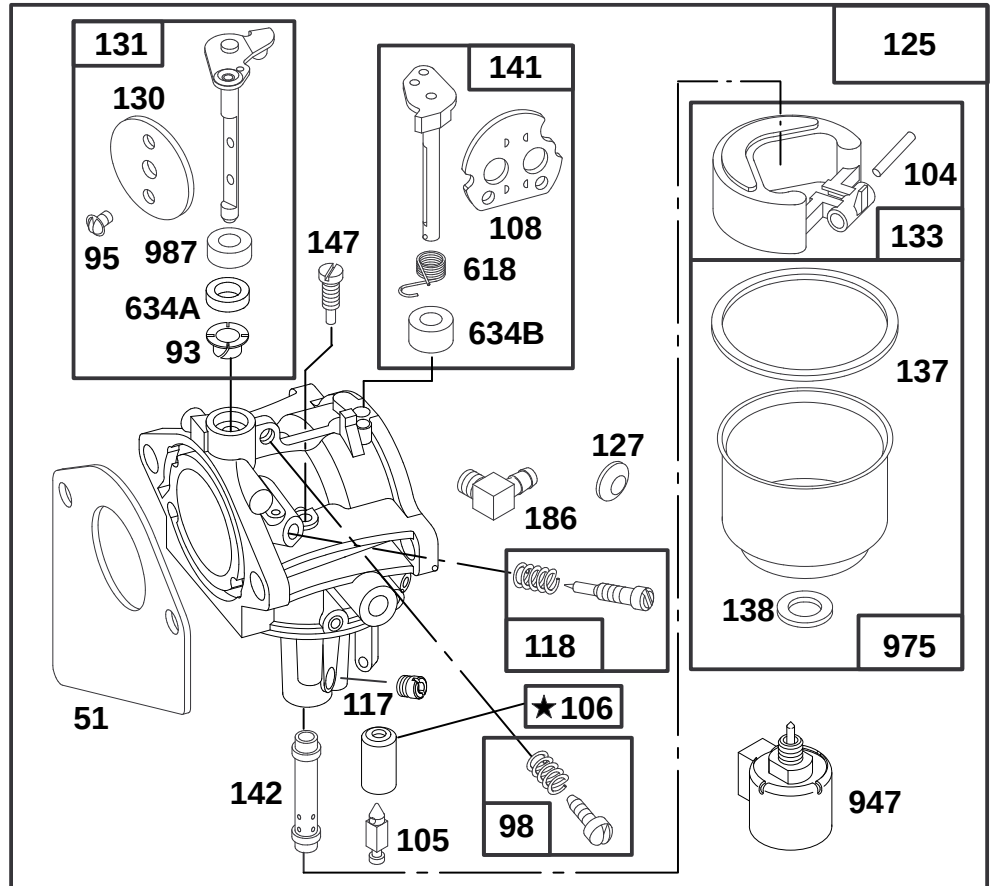

Assemblies include all parts shown in frames.


## ENGINE BRIGGS & STRATTON MODEL 28N777-0174-01
 
| Ref. No. | Part No. | Description                      | No. Used |
|----------|----------|----------------------------------|----------|
| ●◆51     | 272465   | Gasket—Carburetor                | 1        |
| △★52     | 272569   | Gasket—Carburetor                | 1        |
| 53       | 94637    | Stud—Carb. Mtg.                  | 1        |
| ●93      | 281346   | Bushing—Throttle Shaft           | 1        |
| ●95      | 94098    | Screw—Throttle                   | 1        |
| 98       | 495800   | Screw—Idle Adjust                | 1        |
| ●104     | 231789   | Pin—Float Hinge                  | 1        |
| ●105     | 231855   | Valve—Inlet Needle               | 1        |
| ●106     | 231854   | Seat—Inlet                       | 1        |
| 108      | 224540   | Valve—Choke                      | 1        |
| ●117     | 231858   | Jet—Main                         | 1        |
| 117A     | 231850   | Jet—Main (High Altitude)         | 1        |
| 118      | 495932   | Valve—Needle                     | 1        |
| 123      | 94616    | Screw—Elbow Mtg.                 | 1        |
| 125      | 498061   | Carburetor                       | 1        |
| ●127     |          | Plug—Welch<br>(Sold in Kit Only) | 1        |
| 130      | 224539   | Valve—Throttle                   | 1        |
| 131      | 494379   | Shaft—Throttle                   | 1        |

| Ref. No. | Part No. | Description                          | No. Used |
|----------|----------|--------------------------------------|----------|
| 133      | 494381   | Float—Carburetor                     | 1        |
| ●◆137    | 281165   | Gasket—Float Bowl                    | 1        |
| ●◆138    | 281164   | Washer—Float Bowl                    | 1        |
| 141      | 495931   | Shaft—Choke                          | 1        |
| ●142     | 231990   | Nozzle—Carburetor                    | 1        |
| ●147     | 231985   | Jet—Pilot                            | 1        |
| 164      | 214047   | Manifold—Intake                      | 1        |
| 186      | 493496   | Elbow—Fuel Pipe                      | 1        |
| 187      | 393815   | Line—Fuel<br>(11" Long, Cut to Suit) | 1        |
| 240      | 394358   | Filter—Fuel                          | 1        |
| 601      | 93053    | Clamp—Hose                           | 1        |
| 618      | 262803   | Spring—Choke Return                  | 1        |
| ●634A    | 398970   | Seal—Throttle Shaft                  | 1        |
| ●634B    | 281168   | Seal—Choke Shaft                     | 1        |
| 947      | 497157   | Solenoid                             | 1        |
| 965      | 94010    | Nut—Hex.                             | 1        |
| 975      | 495933   | Bowl—Float                           | 1        |
| ●987     | 281166   | Seal—Throttle Shaft                  | 1        |

★ Included in Gasket Set—Part No. 495993.  
 △ Included in Valve Overhaul Kit—Part No. 495992.

● Included in Carburetor Kit—Part No. 499116.  
 ◆ Included in Carburetor Gasket Set—Part No. 494385.

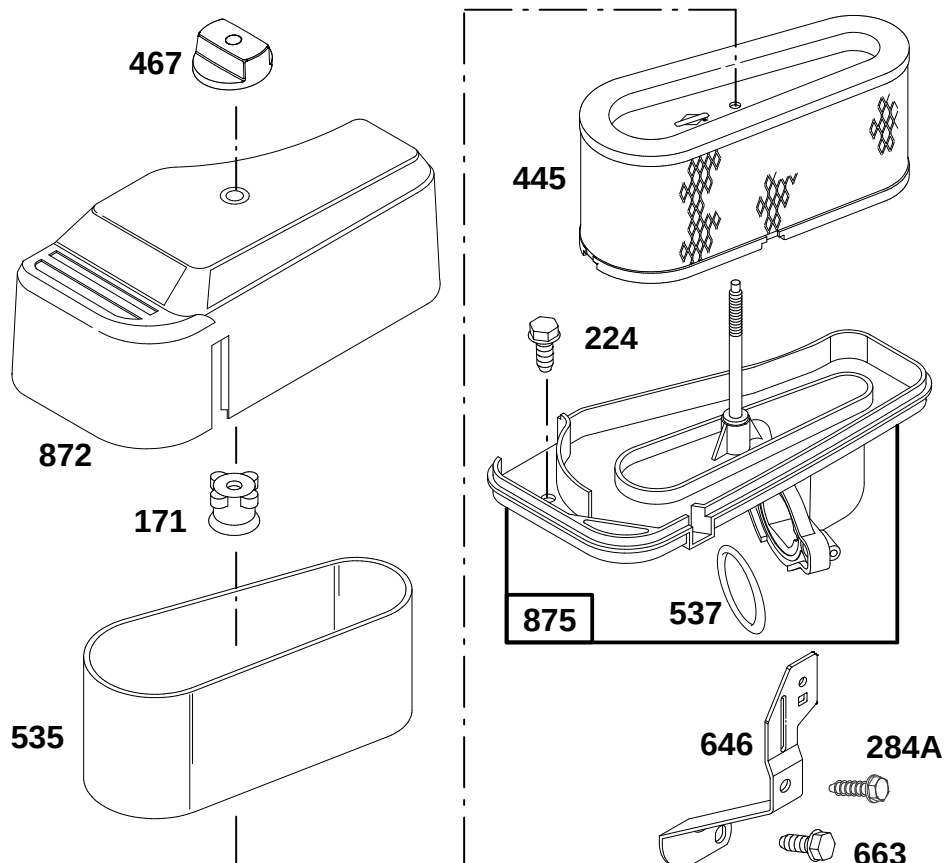

Assemblies include all parts shown in frames.

## ENGINE BRIGGS & STRATTON MODEL 28N777-0174-01

 
| Ref. No. | Part No. | Description           | No. Used | Ref. No. | Part No. | Description        | No. Used |
|----------|----------|-----------------------|----------|----------|----------|--------------------|----------|
| 171      | 281051   | Nut—Air Cleaner Mtg.  | 1        | ★537     | 281106   | Gasket—Air Cleaner | 1        |
| 224      | 94729    | Screw—Air Cleaner Sem | 1        | 646      | 224546   | Brace—Air Cleaner  | 1        |
| 284A     | 94704    | Screw—Air Cleaner     | 1        | 663      | 94620    | Screw—Hex. Hd.     | 1        |
| 445      | 493910   | Filter—Air            | 1        | 872      | 281361   | Cover—Air Cleaner  | 1        |
| 467      | 493903   | Knob—Air Cleaner      | 1        | 875      | 495862   | Body—Air Cleaner   | 1        |
| 535      | 272403   | Filter—Air            | 1        |          |          |                    |          |

★ Included in Gasket Set—Part No. 495993.

△ Included in Valve Overhaul Kit—Part No. 495992.

● Included in Carburetor Kit—Part No. 498116.

◆ Included in Carburetor Gasket Set—Part No. 494385.

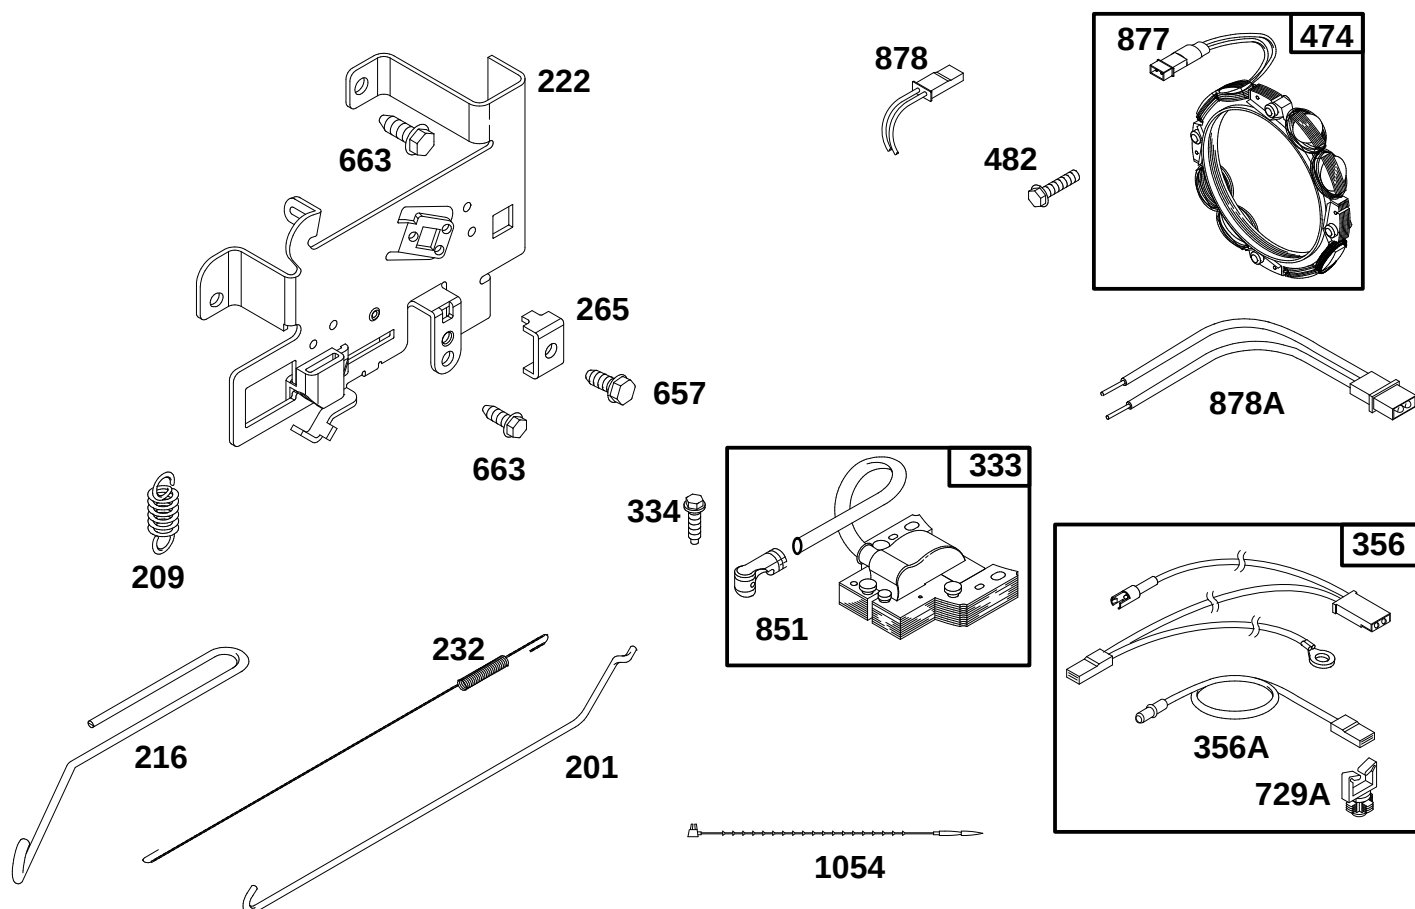

Assemblies include all parts shown in frames.

## ENGINE BRIGGS & STRATTON MODEL 28N777-0174-01

| Ref. No. | Part No. | Description          | No. Used |
|----------|----------|----------------------|----------|
| 201      | 262767   | Link-Governor        | 1        |
| 209      | 260695   | Spring-Governor      | 1        |
| 216      | 262766   | Link-Choke           | 1        |
| 222      | 495611   | Plate-Gov. Control   | 1        |
| 232      | 262785   | Spring-Governor Link | 1        |
| 265      | 221535   | Clamp-Casing         | 1        |
| 333      | 495859   | Armature-Magneto     | 1        |
| 334      | 93381    | Screw-Sem            | 1        |
| 356      | 497708   | Wire-Stop            | 1        |
| 356A     | 494705   | Wire-Ground          | 1        |

 
| Ref. No. | Part No. | Description             | No. Used |
|----------|----------|-------------------------|----------|
| 474      | 393474   | Alternator              | 1        |
| 482      | 93621    | Screw-Sem               | 1        |
| 657      | 93496    | Screw-Sem               | 1        |
| 663      | 94620    | Screw-Hex. Hd.          | 1        |
| 729A     | 281390   | Clip-Lead Wire          | 1        |
| 851      | 493880   | Terminal-Ignition Cable | 1        |
| 877      | 393456   | Diode Assy.             | 1        |
| 878      | 393362   | Harness-Alternator      | 1        |
| 878A     | 399916   | Harness-Alternator      | 1        |
| 1054     | 270723   | Tie-Cable               | 1        |

★ Included in Gasket Set-Part No. 495993.

△ Included in Valve Overhaul Kit-Part No. 495992.

● Included in Carburetor Kit-Part No. 499116.

◆ Included in Carburetor Gasket Set-Part No. 494385.

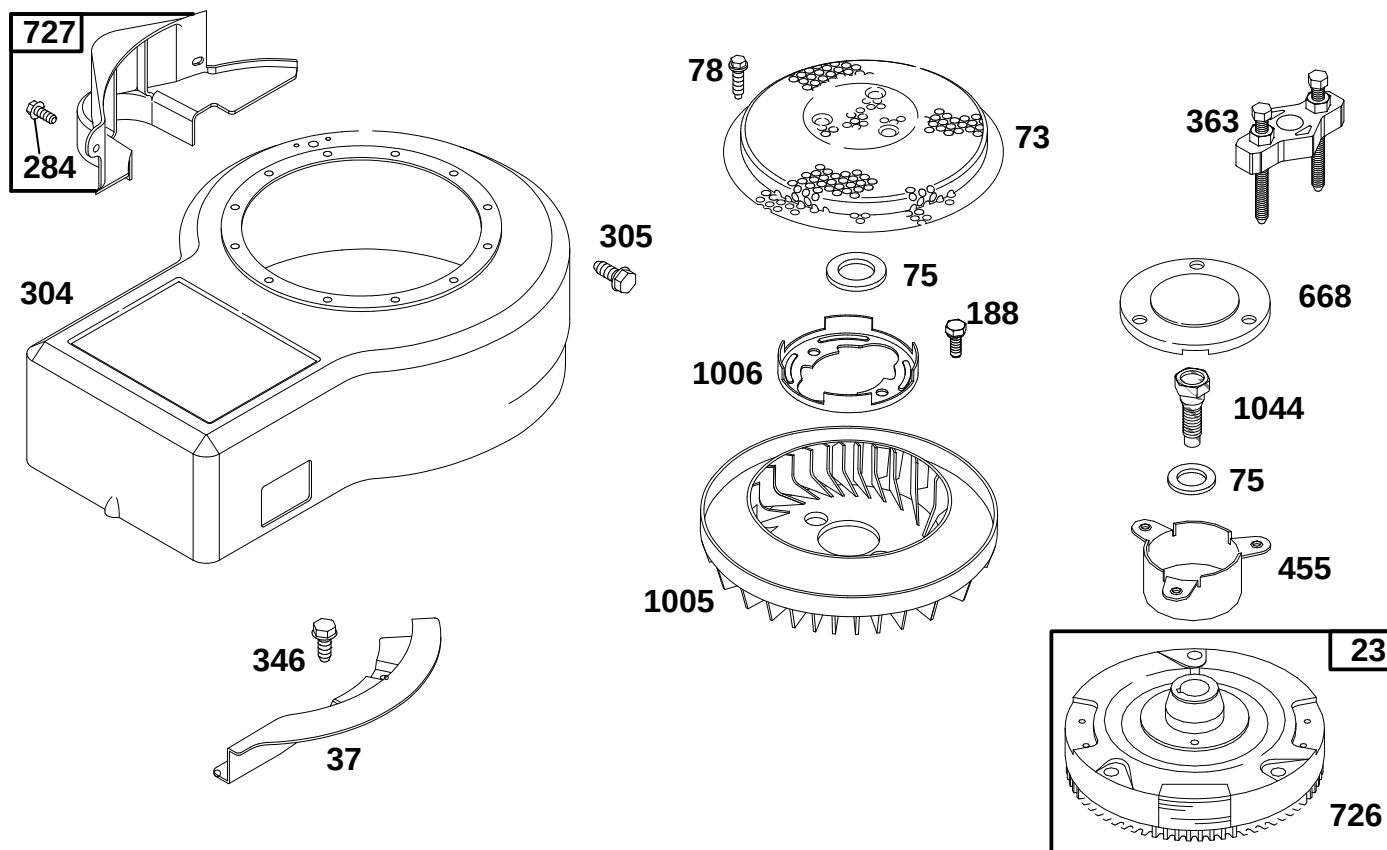

Assemblies include all parts shown in frames.

# ENGINE BRIGGS & STRATTON MODEL 28N777-0174-01

 
| Ref.<br>No. | Part No. | Description     | No.<br>Used |
|-------------|----------|-----------------|-------------|
| 23          | 492326   | Flywheel        | 1           |
| 37          | 224502   | Guard—Flywheel  | 1           |
| 73          | 224948   | Screen—Rotating | 1           |
| 75          | 225136   | Washer—Spring   | 1           |
| 78          | 94954    | Screw—Sem       | 1           |
| 188         | 94627    | Screw—Sem       | 1           |
| 284         | 94073    | Screw—Hex. Head | 1           |
| 304         | 496431   | Housing—Blower  | 1           |
| 346         | 93705    | Screw—Hex. Head | 1           |

| Ref.<br>No. | Part No. | Description                             | No.<br>Used |
|-------------|----------|-----------------------------------------|-------------|
| 363         | 19203    | Puller – Flywheel                       | 1           |
| 455         | 222561   | Cup – Flywheel                          | 1           |
| 668         | 280848   | Spacer                                  | 1           |
| 726         | 392134   | Gear – Ring<br>(Includes Mtg. Hardware) | 1           |
| 727         | 490324   | Guard – Flywheel                        | 1           |
| 1005        | 281355   | Fan – Flywheel                          | 1           |
| 1006        | 224413   | Retainer – Fan                          | 1           |
| 1044        | 94673    | Screw – Shoulder                        | 1           |

★ Included in Gasket Set—Part No. 494241.

◆ Included in Carburetor Gasket Set—Part No. 494385.

- Included in Carburetor Kit—Part No. 496622.

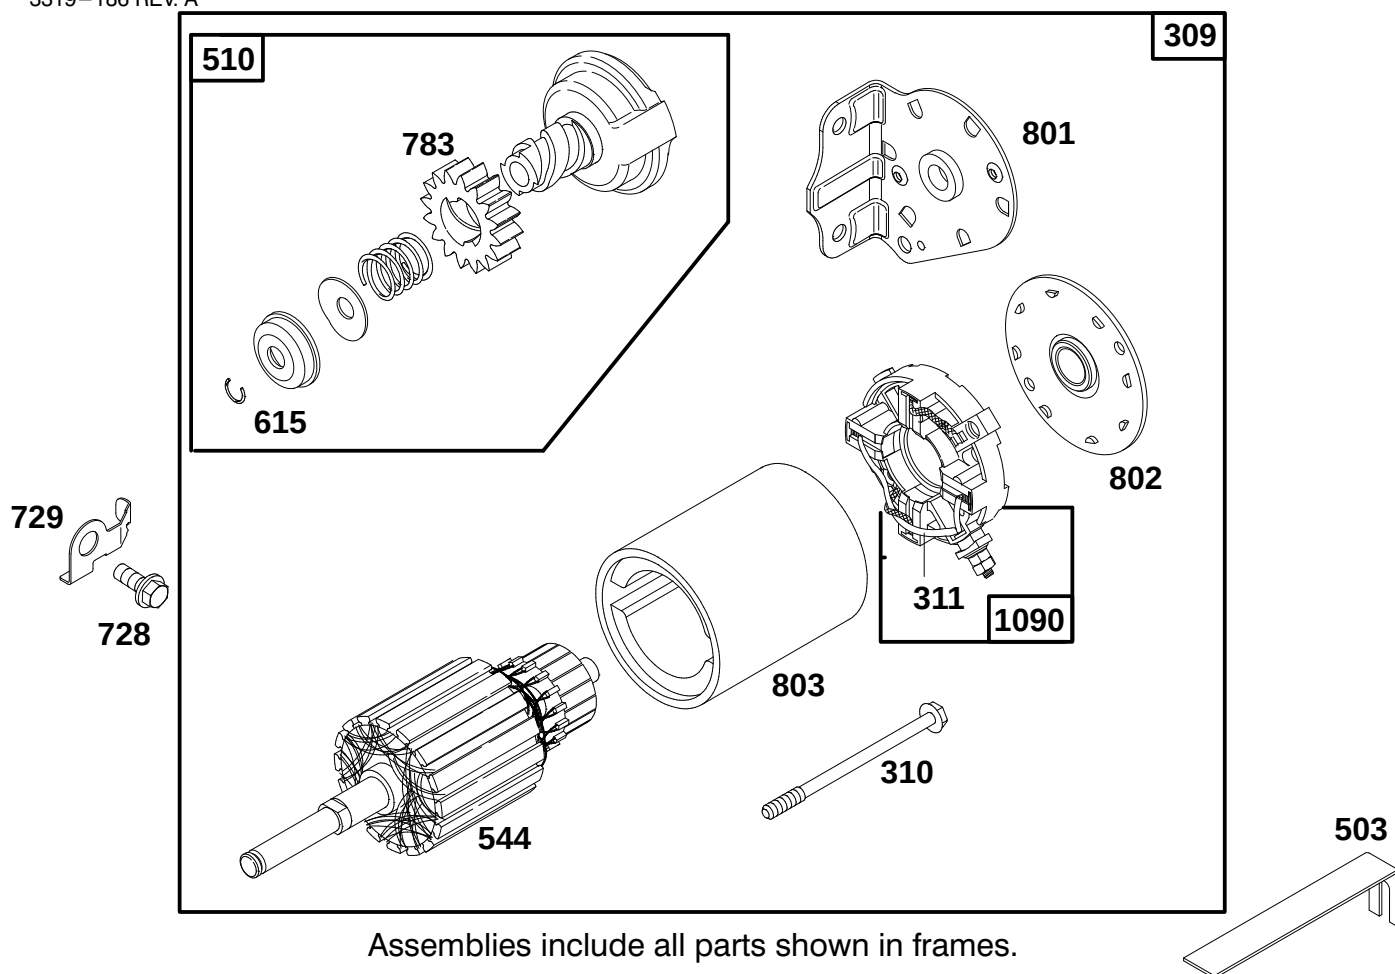

## ENGINE BRIGGS & STRATTON MODEL 28N777-0174-01

| Ref. No. | Part No. | Description      | No. Used |
|----------|----------|------------------|----------|
| 309      | 497595   | Motor—Starter    | 1        |
| 310      | 94003    | Bolt—Thru        | 1        |
| 311      | 497608   | Brush Set        | 1        |
| 503      | 806000   | Strap—Starter    | 1        |
| 510      | 497606   | Drive—Starter    | 1        |
| 544      | 497603   | Armature—Starter | 1        |
| 615      | 263080   | Retainer         | 1        |

 
 
 
 
| Ref. No. | Part No. | Description     | No. Used |
|----------|----------|-----------------|----------|
| 728      | 94627    | Screw—Hex. Head | 1        |
| 729      | 225170   | Clip—Wire       | 1        |
| 783      | 280104   | Gear—Starter    | 1        |
| 801      | 394856   | Cap—Drive       | 1        |
| 802      | 497607   | Plate—Cover     | 1        |
| 803      | 497604   | Housing—Starter | 1        |
| 1090     | 497605   | Cap—End         | 1        |

★ Included in Gasket Set—Part No. 495993.

△ Included in Valve Overhaul Kit—Part No. 495992.

● Included in Carburetor Kit—Part No. 498116.

◆ Included in Carburetor Gasket Set—Part No. 494385.

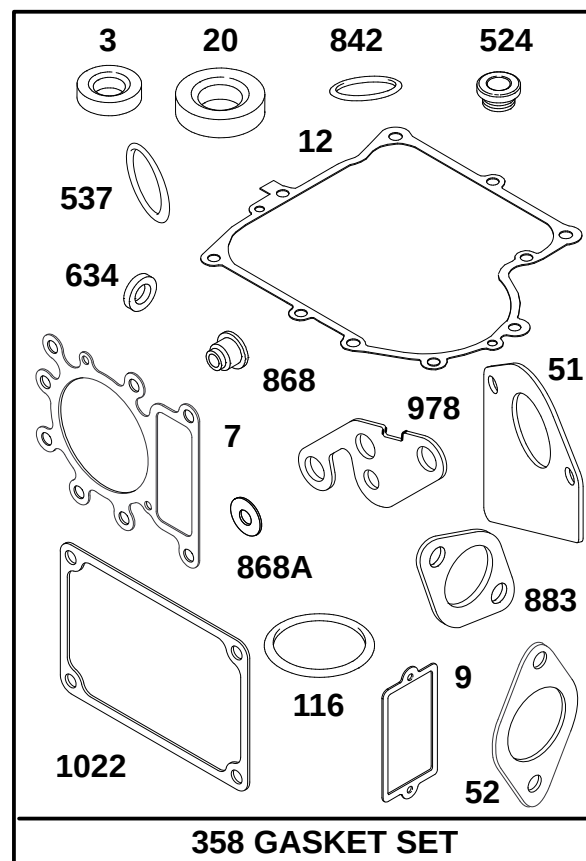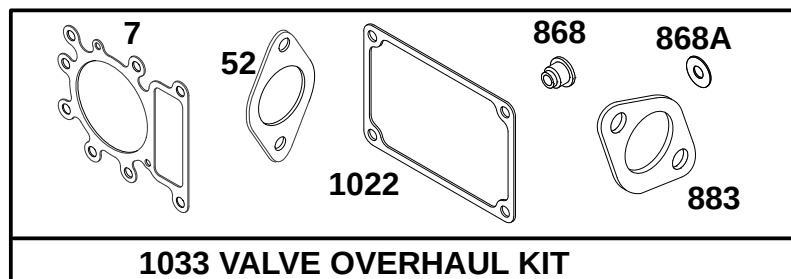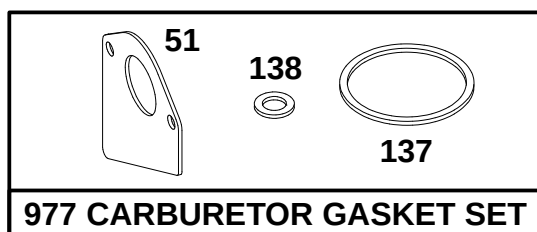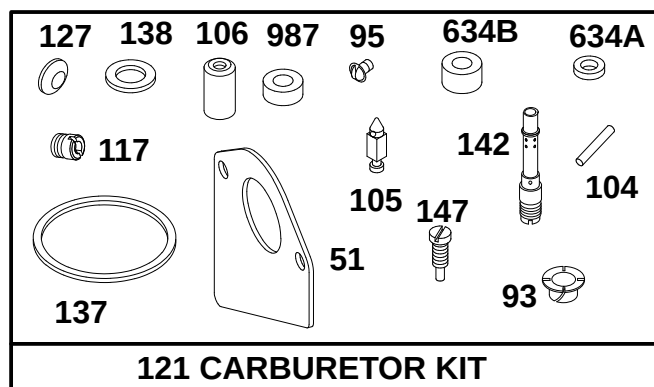

Assemblies include all parts shown in frames.

## ENGINE BRIGGS & STRATTON MODEL 28N777-0174-01

| Ref. No. | Part No. | Description                       | No. Used |
|----------|----------|-----------------------------------|----------|
| ★3       | 391086   | Seal—Oil                          | 1        |
| △★7      | 272614   | Gasket—Cylinder Head              | 1        |
| ★9       | 27803    | Gasket—Valve Cover                | 1        |
| ★12      | 271916   | Gasket—Crankcase<br>(.015" Thick) | 1        |
| ★        | 271997   | Gasket—Crankcase<br>(.005" Thick) | 1        |
| ★        | 271996   | Gasket—Crankcase<br>(.009" Thick) | 1        |
| ★20      | 291675   | Seal—Oil                          | 1        |
| ●◆51     | 272465   | Gasket—Carburetor                 | 1        |
| △★52     | 272569   | Gasket—Carburetor                 | 1        |
| ●93      | 281346   | Bushing—Throttle Shaft            | 1        |
| ●95      | 94098    | Screw—Throttle                    | 1        |
| ●104     | 231789   | Pin—Float Hinge                   | 1        |
| ●105     | 231855   | Valve—Inlet Needle                | 1        |
| ●106     | 231854   | Seat—Inlet                        | 1        |
| ★116     | 281402   | Seal—O-Ring                       | 1        |
| ●117     | 231858   | Jet—Main                          | 1        |
| 121      | 498116   | Carburetor Kit                    | 1        |
| ●127     |          | Plug—Welch<br>(Sold in Kit Only). | 1        |

| Ref. No. | Part No. | Description           | No. Used |
|----------|----------|-----------------------|----------|
| ●◆137    | 281165   | Gasket—Float Bowl     | 1        |
| ●◆138    | 281164   | Washer—Float Bowl     | 1        |
| ●142     | 231990   | Nozzle—Carburetor     | 1        |
| ●147     | 231985   | Jet—Pilot             | 1        |
| 358      | 495993   | Gasket Set            | 1        |
| ★524     | 281370   | Seal—Fill Tube        | 1        |
| ★537     | 281106   | Gasket—Air Cleaner    | 1        |
| ★634     | 491323   | Seal—Governor         | 1        |
| ●634A    | 398970   | Seal—Throttle Shaft   | 1        |
| ●634B    | 281168   | Seal—Choke Shaft      | 1        |
| ★842     | 270920   | Seal—Oil Fill Cap     | 1        |
| △★868    | 494435   | Seal—Valve            | 1        |
| △★868A   | 272610   | Seal—Valve            | 1        |
| ★883     | 272293   | Gasket—Exhaust        | 1        |
| 977      | 494385   | Carburetor Gasket Set | 1        |
| ★978     | 272888   | Gasket—Adapter        | 1        |
| ●987     | 281166   | Seal—Shaft            | 1        |
| △★1022   | 272475   | Gasket—Rocker Cover   | 1        |
| 1033     | 495992   | Kit—Valve Overhaul    | 1        |

★ Included in Gasket Set—Part No. 495993.

△ Included in Valve Overhaul Kit—Part No. 495992.

● Included in Carburetor Kit—Part No. 498116.

◆ Included in Carburetor Gasket Set—Part No. 494385.

# Toro Part Number Index

| Part No. | Page No. | Ref. No. | Qty. | Description               |
|----------|----------|----------|------|---------------------------|
| 104047   | 6        | 3:1      | 1    | Bushing                   |
| 104048   | 6        | 3:2      | 1    | Assembly – Valve          |
| 111419   | 4        | 12       | 1    | Washer – Bearing          |
| 114621   | 3        | 24       | 1    | Decal – Noise             |
| 115271   | 9        | 5        | 1    | Fan – Hydro               |
| 116397   | 15       | 22       | 1    | Relay                     |
| 701178   | 1        | 1        | 2    | Cap – Protector           |
| 701756   | 11       | 41       | 2    | Wheel – Deck              |
| 702366   | 15       | 6        | 1    | Clip – Wire Retainer      |
| 702366   | 15       | 6        | 2    | Clip – Wire Retainer      |
| 9266714  | 2        | 36       | 2    | Screw – HWHTF             |
| 9266714  | 6        | 38       | 1    | Screw – HWHTF             |
| 9266714  | 6        | 43       | 2    | Screw – HWHTF             |
| 9266714  | 15       | 9        | 2    | Screw – HWHTF             |
| 9266714  | 15       | 13       | 1    | Screw – HWHTF             |
| 9267154  | 6        | 16       | 1    | Screw                     |
| 3-6498   | 4        | 21       | 2    | Washer – Thrust           |
| 3-6498   | 4        | 38       | 4    | Washer – Thrust           |
| 3-6498   | 5        | 17       | 1    | Washer – Thrust           |
| 3-6498   | 5        | 22       | 1    | Washer – Thrust           |
| 3-6498   | 8        | 10       | 2    | Washer – Thrust           |
| 3-7501   | 5        | 11       | 4    | Washer – Curved           |
| 5-4460   | 3        | 4        | 1    | Washer – Fender           |
| 5-4460   | 4        | 17       | 1    | Washer – Fender           |
| 5-4460   | 6        | 9        | 4    | Washer – Fender           |
| 5-4460   | 7        | 35       | 1    | Washer – Fender           |
| 5-4460   | 9        | 20       | 1    | Washer – Fender           |
| 7-0030   | 12       | 31       | 1    | Shoulder Bolt             |
| 7-0030   | 14       | 11       | 2    | Shoulder Bolt             |
| 7-0030   | 14       | 18       | 1    | Shoulder Bolt             |
| 7-0036   | 8        | 11       | 2    | Key – Square              |
| 23-0310  | 10       | 8        | 1    | Shoulder Bolt             |
| 26-0671  | 6        | 12       | 1    | Bolt – Blade              |
| 26-0671  | 11       | 19       | 2    | Bolt – Blade              |
| 26-6701  | 9        | 15       | 1    | Spring – Extension        |
| 27-0220  | 5        | 15       | 2    | Screw – Special HWH       |
| 27-0220  | 6        | 2        | 2    | Screw – Special HWH       |
| 27-0220  | 6        | 27       | 2    | Screw – Special HWH       |
| 27-8890  | 7        | 1        | 1    | Spring – Pedal Return     |
| 28-0540  | 2        | 6        | 2    | Bolt – Shoulder           |
| 28-2480  | 4        | 28       | 2    | Washer – Flat             |
| 28-2480  | 8        | 12       | 2    | Washer – Flat             |
| 28-8080  | 15       | 1        | 1    | Boot – Battery Terminal   |
| 37-8770  | 3        | 1        | 2    | Bolt – Shldr              |
| 37-8770  | 3        | 2        | 2    | Bolt – Shldr              |
| 37-8770  | 7        | 31       | 1    | Bolt – Shldr              |
| 38-1420  | 15       | 5        | 1    | Switch – Seat             |
| 38-7820  | 11       | 6        | 4    | Bearing – Ball            |
| 44-8110  | 15       | 4        | 1    | Battery Cable – Neg       |
| 46-6290  | 13       | 21       | 1    | O – Ring                  |
| 46-8090  | 2        | 13       | 4    | Screw – Tapping           |
| 46-8090  | 2        | 17       | 3    | Screw – Tapping           |
| 46-8090  | 10       | 5        | 2    | Screw – Tapping           |
| 46-8091  | 2        | 3        | 2    | Screw – Tapping           |
| 46-8091  | 2        | 10       | 1    | Screw – Tapping           |
| 47-2963  | 6        | 4        | 1    | Fuel Line                 |
| 48-7620  | 9        | 3        | 1    | Screw                     |
| 52-2891  | 4        | 11       | 2    | Bushing – Steering Links  |
| 56-2540  | 15       | 29       | 1    | Tube – Vent Use w/80-2600 |
| 56-6591  | 11       | 40       | 2    | Wheel Bolt                |
| 56-9830  | 12       | 2:2      | 2    | Brake Pad                 |
| 57-4360  | 11       | 1        | 1    | Pivot Post – Rear         |

\*Not Illustrated

# Toro Part Number Index (cont.)

| Part No.   | Page No. | Ref. No. | Qty. | Description                |
|------------|----------|----------|------|----------------------------|
| 57-4380    | 11       | 26       | 1    | Rod - Hinge Deflector      |
| 57-6950    | 11       | 27       | 1    | Spring - Torsion Deflector |
| 61-9780    | 4        | 26       | 2    | Hubcap                     |
| 61-9780    | 8        | 14       | 2    | Hubcap                     |
| 61-9980    | 13       | 8        | 2    | Screw - Adjusting          |
| 62-3661    | 11       | 8        | 2    | Spacer - Bearing           |
| 63-8360    | 15       | 25       | 1    | Key - Ignition             |
| 65-2920    | 7        | 20       | 1    | Pad - Pedal                |
| 65-5080    | 9        | 22       | 1    | Bushing - Flanged          |
| 65-7210    | 14       | 23       | 1    | Spacer                     |
| 66-0120    | 6        | 1:1      | 1    | Knob                       |
| 67-0710    | 12       | 33       | 2    | Ball - Swivel              |
| 76-2160    | 11       | 5        | 4    | Plate - Kicker             |
| 79-1600-03 | 11       | 23       | 1    | Wa - Baffle                |
| 79-1640-03 | 11       | 11       | 1    | Wa - Baffle                |
| 79-3061    | 11       | 15       | 2    | Blade - 19.32 Recycler     |
| 80-0510    | 11       | 17       | 2    | Stiffener - Blade          |
| 80-2240    | 15       | 31       | 1    | Plate - Name Grille        |
| 80-2600    | 15       | 3        | 1    | Battery - 7 Plate          |
| 80-4341    | 11       | 14       | 2    | Shaft - Spindle            |
| 80-4360    | 11       | 13       | 2    | Shield - Bearing           |
| 80-4380    | 11       | 12       | 2    | Spacer - Hardened          |
| 80-6090    | 9        | 10       | 1    | Key - Square               |
| 80-6990    | 13       | 9        | 4    | Washer - Hardened          |
| 80-6990    | 14       | 8        | 4    | Washer - Hardened          |
| 88-0890    | 4        | 37       | 1    | Grip - Parking Brake       |
| 88-3840    | 1        | 28       | 1    | Body - Rear                |
| 88-3850    | 5        | 1        | 1    | Steering Wheel             |
| 88-3870    | 5        | 1:2      | 1    | Cover - Steering Wheel     |
| 88-3880    | 6        | 3        | 1    | Gas Tank Assembly          |
| 88-3940-03 | 1        | 5        | 1    | Panel - Rear               |
| 88-3950    | 3        | 25       | 1    | Seat                       |
| 88-3960    | 15       | 12       | 1    | Lense - Headlights         |
| 88-3970    | 15       | 11       | 1    | Reflector - Lamp           |
| 88-3980    | 6        | 31       | 1    | Gas Cap ASM                |
| 88-4020    | 13       | 7        | 1    | Belt Guide - Deck          |
| 88-4030    | 13       | 2        | 1    | Belt Guide - Deck          |
| 88-4040    | 15       | 30       | 1    | Battery Box                |
| 88-4050    | 2        | 12       | 1    | Duct - Hood Air            |
| 88-4070    | 4        | 29:2     | 2    | Tire 15 X 6.00-6           |
| 88-4090    | 8        | 9:2      | 2    | Tire - 18 X 9.50-8         |
| 88-4140    | 2        | 23       | 2    | Nut - Wedge                |
| 88-4160    | 2        | 24       | 2    | Clamp - Pivot Rod          |
| 88-4170    | 2        | 20       | 1    | Rod - Pivot                |
| 88-4180    | 5        | 5        | 1    | Button - Release           |
| 88-4190    | 5        | 4        | 1    | Bushing - Sliding          |
| 88-4210    | 5        | 19       | 1    | Bushing - Stationary       |
| 88-4230    | 14       | 13       | 2    | Trunnion - HOC             |
| 88-4300    | 8        | 9        | 2    | Rear Wheel & Tire ASM      |
| 88-4320    | 15       | 18       | 1    | Harness - Wire             |
| 88-4340    | 6        | 1        | 1    | Throttle Control ASM       |
| 88-4350    | 6        | 30       | 1    | Cable ASM - Throttle       |
| 88-4370    | 4        | 29:1     | 2    | Rim ASM - 15" Front        |
| 88-4390    | 8        | 9:1      | 2    | Rim ASM - 18" Rear         |
| 88-4400    | 4        | 29:4     | 2    | Bearing - Wheel            |
| 88-4410    | 6        | 20       | 1    | Gasket - Muffler           |
| 88-4430    | 11       | 29       | 1    | Recycler Cover ASM         |
| 88-4490    | 6        | 48       | 1    | Reducer - Throttle Rpm     |
| 88-4510    | 11       | 7        | 2    | Spindle - Diecast Alum.    |
| 88-4590    | 12       | 1        | 2    | Bolt - Shoulder            |
| 88-4620-03 | 1        | 11       | 1    | Bracket - Idler Pivot      |
| 88-4630-03 | 1        | 24       | 1    | Plate - Engine Mounting    |

\*Not Illustrated

# Toro Part Number Index (cont.)

| Part No.   | Page No. | Ref. No. | Qty. | Description                |
|------------|----------|----------|------|----------------------------|
| 88-4670    | 4        | 9        | 1    | Bushing – Eccentric        |
| 88-4690    | 10       | 7        | 1    | Block – Pivot              |
| 88-4730    | 14       | 16       | 2    | Clamp – HOC Pivot          |
| 88-4810    | 7        | 13       | 1    | Clamp – Shift Pivot        |
| 88-4820-03 | 3        | 11       | 2    | Bracket – Seat Hinge       |
| 88-4830    | 4        | 34       | 1    | Link – Drag                |
| 88-4850    | 6        | 11       | 1    | Pulley – Engine (38")      |
| 88-4870-03 | 12       | 32       | 1    | Arm – Idler                |
| 88-4880    | 15       | 17       | 1    | Spacer – Microswitch       |
| 88-4890    | 5        | 10       | 1    | Spring – Leaf              |
| 88-4910-03 | 3        | 3        | 1    | Support – Seat             |
| 88-4980    | 12       | 23       | 1    | Bushing – Idler Arm        |
| 88-4990    | 3        | 23       | 1    | Tray – Fender              |
| 88-5000-03 | 7        | 21       | 1    | Pedal – Clutch/Brake       |
| 88-5010    | 4        | 7        | 1    | Spacer – Steering Rack     |
| 88-5030-03 | 3        | 9        | 1    | Gate – HOC                 |
| 88-5070    | 12       | 29       | 1    | Belt Guide – Idler         |
| 88-5110-03 | 14       | 22       | 1    | Pivot W.a. (H.o.c.)        |
| 88-5120-03 | 1        | 21       | 1    | Support – Front Axle       |
| 88-5130-03 | 4        | 5        | 1    | Bracket – Steering Rack    |
| 88-5150    | 5        | 16       | 1    | Bushing – Flange           |
| 88-5180-01 | 5        | 8        | 1    | Bracket – Backup           |
| 88-5190-03 | 2        | 25       | 1    | Lever W.a. – Deck Engage   |
| 88-5200    | 4        | 10       | 1    | Steering Rack W.a.         |
| 88-5230    | 3        | 17       | 1    | Foot Mat – RH              |
| 88-5240    | 3        | 16       | 1    | Foot Mat                   |
| 88-5260-03 | 1        | 10       | 2    | Bracket–Transaxle Mounting |
| 88-5270    | 7        | 29       | 1    | Rod – Clutch/Brake         |
| 88-5330    | 12       | 21       | 2    | Pulley – Deck              |
| 88-5360    | 9        | 12       | 2    | Spacer – Pulley            |
| 88-5380    | 4        | 32       | 1    | Tie Rod – Steering         |
| 88-5450    | 14       | 12       | 2    | Rod – Hanger               |
| 88-5460    | 9        | 17       | 1    | Belt Guide – Trans         |
| 88-5470    | 4        | 23       | 2    | Spacer – Front Axle        |
| 88-5500    | 7        | 15       | 1    | Rod – Pedal Pivot          |
| 88-5510    | 4        | 35       | 1    | Rod–Parking Brake          |
| 88-5520-03 | 4        | 36       | 1    | Bracket–Parking Brake      |
| 88-5540    | 12       | 26       | 1    | Rod –RH Deck Brake         |
| 88-5560    | 7        | 32       | 1    | Belt Guide – Idler         |
| 88-5570-03 | 14       | 6        | 2    | Link–Adjusting HOC         |
| 88-5610    | 10       | 14       | 2    | Lever – Neutral Return     |
| 88-5620    | 9        | 9        | 1    | Strap – Torque             |
| 88-5630    | 12       | 30       | 1    | Pulley – Idler             |
| 88-5680    | 7        | 33       | 1    | Idler Pulley               |
| 88-5740-03 | 11       | 42       | 1    | Bracket–Deck Wheel RH      |
| 88-5900    | 14       | 3        | 1    | Link – HOC                 |
| 88-5910    | 12       | 5        | 2    | Spring – Torsion           |
| 88-5960    | 9        | 6        | 1    | Belt Guide – Trans. LH     |
| 88-5970    | 12       | 10       | 1    | Hook – Return Spring       |
| 88-6040-03 | 2        | 18       | 1    | Bracket – Hinge            |
| 88-6050-03 | 2        | 7        | 1    | Bracket – Hinge            |
| 88-6070    | 7        | 30       | 1    | Arm –Idler                 |
| 88-6090    | 5        | 20       | 1    | Coupling – Steering        |
| 88-6100    | 12       | 2        | 2    | ASM. – Deck Brake          |
| 88-6130    | 12       | 6        | 1    | Spring – Deck Engage       |
| 88-6140    | 7        | 2        | 1    | Spring – Brake             |
| 88-6180    | 9        | 7        | 1    | Pulley – Transmission      |
| 88-6220    | 1        | 4        | 2    | Spring – Compression       |
| 88-6250    | 12       | 18       | 1    | V–Belt                     |
| 88-6280    | 9        | 18       | 1    | V–Belt                     |
| 88-6300    | 5        | 13       | 1    | Shaft – Steering           |
| 88-6330    | 7        | 7        | 1    | Spring – Extension         |

\*Not Illustrated

# Toro Part Number Index (cont.)

| Part No.   | Page No. | Ref. No. | Qty. | Description              |
|------------|----------|----------|------|--------------------------|
| 88-6370    | 5        | 14       | 1    | Shaft W.a. - Steering    |
| 88-6460    | 14       | 17       | 1    | Spring - Extension       |
| 88-9830    | 15       | 24       | 1    | Switch-Ignition          |
| 88-9932    | 15       | 19       | 2    | Switch - Micro           |
| 92-2467    | 2        | 34       | 1    | Decal - Hood Right       |
| 92-2468    | 2        | 33       | 1    | Decal - Hood Left        |
| 92-5730    | 2        | 31       | 1    | Decal - Throttle         |
| 92-5731    | 2        | 30       | 1    | Decal-Ign/Lights         |
| 92-5748    | 2        | 14:1     | 1    | Decal - Air Duct         |
| 92-5782    | 2        | 15       | 1    | Patch - Heat Tape        |
| 92-6013-03 | 9        | 21       | 1    | Bracket - Speed Control  |
| 92-7305    | 10       | 11       | 1    | Spring - Extension       |
| 92-7889-03 | 4        | 30       | 1    | Spindle Wa-RH            |
| 92-7890-03 | 4        | 18       | 1    | Spindle Wa-LH            |
| 92-8650    | 2        | 14       | 1    | Hood-Toro                |
| 92-8856    | 9        | 8        | 1    | Wire - Bypass            |
| 92-8857    | 9        | 26       | 1    | Lever - Bypass           |
| 92-8875    | 15       | 26       | 1    | Switch-Rocker            |
| 92-8934    | 12       | 8        | 1    | Spring - Extension       |
| 92-9520    | 11       | 36       | 1    | Decal-Deck               |
| 92-9674    | 3        | 5        | 1    | Knob-Studded             |
| 92-9793    | 10       | 13       | 1    | Rod-Speed Control        |
| 92-9845    | 15       | 8        | 1    | Solenoid                 |
| 93-0231    | 11       | 30:4     | 4    | Screw - Plastite         |
| 93-0303    | 2        | 1        | 1    | Tower-Steering Toro      |
| 93-0539    | 15       | 15       | 4    | Screw-PPH                |
| 93-3240    | 15       | 20       | 1    | Seal-Plunger             |
| 93-3809    | 6        | 37       | 1    | Bracket-Ground           |
| 93-3810    | 15       | 23       | 1    | Wire Harness             |
| 93-3812    | 10       | 9        | 1    | Pedal - Speed Control    |
| 93-3822-03 | 14       | 1        | 1    | Lever-HOC                |
| 93-3849    | 2        | 37       | 1    | Brkt-Cable               |
| 93-3854    | 6        | 7        | 3    | Belt Guide - Engine      |
| 93-3855    | 6        | 24       | 1    | Belt Guide - R.h.        |
| 93-3864    | 2        | 16       | 1    | Shield - Heat            |
| 93-3880-03 | 6        | 42       | 1    | Shield - Muffler         |
| 93-3881-03 | 13       | 4        | 1    | Pan - Front Deck Suspens |
| 93-3882    | 6        | 41       | 1    | Clip-Tinnerman           |
| 93-3896-03 | 11       | 46       | 1    | Bracket-Deck Wheel LH    |
| 93-6673    | 2        | 32       | 1    | Decal - Deck Engage      |
| 93-6674    | 11       | 32       | 2    | Decal-Warninig           |
| 93-6676    | 1        | 33       | 1    | Decal-Instruction        |
| 93-6677    | 11       | 31       | 1    | Decal - Shield Danger    |
| 93-6678    | 1        | 31       | 1    | Decal - Dump Valve       |
| 93-6679    | 11       | 37       | 1    | Decal - Belt Routing     |
| 93-7009    | 11       | 33       | 1    | Decal-Deflector Danger   |
| 93-7010    | 11       | 30:1     | 1    | Decal - Danger           |
| 93-7010    | 11       | 28       | 2    | Decal-Danger             |
| 93-7657    | 3        | 7        | 1    | Cover - HOC              |
| 93-7695    | 11       | 30       | 1    | ASM.-38" Deflector       |
| 93-7696    | 11       | 30:3     | 2    | Kicker - Ce              |
| 93-8450-03 | 6        | 45       | 1    | Exhaust Shield Wa        |
| 93-9847    | 13       | 12       | 2    | Spacer                   |
| 94-1945    | 9        | 27       | 1    | ASM-Breather Hose        |
| 94-1949-01 | 11       | 3        | 1    | Deck Wa-38"              |
| 94-1951    | 6        | 39       | 1    | Latch-Hood               |
| 94-1952    | 6        | 28       | 1    | Rod-Gas Tank             |
| 94-1953    | 6        | 15       | 1    | Muffler-Exhaust          |
| 94-1962-03 | 4        | 31       | 1    | Front Axle Wa            |
| 94-1970-03 | 13       | 14       | 1    | Bracket-Deck Susp        |
| 94-1971-03 | 13       | 6        | 1    | Bracket-Deck Susp        |
| 94-1980    | 2        | 39       | 2    | Foam-Hood                |

\*Not Illustrated

# Toro Part Number Index (cont.)

| Part No.   | Page No. | Ref. No. | Qty. | Description               |
|------------|----------|----------|------|---------------------------|
| 94–1984    | 2        | 11       | 1    | Pin–Latch                 |
| 94–1998–03 | 1        | 25       | 1    | Frame Rail–RH             |
| 94–1999–03 | 1        | 13       | 1    | Frame Rail–LH             |
| 94–3525    | 6        | 35       | 1    | Decal–Engine              |
| 94–3527    | 2        | 29       | 2    | Decal–Tower               |
| 94–3529    | 1        | 35       | 1    | Decal–Rear Body           |
| 94–4293    | 2        | 35       | 1    | Cable ASM–Deck Engage     |
| 94–5362    | 15       | 33       | 1    | Boot–Terminal Insulator   |
| 94–5565    | 2        | 2        | 1    | Knob – Control            |
| 94–5565    | 14       | 24       | 1    | Knob – Control            |
| 94–5823    | 13       | 5        | 2    | Bolt–Shoulder             |
| 94–6775    | 9        | 11       | 1    | Transaxle ASM–Hydro       |
| 95–2747    | 13       | 20       | 1    | Fitting–Washout           |
| 218–578    | 16       | *        | 3    | Fuse – 10 Amp             |
| 218–461    | 15       | 24:2     | 1    | Nut–HH (F/W Sw)           |
| 232–27     | 4        | 29:3     | 2    | Valve Stem & Cap Assembly |
| 232–27     | 8        | 9:3      | 2    | Valve Stem & Cap Assembly |
| 232–39     | 4        | 29:6     | 2    | Tube Inner 15 X 6–6       |
| 232–41     | 8        | 9:4      | 2    | Tube – Inner              |
| 2412–98    | 6        | 5        | 2    | Clamp–Hose                |
| 302–5      | 4        | 29:5     | 2    | Fitting – Grease          |
| 302–26     | 4        | 8        | 1    | Fitting–Grease            |
| 321–2      | 2        | 5        | 4    | Screw–HH                  |
| 321–4      | 5        | 7        | 2    | Screw–HH                  |
| 321–4      | 11       | 9        | 2    | Screw–HH                  |
| 321–4      | 15       | 2        | 2    | Screw–HH                  |
| 321–9      | 5        | 21       | 2    | Screw–HH                  |
| 321–15     | 11       | 38       | 2    | Screw–HH                  |
| 322–3      | 1        | 7        | 4    | Screw–HH                  |
| 322–3      | 1        | 9        | 4    | Screw–HH                  |
| 322–3      | 1        | 20       | 6    | Screw–HH                  |
| 322–3      | 1        | 23       | 2    | Screw–HH                  |
| 322–3      | 1        | 26       | 4    | Screw–HH                  |
| 322–3      | 1        | 27       | 2    | Screw–HH                  |
| 322–3      | 2        | 28       | 2    | Screw–HH                  |
| 322–3      | 3        | 10       | 4    | Screw–HH                  |
| 322–3      | 6        | 46       | 1    | Screw–HH                  |
| 322–3      | 7        | 14       | 2    | Screw–HH                  |
| 322–3      | 11       | 44       | 6    | Screw–HH                  |
| 322–3      | 14       | 19       | 4    | Screw–HH                  |
| 322–5      | 1        | 2        | 2    | Screw–HH                  |
| 322–5      | 6        | 10       | 2    | Screw–HH                  |
| 322–5      | 12       | 20       | 2    | Screw–HH                  |
| 322–9      | 6        | 6        | 3    | Screw–HH                  |
| 322–9      | 14       | 2        | 1    | Screw–HH                  |
| 322–12     | 8        | 15       | 4    | Screw HH                  |
| 322–12     | 13       | 16       | 2    | Screw HH                  |
| 323–5      | 11       | 24       | 2    | Screw–HH                  |
| 323–9      | 13       | 13       | 2    | Screw–HH                  |
| 323–11     | 7        | 34       | 1    | Screw                     |
| 323–12     | 12       | 27       | 1    | Screw                     |
| 323–13     | 4        | 2        | 2    | Screw–HH                  |
| 3219–6     | 12       | 22       | 2    | Nut–Hex                   |
| 3229–1     | 13       | 22       | 2    | Bolt–CARR.                |
| 3230–1     | 4        | 6        | 4    | Bolt–CARR                 |
| 3230–1     | 11       | 21       | 1    | Bolt–CARR                 |
| 3230–2     | 9        | 19       | 1    | Screw–CARR                |
| 3230–3     | 4        | 4        | 1    | Screw–CARR                |
| 3230–3     | 7        | 22       | 1    | Screw–CARR                |
| 3230–5     | 9        | 23       | 1    | Bolt–Carriage             |
| 3230–7     | 9        | 24       | 1    | Bolt–Carriage             |
| 3231–4     | 4        | 3        | 1    | Bolt–CARR                 |

\*Not Illustrated

# Toro Part Number Index (cont.)

| Part No. | Page No. | Ref. No. | Qty. | Description          |
|----------|----------|----------|------|----------------------|
| 3253-4   | 6        | 21       | 2    | Washer-Lock          |
| 3253-4   | 6        | 47       | 1    | Washer-Lock          |
| 3253-22  | 6        | 13       | 1    | Washer-Lock          |
| 3254-5   | 15       | 24:1     | 1    | Washer-Lock (F/W Sw) |
| 3255-7   | 15       | 14       | 1    | Washer-Lock          |
| 3255-8   | 6        | 23       | 1    | Washer-Lock          |
| 3256-1   | 13       | 19       | 2    | Washer-Flat          |
| 3256-22  | 5        | 6        | 2    | Washer-Flat          |
| 3256-22  | 9        | 25       | 1    | Washer-Flat          |
| 3256-22  | 10       | 6        | 2    | Washer-Flat          |
| 3256-22  | 13       | 10       | 2    | Washer-Flat          |
| 3256-23  | 1        | 3        | 2    | Washer-Flat          |
| 3256-23  | 1        | 22       | 2    | Washer-Flat          |
| 3256-23  | 2        | 27       | 2    | Washer-Flat          |
| 3256-23  | 7        | 23       | 1    | Washer-Flat          |
| 3256-23  | 8        | 16       | 4    | Washer-Flat          |
| 3256-23  | 9        | 2        | 2    | Washer-Flat          |
| 3256-23  | 9        | 14       | 2    | Washer-Flat          |
| 3256-23  | 10       | 2        | 2    | Washer-Flat          |
| 3256-24  | 2        | 21       | 2    | Washer-Flat          |
| 3256-24  | 4        | 20       | 2    | Washer-Flat          |
| 3256-24  | 4        | 24       | 2    | Washer-Flat          |
| 3256-24  | 12       | 28       | 2    | Washer-Flat          |
| 3256-24  | 14       | 5        | 2    | Washer-Flat          |
| 3256-24  | 14       | 10       | 2    | Washer-Flat          |
| 3256-25  | 4        | 13       | 4    | Washer-Flat          |
| 3256-25  | 6        | 14       | 1    | Washer-Flat          |
| 3256-26  | 7        | 18       | 1    | Washer-Flat          |
| 3256-58  | 9        | 4        | 1    | Washer-Flt           |
| 3256-68  | 12       | 19       | 1    | Washer-Flt           |
| 3272-10  | 4        | 14       | 2    | Pin-Cotter           |
| 3272-10  | 4        | 19       | 2    | Pin-Cotter           |
| 3272-10  | 7        | 24       | 1    | Pin-Cotter           |
| 3272-12  | 4        | 27       | 2    | Pin-Cotter           |
| 3274-10  | 6        | 22       | 2    | Screw-Sckt Hd        |
| 3290-282 | 12       | 2:3      | 4    | Pop Rivet            |
| 3290-282 | 3        | 8        | 2    | Pop Rivet            |
| 3290-299 | 15       | 32       | 1    | Nut - Tinnerman      |
| 3290-307 | 2        | 19       | 2    | Pin-Cotter           |
| 3290-307 | 9        | 1        | 1    | Pin-Cotter           |
| 3290-307 | 10       | 1        | 2    | Pin-Cotter           |
| 3290-307 | 14       | 4        | 1    | Pin-Cotter           |
| 3290-307 | 14       | 7        | 4    | Pin-Cotter           |
| 3290-307 | 14       | 9        | 2    | Pin-Cotter           |
| 3290-354 | 15       | 16       | 2    | Nut-Speed            |
| 3290-465 | 11       | 18       | 2    | Washer-Spring        |
| 3290-479 | 3        | 6        | 4    | Fastener-Panel       |
| 3290-479 | 3        | 15       | 12   | Fastener-Panel       |
| 3290-496 | 2        | 8        | 2    | Nut - Retained       |
| 3296-16  | 13       | 18       | 2    | Nut-Lock             |
| 3296-23  | 13       | 17       | 2    | Nut-Lock             |
| 3296-29  | 1        | 6        | 2    | Nut-Lock             |
| 3296-29  | 1        | 8        | 4    | Nut-Lock             |
| 3296-29  | 1        | 12       | 4    | Nut-Lock             |
| 3296-29  | 1        | 14       | 2    | Nut-Lock             |
| 3296-29  | 1        | 15       | 6    | Nut-Lock             |
| 3296-29  | 1        | 16       | 2    | Nut-Lock             |
| 3296-29  | 1        | 29       | 4    | Nut-Lock             |
| 3296-29  | 2        | 26       | 2    | Nut-Lock             |
| 3296-29  | 3        | 12       | 6    | Nut-Lock             |
| 3296-29  | 4        | 1        | 4    | Nut-Lock             |
| 3296-29  | 4        | 16       | 1    | Nut-Lock             |

\*Not Illustrated

# Toro Part Number Index (cont.)

| Part No.  | Page No. | Ref. No. | Qty. | Description            |
|-----------|----------|----------|------|------------------------|
| 3296-29   | 6        | 29       | 4    | Nut-Lock               |
| 3296-29   | 7        | 19       | 1    | Nut-Lock               |
| 3296-29   | 7        | 26       | 2    | Nut-Lock               |
| 3296-29   | 7        | 27       | 1    | Nut-Lock               |
| 3296-29   | 8        | 1        | 4    | Nut-Lock               |
| 3296-29   | 9        | 13       | 5    | Nut-Lock               |
| 3296-29   | 11       | 20       | 1    | Nut-Lock               |
| 3296-29   | 11       | 45       | 6    | Nut-Lock               |
| 3296-29   | 12       | 25       | 2    | Nut-Lock               |
| 3296-29   | 13       | 15       | 2    | Nut-Lock               |
| 3296-29   | 14       | 14       | 4    | Nut-Lock               |
| 3296-29   | 14       | 15       | 2    | Nut-Lock               |
| 3296-29   | 14       | 20       | 1    | Nut-Lock               |
| 3296-29   | 14       | 21       | 1    | Nut-Lock               |
| 3296-39   | 4        | 15       | 1    | Nut-Lock               |
| 3296-39   | 4        | 25       | 2    | Nut-Lock               |
| 3296-39   | 11       | 22       | 1    | Nut-Lock               |
| 3296-39   | 11       | 25       | 2    | Nut-Lock               |
| 3296-39   | 11       | 43       | 2    | Nut-Lock               |
| 3296-39   | 12       | 24       | 1    | Nut-Lock               |
| 3296-39   | 13       | 3        | 2    | Nut-Lock               |
| 3296-42   | 2        | 4        | 4    | Nut-Lock               |
| 3296-42   | 5        | 9        | 2    | Nut-Lock               |
| 3296-42   | 5        | 12       | 2    | Nut-Lock               |
| 3296-42   | 11       | 10       | 2    | Nut-Lock               |
| 3296-42   | 12       | 4        | 2    | Nut-Lock               |
| 3296-42   | 13       | 11       | 2    | Nut-Lock               |
| 3296-58   | 12       | 14       | 3    | Nut-Flange             |
| 3296-59   | 7        | 28       | 2    | Nut-Lock               |
| 3296-59   | 10       | 10       | 1    | Nut-Lock               |
| 32103-22  | 15       | 28       | 2    | Nut-Wing               |
| 32104-76  | 6        | 44       | 2    | Screw-Self TAP         |
| 32104-76  | 13       | 1        | 5    | Screw-Self TAP         |
| 32111-7   | 11       | 39       | 2    | Nut-Cap                |
| 32121-111 | 5        | 2        | 1    | Pin-Spiral             |
| 32128-43  | 2        | 22       | 2    | Nut-Flange             |
| 32144-32  | 15       | 10       | 2    | Screw-Plastic          |
| 32144-41  | 11       | 2        | 8    | Screw-HWHTF            |
| 32144-111 | 11       | 4        | 8    | Screw - PPH            |
| 32144-112 | 6        | 40       | 2    | Screw-Thd Form         |
| 32149-1   | 6        | 26       | 2    | Nut-Keps               |
| 32149-1   | 9        | 16       | 1    | Nut-Keps               |
| 32149-2   | 15       | 7        | 3    | Nut-Hex Lock           |
| 32151-48  | 4        | 33       | 2    | Ring-Retaining         |
| 32151-48  | 5        | 18       | 1    | Ring-Retaining         |
| 32151-48  | 8        | 13       | 2    | Ring-Retaining         |
| 32151-81  | 5        | 3        | 1    | Retaining Ring Push-On |
| 32151-83  | 10       | 12       | 1    | Ring-Retaining         |