



**Count on it.**

Form No. 3396-524 Rev A

# Parts Catalog

## Power Max 726 OE Snowthrower

Model No. 38813—Serial No. 316000001 and Up



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# List of Abbreviations

**AR:** as required

**ASM:** assembly

**BBC:** blade brake control

**BHTF:** button head thread forming

**CARR:** carriage

**CCW:** counter clockwise

**CW:** clockwise

**DEG:** degrees

**DPA:** Dual Point Adjustment

**ECM:** electronic control module

**EXT:** external

**FH:** flat head

**GA:** gauge

**HD:** heavy-duty

**HF:** hex flange

**HH:** hex head

**HHF:** hex head flange

**HHFTF:** hex head flange thread forming

**HJ:** hex jam

**HLH:** hex lag head

**HOC:** height-of-cut

**HP:** high pressure

**HSBH:** hex socket button head

**HSFH:** hex socket flat head

**HSH:** hex socket head

**HWH:** hex washer head

**HWHTF:** hex washer head thread forming

**HYD:** hydraulic

**LH:** left hand

**LP:** low pressure

**LPG:** Liquefied Petroleum Gas

**NI:** nylon insert

**NPTF:** national pipe thread fine

**PFH:** phillips flat head

**PPH:** phillips pan head

**PPHTF:** phillips pan head thread forming

**PRH:** phillips round head

**PTH:** phillips truss head

**PTO:** power-take-off

**RH:** right hand

**ROPS:** roll-over protection system

**RRB:** rear roller brush

**SFH:** slotted fillister head

**SHH:** slotted hex head

**SHWH:** slotted hex washer head

**SPH:** slotted pan head

**SQH:** square head

**SRH:** slotted round head

**STD:** standard

 
**TAP:** self tapping

**TTH:** torx truss head

# Contents

|                                                    |    |
|----------------------------------------------------|----|
| Main Frame and Auger Housing Assembly .....        | 4  |
| Pulleys and Bellcrank Assembly .....               | 6  |
| Impeller Drive Assembly .....                      | 8  |
| Drive Assembly .....                               | 10 |
| Gearbox, Auger and Impeller Assembly .....         | 12 |
| 26 Inch Auger Gearcase Assembly No. 119-7641 ..... | 14 |
| Impeller Assembly .....                            | 16 |
| Engine, Pulley and Belt Assembly .....             | 18 |
| Fuel System and Carburetor Assembly .....          | 20 |
| Intake and Exhaust Assembly .....                  | 22 |
| Ignition and Electrical Assembly .....             | 24 |
| Crankcase Assembly .....                           | 26 |
| Governor Assembly .....                            | 28 |
| Piston and Head Assembly .....                     | 30 |
| Blower Housing and Shrouds Assembly .....          | 32 |
| Engine Decal Assembly .....                        | 34 |
| Chute Assembly .....                               | 36 |
| Quick Stick Assembly .....                         | 38 |
| Handle Assembly .....                              | 40 |
| Control Assembly .....                             | 42 |
| Attachments and Accessories .....                  | 44 |


# Main Frame and Auger Housing Assembly

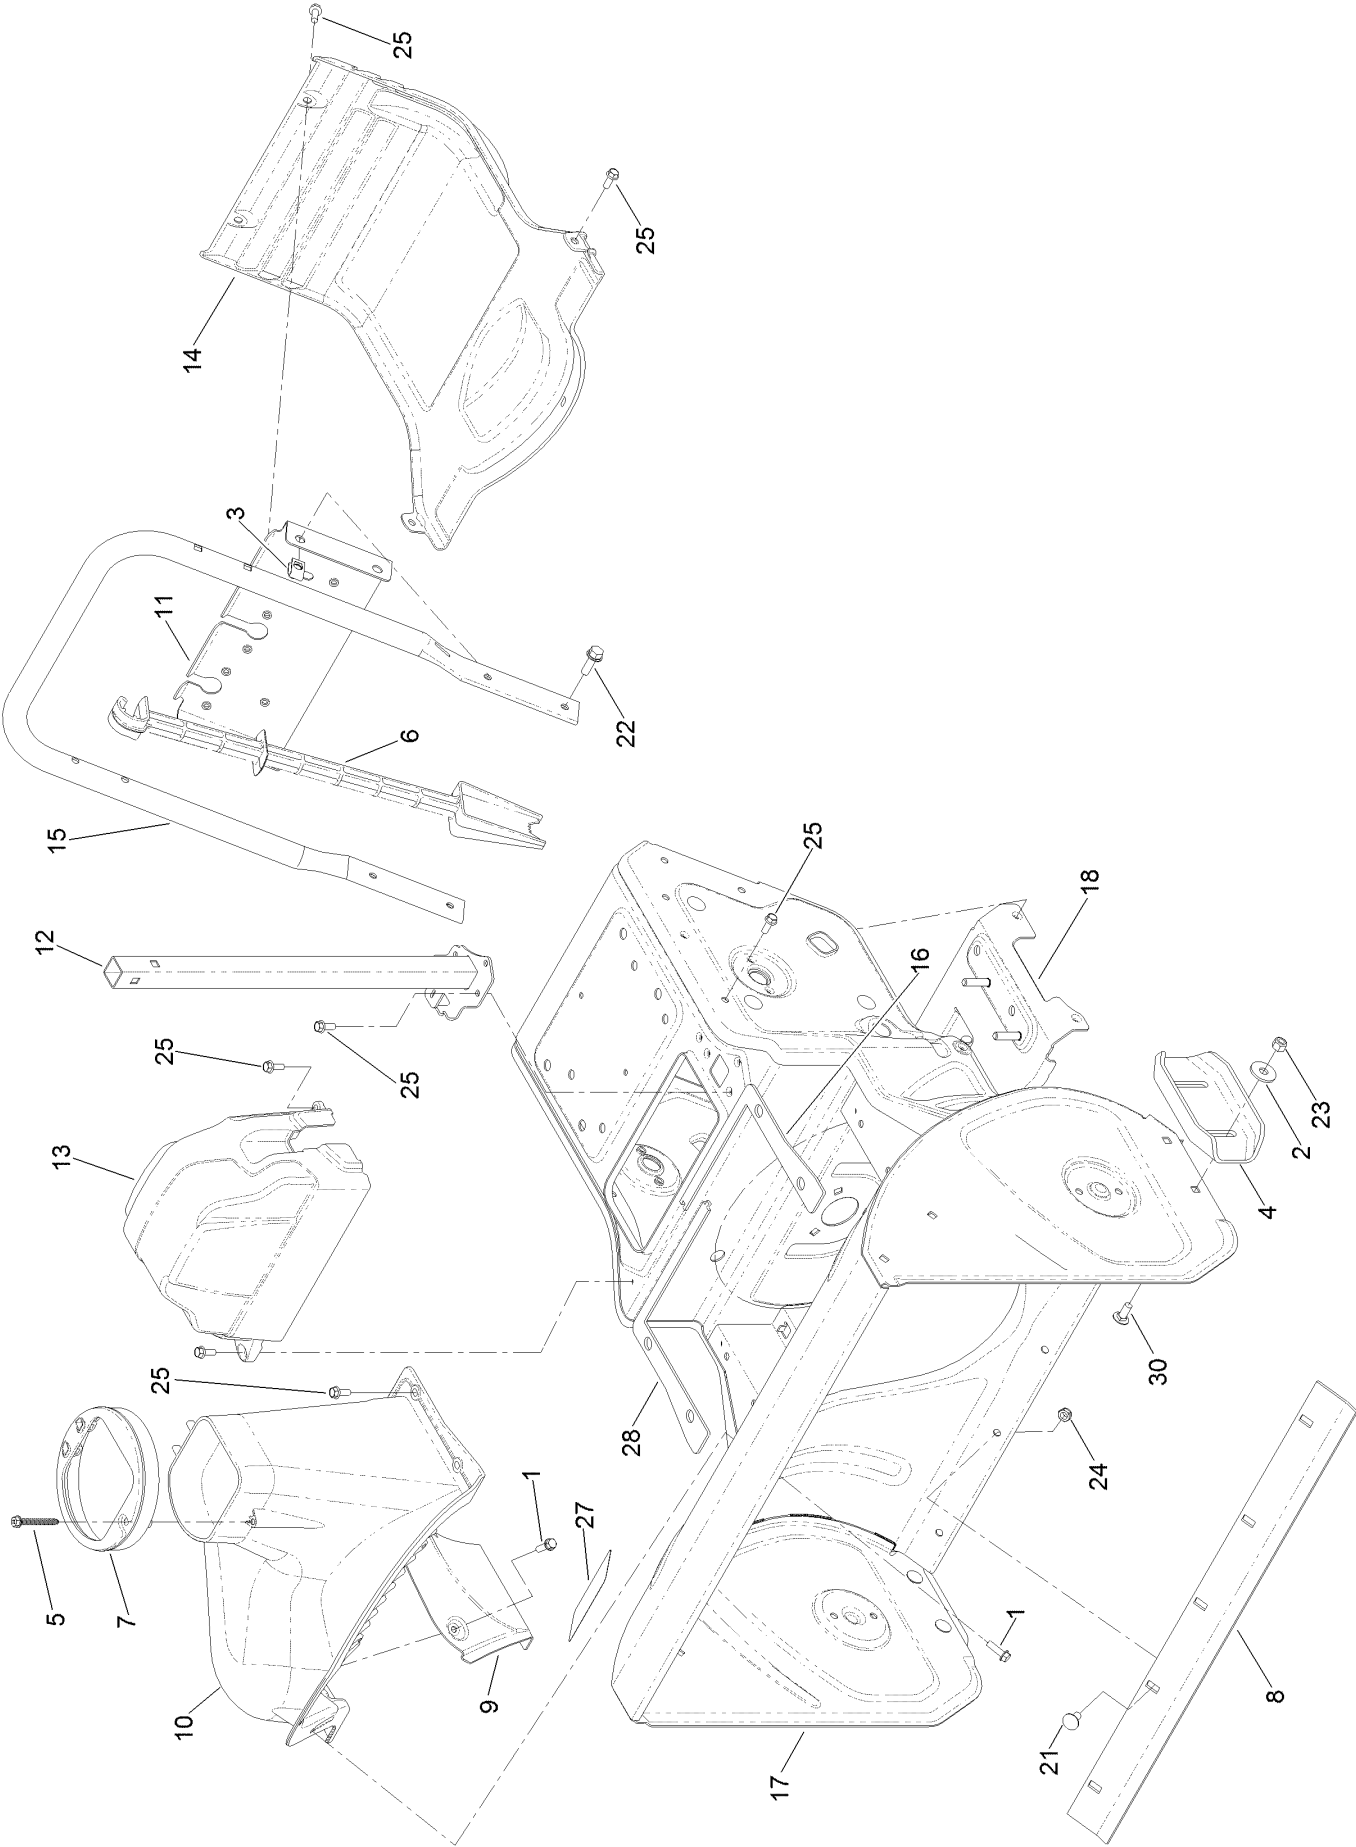

## Main Frame and Auger Housing Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|---------------------|-------------|--------------------|-------------|---------------------|
| 1           | 46-8091            | 6           | Screw-HWH           | 14          | 120-7178           | 1           | Cover-Lower         |
| 2           | 52-2861            | 4           | Washer              | 15          | 120-7179-03        | 1           | Handle-Lower        |
| 3           | 94-2413            | 4           | Nut-U               | 16          | 120-7181           | 1           | Seal-Housing, LH    |
| 4           | 106-4588-01        | 2           | Skid                | 17          | 131-6469           | 1           | Frame ASM           |
| 5           | 114-3751           | 1           | Screw-HWH, Plastite | 18          | 121-1218           | 1           | Plate-Stud Engine   |
| 6           | 121-6833           | 1           | Stick-Cleanout      | 21          | 3230-18            | 5           | Screw-CARR          |
| 7           | 119-7626           | 1           | Guide-Chute         | 22          | 3234-29            | 4           | Screw-HHF           |
| 8           | 120-3872-01        | 1           | Scraper-26 Inch     | 23          | 3296-29            | 4           | Nut-Lock, NI        |
| 9           | 120-7158-01        | 1           | Cover-Liner         | 24          | 3296-47            | 5           | Nut-Lock, NI        |
| 10          | 120-7159           | 1           | Cover               | 25          | 32144-85           | 17          | Screw-HWH           |
| 11          | 120-7161-01        | 1           | Brace-Frame         | 27          | 121-6817           | 1           | Decal-Danger, Auger |
| 12          | 120-7170-03        | 1           | Support-Chute       | 28          | 121-6841           | 1           | Seal-Housing, RH    |
| 13          | 120-7177           | 1           | Cover-Belt          | 30          | 3230-23            | 4           | Screw-CARR          |

 
# Pulleys and Bellcrank Assembly

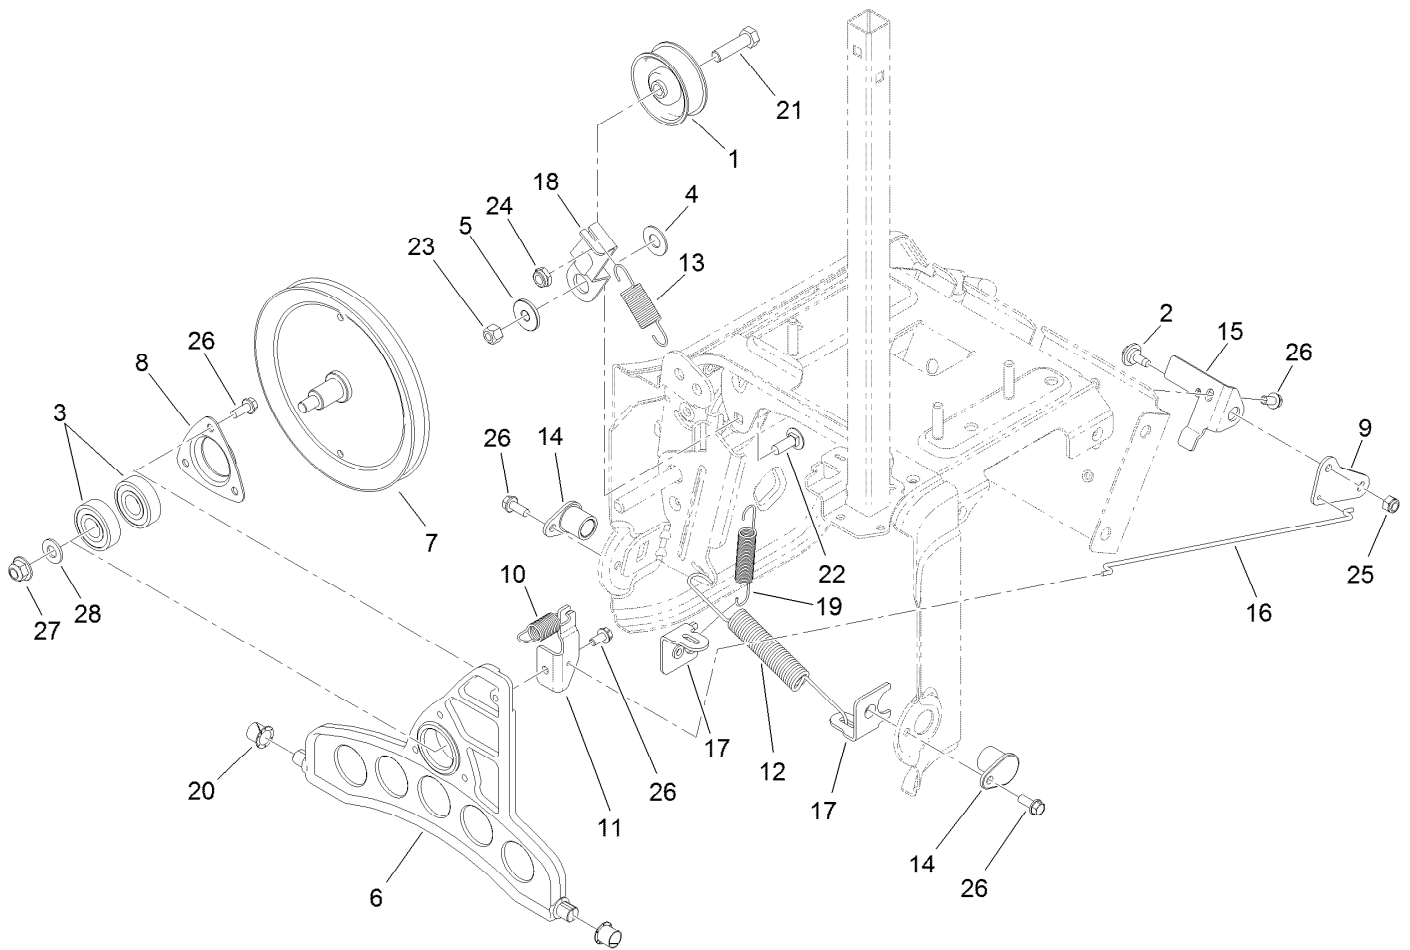

## Pulleys and Bellcrank Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|-------------------------|-------------|--------------------|-------------|------------------------|
| 1           | 3-4244             | 1           | Pulley-Idler            | 15          | 120-7165-03        | 1           | Bracket-Bellcrank      |
| 2           | 92-9698            | 1           | Screw-Shoulder          | 16          | 120-7166           | 1           | Link-Drive             |
| 3           | 100-1048           | 2           | Bearing-Ball            | 17          | 120-9271           | 2           | Bracket-Anchor, Spring |
| 4           | 25-5640            | 1           | Washer                  | 18          | 120-9273           | 1           | Arm-Idler, Traction    |
| 5           | 117-7711           | 1           | Bushing-Idler           | 19          | 120-9275           | 1           | Spring-Extension       |
| 6           | 119-7645           | 1           | Plate-Wheel, Friction   | 20          | 256-257            | 2           | Bushing-Nyliner        |
| 7           | 119-7648           | 1           | Pulley-Traction         | 21          | 323-29             | 1           | Screw-HH               |
| 8           | 119-7649           | 1           | Retainer-Bearing        | 22          | 3230-10            | 1           | Screw-CARR             |
| 9           | 119-7670-03        | 1           | Bellcrank-Drive         | 23          | 3296-29            | 1           | Nut-Lock, NI           |
| 10          | 119-7676           | 1           | Spring-Extension        | 24          | 3296-59            | 1           | Nut-Lock, NI           |
| 11          | 119-7679           | 1           | Bracket-Plate, Traction | 25          | 3296-73            | 1           | Nut-Lock, NI           |
| 12          | 120-3883           | 1           | Spring-Extension        | 26          | 32144-85           | 7           | Screw-HWH              |
| 13          | 120-3888           | 1           | Spring-Extension        | 27          | 104-8301           | 1           | Nut-Flange, NI         |
| 14          | 120-7156           | 2           | Bushing-Plate, Traction | 28          | 3256-24            | 1           | Washer-Flat            |
 
# Impeller Drive Assembly

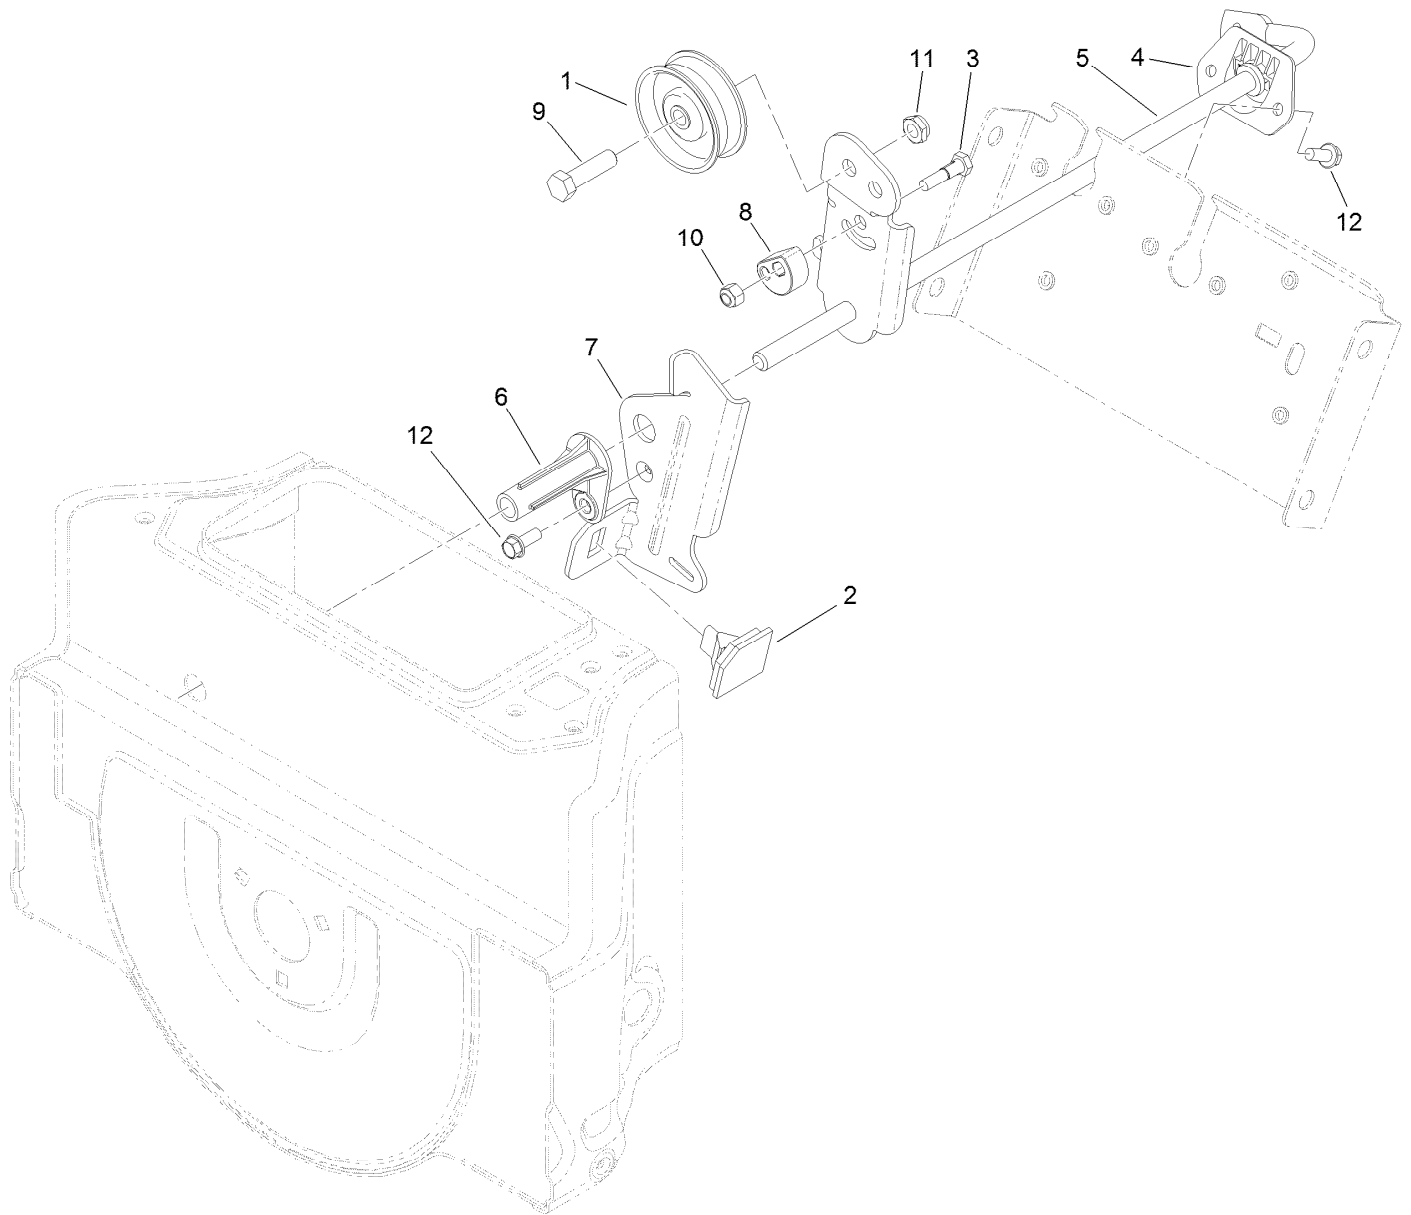




## Impeller Drive Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|---------------------------|
| 1           | 3-4244             | 1           | Pulley-Idler          | 7           | 120-9257-03        | 1           | Arm-Brake, Impeller       |
| 2           | 66-8060            | 1           | Pad-Brake             | 8           | 120-9276           | 1           | Eccentric-Brake, Impeller |
| 3           | 119-3301           | 1           | Bolt-Pivot, Eccentric | 9           | 323-29             | 1           | Screw-HH                  |
| 4           | 120-7167           | 1           | Bushing-Rod, Clutch   | 10          | 3296-42            | 1           | Nut-Lock, NI              |
| 5           | 120-9254-03        | 1           | Impeller Clutch ASM   | 11          | 3296-59            | 1           | Nut-Lock, NI              |
| 6           | 120-9256           | 1           | Pivot-Brake, Impeller | 12          | 32144-85           | 3           | Screw-HWH                 |
 
# Drive Assembly

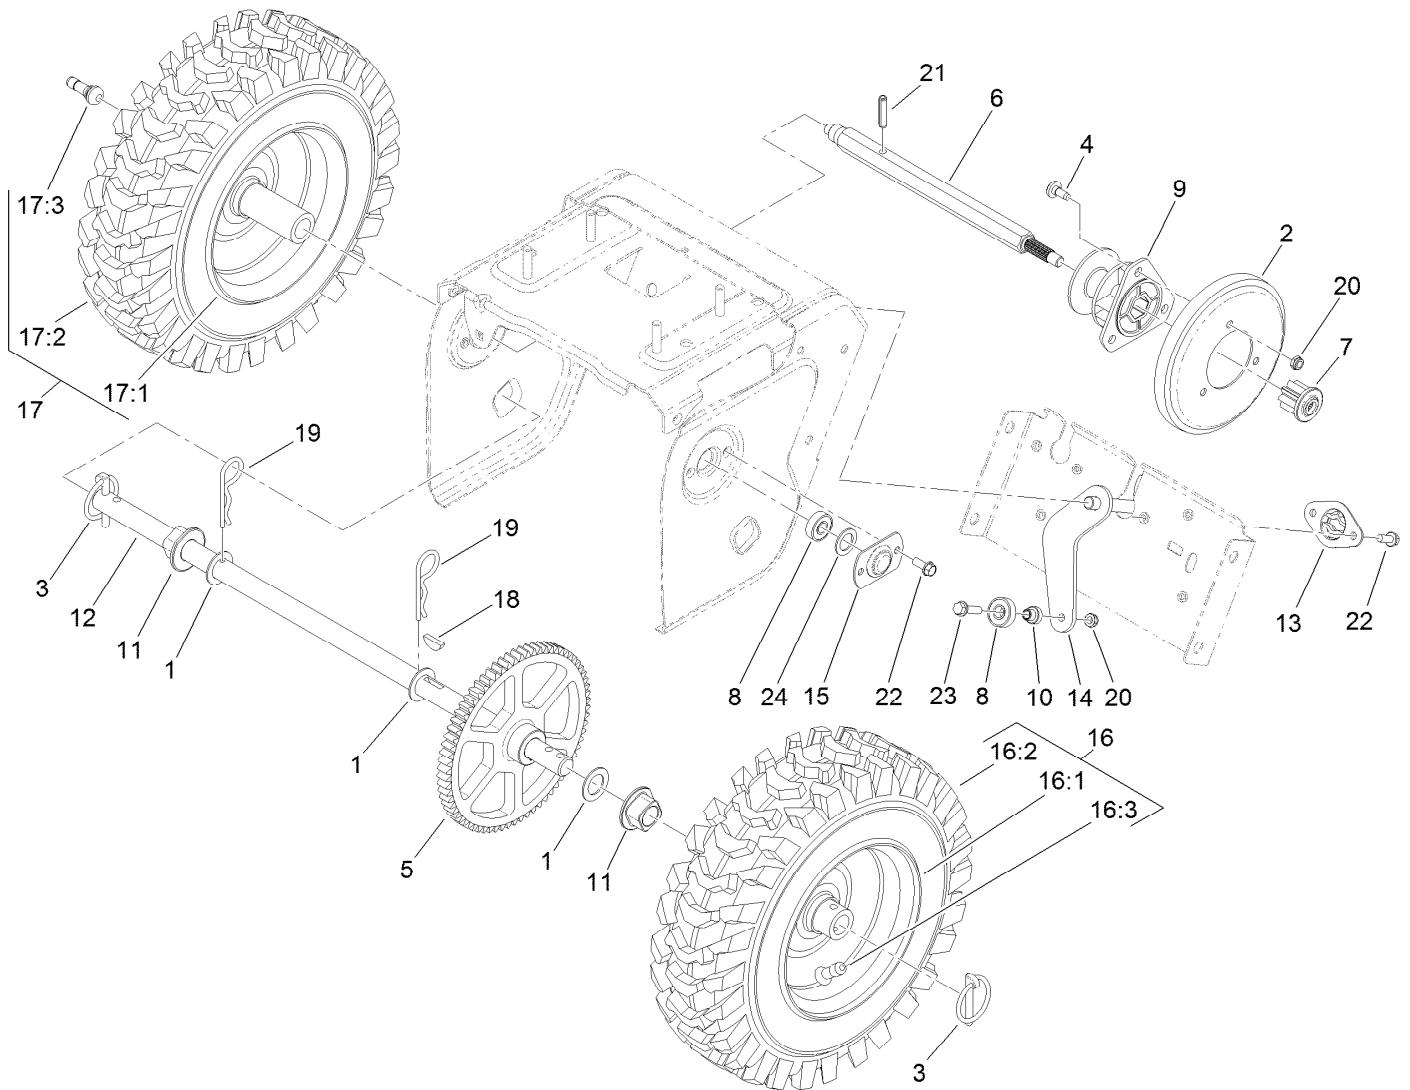


## Drive Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|-------------------------|
| 1           | 3-8664             | 3           | Washer-Thrust         | 16          |                    | 1           | LH Wheel And Tire ASM ● |
| 2           | 119-1567           | 1           | Wheel-Friction        | 16:1        | 121-1212           | 1           | Wheel                   |
| 3           | 107-3039           | 2           | Klik Pin ASM          | 16:2        | 121-6820           | 1           | Tire                    |
| 4           | 120-7950           | 3           | Screw-Shoulder        | 16:3        | 232-27             | 1           | Stem-Valve              |
| 5           | 119-7613           | 1           | Gear-Axle             | 17          |                    | 1           | RH Wheel And Tire ASM ● |
| 6           | 119-7615           | 1           | Shaft-Hex             | 17:1        | 121-1212           | 1           | Wheel                   |
| 7           | 119-7616           | 1           | Gear-Pinion, 8 Tooth  | 17:2        | 121-6820           | 1           | Tire                    |
| 8           | 121-6835           | 3           | Bearing-Ball          | 17:3        | 232-27             | 1           | Stem-Valve              |
| 9           | 119-7630           | 1           | Trunnion              | 18          | 3257-7             | 1           | Key-Woodruff            |
| 10          | 119-7684           | 1           | Spacer-Plate, Shift   | 19          | 3290-343           | 2           | Pin-Hair                |
| 11          | 120-7162           | 2           | Bushing-Axle          | 20          | 3296-56            | 4           | Nut-Lock, NI            |
| 12          | 120-7180           | 1           | Axle                  | 21          | 32121-9            | 1           | Pin-Roll, Slotted       |
| 13          | 120-7191           | 1           | Retainer-Plate, Shift | 22          | 32144-85           | 6           | Screw-HWH               |
| 14          | 120-7193-03        | 1           | Shift Plate ASM       | 23          | 32144-86           | 1           | Screw-HWHTF             |
| 15          | 120-9266           | 2           | Retainer-Bearing      | 24          | 121-6840           | 2           | Washer-Rubber           |

● Not serviced separately
 
# Gearbox, Auger and Impeller Assembly

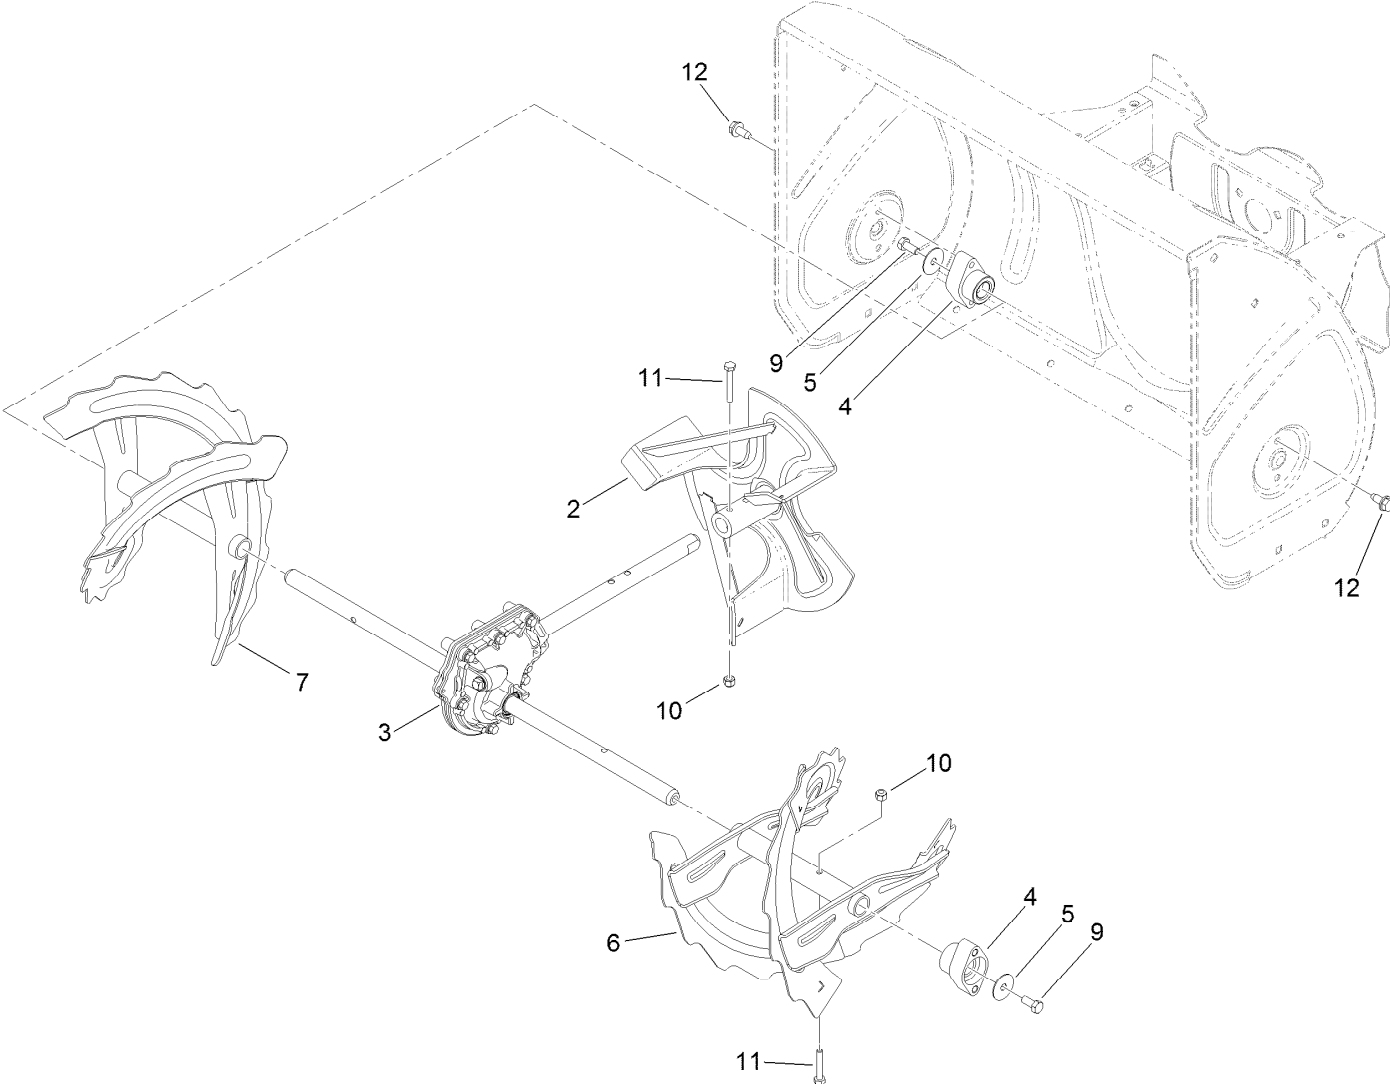

## Gearbox, Auger and Impeller Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 2           | 119-7612-03        | 1           | Impeller ASM       |
| 3           | 119-7641           | 1           | Gearcase ASM       |
| 4           | 120-3860           | 2           | Bearing-Auger      |
| 5           | 120-3862           | 2           | Washer-Thrust      |
| 6           | 120-9287-03        | 1           | LH Auger ASM       |

 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 7           | 120-9290-03        | 1           | RH Auger ASM       |
| 9           | 322-3              | 2           | Screw-HH           |
| 10          | 3296-42            | 4           | Nut-Lock, NI       |
| 11          | 321-10             | 4           | Screw-HH           |
| 12          | 32144-70           | 4           | Screw-HWHTF        |



## 26 Inch Auger Gearcase Assembly No. 119-7641 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|------------------------|-------------|--------------------|-------------|------------------------|
| 1           | 121-1209           | 1           | RH Auger Gearcase ASM  | 8           | 121-1234           | 1           | Shaft-Impeller, Rolled |
| 1:2         | 121-6634           | 1           | Seal-Shaft             | 9           | 62-1150            | 1           | Bushing-Worm           |
| 1:3         | 120-9269           | 1           | Bushing-Sleeve         | 10          | 107-8899           | 1           | Pin-Dowel              |
| 2           | 119-7640           | 4           | Washer-Thrust          | 11          | 121-6634           | 1           | Seal-Shaft             |
| 3           | 119-7639           | 1           | Shaft-Output, Auger    | 12          | 121-1210           | 1           | LH Auger Gearcase ASM  |
| 4           | 3257-5             | 1           | Key-Woodruff           | 12:2        | 121-6634           | 1           | Seal-Shaft             |
| 5           | 119-1576           | 1           | Gear-Helical, 20 Tooth | 12:3        | 120-9269           | 1           | Bushing-Sleeve         |
| 6           | 119-7635           | 1           | Bushing-Input          | 13          | 121-6832           | 1           | Plug-Pipe, SQH         |
| 7           | 119-7636           | 1           | Collar-Thrust          | 14          | 108-4862           | 6           | Screw-HWHTF            |

# Impeller Assembly

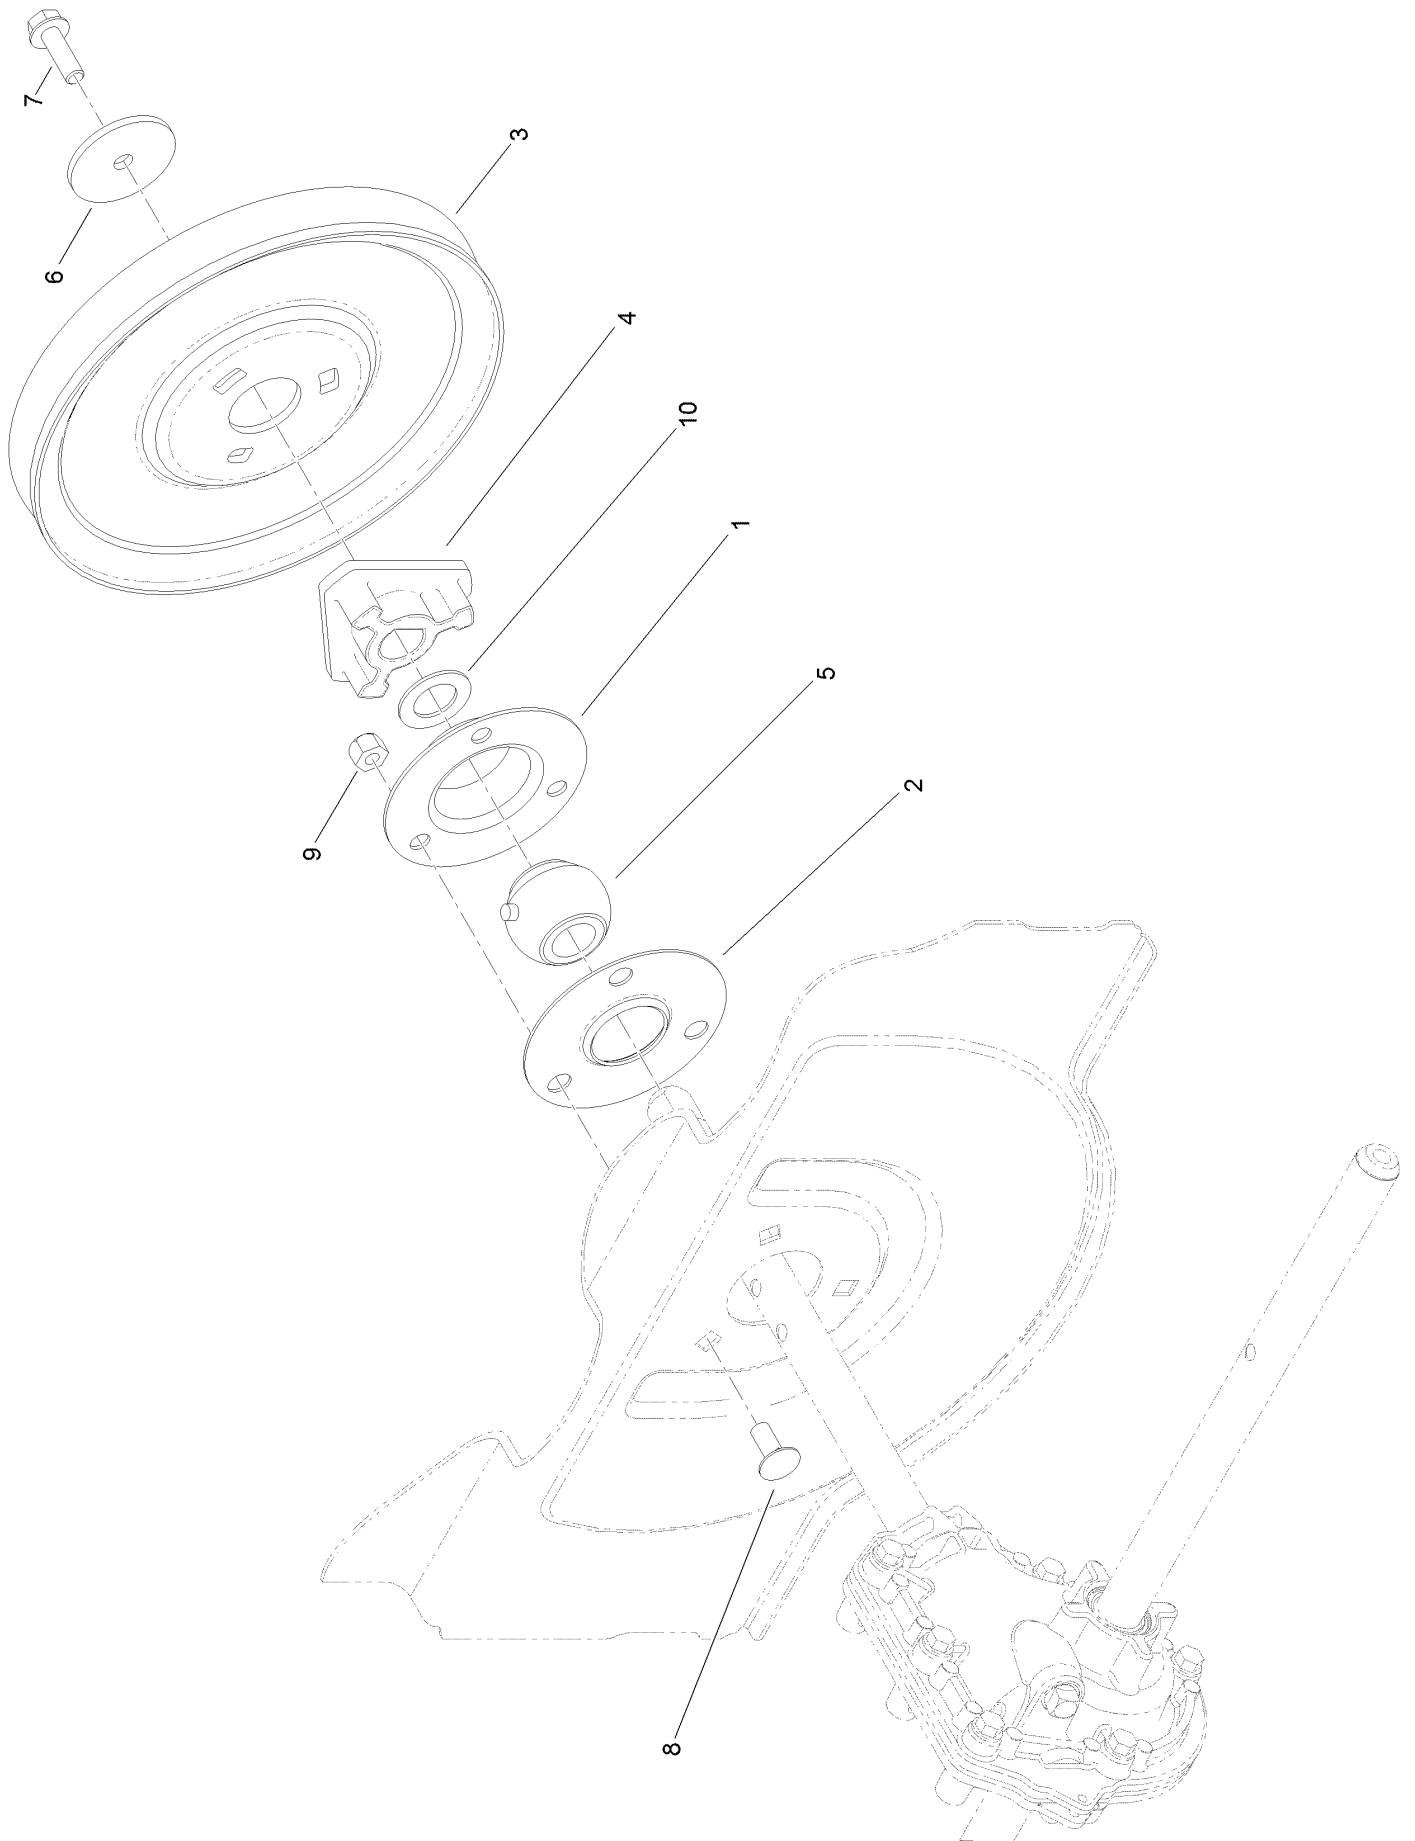




## Impeller Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|----------------------|-------------|--------------------|-------------|--------------------|
| 1           | 26-6110            | 1           | Flange-Cup, Bearing  | 6           | 121-1230           | 1           | Washer-Plain       |
| 2           | 26-6120            | 1           | Flange-Cup, Bearing  | 7           | 115-5142           | 1           | Screw-HHF          |
| 3           | 120-9263           | 1           | Pulley-Impeller      | 8           | 3230-23            | 3           | Screw-CARR         |
| 4           | 120-9264           | 1           | Hub-Impeller, Pulley | 9           | 3296-29            | 3           | Nut-Lock, NI       |
| 5           | 120-9272           | 1           | Bearing              | 10          | 119-7640           | 1           | Washer-Thrust      |


 
## Engine, Pulley and Belt Assembly

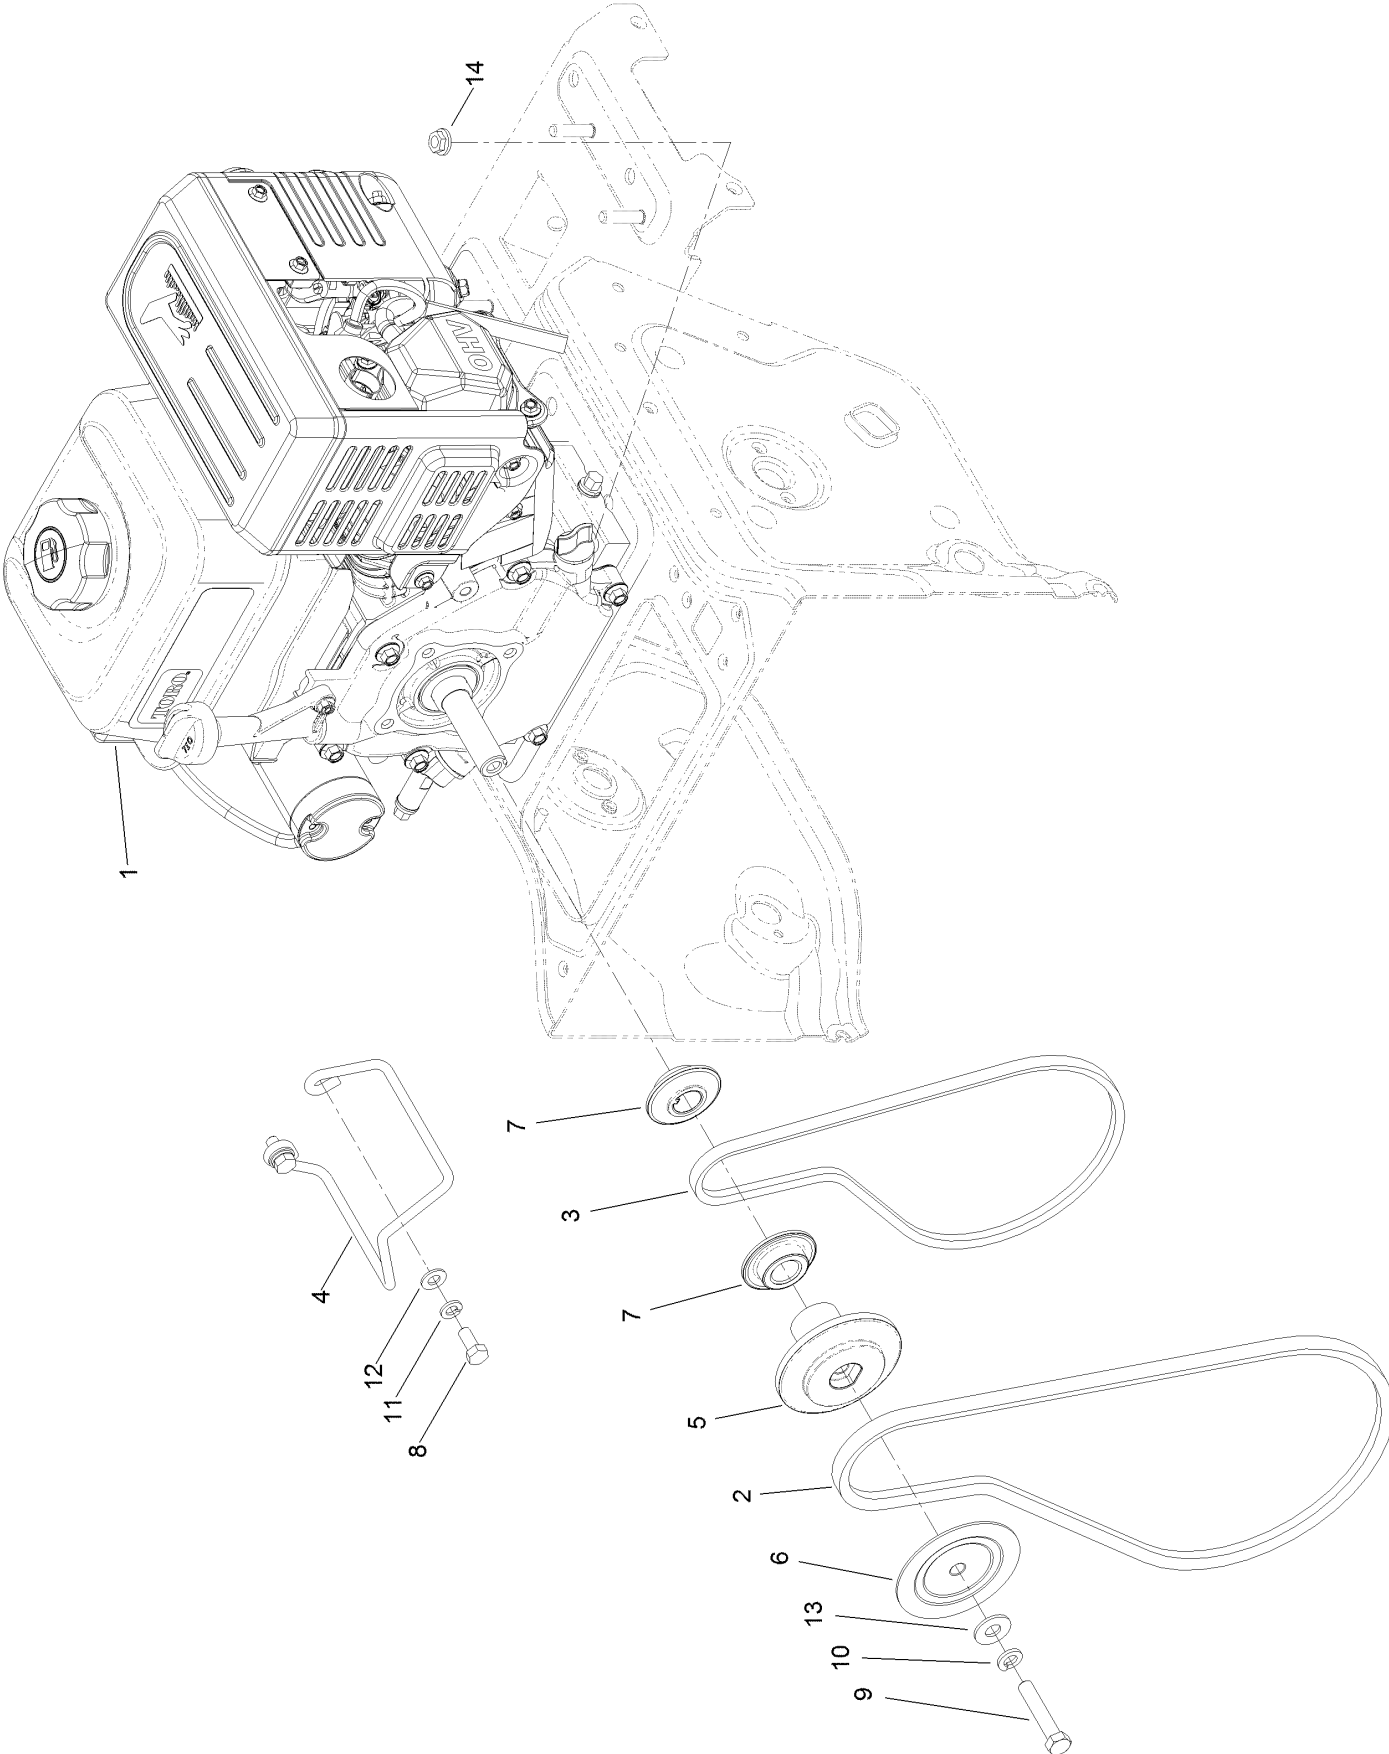

## Engine, Pulley and Belt Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|---------------------|-------------|--------------------|-------------|--------------------|
| 1           | 127-9035           | 1           | Engine-G210Fds-1    | 8           | 33114-020          | 2           | Screw-HH           |
| 2           | 120-3892           | 1           | Belt-V              | 9           | 120-2302           | 1           | Screw - HH         |
| 3           | 120-3893           | 1           | Belt-V              | 10          | 3253-21            | 1           | Washer-Lock        |
| 4           | 120-7196           | 1           | Guide-Belt          | 11          | 3253-4             | 2           | Washer-Lock        |
| 5           | 120-9283           | 1           | Pulley-Auger, Rear  | 12          | 3256-23            | 2           | Washer-Flat        |
| 6           | 120-9284           | 1           | Pulley-Auger, Front | 13          | 3256-4             | 1           | Washer-Flat        |
| 7           | 121-6804           | 2           | Pulley-Traction     | 14          | 32128-20           | 4           | Nut-HF             |
  
# Fuel System and Carburetor Assembly

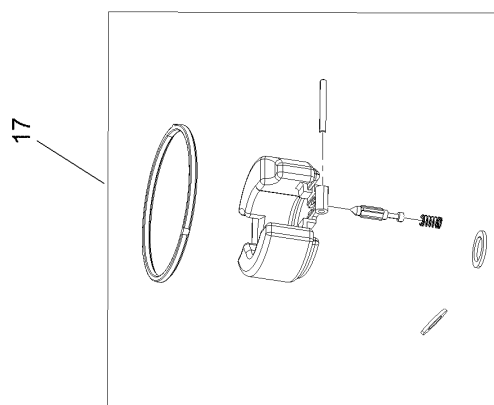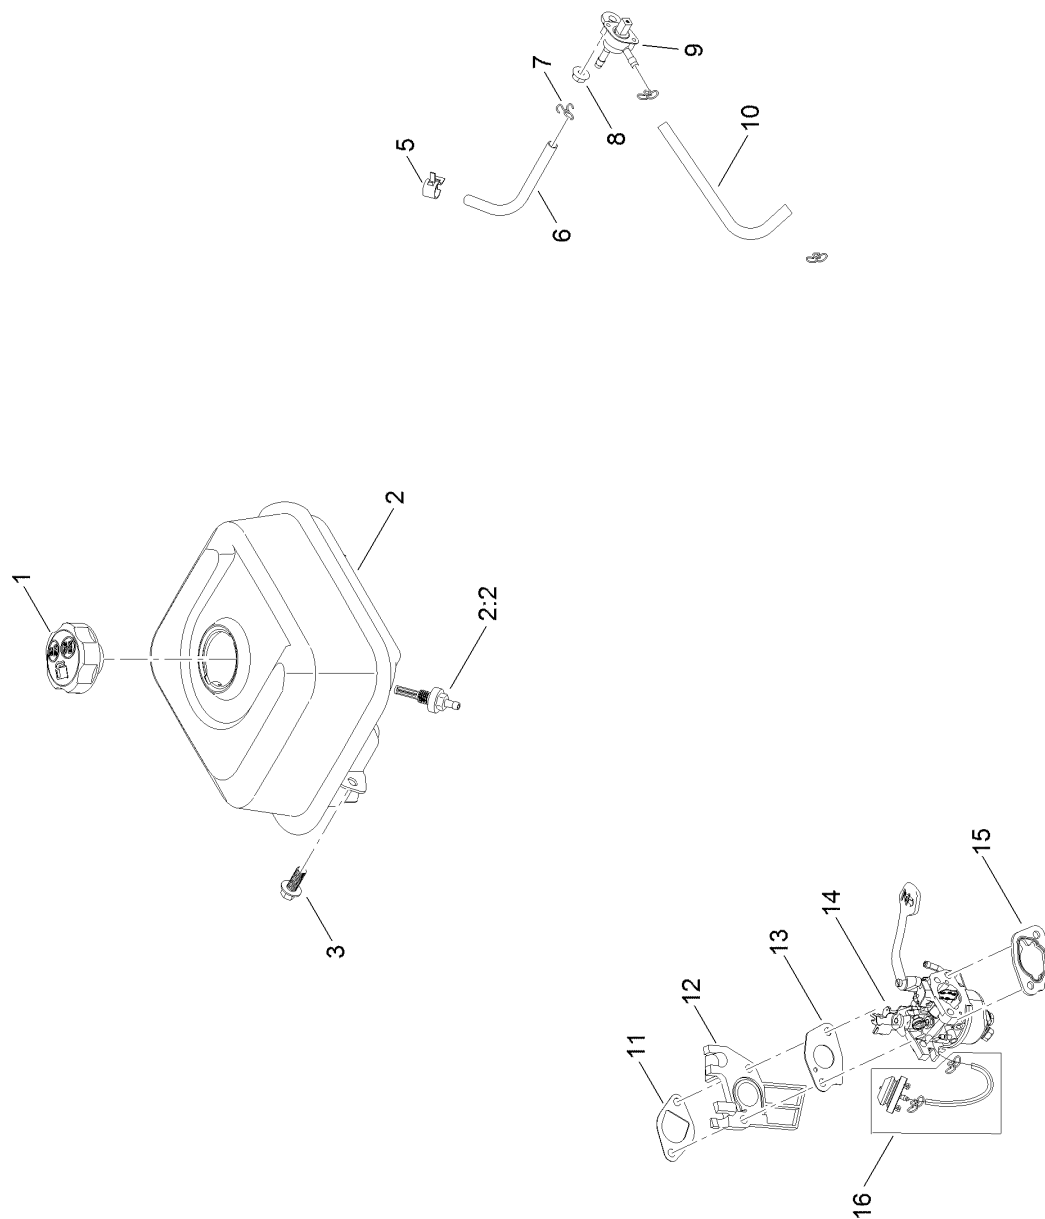


## Fuel System and Carburetor Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|----------------------------|
| 1           | 127-9365           | 1           | Cap - Fuel (Phase Iii)   | 10          | 127-9384           | 1           | Hose-Fuel, Formed          |
| 2           | 127-9497           | 1           | Fuel Tank And Filter ASM | 11          | 121-0076           | 1           | Gasket-Carburetor          |
| 2:2         | 127-9065           | 1           | Filter-Fuel              | 12          | 121-0077           | 1           | Insulator-Carburetor       |
| 3           | 121-0294           | 1           | Screw-HHF                | 13          | 121-0078           | 1           | Gasket-Carburetor          |
| 5           | 127-9120           | 1           | Clamp-Hose               | 14          | 127-9111           | 1           | Carburetor ASM             |
| 6           | 127-9118           | 1           | Hose-Fuel, Formed        | 15          | 121-0080           | 1           | Gasket-Carburetor          |
| 7           | 121-0087           | 3           | Clamp-Hose               | 16          | 127-9079           | 1           | Primer Kit                 |
| 8           | 120-4236           | 1           | Nut-Flange               | 17          | 127-9394           | 1           | Internal Carb Service Kit  |
| 9           | 127-9117           | 1           | Valve-Fuel               | 99          | 127-9301           | 1           | High Altitude Kit - G210 ● |

● Not illustrated

 
# Intake and Exhaust Assembly

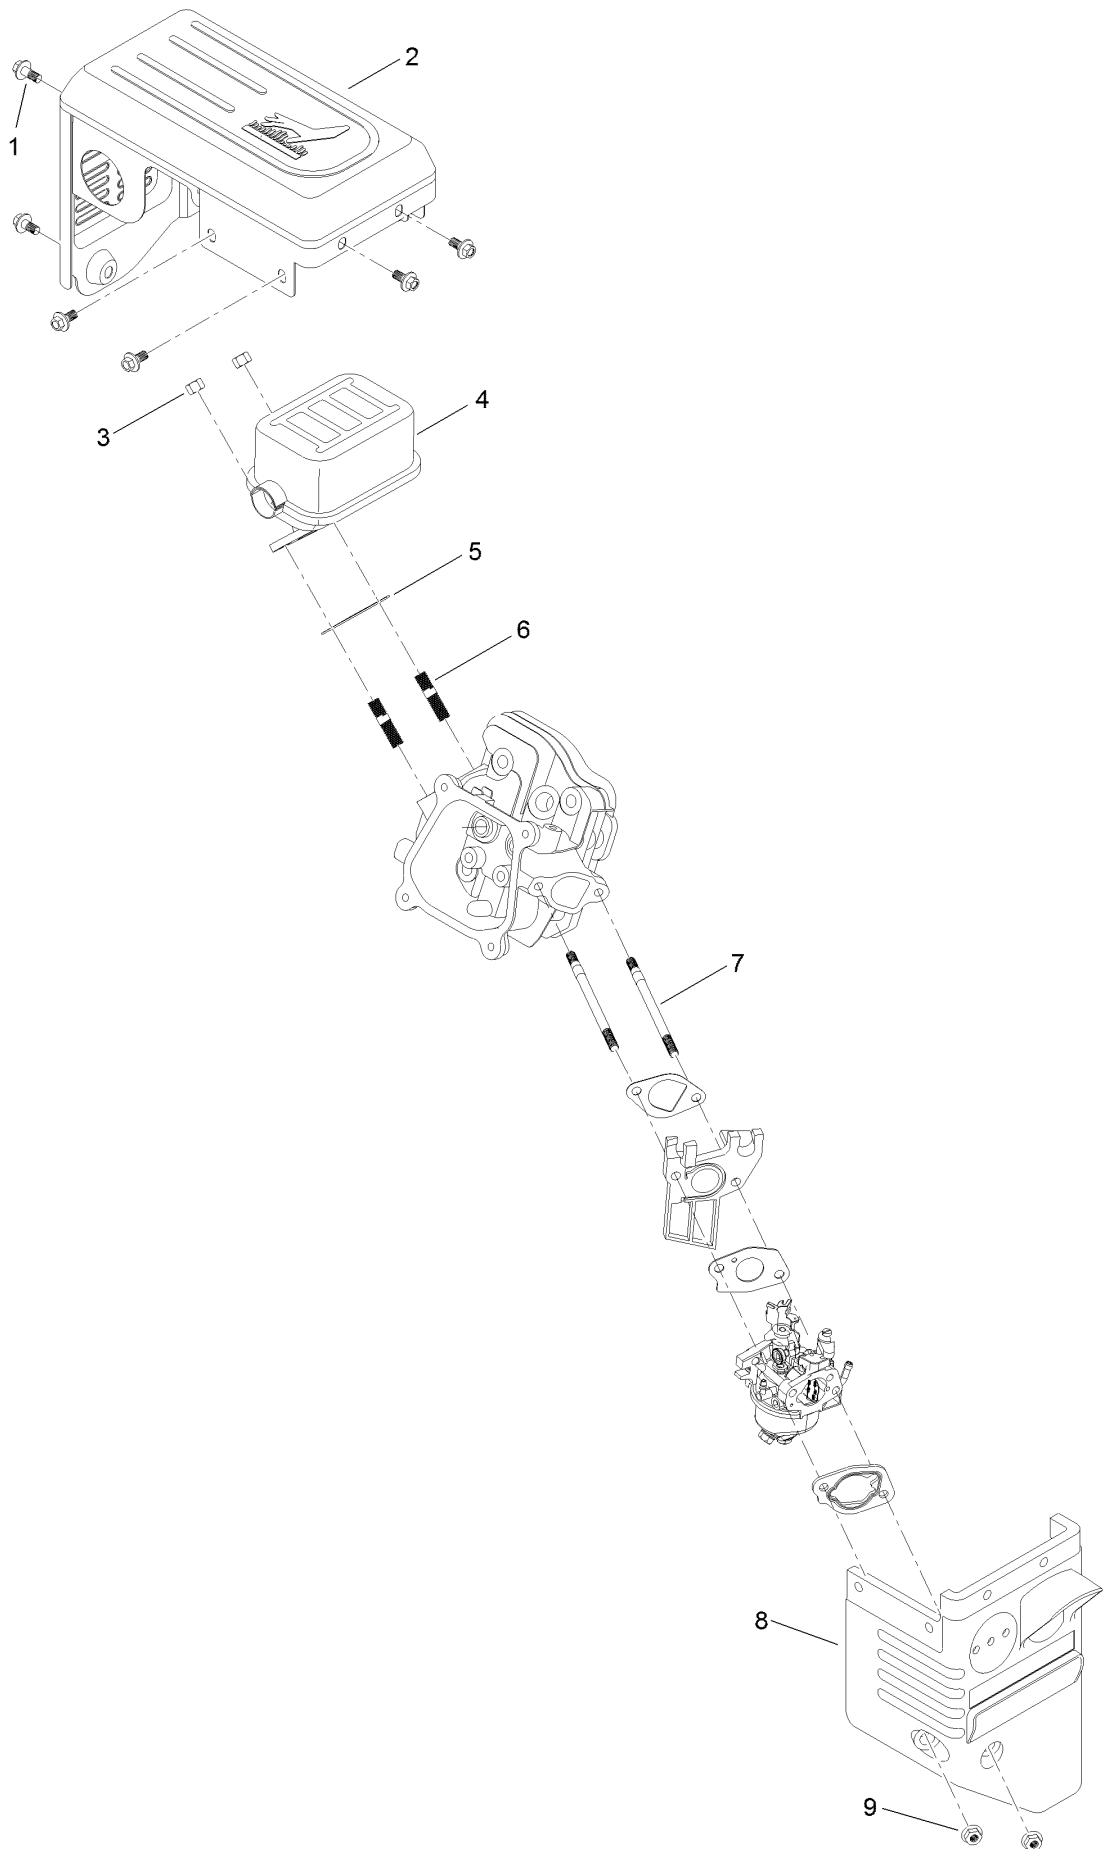

## Intake and Exhaust Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 121-0294           | 6           | Screw-HHF          | 6           | 121-0464           | 2           | Stud-Exhaust       |
| 2           | 127-9127           | 1           | Guard-Muffler      | 7           | 121-4112           | 2           | Stud-Intake        |
| 3           | 121-0199           | 2           | Nut-HH             | 8           | 127-9112           | 1           | Box-Heater         |
| 4           | 127-9128           | 1           | Muffler ASM        | 9           | 121-0308           | 2           | Nut-Flange         |
| 5           | 121-0167           | 1           | Gasket-Exhaust     |             |                    |             |                    |
 
# Ignition and Electrical Assembly

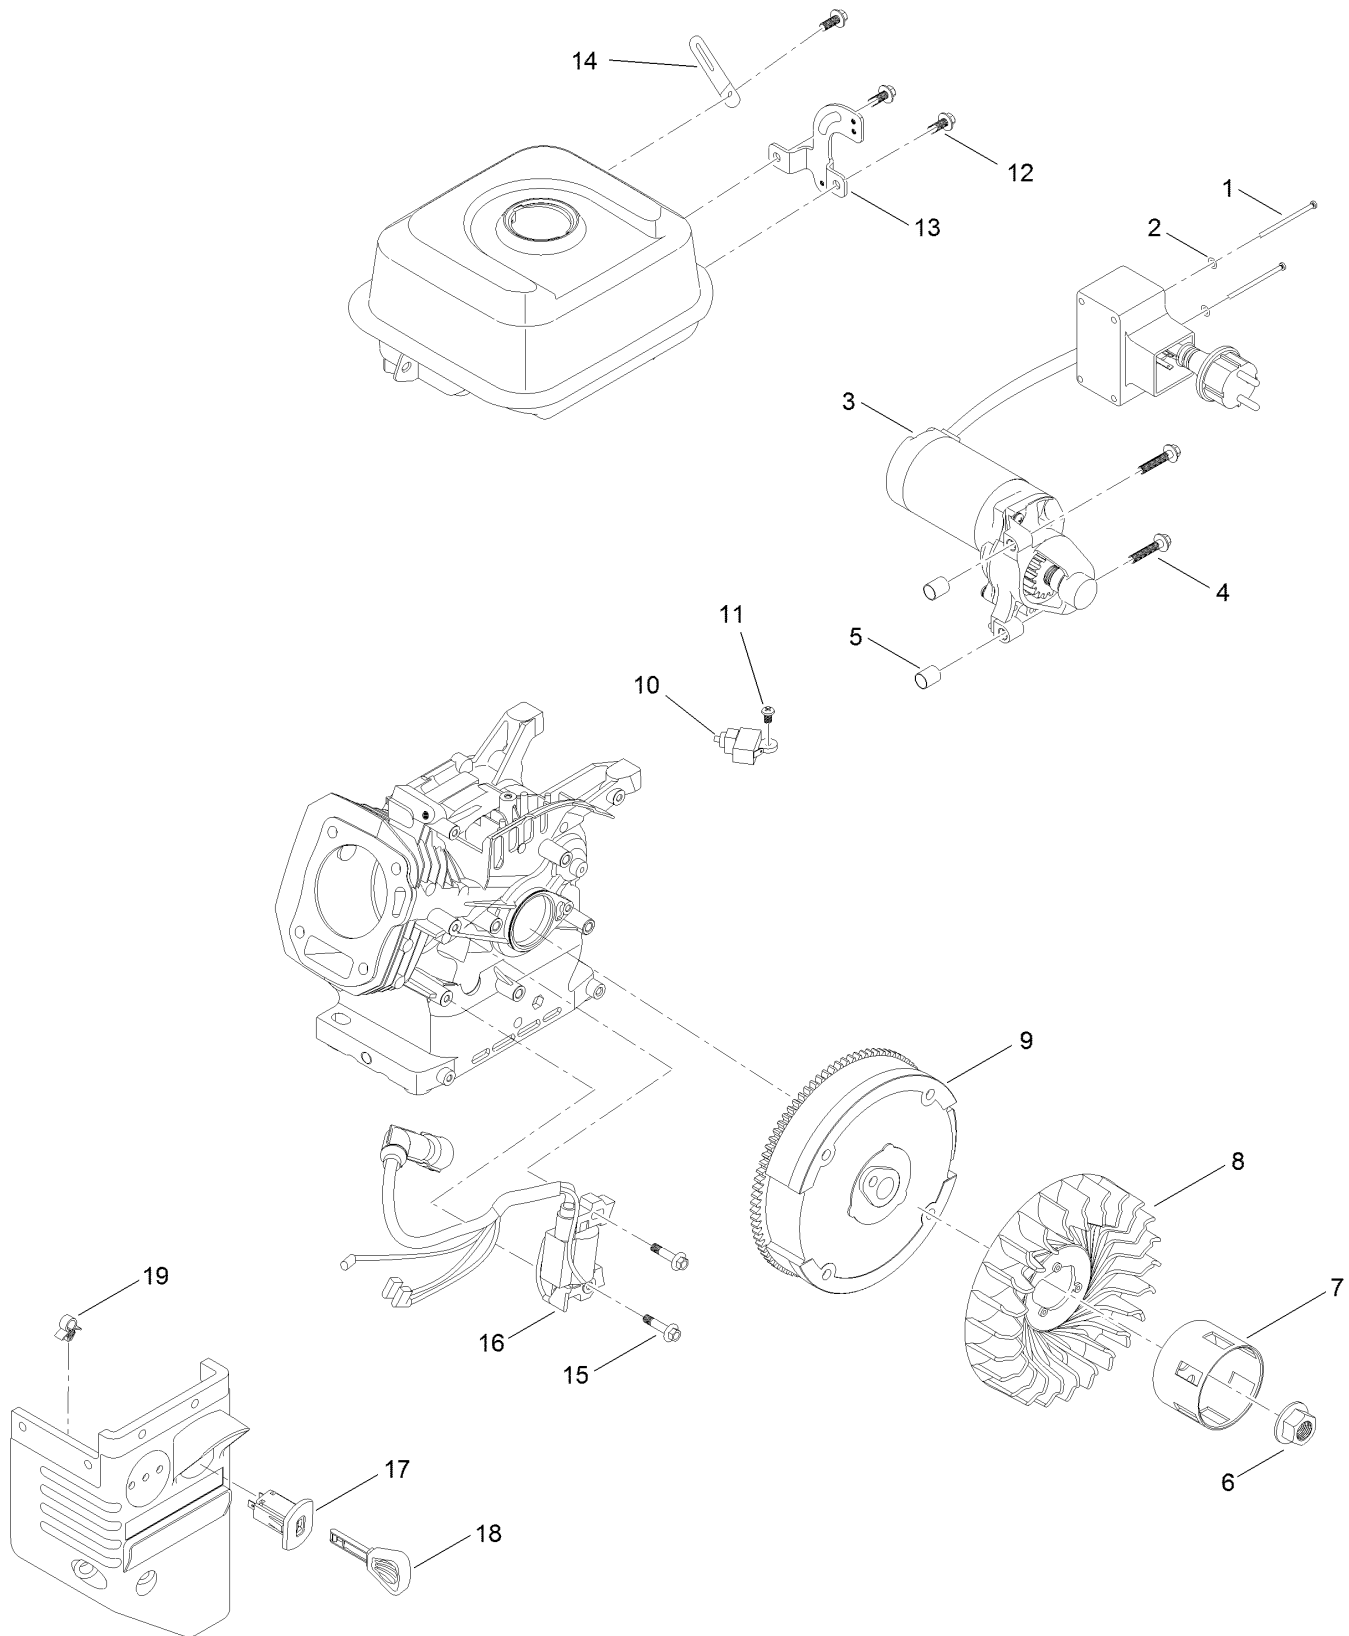




## Ignition and Electrical Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|---------------------|-------------|--------------------|-------------|--------------------|
| 1           | 121-0306           | 2           | Screw-Bhp           | 11          | 120-4461           | 1           | Screw-Php          |
| 2           | 121-0312           | 2           | Washer-Plain        | 12          | 127-9123           | 3           | Screw-HHF          |
| 3           | 127-9386           | 1           | Motor-Starter       | 13          | 127-9124           | 1           | Bracket            |
| 4           | 127-9382           | 2           | Screw-HHF           | 14          | 121-0017           | 1           | Clip-Harness, Wire |
| 5           | 121-0055           | 2           | Pin-Dowel           | 15          | 121-0097           | 2           | Screw-HHF          |
| 6           | 121-0047           | 1           | Nut-Flange          | 16          | 127-9105           | 1           | Ignition Coil ASM  |
| 7           | 127-9106           | 1           | Cup-Starter         | 17          | 121-0283           | 1           | Switch-Key         |
| 8           | 127-9002           | 1           | Fan                 | 18          | 117-7728           | 1           | Key                |
| 9           | 127-9005           | 1           | Flywheel            | 19          | 121-0326           | 1           | Clip               |
| 10          | 121-0284           | 1           | Switch-Kill, Engine |             |                    |             |                    |

 
# Crankcase Assembly

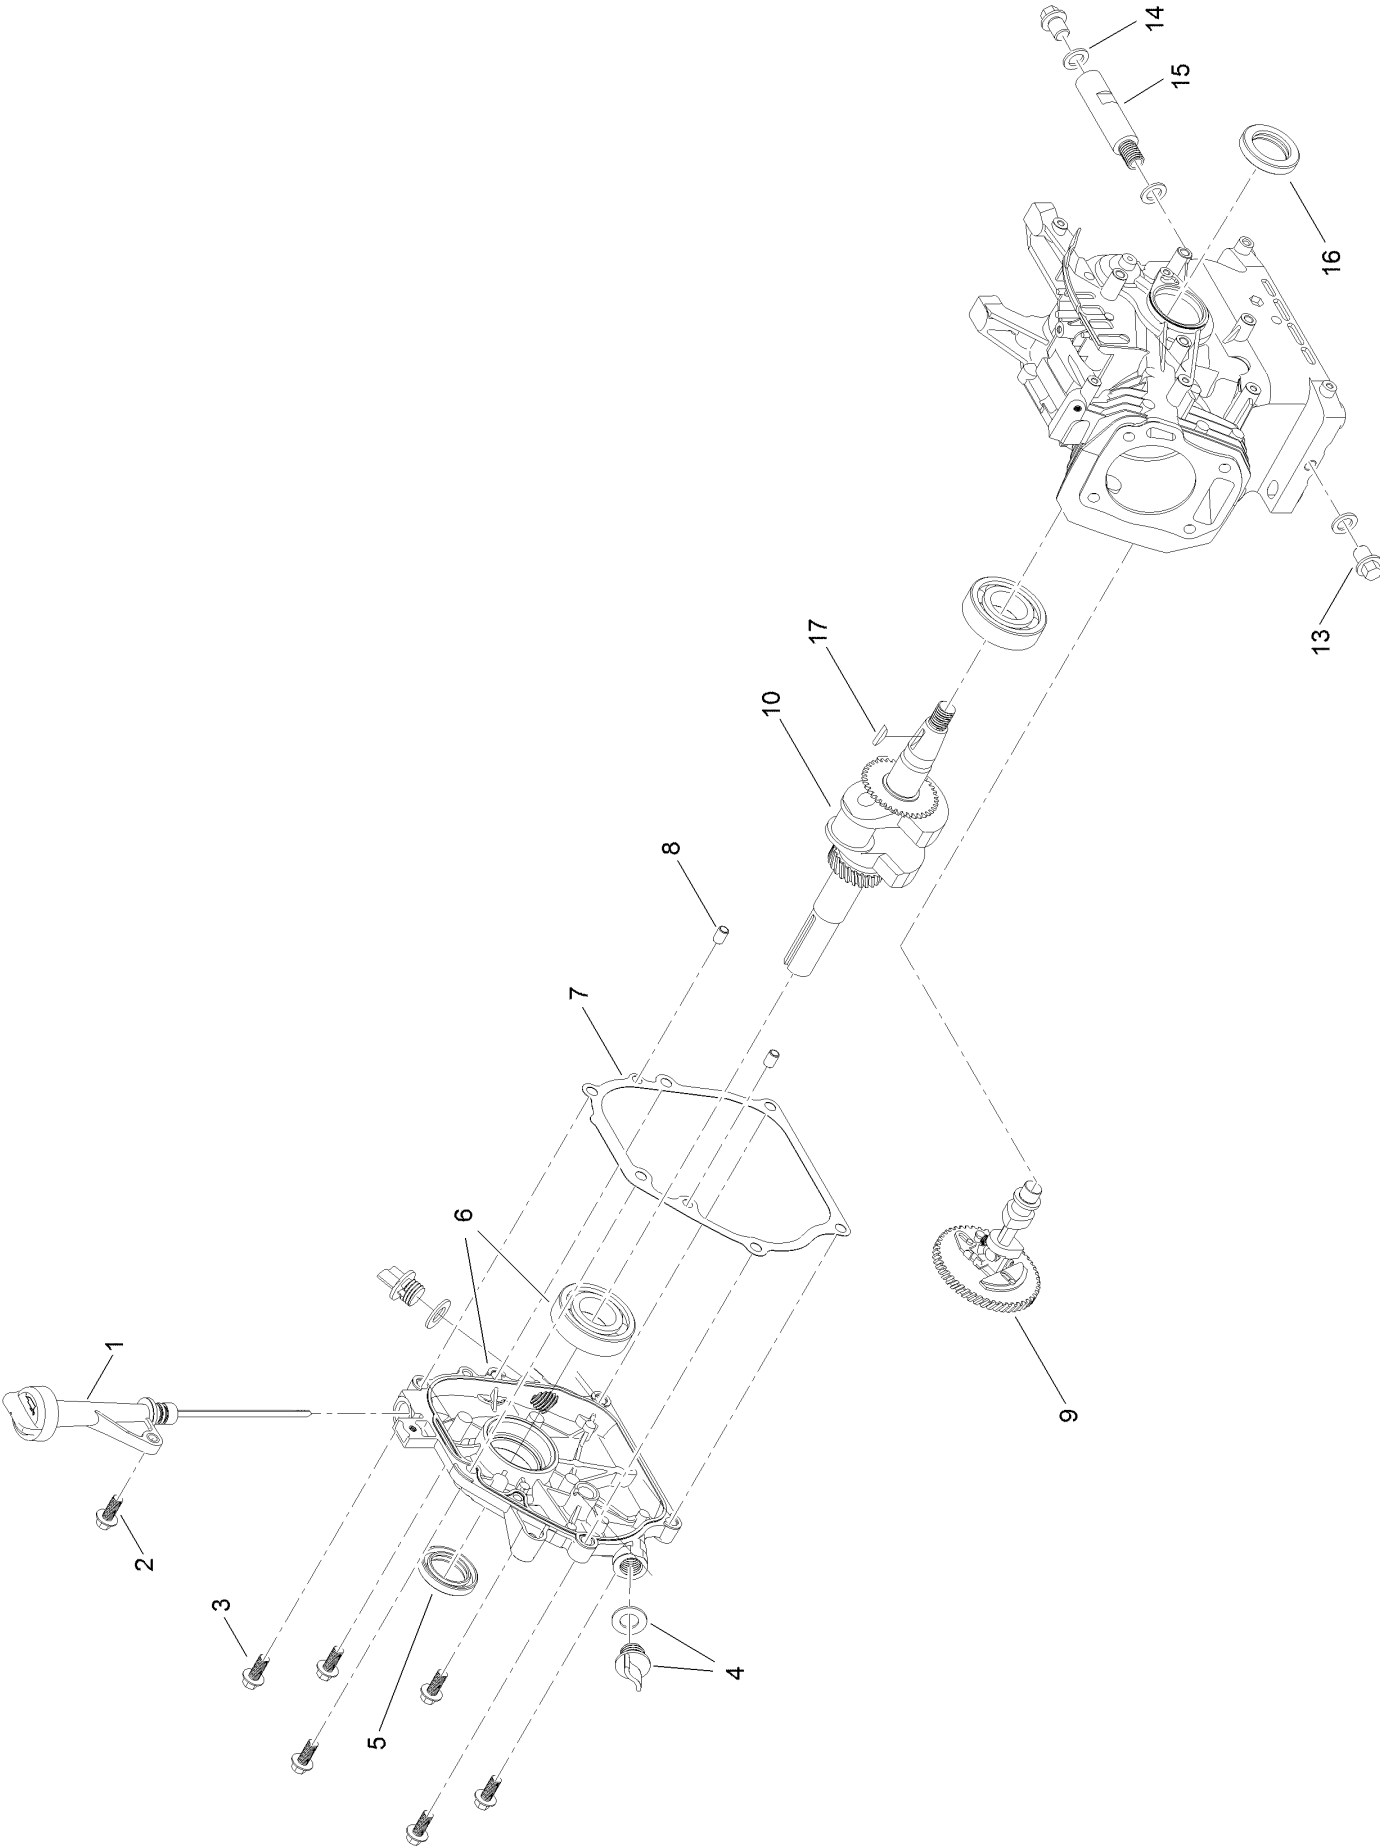

## Crankcase Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|-------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 127-9126           | 1           | Oil Fill ASM            | 9           | 127-9377           | 1           | Camshaft           |
| 2           | 127-9123           | 1           | Screw-HHF               | 10          | 127-9496           | 1           | Crankshaft         |
| 3           | 121-4114           | 6           | Screw-HHF               | 13          | 121-0030           | 2           | Screw-HHF          |
| 4           | 127-9099           | 2           | Oil Cap ASM             | 14          | 121-0048           | 3           | Washer-Plain       |
| 5           | 121-0209           | 1           | Seal-Oil                | 15          | 127-9104           | 1           | Tube-Drain, Oil    |
| 6           | 127-9385           | 1           | Crankcase Cover ASM     | 16          | 121-0208           | 1           | Seal-Oil           |
| 7           | 121-0105           | 1           | Gasket-Cover, Crankcase | 17          | 120-4320           | 1           | Key-Woodruff       |
| 8           | 121-0054           | 2           | Pin-Dowel               |             |                    |             |                    |

 
# Governor Assembly

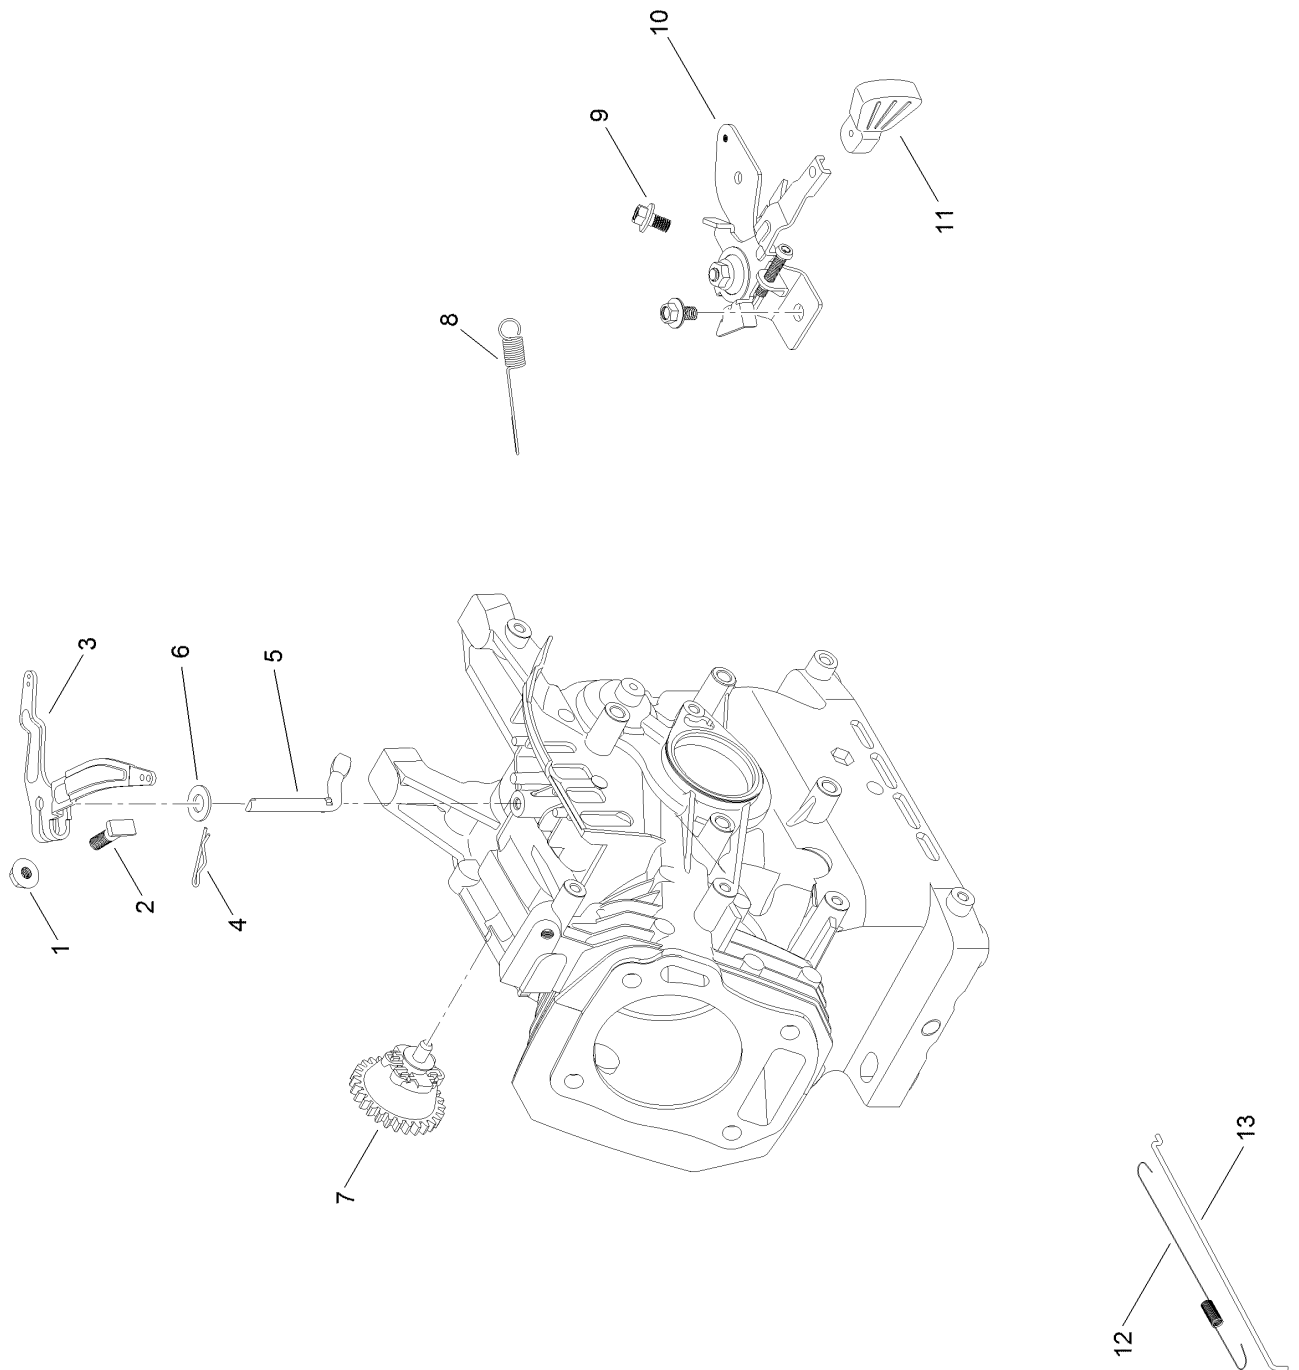

## Governor Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|-------------------------|
| 1           | 120-4236           | 1           | Nut-Flange         | 8           | 127-9114           | 1           | Spring-Governor         |
| 2           | 120-4238           | 1           | Bolt-Arm, Governor | 9           | 121-0118           | 2           | Screw-HHF               |
| 3           | 127-9102           | 1           | Arm-Governor       | 10          | 127-9113           | 1           | Speed Control ASM       |
| 4           | 120-4256           | 1           | Pin-Hair           | 11          | 121-0269           | 1           | Knob-Control, Throttle  |
| 5           | 121-4131           | 1           | Shaft-Governor     | 12          | 121-0153           | 1           | Spring-Return, Throttle |
| 6           | 121-0498           | 1           | Washer-Plain       | 13          | 121-0148           | 1           | Rod-Governor            |
| 7           | 127-9101           | 1           | Governor Gear ASM  |             |                    |             |                         |
 
# Piston and Head Assembly

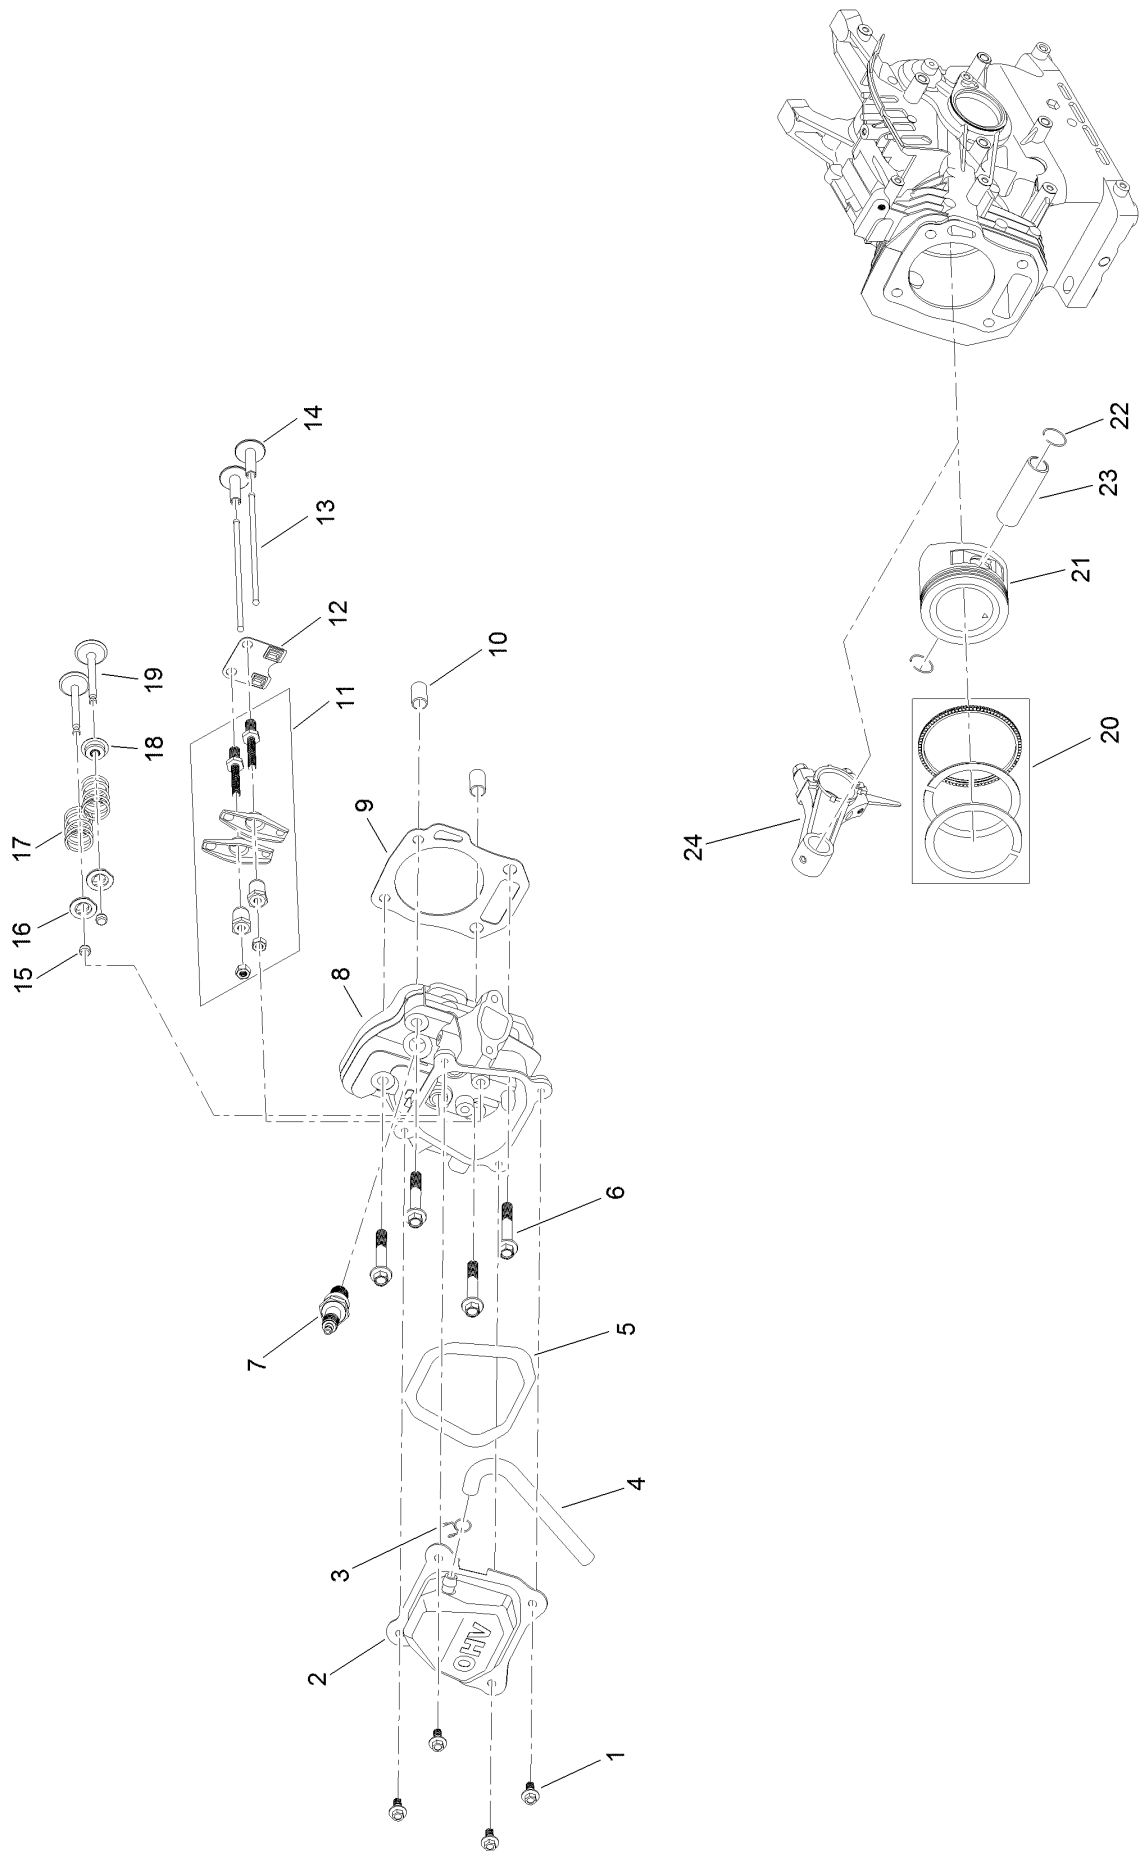


## Piston and Head Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|-----------------------|
| 1           | 120-4454           | 4           | Screw-HHF             |
| 2           | 127-9094           | 1           | Cover-Valve           |
| 3           | 127-9408           | 1           | Clamp-Hose            |
| 4           | 127-9095           | 1           | Tube-Breather         |
| 5           | 121-0109           | 1           | Gasket-Cover, Valve   |
| 6           | 121-4110           | 4           | Screw-HHF             |
| 7           | 81-3250            | 1           | Spark Plug            |
| 8           | 127-9013           | 1           | Head-Cylinder         |
| 9           | 127-9000           | 1           | Gasket-Head, Cylinder |
| 10          | 121-0053           | 2           | Pin-Dowel             |
| 11          | 120-4475           | 1           | Rocker Arm ASM        |
| 12          | 121-4120           | 1           | Plate-Guide, Push Rod |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|------------------------|
| 13          | 121-4121           | 2           | Rod-Push               |
| 14          | 127-9015           | 2           | Tappet-Valve           |
| 15          | 121-4116           | 2           | Rotator-Valve          |
| 16          | 121-4117           | 2           | Retainer-Spring, Valve |
| 17          | 127-9014           | 2           | Spring-Valve           |
| 18          | 121-4202           | 1           | Seal-Stem, Valve       |
| 19          | 127-9016           | 1           | Valve Set              |
| 20          | 121-4295           | 1           | Ring Set, Piston       |
| 21          | 121-4293           | 1           | Piston                 |
| 22          | 121-0313           | 2           | Clip-Pin, Piston       |
| 23          | 121-4128           | 1           | Pin-Piston             |
| 24          | 127-9017           | 1           | Connecting Rod ASM     |
 
# Blower Housing and Shrouds Assembly

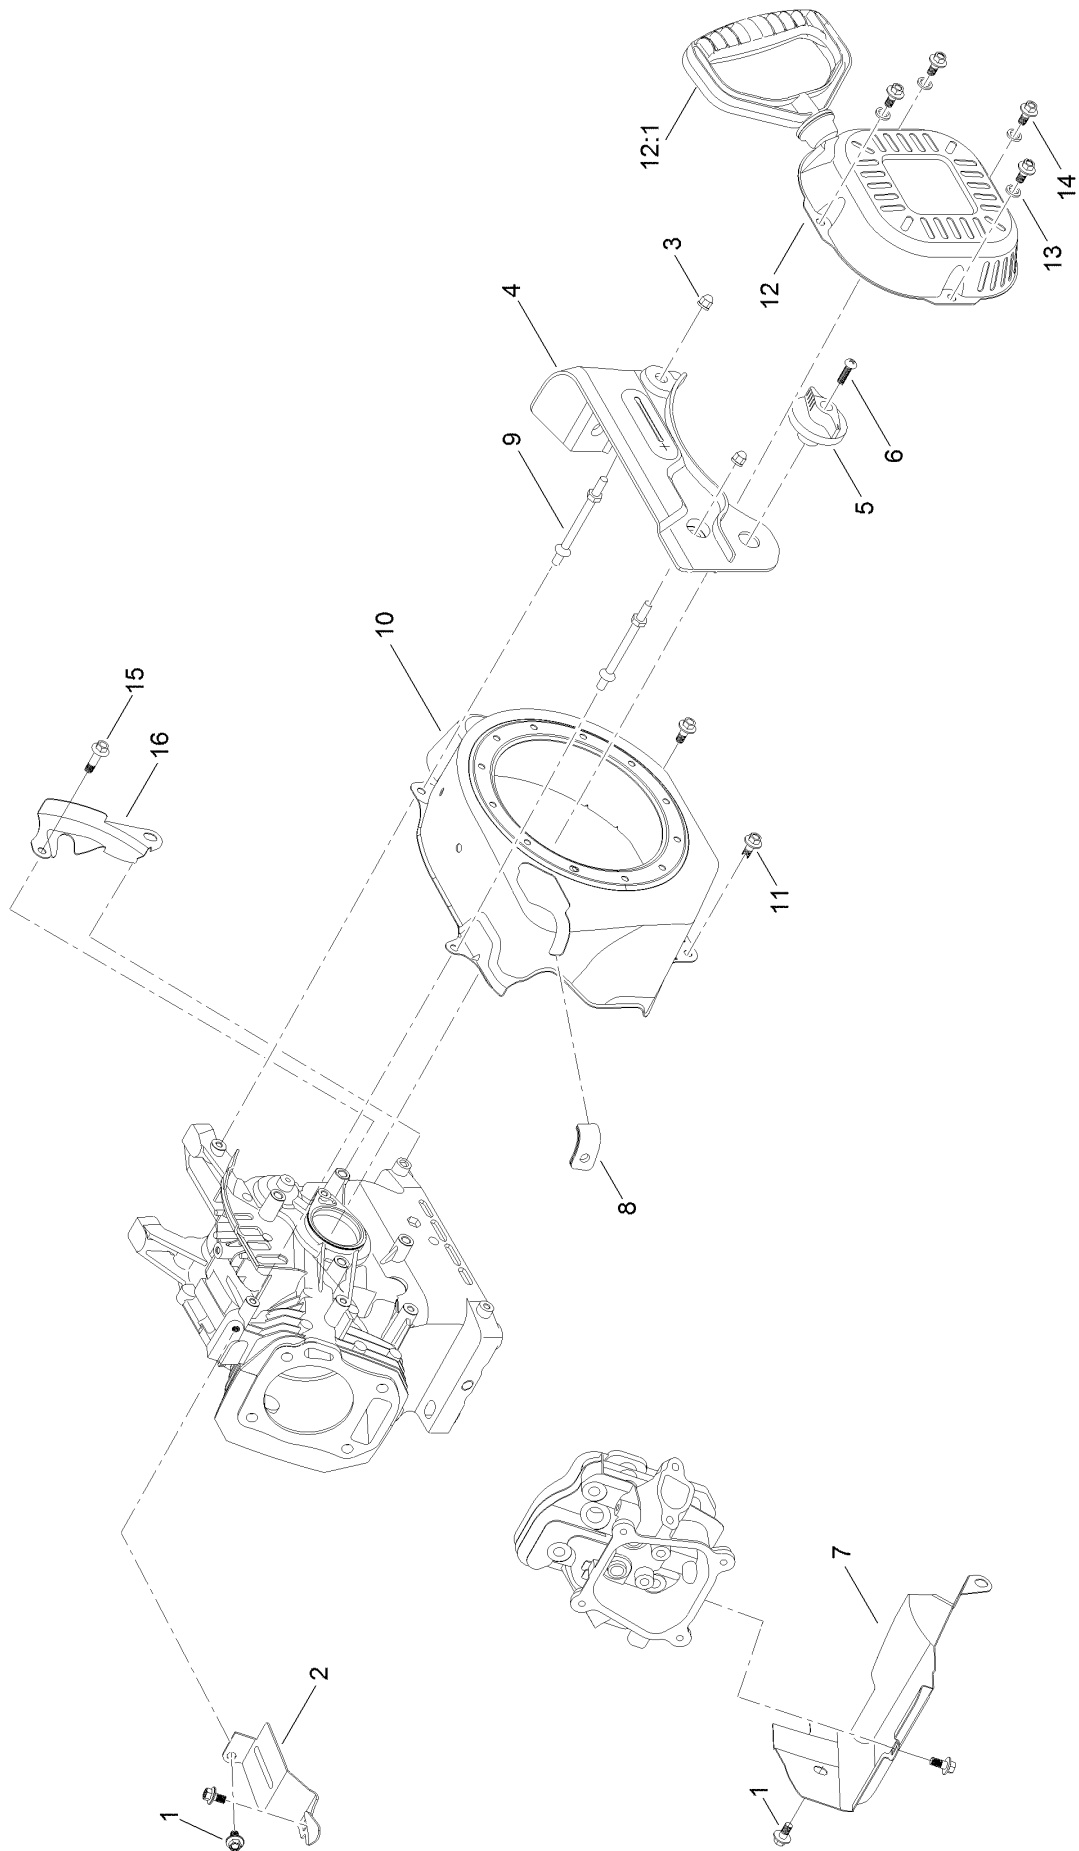




## Blower Housing and Shrouds Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 121-0118           | 4           | Screw-HHF          | 10          | 127-9108           | 1           | Shroud-Blower      |
| 2           | 127-9097           | 1           | Baffle             | 11          | 121-0294           | 2           | Screw-HHF          |
| 3           | 127-9383           | 2           | Nut-Acorn          | 12          | 127-9109           | 1           | Recoil Starter ASM |
| 4           | 127-9116           | 1           | Panel-Control      | 12:1        | 121-0287           | 1           | Handle-Recoil      |
| 5           | 121-0268           | 1           | Knob-Valve, Fuel   | 13          | 127-9380           | 4           | Washer-Plain       |
| 6           | 121-0305           | 1           | Screw-Bhp          | 14          | 127-9031           | 4           | Screw-HHF          |
| 7           | 127-9096           | 1           | Shroud-Lower       | 15          | 120-4454           | 1           | Screw-HHF          |
| 8           | 127-9107           | 1           | Block-Rubber       | 16          | 127-9121           | 1           | Shield-Flywheel    |
| 9           | 127-9110           | 2           | Stud-Mount         |             |                    |             |                    |

 
# Engine Decal Assembly

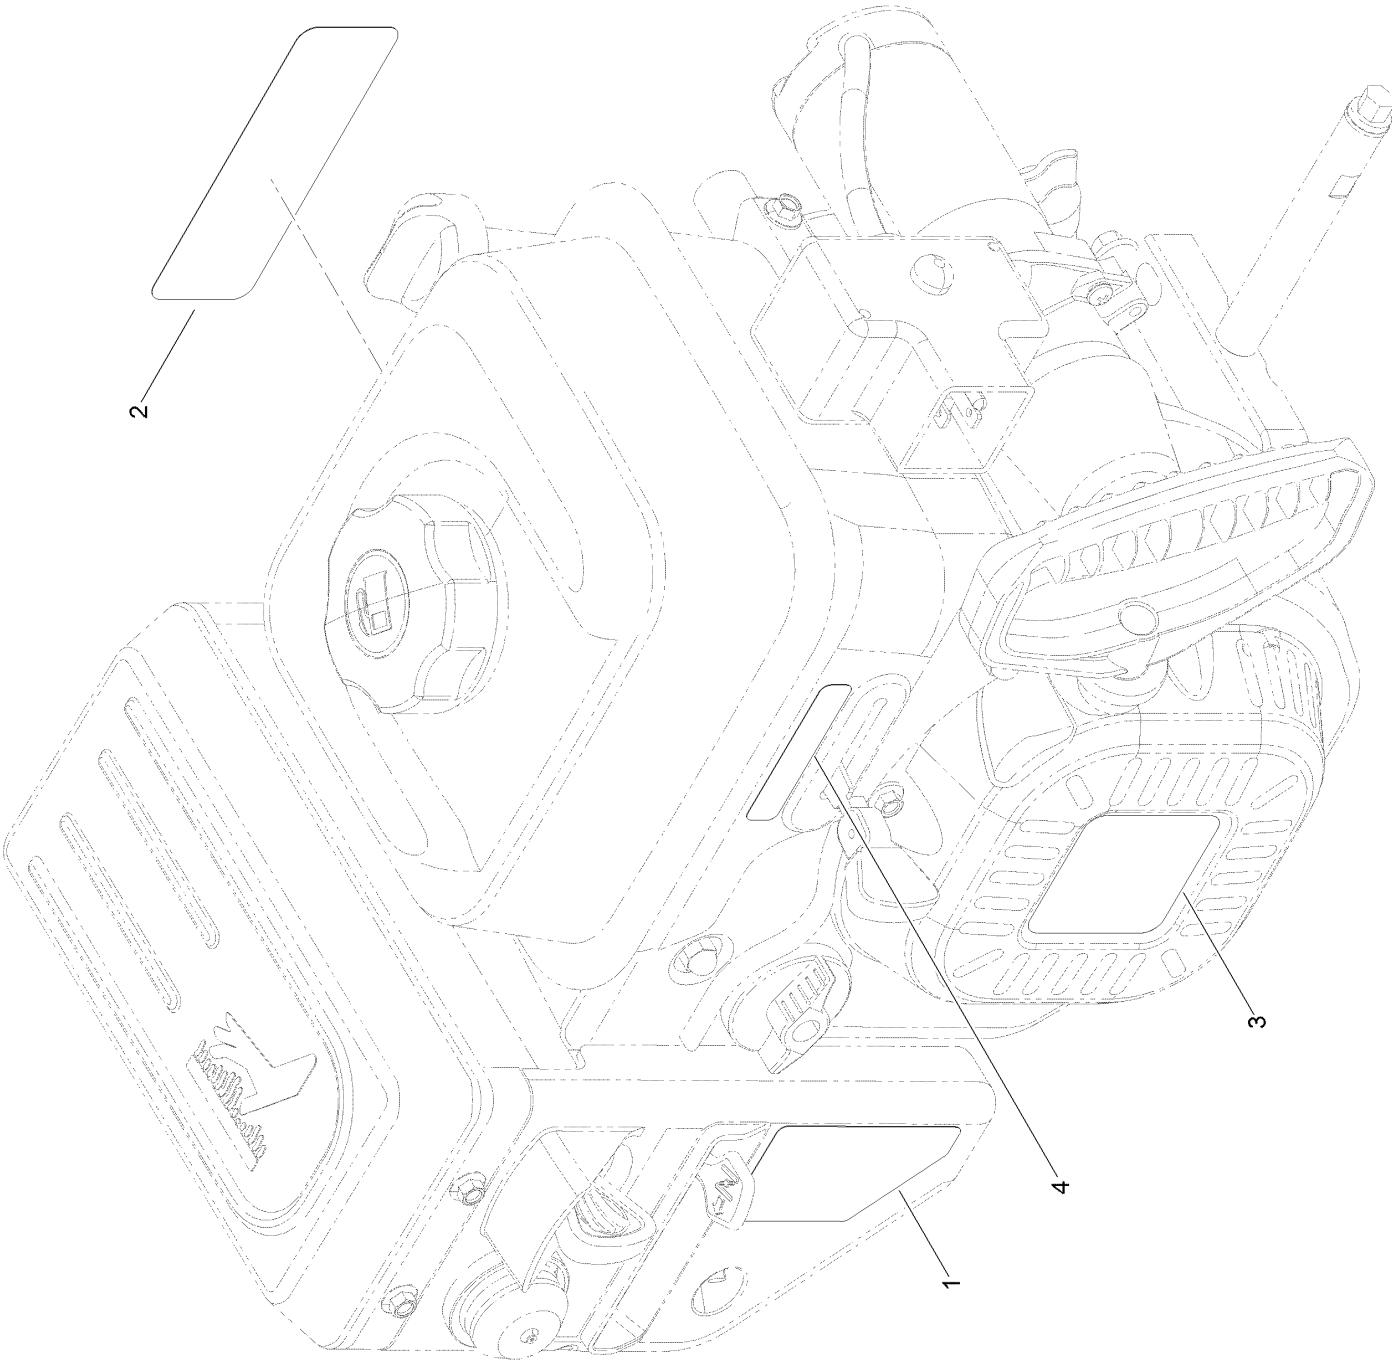

## Engine Decal Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|---------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 120-9805           | 1           | Decal-Control, Engine     | 3           | 120-9809           | 1           | Decal-Recoil, G210 |
| 2           | 120-9806           | 1           | Decal-Engine, Series G210 | 4           | 131-6487           | 1           | Decal-Throttle     |

 
# Chute Assembly

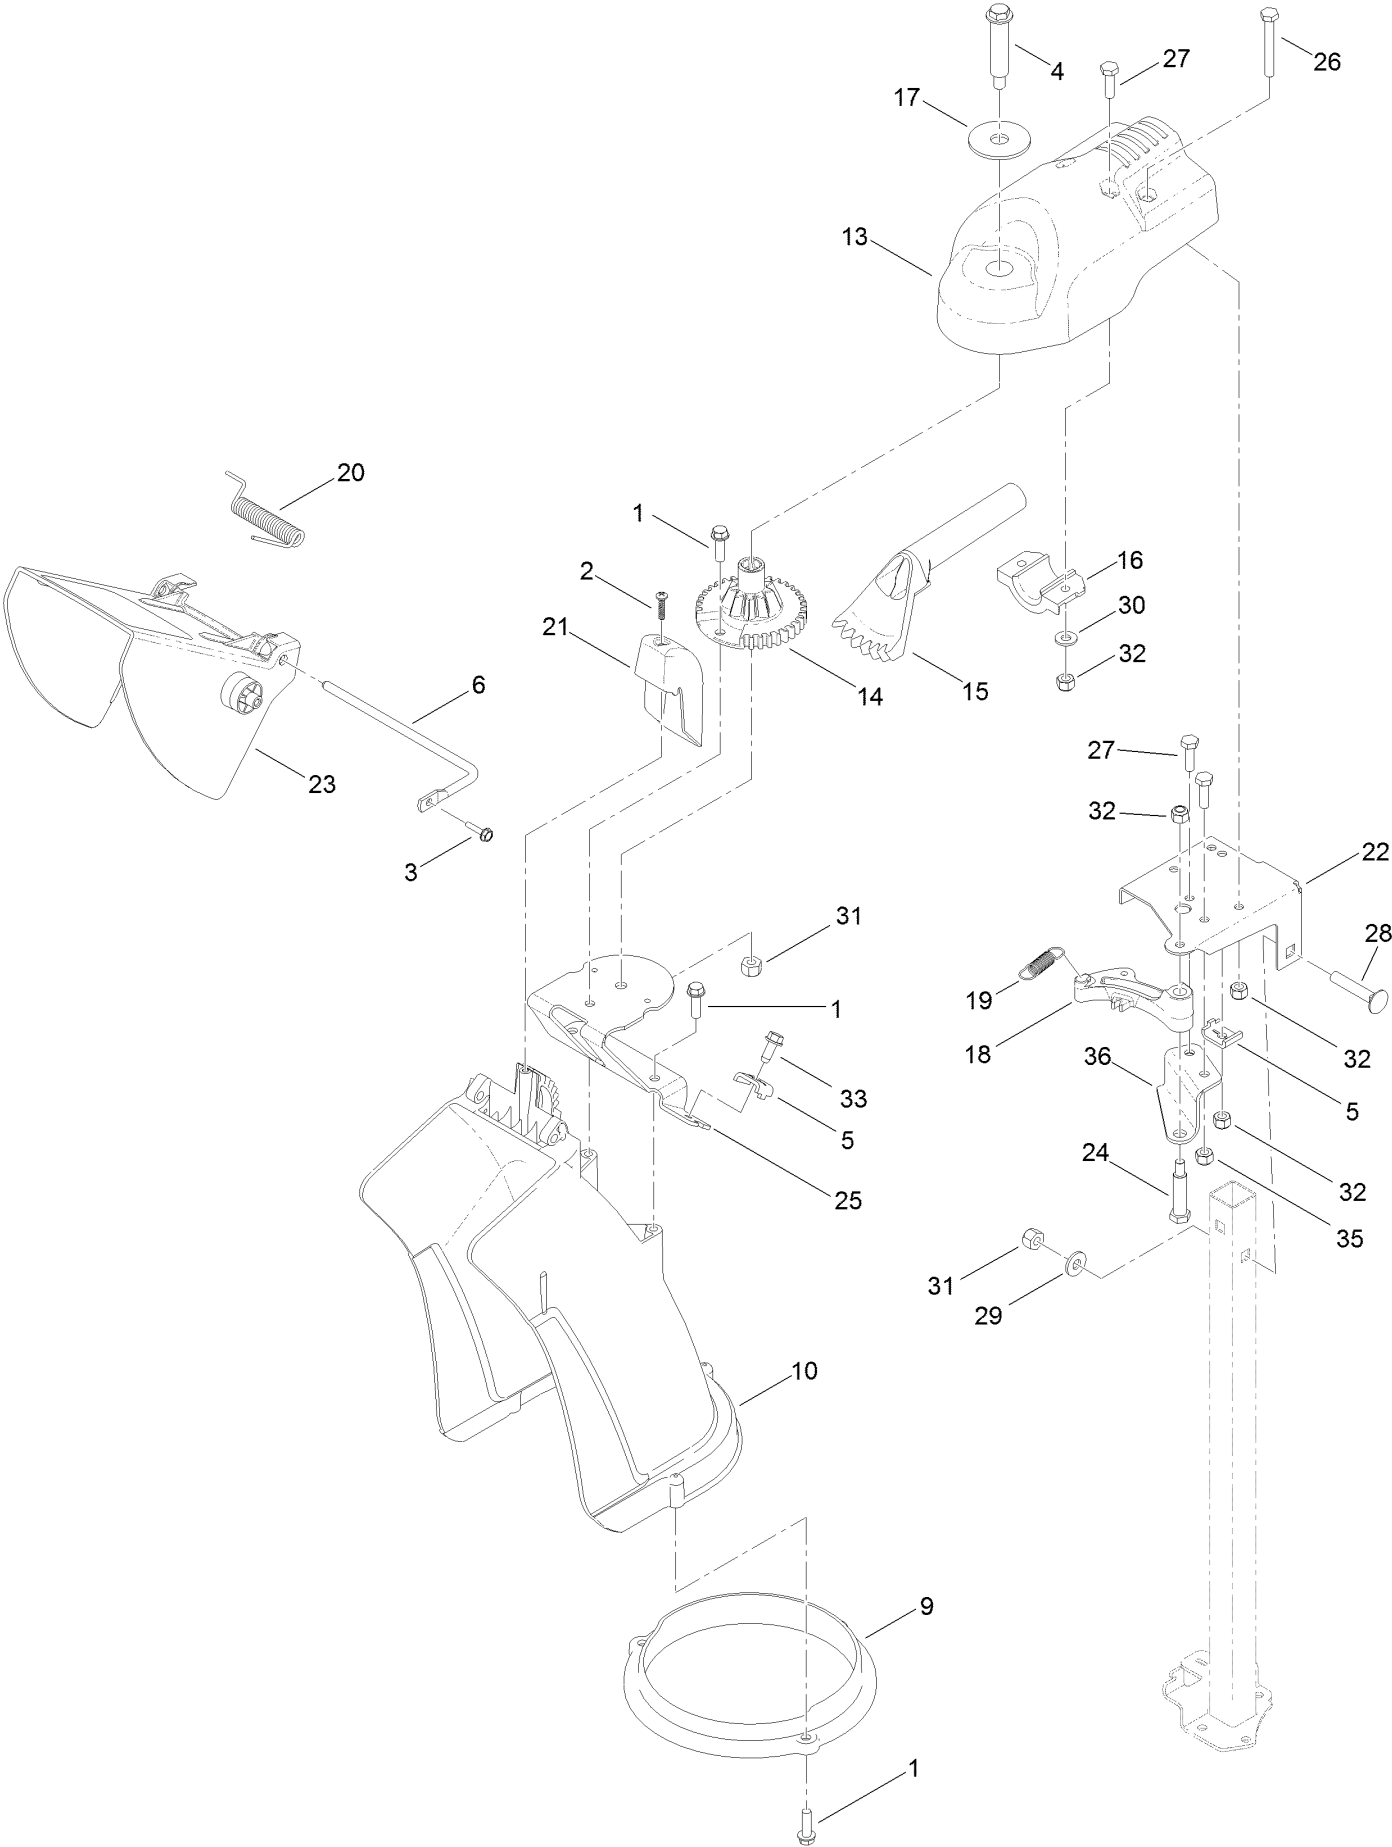

## Chute Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|------------------------|-------------|--------------------|-------------|------------------------|
| 1           | 46-8091            | 6           | Screw-HWH              | 21          | 120-9299           | 1           | Chute-Cover            |
| 2           | 94-4496            | 1           | Screw-PPH              | 22          | 121-1207-03        | 1           | Bracket-Support, Chute |
| 3           | 98-1375            | 1           | Screw-HWH              | 23          | 121-1215           | 1           | Deflector-Chute        |
| 4           | 100-9880           | 1           | Bolt-Shoulder          | 24          | 121-1229           | 1           | Bolt-Shoulder          |
| 5           | 106-7297           | 2           | Clamp-Cable            | 25          | 121-1237-03        | 1           | Bracket-Mount, Chute   |
| 6           | 121-6826           | 1           | Rod-Deflector          | 26          | 321-11             | 3           | Screw-HH               |
| 9           | 119-7627           | 1           | Ring-Chute             | 27          | 321-5              | 4           | Screw-HH               |
| 10          | 119-7628           | 1           | Chute-Discharge        | 28          | 3230-5             | 2           | Screw-CARR             |
| 13          | 120-3852           | 1           | Mount-Chute, Discharge | 29          | 3256-2             | 2           | Washer-Flat            |
| 14          | 120-3853           | 1           | Gear-Chute             | 30          | 3256-22            | 2           | Washer-Flat            |
| 15          | 120-3854           | 1           | Gear-Bevel             | 31          | 3296-29            | 3           | Nut-Lock, NI           |
| 16          | 120-3855           | 1           | Mount-Gear, Bevel      | 32          | 3296-42            | 5           | Nut-Lock, NI           |
| 17          | 120-3856           | 1           | Washer-Flat            | 33          | 32144-10           | 1           | Screw-HWH              |
| 18          | 120-3869           | 1           | Latch-Chute            | 35          | 3296-42            | 2           | Nut-Lock, NI           |
| 19          | 120-7150           | 1           | Spring-Latch, Chute    | 36          | 121-6843           | 1           | Bracket-Support, Latch |
| 20          | 120-9298           | 1           | Spring-Torsion         |             |                    |             |                        |

 
# Quick Stick Assembly

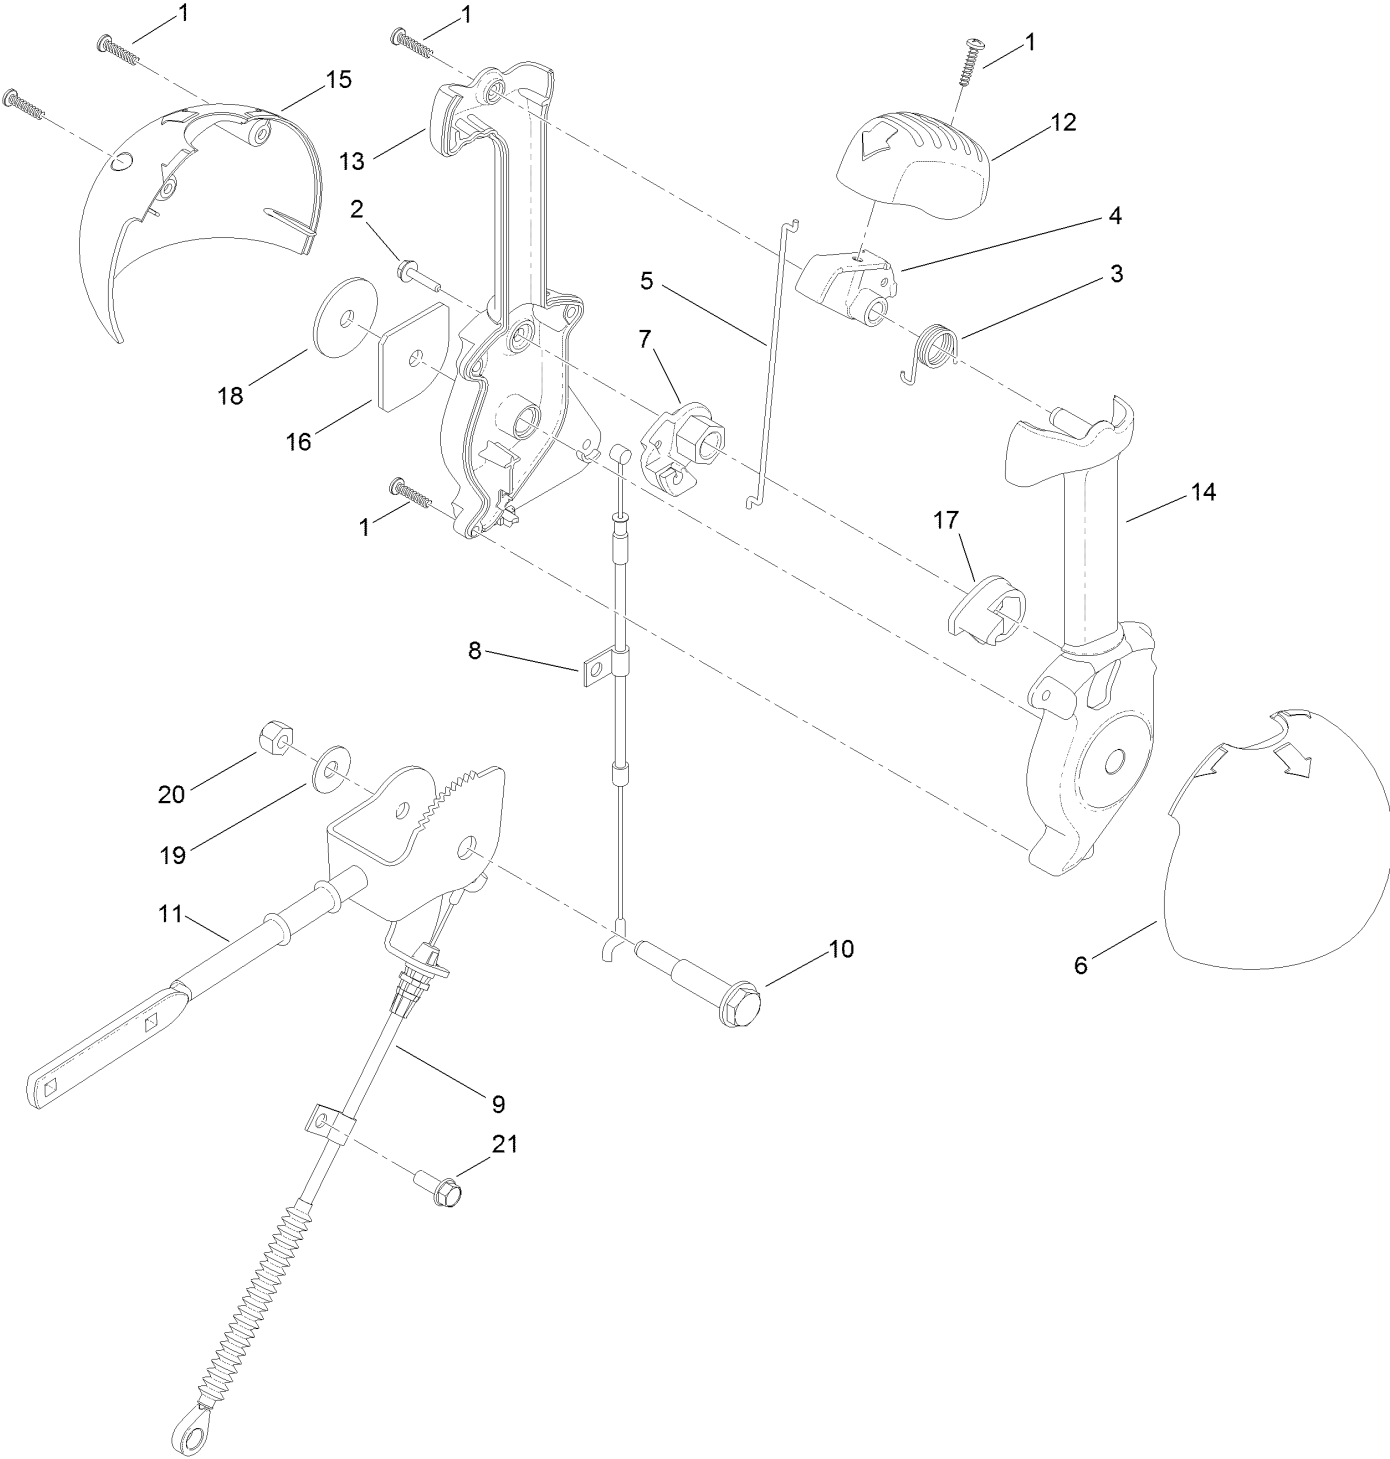

## Quick Stick Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|---------------------------|
| 1           | 94-4496            | 5           | Screw-PPH                | 12          | 106-7280           | 1           | Cap-Lever                 |
| 2           | 98-1375            | 1           | Screw-HWH                | 13          | 106-7281           | 1           | Lever-Control, Chute (RH) |
| 3           | 105-9982           | 1           | Spring-Torsion           | 14          | 106-7282           | 1           | Lever-Control, Chute (LH) |
| 4           | 105-9984           | 1           | Trigger-Latch            | 15          | 106-7292           | 1           | Cover-Lever, Chute (RH)   |
| 5           | 105-9985           | 1           | Link-Latch               | 16          | 106-7295           | 1           | Plate-Friction            |
| 6           | 105-9986           | 1           | Cover-Lever, Chute (LH)  | 17          | 106-7310           | 1           | Pawl-Latch                |
| 7           | 105-9988           | 1           | Lever-Cable, Deflector   | 18          | 107-3002           | 1           | Washer-Nylon              |
| 8           | 121-6815           | 1           | Cable-Release, Chute     | 19          | 3290-456           | 1           | Washer-Belleville         |
| 9           | 121-6839           | 1           | Cable-Deflector, Control | 20          | 3296-29            | 1           | Nut-Lock, NI              |
| 10          | 105-9995           | 1           | Screw-Shoulder           | 21          | 32144-85           | 1           | Screw-HWH                 |
| 11          | 106-4479           | 1           | Rod-Control, Chute       |             |                    |             |                           |
 
## 23—

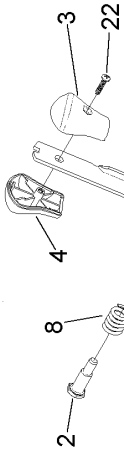




## Handle Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|------------------------|-------------|--------------------|-------------|----------------------|
| 1           | 46-8092            | 3           | Screw-Plastite         | 17          | 121-6829           | 1           | Rod-Selector, Gear   |
| 2           | 63-2650            | 1           | Screw-Shoulder         | 18          | 121-1242-03        | 1           | Selector-Speed       |
| 3           | 105-9999           | 1           | Knob-Shift, LH         | 19          | 3229-30            | 2           | Screw-CARR           |
| 4           | 106-4423           | 1           | Knob-Shift, RH         | 20          | 3256-24            | 3           | Washer-Flat          |
| 6           | 107-3844           | 4           | Washer                 | 21          | 3290-307           | 2           | Pin-Cotter           |
| 7           | 92-2260            | 8           | Screw-Handle           | 22          | 94-4496            | 1           | Screw-PPH            |
| 8           | 108-7313           | 1           | Spring-Compression     | 23          | 3296-72            | 8           | Nut-Lock, NI         |
| 9           | 110-3446           | 1           | Trunnion-Rod           | 24          | 3296-73            | 2           | Nut-Lock, NI         |
| 11          | 120-3881           | 1           | Rod-Chute, Front       | 25          | 32128-13           | 1           | Nut-HHF              |
| 12          | 120-7173-03        | 1           | Handle-Upper, LH       | 26          | 46-8093            | 4           | Screw-Plastite       |
| 13          | 120-7174-03        | 1           | Handle-Upper, RH       | 27          | 105-9987           | 2           | Support-Rod          |
| 14          | 120-7194           | 1           | Panel-Control, Master  | 28          | 121-1241           | 1           | Decal-Model          |
| 15          | 120-9251-03        | 1           | Support-Panel, Control | 30          | 120-2301           | 1           | Plate-Support, Shift |
| 16          | 120-9258-03        | 1           | Mount-Selector, Speed  |             |                    |             |                      |
 
# Control Assembly

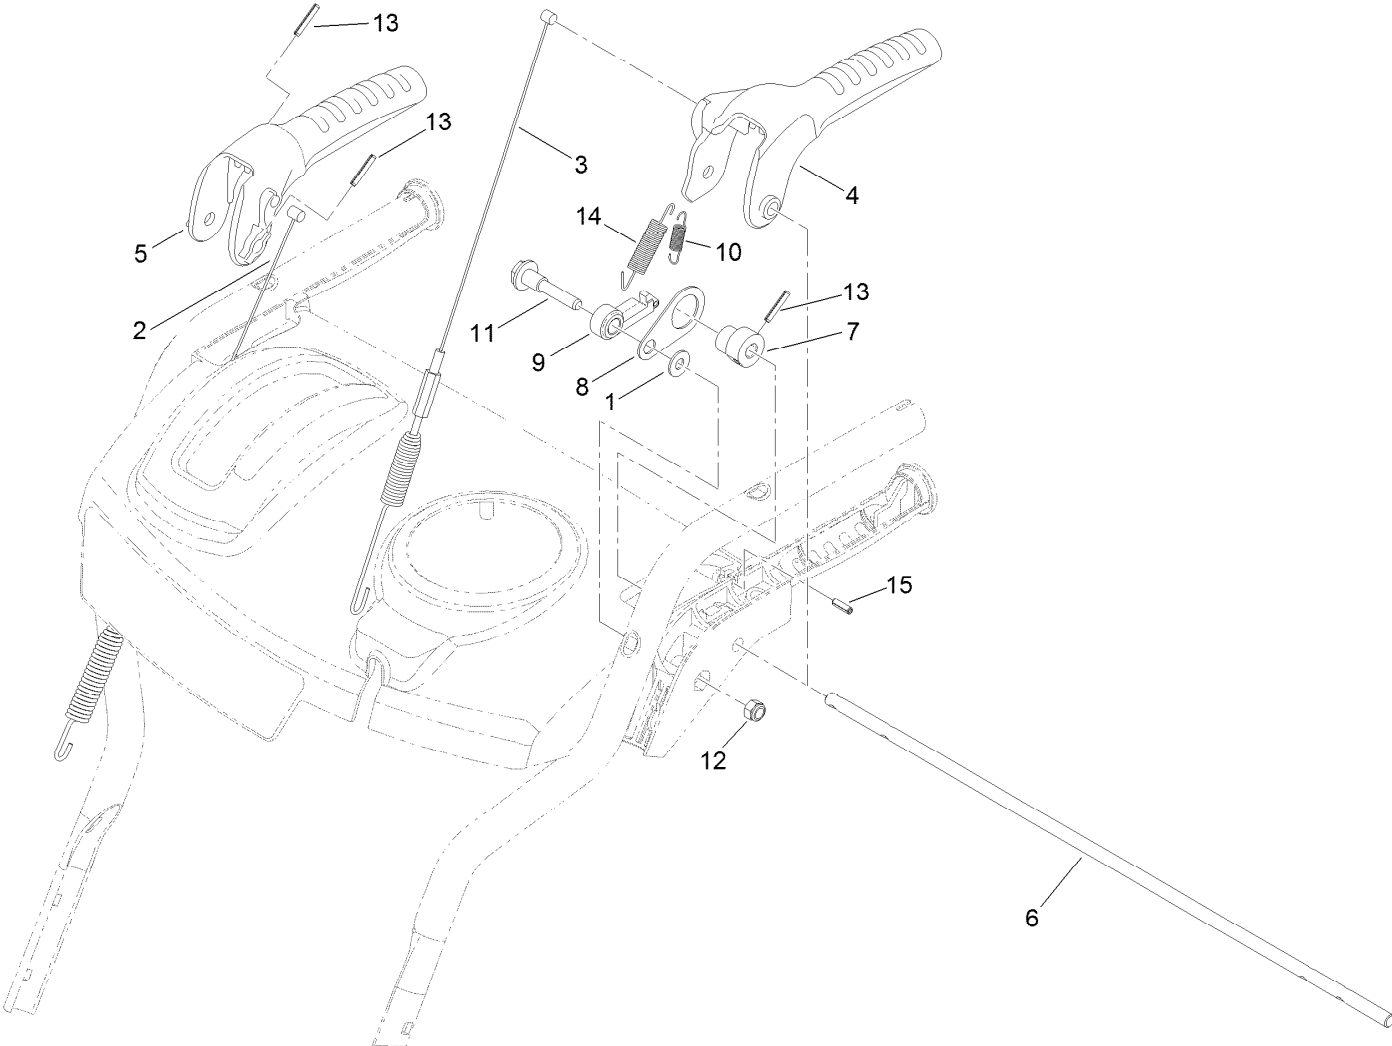

## Control Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>               |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|----------------------------------|
| 1           | 98-3499            | 1           | Washer-Flat              | 9           | 121-1205           | 1           | Latch-Lockout                    |
| 2           | 121-6812           | 1           | Cable-Auger              | 10          | 121-1206           | 1           | Spring-Lockout                   |
| 3           | 121-6813           | 1           | Cable-Traction           | 11          | 121-1216           | 1           | Screw-Shoulder                   |
| 4           | 121-1200           | 1           | Handle-Control, Traction | 12          | 3296-72            | 1           | Nut-Lock, NI                     |
| 5           | 121-1201           | 1           | Handle-Control, Auger    | 13          | 32121-125          | 3           | Pin-Spring                       |
| 6           | 121-1202           | 1           | Rod-Lockout              | 14          | 121-1238           | 1           | Spring-Return, Traction<br>Lever |
| 7           | 121-1203           | 1           | Cam-Lockout              | 15          | 32121-2            | 1           | Pin-Roll, Slotted                |
| 8           | 121-1204           | 1           | Link-Lockout             |             |                    |             |                                  |

# Attachments and Accessories

## For 38813 Power Max 726 OE Snowthrower

| Product Name                                       | Model/Part |
|----------------------------------------------------|------------|
| Weight Kit .....                                   | 107-3815   |
| Snow Cab Kit.....                                  | 127-5960   |
| Non-Marking Skid Kit.....                          | 38211      |
| Heavy-Duty Skid Kit.....                           | 38212      |
| Drift Breaker Kit .....                            | 38213      |
| Tire Chain Kit, Snowthrowers with 13in Tires ..... | 38214      |
| Toro Snow Oil 0W30 Synthetic 20-Ounce Bottle ..... | 38913      |
| Toro 2-Stage Cover.....                            | 490-7466   |
| Plain 2-Stage Cover.....                           | 490-7467   |

**Notes:**

**Notes:**

**Notes:**



**Count on it.**