



Count on it.

Form No. 3397-736 Rev A

Parts Catalog

Trencher Sliding Offset Mount Kit RT1200 Traction Unit

Model No. 25514

Model No. 25514E



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HP: high pressure

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: low pressure

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head

Contents

Sliding Offset Assembly 4

Hydraulic Cylinder Assembly No. AU8HC25036..... 6


Hydraulic Cylinder Hose Assembly 8

Hydraulic Boom Lift and Trencher Drive Hose Assembly..... 10

Offset Assembly 12

Hydraulic Crumber Cylinder Hose Extension Assembly..... 14

Sliding Offset Assembly

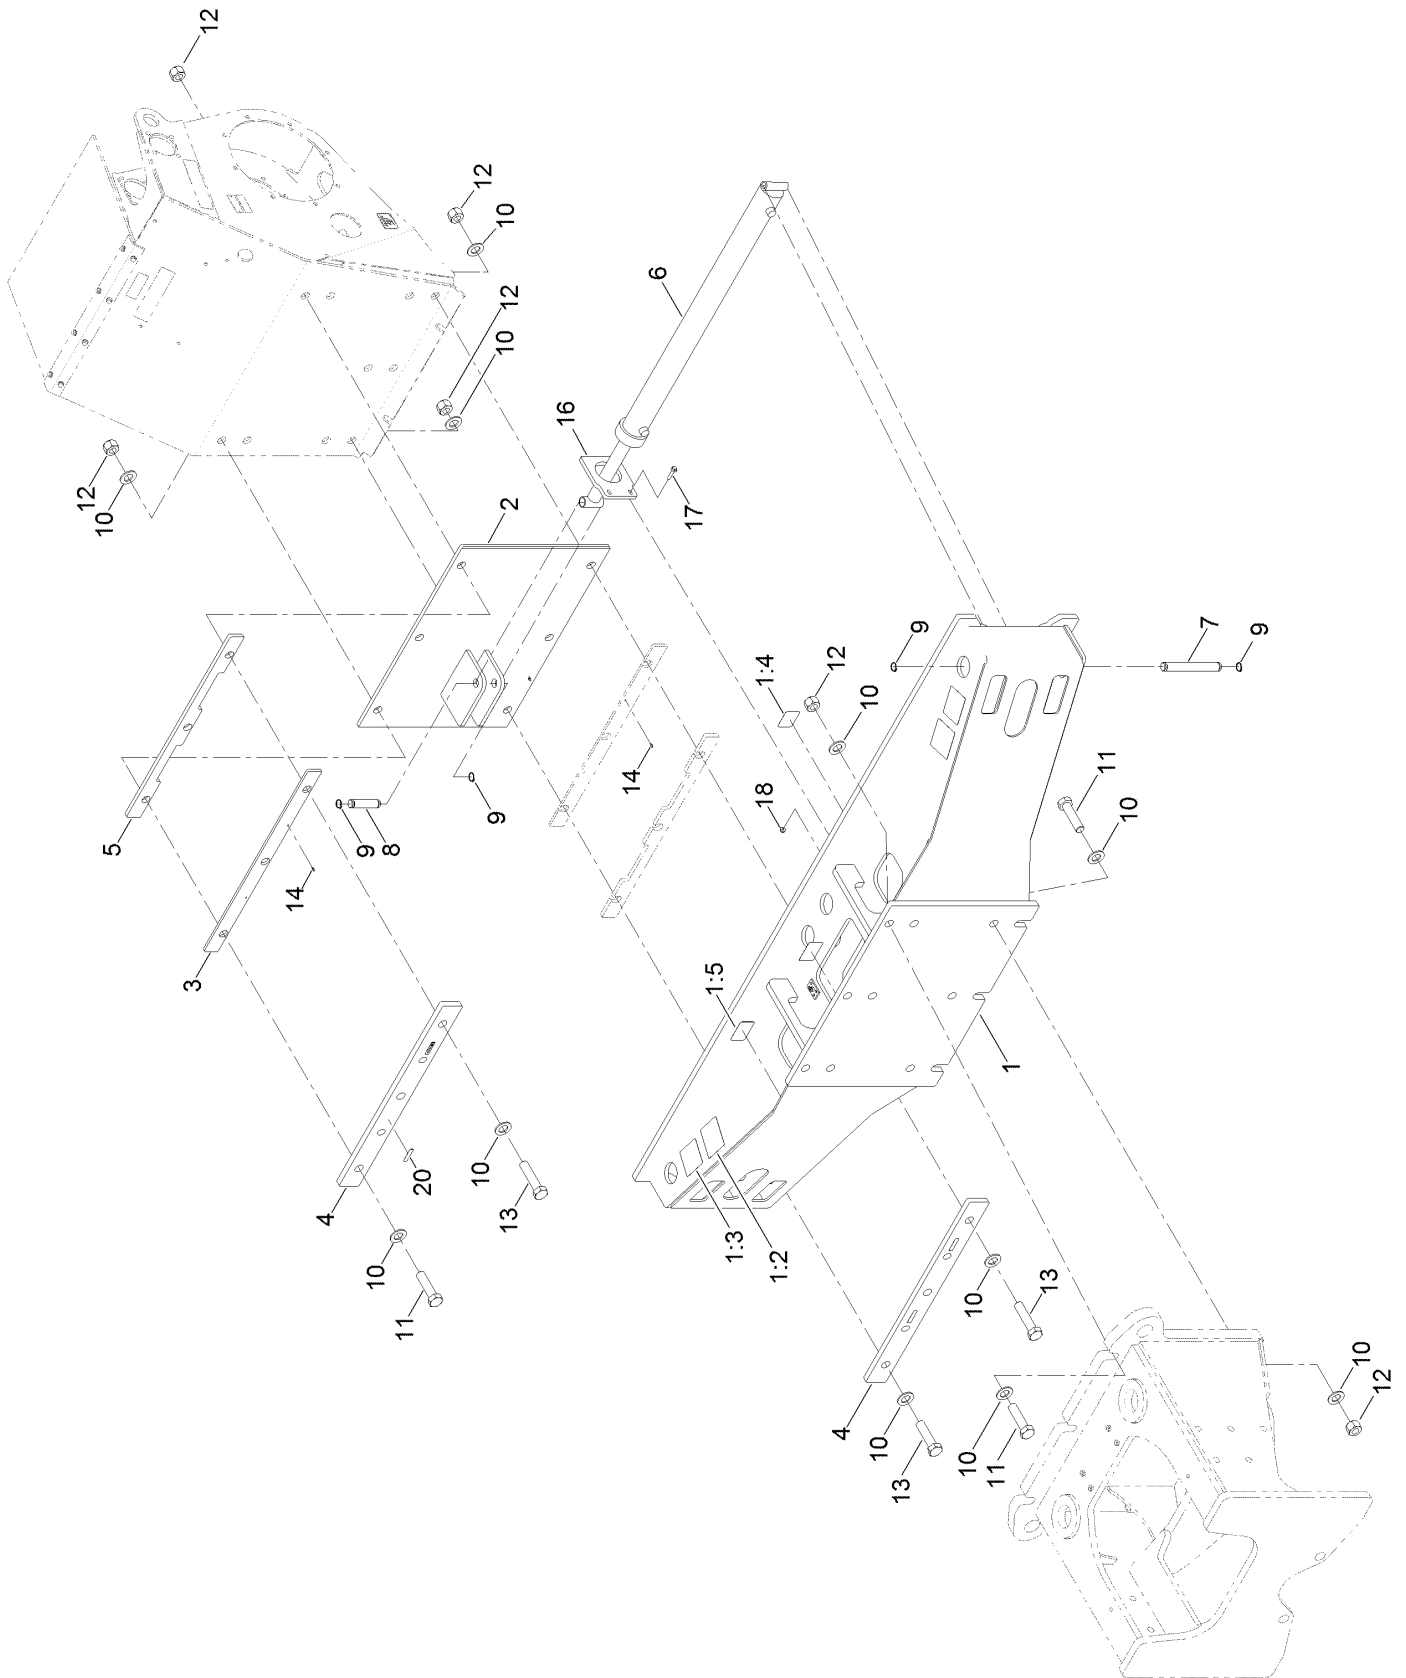


Sliding Offset Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	131-2857	1	Sliding Offset Frame ASM	8	131-2881	1	Pin-Plain
1:2	125-6107	2	Decal-Warning, Crushing	9	32151-36	4	Ring-Retaining
1:3	125-6690	2	Decal-Danger, Crushing	10	AUH426833	21	Washer
1:4	125-6694	2	Decal-Tie Down	11	AU426-1664	9	Bolt
1:5	125-6139	2	Decal-Lift/Tie Down	12	AU232-41116	11	Nut-Hex
2	131-2874-03	1	Slide ASM	13	AU426-1672	2	Bolt
3	131-2610-03	1	Plate-Spacer	14	302-56	4	Fitting-Grease
4	131-2878-03	2	Plate-Retainer	16	131-2873-03	1	Plate-Hold, Cylinder
5	131-2609-03	1	Plate-Spacer	17	112-9318	2	Screw-HHF, Locking
6	AU8HC25036	1	HYD Cylinder ASM	18	104-8300	2	Nut-Flange, NI
7	131-2880	1	Pin-Plain	20	125-8175	4	Decal-Grease

Hydraulic Cylinder Assembly No. AU8HC25036 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	AU8HC25036-1	1	Seal Kit

Hydraulic Cylinder Hose Assembly

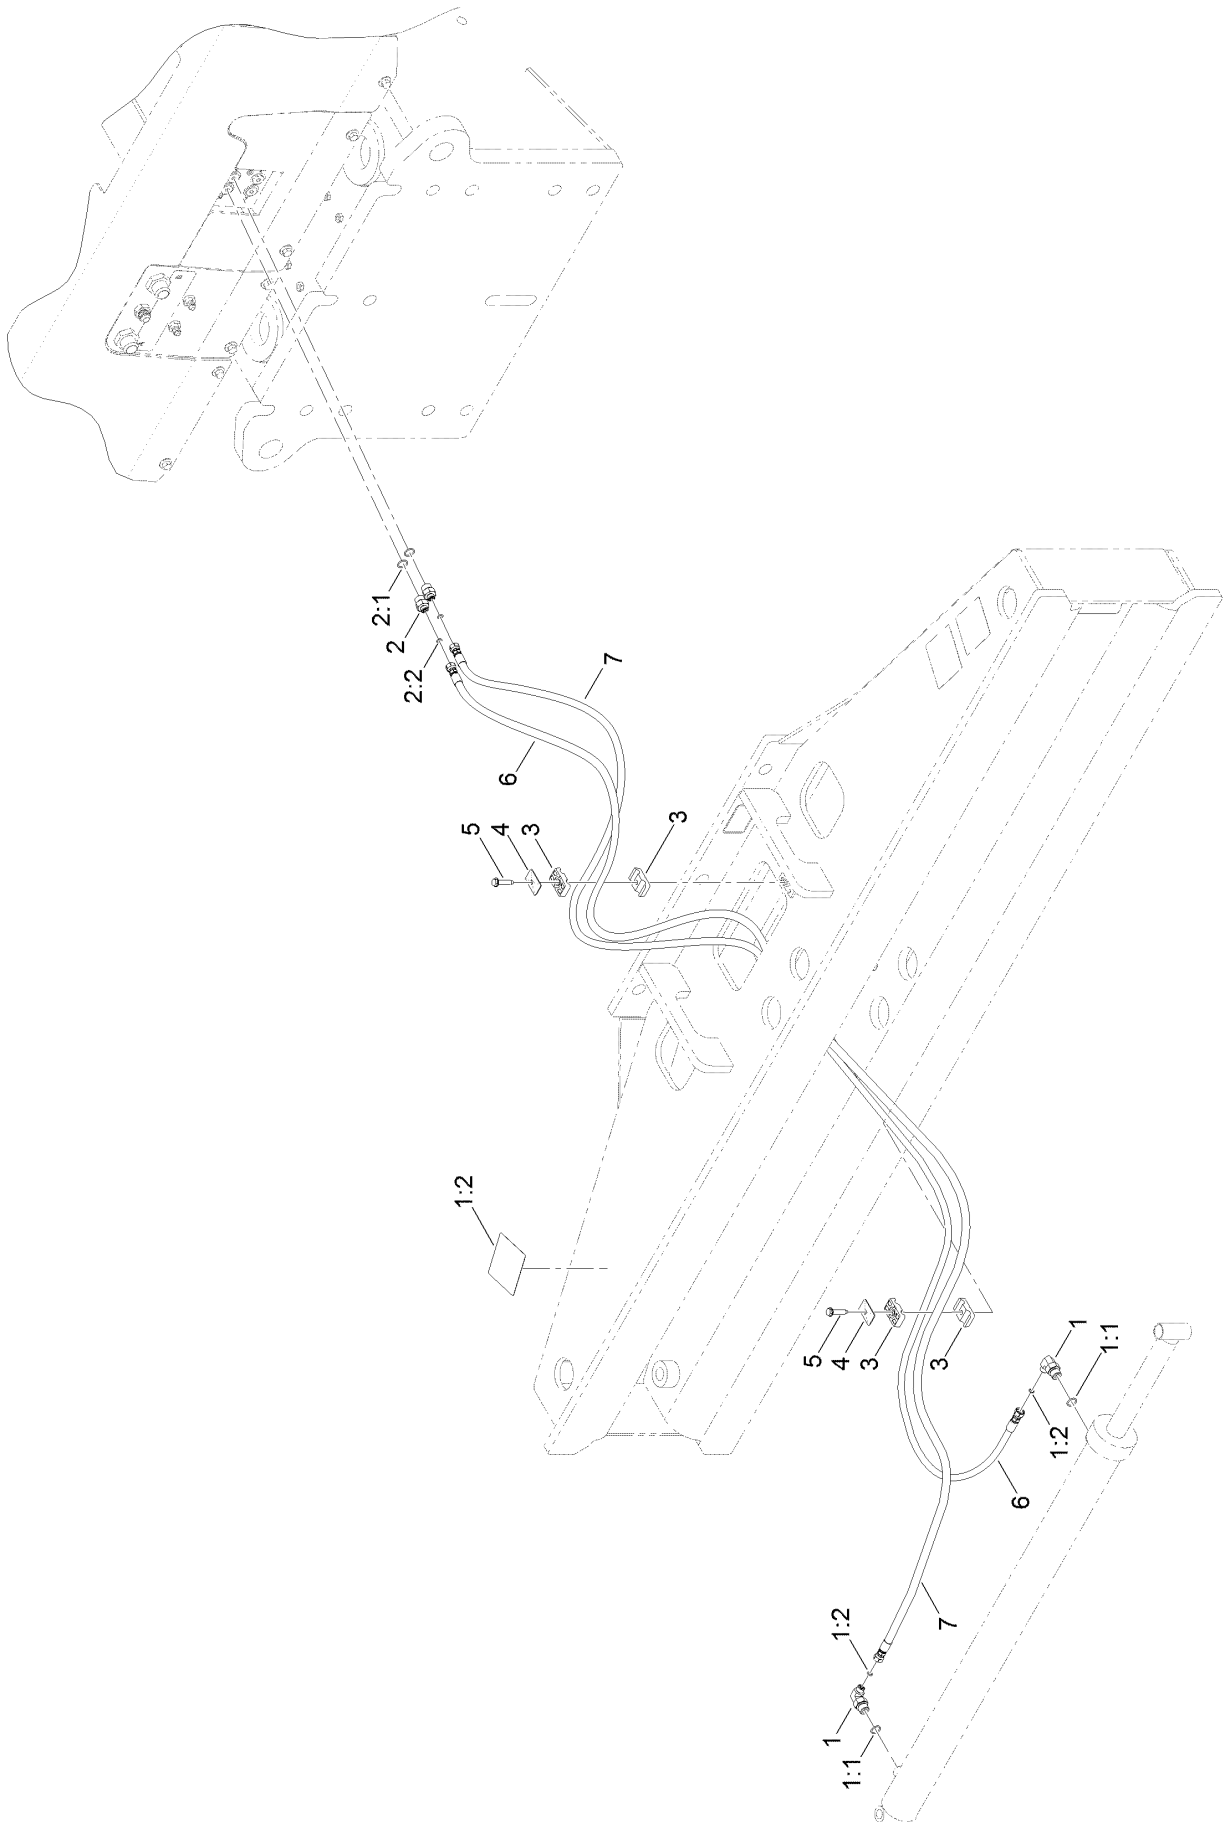


Hydraulic Cylinder Hose Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	108-5687	2	Fitting-Elbow, 90
1:1	237-79	1	O-Ring
1:2	237-21	1	O-Ring
2	340-133	2	Adapter ASM
2:1	237-79	1	O-Ring
2:2	237-21	1	O-Ring

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	56-7976	4	Clamp-Tube
4	69-9760	2	Coverplate
5	32144-57	2	Screw
6	131-2864	1	HYD HP Hose ASM
7	131-2863	1	HYD HP Hose ASM


Hydraulic Boom Lift and Trencher Drive Hose Assembly

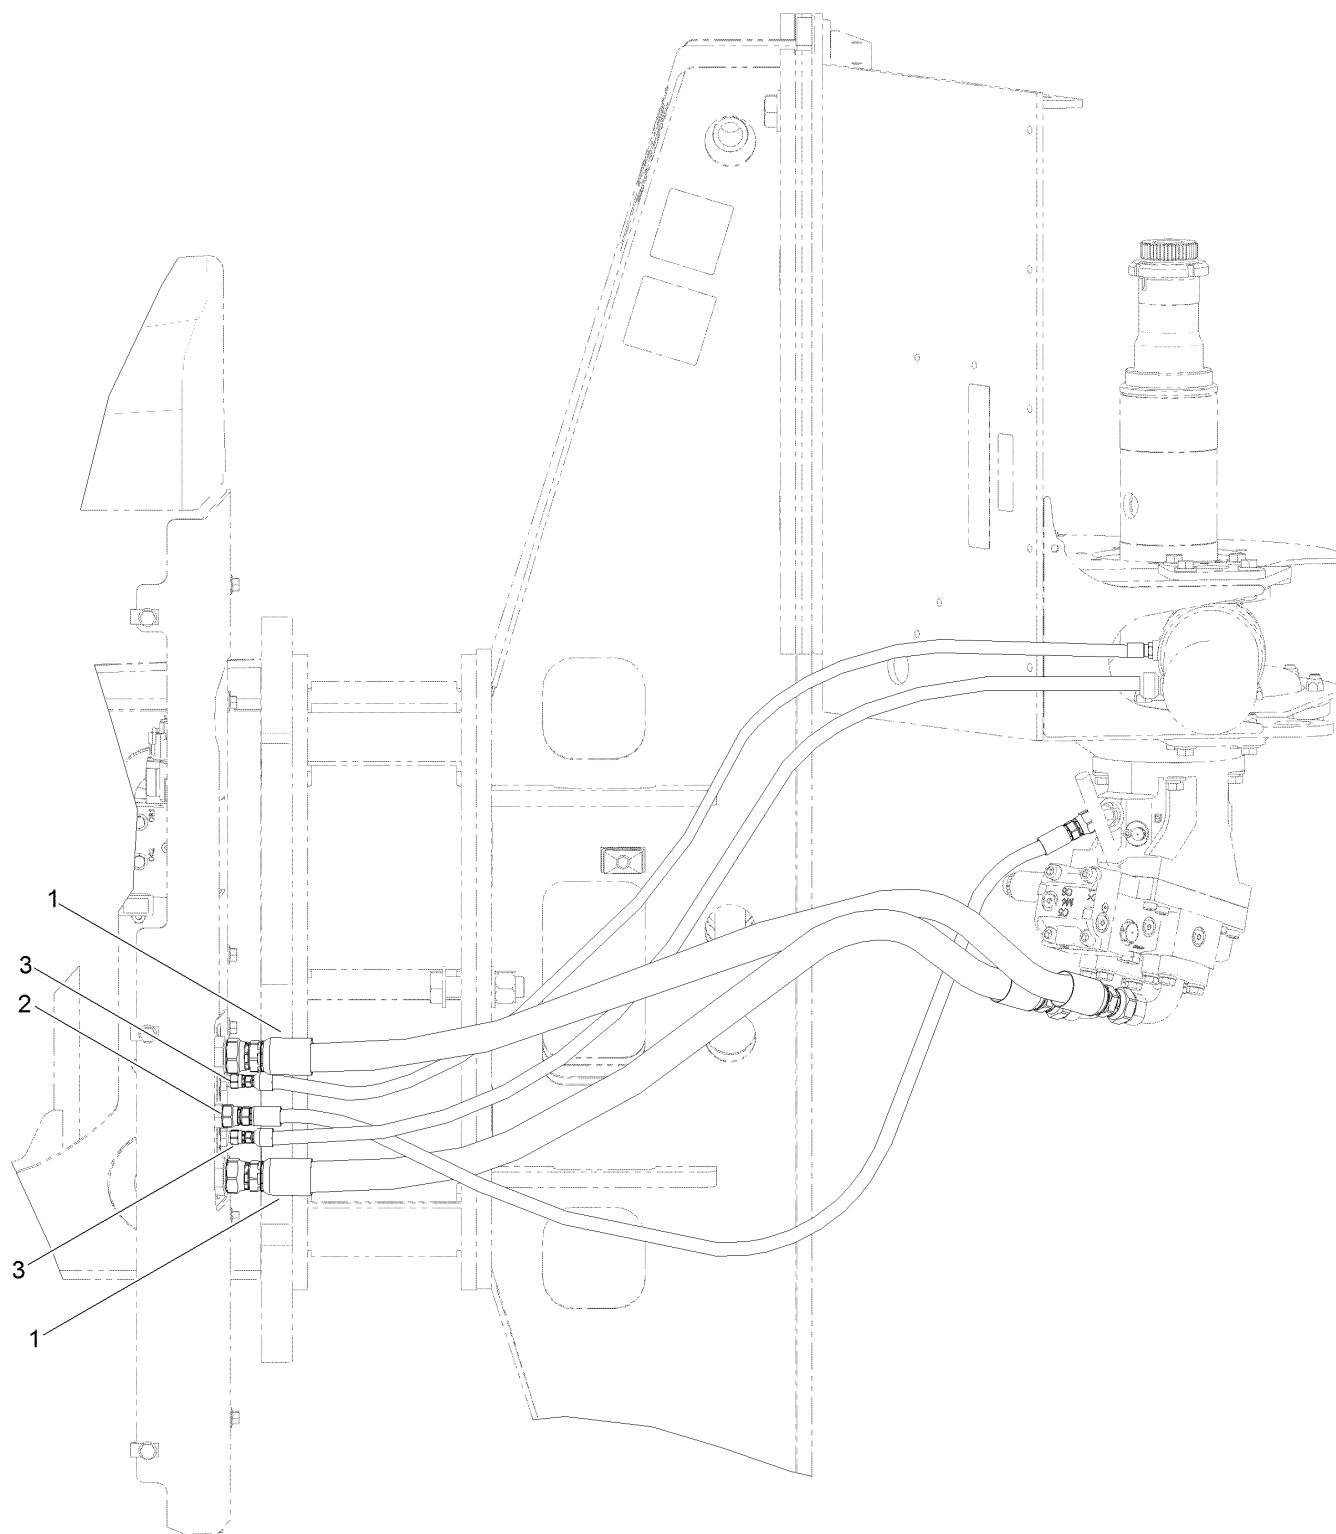

Hydraulic Boom Lift and Trencher Drive Hose Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	131-2642	2	HP HYD Hose ASM
2	133-6148	1	LP HYD Hose ASM
3	133-6147	2	HP HYD Hose ASM


Offset Assembly

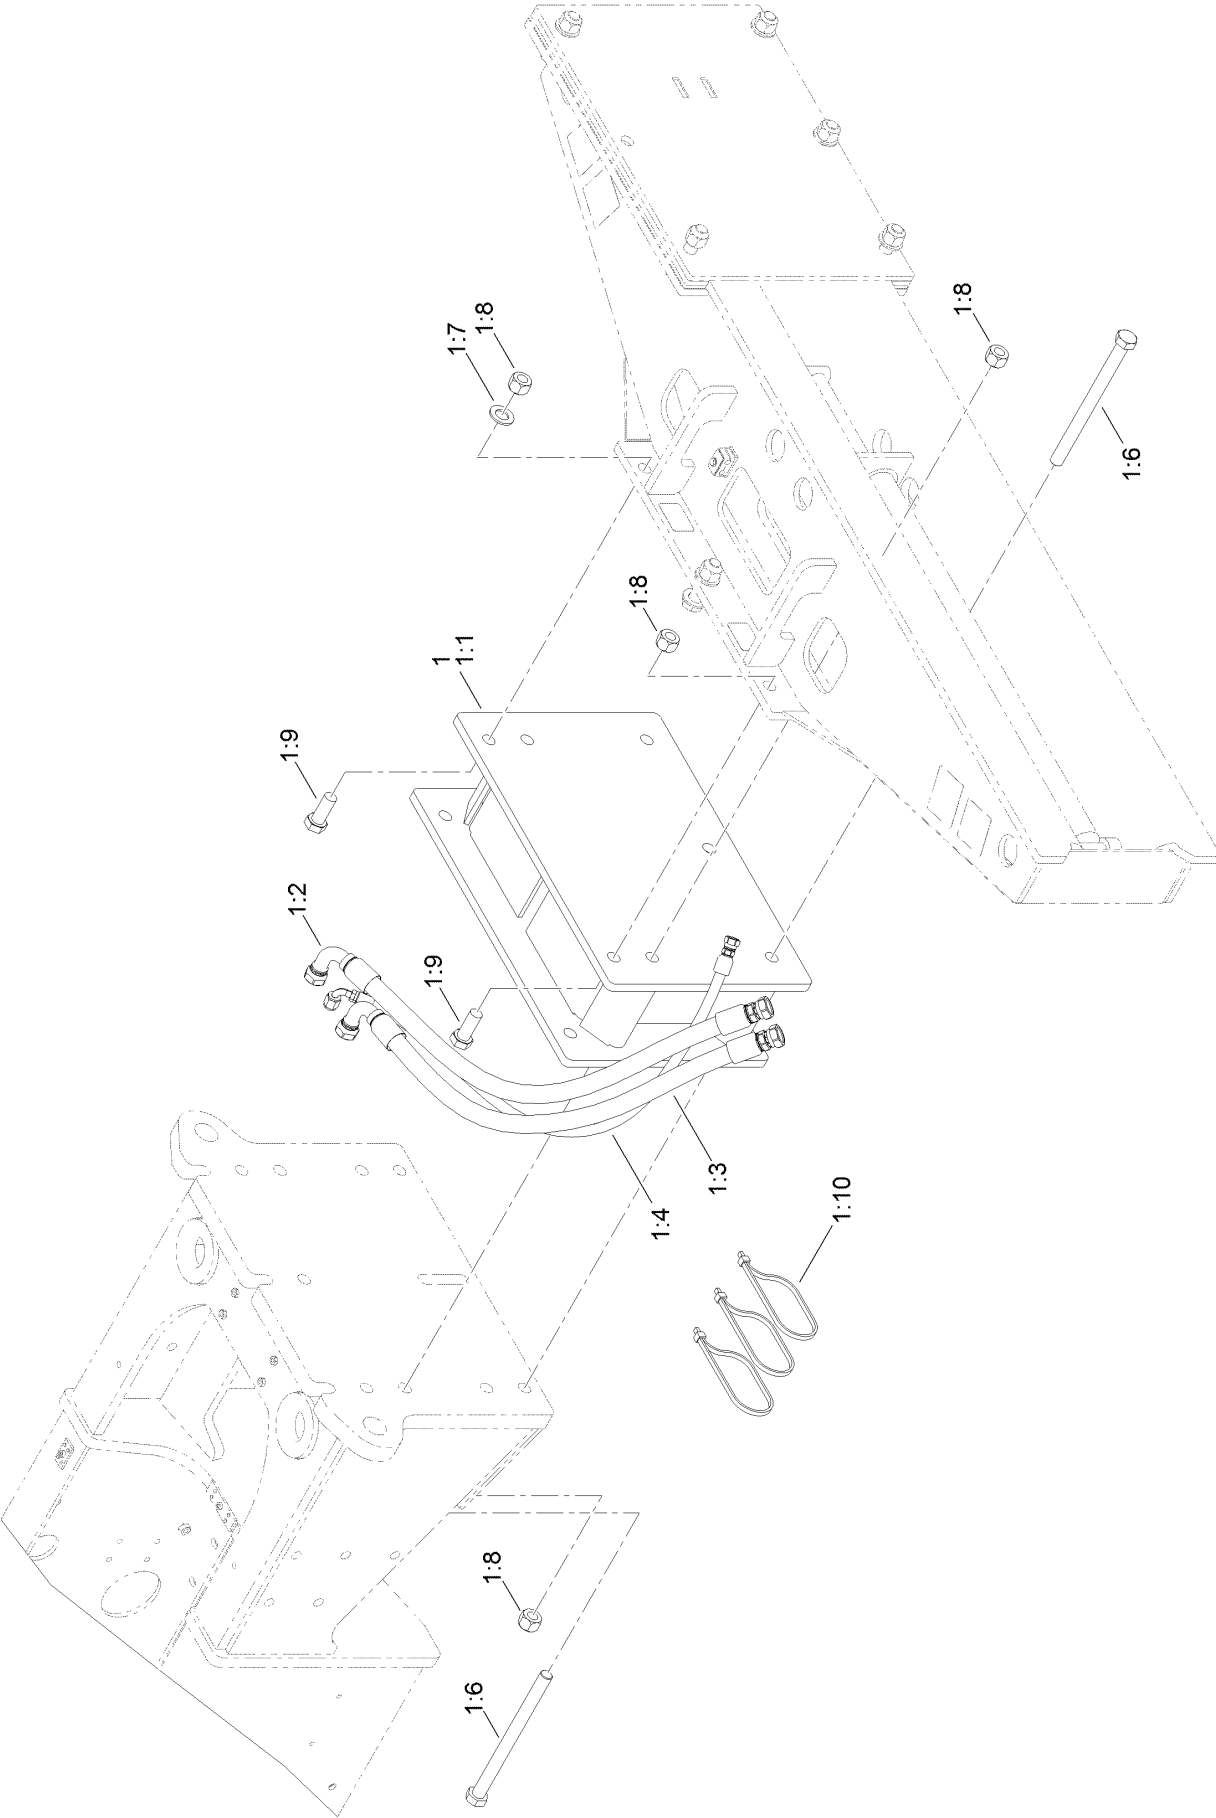

Offset Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	131-2829	1	Trencher Spacer ASM	1:6	131-2834	4	Screw-HH
1:1	131-2830-03	1	Adapter-Frame	1:7	AUH426833	2	Washer
1:2	131-2836	1	Hose ASM	1:8	AU232-41116	6	Nut-Hex
1:3	131-2837	1	Hose ASM	1:9	AU426-1640	2	Bolt
1:4	131-2838	1	LP HYD Hose ASM	1:10	AUL18331	3	Strap-Tie

Hydraulic Crumber Cylinder Hose Extension Assembly

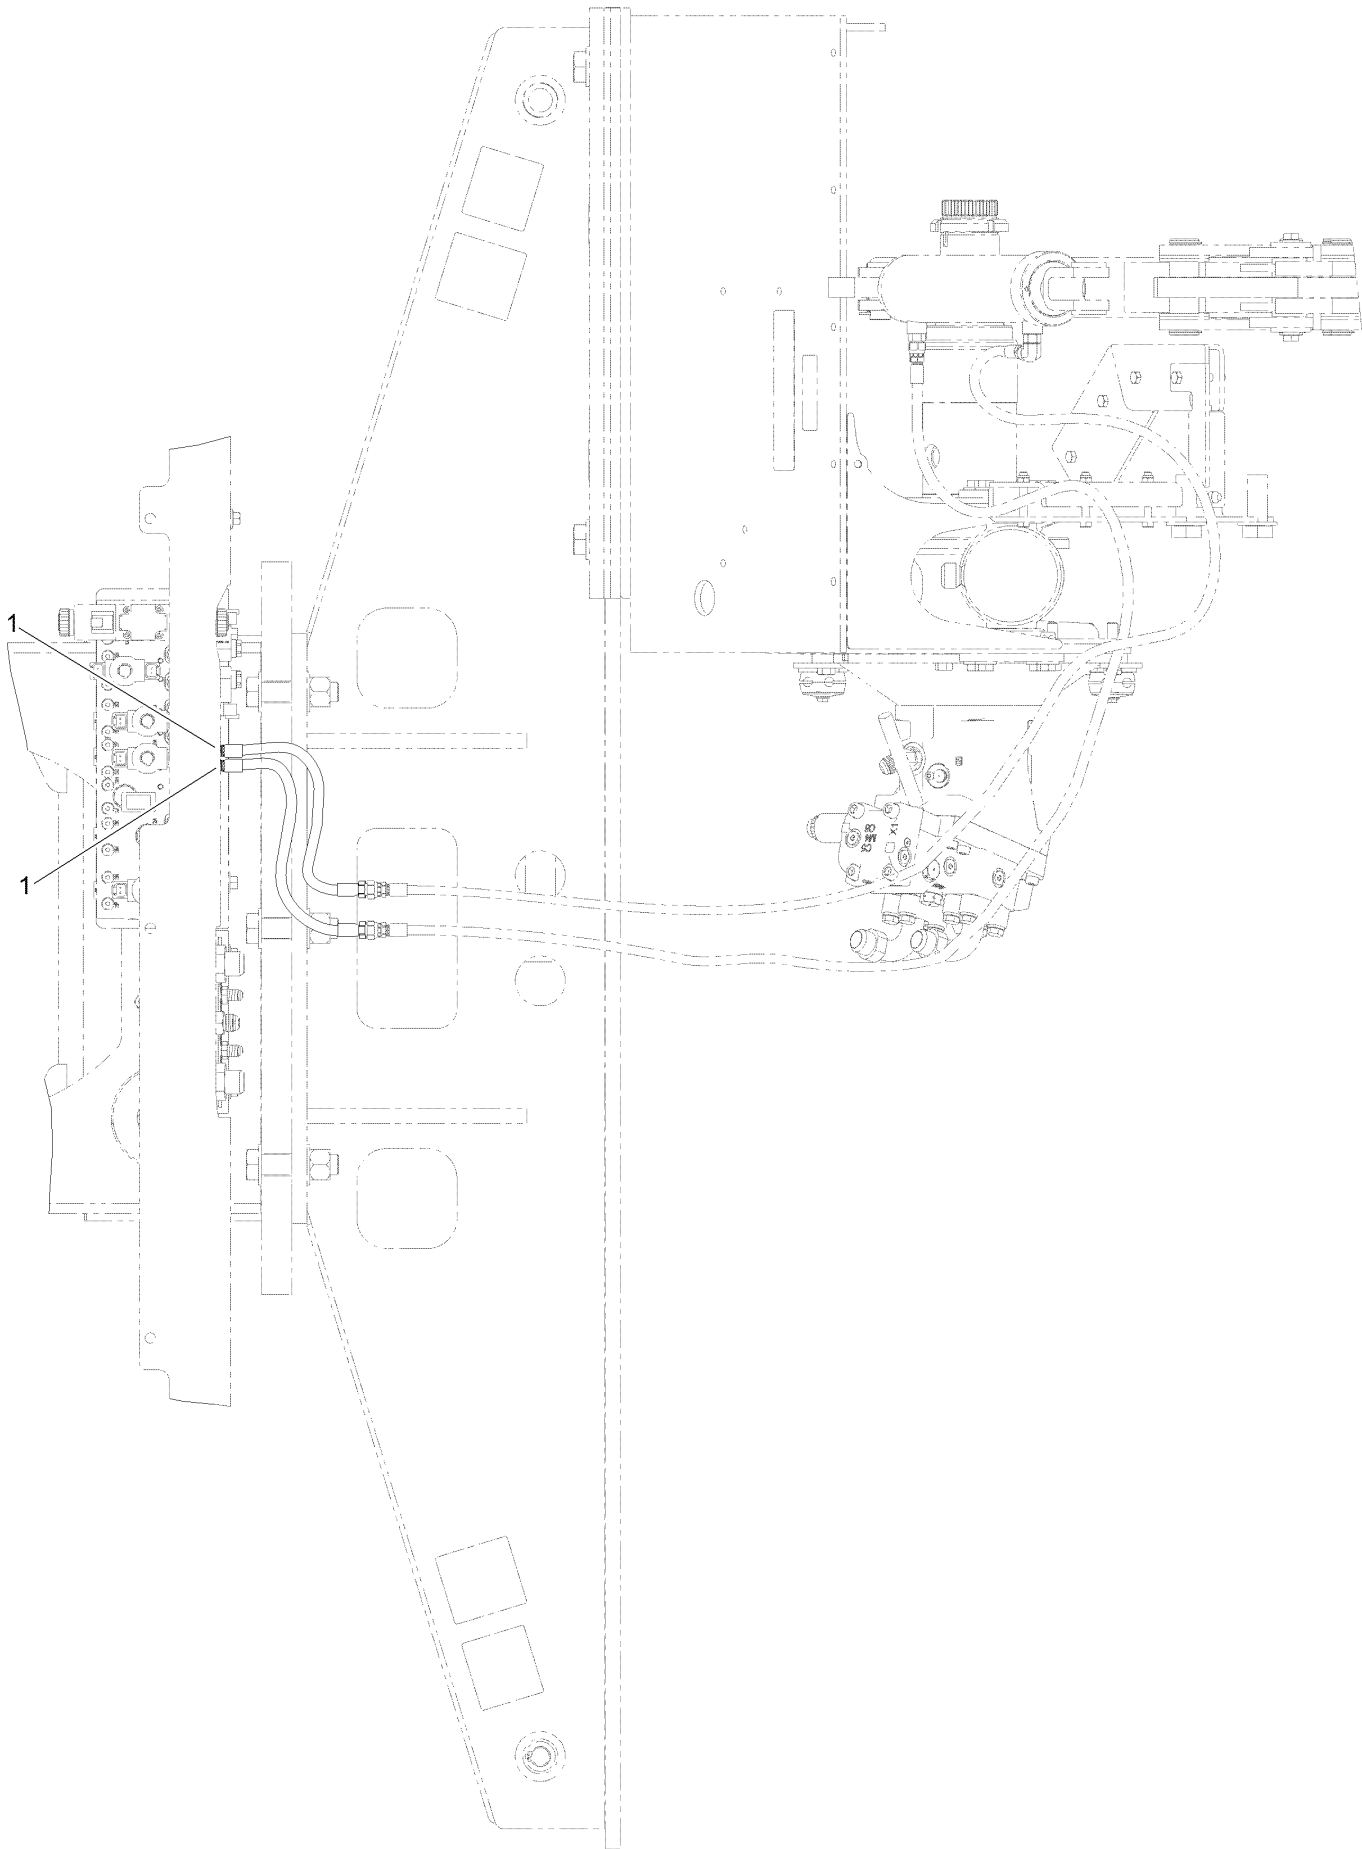

Hydraulic Crumber Cylinder Hose Extension Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	133-6146	2	HP HYD Hose ASM



Count on it.