



Form No. 3388-237 Rev C

Count on it.

Parts Catalog

TimeCutter® MX 5050

Riding Mower

Model No. 74770—Serial No. 315000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HP: high pressure

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: low pressure

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard


TAP: self tapping

TTH: torx truss head

Contents

Frame, Front Axle and Caster Wheel Assembly	4
13 Inch Wheel and Tire Assembly No. 119-3473	6
Deck Lift Assembly	8
Motion Control Assembly	10
Brake Box Assembly	12
Seat Assembly	14
Seat Assembly No. 131-4147	16
Belt and Idler Assembly	18
Hydro Transaxle Drive and Rear Wheel Assembly	20
RH Transaxle Assembly No. 130-6961	22
LH Transaxle Assembly No. 130-6960	24
4 Ply Wheel and Tire Assembly No. 109-5268	26
2 Ply Wheel and Tire Assembly No. 131-3673	28
Clutch Assembly	30
Engine and Muffler Assembly	32
Body Styling and Fuel Pod Assembly	34
Fuel Delivery Assembly	36
Battery and Electrical Assembly	38
Fuse and Wire Harness Assembly	40
50 Inch Deck Assembly	42
50 Inch Deck and Decal Assembly No. 131-3612	44
50 Inch Deck Belt, Spindle and Blade Assembly	46
Attachments and Accessories	48

Frame, Front Axle and Caster Wheel Assembly

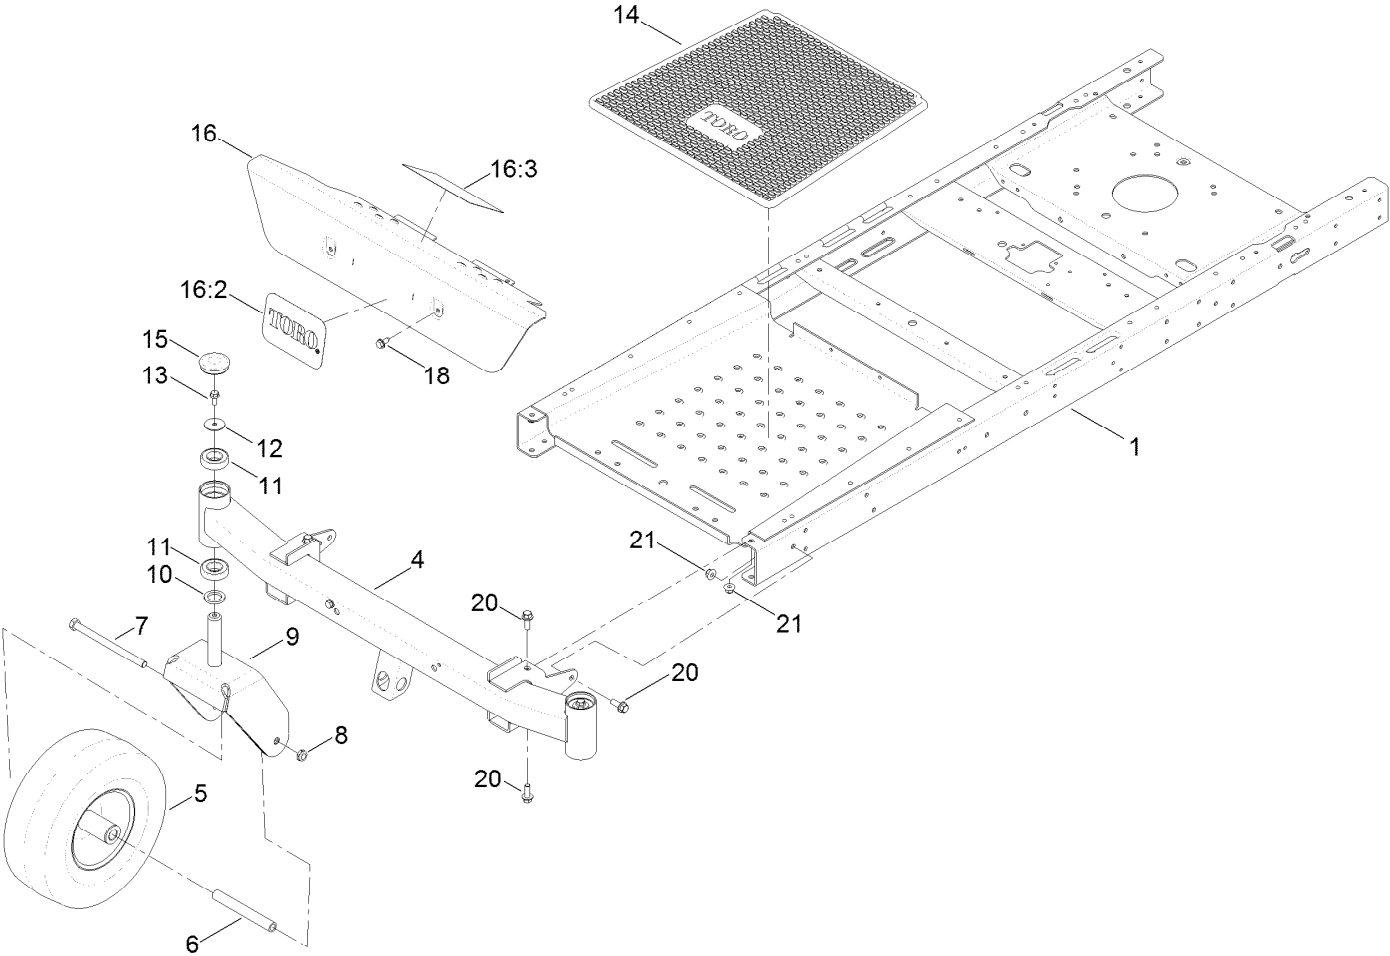


Frame, Front Axle and Caster Wheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-0699-01	1	Frame ASM
4	125-1726-01	1	Axle ASM
5	119-3473	2	13 Inch Wheel And Tire ASM
6	119-3475	2	Spanner
7	325-37	2	Screw-HH
8	3296-45	2	Nut-Lock, NI
9	119-3349-01	2	Fork-Caster
10	117-7394	2	Washer-Thrust
11	109-3678	4	Bearing-Ball

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
12	3256-68	2	Washer-Flat
13	3234-47	2	Screw-HHF
14	120-5454	1	Mat-Floor
15	116-4348	2	Cap-Grease
16	132-0892	1	Footrest ASM
16:2	99-4693	1	Decal
16:3	132-0869	1	Decal-Danger
18	32144-70	2	Screw-HWHTF
20	3234-42	6	Screw-HHF
21	104-8301	6	Nut-Flange, NI

13 Inch Wheel and Tire Assembly No. 119-3473

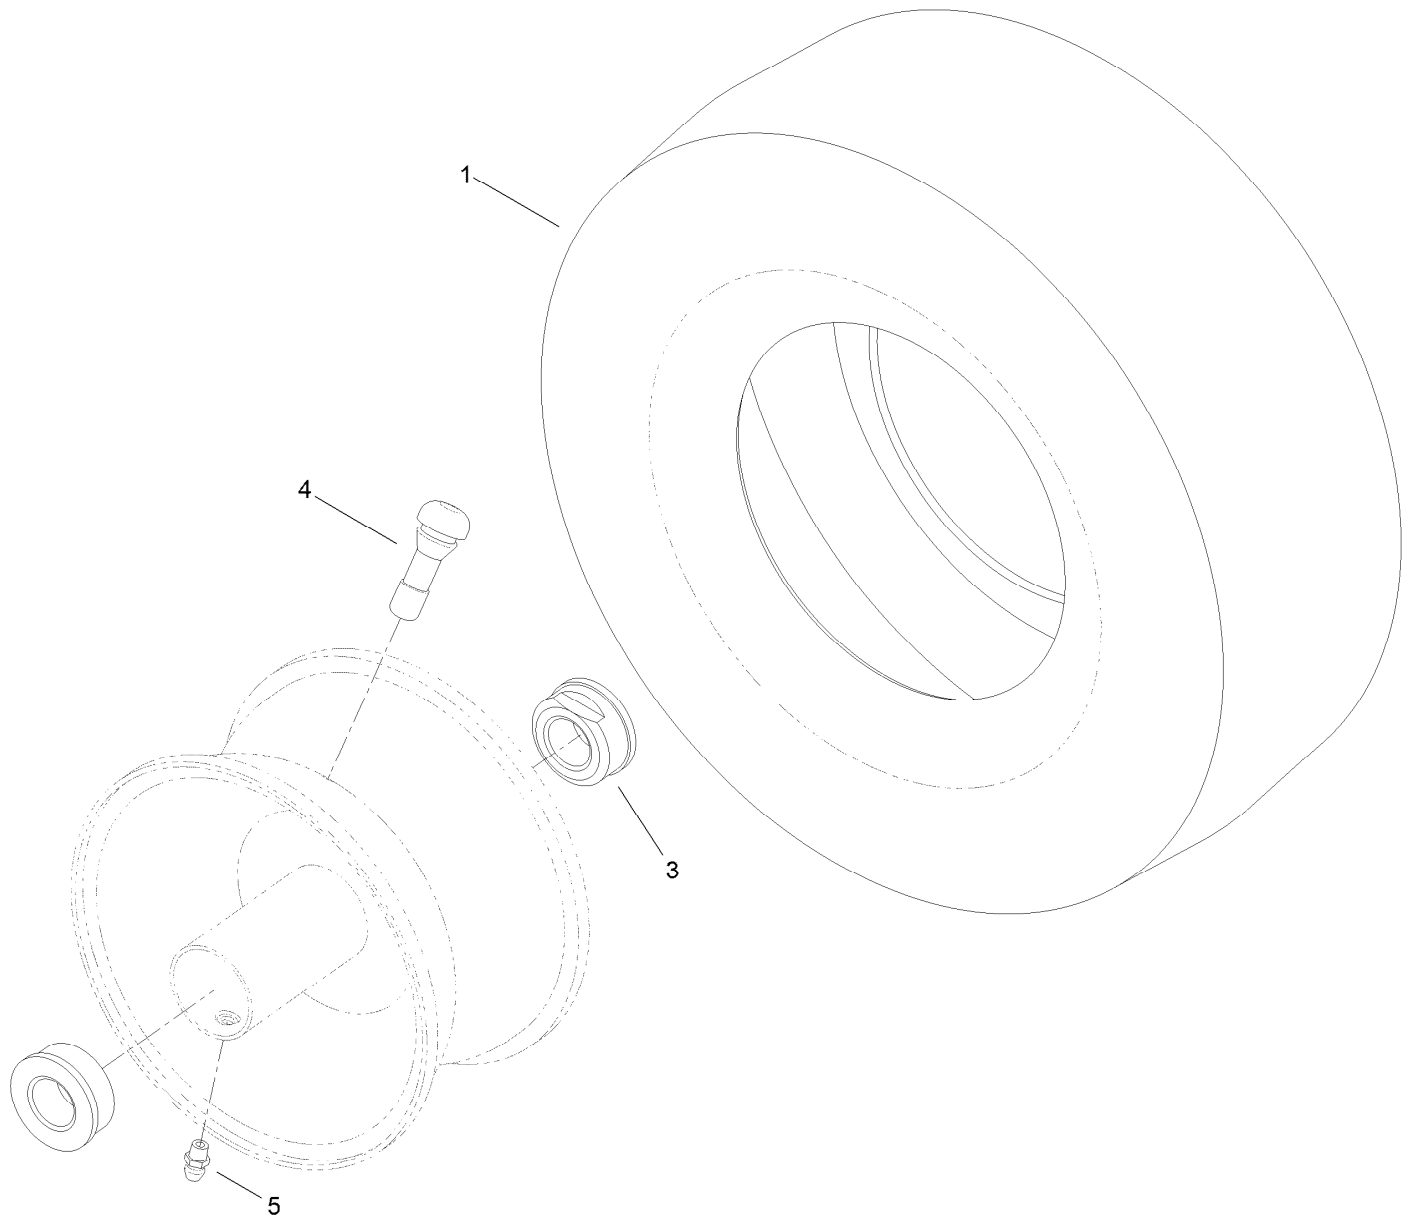


13 Inch Wheel and Tire Assembly No. 119-3473 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-3471	1	Tire-13 Inch
3	114-1640	2	Bushing-Flange
4	232-27	1	Stem-Valve

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	302-5	1	Fitting-Grease
99	232-46	1	Tube ●

● Not illustrated


Deck Lift Assembly

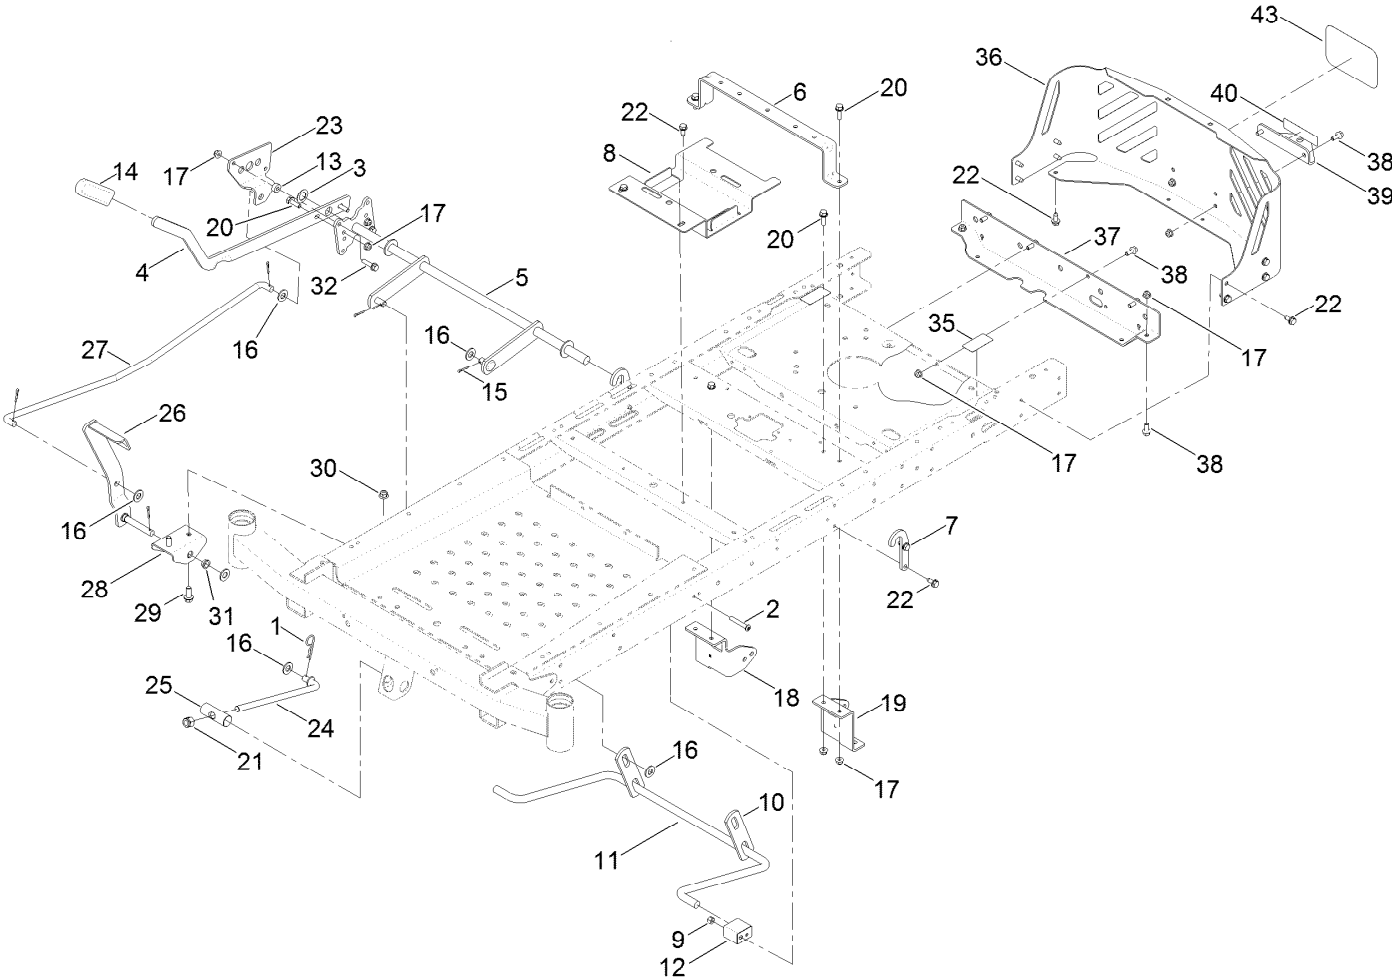

Deck Lift Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	1-806005	1	Pin-Cotter	21	3296-19	1	Nut-Hex
2	120-5499	2	Screw-HSBH	22	32144-70	16	Screw-HWHTF
3	3-6498	2	Washer-Thrust	23	131-3933	1	Plate-Footlift
4	119-3427-03	1	Lever-Lift	24	131-3945	1	Rod-Mount, Deck
5	119-3424-03	1	Lift-Deck, Wide	25	119-8810	1	Pin-Pivot
6	117-7337-03	1	Brace-Seat, Rear (Wide)	26	120-2276-03	1	Pedal
7	119-8875	2	Bracket-Lift	27	120-2242	1	Rod-Footlift
8	131-0914-03	1	Bracket-Battery	28	120-2294-03	1	Bracket-Footlift
9	3296-29	2	Nut-Lock, NI	29	3234-42	2	Screw-HHF
10	108-7840	2	Link-Lift	30	104-8301	2	Nut-Flange, NI
11	119-3347	1	Arm-Lift, Rear (Wide)	31	256-156	2	Bushing-Flange
12	108-7845	2	Block-Pivot	32	3234-36	2	Screw-HHF
13	121-1759	2	Spacer	35	121-2989	2	Decal-Bypass
14	1-633268	1	Grip-Lever	36	130-0701-03	1	Guard-Engine, Wide
15	3272-11	5	Pin-Cotter	37	130-6946-01	1	Crossmember-Rear, Wide
16	3256-26	6	Washer-Flat	38	3234-47	8	Screw-HHF
17	104-8300	14	Nut-Flange, NI	39	117-1232-03	1	Bracket-Hitch
18	131-0901-01	1	Mount-Hydro, Front Right	40	131-4036	1	Decal
19	131-0902-01	1	Mount-Hydro, Front Left	43	99-4693	1	Decal
20	3234-29	4	Screw-HHF				


Motion Control Assembly

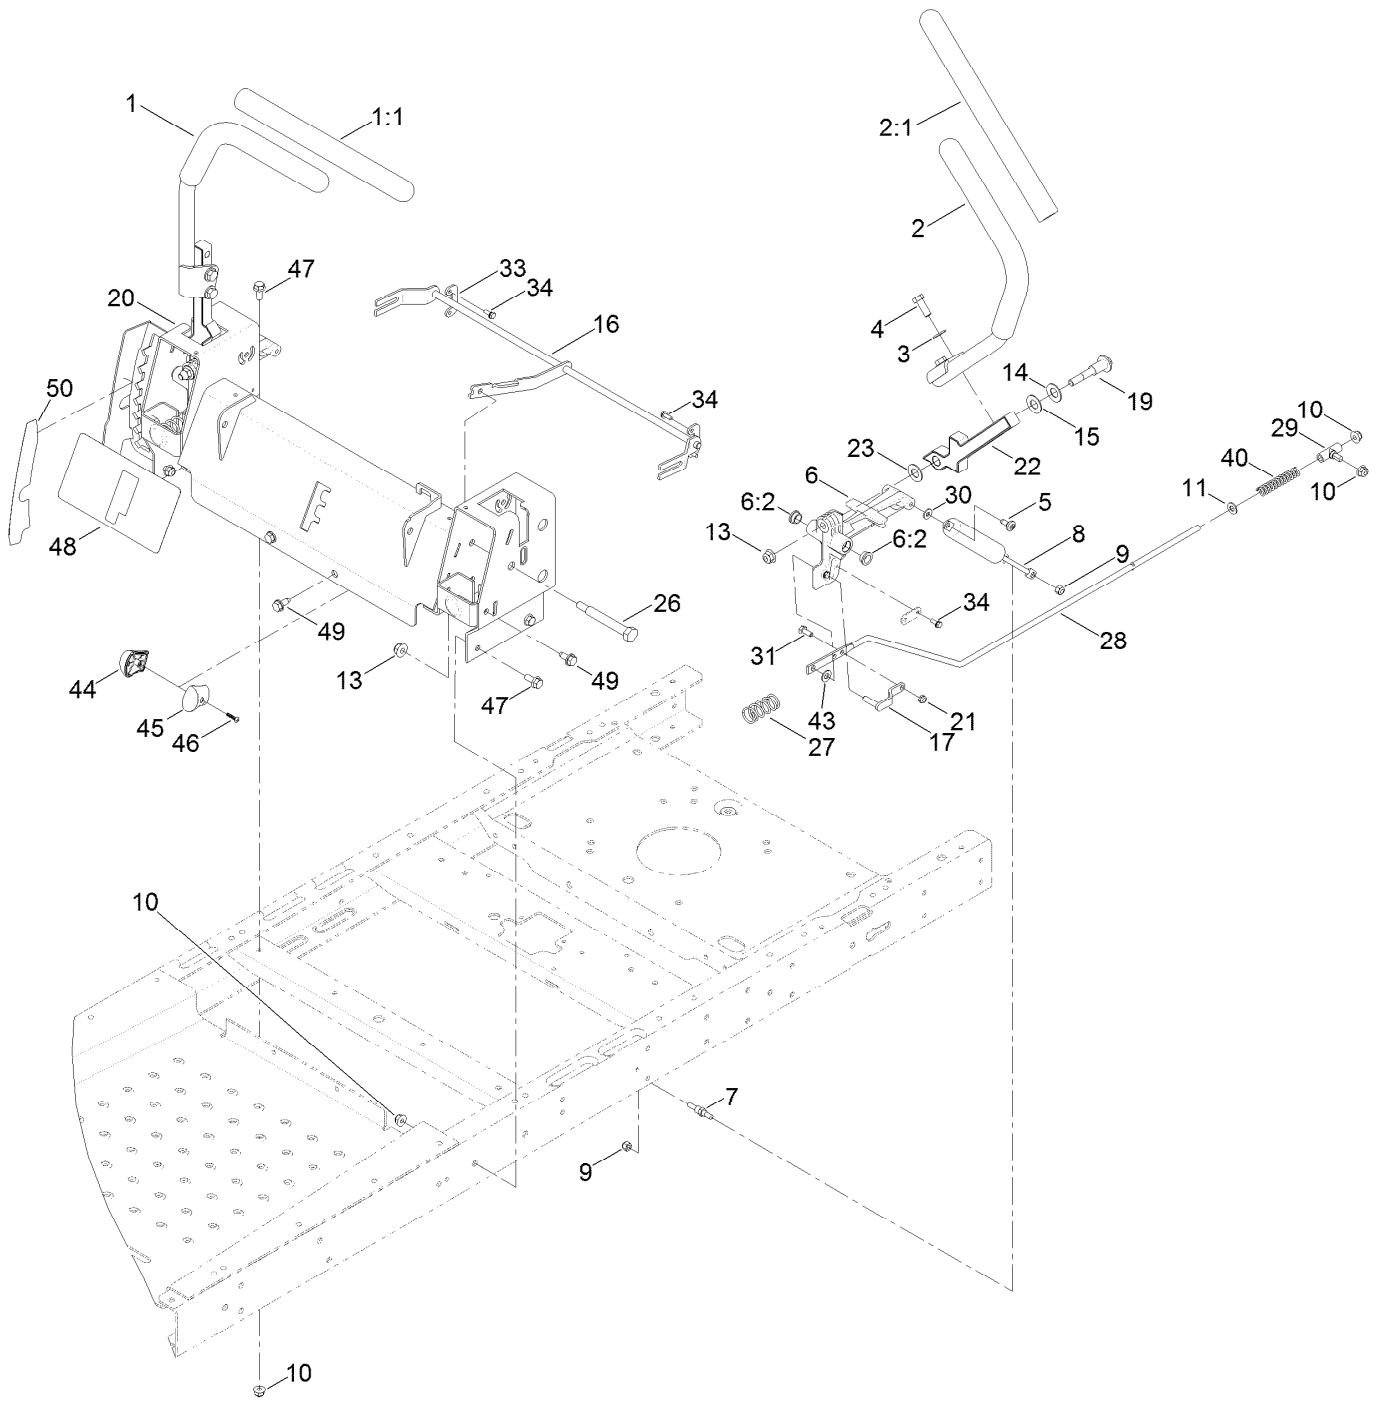

Motion Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-0731	1	Handle-Control, RH	21	3296-56	2	Nut-Lock, NI
1:1	121-0726	1	Grip	22	115-5098-05	2	Lever-Control
2	121-0730	1	Handle-Control, LH	23	120-2273	2	Washer-Nylon
2:1	121-0726	1	Grip	26	115-5099	2	Bolt-Pivot
3	3256-24	4	Washer-Flat	27	119-8876	2	Spring-Return
4	323-6	4	Screw-HH	28	117-5388	2	Rod-Hydro
5	120-7950	2	Screw-Shoulder	29	119-8842	2	Mount-Rod, Hydro
6	119-3470	2	Actuator Arm ASM	30	119-8952	2	Washer
6:2	256-156	2	Bushing-Flange	31	321-3	2	Screw-HH
7	110-6810	2	Stud-Damper	33	117-5385	2	Retainer
8	131-0964	2	Damper	34	32144-1	4	Screw-Taptite
9	3296-42	4	Nut-Lock, NI	40	1-603807	2	Spring-Return, Neutral
10	104-8300	10	Nut-Flange, NI	43	93-6079	2	Spacer-Nylon
11	3256-23	2	Washer-Flat	44	119-8935	1	Knob-RH
13	104-8301	4	Nut-Flange, NI	45	119-8936	1	Knob-LH
14	119-8925	2	Washer-Belleville	46	94-4496	1	Screw-PPH
15	117-1240	2	Washer	47	3234-47	6	Screw-HHF
16	131-1062	1	Speed Control ASM	48	131-3947	1	Decal-Speed Control
17	119-3303	2	Pin-Rod, Hydro	49	32144-70	4	Screw-HWHTF
19	117-1198	2	Bolt-Pivot	50	119-8870	1	Decal-HOC
20	131-1060-03	1	Control Box ASM				


Brake Box Assembly

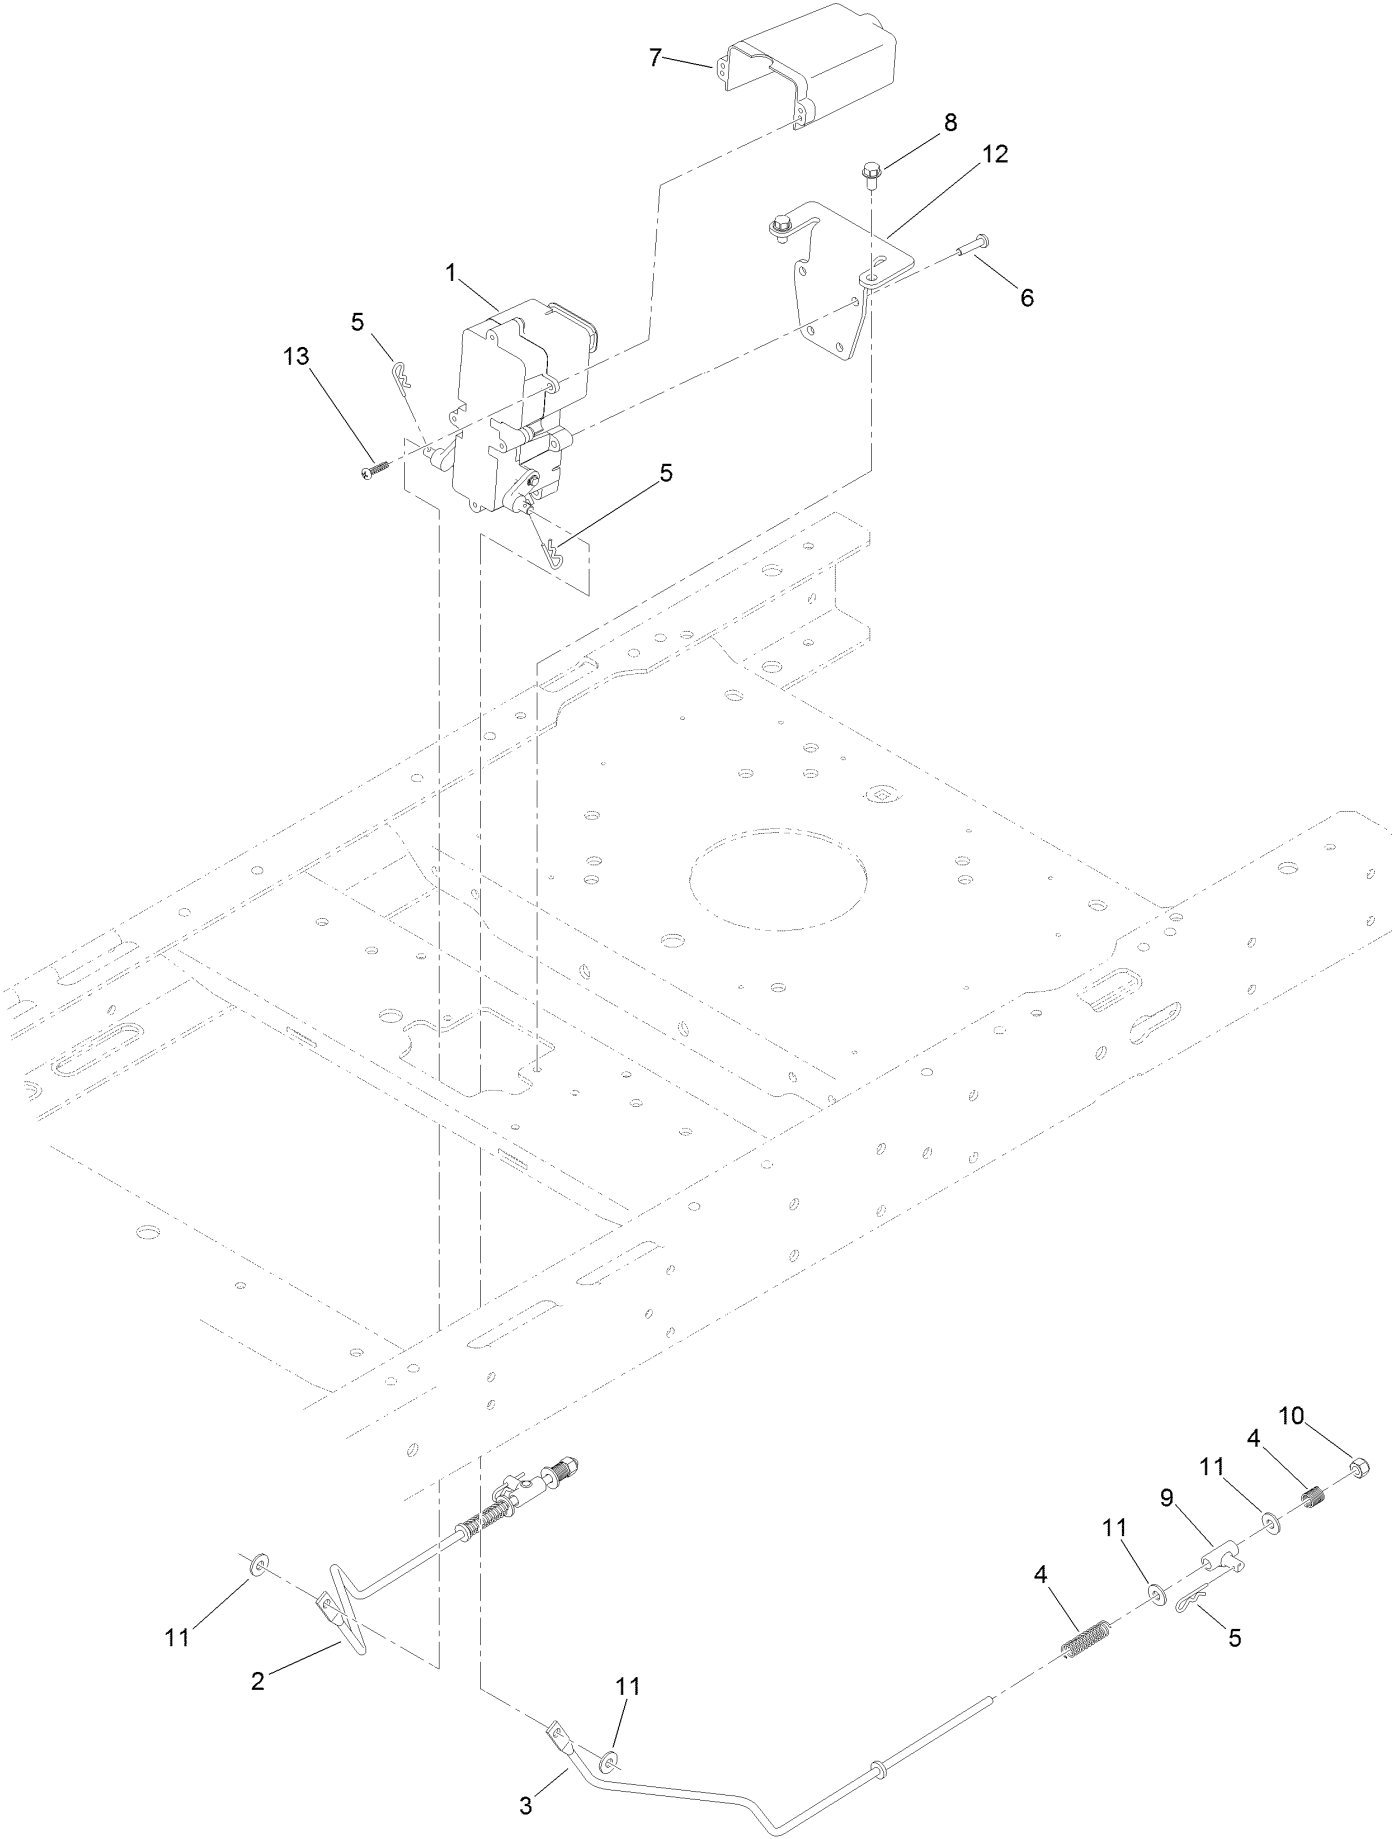

Brake Box Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-6892	1	Brake Box ASM	8	32144-4	2	Screw-HWH
2	119-8811	1	Rod-Brake, RH	9	119-8857	2	Mount-Pivot
3	119-8812	1	Rod-Brake, LH	10	3296-42	2	Nut-Lock, NI
4	121-5654	4	Spring-Compression	11	119-8952	6	Washer
5	3290-307	4	Pin-Cotter	12	130-0790-03	1	Bracket-Mount, Brake
6	32144-36	4	Screw-PPH	13	94-4496	2	Screw-PPH
7	130-6974	1	Cover-Connector				


Seat Assembly

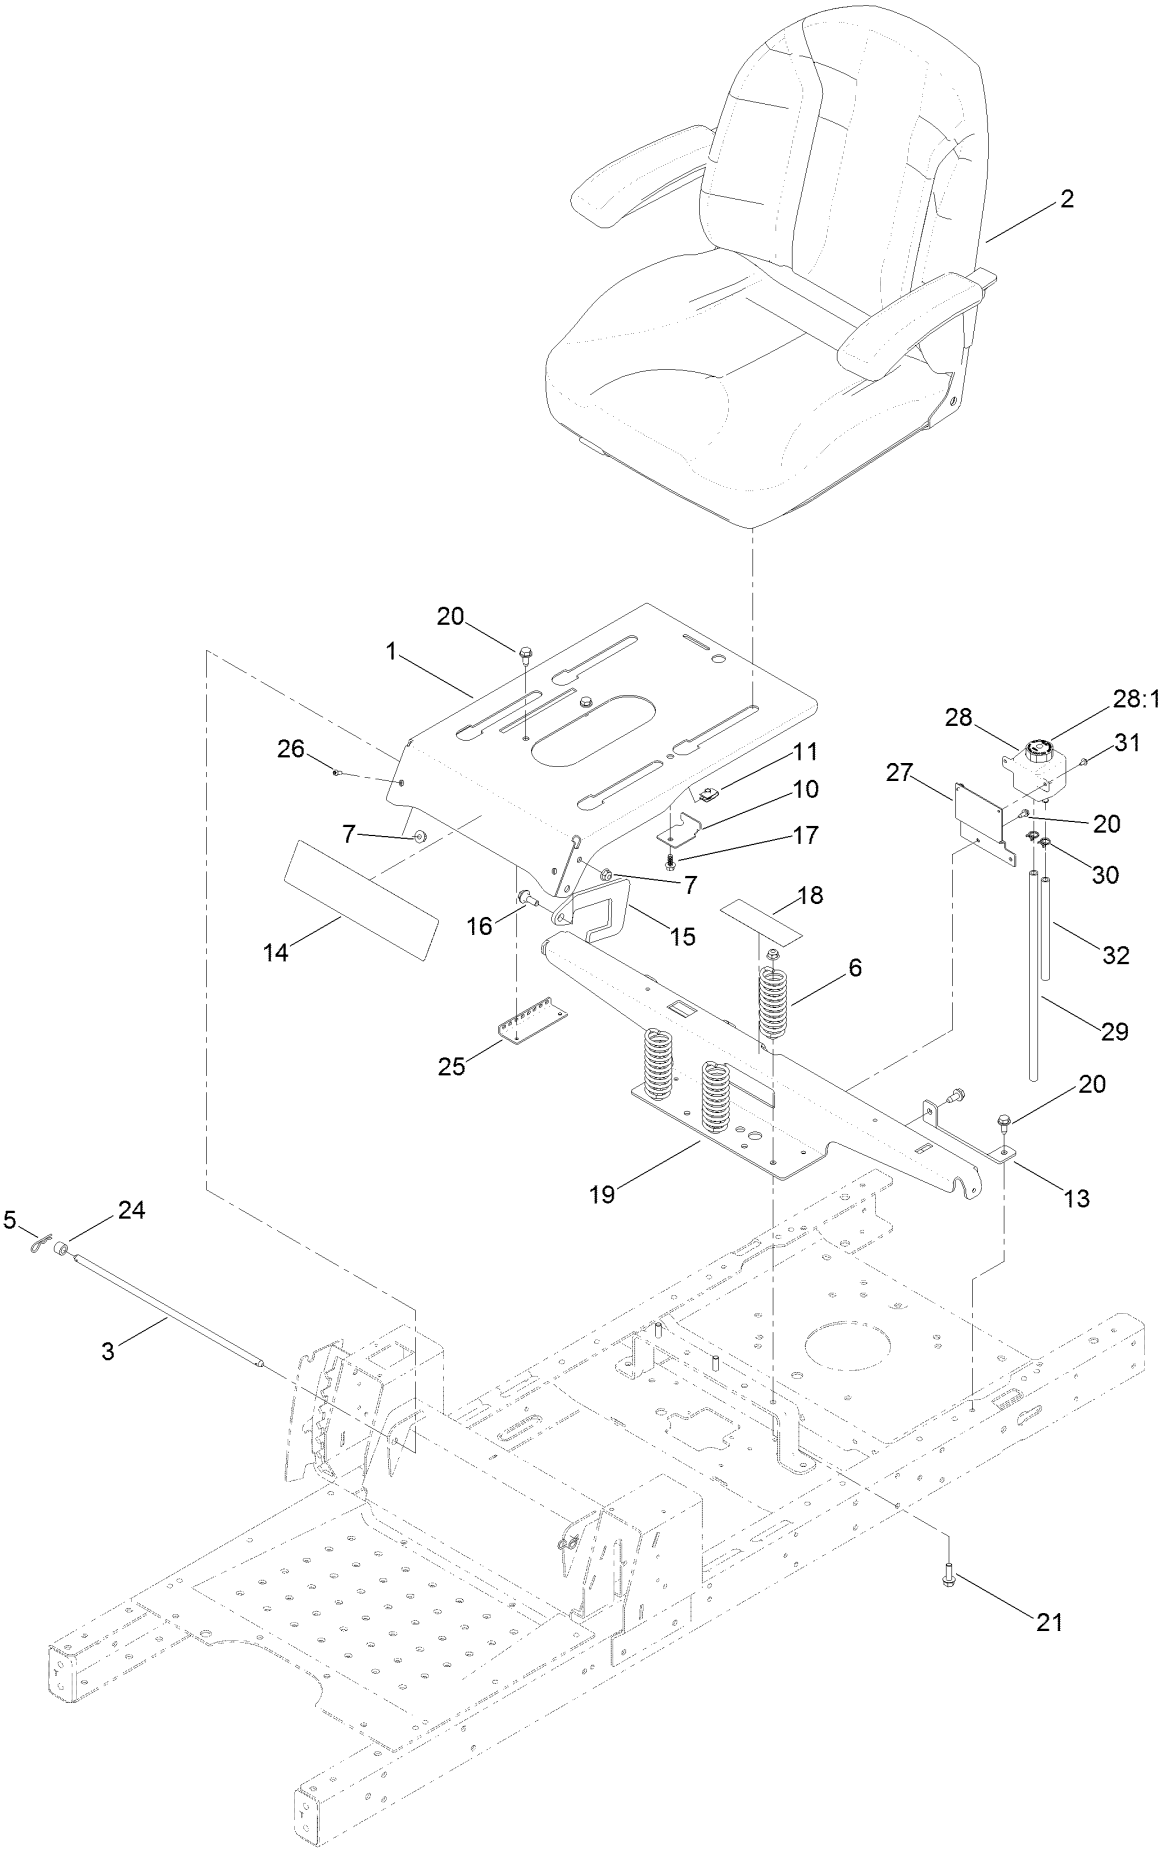

Seat Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-7035-03	1	Pan-Seat	19	131-1039-03	1	Support-Pod, Wide
2	131-4147	1	Seat ASM	20	32144-70	7	Screw-HWHTF
3	115-4966	1	Rod-Stop	21	3234-29	3	Screw-HHF
5	3290-250	2	Pin-Cotter	24	1-413088	2	Bushing-Lever, Lift
6	92-7054	3	Spring-Compression	25	131-4008-03	1	Bracket-Latch, Seat
7	104-8300	6	Nut-Flange, NI	26	131-4080	2	Screw-HSBH
10	131-1038	1	Bracket-Stop, Seat	27	120-7970-03	1	Mount-Tank
11	107069	1	Clip	28	109-2250	1	Vent-Tank, HYD
13	119-3431-03	2	Support-Tank, Rear	28:1	109-3320	1	Cap-Reservoir, HYD
14	131-3655	1	Decal-Timecutter	29	121-2951	1	Hose-Overflow
15	131-3994	1	Plate-Stop	30	117-1193	4	Clamp-Hose
16	116-2670	1	Screw-Shoulder	31	46-8560	2	Screw-HHFTF
17	99-6810	1	Screw-HHF	32	121-2952	1	Hose-Overflow
18	106-8717	1	Decal-Service				

Seat Assembly No. 131-4147

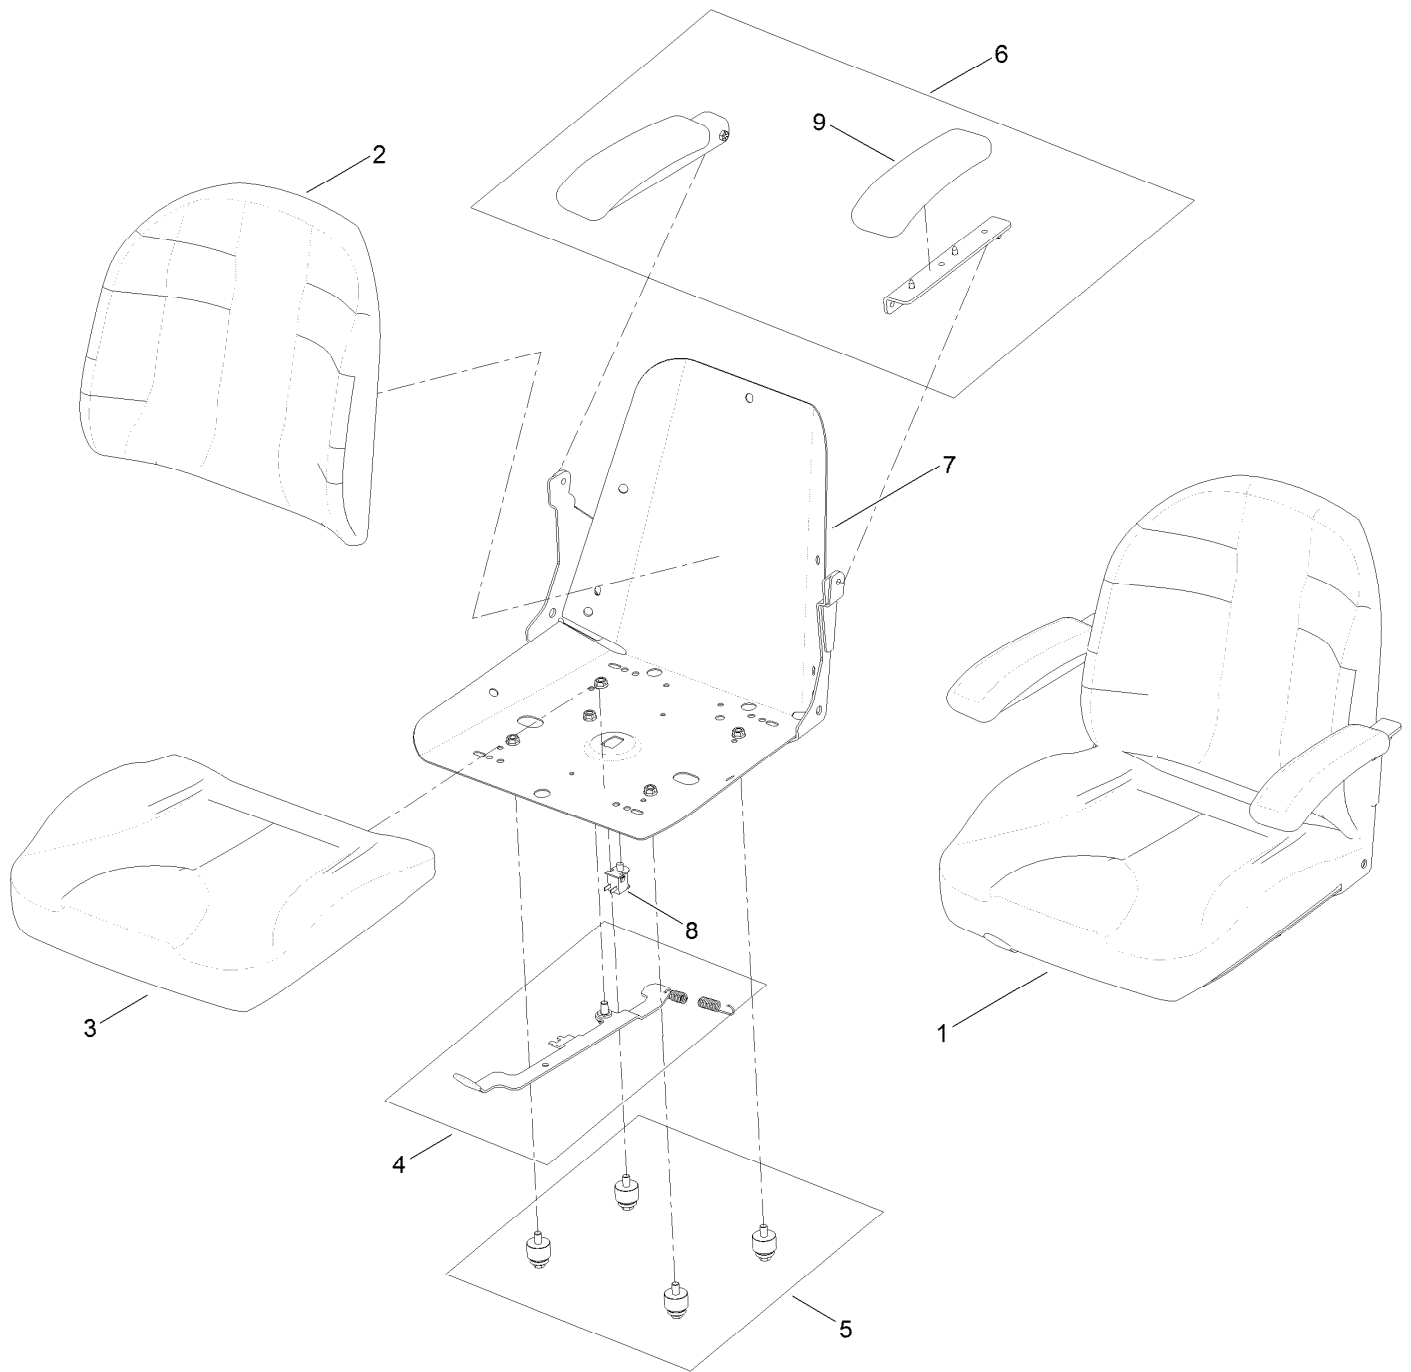


Seat Assembly No. 131-4147 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-6920	1	Seat ASM
2	131-4149	1	Cushion-Seat, Back
3	131-4151	1	Cushion-Seat, Bottom
4	131-4153	1	Track ASM
5	131-4154	1	Bushing ASM

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
6	131-4155	1	Armrest Kit
7	131-4156	1	Shell
8	82-2190	1	Switch-Bail
9	110-4163	2	Cushion-Rest, Arm


Belt and Idler Assembly

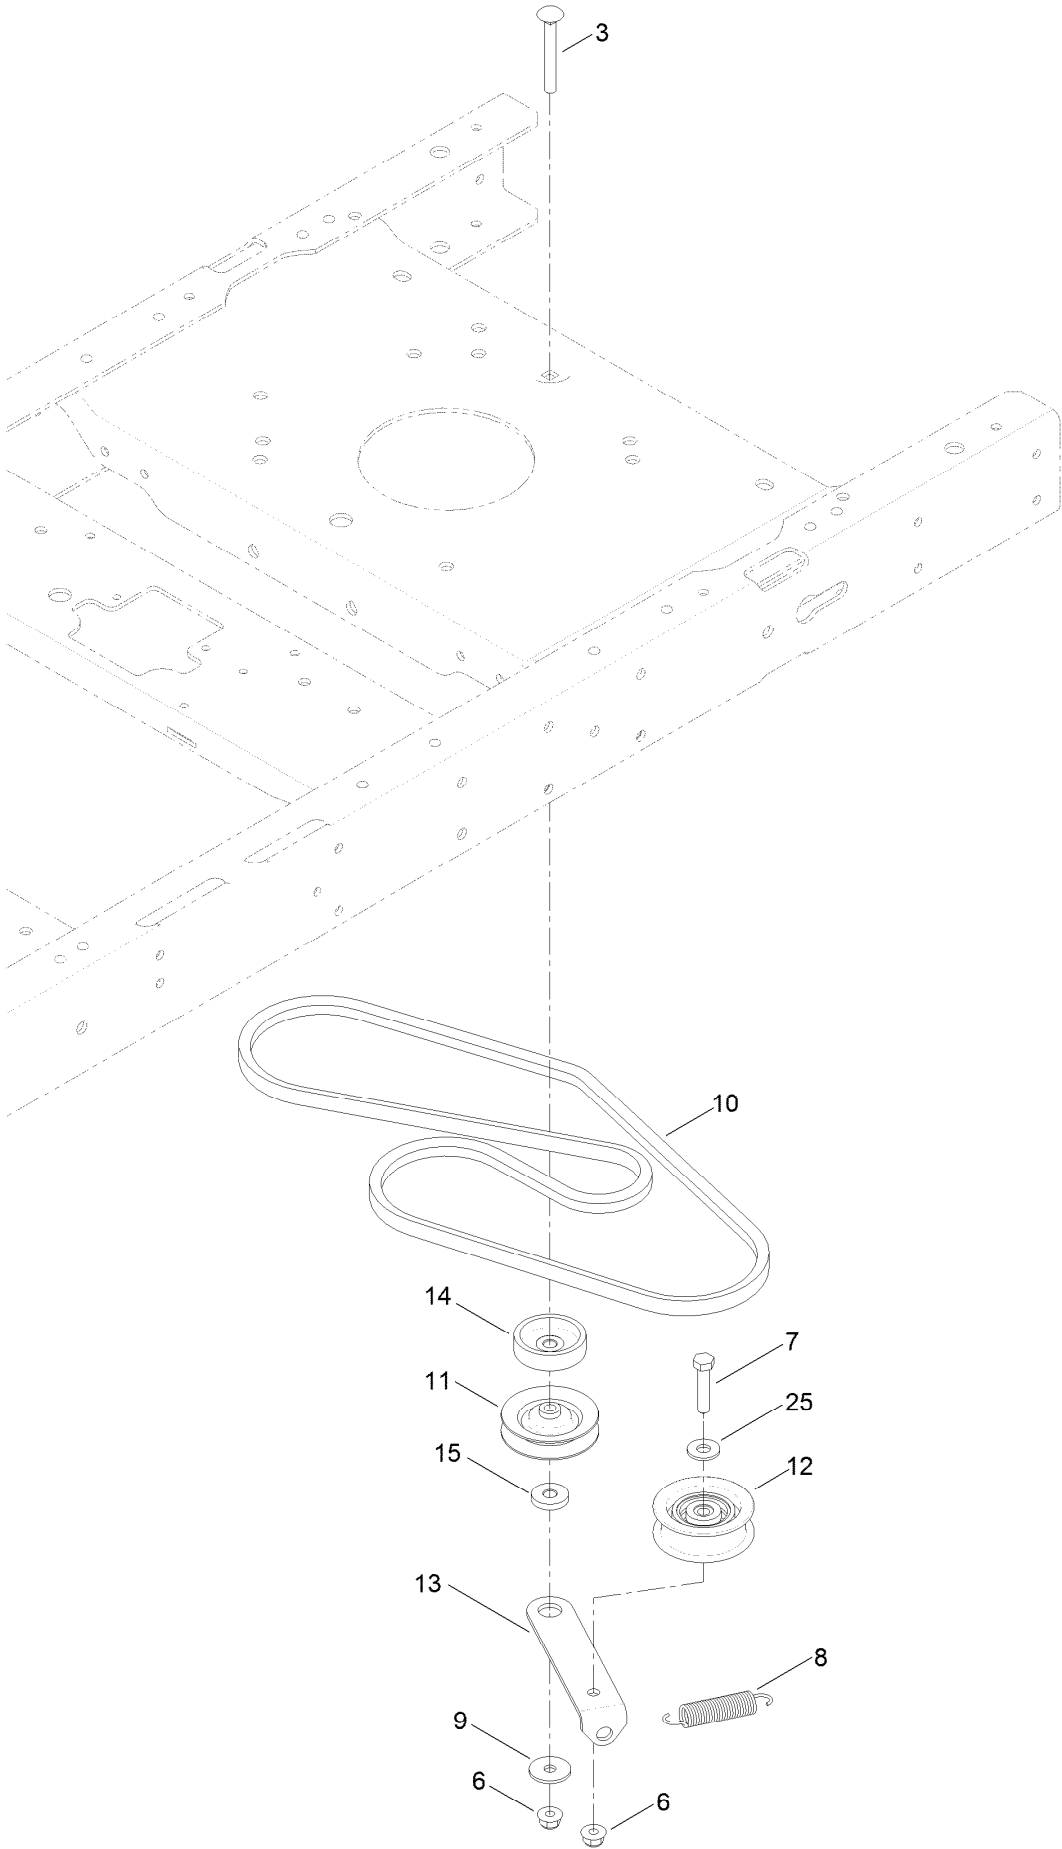

Belt and Idler Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	3230-8	1	Screw-CARR	11	119-8822	1	Pulley-Idler
6	104-8300	2	Nut-Flange, NI	12	106-2176	1	Pulley-Idler
7	322-7	1	Screw-HH	13	119-3326	1	Arm-Idler
8	104-6415	1	Spring-Return, Pedal	14	119-3353	1	Spacer
9	5-4460	1	Washer-Pivot	15	119-3327	1	Spacer-Arm, Idler
10	130-6976	1	V-Belt	25	3256-3	1	Washer-Flat

Hydro Transaxle Drive and Rear Wheel Assembly

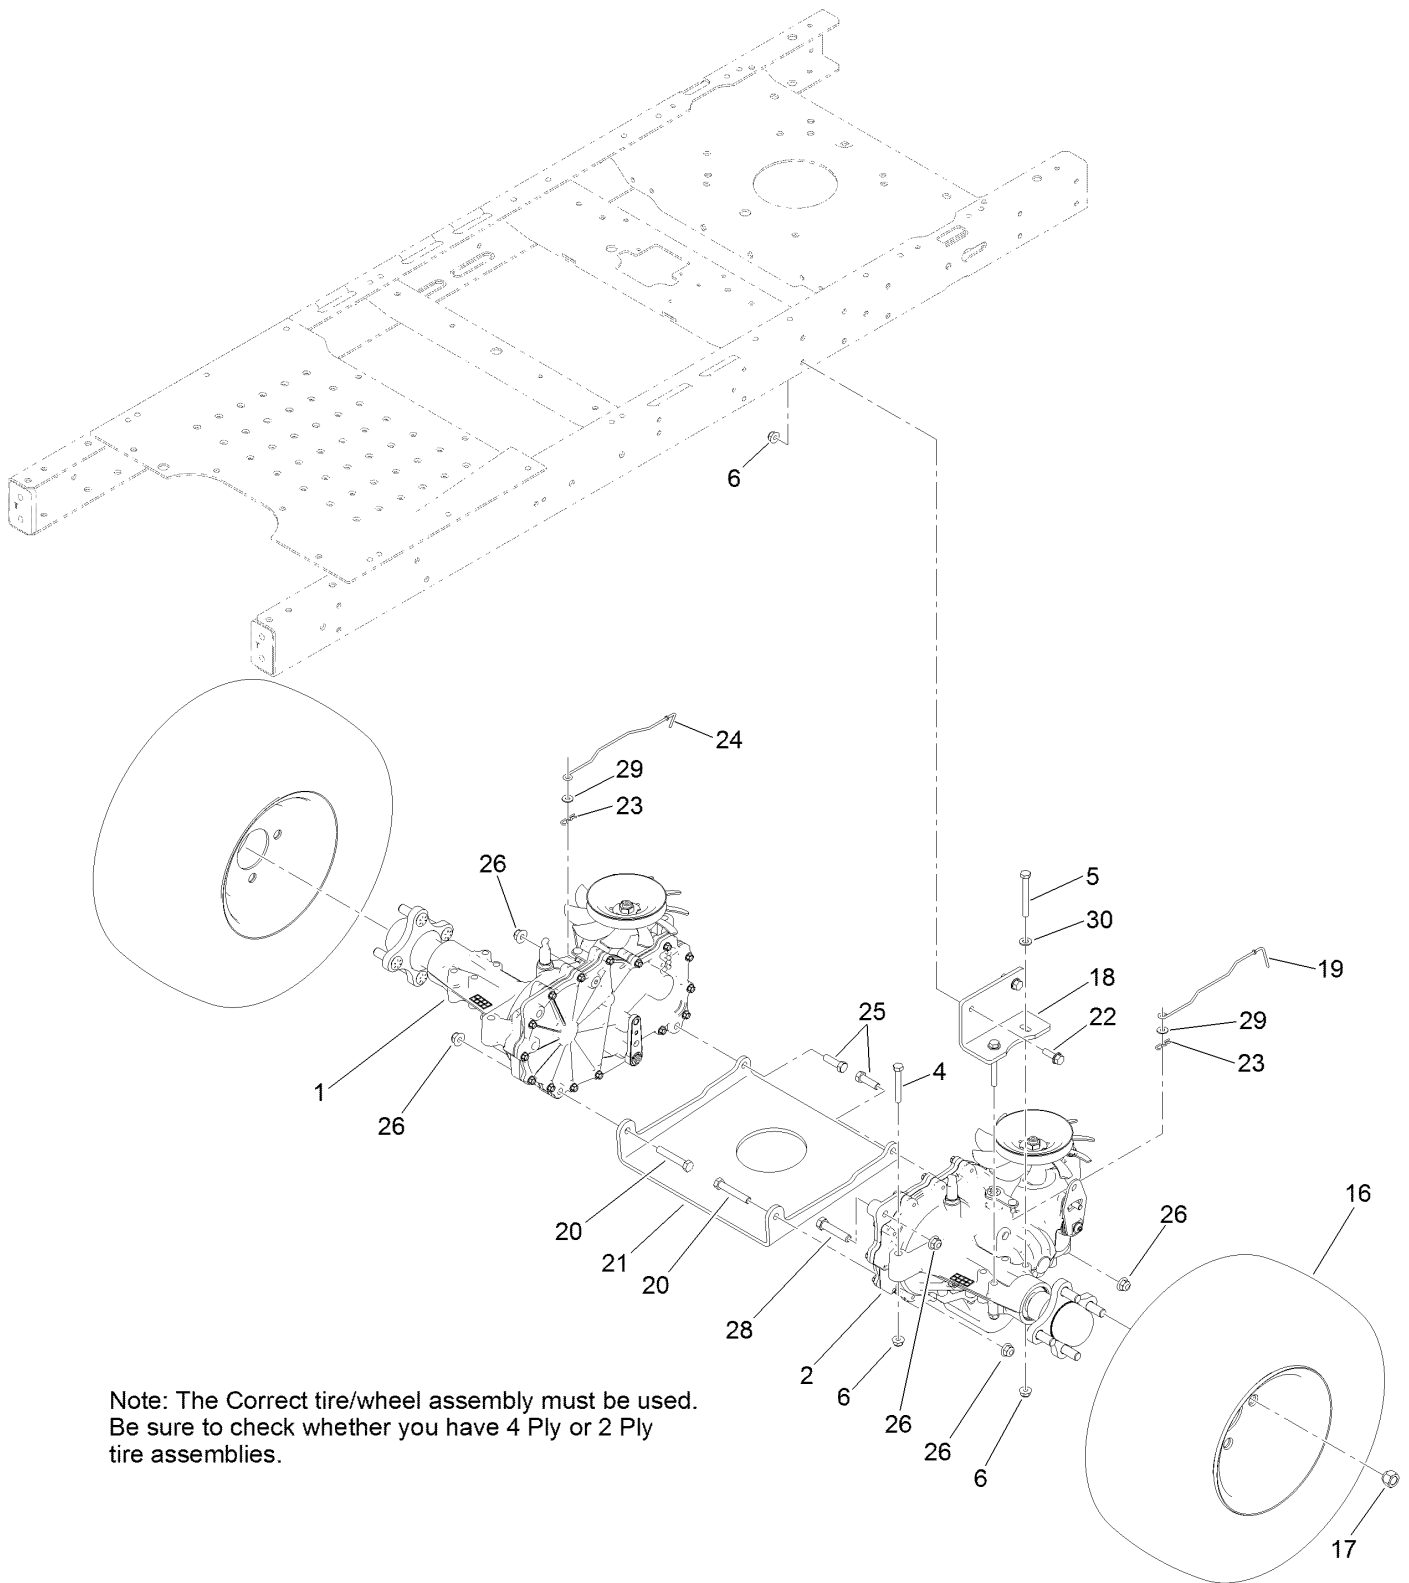


Note: The Correct tire/wheel assembly must be used.
Be sure to check whether you have 4 Ply or 2 Ply
tire assemblies.

Hydro Transaxle Drive and Rear Wheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-6961	1	RH Hydro Transmission ASM	19	130-7048	1	Rod-Bypass, LH
2	130-6960	1	LH Hydro Transmission ASM	20	323-11	2	Screw-HH
4	322-11	4	Screw-HH	21	130-0718-01	1	Plate-Cross, Hydro
5	322-13	4	Screw-HH	22	3234-29	4	Screw-HHF
6	104-8300	12	Nut-Flange, NI	23	3290-307	2	Pin-Cotter
16	109-5268	2	4 Ply Wheel And Tire ASM	24	130-7047	1	Rod-Bypass, RH
16	131-3673	2	2 Ply Tire And Wheel ASM	25	323-7	2	Screw-HH
17	242-50	8	Nut-Lug	26	104-8301	6	Nut-Flange, NI
18	121-0745-01	2	Mount-Hydro	28	323-9	2	Screw-HH
				29	119-8952	2	Washer
				30	3256-23	6	Washer-Flat

RH Transaxle Assembly No. 130-6961

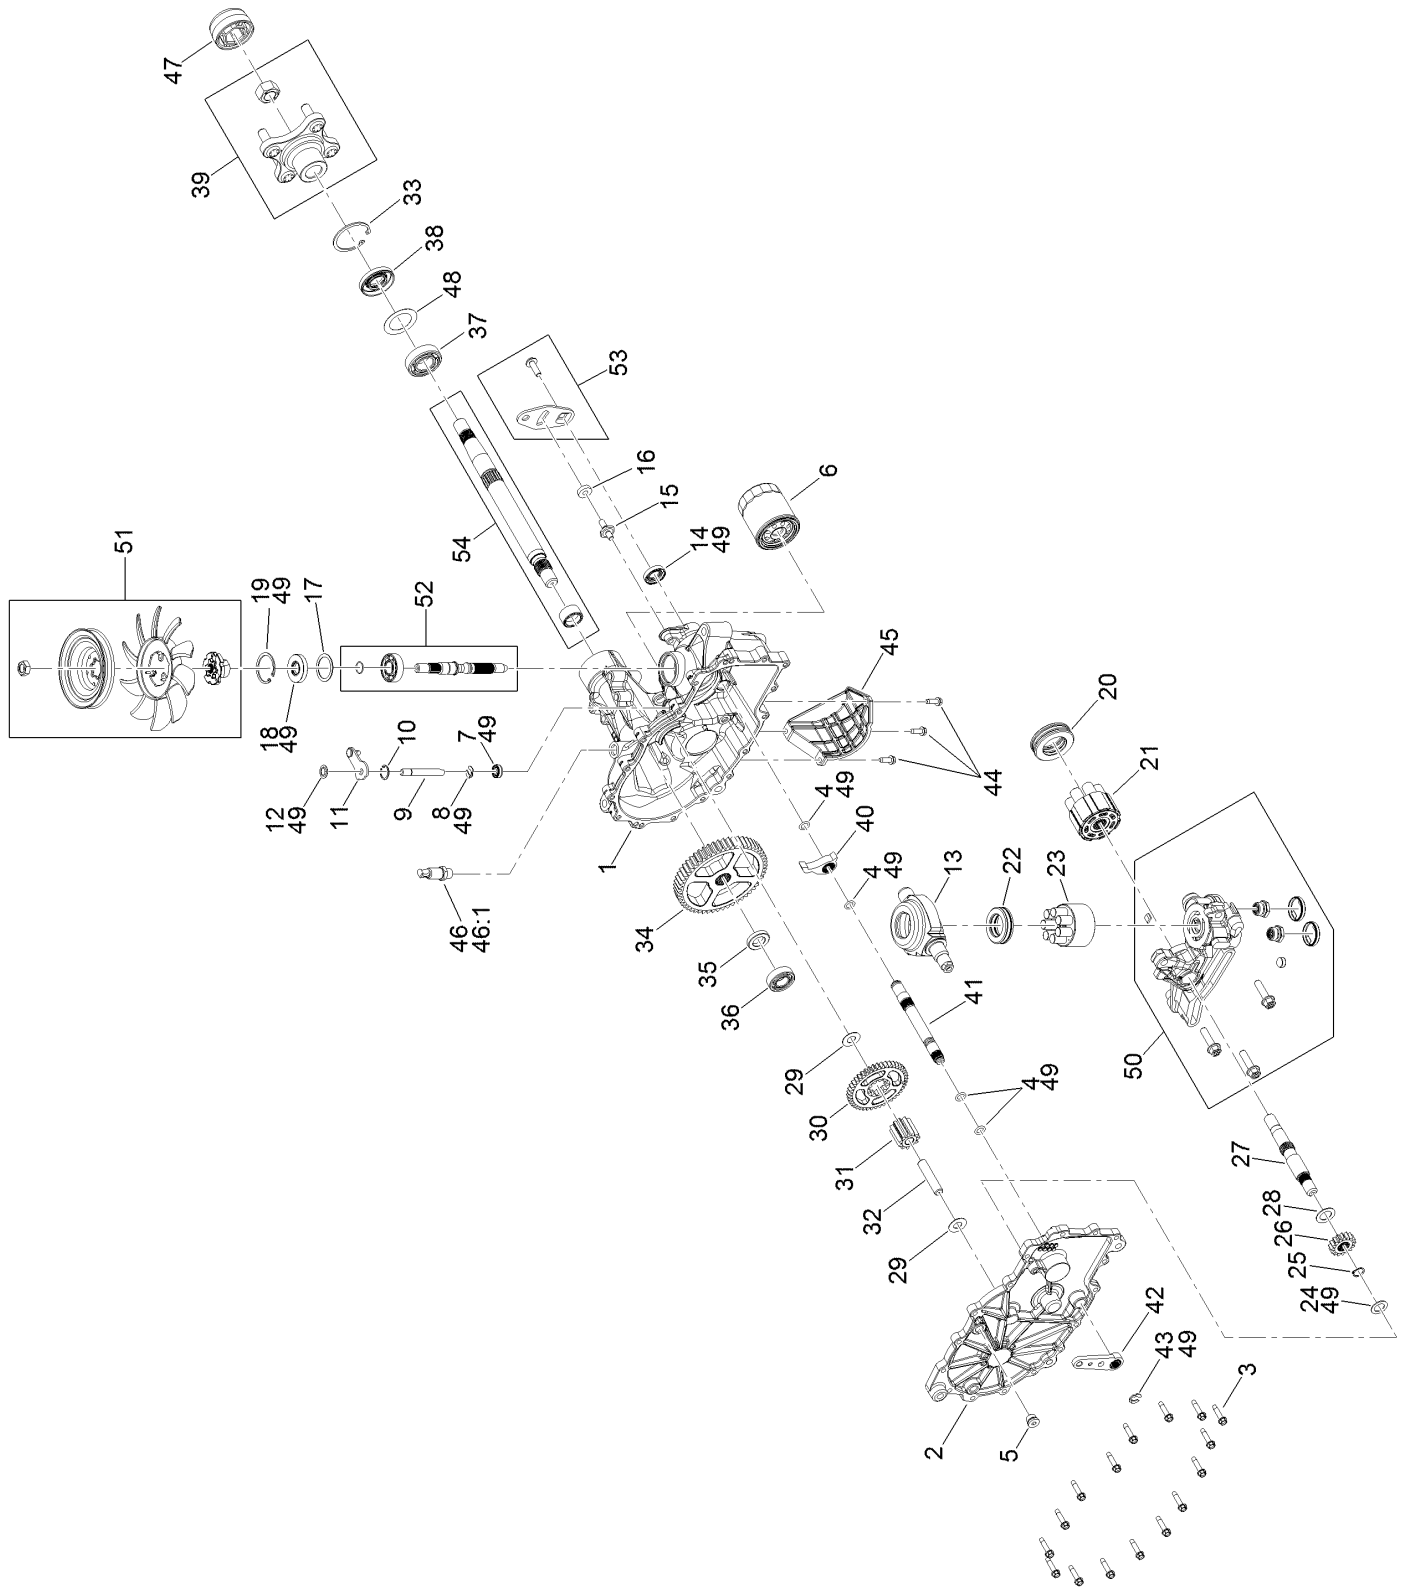


RH Transaxle Assembly No. 130-6961 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-5748	1	Main Housing Kit
2	132-0938	1	Kit-Side Cover (LH)
3	117-5359	16	Screw-HHF
4	114-1678	4	O-Ring
5	104-2189	1	Plug-Thread, Straight
6	109-3321	1	Element-Oil Filter, HYD
7	106-8676	1	Seal-Lip
8	106-8677	1	Ring-Retaining, EXT
9	114-1685	1	Rod-Bypass
10	106-8679	1	Ring-Retaining, Int
11	107-2490	1	Arm-Bypass
12	106-8681	1	Ring-Retaining, EXT
13	104-5304	1	Swashplate-Trunnion
14	104-5313	1	Seal-Lip
15	104-2116	1	Stud
16	112-9853	1	Puck-Friction
17	104-5308	1	Spacer
18	104-5310	1	Seal-Lip
19	104-5309	1	Ring-Retaining
20	112-4154	1	Bearing-Thrust
21	114-1689	1	Motor Cylinder Block Kit
22	94-6922	1	Bearing-Thrust
23	110-8561	1	Pump Block ASM
24	104-5339	1	Washer-Flat
25	104-5340	1	Ring-Retaining
26	121-5749	1	Gear-16T, Steel
27	114-1691	1	Shaft-Motor
28	104-5360	1	Washer

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
29	94-1933	2	Washer
30	125-0000	1	Gear-43T
31	114-1693	1	Gear-11T
32	104-5329	1	Pin-Jackshaft
33	104-2169	1	Ring-Retaining
34	114-1694	1	Gear-54T
35	120-7975	1	Spacer
36	126-0789	1	Bearing-Ball
37	120-7976	1	Bearing-Ball
38	104-2144	1	Seal
39	109-5939	1	Hub Kit
40	114-1697	1	Pawl-Brake
41	114-1698	1	Shaft-Brake, Inboard
42	125-0021	1	Handle-Brake
43	131-0906	1	Ring-Retaining, EXT
44	104-2120	3	Screw
45	120-7979	1	Guard-Filter, LH
46	109-3278	1	Adapter-Straight
46:1	237-42	1	O-Ring
47	115-5057	1	Cover-Nut, Axle
48	121-5745	1	Spacer
49	109-3537	1	Seal Kit
50	125-0036	1	Center Section Kit
51	121-5746	1	Fan Pulley Kit
52	114-8468	1	Input Shaft Kit
53	117-5362	1	Arm Control Kit
54	114-8470	1	Axle Shaft Kit


LH Transaxle Assembly No. 130-6960

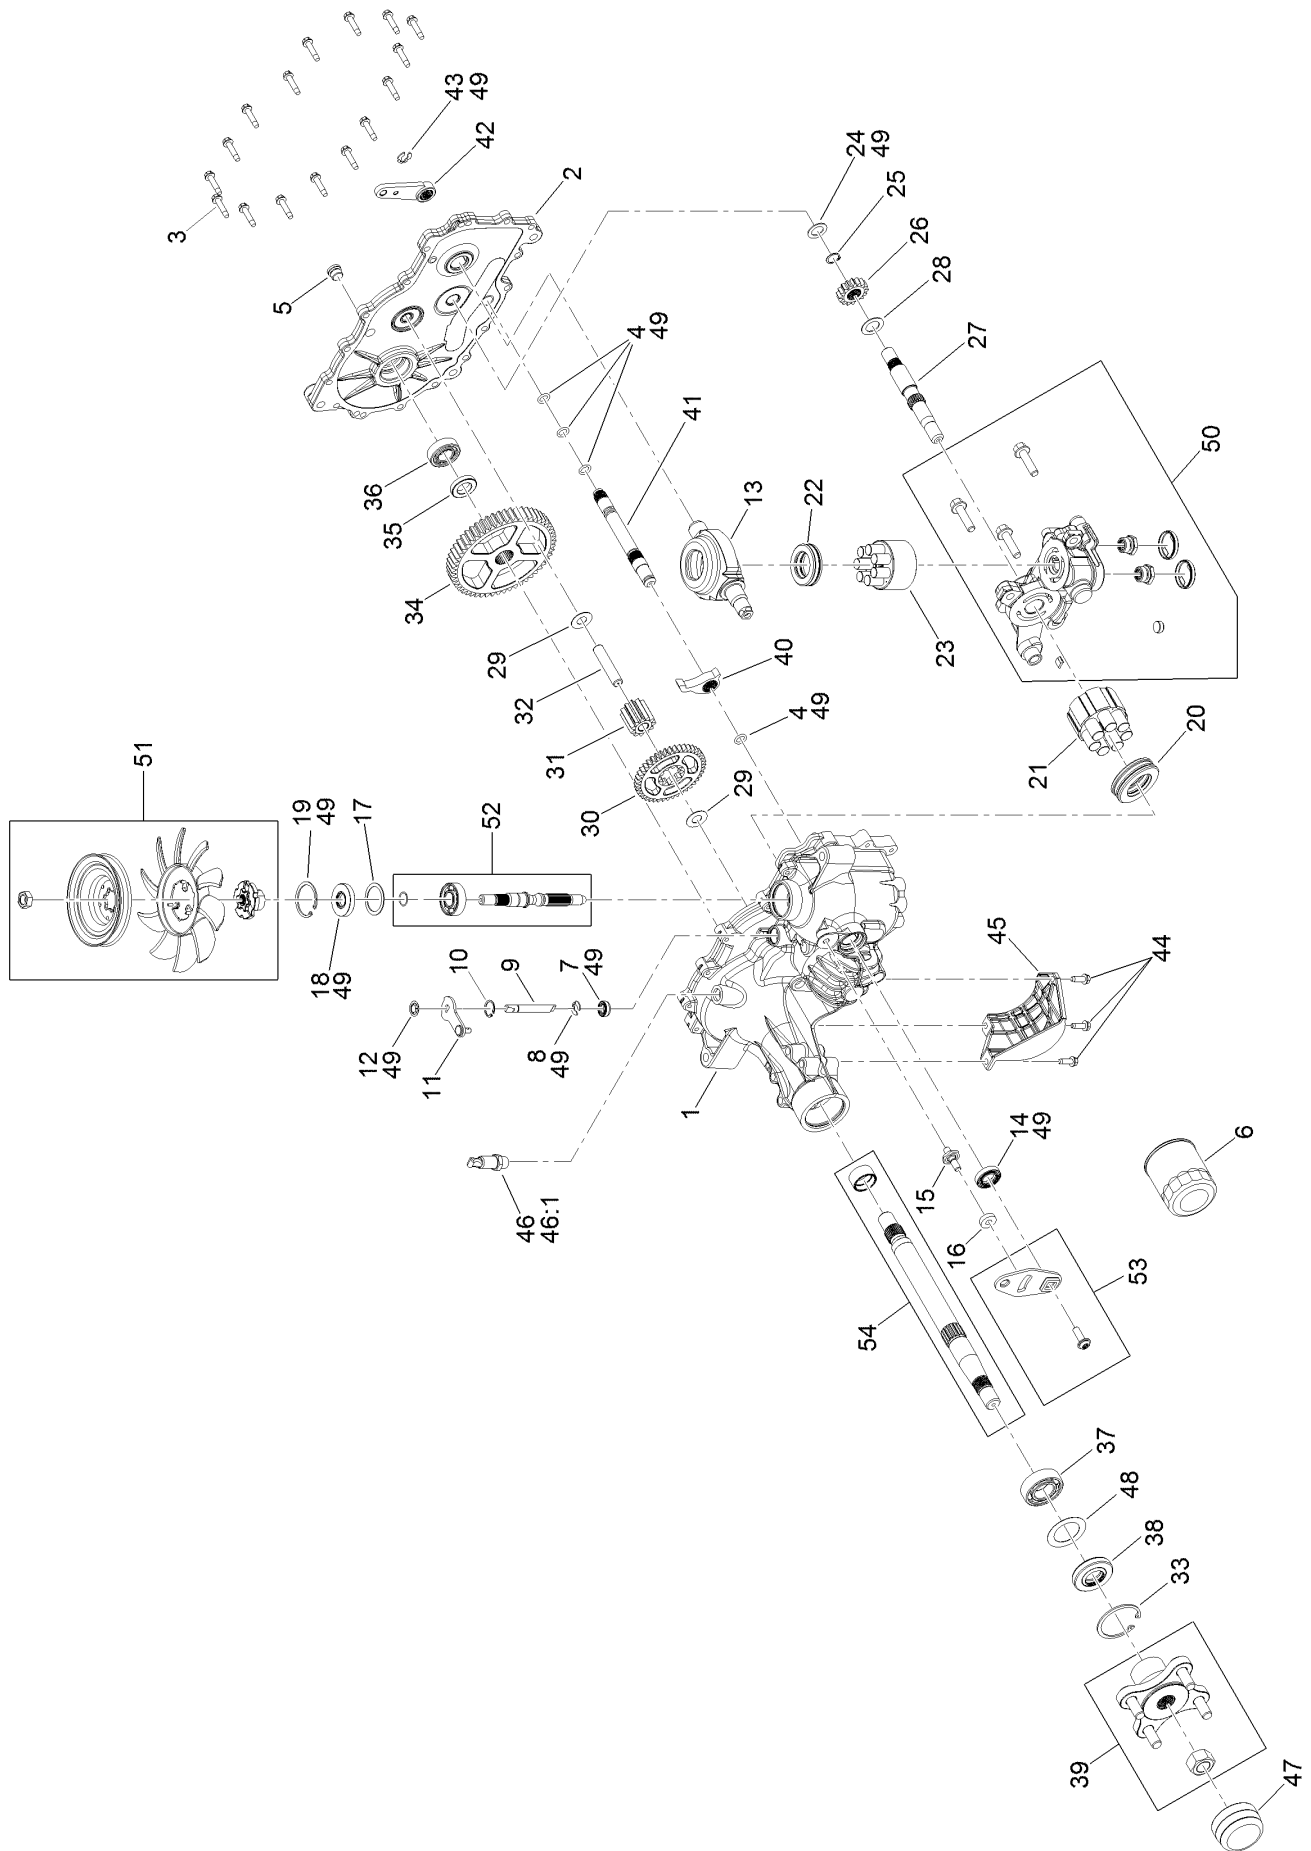

LH Transaxle Assembly No. 130-6960 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-0037	1	Main Housing Kit	29	94-1933	2	Washer
2	132-0939	1	Side Cover Kit (RH)	30	125-0000	1	Gear-43T
3	117-5359	16	Screw-HHF	31	114-1693	1	Gear-11T
4	114-1678	4	O-Ring	32	104-5329	1	Pin-Jackshaft
5	104-2189	1	Plug-Thread, Straight	33	104-2169	1	Ring-Retaining
6	109-3321	1	Element-Oil Filter, HYD	34	114-1694	1	Gear-54T
7	106-8676	1	Seal-Lip	35	120-7975	1	Spacer
8	106-8677	1	Ring-Retaining, EXT	36	126-0789	1	Bearing-Ball
9	114-1685	1	Rod-Bypass	37	120-7976	1	Bearing-Ball
10	106-8679	1	Ring-Retaining, Int	38	104-2144	1	Seal
11	112-9852	1	Arm-Bypass	39	109-5939	1	Hub Kit
12	106-8681	1	Ring-Retaining, EXT	40	114-1697	1	Pawl-Brake
13	104-5304	1	Swashplate-Trunnion	41	114-1698	1	Shaft-Brake, Inboard
14	104-5313	1	Seal-Lip	42	125-0021	1	Handle-Brake
15	104-2116	1	Stud	43	131-0906	1	Ring-Retaining, EXT
16	112-9853	1	Puck-Friction	44	104-2120	3	Screw
17	104-5308	1	Spacer	45	120-7981	1	Guard-Filter, RH
18	104-5310	1	Seal-Lip	46	109-3278	1	Adapter-Straight
19	104-5309	1	Ring-Retaining	46:1	237-42	1	O-Ring
20	112-4154	1	Bearing-Thrust	47	115-5057	1	Cover-Nut, Axle
21	114-1689	1	Motor Cylinder Block Kit	48	121-5745	1	Spacer
22	94-6922	1	Bearing-Thrust	49	109-3537	1	Seal Kit
23	110-8561	1	Pump Block ASM	50	132-0940	1	Centersection Kit (RH)
24	104-5339	1	Washer-Flat	51	121-5746	1	Fan Pulley Kit
25	104-5340	1	Ring-Retaining	52	114-8468	1	Input Shaft Kit
26	121-5749	1	Gear-16T, Steel	53	117-5362	1	Arm Control Kit
27	114-1691	1	Shaft-Motor	54	114-8470	1	Axle Shaft Kit
28	104-5360	1	Washer				

4 Ply Wheel and Tire Assembly No. 109-5268

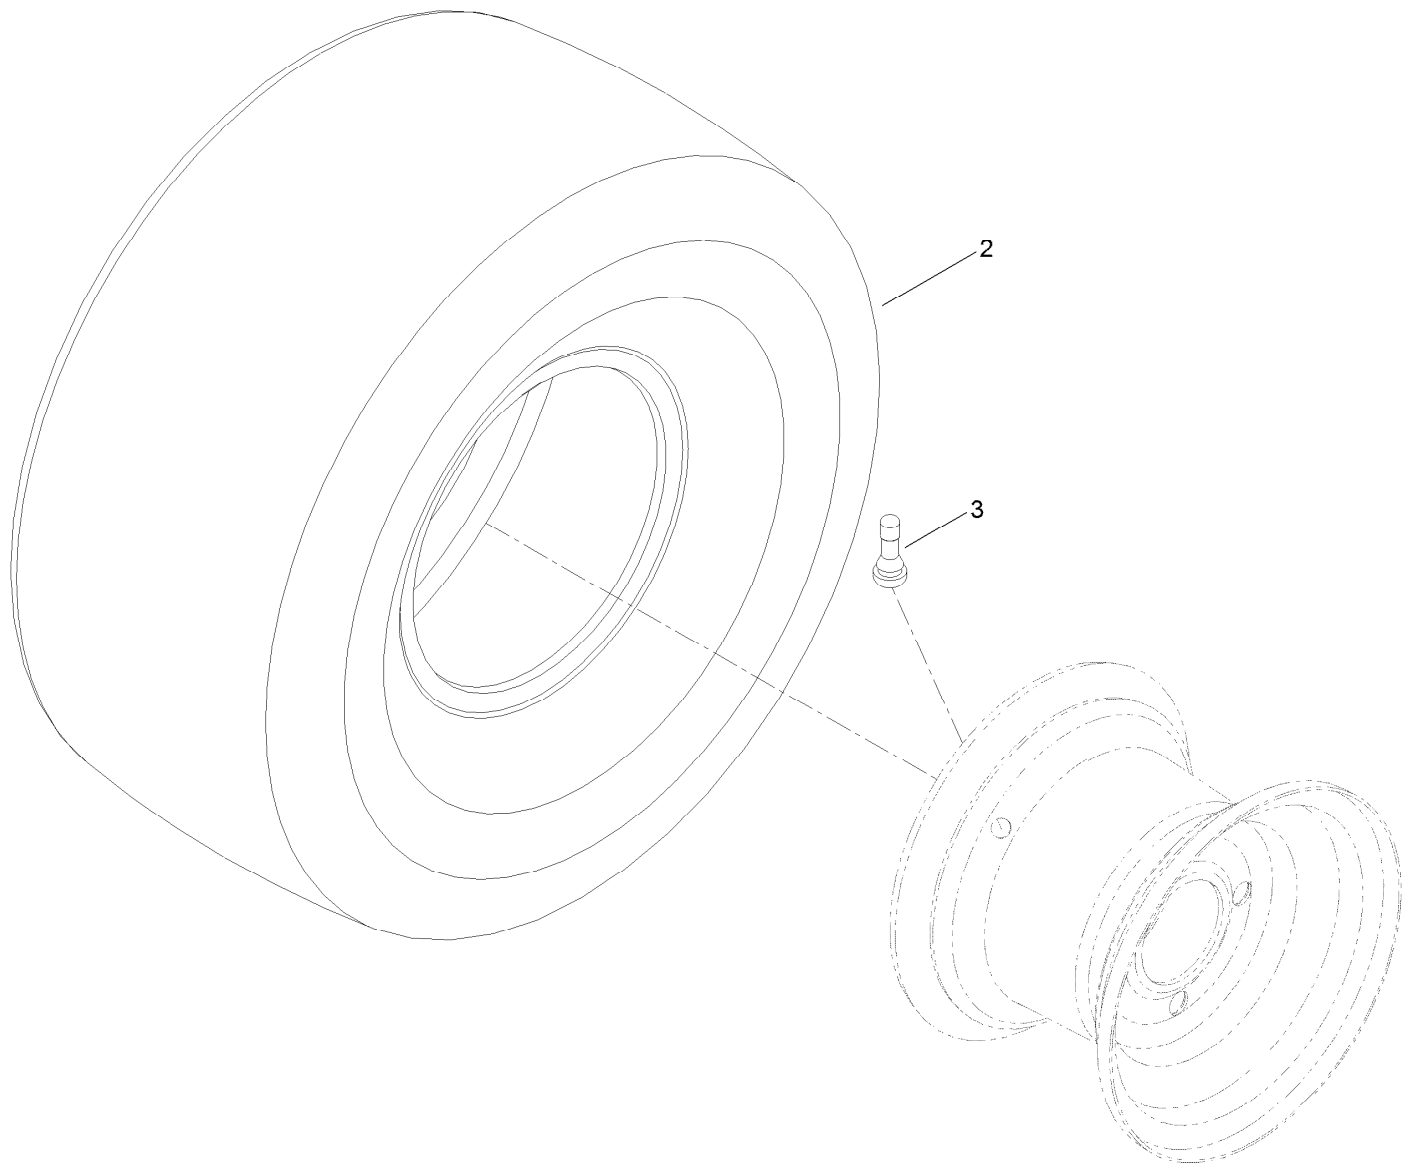


4 Ply Wheel and Tire Assembly No. 109-5268 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	109-5269	1	Tire-4 Ply
3	232-27	1	Stem-Valve
4	93-3893	1	Tube-Inner ●

● Not illustrated

2 Ply Wheel and Tire Assembly No. 131-3673

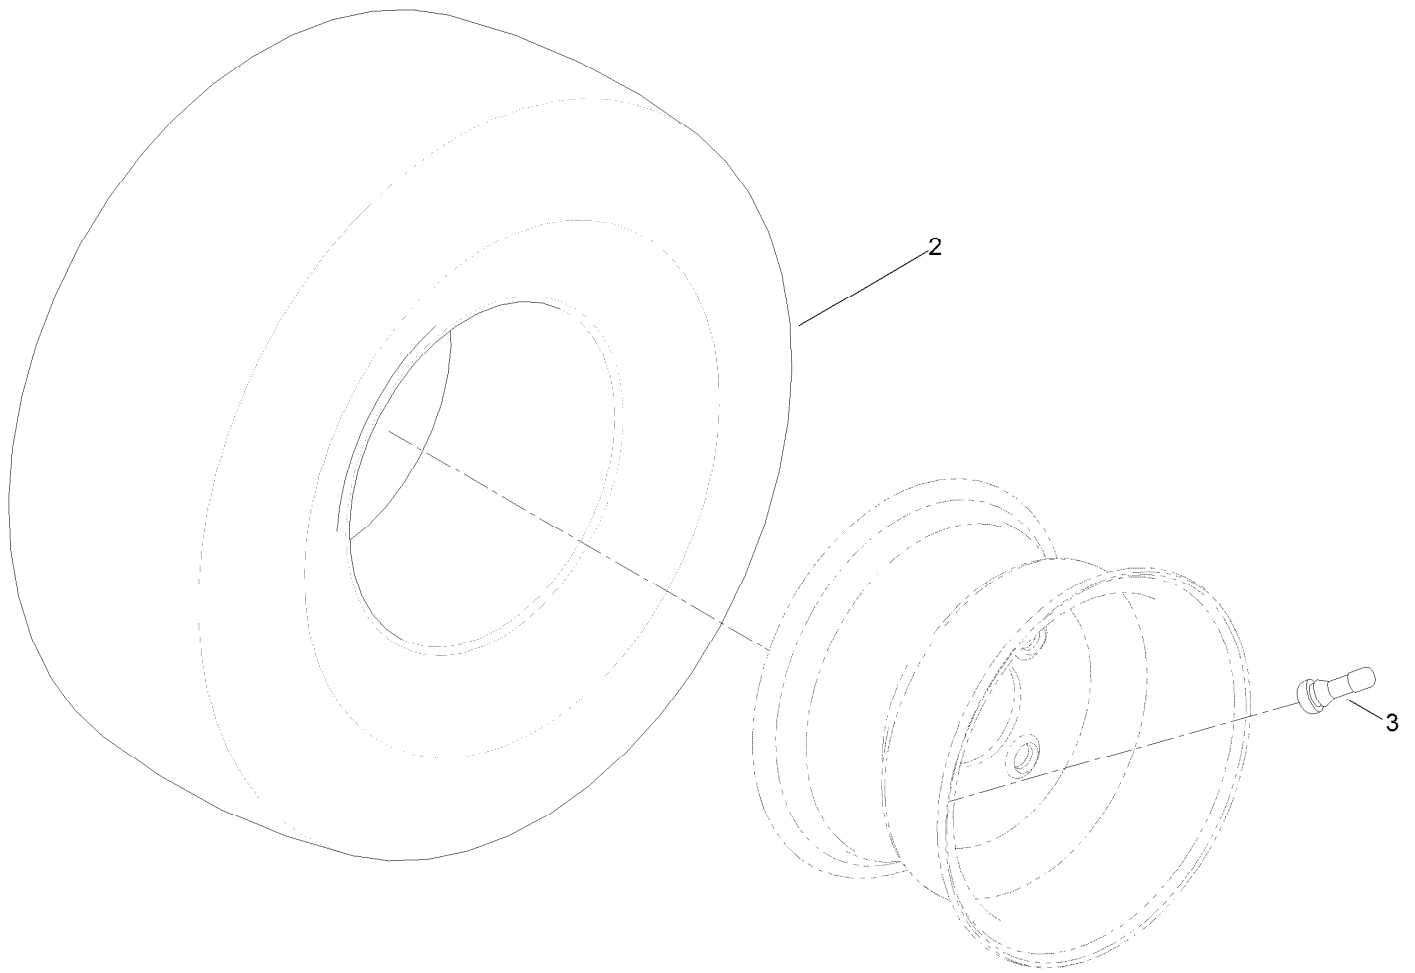


2 Ply Wheel and Tire Assembly No. 131-3673 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	131-3680	1	Tire-2 Ply
3	232-27	1	Stem-Valve
4	93-3893	1	Tube-Inner ●

● Not illustrated


Clutch Assembly

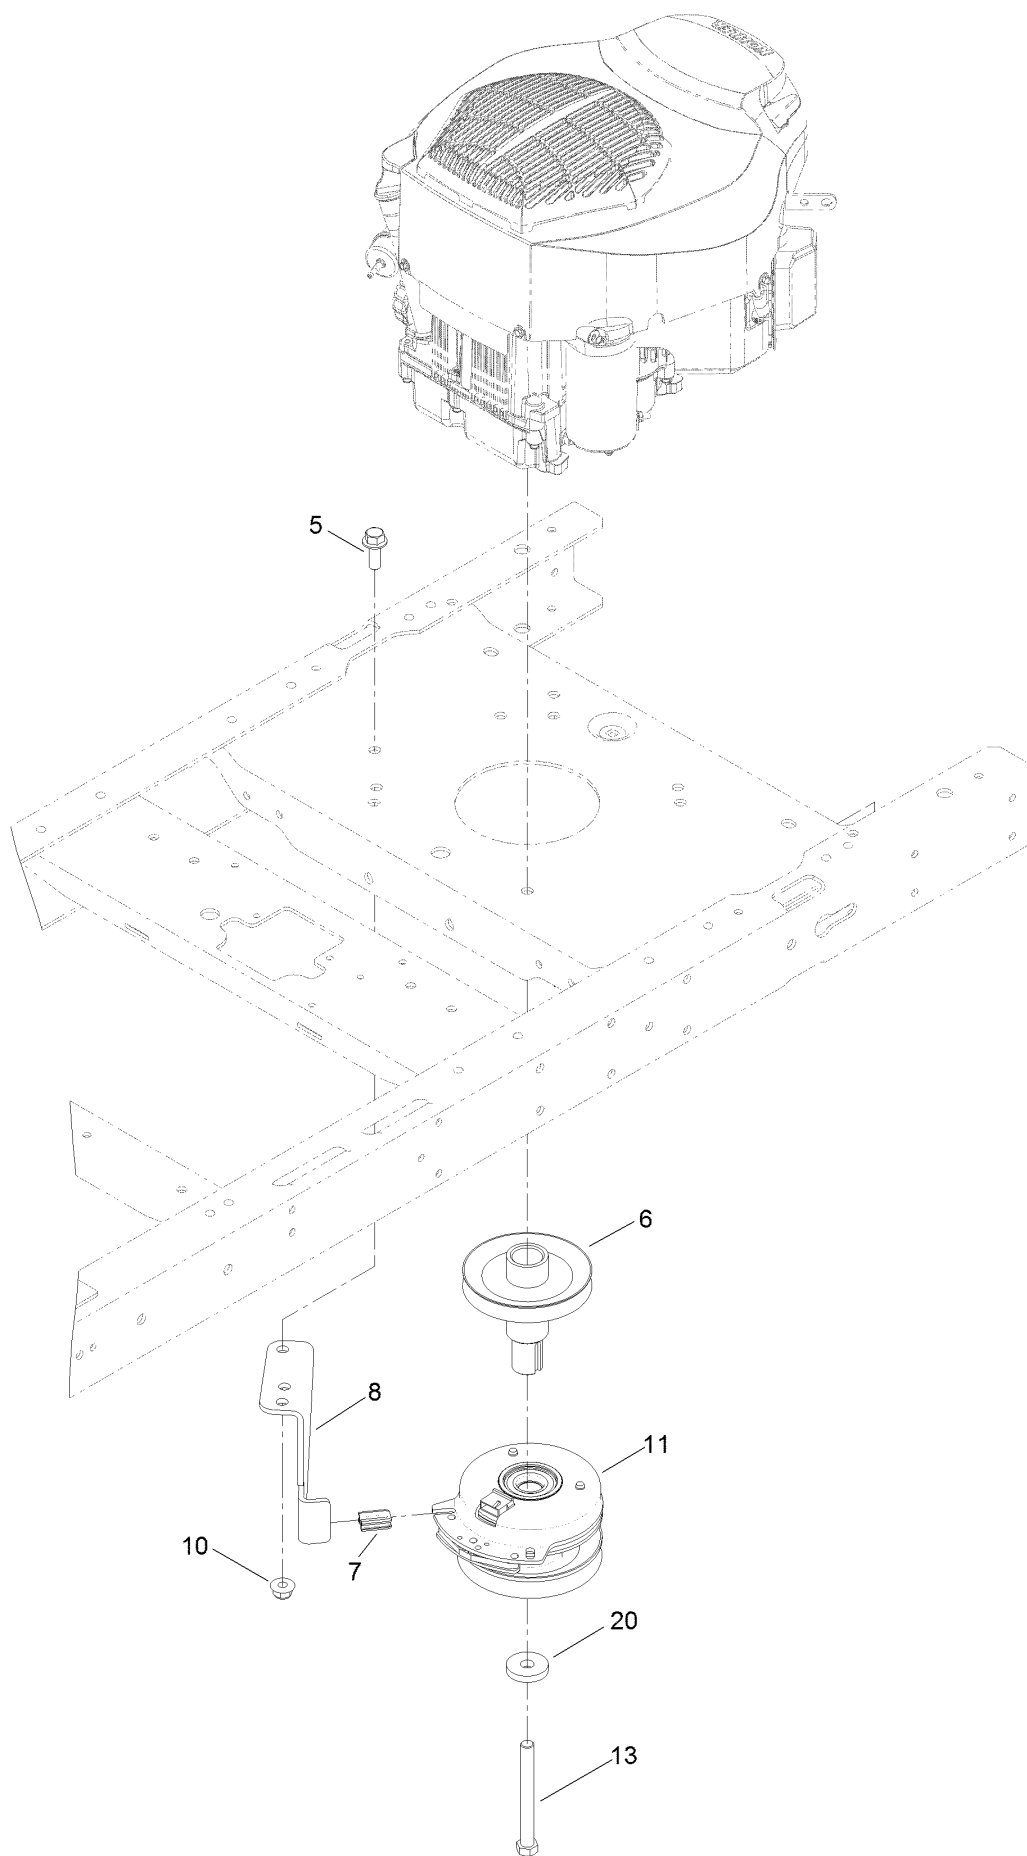

Clutch Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	3234-42	1	Screw-HHF	10	104-8301	1	Nut-Flange, NI
6	130-6854	1	Pulley-Engine	11	127-3410	1	Clutch-PTO
7	120-2217	1	Isolator-Clutch	13	3212-19	1	Screw-HH
8	119-8885	1	Stop-Clutch	20	112843	1	Washer

Engine and Muffler Assembly

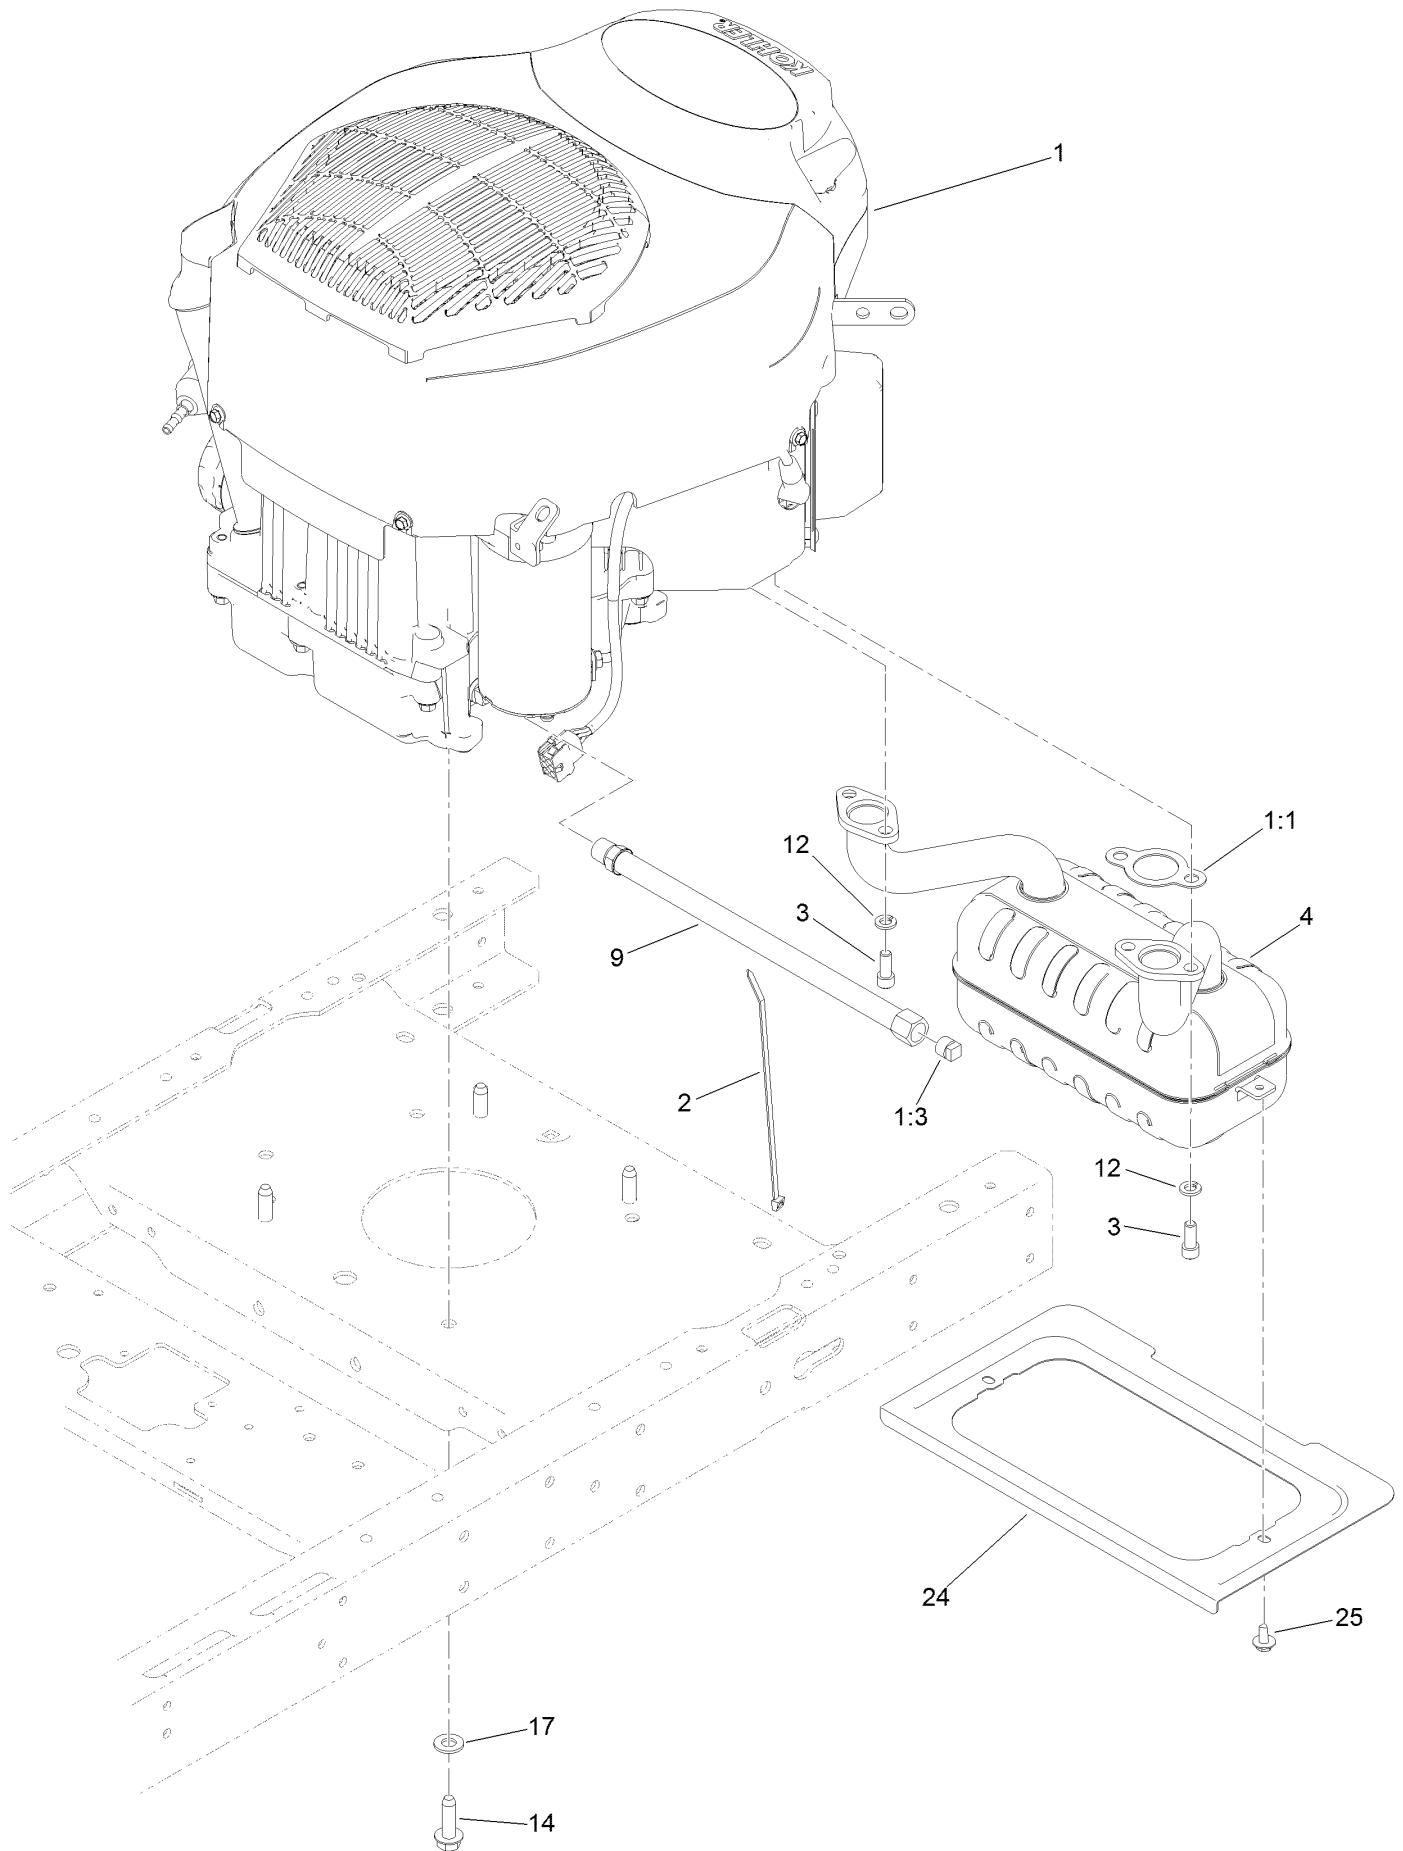


Engine and Muffler Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Engine-Kohler 24HP 7000 Series Autochoke ●	9	117-1261	1	Hose-Drain, Oil
1:1	110-6697	2	Gasket-Exhaust	12	3253-4	4	Washer-Lock
1:3	281-2	1	Plug-Pipe, SQH	14	32144-109	4	Screw-Taptite
2	614249	1	Tie-Cable	17	3256-24	3	Washer-Flat
3	3274-10	4	Screw-HSH	24	131-1071-03	1	Shield-Heat
4	117-7462	1	Muffler-Kohler	25	46-8560	2	Screw-HHFTF

● Not serviced separately


Body Styling and Fuel Pod Assembly

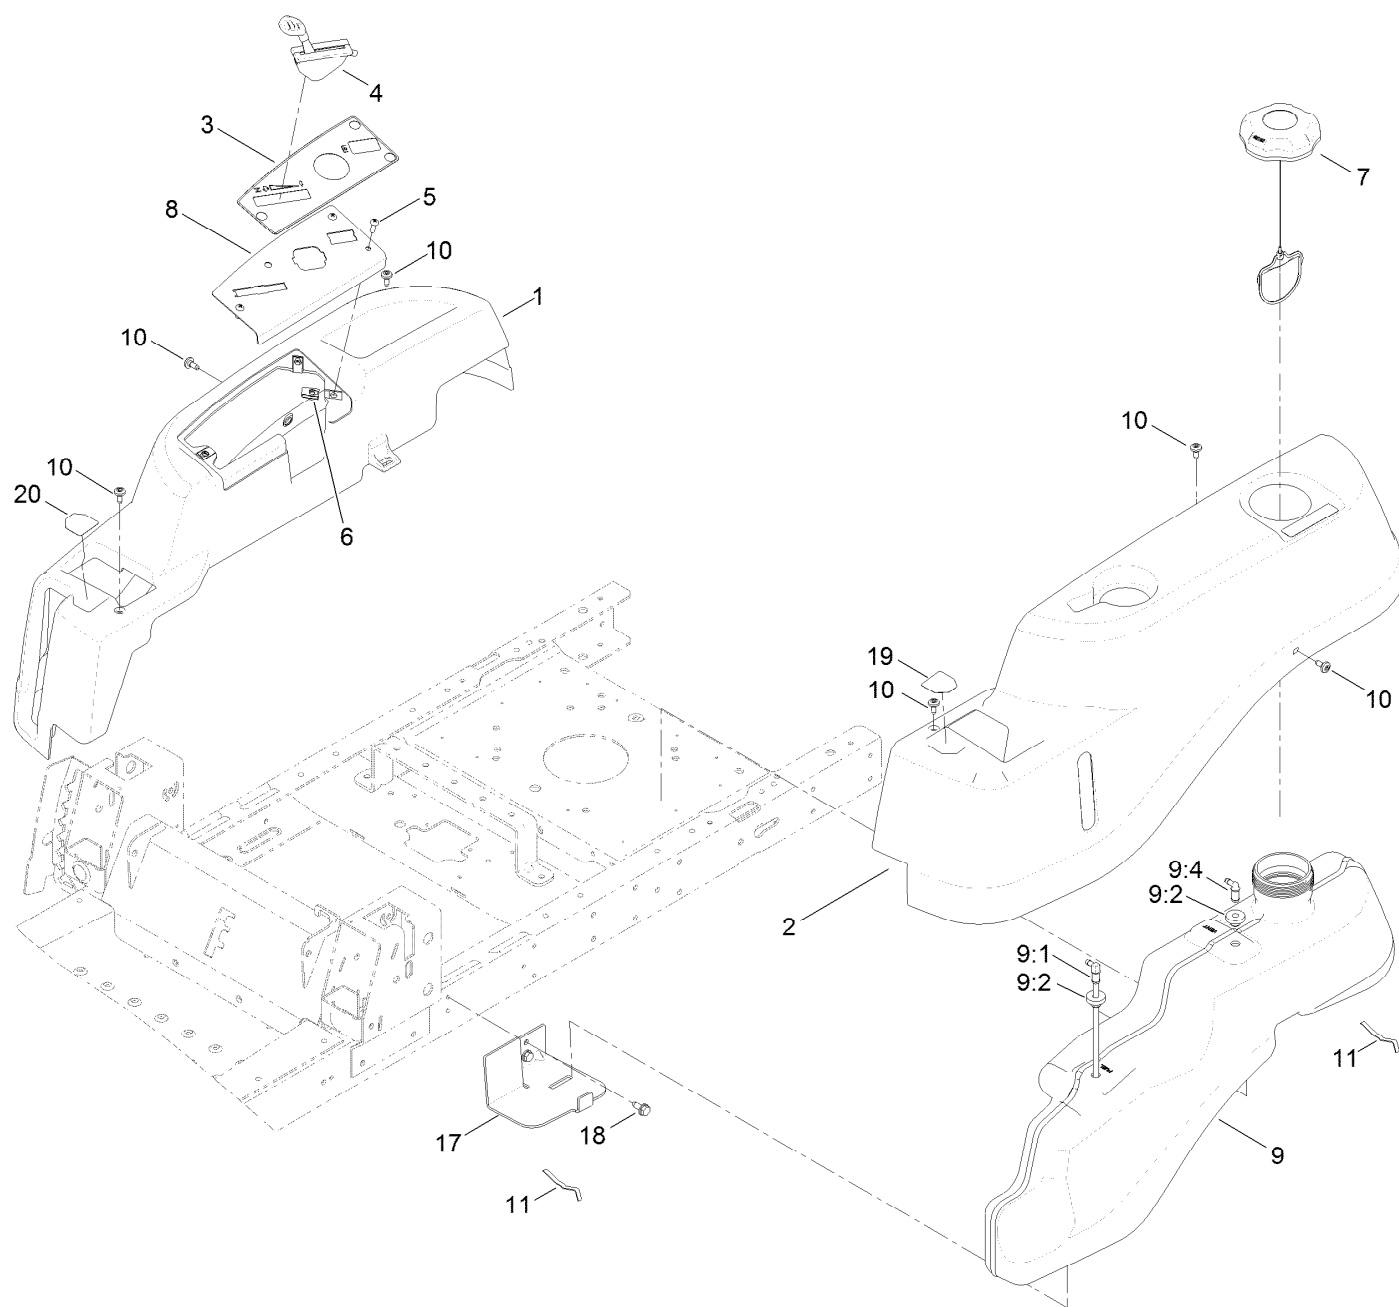

Body Styling and Fuel Pod Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-3338	1	Pod-RH	9:1	121-0793	1	Connector-Elbow, 90 DEG
2	119-3337	1	Pod-LH	9:2	46-6560	2	Bushing
3	131-4162	1	Decal-Panel, Control	9:4	117-7400	1	Fitting-Plastic
4	131-1006	1	Cable-Throttle	10	120-7950	6	Screw-Shoulder
5	3258-166	3	Screw-PRH	11	609830	2	Spring
6	107069	3	Clip	17	119-3395-03	1	Support-Tank, Front
7	120-5461	1	Cap-Fuel, Ratcheting	18	32144-70	2	Screw-HWHTF
8	119-3377-03	1	Plate-Control	19	119-8814	1	Decal-Control Lever, LH
9	119-3324	1	Fuel Tank ASM	20	119-8815	1	Decal-Control Lever, RH


Fuel Delivery Assembly

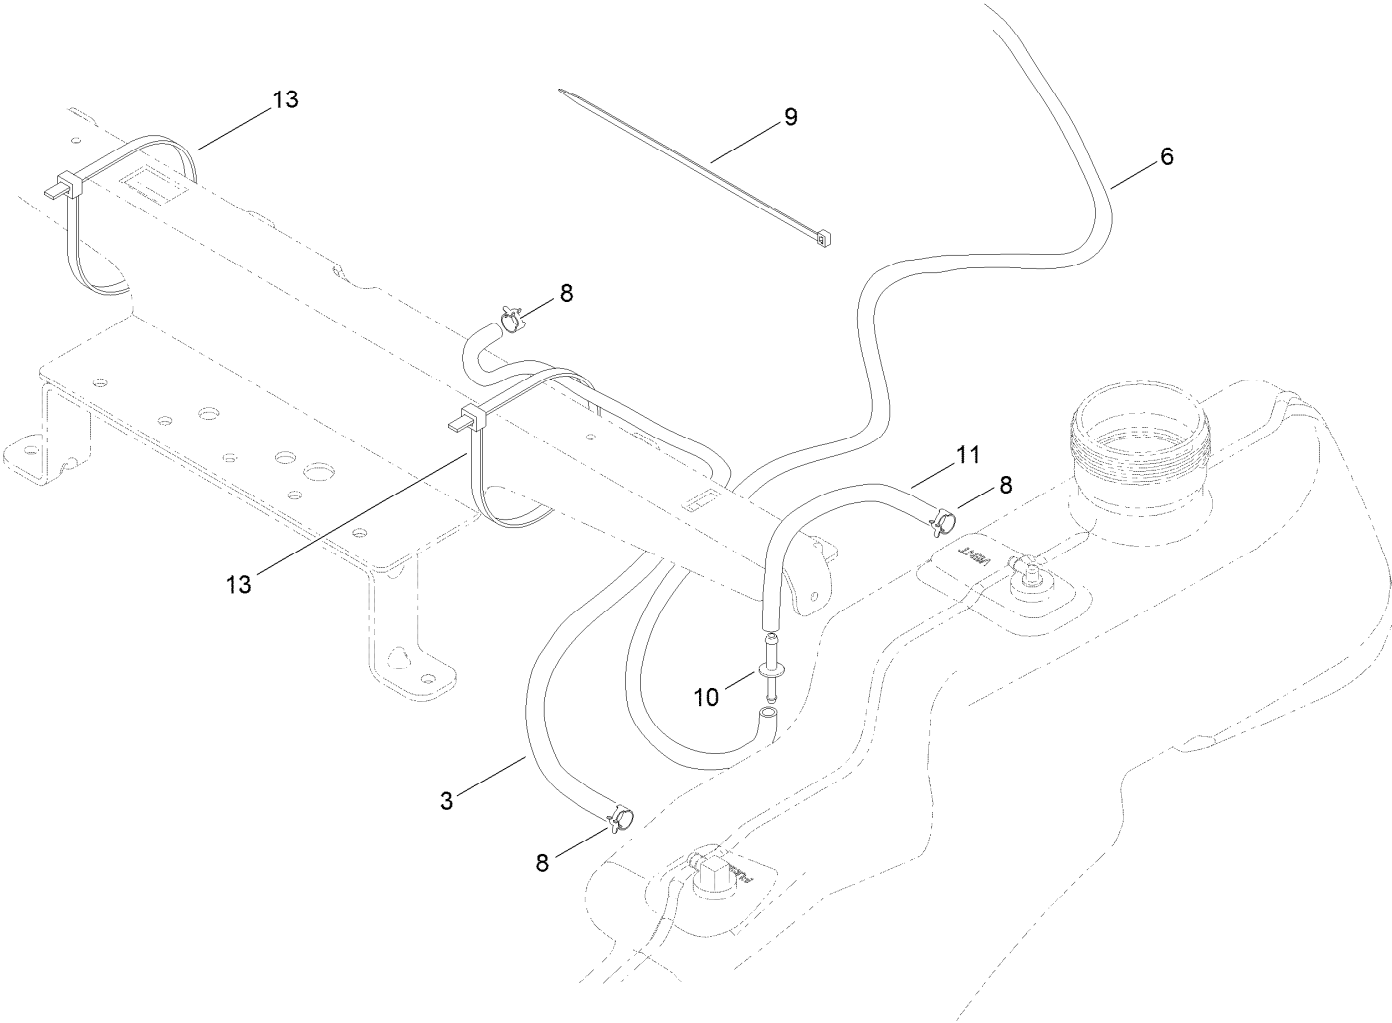

Fuel Delivery Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	109-0273	1	Hose-Fuel	10	117-5399	1	Adaptor-Orifice
6	108-9698	1	Hose-Fuel	11	110-1876	1	Hose-Fuel
8	2412-98	3	Clamp-Hose	13	3334-945	2	Tie-Cable
9	614249	3	Tie-Cable				

Battery and Electrical Assembly

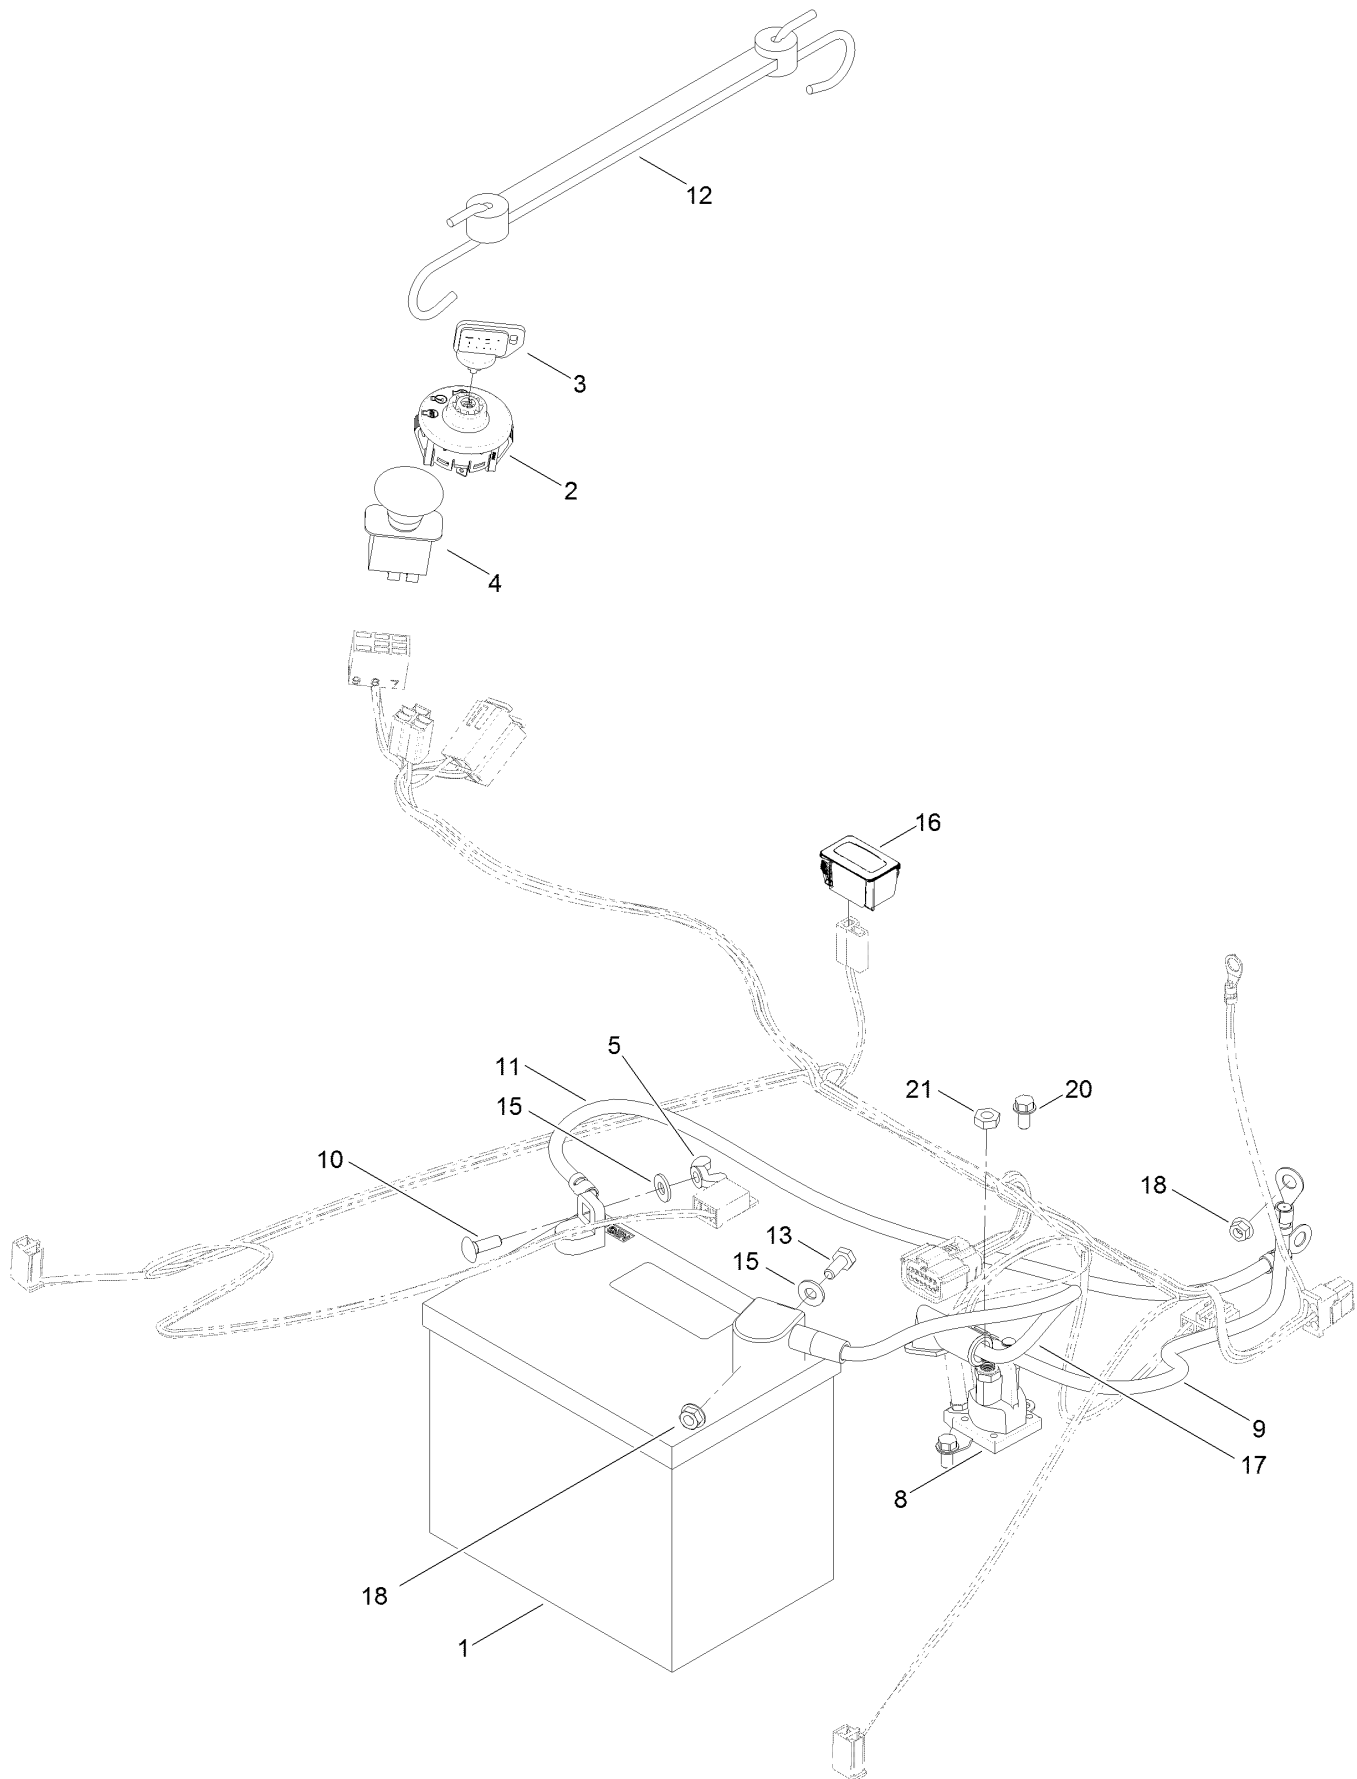


Battery and Electrical Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	105-1692	1	Battery-Dry
2	117-2221	1	Switch-Ignition
3	63-8360	1	Key-Ignition
4	103-5221	1	Switch-PTO
5	32103-22	1	Nut-Wing
8	117-1197	1	Solenoid
9	121-0711	1	Cable-Battery, Positive
10	3229-1	1	Bolt-CARR
11	121-5726	1	Cable-Battery, Black

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
12	104-2466	1	Holddown-Battery
13	321-3	1	Screw-HH
15	3256-22	2	Washer-Flat
16	120-2244	1	Hourmeter
17	119-8897	1	Cable-Battery, Red
18	32128-33	2	Nut-HF
20	32144-4	2	Screw-HWH
21	3220-2	2	Nut-Jam

Fuse and Wire Harness Assembly

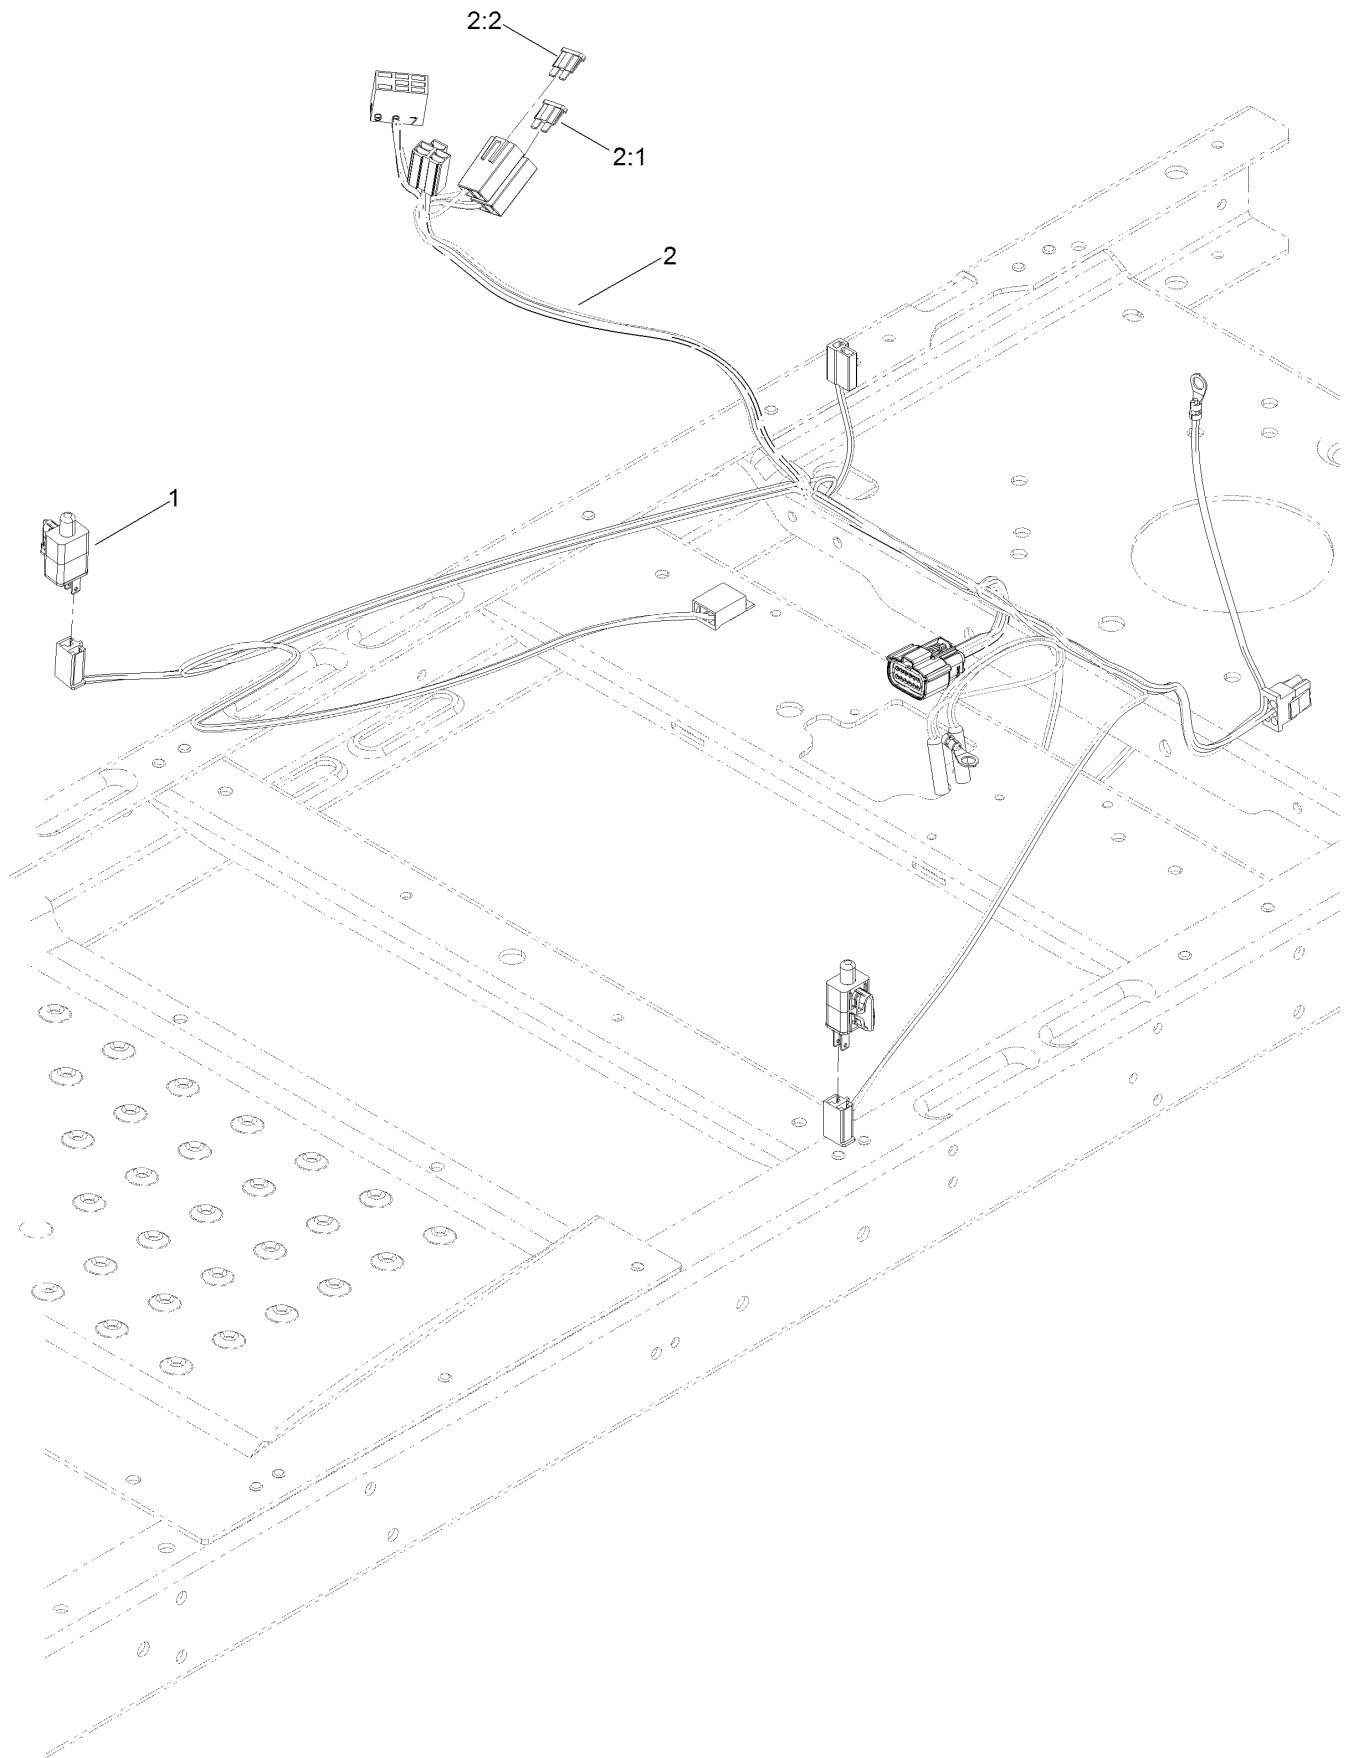


Fuse and Wire Harness Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	110-6765	2	Switch
2	130-7013	1	Harness-Wire

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2:1	109103	1	Fuse-Blade, 30 Amp
2:2	109102	1	Fuse-Blade, 25 Amp

50 Inch Deck Assembly

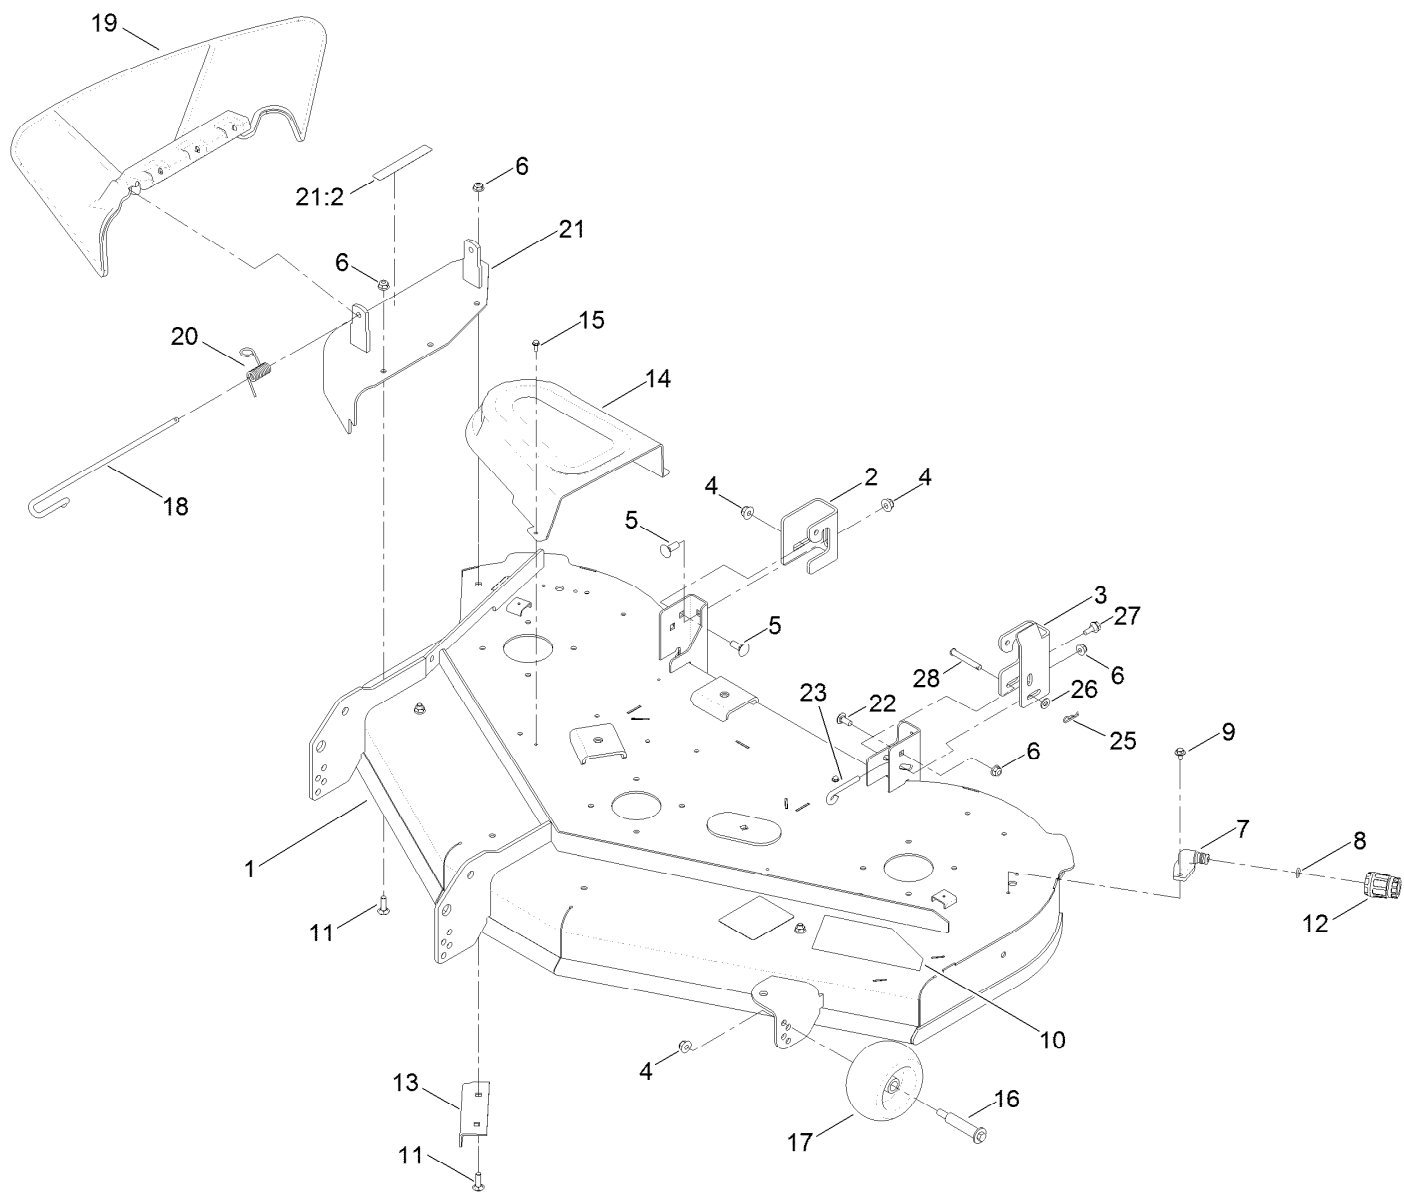


50 Inch Deck Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	131-3612	1	50 Inch Deck And Decal ASM
2	131-4138	1	Bracket-Hanger, RH
3	131-3935	1	Bracket-Hanger, LH
4	104-8301	5	Nut-Flange, NI
5	3231-2	2	Bolt-CARR
6	104-8300	6	Nut-Flange, NI
7	95-2747	2	Fitting-Washout
8	46-6290	2	O-Ring
9	46-8560	4	Screw-HHFTF
10	121-0792	1	Decal-Deck
11	3230-22	4	Screw-CARR
12	95-3270	1	Connector-Hose
13	120-7951-03	1	Baffle-Cutoff
14	108-7890	2	Cover-Belt

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
15	32144-1	6	Screw-Taptite
16	112-3977	3	Bolt-Shoulder
17	1-603299	3	Roller-Scalp, Anti
18	109-8854	1	Pin-Chute
19	121-0739	1	Deflector-Discharge
20	121-2983	1	Spring-Torsion
21	131-3962	1	Cover ASM W/Decal
21:2	93-7009	1	Decal-Danger
22	3230-23	1	Screw-CARR
23	131-0955	1	Rod-Level, Deck
25	1-806003	1	Pin-Cotter
26	3256-23	1	Washer-Flat
27	120-7024	1	Screw-Shoulder, HHF
28	110-0618	1	Pin-Clevis

50 Inch Deck and Decal Assembly No. 131-3612

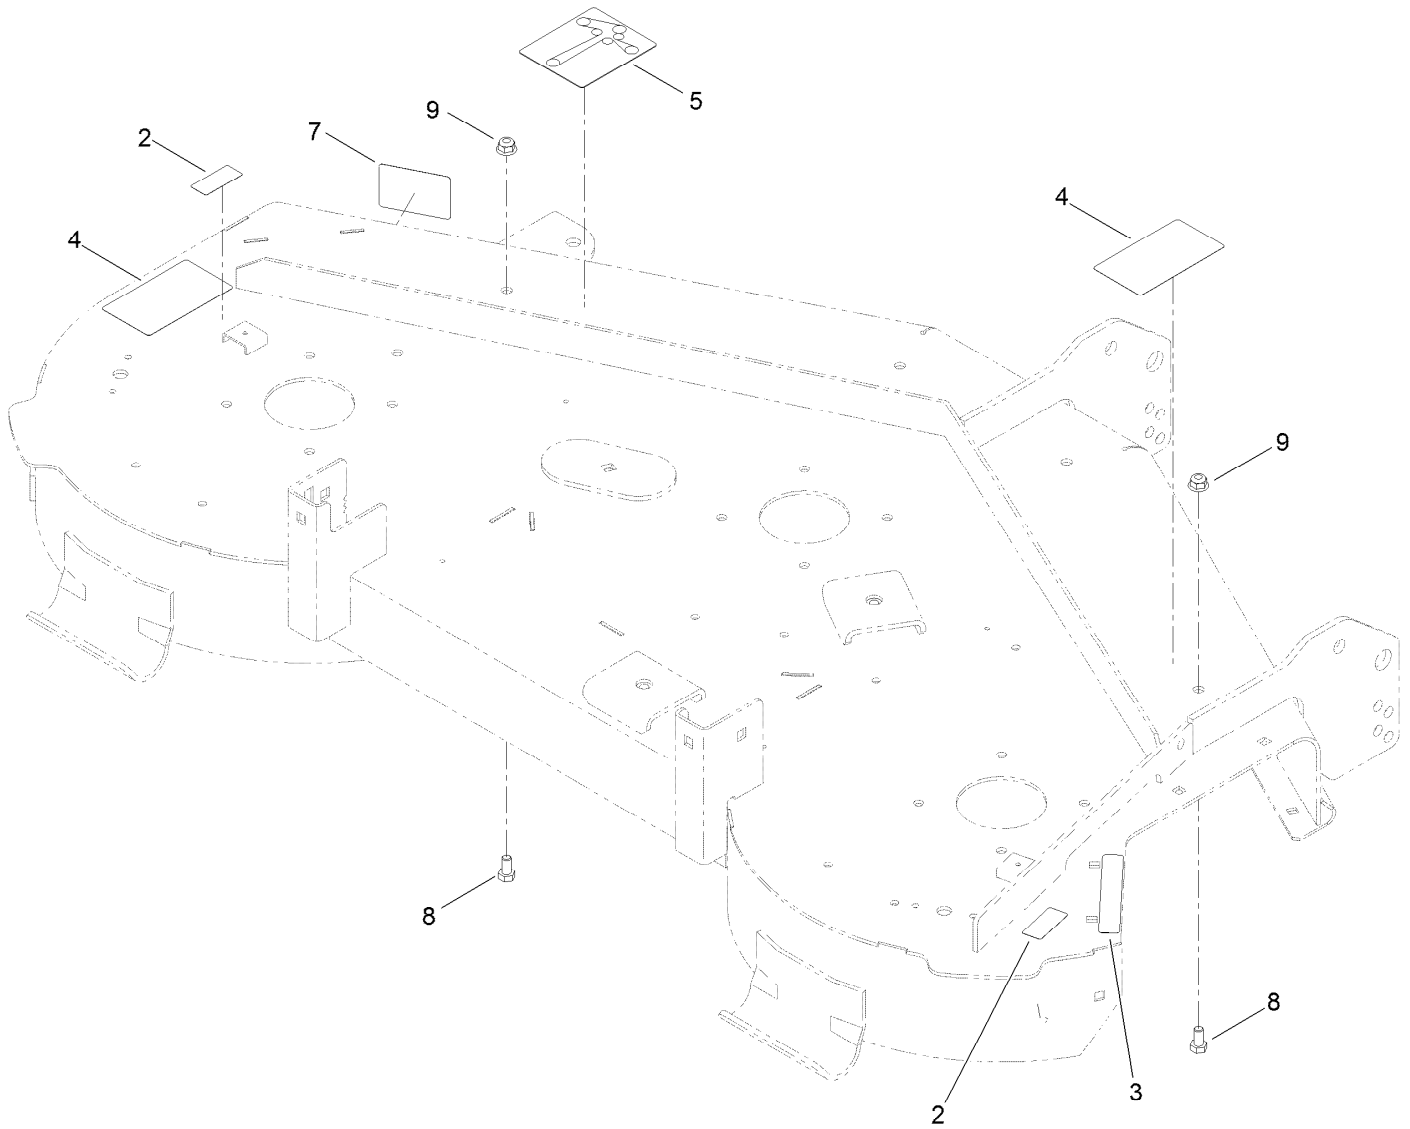


50 Inch Deck and Decal Assembly No. 131-3612 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	114-1606	2	Decal-Danger
3	93-7009	1	Decal-Danger
4	110-6691	2	Decal-Danger
5	99-3943	1	Decal-Routing, Belt

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
7	112-9840	1	Decal-Scalp, Anti
8	322-2	2	Screw-HH
9	104-8300	2	Nut-Flange, NI

50 Inch Deck Belt, Spindle and Blade Assembly

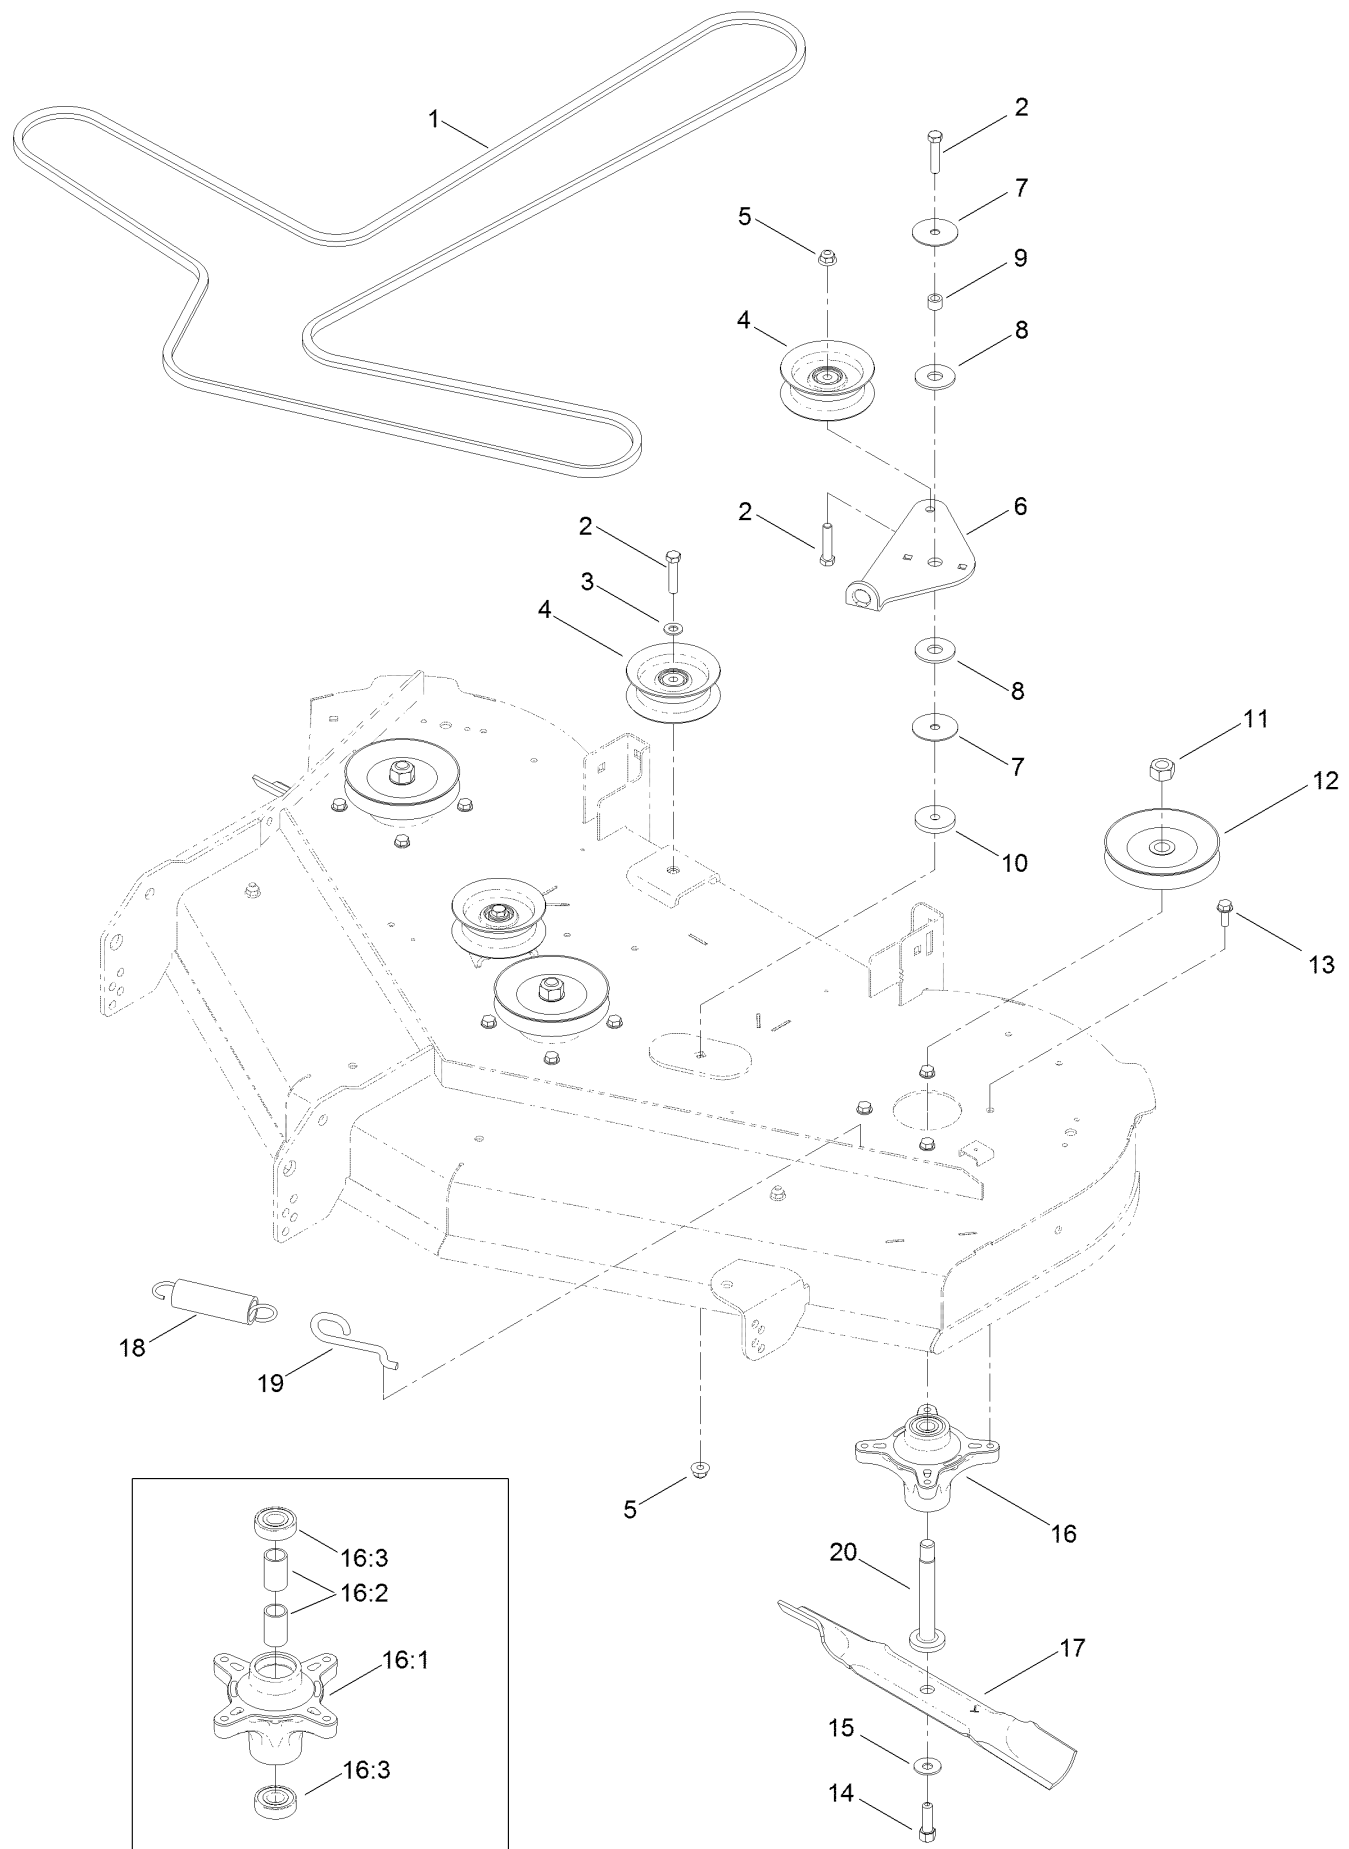

50 Inch Deck Belt, Spindle and Blade Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-8820	1	V-Belt	13	32144-41	12	Screw-Taptite
2	323-9	4	Screw-HH	14	26-0671	3	Screw-HH
3	3256-24	2	Washer-Flat	15	3290-465	3	Washer-Belleville
4	106-2175	3	Pulley-Idler, Flat	16	121-0751	3	Spindle ASM
5	104-8301	2	Nut-Flange, NI	16:1	117-7267	1	Spindle
6	114-8540	1	Arm-Idler	16:2	120-7935	2	Spacer
7	120-2229	2	Washer	16:3	100-1048	2	Bearing-Ball
8	114-0463	2	Washer-Friction, Composite	17	115-5059-03	3	Blade-Hi Lift
9	115-4986	1	Spacer	18	1-603414	1	Spring-Extension
10	110-9981	1	Washer-Plain	19	112-3973	1	Hook-Return, Spring
11	3219-6	3	Nut-Hex	20	117-7268	3	Shaft-Spindle
12	125-5575	3	Pulley				

Attachments and Accessories

For 74770 TimeCutter MX 5050 Riding Mower

Product Name	Model/Part
Hypr-Oil 500 (quart)	114-4713
Oil-Synthetic, All Season	117-0066
Fuel Stabilizer (4oz).....	117-0089
Fuel Stabilizer (16oz).....	117-0090
Seat Cover W/arm Rest.....	117-0097
Bagging Enhancement Kit	121-5692
Striping Kit	121-5706
Jack Mount Kit	126-5251
Jack Kit	127-6666
Attachment Mount Kit	131-3966
Weight Kit	131-7658
10w30 4-cycle Engine Oil (32oz Bottle)	38280
Toro 4-cycle Sae 30 Oil (32oz Bottle).....	38903
Storage Cover	490-7516
Blade Kit	79016P
50in Recycler Kit.....	79024
Cargo Carrier	79040
Assist Handle and Step Kit	79339
50in Bagger	79386

Notes:

Notes:

Notes:



Count on it.