



**Count on it.**

Form No. 3383-851 Rev C

# Parts Catalog

## DH 220 Lawn Tractor

Model No. 74596—Serial No. 314000001 and Up



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# List of Abbreviations

**AR:** as required

**ASM:** assembly

**BBC:** blade brake control

**BHTF:** button head thread forming

**CARR:** carriage

**CCW:** counter clockwise

**CW:** clockwise

**DEG:** degrees

**DPA:** Dual Point Adjustment

**ECM:** electronic control module

**EXT:** external

**FH:** flat head

**GA:** gauge

**HD:** heavy-duty

**HF:** hex flange

**HH:** hex head

**HHF:** hex head flange

**HHFTF:** hex head flange thread forming

**HJ:** hex jam

**HLH:** hex lag head

**HOC:** height-of-cut

**HP:** high pressure

**HSBH:** hex socket button head

**HSFH:** hex socket flat head

**HSH:** hex socket head

**HWH:** hex washer head

**HWHTF:** hex washer head thread forming

**HYD:** hydraulic

**LH:** left hand

**LP:** low pressure

**LPG:** Liquefied Petroleum Gas

**NI:** nylon insert

**NPTF:** national pipe thread fine

**PFH:** phillips flat head

**PPH:** phillips pan head

**PPHTF:** phillips pan head thread forming

**PRH:** phillips round head

**PTH:** phillips truss head

**PTO:** power-take-off

**RH:** right hand

**ROPS:** roll-over protection system

**RRB:** rear roller brush

**SFH:** slotted fillister head

**SHH:** slotted hex head

**SHWH:** slotted hex washer head

**SPH:** slotted pan head

**SQH:** square head

**SRH:** slotted round head

**STD:** standard


**TAP:** self tapping

**TTH:** torx truss head

# Contents

|                                                                     |    |
|---------------------------------------------------------------------|----|
| Engine and Muffler Assembly .....                                   | 4  |
| Front Axle Assembly .....                                           | 6  |
| Steering Assembly .....                                             | 7  |
| Transmission Drive Assembly .....                                   | 8  |
| Frame Assembly .....                                                | 9  |
| Mower Lift Assembly .....                                           | 10 |
| Cutting Drive System Assembly No. 111-6850 .....                    | 12 |
| Mower Housing Assembly .....                                        | 14 |
| Travel Pedals and Brake Assembly .....                              | 16 |
| Battery and Electrical Assembly .....                               | 18 |
| Body and Hood Assembly .....                                        | 20 |
| Tunnel and Collector Plate Assembly .....                           | 22 |
| Grass Collector Assembly No. 125-2325 .....                         | 24 |
| Decal Assembly .....                                                | 26 |
| Control Shaft Assembly Transmission Assembly No. 114-3155 .....     | 27 |
| Differential Gear Assembly Transmission Assembly No. 114-3155 ..... | 28 |
| Final Pinion Assembly Transmission Assembly No. 114-3155 .....      | 29 |
| Axle Shaft Assembly Transmission Assembly No. 114-3155 .....        | 30 |
| Brake Assembly Transmission Assembly No. 114-3155 .....             | 31 |
| Fan Pulley Assembly Transmission Assembly No. 114-3155 .....        | 32 |
| Range Shift Assembly Transmission Assembly No. 114-3155 .....       | 33 |
| Center Case Assembly Transmission Assembly No. 114-3155 .....       | 34 |
| Pump Shaft Assembly Transmission Assembly No. 114-3155 .....        | 35 |
| Motor Shaft Assembly Transmission Assembly No. 114-3155 .....       | 36 |
| Transaxle Case Assembly Transmission Assembly No. 114-3155 .....    | 37 |
| Attachments and Accessories .....                                   | 38 |

# Engine and Muffler Assembly

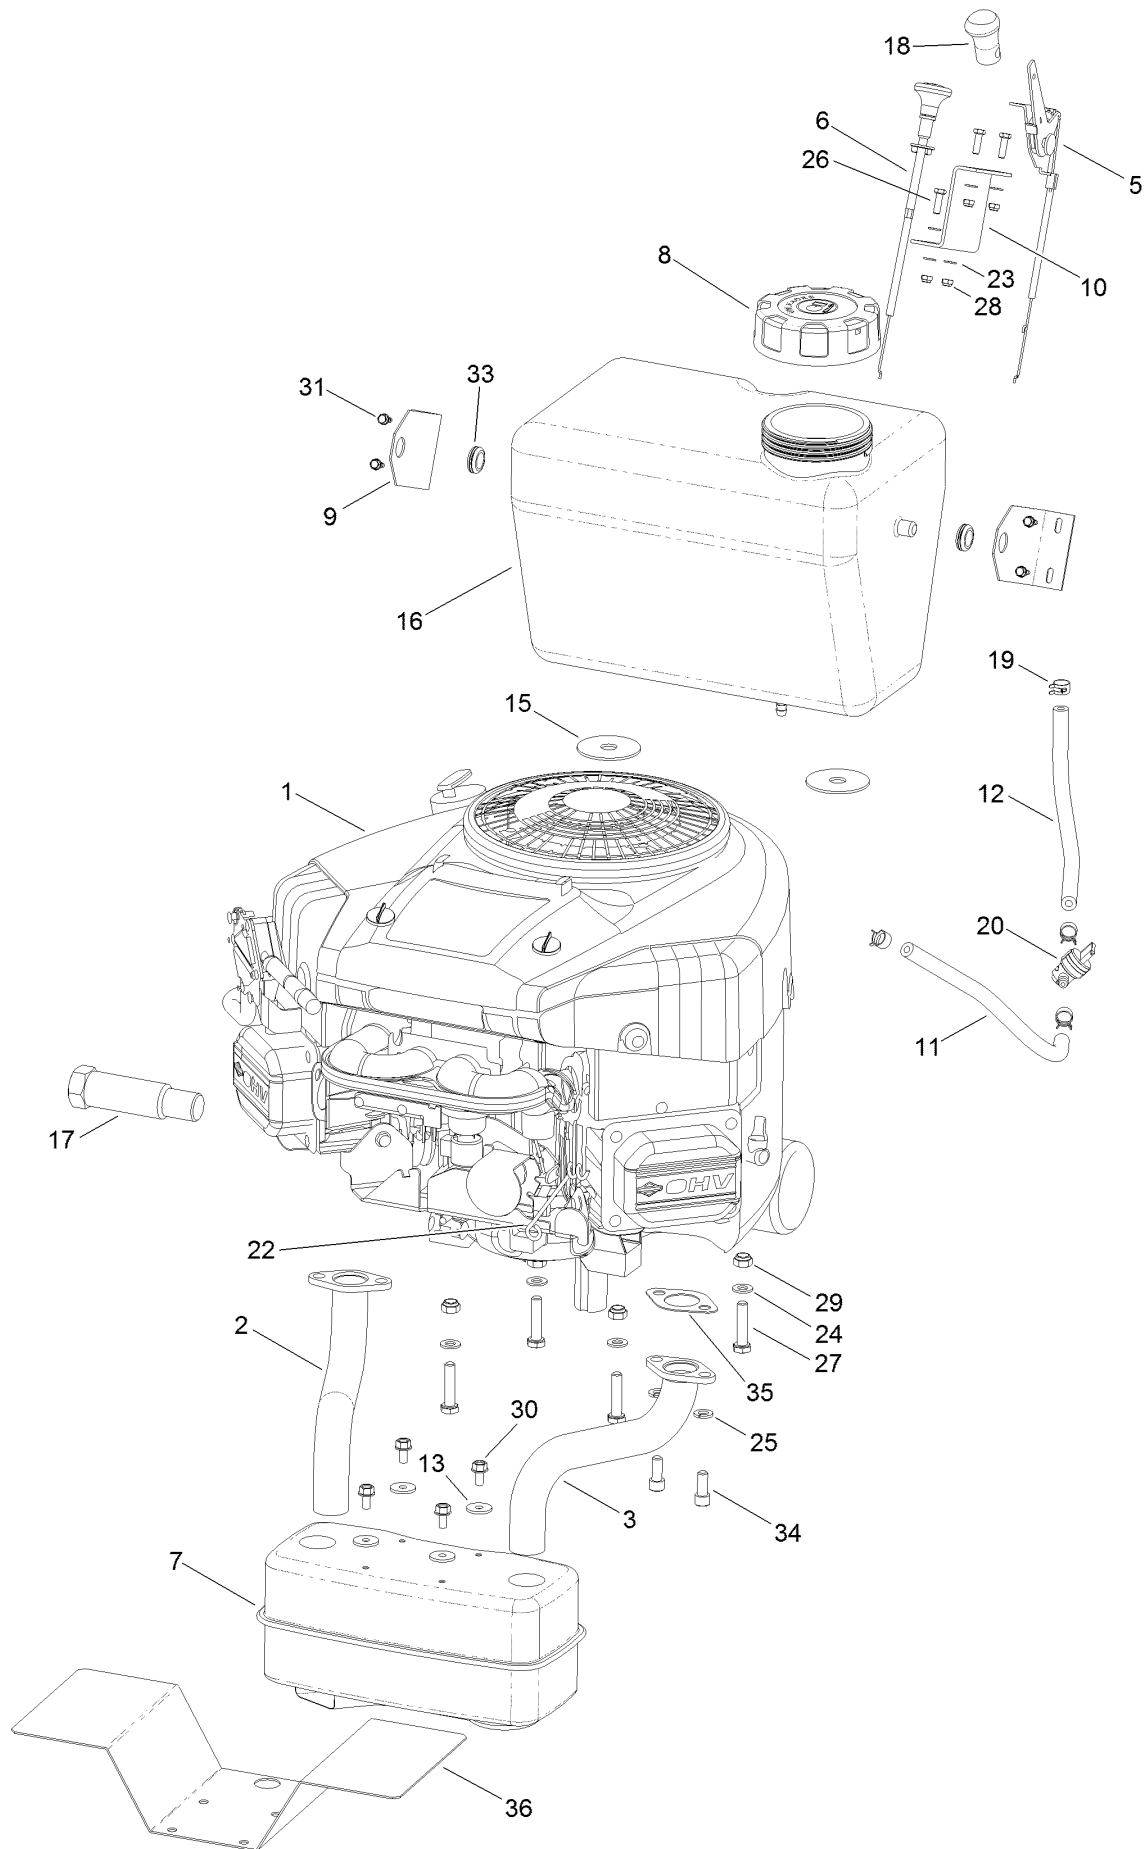


## Engine and Muffler Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>                  |
|-------------|--------------------|-------------|-------------------------------------|
| 1           |                    | 1           | Engine-Briggs,<br>40R777-0007-B1 ●■ |
| 2           | 125-2217           | 1           | Tube-Exhaust, RH                    |
| 3           | 125-2218           | 1           | Tube-Exhaust, LH                    |
| 5           | 125-2215           | 1           | Control-Throttle, Twin              |
| 6           | 125-2216           | 1           | Control-Choke, Twin                 |
| 7           | 104-3225           | 1           | Muffler                             |
| 8           | 119-5354           | 1           | Cap-Fuel                            |
| 9           | 125-2202           | 2           | Bracket-Fuel, Tank                  |
| 10          | 125-2206           | 1           | Holder                              |
| 11          | 125-2212           | 1           | Line-Fuel                           |
| 12          | 125-2203           | 1           | Line-Fuel                           |
| 13          | 111-7601           | 4           | Washer-Flat                         |
| 15          | 119-5500           | 2           | Washer-Rubber                       |
| 16          | 119-5358           | 1           | Tank-Fuel                           |
| 17          | 120-8755           | 1           | Coupler-Drain, Oil                  |
| 18          | 119-5448           | 1           | Knob-Throttle/Choke                 |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|------------------------|
| 19          | 104-3212           | 4           | Clamp-Line, Fuel       |
| 20          | 104-3224           | 1           | Valve-Tank, Fuel       |
| 22          | 104-3156           | 1           | Holder-Harness, Wiring |
| 23          | 52-6430            | 6           | Washer                 |
| 24          | 106-4756           | 4           | Washer-Plain           |
| 25          | 104-2927           | 4           | Washer-Spring          |
| 26          | 107-8918           | 4           | Screw                  |
| 27          | 33114-035          | 4           | Screw-HH               |
| 28          | 87-5140            | 4           | Nut-Lock               |
| 29          | 33024-00           | 4           | Nut-Lock, NI           |
| 30          | 111-7602           | 4           | Screw-Hhtf             |
| 31          | 104-2977           | 4           | Screw-TAP              |
| 33          | 119-5364           | 2           | Bushing                |
| 34          | 322-3              | 4           | Screw-HH               |
| 35          | 104-3226           | 2           | Gasket-Exhaust         |
| 36          | 125-2195           | 1           | Cover-Tube             |

● Not serviced separately


■ Obtain parts from [www.briggsandstratton.com](http://www.briggsandstratton.com)

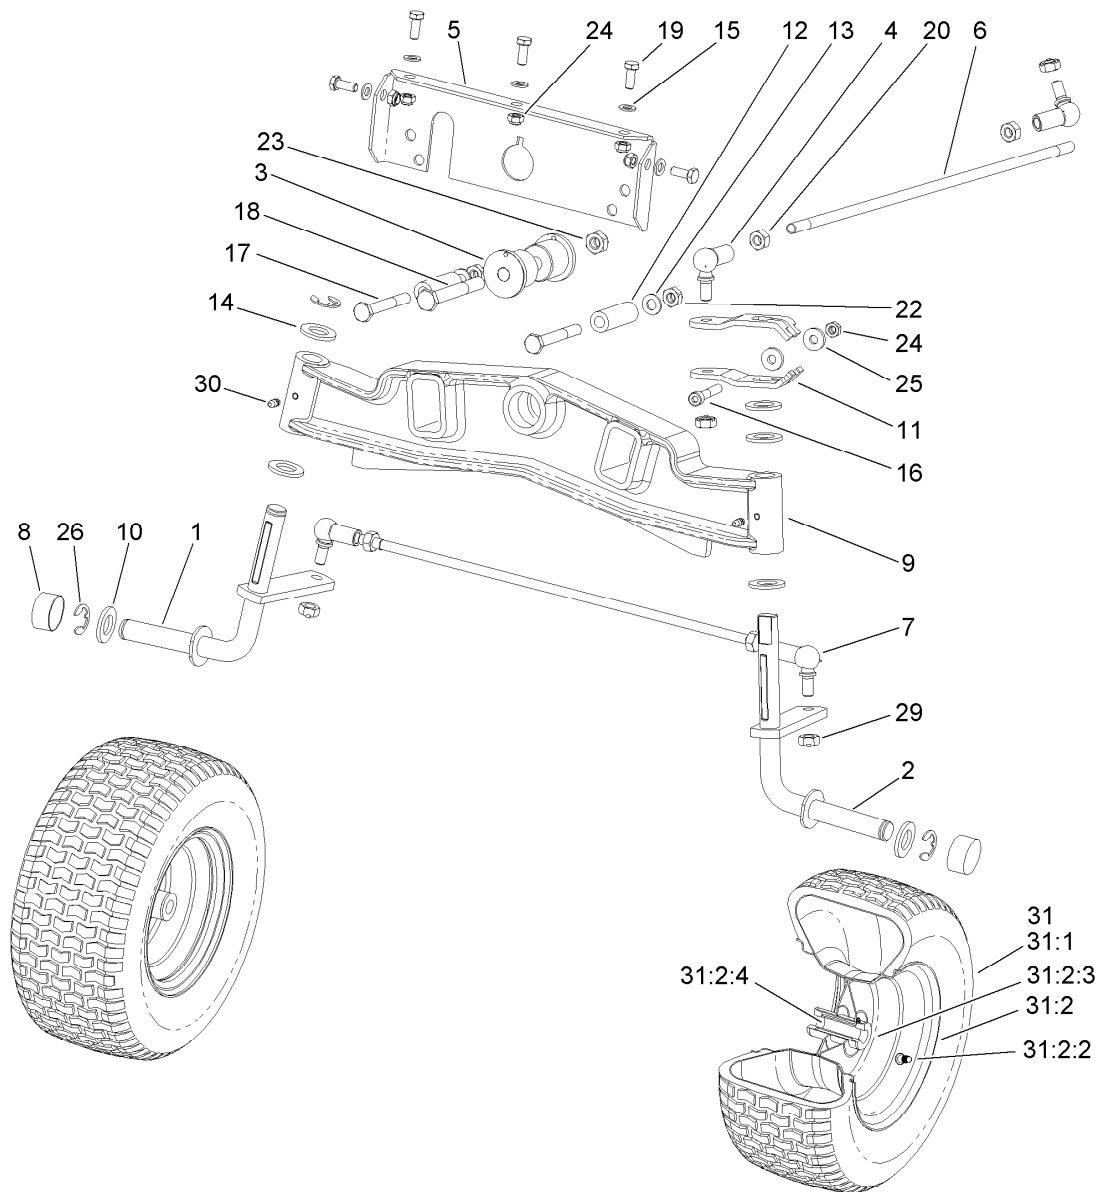

## Front Axle Assembly

| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 1    | 110-9084    | 1    | Spindle-Front, RH       |
| 2    | 120-8705    | 1    | Spindle-Front, LH       |
| 3    | 104-2890    | 2    | Bushing-Axle, Front     |
| 4    | 104-2876    | 4    | Joint-Ball, Angle       |
| 5    | 125-2219    | 1    | Plate-Axle              |
| 6    | 125-2223    | 1    | Link-Drag               |
| 7    | 125-2222    | 1    | Rod-Tie, Front Axle     |
| 8    | 104-2857    | 2    | Cap-Hub                 |
| 9    | 104-2852    | 1    | Axle-Front              |
| 10   | 120-8739    | 2    | Washer                  |
| 11   | 120-8713    | 2    | Lever-Spindle, Steering |
| 12   | 104-2851    | 2    | Spacer                  |
| 13   | 33095-00    | 2    | Washer-Flat             |
| 14   | 104-2905    | 5    | Washer-Flat             |
| 15   | 106-4756    | 5    | Washer-Plain            |
| 16   | 120-8774    | 1    | Screw                   |
| 17   | 33115-080   | 2    | Screw-HH                |


| Ref.   | Part Number | Qty. | Description      |
|--------|-------------|------|------------------|
| 18     | 33116-090   | 1    | Screw-HH         |
| 19     | 33114-020   | 5    | Screw-HH         |
| 20     | 33015-00    | 4    | Nut-Hex          |
| 22     | 33023-00    | 2    | Nut-Lock         |
| 23     | 48-9540     | 1    | Nut-Lock, Hex NI |
| 24     | 33024-00    | 6    | Nut-Lock, NI     |
| 25     | 106-8588    | 2    | Washer-Flat      |
| 26     | 104-2891    | 3    | Clip-Spring      |
| 29     | 33025-00    | 4    | Nut-Lock, NI     |
| 30     | 104-2904    | 3    | Fitting-Grease   |
| 31     | 114-3240    | 2    | Wheel ASM        |
| 31:1   | 99-2336     | 1    | Tire             |
| 31:2   | 110-9086    | 1    | Wheel ASM        |
| 31:2:2 | 106-8596    | 1    | Valve-Tire       |
| 31:2:3 | 110513      | 2    | Bearing-Wheel    |
| 31:2:4 | 127-6232    | 1    | Spacer-Wheel     |

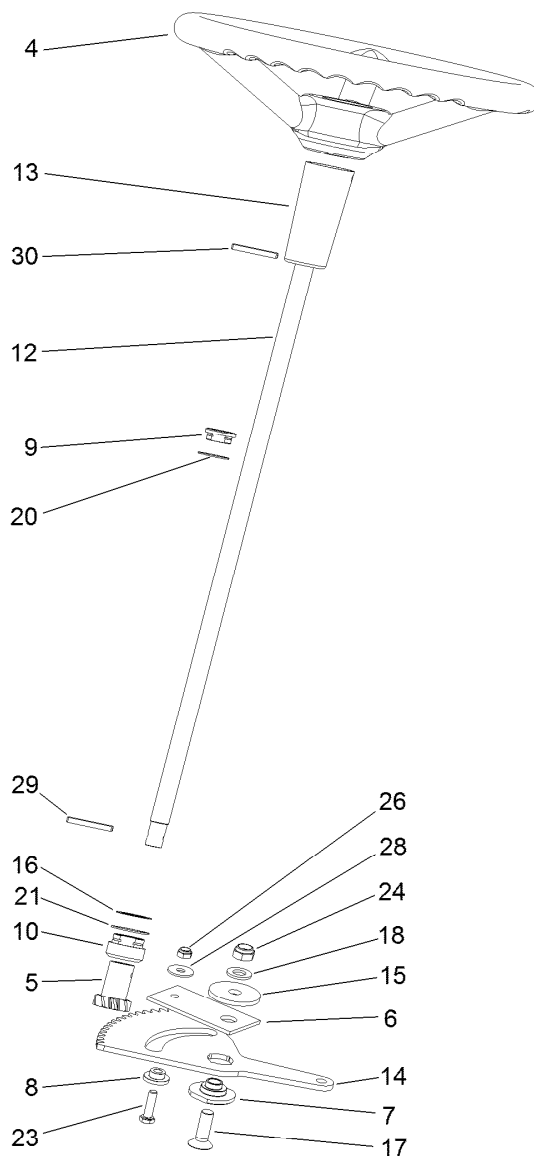

## Steering Assembly

| Ref. | Part Number | Qty. | Description     |
|------|-------------|------|-----------------|
| 4    | 125-2237    | 1    | Wheel-Steering  |
| 5    | 125-2231    | 1    | Pinion-Steering |
| 6    | 125-2225    | 1    | Plate-Steering  |
| 7    | 125-2230    | 1    | Pivot-Steering  |
| 8    | 125-2226    | 1    | Bushing-Sector  |
| 9    | 125-2224    | 2    | Bearing         |
| 10   | 125-2227    | 1    | Bushing-Pinion  |
| 12   | 125-2228    | 1    | Shaft-Steering  |
| 13   | 125-2238    | 1    | Cover           |
| 14   | 119-5374    | 1    | Gear-Sector     |
| 15   | 108-8892    | 1    | Washer          |

| Ref. | Part Number | Qty. | Description  |
|------|-------------|------|--------------|
| 16   | 125-2235    | 1    | Washer       |
| 17   | 125-2232    | 1    | Screw        |
| 18   | 104-3124    | 1    | Washer-Flat  |
| 20   | 125-2236    | 1    | Ring-Locking |
| 21   | 125-2234    | 1    | Ring-Locking |
| 23   | 33114-030   | 1    | Screw-HH     |
| 24   | 33016-00    | 1    | Nut-Hex      |
| 26   | 33024-00    | 1    | Nut-Lock, NI |
| 28   | 104-2946    | 1    | Washer-Plain |
| 29   | 125-2233    | 1    | Pin-Spiral   |
| 30   | 119-5377    | 1    | Pin-Spirol   |

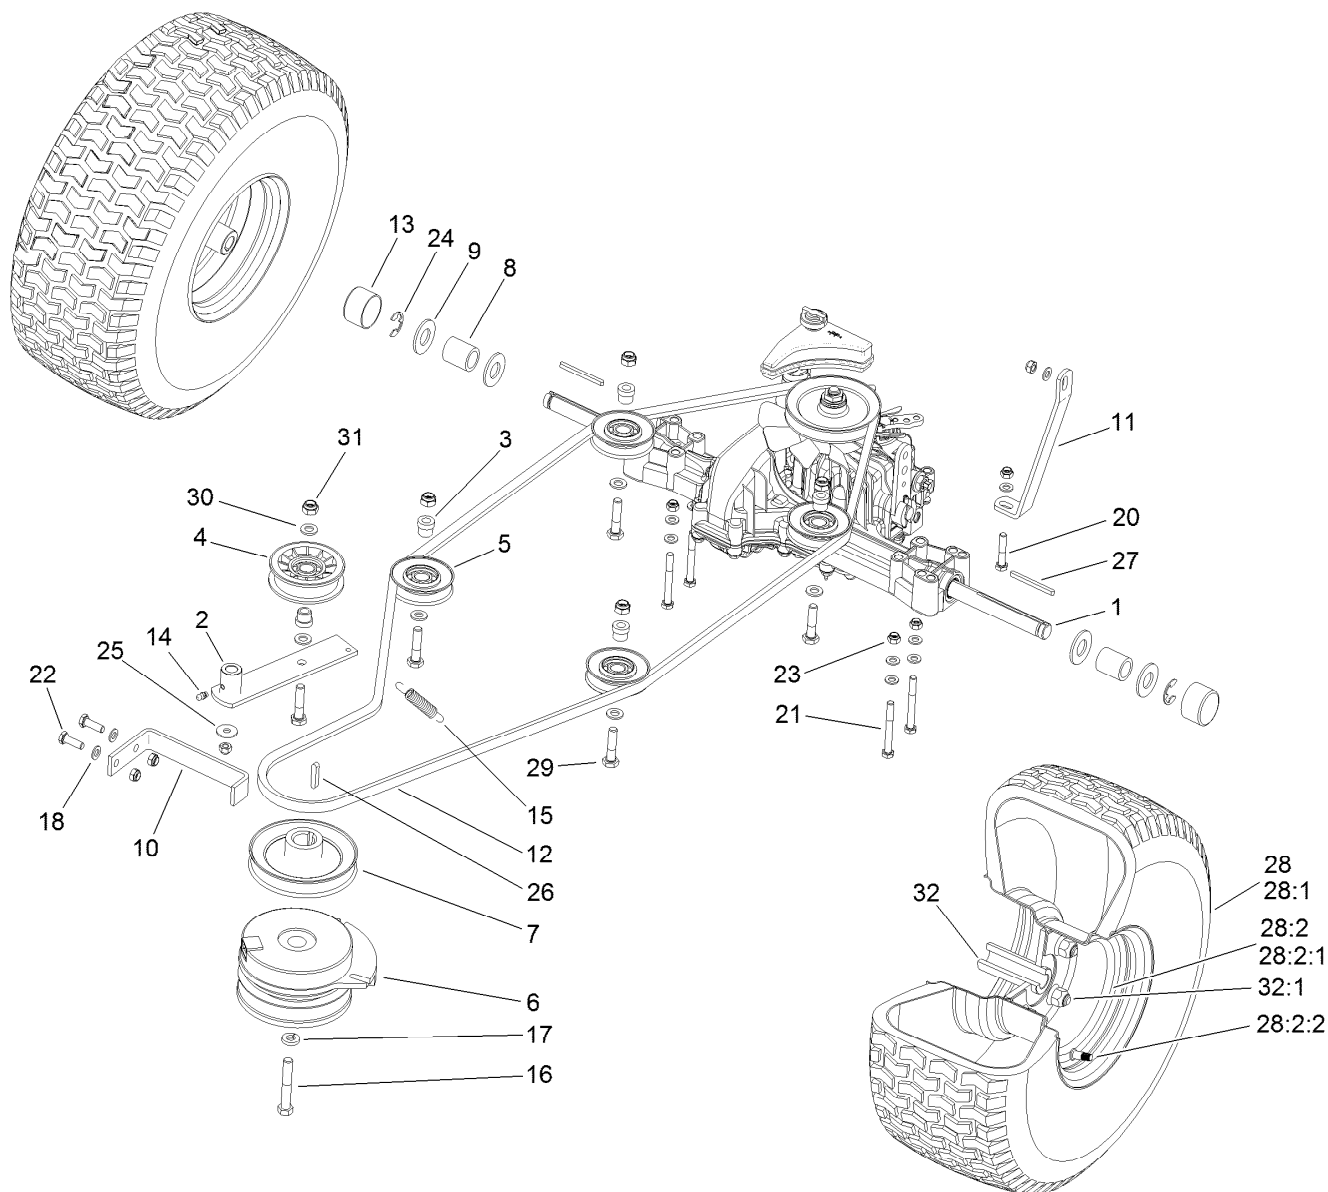


## Transmission Drive Assembly

| Ref. | Part Number | Qty. | Description               |
|------|-------------|------|---------------------------|
| 1    | 114-3155    | 1    | Transmission              |
| 2    | 125-2239    | 1    | Arm-Idler                 |
| 3    | 104-2896    | 5    | Bushing-Idler             |
| 4    | 104-2913    | 1    | Pulley-Idler              |
| 5    | 104-2887    | 4    | Pulley-Idler              |
| 6    | 119-5501    | 1    | Clutch-Electric           |
| 7    | 104-2911    | 1    | Pulley-Engine             |
| 8    | 104-2895    | 2    | Spacer-Axle               |
| 9    | 120-8739    | 4    | Washer                    |
| 10   | 125-2240    | 1    | Retainer                  |
| 11   | 125-2241    | 1    | Stabilizer                |
| 12   | 125-2243    | 1    | V-Belt, Traction          |
| 13   | 104-2857    | 2    | Cap-Hub                   |
| 14   | 104-2904    | 1    | Fitting-Grease            |
| 15   | 104-2897    | 1    | Spring                    |
| 16   | 3212-10     | 1    | Screw-HH                  |
| 17   | 93-9043     | 1    | Washer-Spring, Belleville |
| 18   | 106-4756    | 12   | Washer-Plain              |

| Ref.   | Part Number | Qty. | Description        |
|--------|-------------|------|--------------------|
| 20     | 33114-040   | 1    | Screw-HH           |
| 21     | 125-2242    | 4    | Screw              |
| 22     | 33114-025   | 2    | Screw-HH           |
| 23     | 33024-00    | 9    | Nut-Lock, NI       |
| 24     | 104-2891    | 2    | Clip-Spring        |
| 25     | 104-2946    | 1    | Washer-Plain       |
| 26     | 104-2899    | 1    | Key-Square         |
| 27     | 104-2892    | 2    | Key-Square         |
| 28     | 107-8929    | 2    | Tire And Wheel ASM |
| 28:1   | 99-2994     | 1    | Tire               |
| 28:2   | 107-8932    | 1    | Wheel ASM          |
| 28:2:1 |             | 1    | Rim ●              |
| 28:2:2 | 106-8596    | 1    | Valve-Tire         |
| 29     | 33115-040   | 5    | Screw-HH           |
| 30     | 33095-00    | 6    | Washer-Flat        |
| 31     | 33023-00    | 5    | Nut-Lock           |
| 32     | 108-8718    | 2    | Hub-Wheel          |
| 32:1   | 108-8717    | 4    | Nut-Lug            |

● Not serviced separately




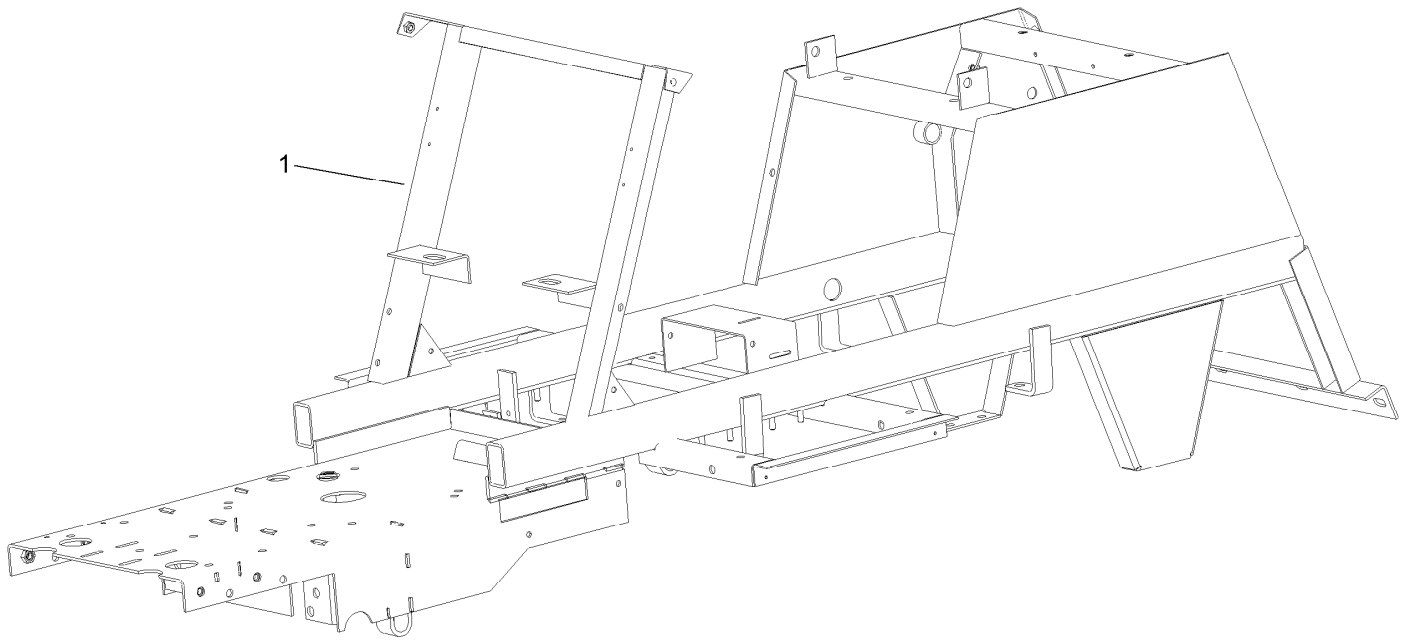

## Frame Assembly

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 125-2200           | 1           | Chassis-Frame      |


Mower Lift Assembly

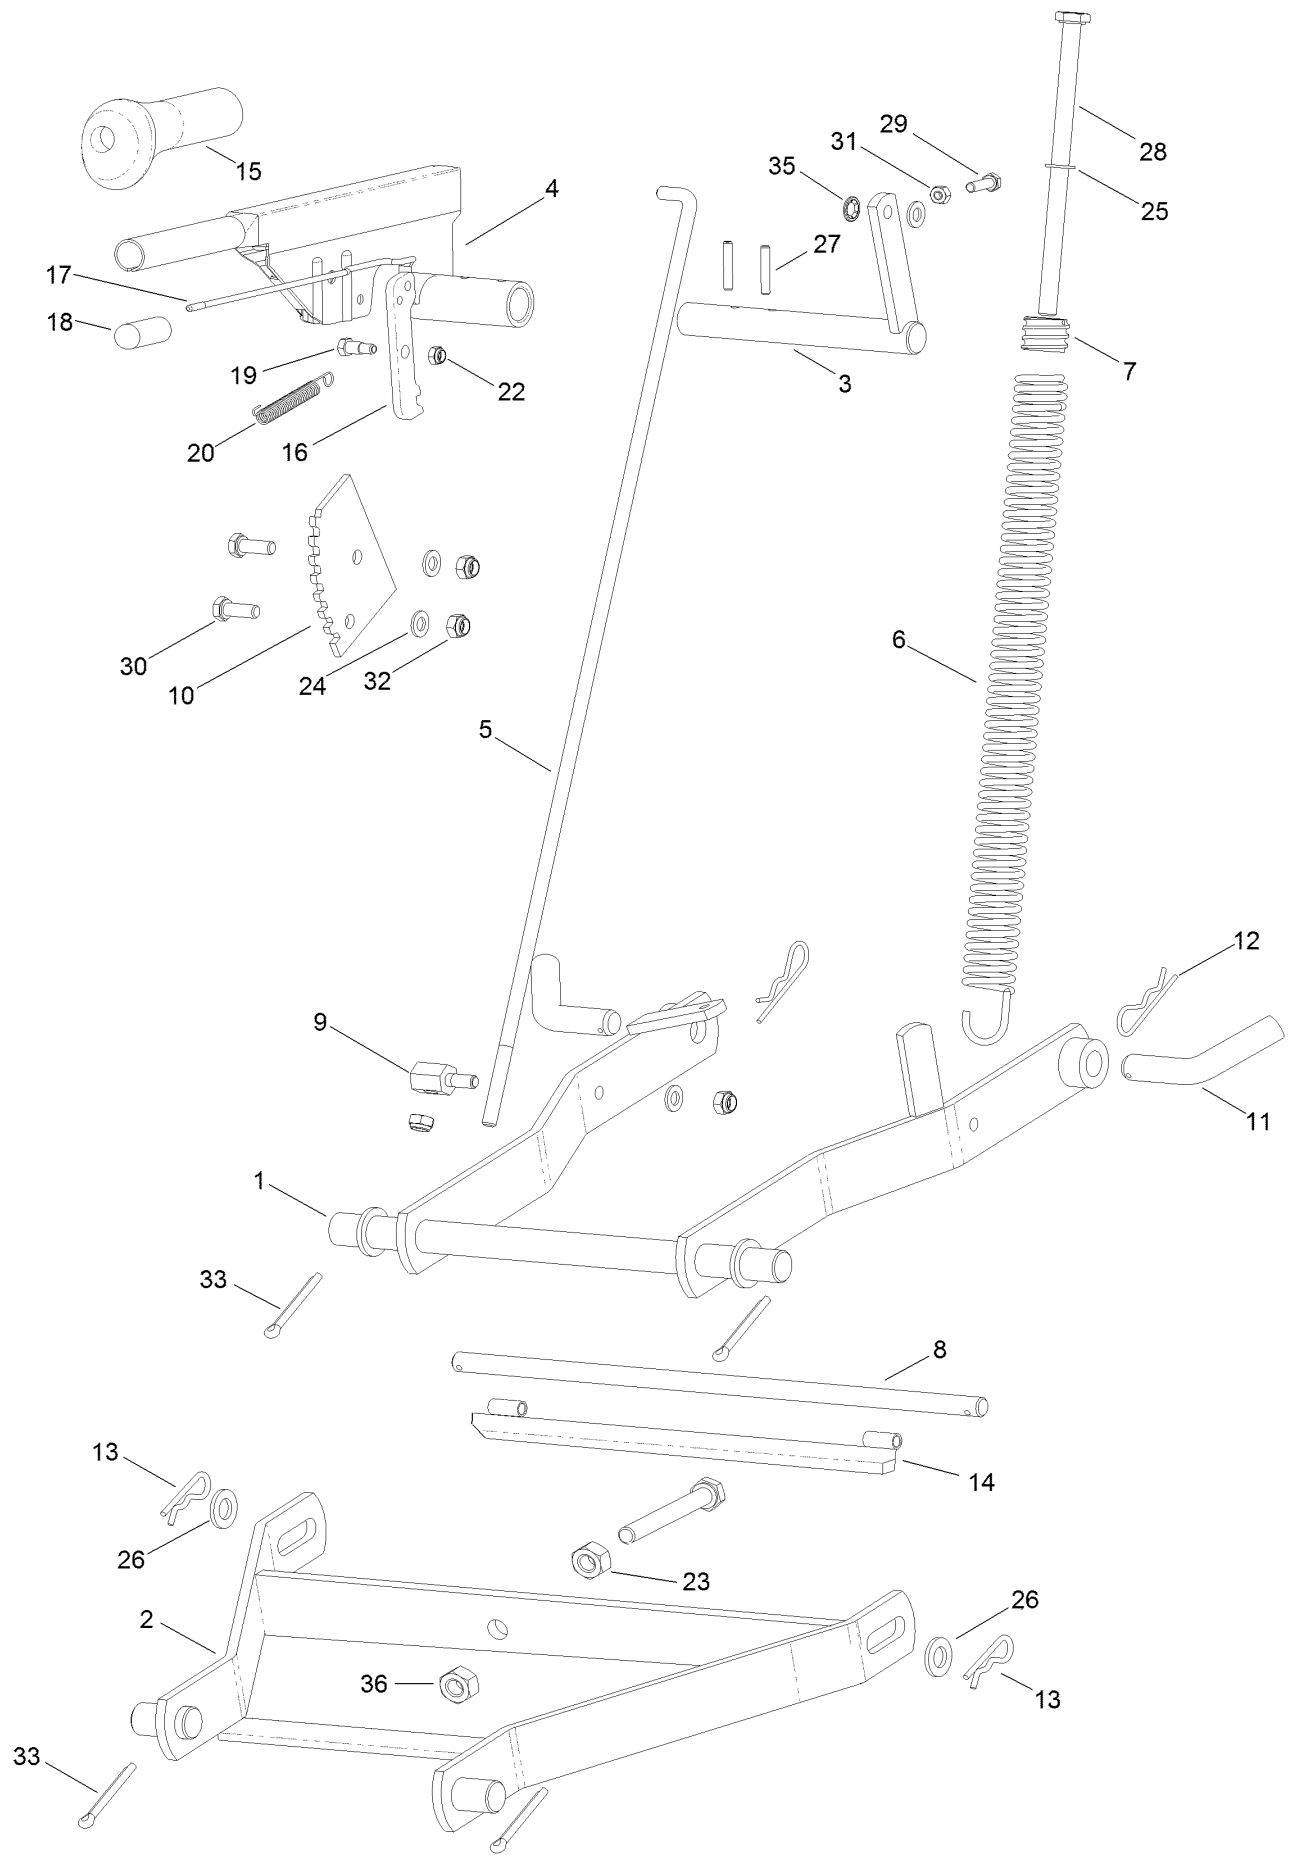

## Mower Lift Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>              | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|---------------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 111-6846           | 1           | Suspension-Deck, Mower          | 18          | 104-3131           | 1           | Button-Plunger     |
| 2           | 111-6847           | 1           | Suspension-Mower Deck,<br>Front | 19          | 125-2250           | 1           | Screw-Lever        |
| 3           | 125-2251           | 1           | Shaft-Adjustment, Height        | 20          | 104-3134           | 1           | Spring             |
| 4           | 125-2249           | 1           | Lever-Arm, Height Adjust        | 22          | 33023-00           | 1           | Nut-Lock           |
| 5           | 125-2252           | 1           | Rod-Adjustment, Height          | 23          | 33016-00           | 1           | Nut-Hex            |
| 6           | 125-2254           | 1           | Spring                          | 24          | 106-4756           | 3           | Washer-Plain       |
| 7           | 125-2255           | 1           | Nut-Spring                      | 25          | 108-8709           | 1           | Washer-Flat        |
| 8           | 111-6849           | 1           | Shaft                           | 26          | 104-3124           | 2           | Washer-Flat        |
| 9           | 119-5407           | 1           | Trunnion                        | 27          | 104-2994           | 2           | Pin-Spring         |
| 10          | 104-3133           | 1           | Segment-Gear                    | 28          | 125-2253           | 1           | Screw M10X180      |
| 11          | 120-8757           | 2           | Pin-Bent                        | 29          | 33113-016          | 1           | Screw-HH           |
| 12          | 104-3144           | 2           | Pin-Hair                        | 30          | 33114-020          | 2           | Screw-HH           |
| 13          | 104-3148           | 2           | Pin-Hair                        | 31          | 104-2991           | 1           | Nut-Hex            |
| 14          | 111-6848           | 1           | Holder-Front                    | 32          | 33024-00           | 4           | Nut-Lock, NI       |
| 15          | 104-3129           | 1           | Grip-Handle                     | 33          | 125-2256           | 4           | Pin-Cotter         |
| 16          | 104-3130           | 1           | Ratchet-Plate, Pivot            | 35          | 121-0963           | 1           | Washer             |
| 17          | 104-3132           | 1           | Rod-Connection                  | 36          | 48-9540            | 1           | Nut-Lock, Hex NI   |

Cutting Drive System Assembly No. 111-6850

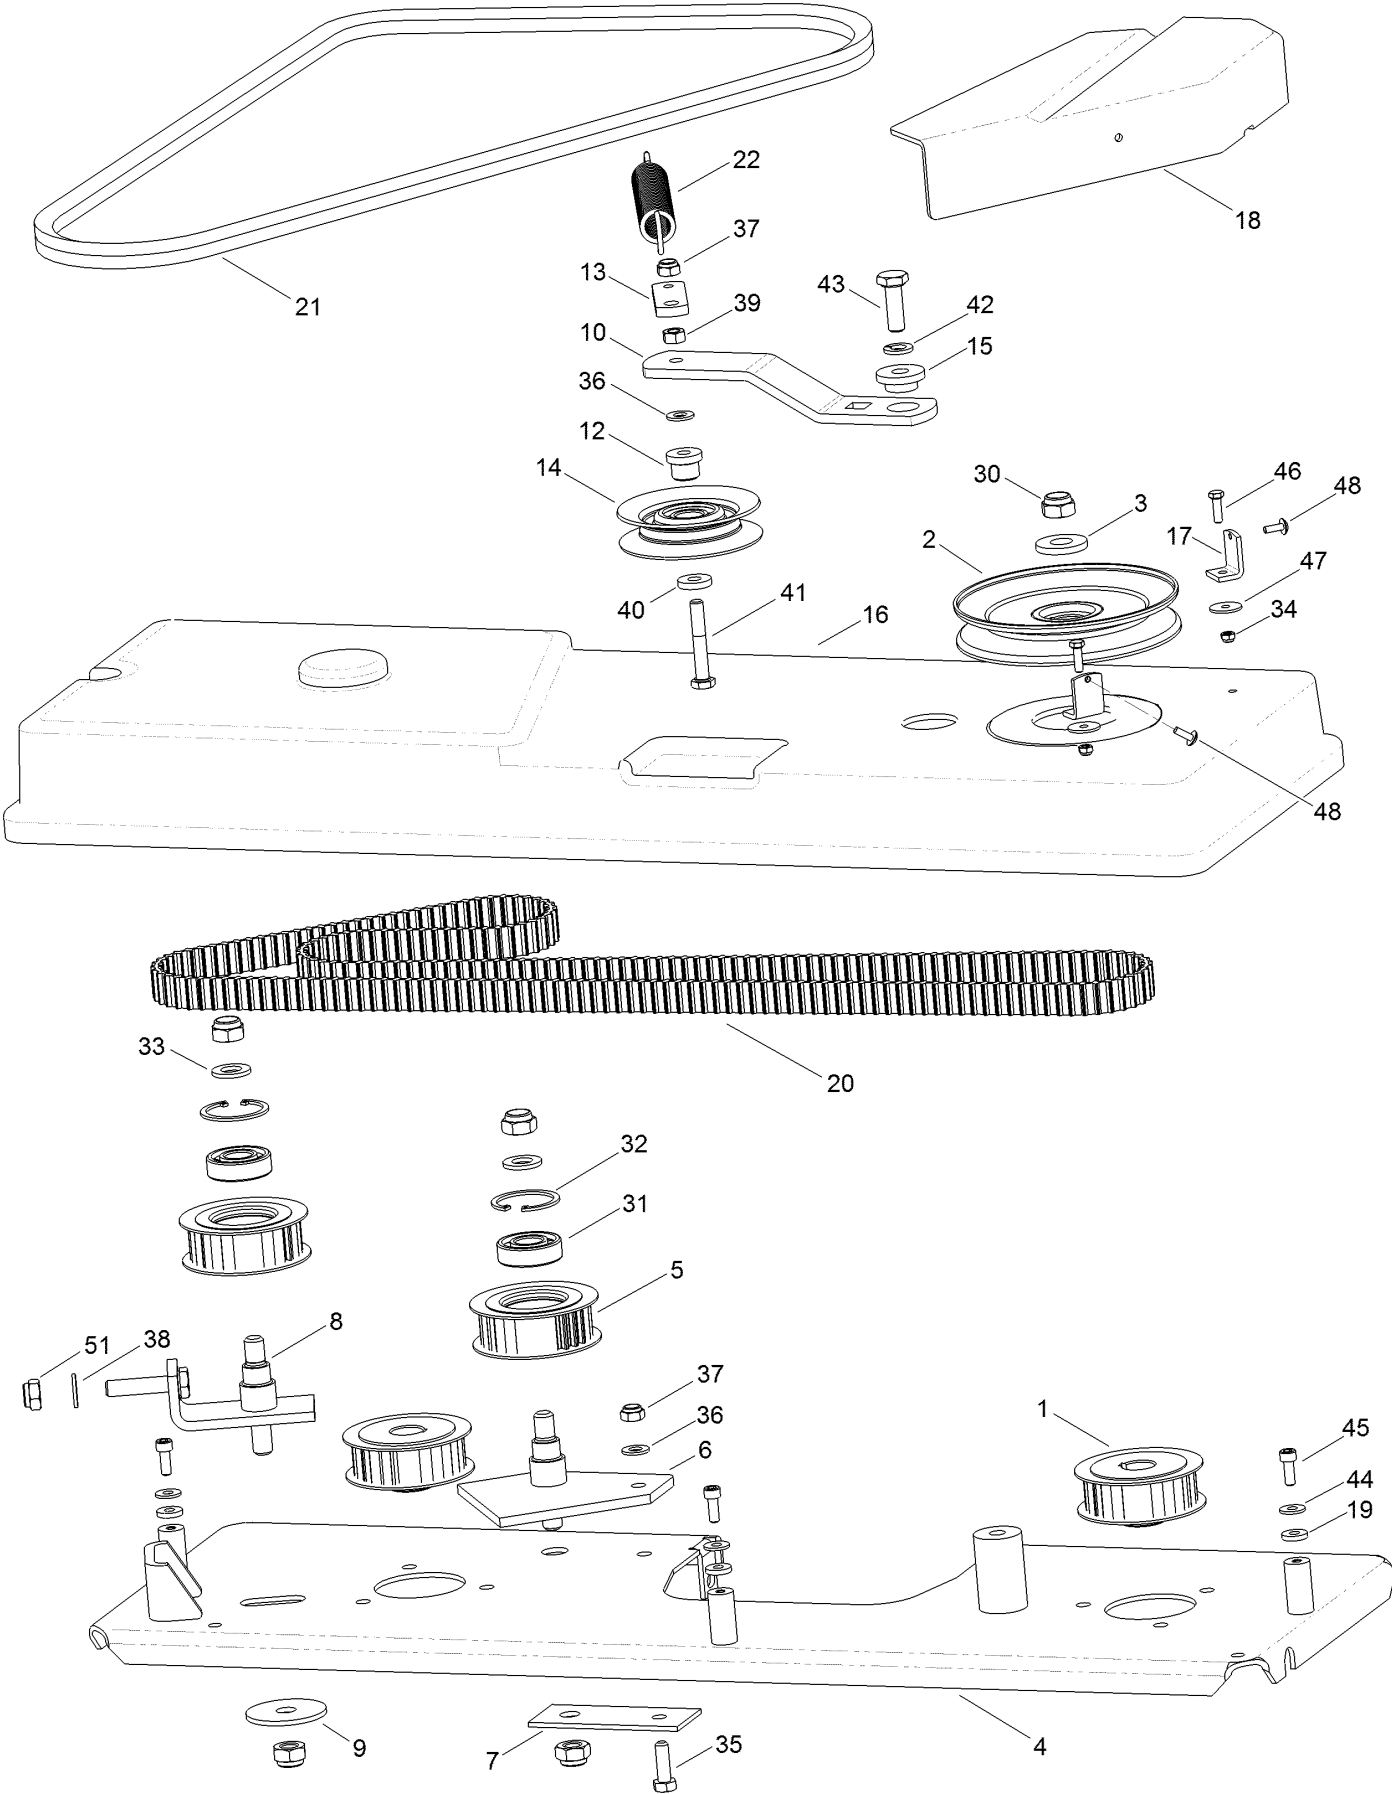


# Cutting Drive System Assembly No. 111-6850 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 104-3116           | 2           | Pulley-Cog, Drive  | 30          | 48-9540            | 6           | Nut-Lock, Hex NI   |
| 2           | 125-2263           | 1           | Pulley-Drive       | 31          | 100-1048           | 2           | Bearing-Ball       |
| 3           | 33099-00           | 2           | Washer-Flat        | 32          | 104-3123           | 2           | Ring-Locking       |
| 4           | 107-8996           | 1           | Plate-Drive, Blade | 33          | 104-3124           | 2           | Washer-Flat        |
| 5           | 104-3121           | 2           | Pulley-Cog         | 34          | 87-5140            | 2           | Nut-Lock           |
| 6           | 125-2264           | 1           | Bracket-Idler      | 35          | 33114-025          | 1           | Screw-HH           |
| 7           | 104-3117           | 1           | Plate-Anchor       | 36          | 106-4756           | 2           | Washer-Plain       |
| 8           | 125-2265           | 1           | Bracket-Idler      | 37          | 33024-00           | 2           | Nut-Lock, NI       |
| 9           | 103-8892           | 1           | Washer             | 38          | 33095-00           | 1           | Washer-Flat        |
| 10          | 125-2266           | 1           | Arm-Idler          | 39          | 33014-00           | 1           | Nut-Hex            |
| 12          | 104-3104           | 1           | Bushing            | 40          | 106-8588           | 1           | Washer-Flat        |
| 13          | 125-2185           | 1           | Lever-Engagement   | 41          | 33114-050          | 1           | Screw-HH           |
| 14          | 104-3103           | 1           | Pulley-Idler       | 42          | 125-2269           | 1           | Washer             |
| 15          | 125-2268           | 1           | Shim-Arm, Idler    | 43          | 125-2270           | 1           | Screw              |
| 16          | 106-8589           | 1           | Belt-Cover         | 44          | 106-8568           | 3           | Washer-Flat        |
| 17          | 107-8940           | 2           | Bracket            | 45          | 33113-016          | 3           | Screw-HH           |
| 18          | 107-8941           | 1           | Guard-Belt         | 46          | 107-8918           | 2           | Screw              |
| 19          | 83-7420            | 3           | Washer-Rubber      | 47          | 125-2277           | 2           | Washer             |
| 20          | 106-8591           | 1           | Belt-Cog           | 48          | 111-6851           | 2           | Screw              |
| 21          | 125-2182           | 1           | Belt               | 51          | 33023-00           | 1           | Nut-Lock           |
| 22          | 104-3101           | 1           | Spring             | 52          | 111-6850           | 1           | Cutting Unit ASM ● |

● Not illustrated


# Mower Housing Assembly

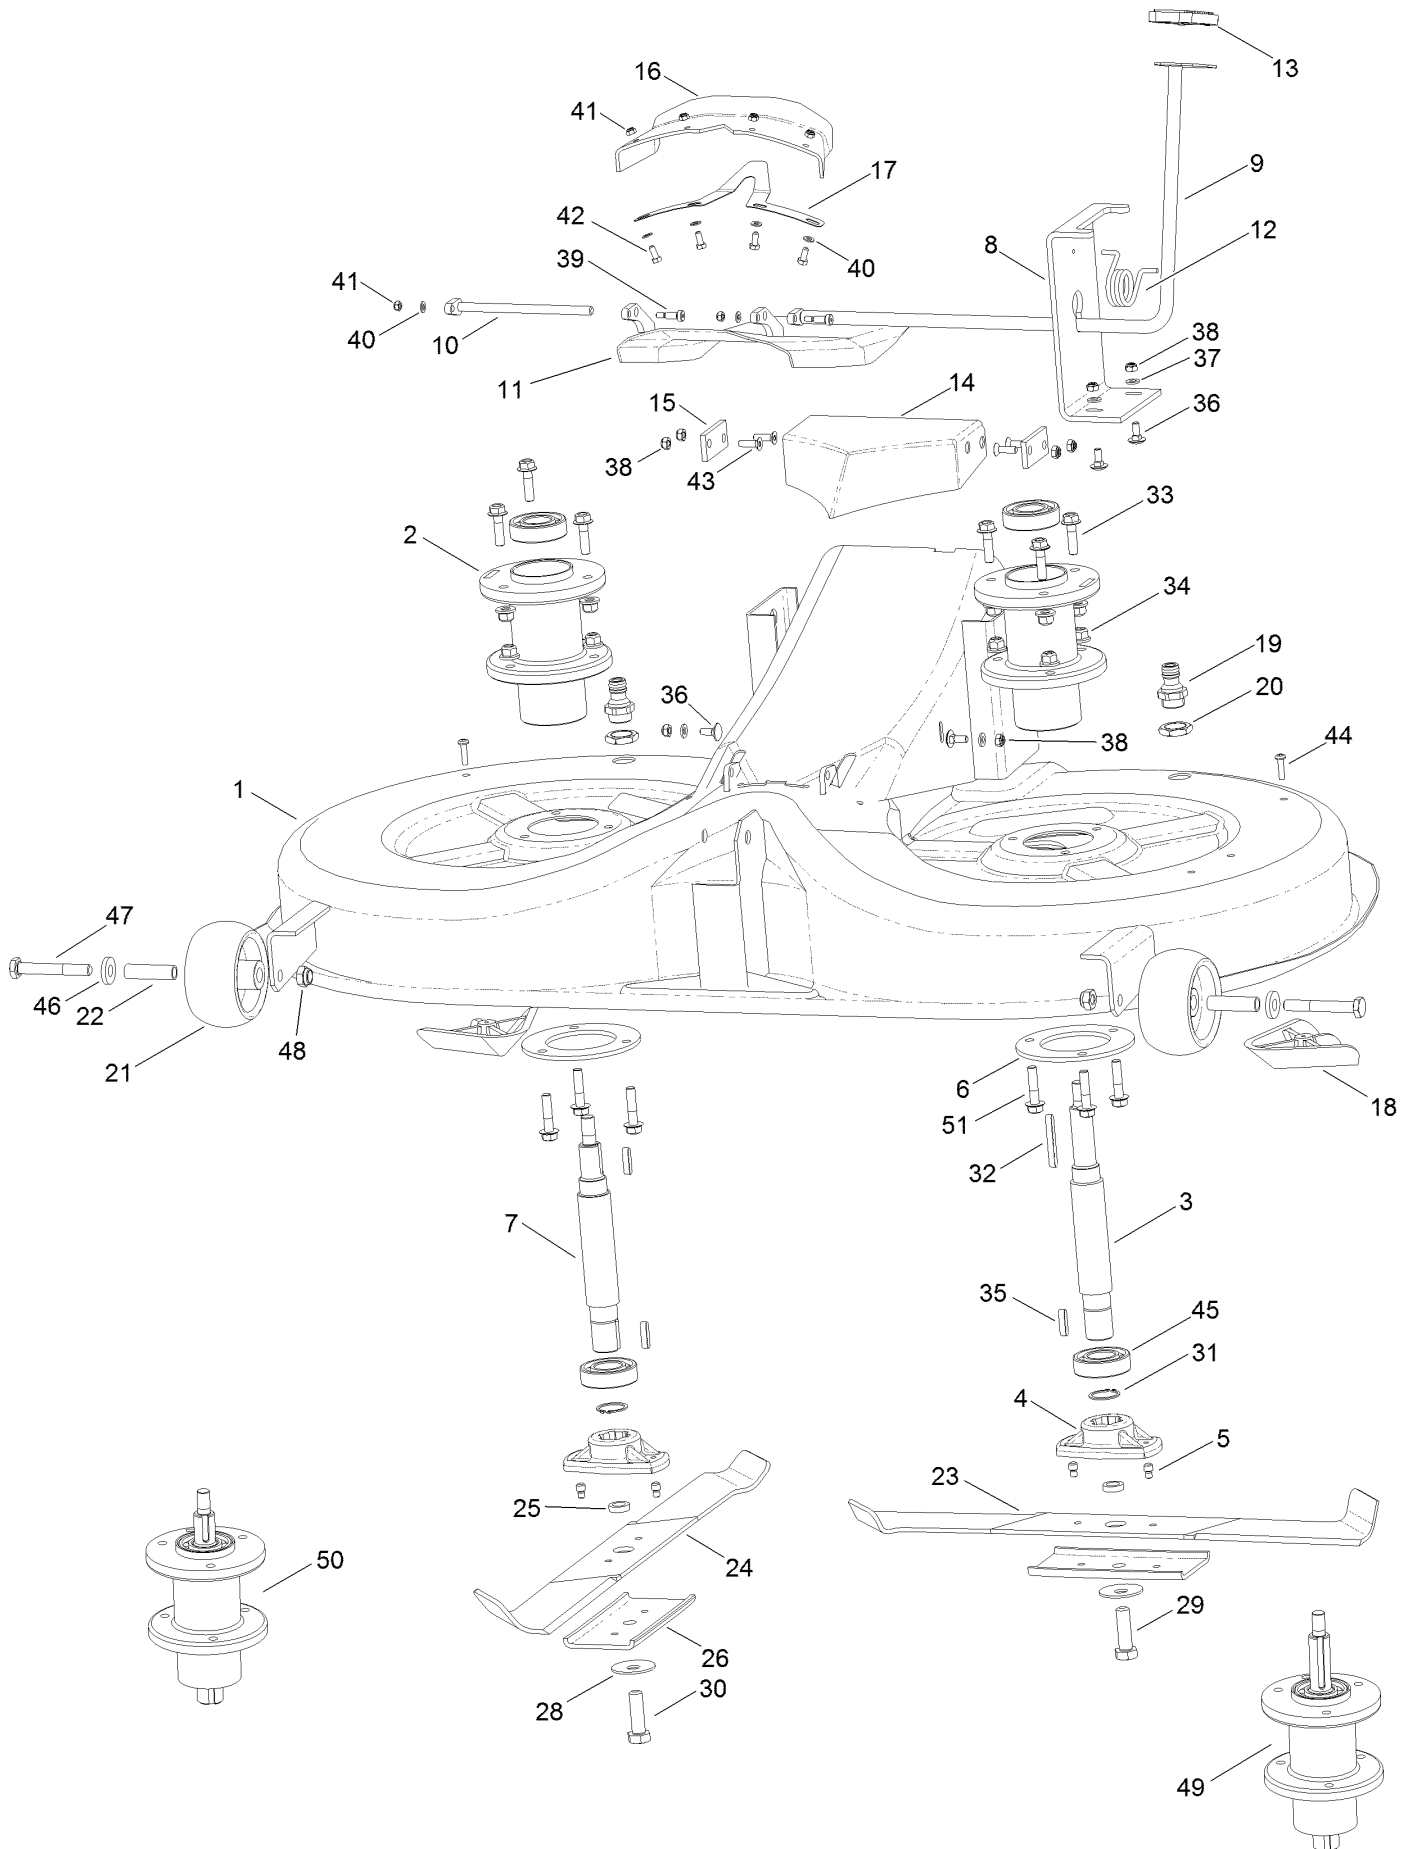

## Mower Housing Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|----------------------|-------------|--------------------|-------------|------------------------|
| 1           | 125-2258           | 1           | Deck ASM With Decals | 26          | 106-6533           | 2           | Stiffener-Blade        |
| 2           | 107-8992           | 2           | Housing-Spindle      | 28          | 106-6532           | 2           | Washer-Blade           |
| 3           | 125-2261           | 1           | Shaft-Blade, Left    | 29          | 106-5797           | 1           | Bolt-HH                |
| 4           | 106-4185           | 2           | Adapter-Blade        | 30          | 106-5798           | 1           | Bolt-Blade, HH         |
| 5           | 104-3093           | 4           | Pin-Shear, Grooved   | 31          | 104-3095           | 2           | Ring-Locking           |
| 6           | 104-3084           | 2           | Support-Ring         | 32          | 125-2262           | 1           | Key                    |
| 7           | 106-8566           | 1           | Shaft-Blade, Right   | 33          | 33104-030          | 6           | Screw-HHF              |
| 8           | 125-2271           | 1           | Holder               | 34          | 104-3082           | 12          | Nut-Lock, HHF          |
| 9           | 125-2272           | 1           | Lever-Foot           | 35          | 104-3097           | 3           | Key-Square             |
| 10          | 106-8585           | 1           | Rod-Door, Mulch      | 36          | 33123-016          | 4           | Screw-CARR             |
| 11          | 107-8968           | 1           | Door-Mulch           | 37          | 104-3193           | 4           | Washer                 |
| 12          | 125-2273           | 1           | Spring               | 38          | 33023-00           | 8           | Nut-Lock               |
| 13          | 104-3018           | 1           | Pad-Pedal            | 39          | 87-5150            | 2           | Bolt                   |
| 14          | 106-8573           | 1           | Baffle-Center        | 40          | 52-6430            | 6           | Washer                 |
| 15          | 106-8572           | 2           | Plate-Baffle, Center | 41          | 87-5140            | 6           | Nut-Lock               |
| 16          | 106-8586           | 1           | Gasket-Door, Mulch   | 42          | 119-5477           | 4           | Screw                  |
| 17          | 106-8567           | 1           | Guide                | 43          | 106-8574           | 4           | Screw                  |
| 18          | 106-8587           | 2           | Kicker               | 44          | 104-1451           | 2           | Screw-TAP, PPH         |
| 19          | 125-2274           | 2           | Connection           | 45          | 116-0720           | 4           | Bearing-Ball           |
| 20          | 125-2275           | 2           | Nut                  | 46          | 108-8709           | 2           | Washer-Flat            |
| 21          | 125-2186           | 2           | Wheel-Gauge          | 47          | 33115-070          | 2           | Screw-HH               |
| 22          | 131-2703           | 2           | Spacer               | 48          | 33023-00           | 2           | Nut-Lock               |
| 23          | 106-8558           | 1           | Blade-LH             | 49          | 125-2259           | 1           | LH Spindle Housing ASM |
| 24          | 106-8557           | 1           | Blade-RH             | 50          | 125-2260           | 1           | RH Spindle Housing ASM |
| 25          | 106-6530           | 2           | Spacer               | 51          | 104-3085           | 6           | Bolt-HHF               |

# Travel Pedals and Brake Assembly

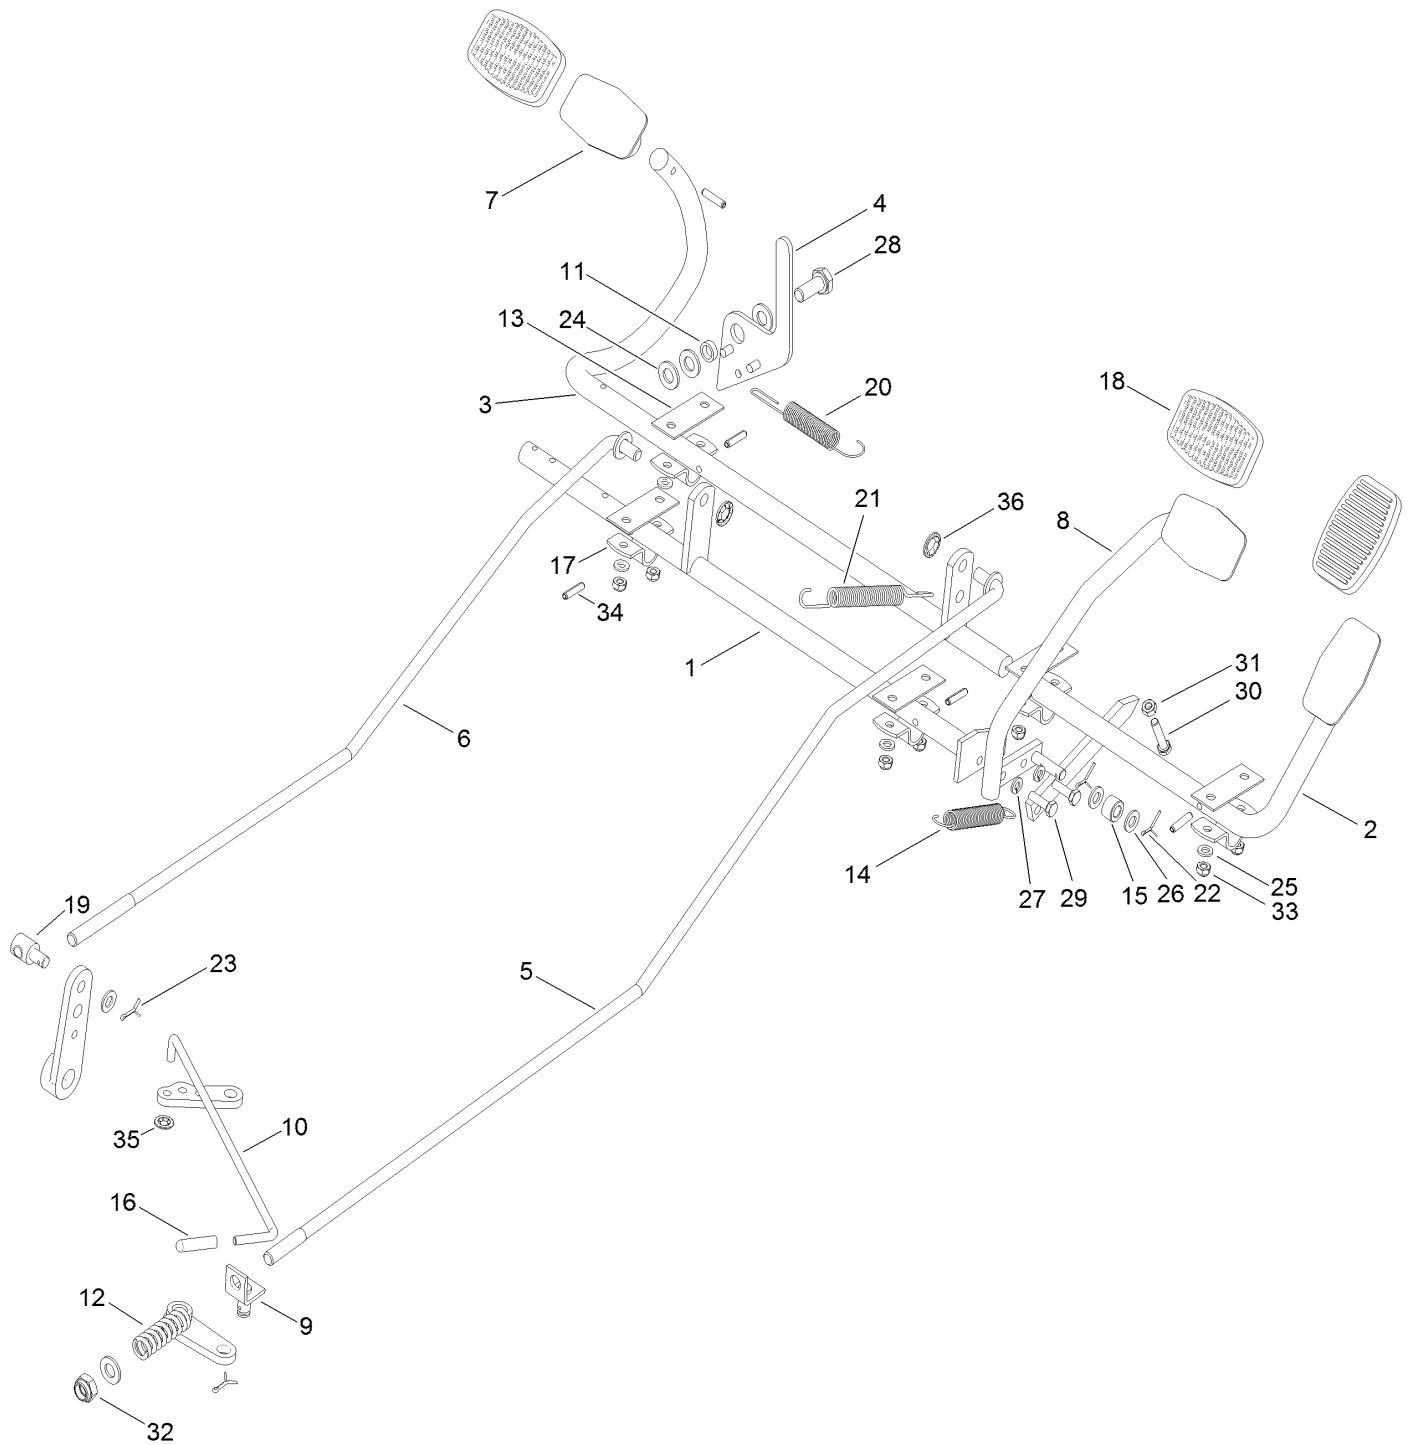




## Travel Pedals and Brake Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|-------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 125-2278           | 1           | Shaft-Diagonal          | 19          | 104-3029           | 1           | Pin                |
| 2           | 125-2279           | 1           | Pedal-Travel, Rear      | 20          | 104-3005           | 1           | Spring-Brake, Hand |
| 3           | 125-2280           | 1           | Pedal-Brake             | 21          | 104-3001           | 1           | Spring             |
| 4           | 125-2282           | 1           | Lever-Brake, Hand       | 22          | 104-3151           | 2           | Pin-Cotter         |
| 5           | 125-2287           | 1           | Rod-Connecting, Brake   | 23          | 104-3027           | 2           | Pin-Cotter         |
| 6           | 125-2286           | 1           | Rod-Tie                 | 24          | 33095-00           | 4           | Washer-Flat        |
| 7           | 120-8763           | 1           | Pedal                   | 25          | 104-3193           | 10          | Washer             |
| 8           | 120-8723           | 1           | Pedal-Travel, Forward   | 26          | 106-4756           | 3           | Washer-Plain       |
| 9           | 104-3011           | 1           | Bracket-Rod, Brake      | 27          | 104-3186           | 2           | Washer-Spring      |
| 10          | 125-2284           | 1           | Rod-Lever, Bypass       | 28          | 104-3041           | 1           | Screw-Hex          |
| 11          | 125-2283           | 1           | Spacer                  | 29          | 33113-016          | 2           | Screw-HH           |
| 12          | 125-2288           | 1           | Spring-Brake            | 30          | 33113-030          | 1           | Screw-HH           |
| 13          | 119-2434           | 5           | Spacer                  | 31          | 104-2991           | 1           | Nut-Hex            |
| 14          | 119-2436           | 1           | Spring                  | 32          | 33025-00           | 1           | Nut-Lock, NI       |
| 15          | 106-8581           | 1           | Roller                  | 33          | 33023-00           | 10          | Nut-Lock           |
| 16          | 108-8708           | 1           | Cap-Bypass Lever, Hydro | 34          | 104-3008           | 5           | Pin-Spring         |
| 17          | 119-2433           | 5           | Clamp                   | 35          | 125-2285           | 1           | Ring-Locking       |
| 18          | 104-3018           | 3           | Pad-Pedal               | 36          | 125-2281           | 2           | Ring-Locking       |


# Battery and Electrical Assembly

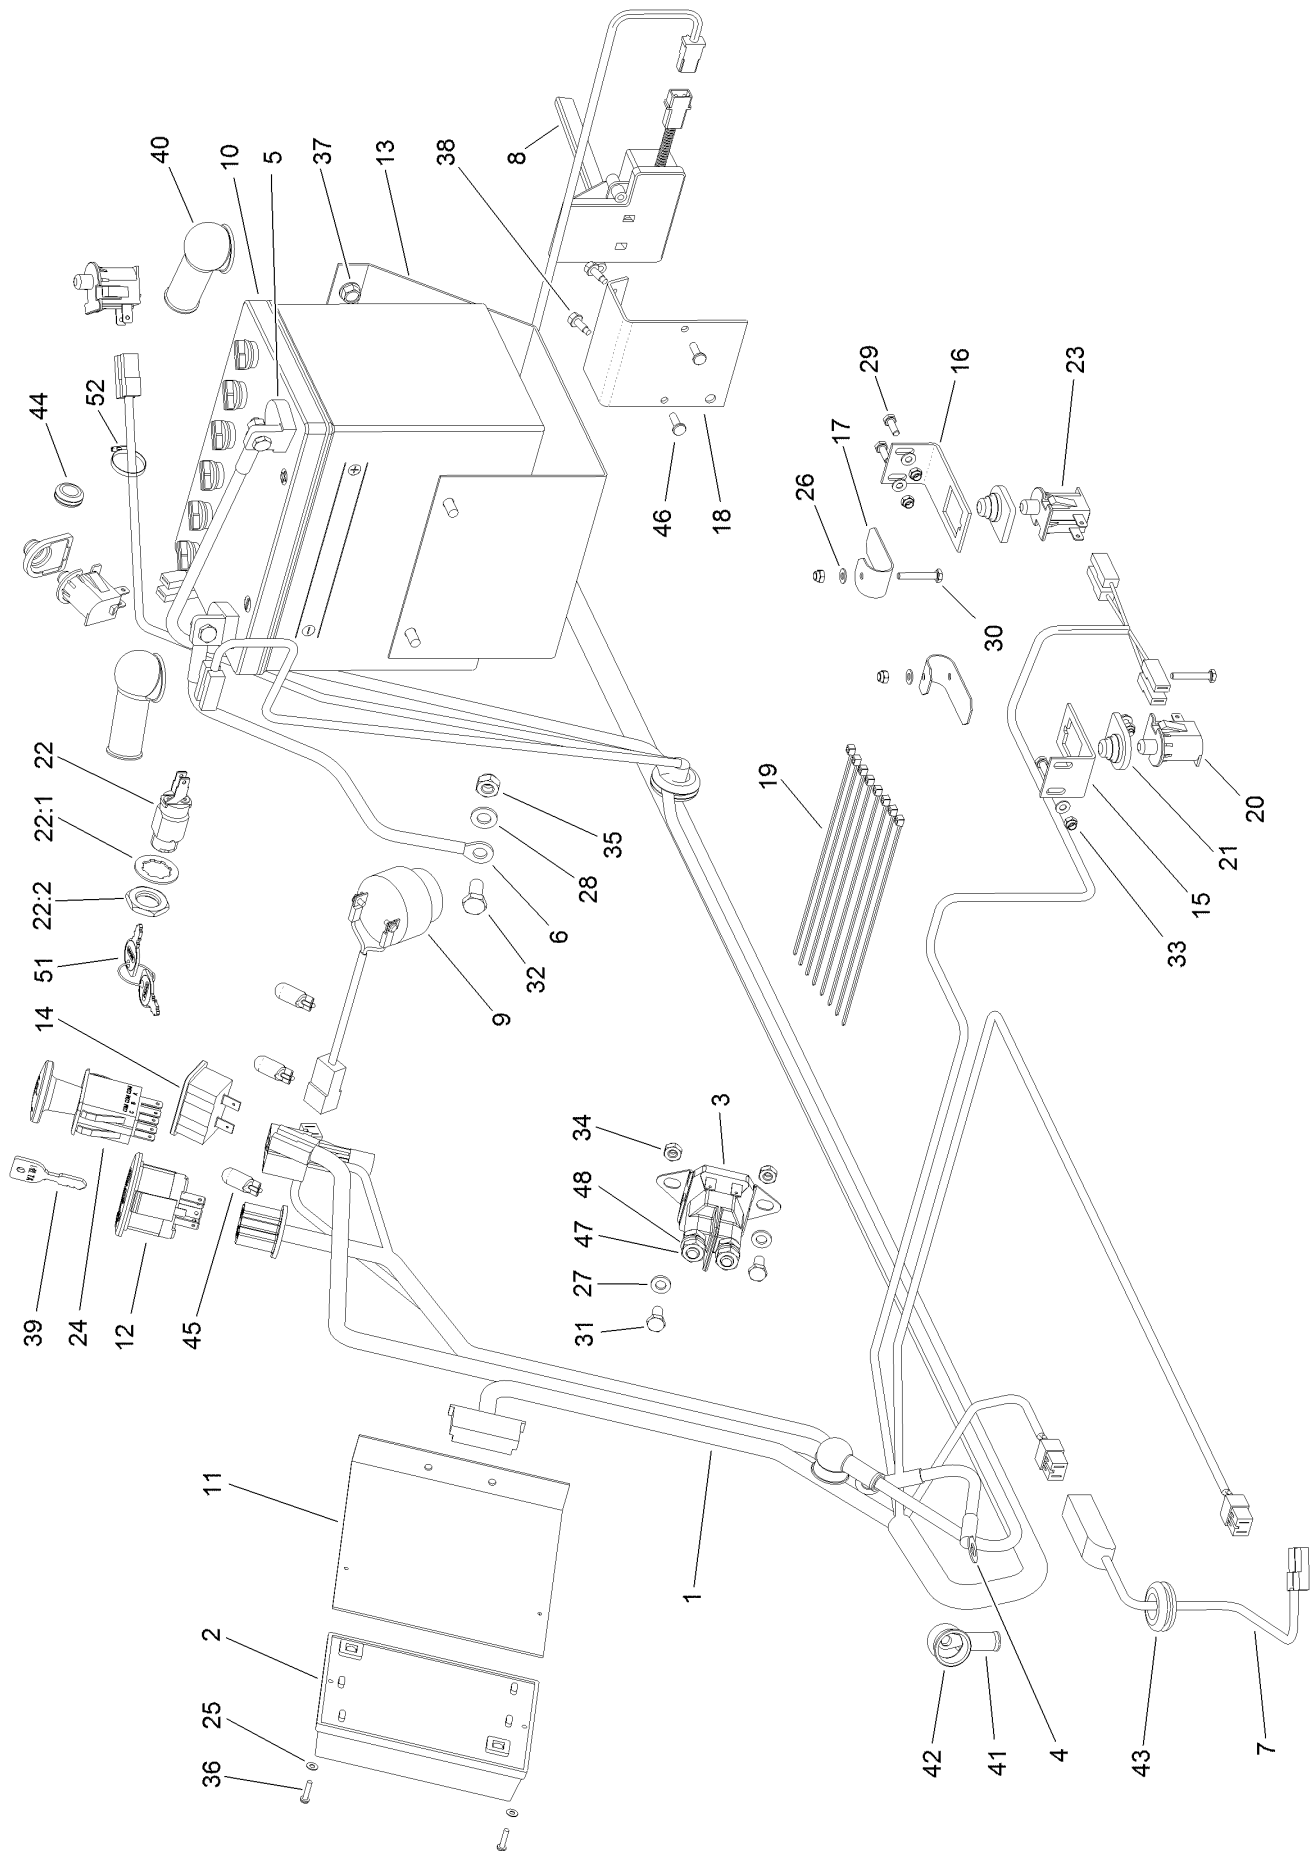

## Battery and Electrical Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|-------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 125-2289           | 1           | Harness-Wiring          | 25          | 119-5437           | 2           | Washer             |
| 2           | 125-2294           | 1           | Module-Control          | 26          | 104-2984           | 6           | Washer             |
| 3           | 740207             | 1           | Solenoid                | 27          | 104-3193           | 2           | Washer             |
| 4           | 125-2300           | 1           | Cable-Starter           | 28          | 33094-00           | 1           | Washer-Plain       |
| 5           | 120-8729           | 1           | Cable-Battery, Positive | 29          | 125-2304           | 4           | Screw              |
| 6           | 119-5417           | 1           | Cable-Battery, Negative | 30          | 104-3009           | 2           | Screw-Hex          |
| 7           | 119-5430           | 1           | Harness-Clutch          | 31          | 33113-012          | 2           | Screw-HH           |
| 8           | 104-3074           | 1           | Overload Switch ASM     | 32          | 33114-016          | 1           | Screw-HH           |
| 9           | 119-5511           | 1           | Buzzer                  | 33          | 104-2985           | 6           | Nut-Hex            |
| 10          | 104-3152           | 1           | Battery-12V             | 34          | 33023-00           | 2           | Nut-Lock           |
| 11          | 125-2293           | 1           | Holder-Module           | 35          | 33024-00           | 1           | Nut-Lock, NI       |
| 12          | 125-2295           | 1           | Switch-Ignition         | 36          | 119-5436           | 2           | Screw              |
| 13          | 125-2290           | 1           | Holder-Battery          | 37          | 106-5763           | 4           | Screw              |
| 14          | 125-2296           | 1           | Hourmeter               | 38          | 104-2977           | 2           | Screw-TAP          |
| 15          | 125-2291           | 1           | Holder                  | 39          | 119-5510           | 2           | Key-Ignition       |
| 16          | 125-2292           | 1           | Holder                  | 40          | 104-3154           | 2           | Boot-Rubber        |
| 17          | 125-2305           | 2           | Lever-Spring            | 41          | 104-3187           | 2           | Boot-Rubber        |
| 18          | 119-5431           | 1           | Bracket-Switch          | 42          | 32128-32           | 1           | Nut-HHF            |
| 19          | 3334-945           | 8           | Tie-Cable               | 43          | 125-2302           | 3           | Bushing            |
| 20          | 104-3179           | 3           | Switch-Delta            | 44          | 125-2303           | 1           | Bushing            |
| 21          | 104-3178           | 3           | Cover-Protective        | 45          | 104-3176           | 4           | Bulb               |
| 22          | 46-5780            | 1           | Starter Switch ASM      | 46          | 104-3349           | 2           | Screw              |
| 22:1        | 3254-5             | 1           | Washer-Tooth, Internal  | 47          | 32128-32           | 4           | Nut-HHF            |
| 22:2        | 218-461            | 1           | Nut-HH                  | 48          | 104-2927           | 2           | Washer-Spring      |
| 23          | 125-2298           | 1           | Switch-Delta            | 51          | 62-7770            | 2           | Key-Ignition       |
| 24          | 103-5221           | 1           | Switch-PTO              | 52          | 104-3157           | 1           | Clip-Snap          |


# Body and Hood Assembly

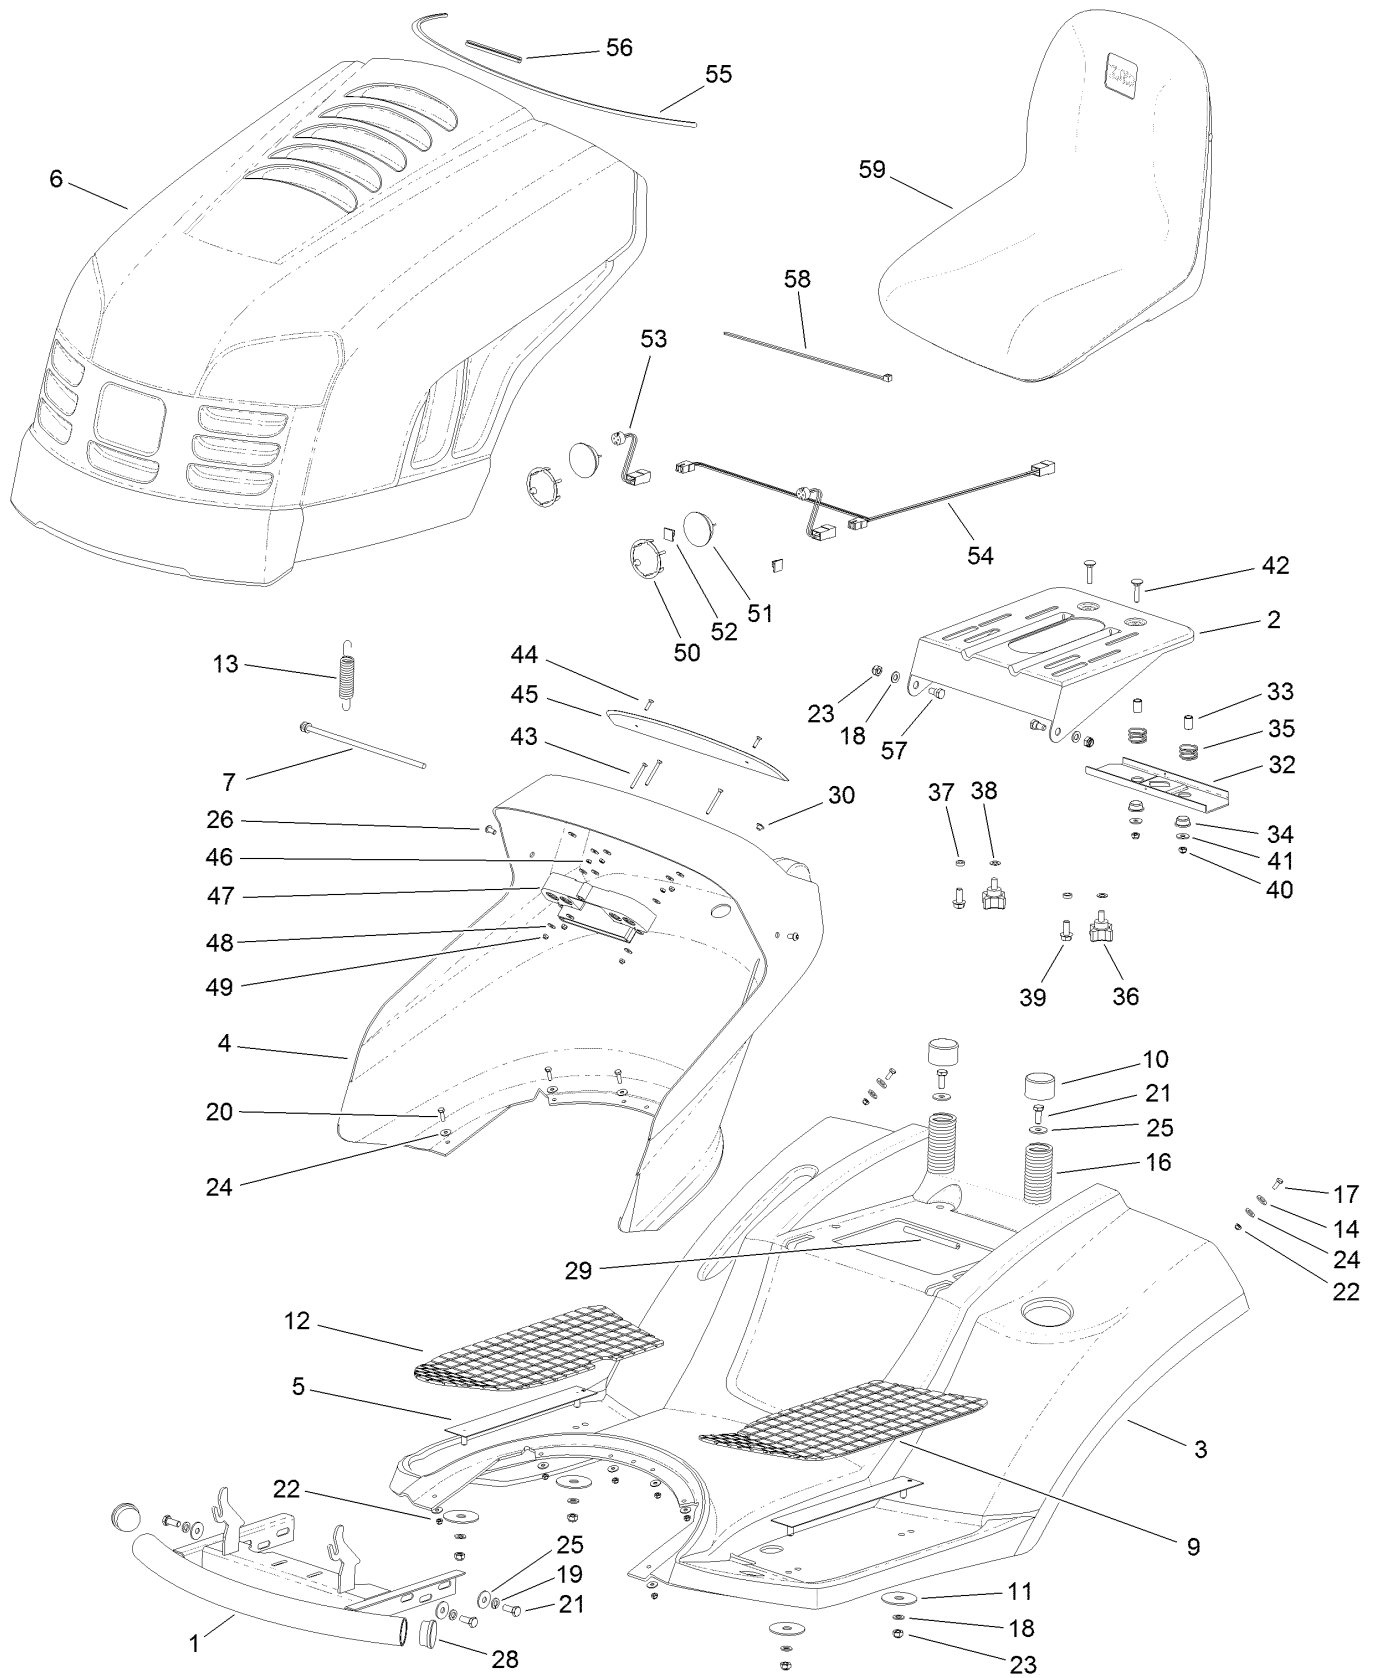

## Body and Hood Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|----------------------------|
| 1           | 125-2320           | 1           | Bumper                | 33          | 104-2933           | 2           | Spacer-Split               |
| 2           | 119-5513           | 1           | Bracket-Support, Seat | 34          | 104-2935           | 2           | Bushing                    |
| 3           | 125-2306           | 1           | Fender-Rear           | 35          | 119-5514           | 2           | Seat-Spring                |
| 4           | 125-2307           | 1           | Panel-Dash            | 36          | 119-5456           | 2           | Knob-Adjust                |
| 5           | 125-2321           | 2           | Holder                | 37          | 119-5457           | 2           | Spacer                     |
| 6           | 125-2317           | 1           | Hood ASM              | 38          | 104-2936           | 2           | Washer-Spring              |
| 7           | 125-2324           | 1           | Holder-Spring         | 39          | 104-2939           | 2           | Screw-Support, Seat        |
| 9           | 125-2322           | 1           | Mat-Foot, LH          | 40          | 33023-00           | 2           | Nut-Lock                   |
| 10          | 104-2857           | 2           | Cap-Hub               | 41          | 104-2931           | 2           | Washer-Flat                |
| 11          | 119-5500           | 4           | Washer-Rubber         | 42          | 33123-030          | 2           | Screw-CARR                 |
| 12          | 120-8745           | 1           | Mat-Foot, RH          | 43          | 104-3191           | 3           | Screw                      |
| 13          | 104-2975           | 1           | Spring-Hood           | 44          | 125-2310           | 2           | Screw                      |
| 14          | 104-2952           | 2           | Washer-Rubber         | 45          | 125-2308           | 1           | Lens-Dash                  |
| 16          | 104-2945           | 2           | Spring-Seat           | 46          | 125-2309           | 3           | Nut                        |
| 17          | 104-2980           | 2           | Screw                 | 47          | 92-6732            | 1           | Housing-Light, Indicator   |
| 18          | 33094-00           | 6           | Washer-Plain          | 48          | 104-3175           | 11          | Washer                     |
| 19          | 104-2927           | 4           | Washer-Spring         | 49          | 104-2985           | 5           | Nut-Hex                    |
| 20          | 107-8918           | 6           | Screw                 | 50          | 125-2319           | 2           | Socket-Lamp                |
| 21          | 33114-020          | 6           | Screw-HH              | 51          | 125-2318           | 2           | Bulb-Light                 |
| 22          | 87-5140            | 8           | Nut-Lock              | 52          | 104-3167           | 2           | Clip-Nylon                 |
| 23          | 33024-00           | 6           | Nut-Lock, NI          | 53          | 125-2314           | 2           | Harness-Wiring, Light Bulb |
| 24          | 104-2943           | 14          | Washer-Flat           | 54          | 125-2315           | 1           | Harness-Wiring, Light      |
| 25          | 104-2946           | 6           | Washer-Plain          | 55          | 125-2194           | 1           | Trim-Rubber, Hood          |
| 26          | 33113-012          | 2           | Screw-HH              | 56          | 125-2312           | 1           | Gasket-Foam                |
| 28          | 125-2323           | 2           | Cover                 | 57          | 104-2939           | 2           | Screw-Support, Seat        |
| 29          | 125-2313           | 1           | Trim-Rubber           | 58          | 3334-945           | 1           | Tie-Cable                  |
| 30          | 125-2187           | 1           | Cover                 | 59          | 107-2213           | 1           | Seat ASM                   |
| 32          | 104-2934           | 1           | Bracket               |             |                    |             |                            |


# Tunnel and Collector Plate Assembly

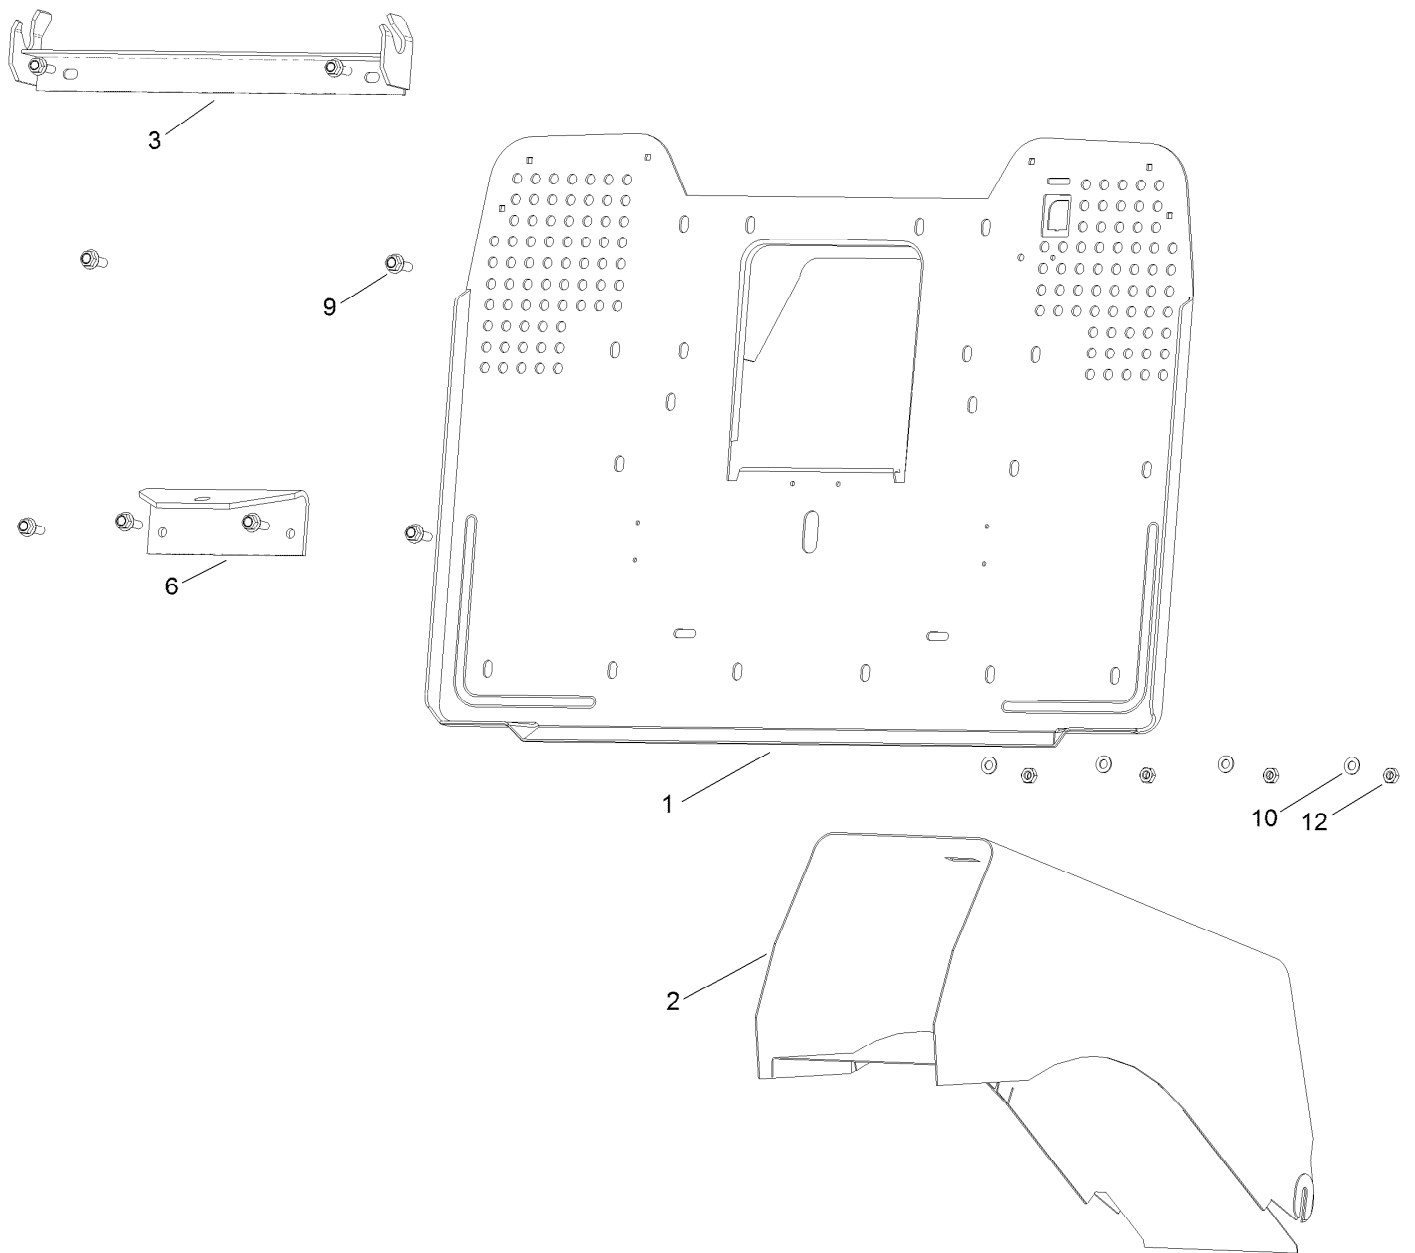

## Tunnel and Collector Plate Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|---------------------|-------------|--------------------|-------------|--------------------|
| 1           | 125-2336           | 1           | Collector Plate ASM | 9           | 119-5483           | 8           | Screw              |
| 2           | 120-8767           | 1           | Tunnel              | 10          | 33094-00           | 4           | Washer-Plain       |
| 3           | 125-2337           | 1           | Support-Collector   | 12          | 33024-00           | 4           | Nut-Lock, NI       |
| 6           | 119-5516           | 1           | Hitch-Tow           |             |                    |             |                    |


# Grass Collector Assembly No. 125-2325

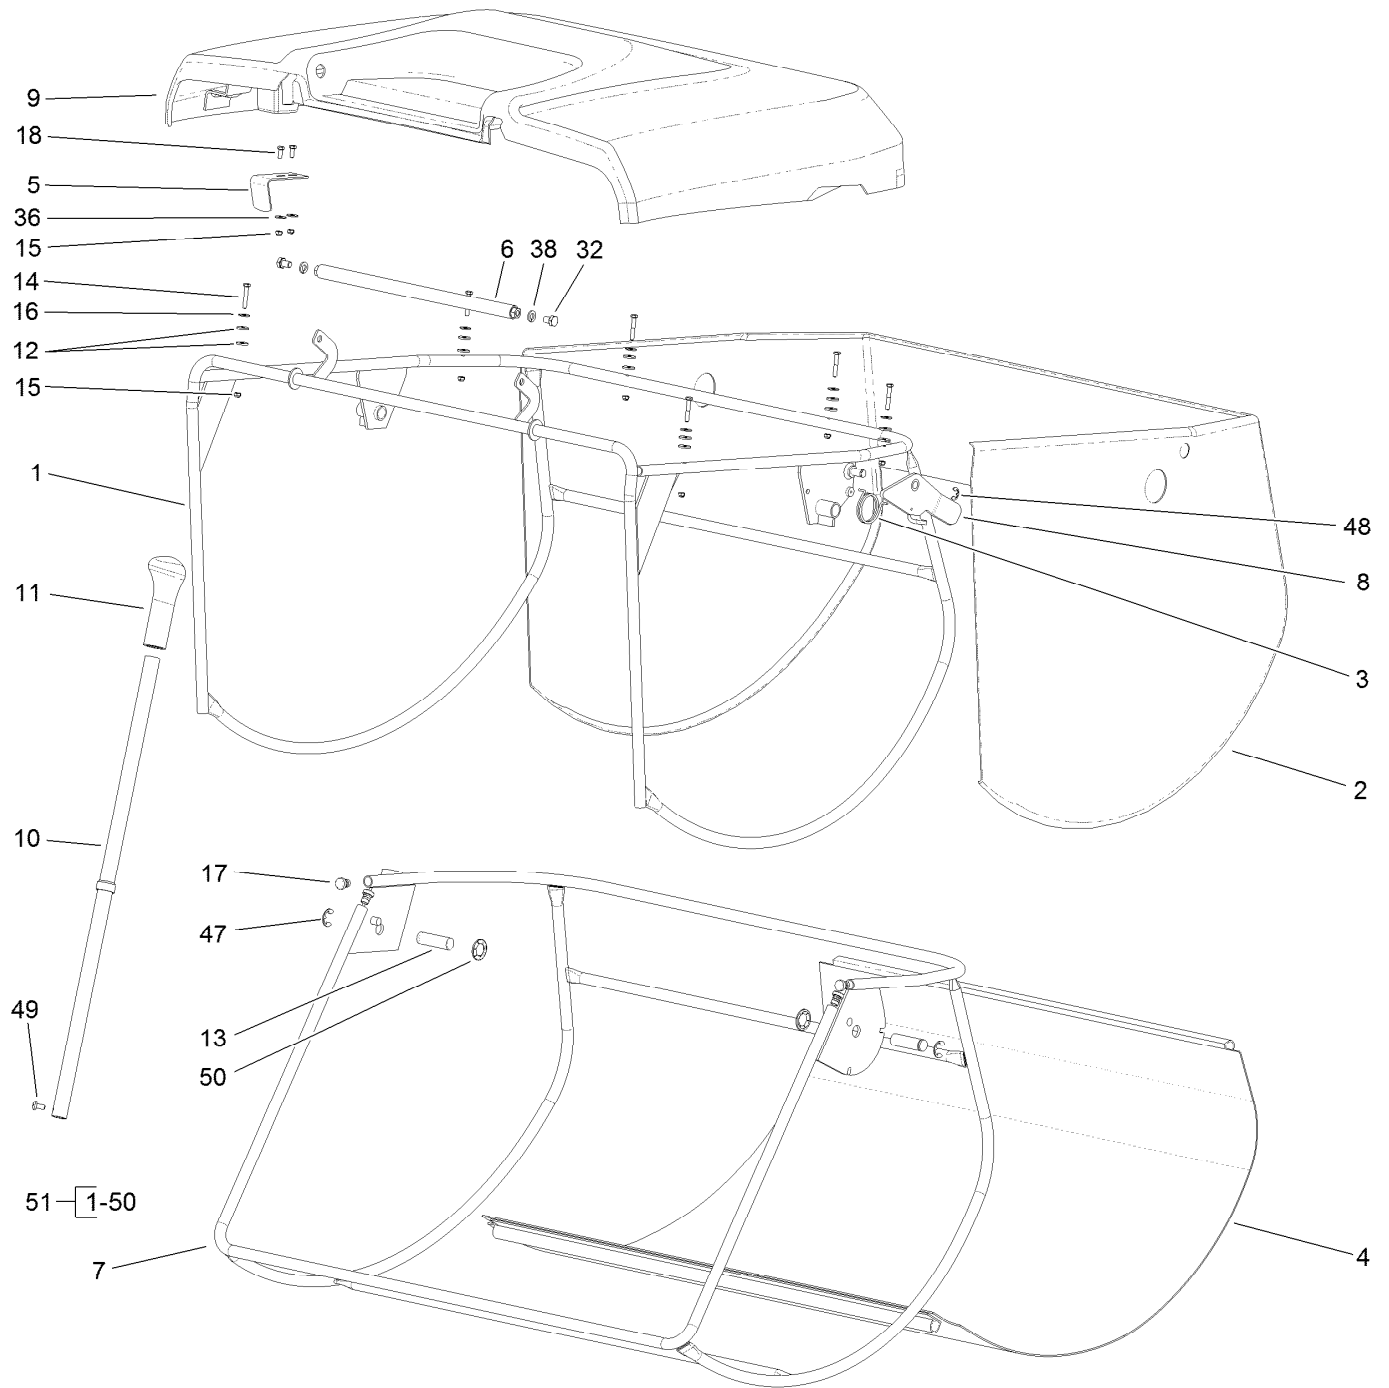



## Grass Collector Assembly No. 125-2325 (continued)


| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>            | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|-------------------------------|-------------|--------------------|-------------|---------------------|
| 1           | 125-2326           | 1           | Frame ASM                     | 14          | 106-5759           | 6           | Screw               |
| 2           | 125-2328           | 1           | Bag-Grass, Upper              | 15          | 87-5140            | 8           | Nut-Lock            |
| 3           | 125-2331           | 1           | Spring                        | 16          | 104-2952           | 12          | Washer-Rubber       |
| 4           | 125-2332           | 1           | Bag-Grass, Lower              | 17          | 119-5475           | 4           | Cap                 |
| 5           | 125-2334           | 1           | Spring-Coil, Interlock Switch | 18          | 107-8918           | 2           | Screw               |
| 6           | 125-2327           | 1           | Handle-Lift                   | 32          | 68-9410            | 2           | Screw-HHF           |
| 7           | 125-2329           | 1           | Lower Frame ASM               | 36          | 52-6430            | 2           | Washer              |
| 8           | 125-2330           | 1           | Lever-Arrestment              | 38          | 104-2927           | 2           | Washer-Spring       |
| 9           | 125-2333           | 1           | Cover-Collector               | 47          | 104-3015           | 2           | E-Clip              |
| 10          | 125-2335           | 1           | Lever-Dump                    | 48          | 106-8592           | 1           | Ring-Locking        |
| 11          | 120-8737           | 1           | Handle-Mulching               | 49          | 106-5763           | 1           | Screw               |
| 12          | 104-2943           | 6           | Washer-Flat                   | 50          | 119-5478           | 1           | Ring-Lock           |
| 13          | 119-5469           | 1           | Pin                           | 51          | 125-2325           | 1           | Grass Collector ASM |

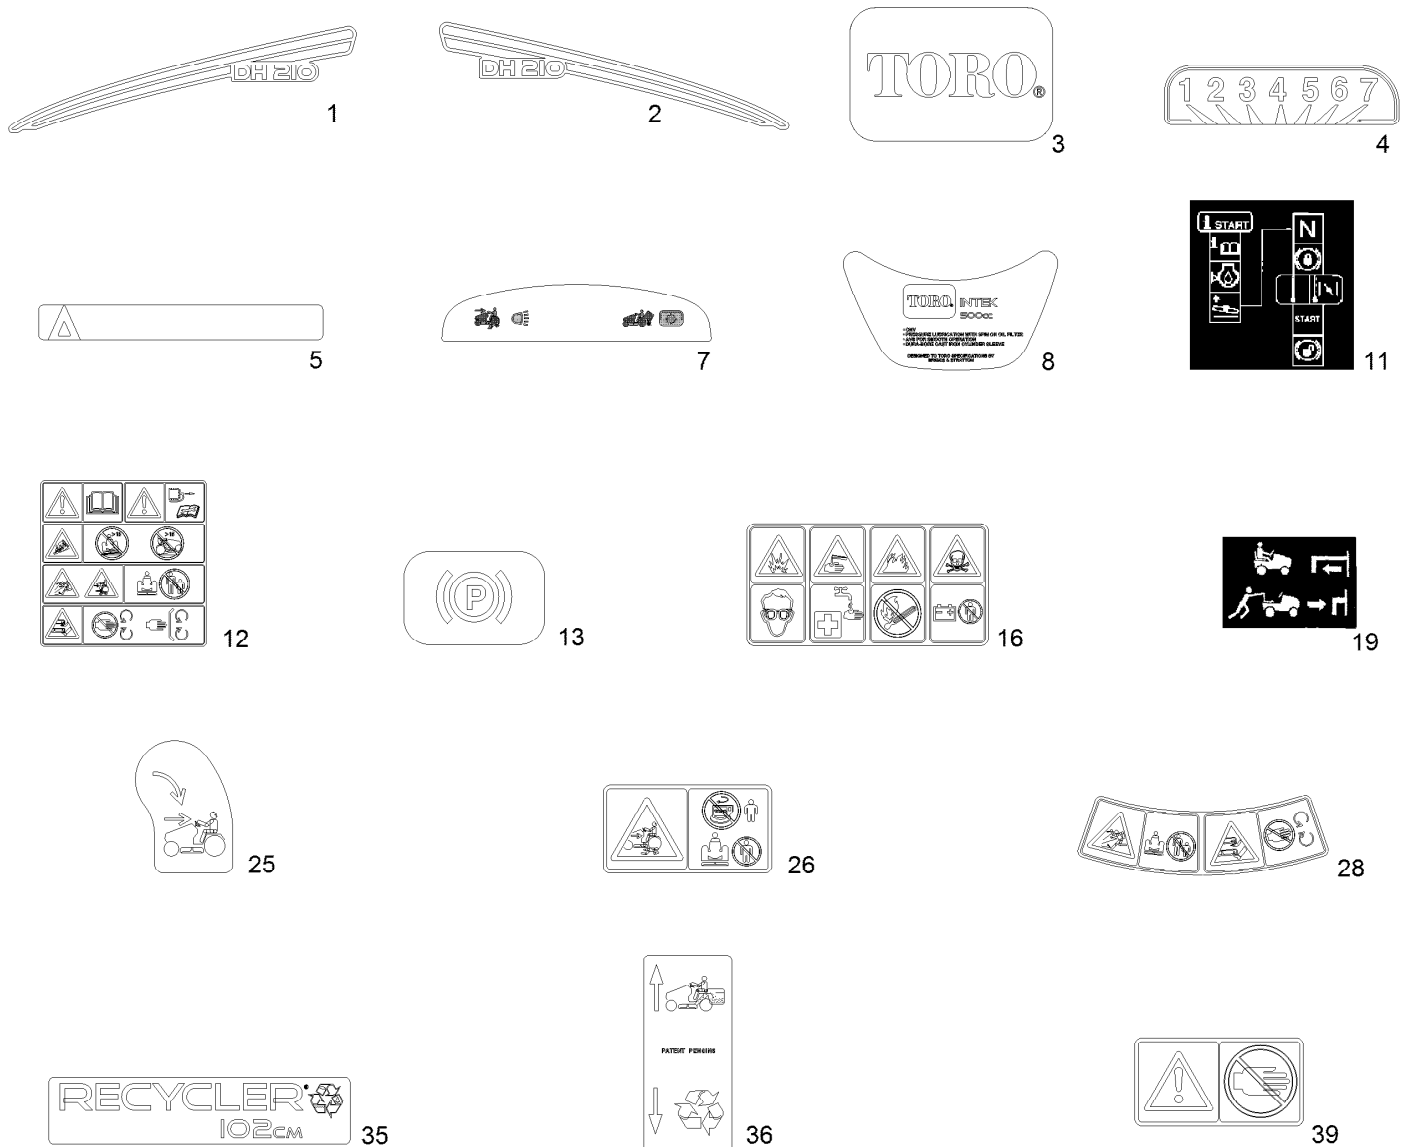

## Decal Assembly


| Ref. | Part Number | Qty. | Description                   |
|------|-------------|------|-------------------------------|
| 1    | 111-5604    | 1    | Decal-Hood, Left              |
| 2    | 111-5605    | 1    | Decal-Hood, Right             |
| 3    | 117-0871    | 1    | Decal                         |
| 4    | 111-5942    | 1    | Decal-HOC                     |
| 5    | 111-5953    | 1    | Decal-HOC                     |
| 7    | 125-2343    | 1    | Decal-Panel                   |
| 8    | 110-6627    | 1    | Decal-Engine                  |
| 11   | 119-5517    | 1    | Decal-Instructions, Operating |
| 12   | 119-2725    | 1    | Decal-Danger                  |

| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 13   | 104-3237    | 1    | Decal-Brake, Parking |
| 16   | 93-7276     | 2    | Decal-Danger         |
| 19   | 125-2345    | 1    | Decal-Bypass         |
| 25   | 99-5340     | 1    | Decal-Switch         |
| 26   | 119-2730    | 1    | Decal-Danger         |
| 28   | 119-2726    | 2    | Decal-Danger         |
| 35   | 119-2727    | 1    | Decal-Recycler       |
| 36   | 106-8552    | 2    | Decal-Operation      |
| 39   | 125-2189    | 2    | Decal-Danger, Engine |

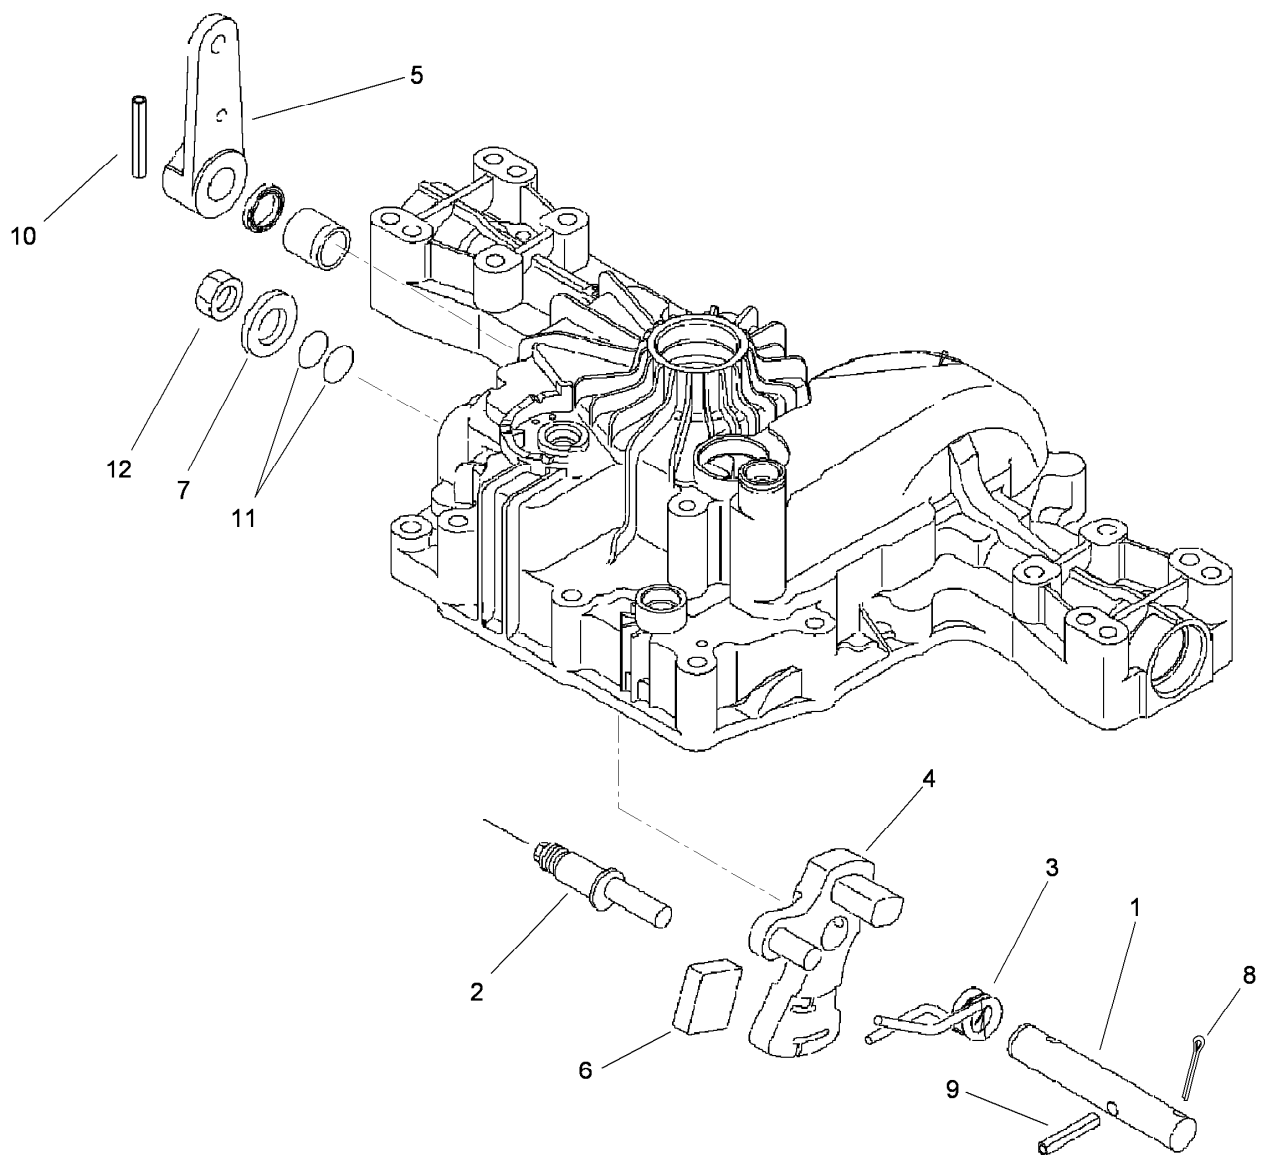


## Control Shaft Assembly Transmission Assembly No. 114-3155

| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 1    | 114-3181    | 1    | Shaft-Control        |
| 2    | 104-3292    | 1    | Fulcrum-Eccentricity |
| 3    | 114-3217    | 1    | Spring-Torsion       |
| 4    | 114-3180    | 1    | Arm-Control          |
| 5    | 104-3342    | 1    | Arm-Transaxle        |
| 6    | 104-3296    | 1    | Plate-Jerky          |
| 7    | 93-0417     | 1    | Washer               |
| 8    | 114-3182    | 1    | Pin-Cotter           |
| 9    | 104-3297    | 1    | Pin                  |
| 10   | 93-0411     | 1    | Pin-Roll             |
| 11   | 104-3298    | 2    | Packing              |
| 12   | 93-0420     | 1    | Nut                  |

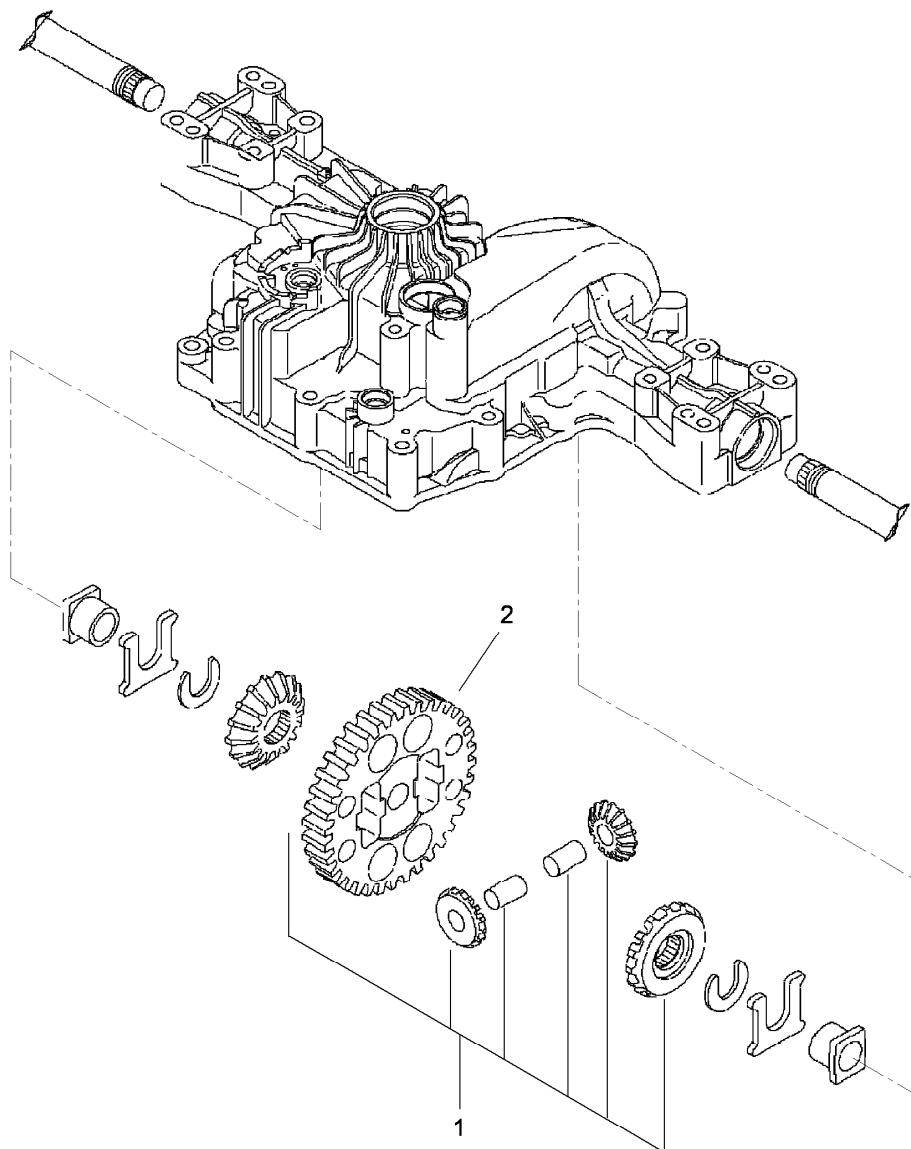


## Differential Gear Assembly Transmission Assembly No. 114-3155

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|-----------------------|
| 1           | 104-3299           | 1           | Differential Gear Kit |
| 2           | 104-3301           | 1           | Gear-Final            |

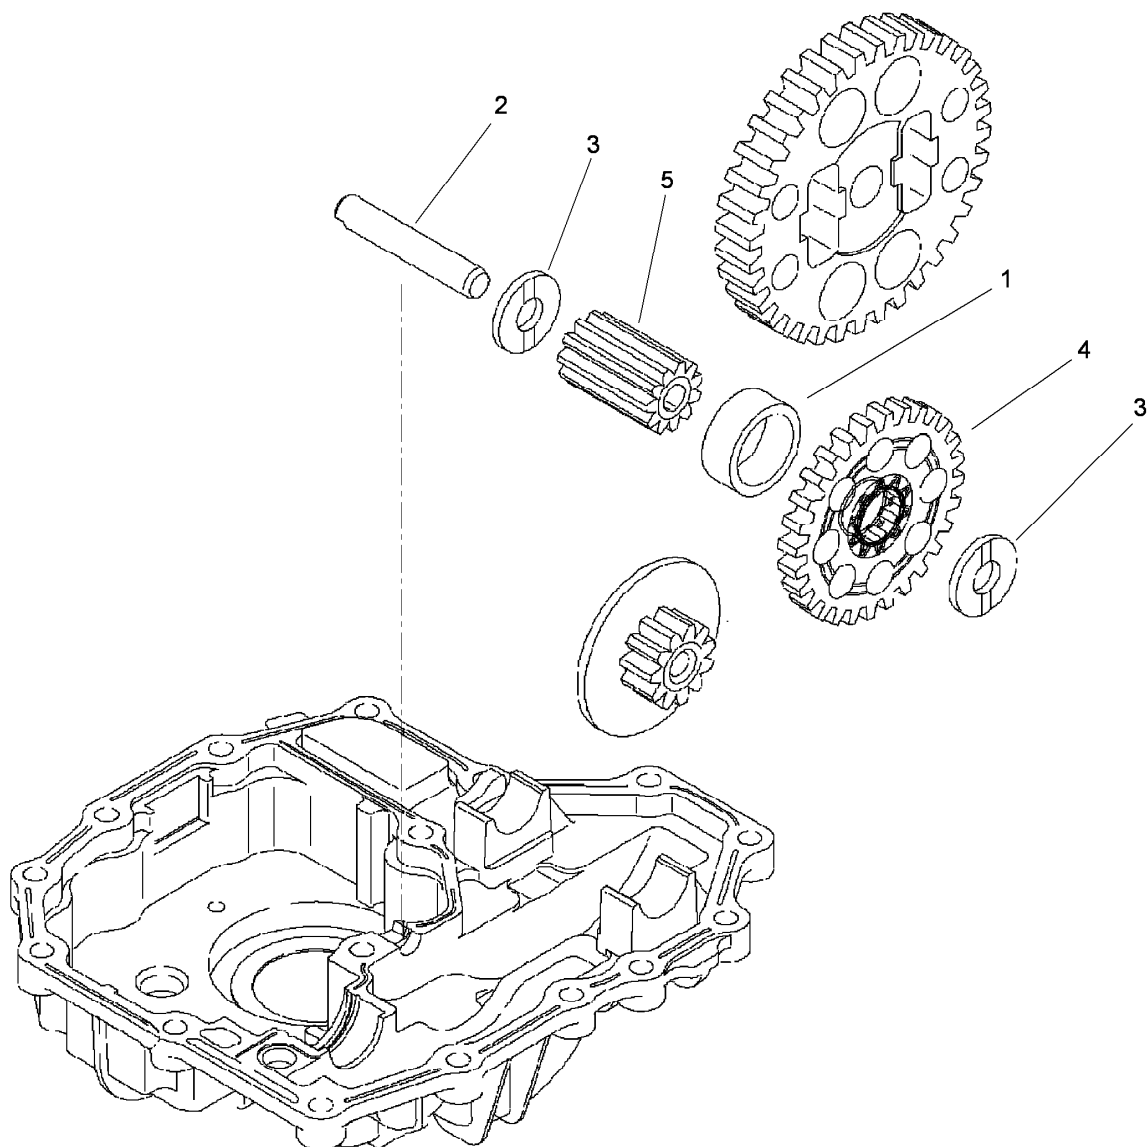


## Final Pinion Assembly Transmission Assembly No. 114-3155

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|----------------------|
| 1           | 104-3302           | 1           | Collar-Pinion, Final |
| 2           | 104-3303           | 1           | Shaft-Reduction      |
| 3           | 104-3304           | 2           | Washer               |
| 4           | 104-3305           | 1           | Gear-Reduction       |
| 5           | 104-3306           | 1           | Pinion-Final         |

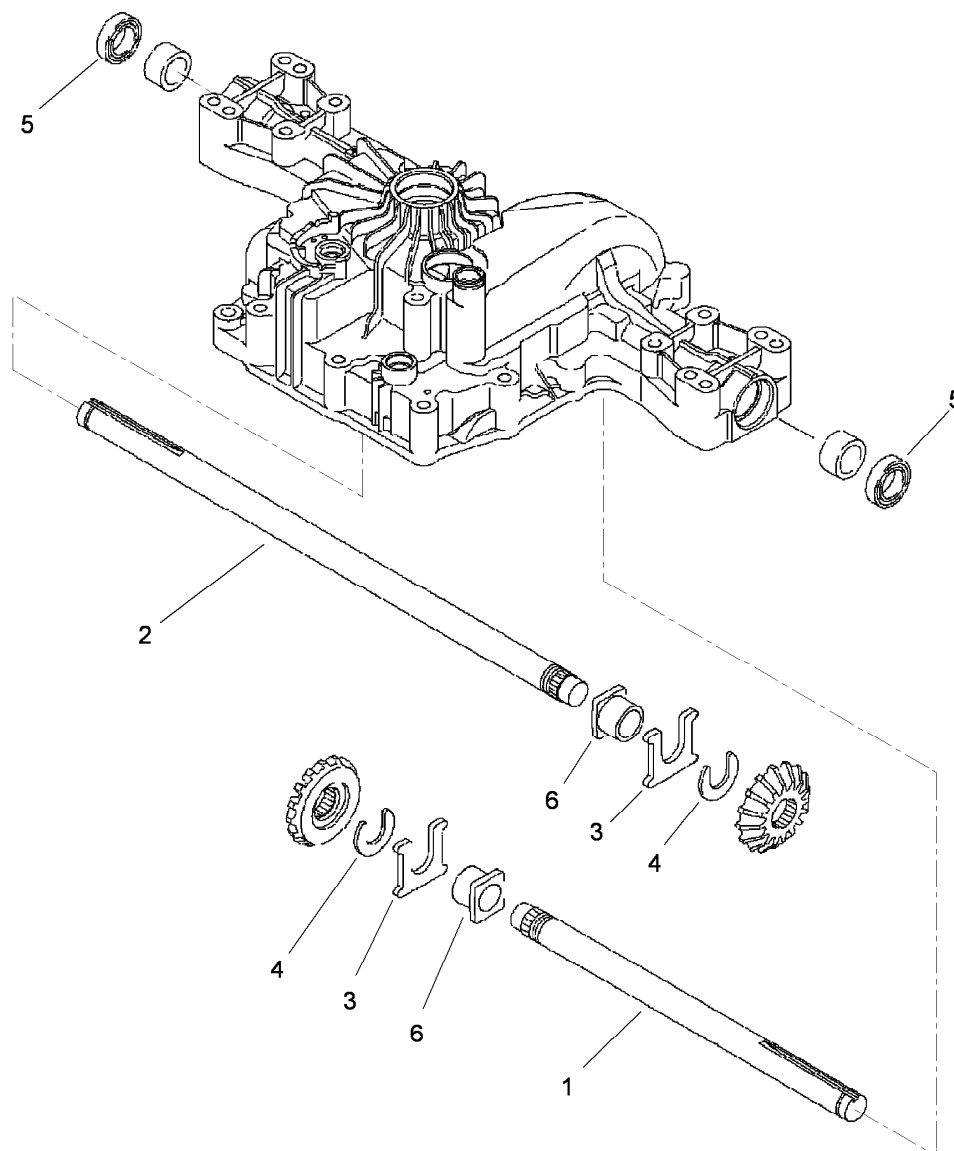


## Axle Shaft Assembly Transmission Assembly No. 114-3155

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 104-3307           | 1           | Shaft-Axle, RH     |
| 2           | 104-3308           | 1           | Shaft-Axle, LH     |
| 3           | 104-3309           | 2           | Washer-Thrust      |
| 4           | 104-3310           | 2           | Ring               |
| 5           | 104-3311           | 2           | Seal               |
| 6           | 104-3312           | 2           | Bushing            |

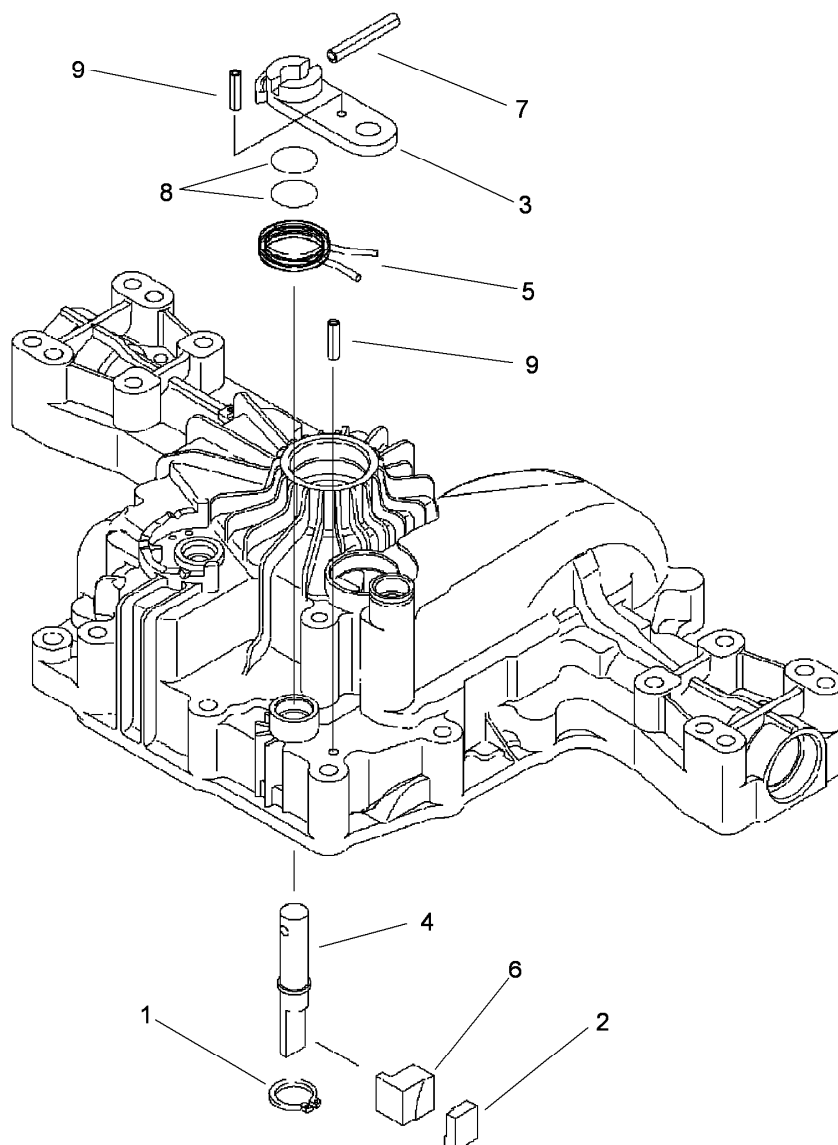

## Brake Assembly Transmission Assembly No. 114-3155


| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 1    | 104-3313    | 1    | Ring                 |
| 2    | 104-3314    | 1    | Shoe-Brake           |
| 3    | 104-3315    | 1    | Arm-Brake            |
| 4    | 104-3316    | 1    | Shaft-Brake          |
| 5    | 104-3317    | 1    | Spring-Return, Brake |
| 6    | 104-3318    | 1    | Actuator-Brake       |
| 7    | 92-0767     | 1    | Pin                  |
| 8    | 93-0418     | 2    | O-Ring               |
| 9    | 104-3319    | 2    | Pin                  |

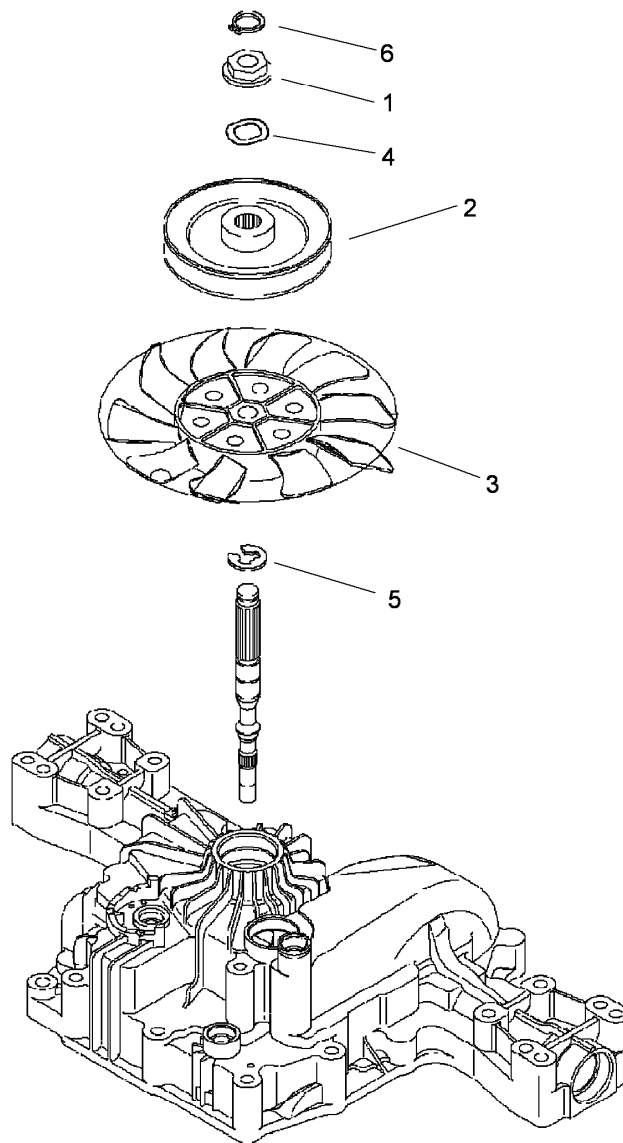

## Fan Pulley Assembly Transmission Assembly No. 114-3155


| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|---------------------|
| 1           | 104-3320           | 1           | Collar-Spline       |
| 2           | 104-3197           | 1           | Pulley-Transmission |
| 3           | 104-3199           | 1           | Fan-Transmission    |
| 4           | 104-3321           | 1           | Washer-Lock         |
| 5           | 93-0387            | 1           | E-Ring              |
| 6           | 104-3198           | 1           | E-Ring              |



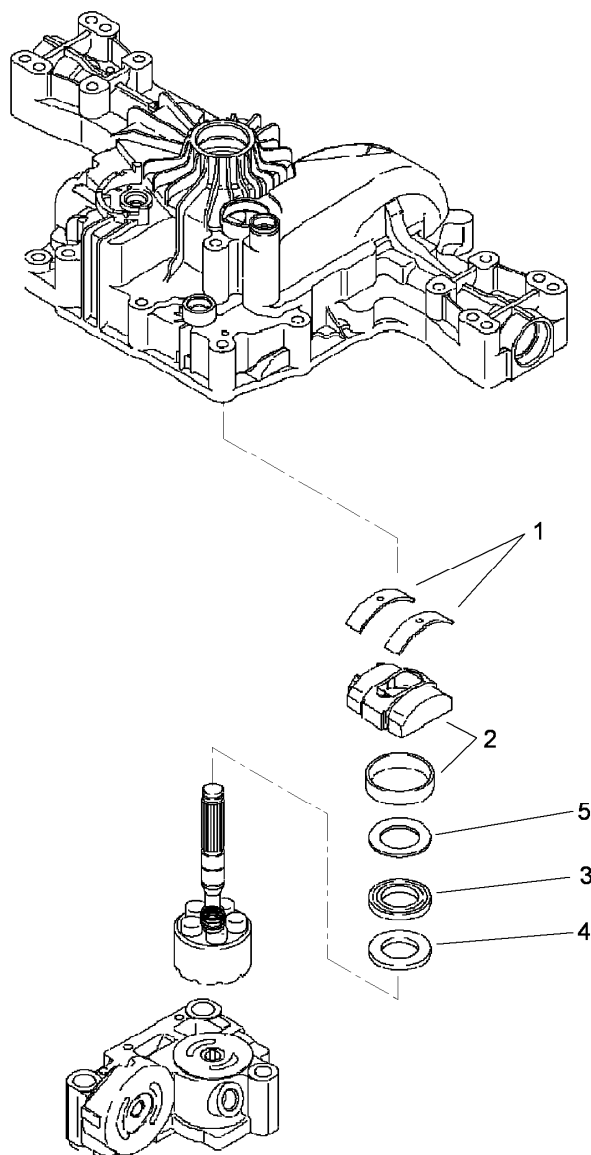


## Range Shift Assembly Transmission Assembly No. 114-3155

| Ref. | Part Number | Qty. | Description     |
|------|-------------|------|-----------------|
| 1    | 104-3286    | 2    | Metal-Thrust    |
| 2    | 104-3287    | 1    | Plate-Swash     |
| 3    | 104-3288    | 1    | Bearing         |
| 4    | 104-3289    | 1    | Plate-Thrust, A |
| 5    | 104-3290    | 1    | Plate-Thrust, B |

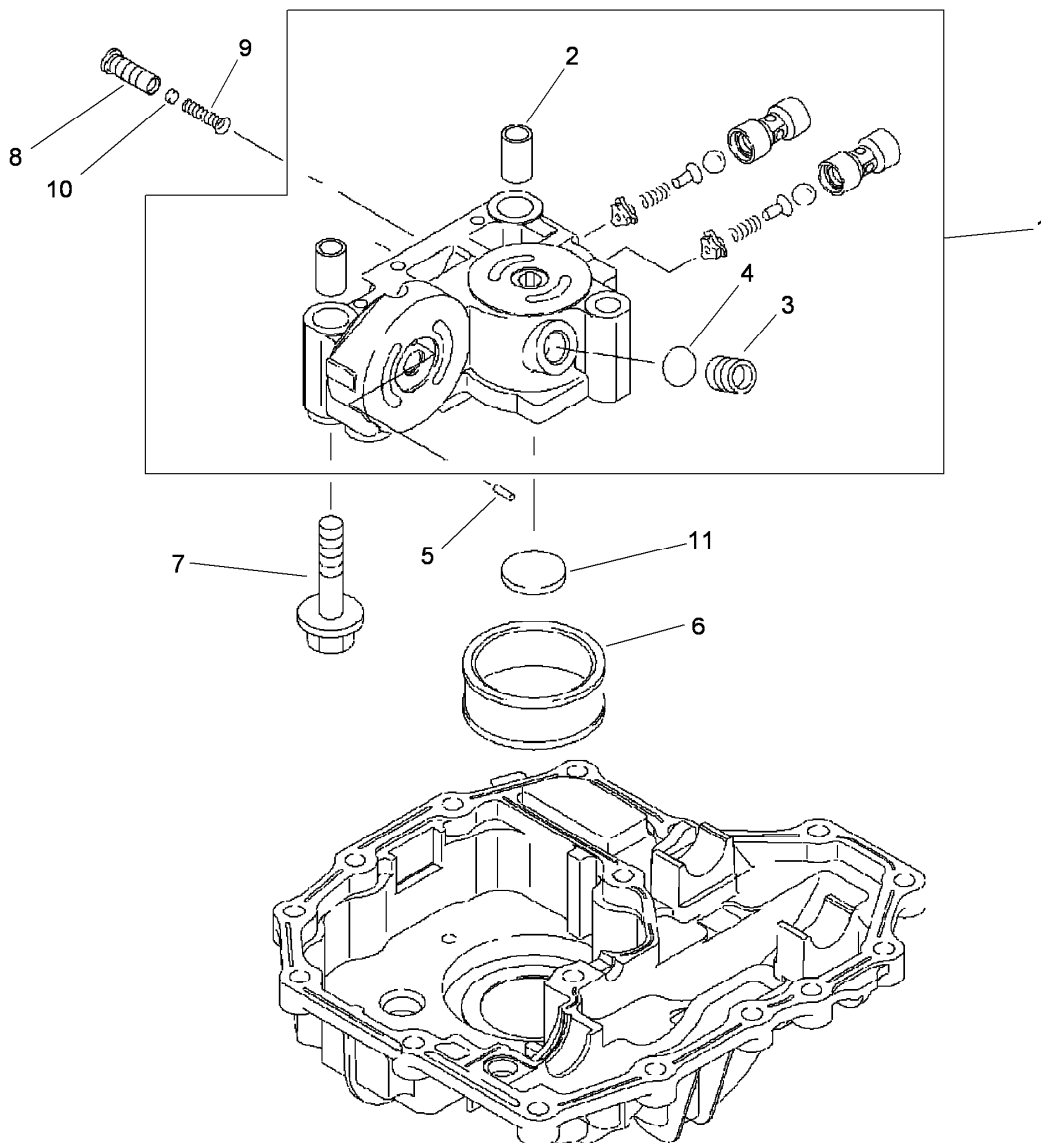


## Center Case Assembly Transmission Assembly No. 114-3155

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 104-3267           | 1           | Case-Center        |
| 2           | 104-3268           | 2           | Pin-Knock          |
| 3           | 104-3269           | 1           | Plug               |
| 4           | 93-0419            | 1           | Packing            |
| 5           | 104-3270           | 1           | Pin                |
| 6           | 104-3271           | 1           | Filter             |
| 7           | 104-3272           | 3           | Bolt               |
| 8           | 104-3273           | 2           | Valve              |
| 9           | 104-3274           | 2           | Spring             |
| 10          | 104-3275           | 2           | Filter             |
| 11          | 104-3257           | 1           | Magnet             |

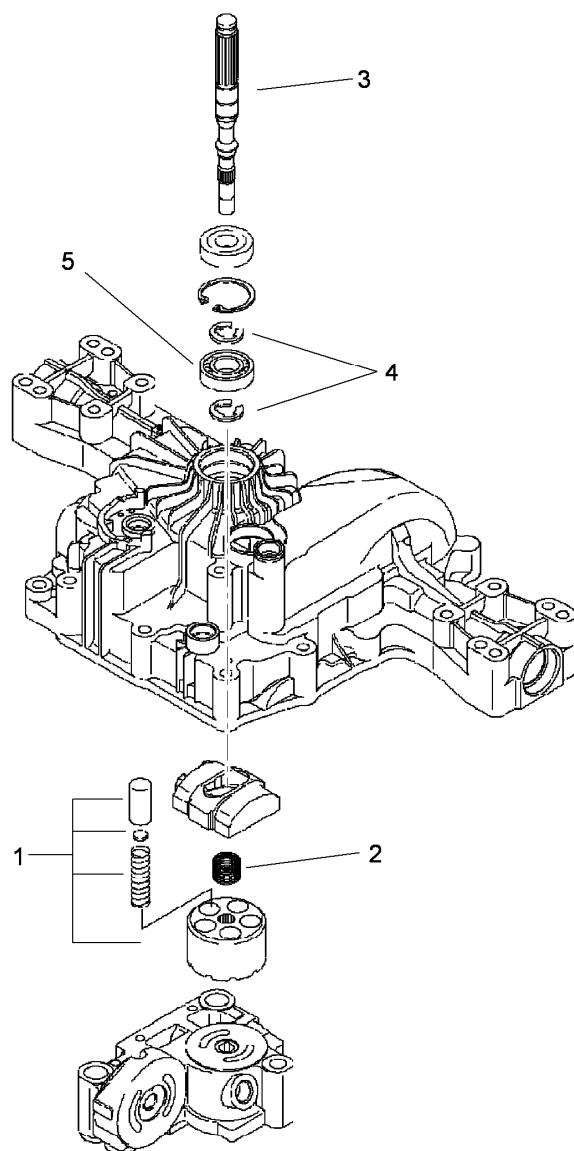


## Pump Shaft Assembly Transmission Assembly No. 114-3155

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 104-3276           | 1           | Block-Cylinder     |
| 2           | 104-3277           | 1           | Spring-Pump        |
| 3           | 104-3278           | 1           | Shaft-Pump         |
| 4           | 93-0387            | 2           | E-Ring             |
| 5           | 93-0374            | 1           | Bearing-Ball       |

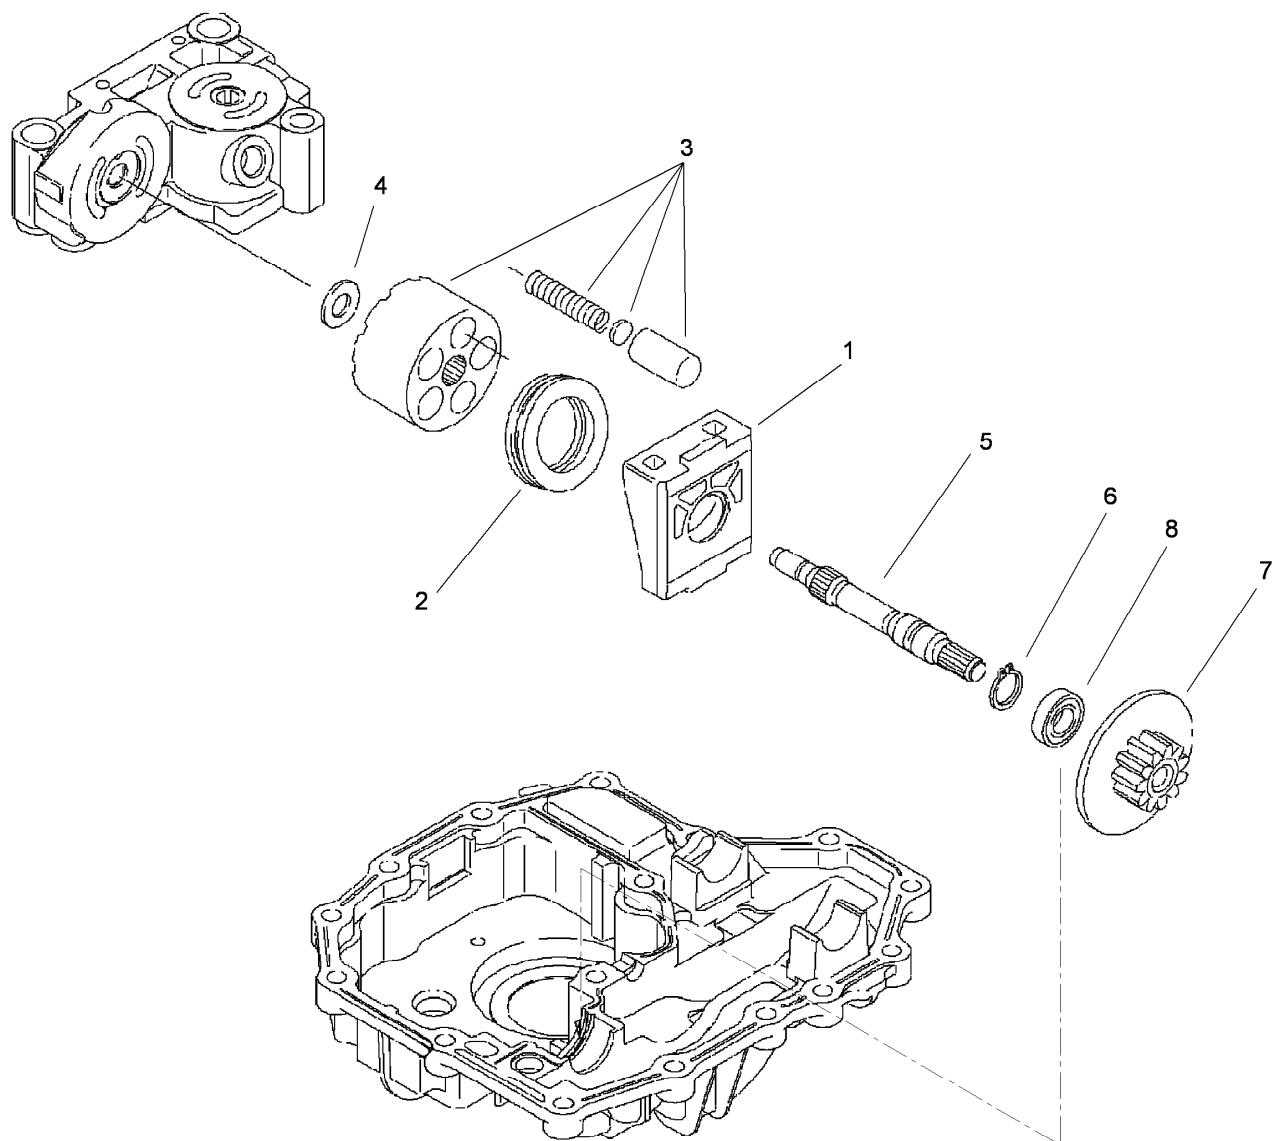

## Motor Shaft Assembly Transmission Assembly No. 114-3155

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 104-3279           | 1           | Housing            |
| 2           | 104-3280           | 1           | Bearing            |
| 3           | 104-3281           | 1           | Block-Cylinder     |
| 4           | 104-3282           | 1           | Washer             |
| 5           | 104-3283           | 1           | Shaft-Motor        |
| 6           | 93-0373            | 1           | Ring-Snap          |
| 7           | 104-3284           | 1           | Motor-Gear         |
| 8           | 104-3285           | 1           | Bearing            |

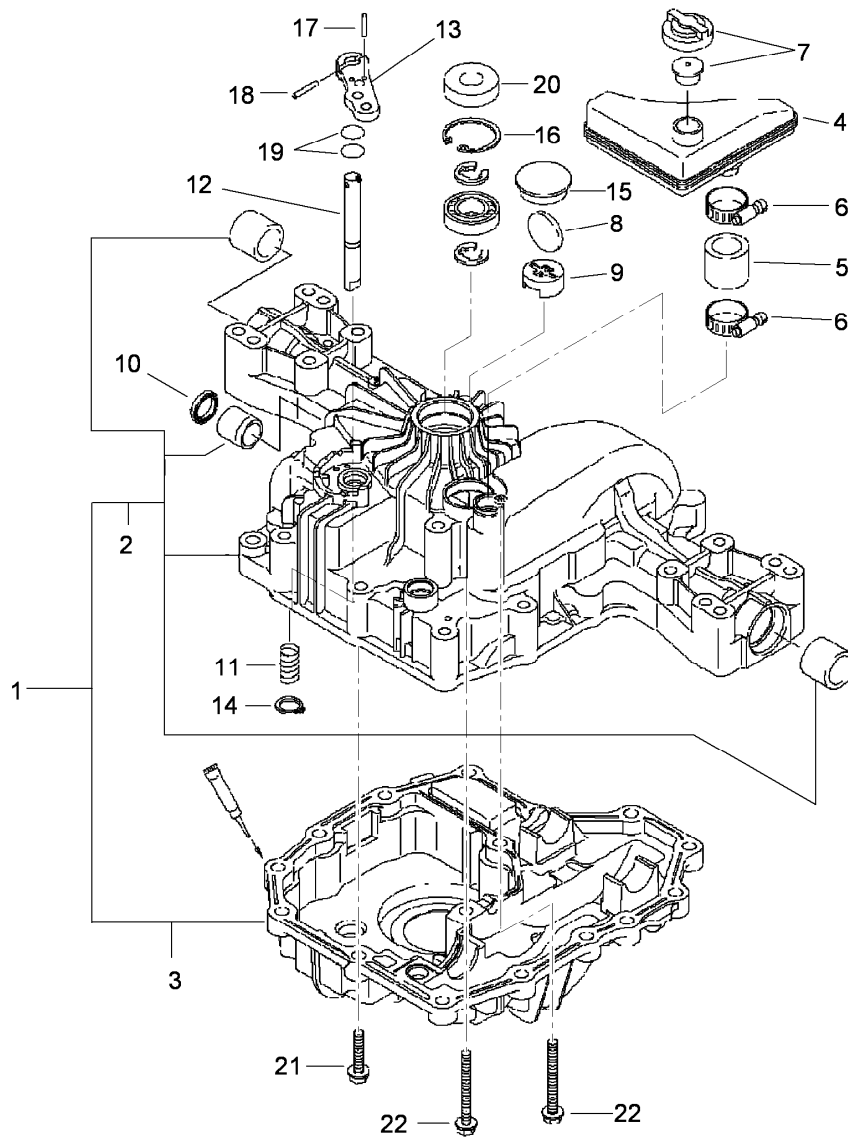

## Transaxle Case Assembly Transmission Assembly No. 114-3155

| Ref. | Part Number | Qty. | Description                 |
|------|-------------|------|-----------------------------|
| 1    | 104-3251    | 1    | Transaxle Case Set          |
| 2    | 104-3252    | 1    | Housing-Upper               |
| 3    | 104-3253    | 1    | Housing-Lower               |
| 4    | 104-2914    | 1    | Reservoir Tank ASM With Cap |
| 5    | 104-3254    | 1    | Tube                        |
| 6    | 104-3255    | 2    | Clamp-Miniature             |
| 7    | 104-3256    | 1    | Valve-Vent, 15              |
| 8    | 104-3257    | 1    | Magnet                      |
| 9    | 104-3258    | 1    | Holder-Magnet               |
| 10   | 104-3259    | 1    | Seal-Oil                    |
| 11   | 93-0396     | 1    | Spring                      |

| Ref. | Part Number | Qty. | Description  |
|------|-------------|------|--------------|
| 12   | 104-3260    | 1    | Shaft-Bypass |
| 13   | 104-3261    | 1    | Lever-Bypass |
| 14   | 104-3262    | 1    | Ring         |
| 15   | 104-3263    | 1    | Plug-Bore    |
| 16   | 93-0360     | 1    | Ring         |
| 17   | 104-3264    | 1    | Pin          |
| 18   | 104-3265    | 1    | Pin          |
| 19   | 93-0419     | 2    | Packing      |
| 20   | 93-0361     | 1    | Seal         |
| 21   | 93-0363     | 14   | Screw-TAP    |
| 22   | 104-3266    | 2    | Screw-Tap    |

# Attachments and Accessories

## For 74596 DH 220 Lawn Tractor

| Product Name                   | Model/Part |
|--------------------------------|------------|
| Belt Guard Kit .....           | 111-6941   |
| Rear Discharge Chute Kit ..... | 117-0054   |

**Notes:**



**Count on it.**