



Form No. 3383-851 Rev C

Count on it.

Parts Catalog

DH 220 Lawn Tractor

Model No. 74596—Serial No. 314000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HP: high pressure

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: low pressure

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard


TAP: self tapping

TTH: torx truss head

Contents

Engine and Muffler Assembly	4
Front Axle Assembly	6
Steering Assembly	7
Transmission Drive Assembly	8
Frame Assembly	9
Mower Lift Assembly	10
Cutting Drive System Assembly No. 111-6850	12
Mower Housing Assembly	14
Travel Pedals and Brake Assembly	16
Battery and Electrical Assembly	18
Body and Hood Assembly	20
Tunnel and Collector Plate Assembly	22
Grass Collector Assembly No. 125-2325	24
Decal Assembly	26
Control Shaft Assembly Transmission Assembly No. 114-3155	27
Differential Gear Assembly Transmission Assembly No. 114-3155	28
Final Pinion Assembly Transmission Assembly No. 114-3155	29
Axle Shaft Assembly Transmission Assembly No. 114-3155	30
Brake Assembly Transmission Assembly No. 114-3155	31
Fan Pulley Assembly Transmission Assembly No. 114-3155	32
Range Shift Assembly Transmission Assembly No. 114-3155	33
Center Case Assembly Transmission Assembly No. 114-3155	34
Pump Shaft Assembly Transmission Assembly No. 114-3155	35
Motor Shaft Assembly Transmission Assembly No. 114-3155	36
Transaxle Case Assembly Transmission Assembly No. 114-3155	37
Attachments and Accessories	38

Engine and Muffler Assembly

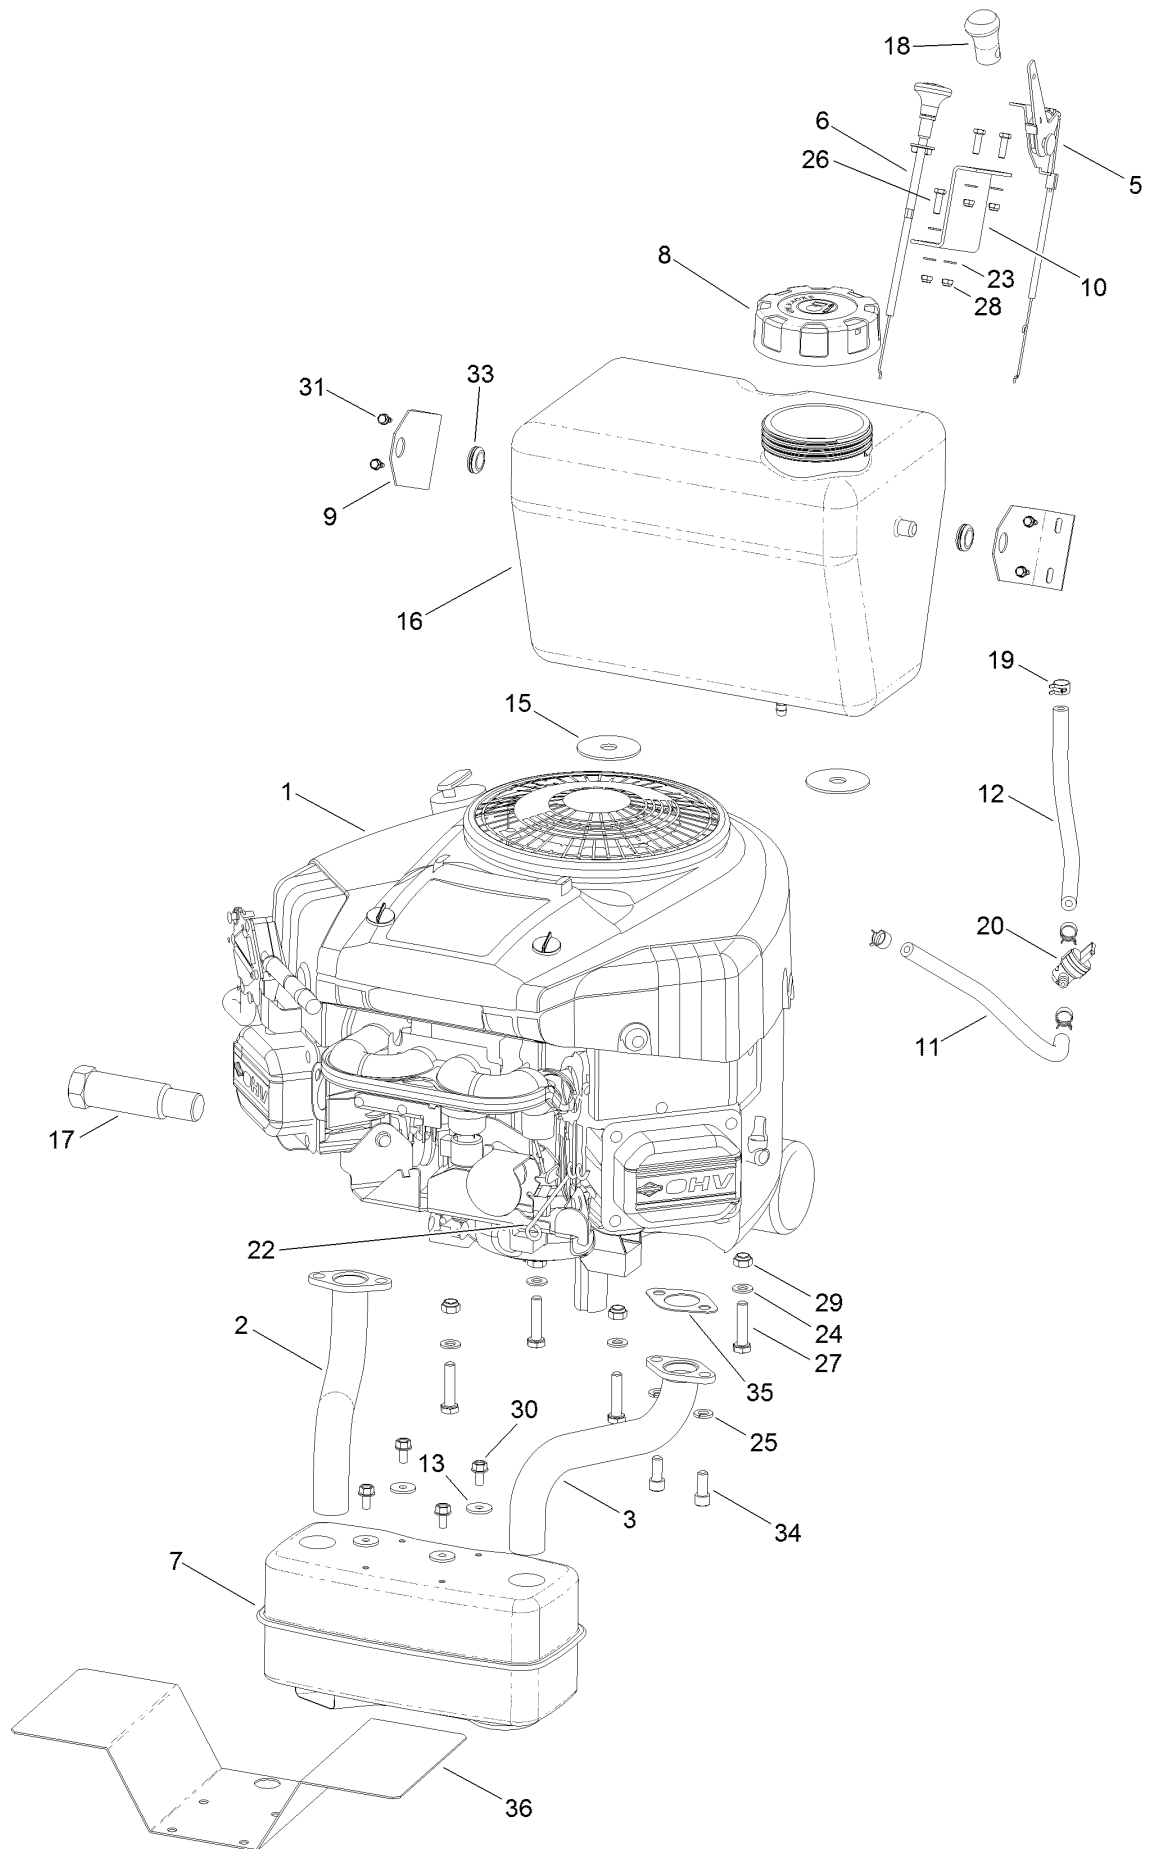


Engine and Muffler Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Engine-Briggs, 40R777-0007-B1 ●■	19	104-3212	4	Clamp-Line, Fuel
2	125-2217	1	Tube-Exhaust, RH	20	104-3224	1	Valve-Tank, Fuel
3	125-2218	1	Tube-Exhaust, LH	22	104-3156	1	Holder-Harness, Wiring
5	125-2215	1	Control-Throttle, Twin	23	52-6430	6	Washer
6	125-2216	1	Control-Choke, Twin	24	106-4756	4	Washer-Plain
7	104-3225	1	Muffler	25	104-2927	4	Washer-Spring
8	119-5354	1	Cap-Fuel	26	107-8918	4	Screw
9	125-2202	2	Bracket-Fuel, Tank	27	33114-035	4	Screw-HH
10	125-2206	1	Holder	28	87-5140	4	Nut-Lock
11	125-2212	1	Line-Fuel	29	33024-00	4	Nut-Lock, NI
12	125-2203	1	Line-Fuel	30	111-7602	4	Screw-Hhtf
13	111-7601	4	Washer-Flat	31	104-2977	4	Screw-TAP
15	119-5500	2	Washer-Rubber	33	119-5364	2	Bushing
16	119-5358	1	Tank-Fuel	34	322-3	4	Screw-HH
17	120-8755	1	Coupler-Drain, Oil	35	104-3226	2	Gasket-Exhaust
18	119-5448	1	Knob-Throttle/Choke	36	125-2195	1	Cover-Tube

● Not serviced separately


■ Obtain parts from www.briggsandstratton.com

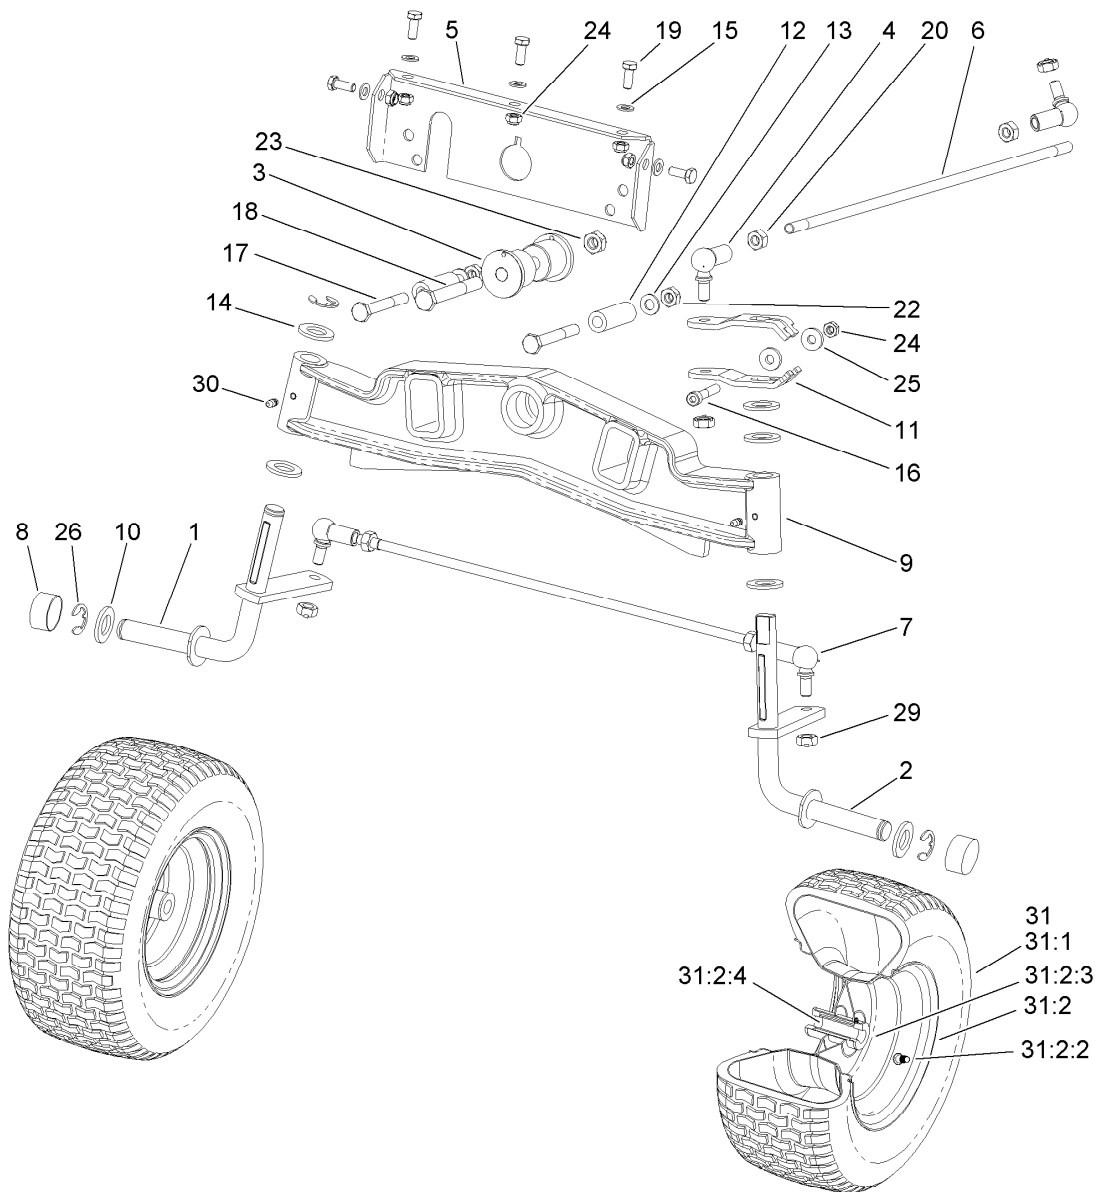

Front Axle Assembly

Ref.	Part Number	Qty.	Description
1	110-9084	1	Spindle-Front, RH
2	120-8705	1	Spindle-Front, LH
3	104-2890	2	Bushing-Axle, Front
4	104-2876	4	Joint-Ball, Angle
5	125-2219	1	Plate-Axle
6	125-2223	1	Link-Drag
7	125-2222	1	Rod-Tie, Front Axle
8	104-2857	2	Cap-Hub
9	104-2852	1	Axle-Front
10	120-8739	2	Washer
11	120-8713	2	Lever-Spindle, Steering
12	104-2851	2	Spacer
13	33095-00	2	Washer-Flat
14	104-2905	5	Washer-Flat
15	106-4756	5	Washer-Plain
16	120-8774	1	Screw
17	33115-080	2	Screw-HH


Ref.	Part Number	Qty.	Description
18	33116-090	1	Screw-HH
19	33114-020	5	Screw-HH
20	33015-00	4	Nut-Hex
22	33023-00	2	Nut-Lock
23	48-9540	1	Nut-Lock, Hex NI
24	33024-00	6	Nut-Lock, NI
25	106-8588	2	Washer-Flat
26	104-2891	3	Clip-Spring
29	33025-00	4	Nut-Lock, NI
30	104-2904	3	Fitting-Grease
31	114-3240	2	Wheel ASM
31:1	99-2336	1	Tire
31:2	110-9086	1	Wheel ASM
31:2:2	106-8596	1	Valve-Tire
31:2:3	110513	2	Bearing-Wheel
31:2:4	127-6232	1	Spacer-Wheel

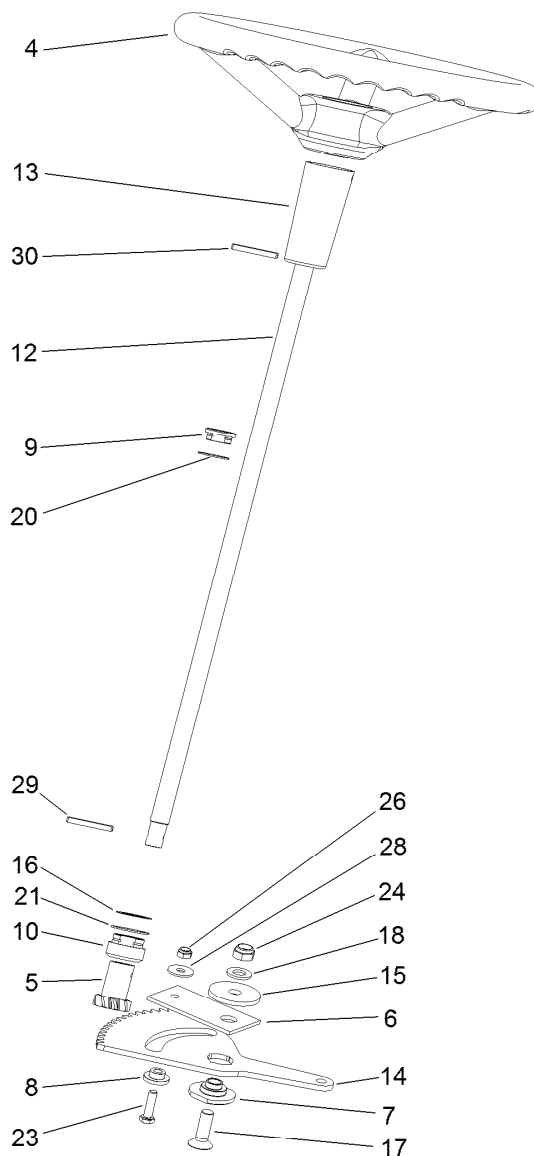

Steering Assembly

Ref.	Part Number	Qty.	Description
4	125-2237	1	Wheel-Steering
5	125-2231	1	Pinion-Steering
6	125-2225	1	Plate-Steering
7	125-2230	1	Pivot-Steering
8	125-2226	1	Bushing-Sector
9	125-2224	2	Bearing
10	125-2227	1	Bushing-Pinion
12	125-2228	1	Shaft-Steering
13	125-2238	1	Cover
14	119-5374	1	Gear-Sector
15	108-8892	1	Washer

Ref.	Part Number	Qty.	Description
16	125-2235	1	Washer
17	125-2232	1	Screw
18	104-3124	1	Washer-Flat
20	125-2236	1	Ring-Locking
21	125-2234	1	Ring-Locking
23	33114-030	1	Screw-HH
24	33016-00	1	Nut-Hex
26	33024-00	1	Nut-Lock, NI
28	104-2946	1	Washer-Plain
29	125-2233	1	Pin-Spiral
30	119-5377	1	Pin-Spirol

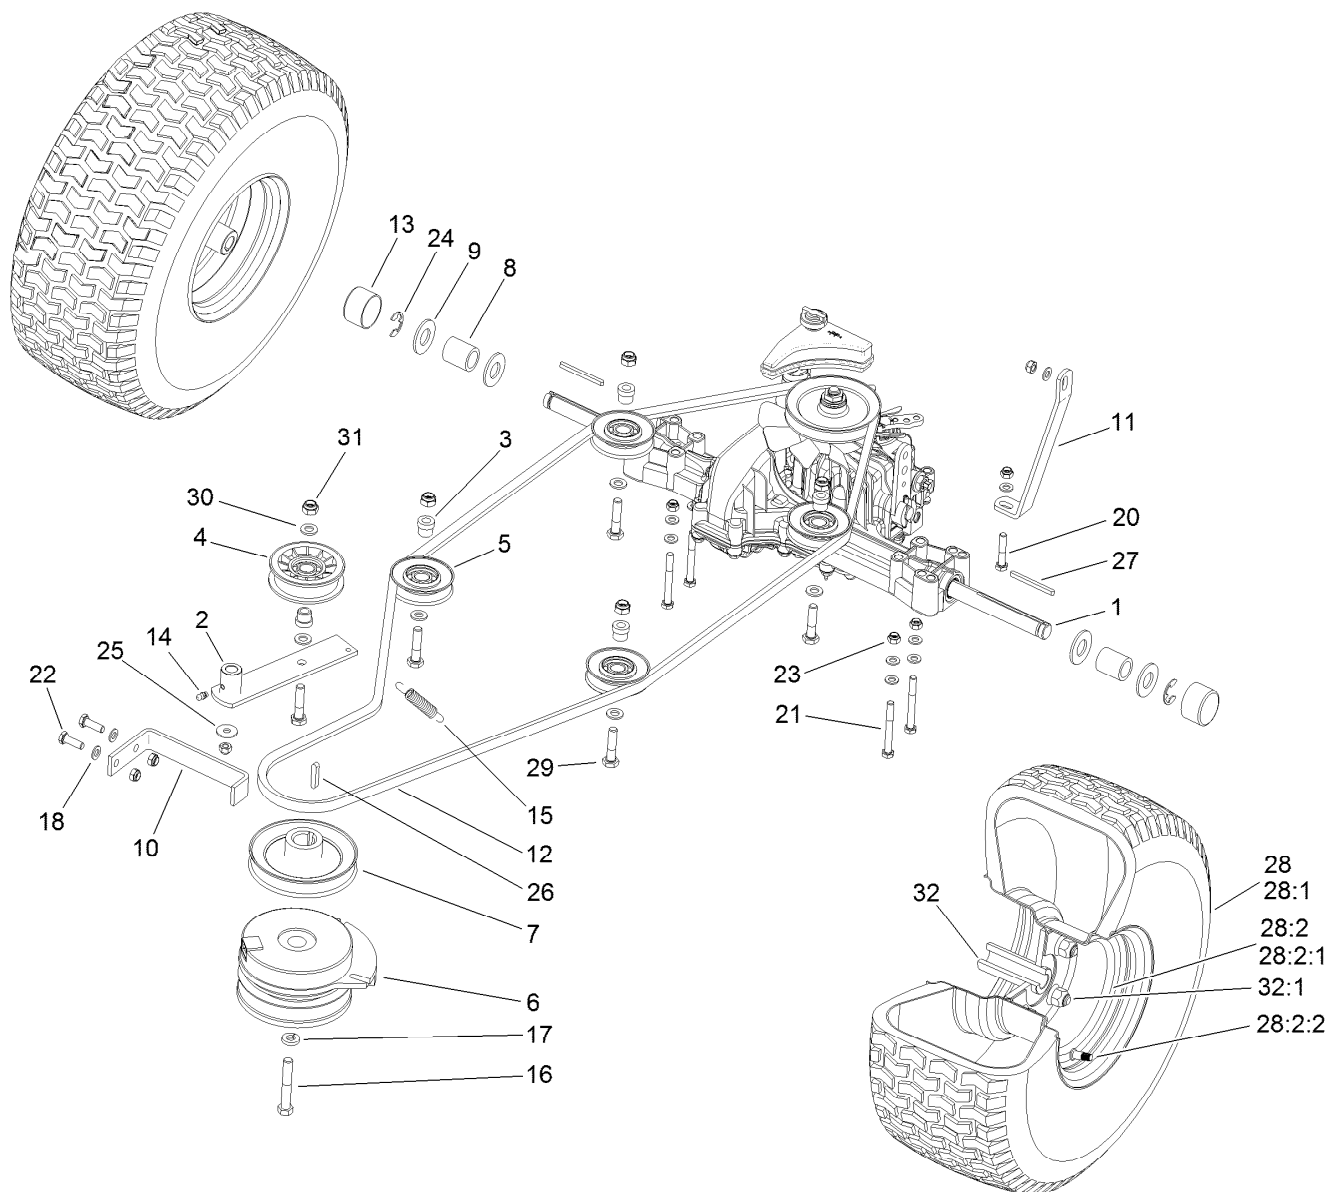


Transmission Drive Assembly

Ref.	Part Number	Qty.	Description
1	114-3155	1	Transmission
2	125-2239	1	Arm-Idler
3	104-2896	5	Bushing-Idler
4	104-2913	1	Pulley-Idler
5	104-2887	4	Pulley-Idler
6	119-5501	1	Clutch-Electric
7	104-2911	1	Pulley-Engine
8	104-2895	2	Spacer-Axle
9	120-8739	4	Washer
10	125-2240	1	Retainer
11	125-2241	1	Stabilizer
12	125-2243	1	V-Belt, Traction
13	104-2857	2	Cap-Hub
14	104-2904	1	Fitting-Grease
15	104-2897	1	Spring
16	3212-10	1	Screw-HH
17	93-9043	1	Washer-Spring, Belleville
18	106-4756	12	Washer-Plain

Ref.	Part Number	Qty.	Description
20	33114-040	1	Screw-HH
21	125-2242	4	Screw
22	33114-025	2	Screw-HH
23	33024-00	9	Nut-Lock, NI
24	104-2891	2	Clip-Spring
25	104-2946	1	Washer-Plain
26	104-2899	1	Key-Square
27	104-2892	2	Key-Square
28	107-8929	2	Tire And Wheel ASM
28:1	99-2994	1	Tire
28:2	107-8932	1	Wheel ASM
28:2:1		1	Rim ●
28:2:2	106-8596	1	Valve-Tire
29	33115-040	5	Screw-HH
30	33095-00	6	Washer-Flat
31	33023-00	5	Nut-Lock
32	108-8718	2	Hub-Wheel
32:1	108-8717	4	Nut-Lug


● Not serviced separately

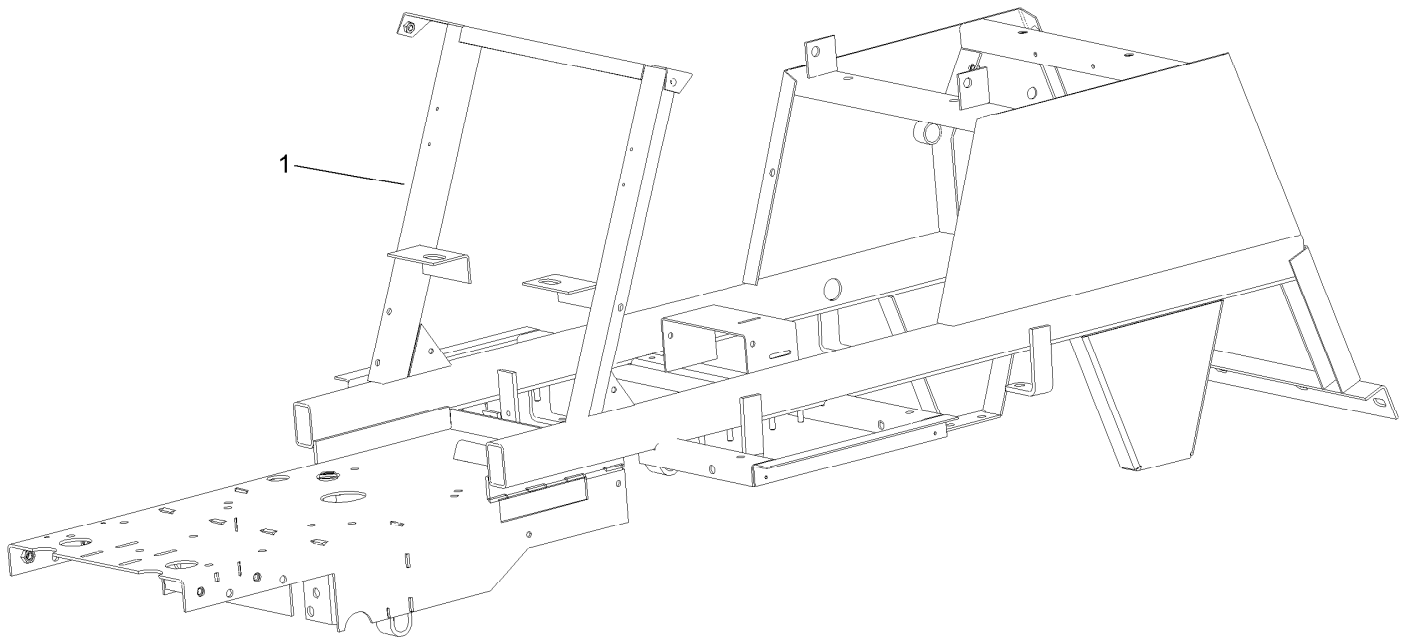

Frame Assembly

Ref.	Part Number	Qty.	Description
1	125-2200	1	Chassis-Frame


Mower Lift Assembly

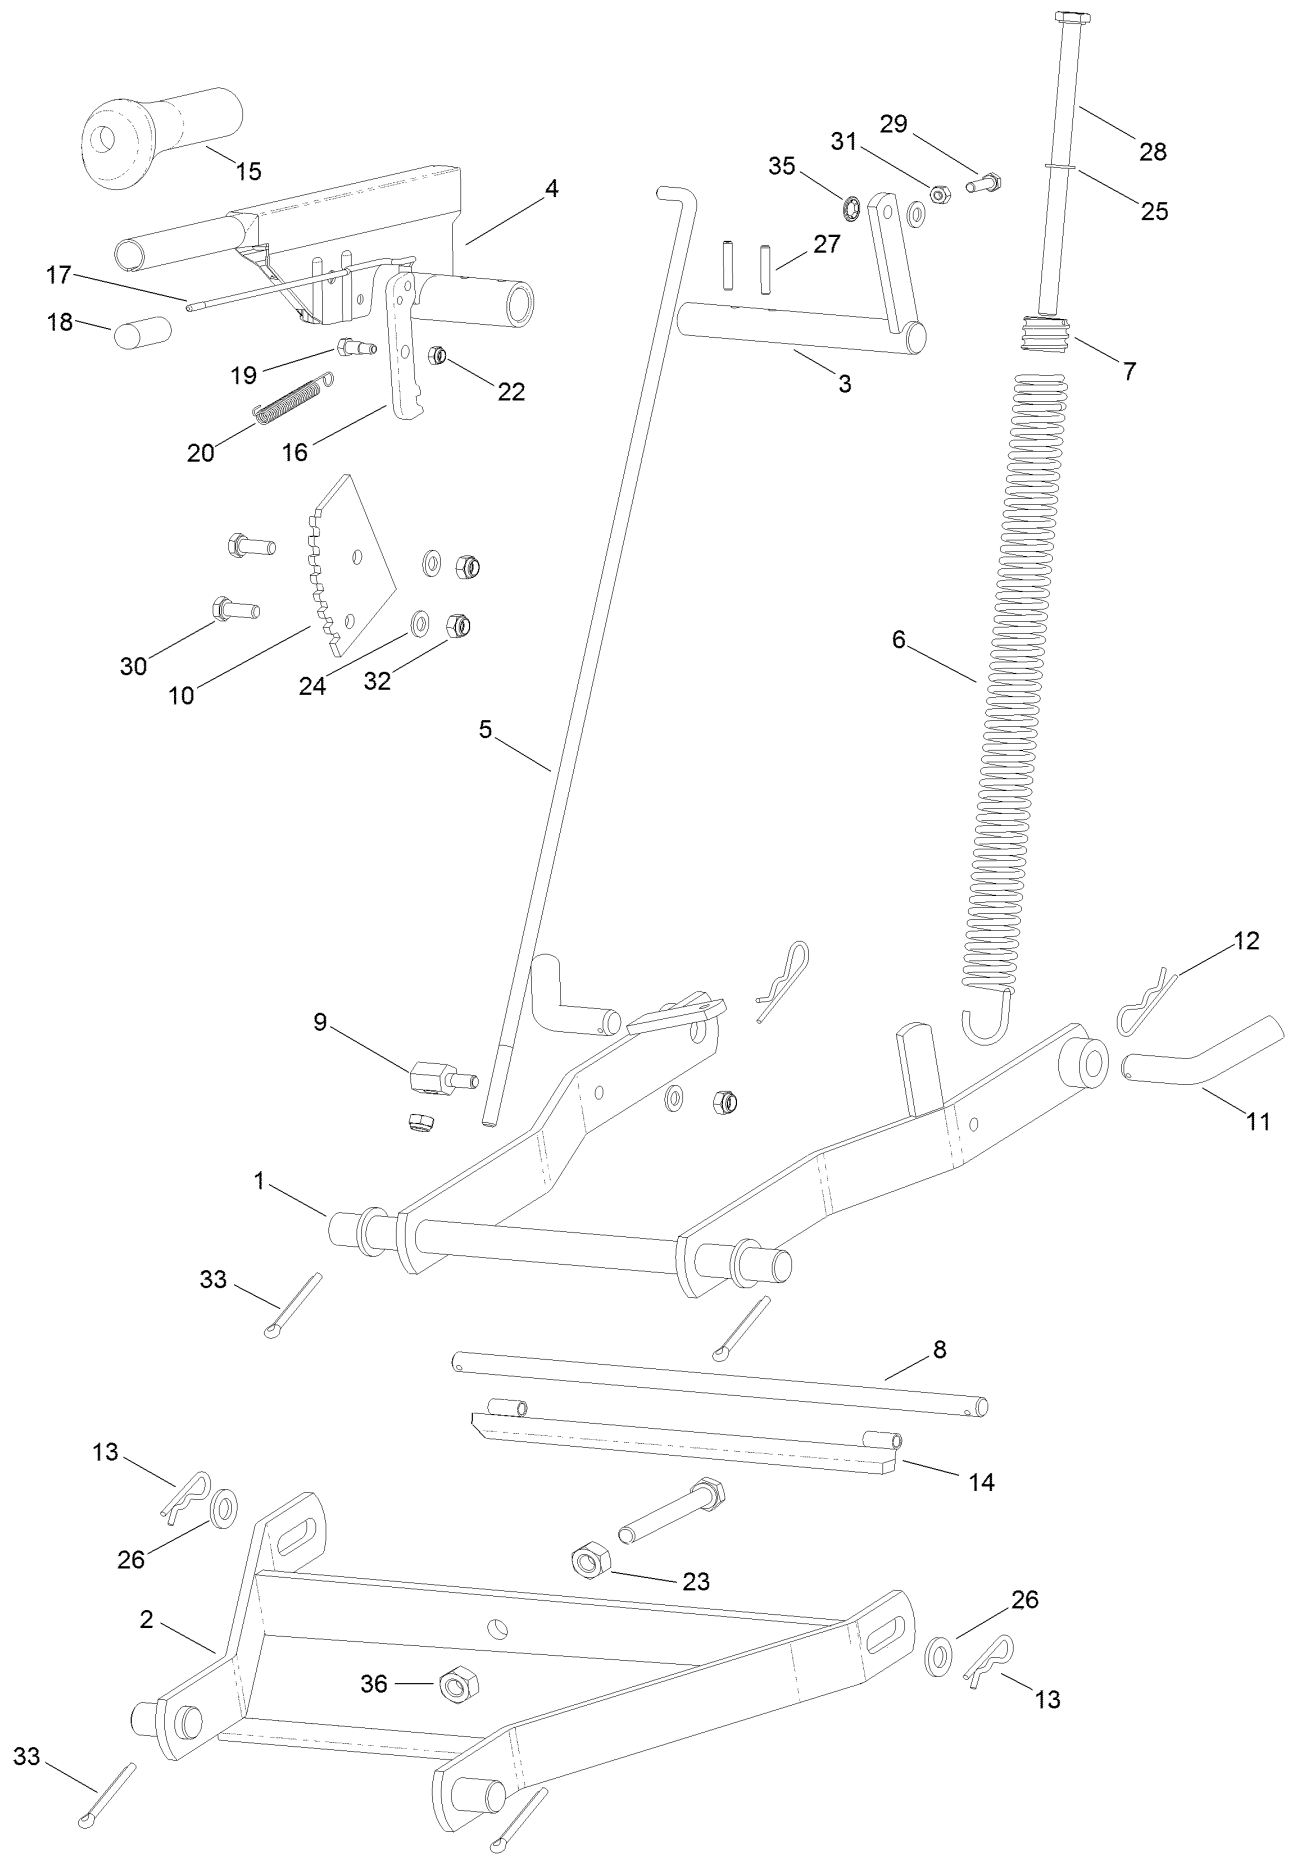

Mower Lift Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	111-6846	1	Suspension-Deck, Mower	18	104-3131	1	Button-Plunger
2	111-6847	1	Suspension-Mower Deck, Front	19	125-2250	1	Screw-Lever
3	125-2251	1	Shaft-Adjustment, Height	20	104-3134	1	Spring
4	125-2249	1	Lever-Arm, Height Adjust	22	33023-00	1	Nut-Lock
5	125-2252	1	Rod-Adjustment, Height	23	33016-00	1	Nut-Hex
6	125-2254	1	Spring	24	106-4756	3	Washer-Plain
7	125-2255	1	Nut-Spring	25	108-8709	1	Washer-Flat
8	111-6849	1	Shaft	26	104-3124	2	Washer-Flat
9	119-5407	1	Trunnion	27	104-2994	2	Pin-Spring
10	104-3133	1	Segment-Gear	28	125-2253	1	Screw M10X180
11	120-8757	2	Pin-Bent	29	33113-016	1	Screw-HH
12	104-3144	2	Pin-Hair	30	33114-020	2	Screw-HH
13	104-3148	2	Pin-Hair	31	104-2991	1	Nut-Hex
14	111-6848	1	Holder-Front	32	33024-00	4	Nut-Lock, NI
15	104-3129	1	Grip-Handle	33	125-2256	4	Pin-Cotter
16	104-3130	1	Ratchet-Plate, Pivot	35	121-0963	1	Washer
17	104-3132	1	Rod-Connection	36	48-9540	1	Nut-Lock, Hex NI

Cutting Drive System Assembly No. 111-6850

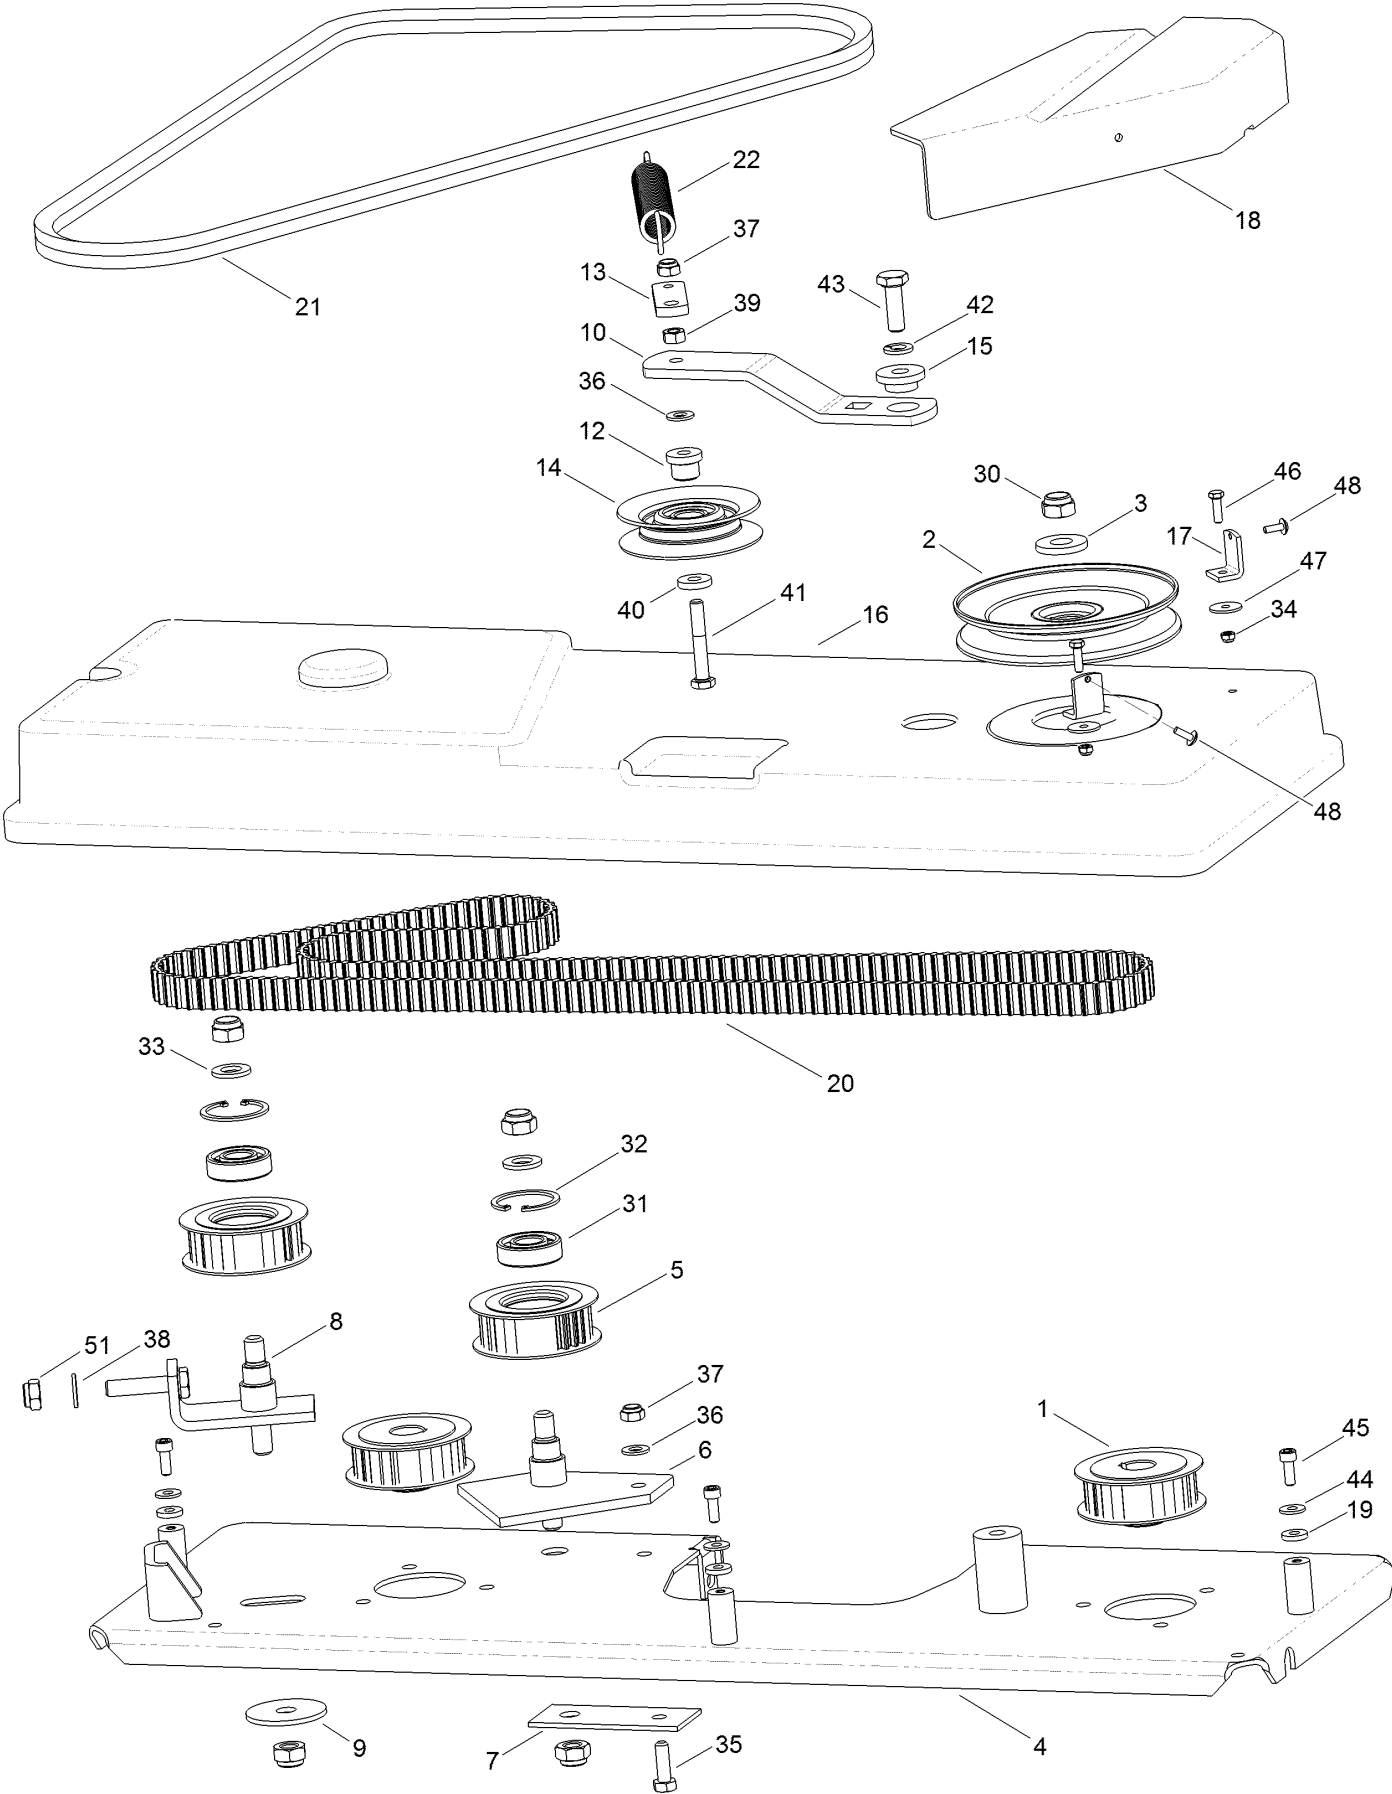


Cutting Drive System Assembly No. 111-6850 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-3116	2	Pulley-Cog, Drive	30	48-9540	6	Nut-Lock, Hex NI
2	125-2263	1	Pulley-Drive	31	100-1048	2	Bearing-Ball
3	33099-00	2	Washer-Flat	32	104-3123	2	Ring-Locking
4	107-8996	1	Plate-Drive, Blade	33	104-3124	2	Washer-Flat
5	104-3121	2	Pulley-Cog	34	87-5140	2	Nut-Lock
6	125-2264	1	Bracket-Idler	35	33114-025	1	Screw-HH
7	104-3117	1	Plate-Anchor	36	106-4756	2	Washer-Plain
8	125-2265	1	Bracket-Idler	37	33024-00	2	Nut-Lock, NI
9	103-8892	1	Washer	38	33095-00	1	Washer-Flat
10	125-2266	1	Arm-Idler	39	33014-00	1	Nut-Hex
12	104-3104	1	Bushing	40	106-8588	1	Washer-Flat
13	125-2185	1	Lever-Engagement	41	33114-050	1	Screw-HH
14	104-3103	1	Pulley-Idler	42	125-2269	1	Washer
15	125-2268	1	Shim-Arm, Idler	43	125-2270	1	Screw
16	106-8589	1	Belt-Cover	44	106-8568	3	Washer-Flat
17	107-8940	2	Bracket	45	33113-016	3	Screw-HH
18	107-8941	1	Guard-Belt	46	107-8918	2	Screw
19	83-7420	3	Washer-Rubber	47	125-2277	2	Washer
20	106-8591	1	Belt-Cog	48	111-6851	2	Screw
21	125-2182	1	Belt	51	33023-00	1	Nut-Lock
22	104-3101	1	Spring	52	111-6850	1	Cutting Unit ASM ●

● Not illustrated


Mower Housing Assembly

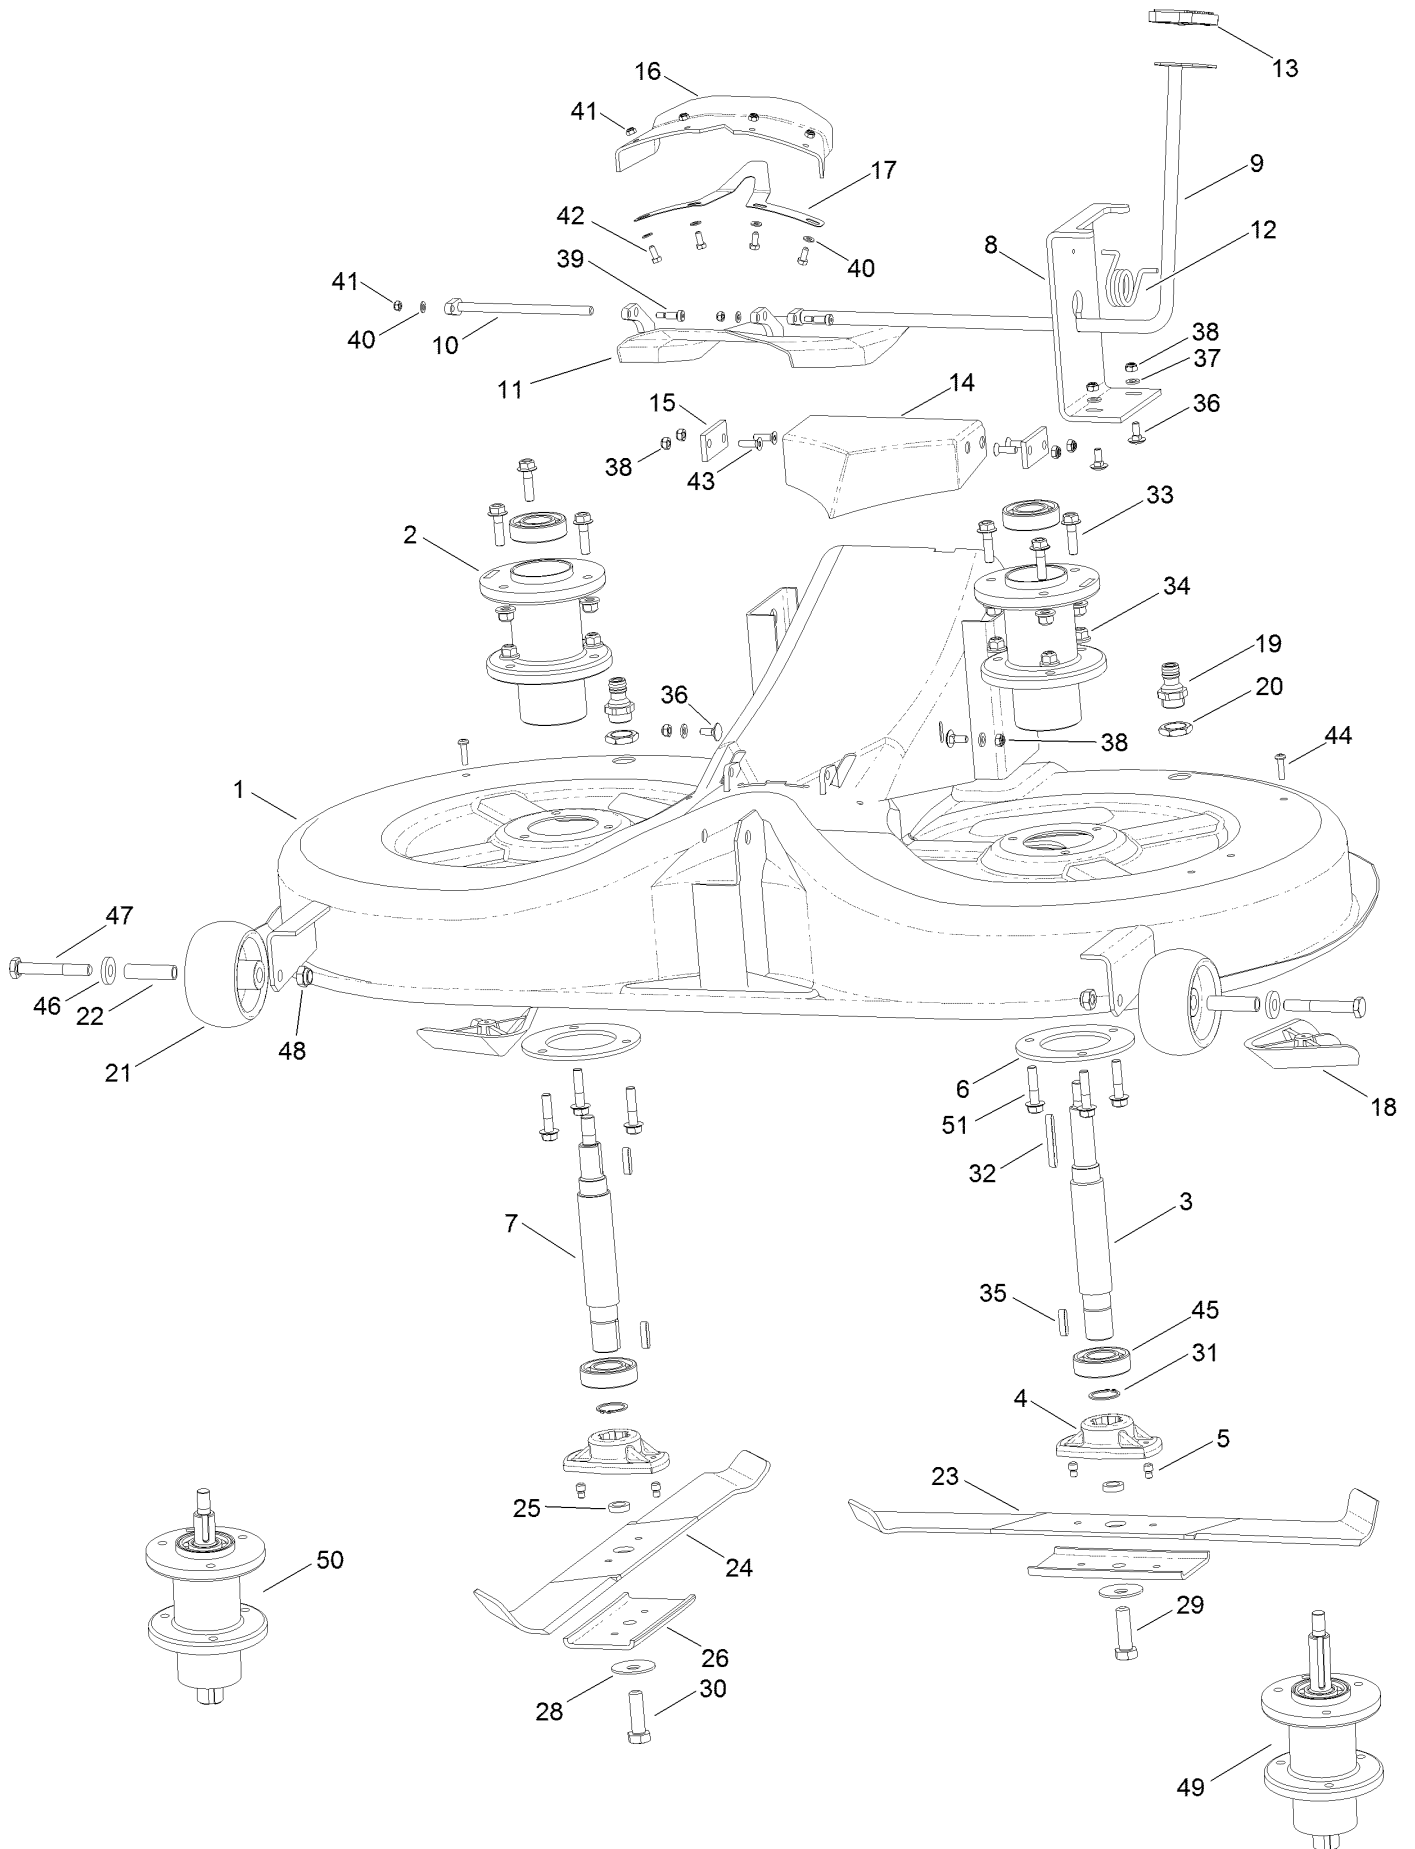

Mower Housing Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-2258	1	Deck ASM With Decals	26	106-6533	2	Stiffener-Blade
2	107-8992	2	Housing-Spindle	28	106-6532	2	Washer-Blade
3	125-2261	1	Shaft-Blade, Left	29	106-5797	1	Bolt-HH
4	106-4185	2	Adapter-Blade	30	106-5798	1	Bolt-Blade, HH
5	104-3093	4	Pin-Shear, Grooved	31	104-3095	2	Ring-Locking
6	104-3084	2	Support-Ring	32	125-2262	1	Key
7	106-8566	1	Shaft-Blade, Right	33	33104-030	6	Screw-HHF
8	125-2271	1	Holder	34	104-3082	12	Nut-Lock, HHF
9	125-2272	1	Lever-Foot	35	104-3097	3	Key-Square
10	106-8585	1	Rod-Door, Mulch	36	33123-016	4	Screw-CARR
11	107-8968	1	Door-Mulch	37	104-3193	4	Washer
12	125-2273	1	Spring	38	33023-00	8	Nut-Lock
13	104-3018	1	Pad-Pedal	39	87-5150	2	Bolt
14	106-8573	1	Baffle-Center	40	52-6430	6	Washer
15	106-8572	2	Plate-Baffle, Center	41	87-5140	6	Nut-Lock
16	106-8586	1	Gasket-Door, Mulch	42	119-5477	4	Screw
17	106-8567	1	Guide	43	106-8574	4	Screw
18	106-8587	2	Kicker	44	104-1451	2	Screw-TAP, PPH
19	125-2274	2	Connection	45	116-0720	4	Bearing-Ball
20	125-2275	2	Nut	46	108-8709	2	Washer-Flat
21	125-2186	2	Wheel-Gauge	47	33115-070	2	Screw-HH
22	131-2703	2	Spacer	48	33023-00	2	Nut-Lock
23	106-8558	1	Blade-LH	49	125-2259	1	LH Spindle Housing ASM
24	106-8557	1	Blade-RH	50	125-2260	1	RH Spindle Housing ASM
25	106-6530	2	Spacer	51	104-3085	6	Bolt-HHF


Travel Pedals and Brake Assembly

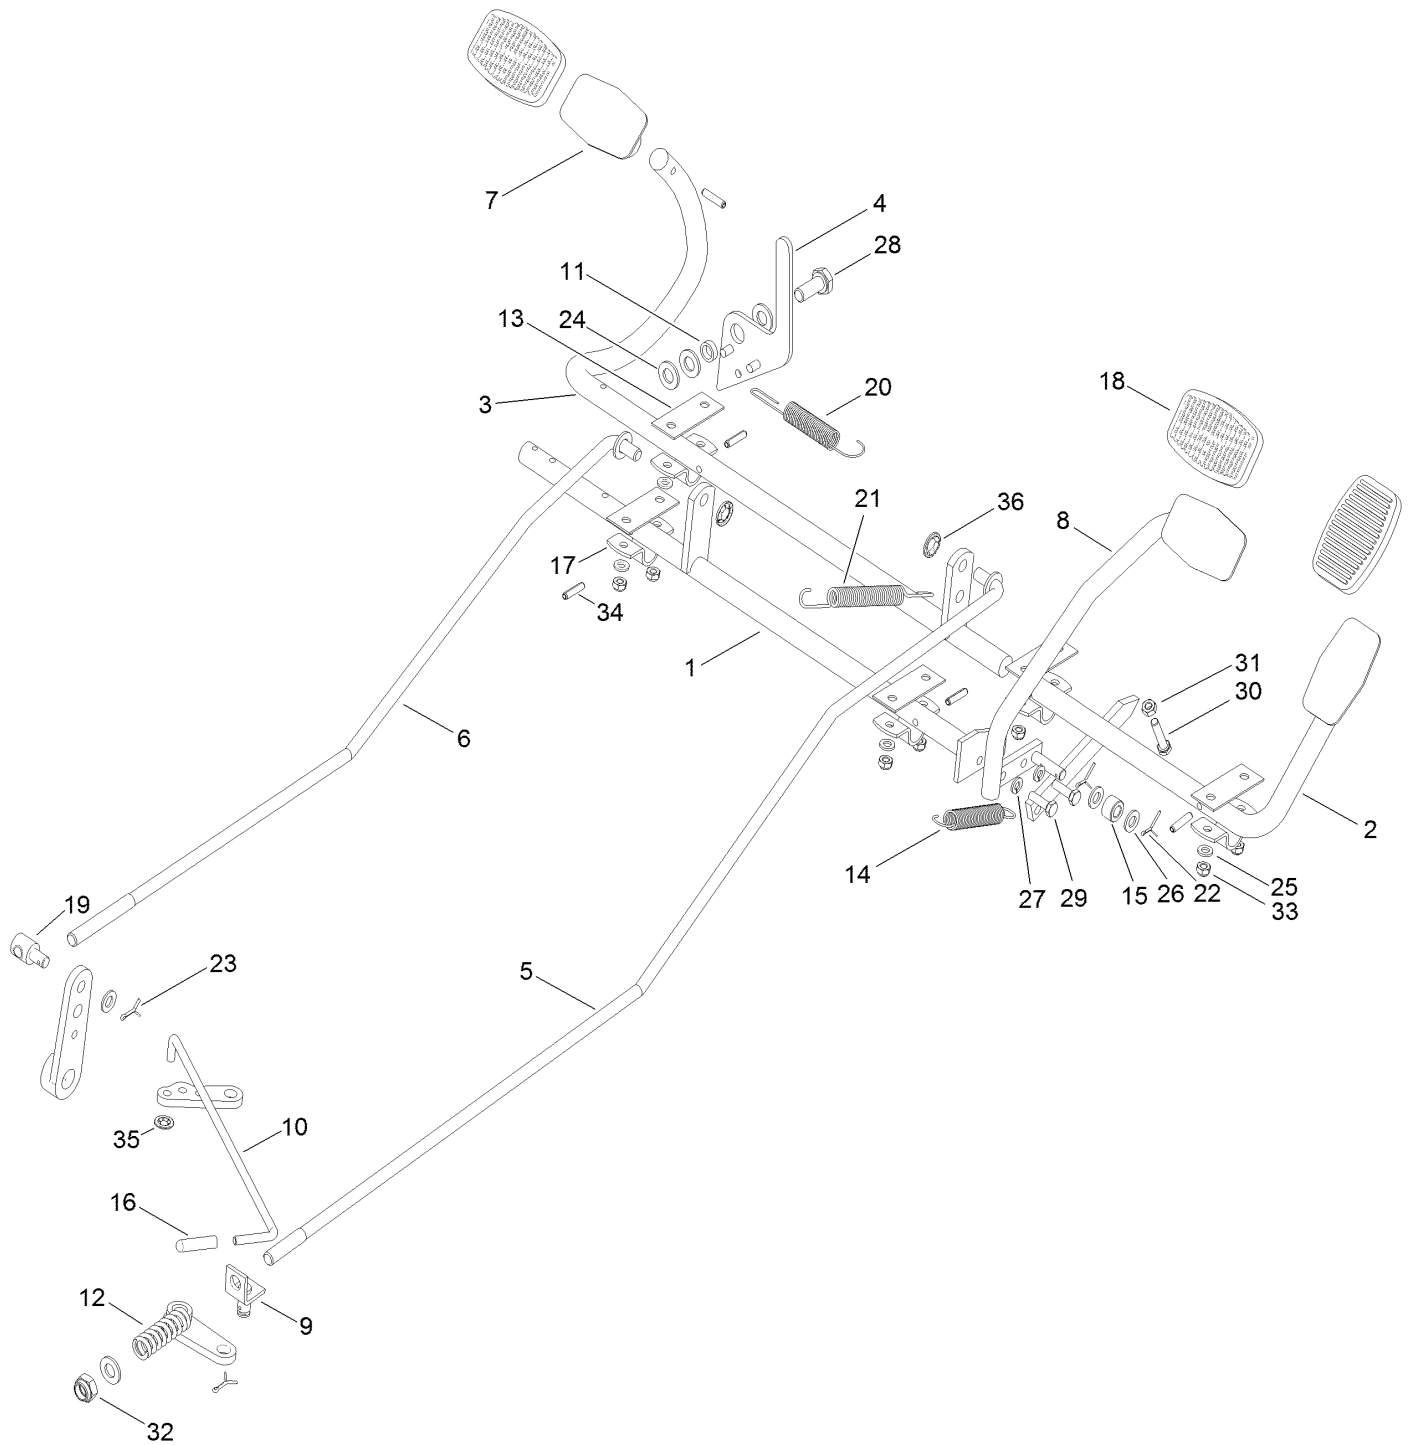

Travel Pedals and Brake Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-2278	1	Shaft-Diagonal	19	104-3029	1	Pin
2	125-2279	1	Pedal-Travel, Rear	20	104-3005	1	Spring-Brake, Hand
3	125-2280	1	Pedal-Brake	21	104-3001	1	Spring
4	125-2282	1	Lever-Brake, Hand	22	104-3151	2	Pin-Cotter
5	125-2287	1	Rod-Connecting, Brake	23	104-3027	2	Pin-Cotter
6	125-2286	1	Rod-Tie	24	33095-00	4	Washer-Flat
7	120-8763	1	Pedal	25	104-3193	10	Washer
8	120-8723	1	Pedal-Travel, Forward	26	106-4756	3	Washer-Plain
9	104-3011	1	Bracket-Rod, Brake	27	104-3186	2	Washer-Spring
10	125-2284	1	Rod-Lever, Bypass	28	104-3041	1	Screw-Hex
11	125-2283	1	Spacer	29	33113-016	2	Screw-HH
12	125-2288	1	Spring-Brake	30	33113-030	1	Screw-HH
13	119-2434	5	Spacer	31	104-2991	1	Nut-Hex
14	119-2436	1	Spring	32	33025-00	1	Nut-Lock, NI
15	106-8581	1	Roller	33	33023-00	10	Nut-Lock
16	108-8708	1	Cap-Bypass Lever, Hydro	34	104-3008	5	Pin-Spring
17	119-2433	5	Clamp	35	125-2285	1	Ring-Locking
18	104-3018	3	Pad-Pedal	36	125-2281	2	Ring-Locking


Battery and Electrical Assembly

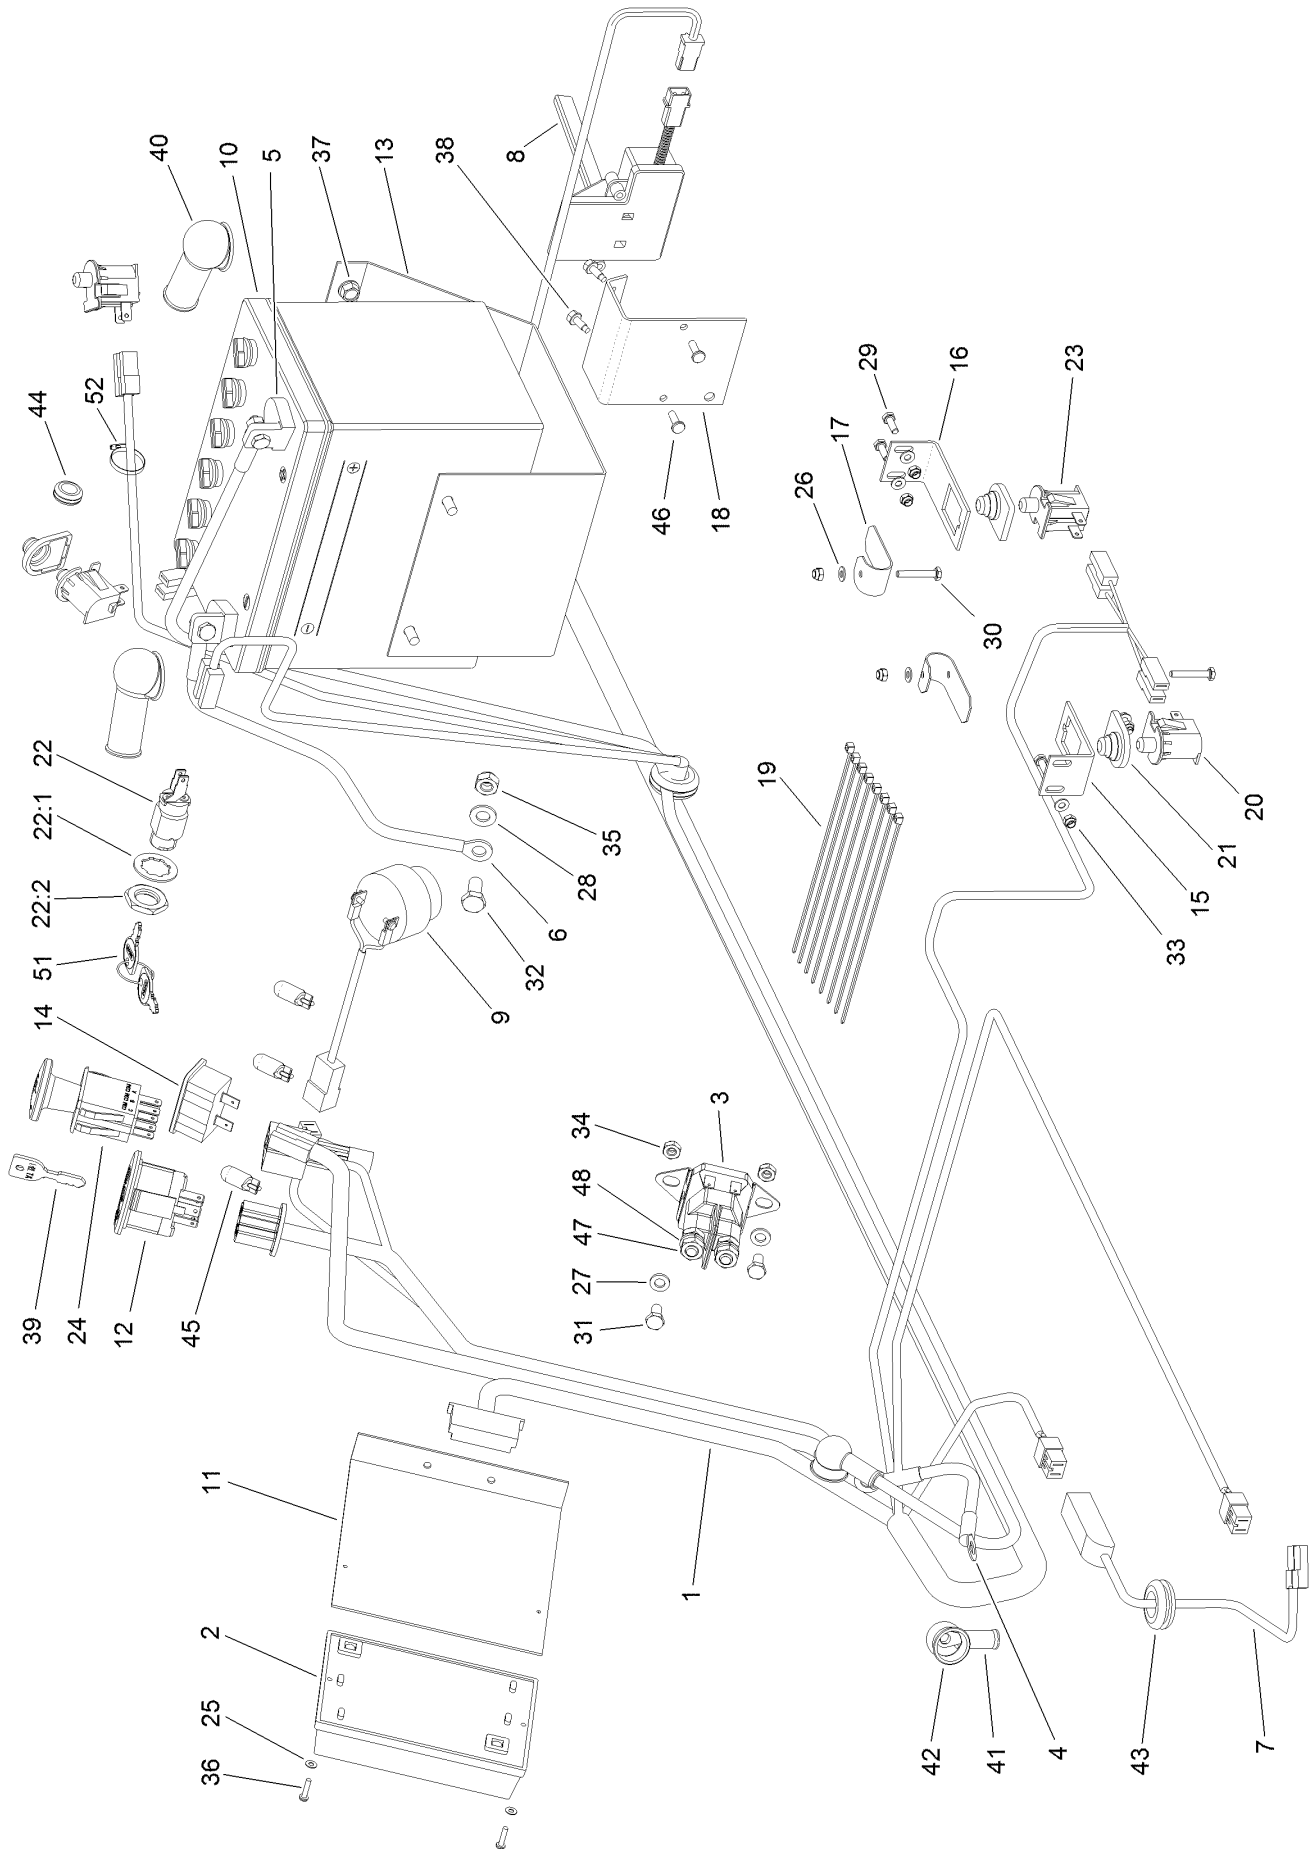

Battery and Electrical Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-2289	1	Harness-Wiring	25	119-5437	2	Washer
2	125-2294	1	Module-Control	26	104-2984	6	Washer
3	740207	1	Solenoid	27	104-3193	2	Washer
4	125-2300	1	Cable-Starter	28	33094-00	1	Washer-Plain
5	120-8729	1	Cable-Battery, Positive	29	125-2304	4	Screw
6	119-5417	1	Cable-Battery, Negative	30	104-3009	2	Screw-Hex
7	119-5430	1	Harness-Clutch	31	33113-012	2	Screw-HH
8	104-3074	1	Overload Switch ASM	32	33114-016	1	Screw-HH
9	119-5511	1	Buzzer	33	104-2985	6	Nut-Hex
10	104-3152	1	Battery-12V	34	33023-00	2	Nut-Lock
11	125-2293	1	Holder-Module	35	33024-00	1	Nut-Lock, NI
12	125-2295	1	Switch-Ignition	36	119-5436	2	Screw
13	125-2290	1	Holder-Battery	37	106-5763	4	Screw
14	125-2296	1	Hourmeter	38	104-2977	2	Screw-TAP
15	125-2291	1	Holder	39	119-5510	2	Key-Ignition
16	125-2292	1	Holder	40	104-3154	2	Boot-Rubber
17	125-2305	2	Lever-Spring	41	104-3187	2	Boot-Rubber
18	119-5431	1	Bracket-Switch	42	32128-32	1	Nut-HHF
19	3334-945	8	Tie-Cable	43	125-2302	3	Bushing
20	104-3179	3	Switch-Delta	44	125-2303	1	Bushing
21	104-3178	3	Cover-Protective	45	104-3176	4	Bulb
22	46-5780	1	Starter Switch ASM	46	104-3349	2	Screw
22:1	3254-5	1	Washer-Tooth, Internal	47	32128-32	4	Nut-HHF
22:2	218-461	1	Nut-HH	48	104-2927	2	Washer-Spring
23	125-2298	1	Switch-Delta	51	62-7770	2	Key-Ignition
24	103-5221	1	Switch-PTO	52	104-3157	1	Clip-Snap


Body and Hood Assembly

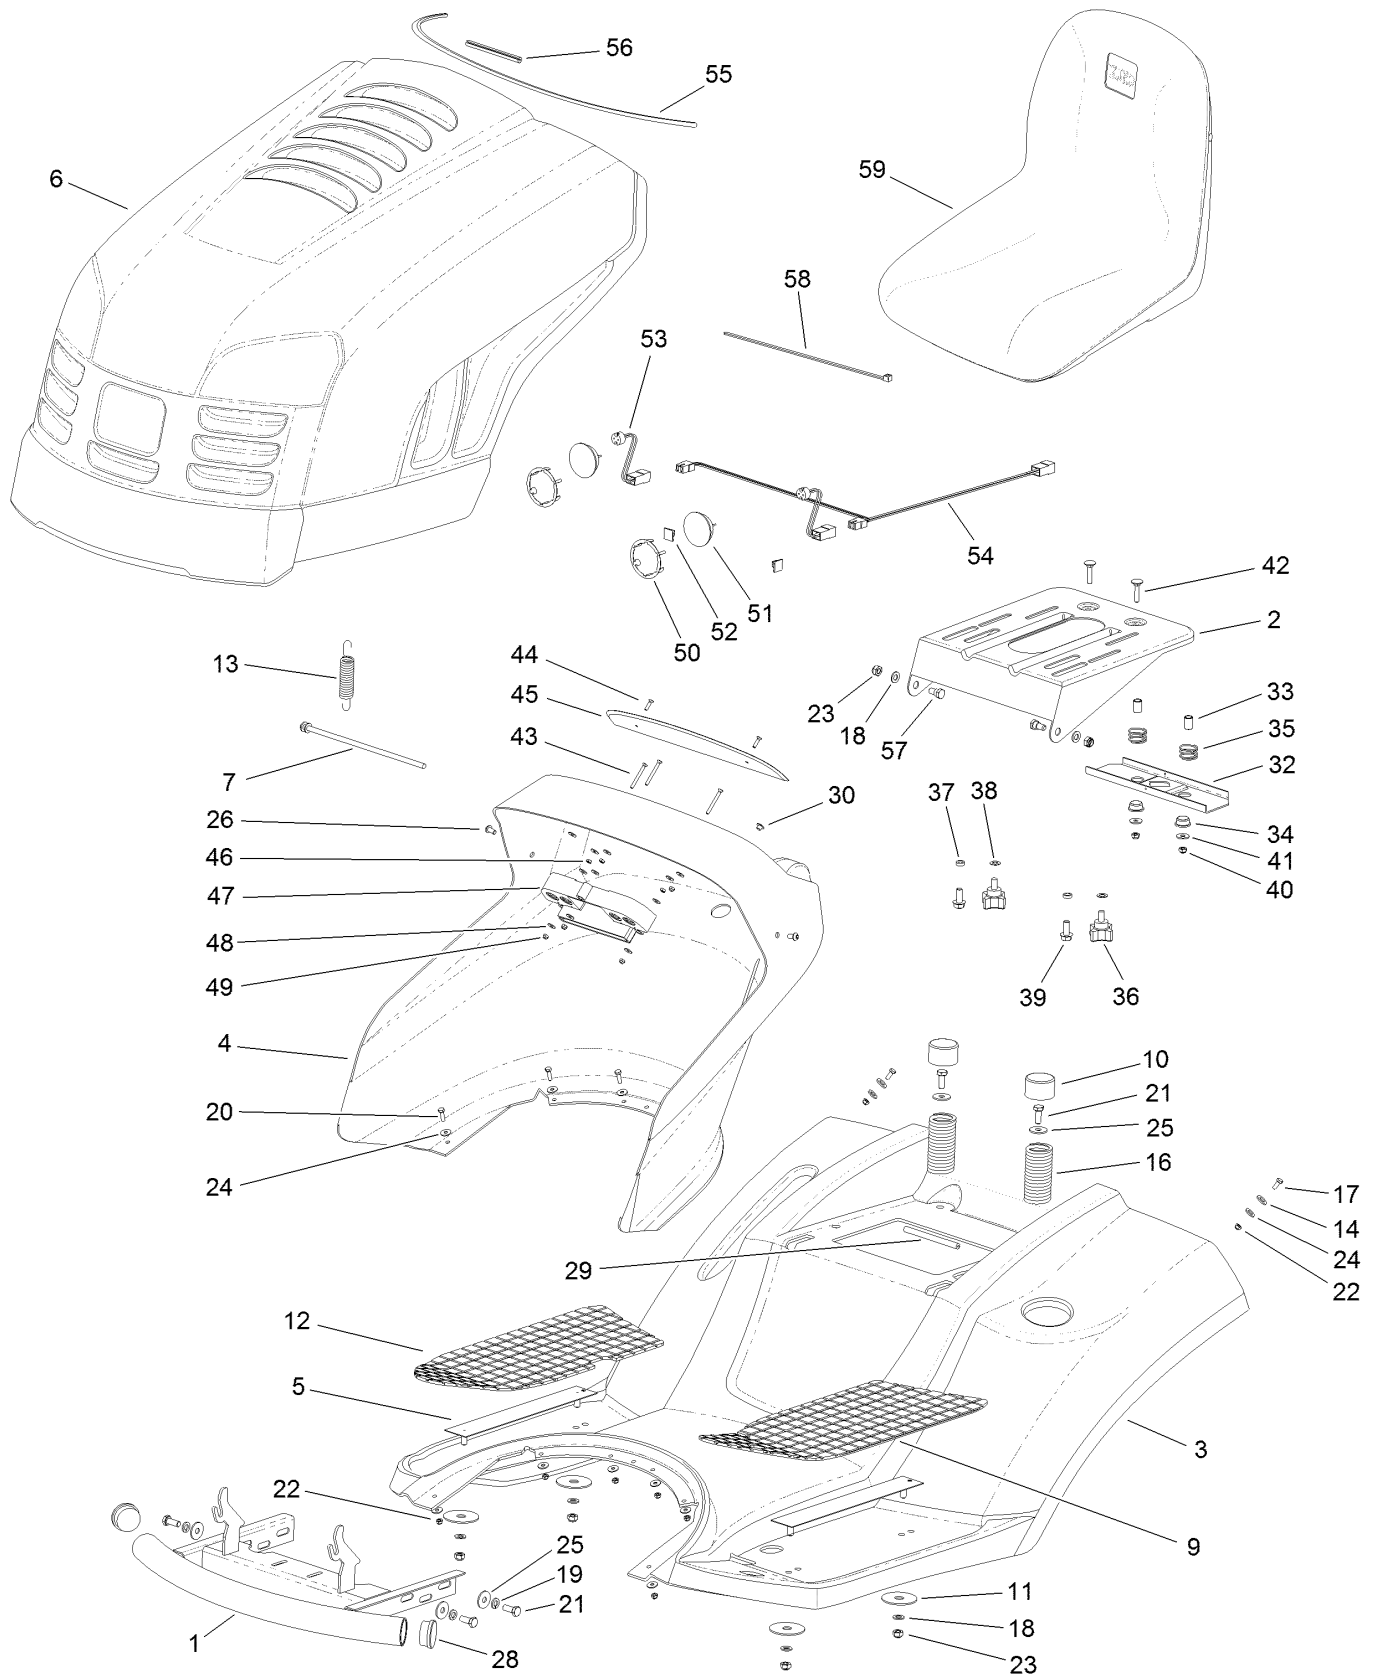

Body and Hood Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-2320	1	Bumper	33	104-2933	2	Spacer-Split
2	119-5513	1	Bracket-Support, Seat	34	104-2935	2	Bushing
3	125-2306	1	Fender-Rear	35	119-5514	2	Seat-Spring
4	125-2307	1	Panel-Dash	36	119-5456	2	Knob-Adjust
5	125-2321	2	Holder	37	119-5457	2	Spacer
6	125-2317	1	Hood ASM	38	104-2936	2	Washer-Spring
7	125-2324	1	Holder-Spring	39	104-2939	2	Screw-Support, Seat
9	125-2322	1	Mat-Foot, LH	40	33023-00	2	Nut-Lock
10	104-2857	2	Cap-Hub	41	104-2931	2	Washer-Flat
11	119-5500	4	Washer-Rubber	42	33123-030	2	Screw-CARR
12	120-8745	1	Mat-Foot, RH	43	104-3191	3	Screw
13	104-2975	1	Spring-Hood	44	125-2310	2	Screw
14	104-2952	2	Washer-Rubber	45	125-2308	1	Lens-Dash
16	104-2945	2	Spring-Seat	46	125-2309	3	Nut
17	104-2980	2	Screw	47	92-6732	1	Housing-Light, Indicator
18	33094-00	6	Washer-Plain	48	104-3175	11	Washer
19	104-2927	4	Washer-Spring	49	104-2985	5	Nut-Hex
20	107-8918	6	Screw	50	125-2319	2	Socket-Lamp
21	33114-020	6	Screw-HH	51	125-2318	2	Bulb-Light
22	87-5140	8	Nut-Lock	52	104-3167	2	Clip-Nylon
23	33024-00	6	Nut-Lock, NI	53	125-2314	2	Harness-Wiring, Light Bulb
24	104-2943	14	Washer-Flat	54	125-2315	1	Harness-Wiring, Light
25	104-2946	6	Washer-Plain	55	125-2194	1	Trim-Rubber, Hood
26	33113-012	2	Screw-HH	56	125-2312	1	Gasket-Foam
28	125-2323	2	Cover	57	104-2939	2	Screw-Support, Seat
29	125-2313	1	Trim-Rubber	58	3334-945	1	Tie-Cable
30	125-2187	1	Cover	59	107-2213	1	Seat ASM
32	104-2934	1	Bracket				


Tunnel and Collector Plate Assembly

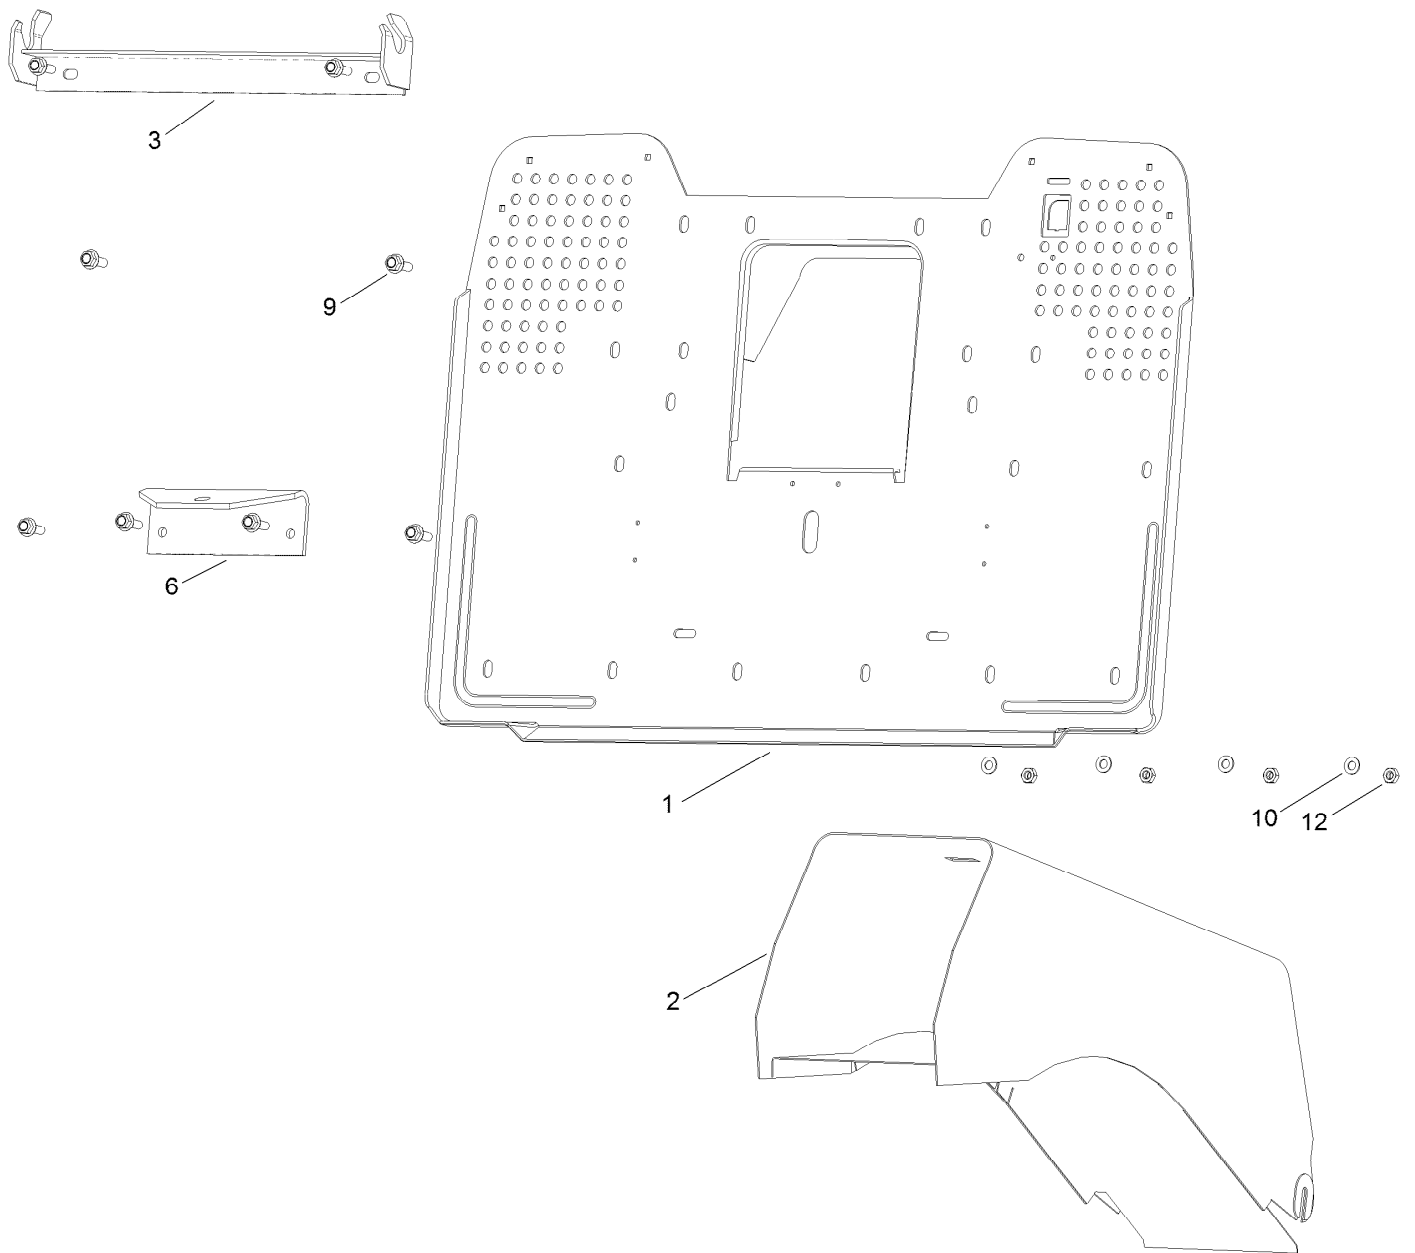

Tunnel and Collector Plate Assembly (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-2336	1	Collector Plate ASM	9	119-5483	8	Screw
2	120-8767	1	Tunnel	10	33094-00	4	Washer-Plain
3	125-2337	1	Support-Collector	12	33024-00	4	Nut-Lock, NI
6	119-5516	1	Hitch-Tow				

Grass Collector Assembly No. 125-2325

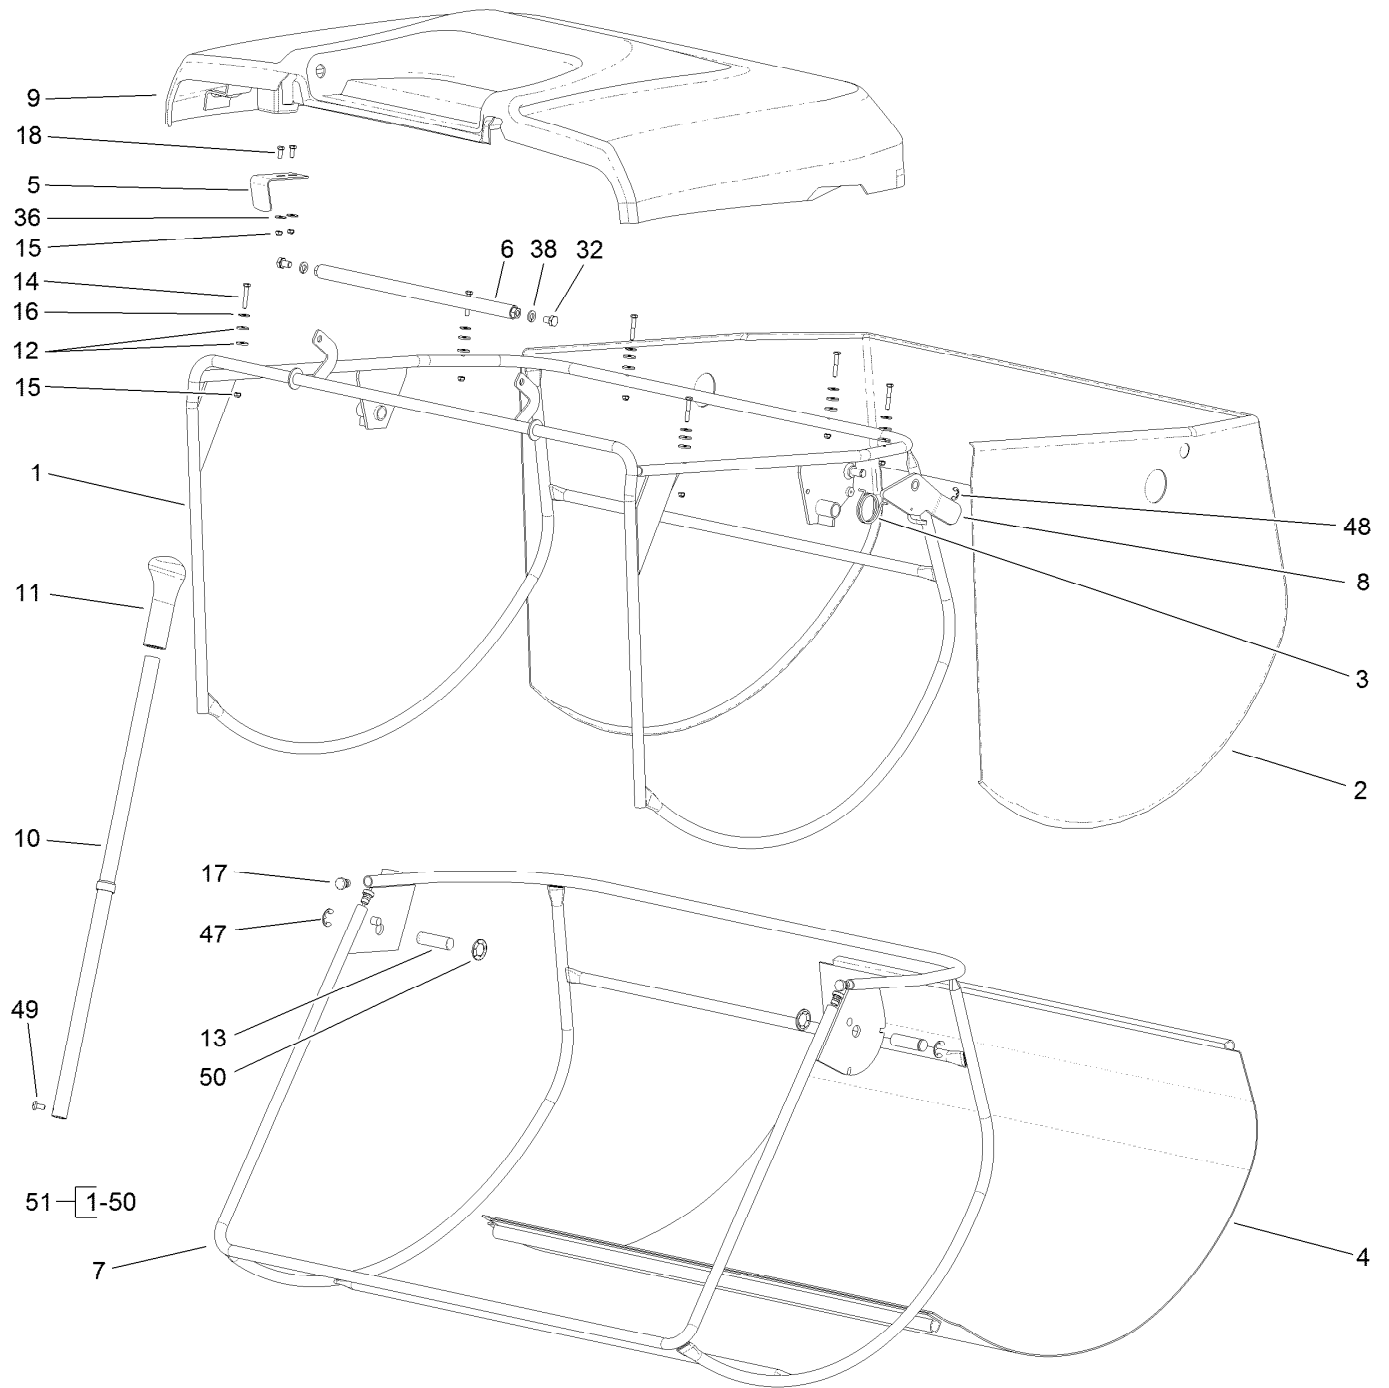

Grass Collector Assembly No. 125-2325 (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-2326	1	Frame ASM	14	106-5759	6	Screw
2	125-2328	1	Bag-Grass, Upper	15	87-5140	8	Nut-Lock
3	125-2331	1	Spring	16	104-2952	12	Washer-Rubber
4	125-2332	1	Bag-Grass, Lower	17	119-5475	4	Cap
5	125-2334	1	Spring-Coil, Interlock Switch	18	107-8918	2	Screw
6	125-2327	1	Handle-Lift	32	68-9410	2	Screw-HHF
7	125-2329	1	Lower Frame ASM	36	52-6430	2	Washer
8	125-2330	1	Lever-Arrestment	38	104-2927	2	Washer-Spring
9	125-2333	1	Cover-Collector	47	104-3015	2	E-Clip
10	125-2335	1	Lever-Dump	48	106-8592	1	Ring-Locking
11	120-8737	1	Handle-Mulching	49	106-5763	1	Screw
12	104-2943	6	Washer-Flat	50	119-5478	1	Ring-Lock
13	119-5469	1	Pin	51	125-2325	1	Grass Collector ASM

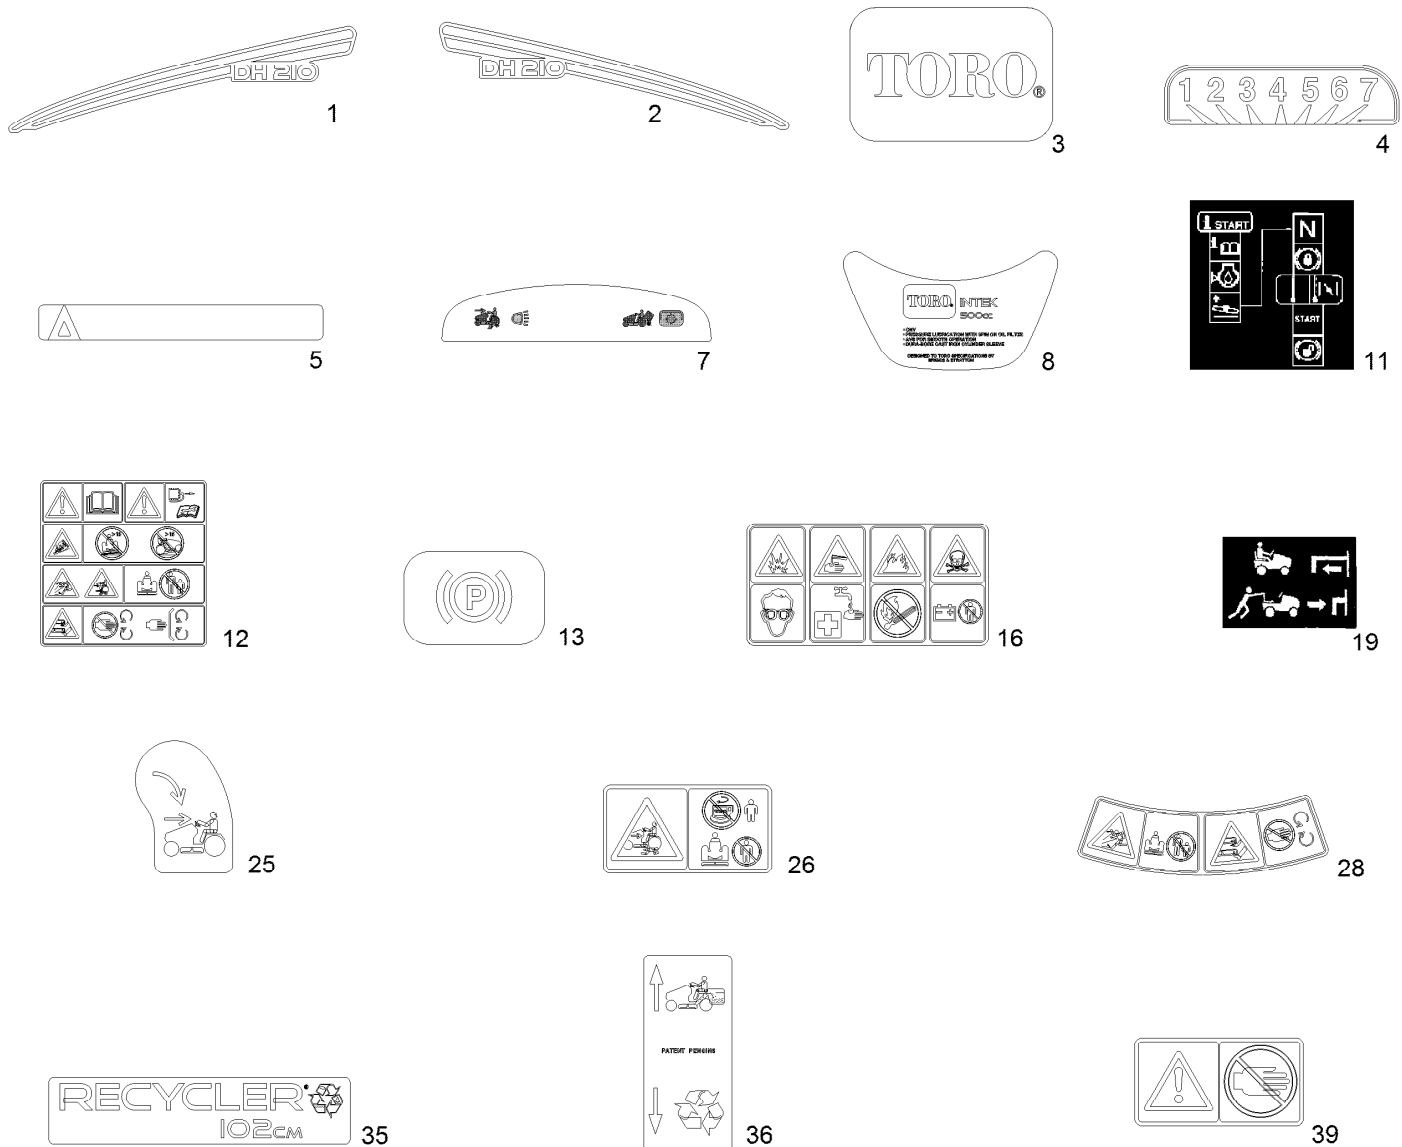

Decal Assembly


Ref.	Part Number	Qty.	Description
1	111-5604	1	Decal-Hood, Left
2	111-5605	1	Decal-Hood, Right
3	117-0871	1	Decal
4	111-5942	1	Decal-HOC
5	111-5953	1	Decal-HOC
7	125-2343	1	Decal-Panel
8	110-6627	1	Decal-Engine
11	119-5517	1	Decal-Instructions, Operating
12	119-2725	1	Decal-Danger

Ref.	Part Number	Qty.	Description
13	104-3237	1	Decal-Brake, Parking
16	93-7276	2	Decal-Danger
19	125-2345	1	Decal-Bypass
25	99-5340	1	Decal-Switch
26	119-2730	1	Decal-Danger
28	119-2726	2	Decal-Danger
35	119-2727	1	Decal-Recycler
36	106-8552	2	Decal-Operation
39	125-2189	2	Decal-Danger, Engine

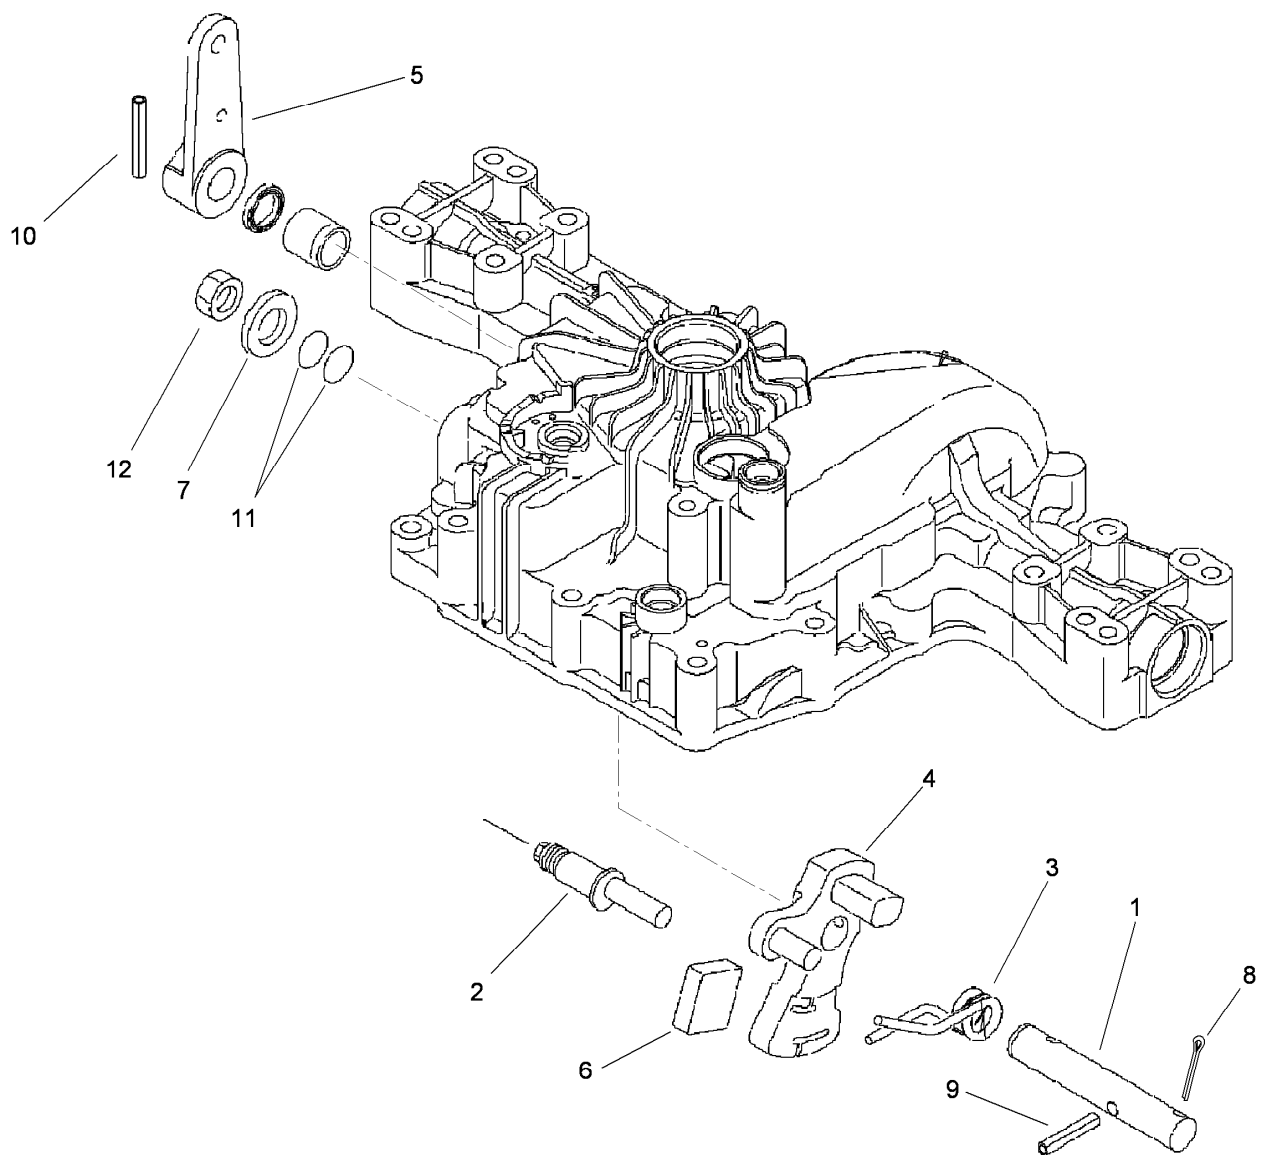


Control Shaft Assembly Transmission Assembly No. 114-3155

Ref.	Part Number	Qty.	Description
1	114-3181	1	Shaft-Control
2	104-3292	1	Fulcrum-Eccentricity
3	114-3217	1	Spring-Torsion
4	114-3180	1	Arm-Control
5	104-3342	1	Arm-Transaxle
6	104-3296	1	Plate-Jerky
7	93-0417	1	Washer
8	114-3182	1	Pin-Cotter
9	104-3297	1	Pin
10	93-0411	1	Pin-Roll
11	104-3298	2	Packing
12	93-0420	1	Nut

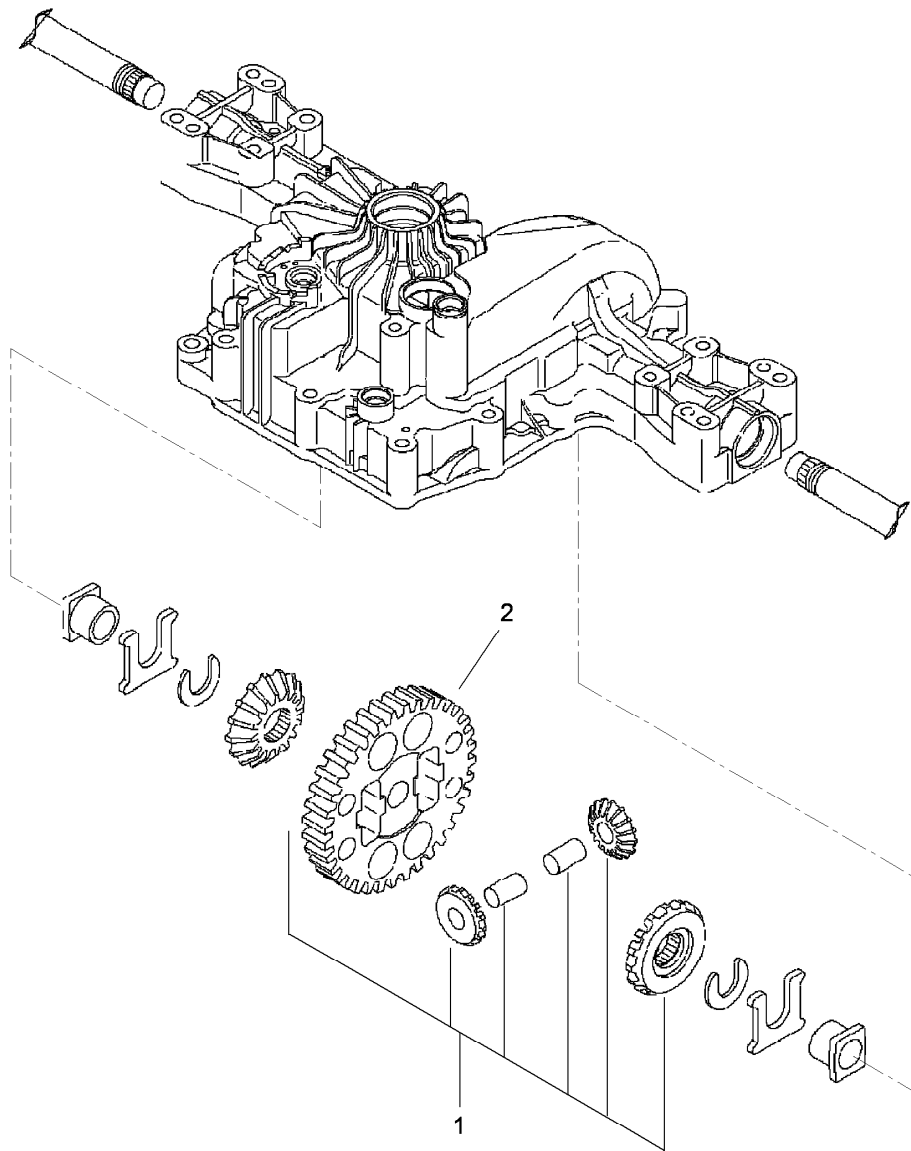


Differential Gear Assembly Transmission Assembly No. 114-3155

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-3299	1	Differential Gear Kit
2	104-3301	1	Gear-Final

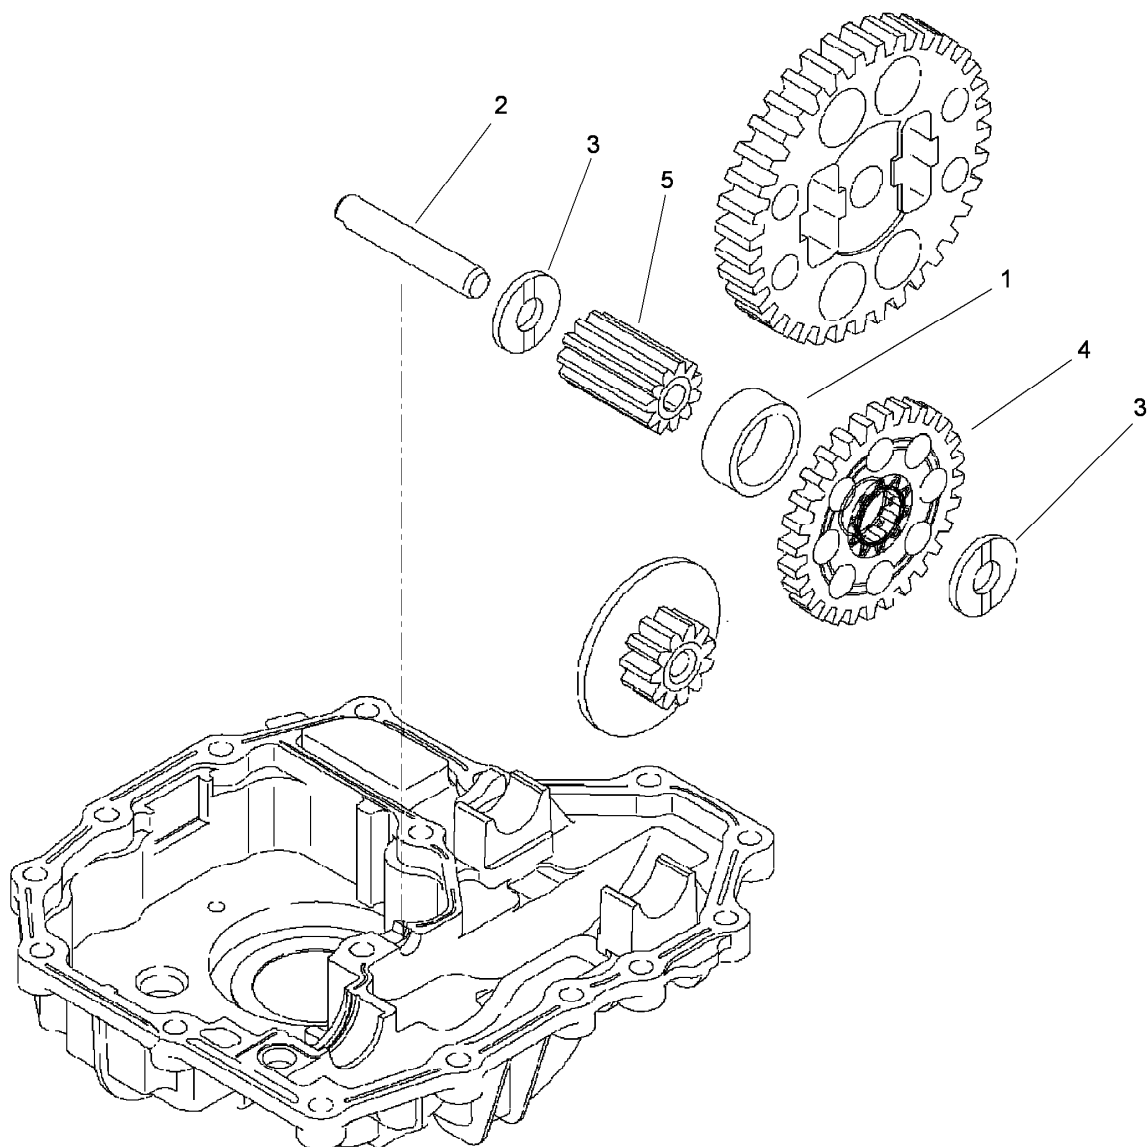


Final Pinion Assembly Transmission Assembly No. 114-3155

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-3302	1	Collar-Pinion, Final
2	104-3303	1	Shaft-Reduction
3	104-3304	2	Washer
4	104-3305	1	Gear-Reduction
5	104-3306	1	Pinion-Final

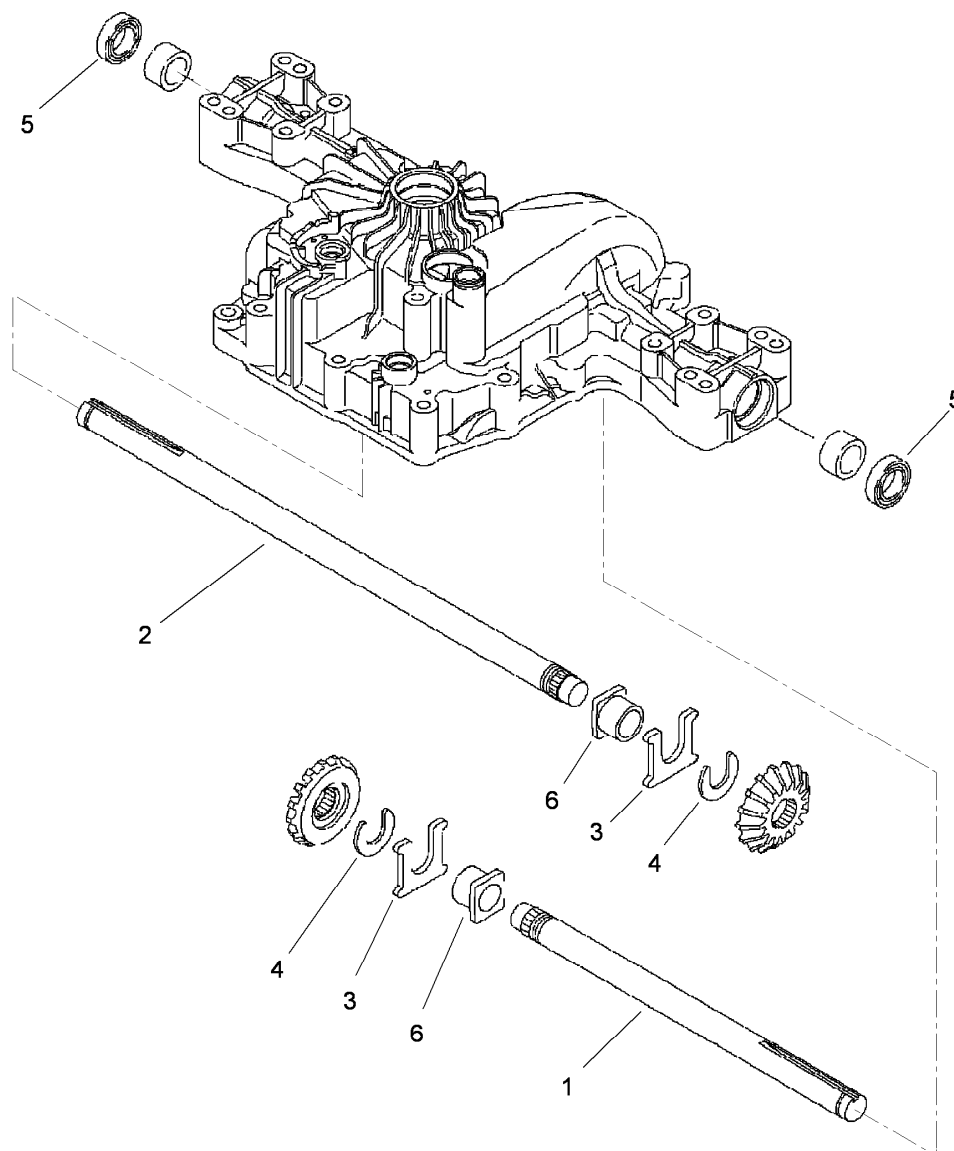


Axle Shaft Assembly Transmission Assembly No. 114-3155

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-3307	1	Shaft-Axle, RH
2	104-3308	1	Shaft-Axle, LH
3	104-3309	2	Washer-Thrust
4	104-3310	2	Ring
5	104-3311	2	Seal
6	104-3312	2	Bushing

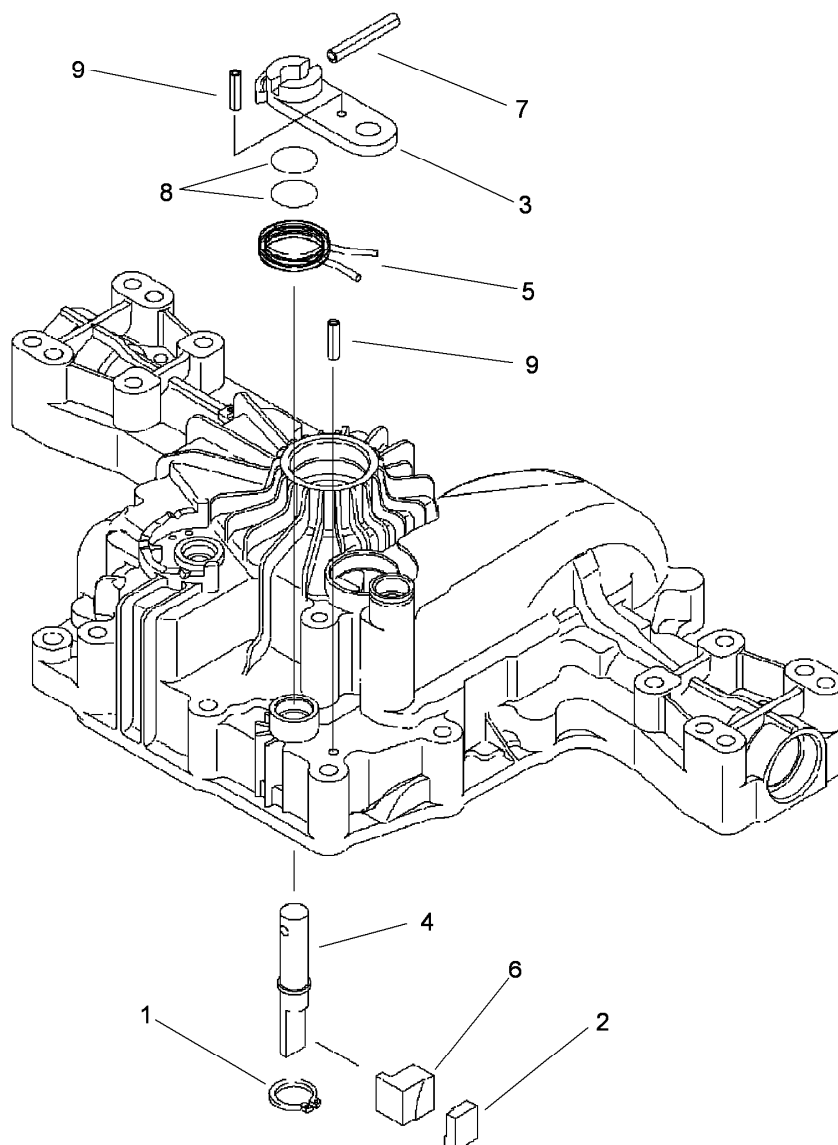


Brake Assembly Transmission Assembly No. 114-3155

Ref.	Part Number	Qty.	Description
1	104-3313	1	Ring
2	104-3314	1	Shoe-Brake
3	104-3315	1	Arm-Brake
4	104-3316	1	Shaft-Brake
5	104-3317	1	Spring-Return, Brake
6	104-3318	1	Actuator-Brake
7	92-0767	1	Pin
8	93-0418	2	O-Ring
9	104-3319	2	Pin

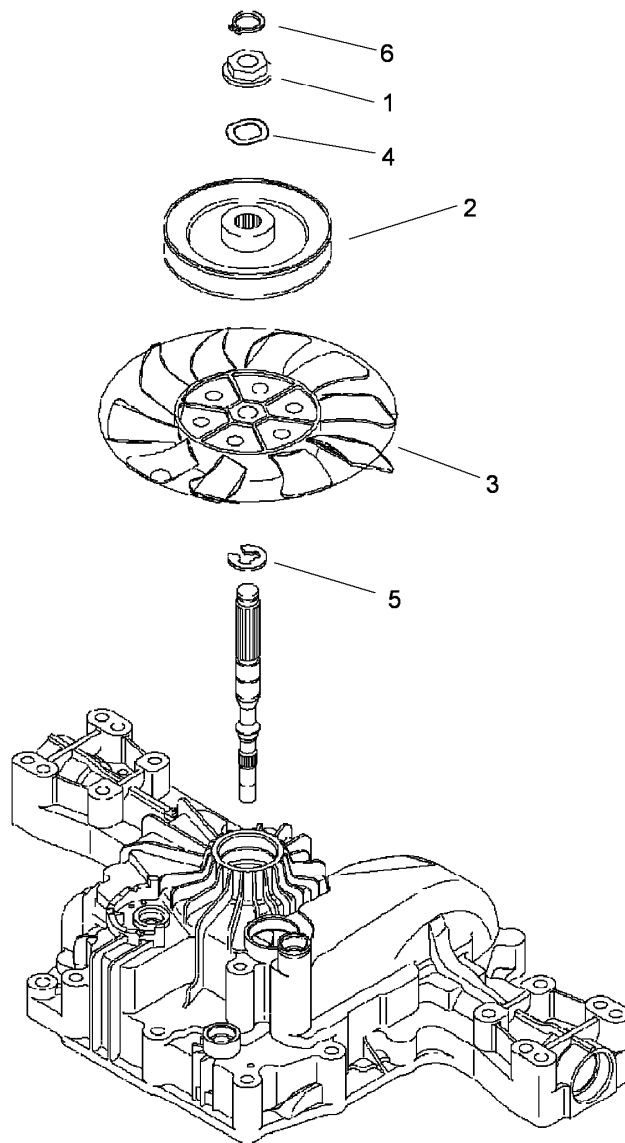


Fan Pulley Assembly Transmission Assembly No. 114-3155

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-3320	1	Collar-Spline
2	104-3197	1	Pulley-Transmission
3	104-3199	1	Fan-Transmission
4	104-3321	1	Washer-Lock
5	93-0387	1	E-Ring
6	104-3198	1	E-Ring

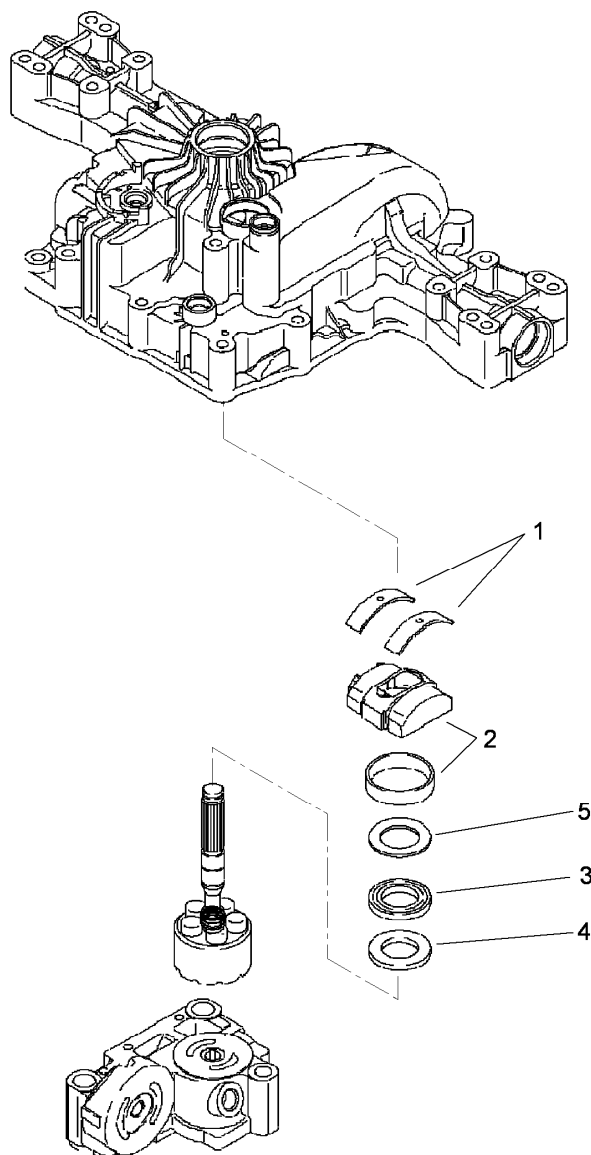


Range Shift Assembly Transmission Assembly No. 114-3155

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-3286	2	Metal-Thrust
2	104-3287	1	Plate-Swash
3	104-3288	1	Bearing
4	104-3289	1	Plate-Thrust, A
5	104-3290	1	Plate-Thrust, B

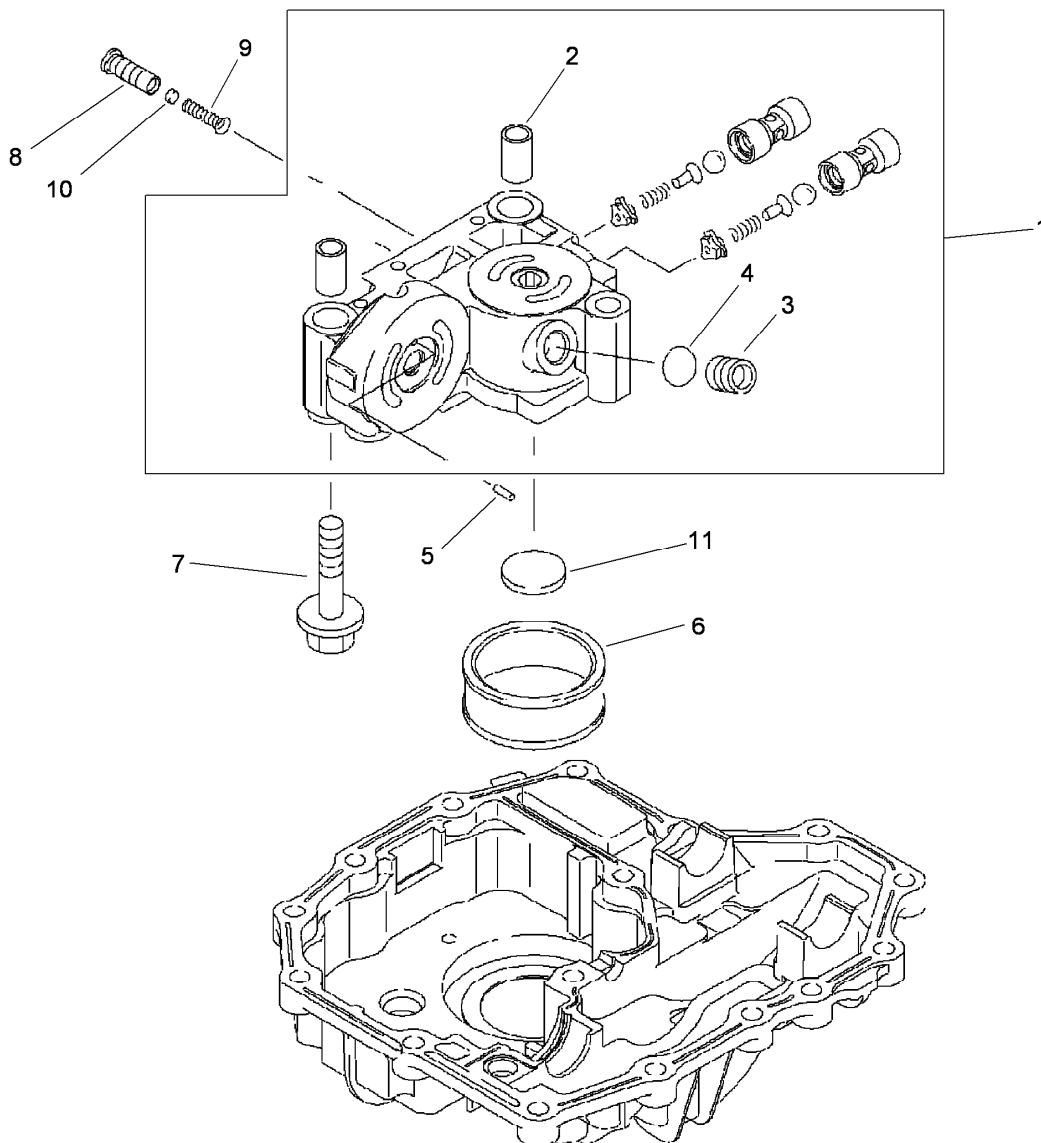


Center Case Assembly Transmission Assembly No. 114-3155

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-3267	1	Case-Center
2	104-3268	2	Pin-Knock
3	104-3269	1	Plug
4	93-0419	1	Packing
5	104-3270	1	Pin
6	104-3271	1	Filter
7	104-3272	3	Bolt
8	104-3273	2	Valve
9	104-3274	2	Spring
10	104-3275	2	Filter
11	104-3257	1	Magnet

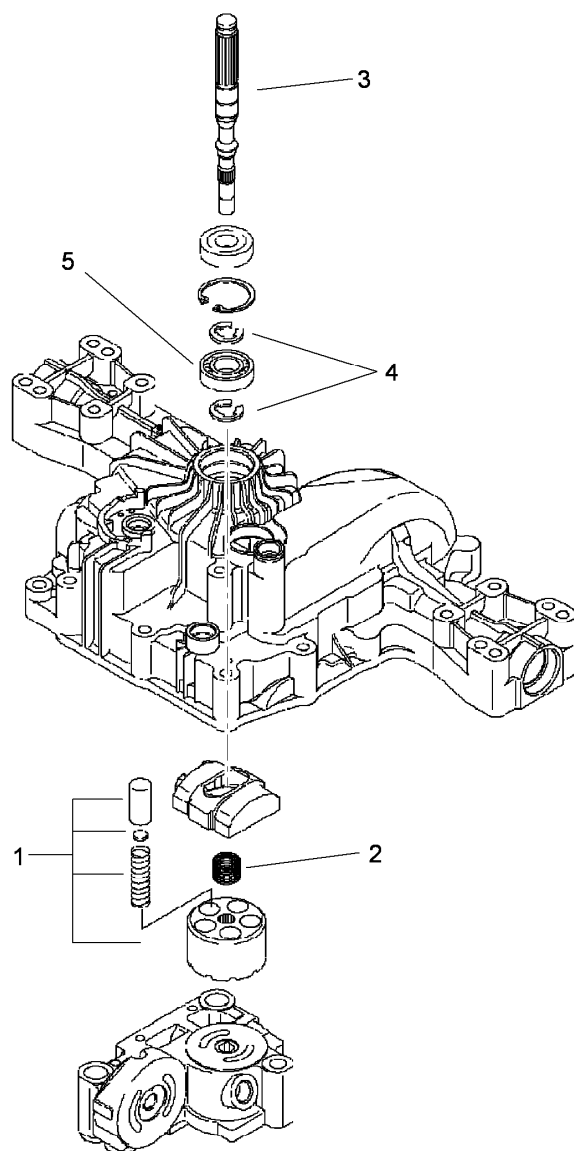


Pump Shaft Assembly Transmission Assembly No. 114-3155

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-3276	1	Block-Cylinder
2	104-3277	1	Spring-Pump
3	104-3278	1	Shaft-Pump
4	93-0387	2	E-Ring
5	93-0374	1	Bearing-Ball

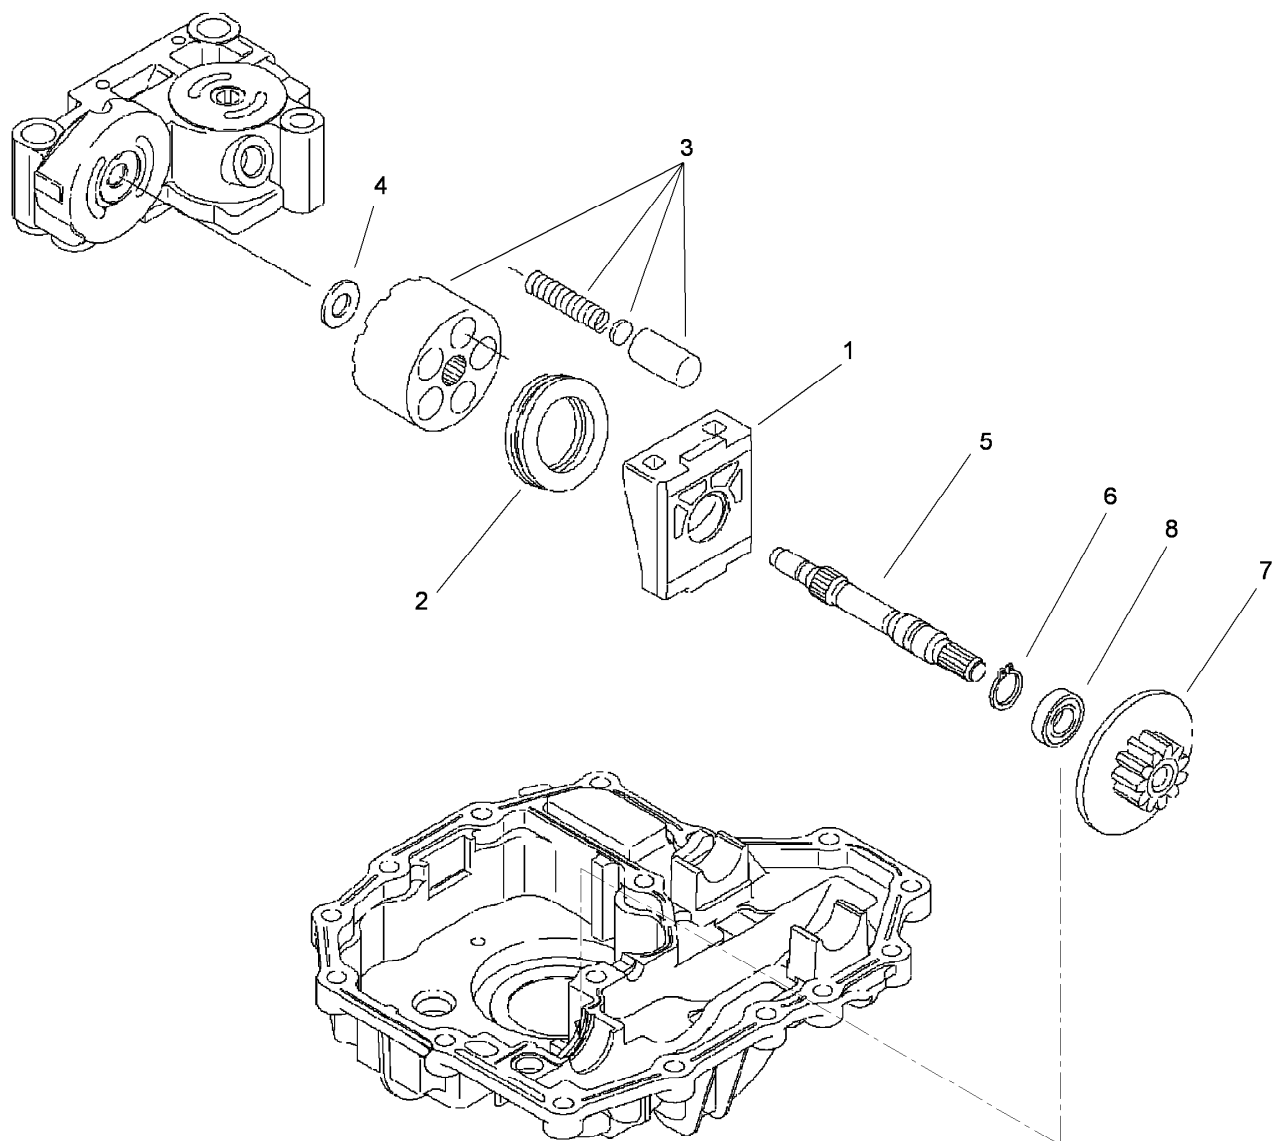

Motor Shaft Assembly Transmission Assembly No. 114-3155

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-3279	1	Housing
2	104-3280	1	Bearing
3	104-3281	1	Block-Cylinder
4	104-3282	1	Washer
5	104-3283	1	Shaft-Motor
6	93-0373	1	Ring-Snap
7	104-3284	1	Motor-Gear
8	104-3285	1	Bearing

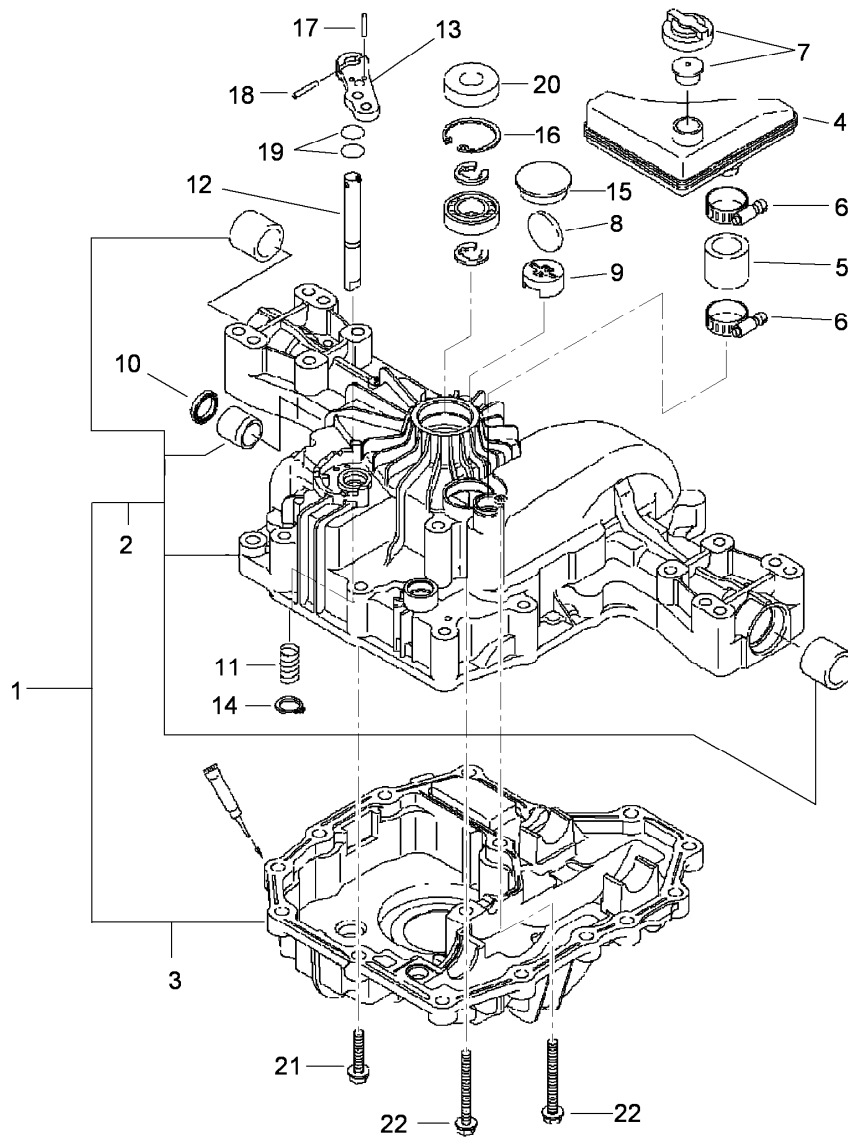

Transaxle Case Assembly Transmission Assembly No. 114-3155

Ref.	Part Number	Qty.	Description
1	104-3251	1	Transaxle Case Set
2	104-3252	1	Housing-Upper
3	104-3253	1	Housing-Lower
4	104-2914	1	Reservoir Tank ASM With Cap
5	104-3254	1	Tube
6	104-3255	2	Clamp-Miniature
7	104-3256	1	Valve-Vent, 15
8	104-3257	1	Magnet
9	104-3258	1	Holder-Magnet
10	104-3259	1	Seal-Oil
11	93-0396	1	Spring

Ref.	Part Number	Qty.	Description
12	104-3260	1	Shaft-Bypass
13	104-3261	1	Lever-Bypass
14	104-3262	1	Ring
15	104-3263	1	Plug-Bore
16	93-0360	1	Ring
17	104-3264	1	Pin
18	104-3265	1	Pin
19	93-0419	2	Packing
20	93-0361	1	Seal
21	93-0363	14	Screw-TAP
22	104-3266	2	Screw-Tap

Attachments and Accessories

For 74596 DH 220 Lawn Tractor

Product Name	Model/Part
Belt Guard Kit	111-6941
Rear Discharge Chute Kit	117-0054

Notes:



Count on it.