




STAND-ON SPREADER SPRAYER

Model No. SSS270CSB00000—Serial No. 316000000 and Up

Picture below may not reflect actual product.

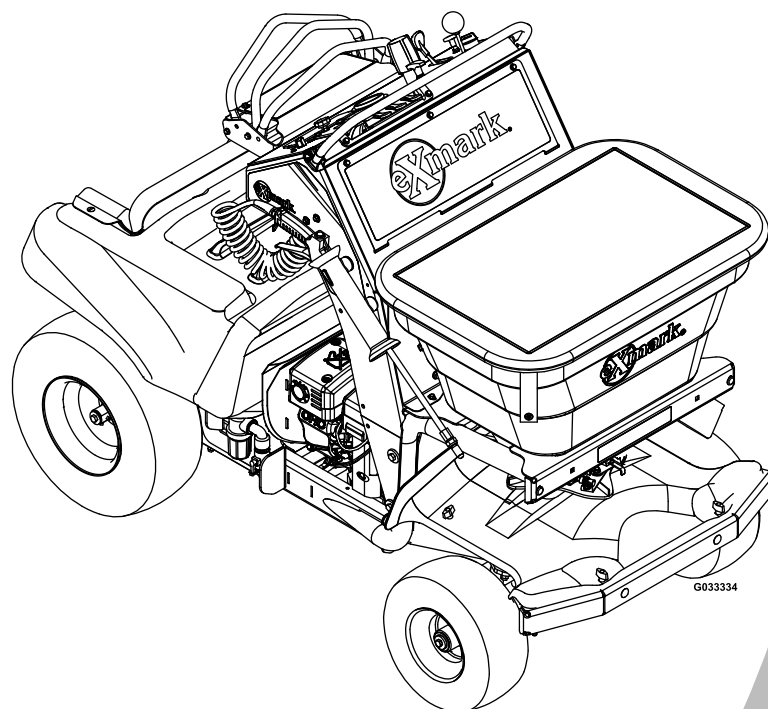

Parts Manual

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required	HLH: hex lag head	PTH: phillips truss head
ASM: assembly	HOC: height-of-cut	PTO: power-take-off
BBC: blade brake control	HP: high pressure	RH: right hand
BHTF: button head thread forming	HSBH: hex socket button head	ROPS: roll-over protection system
CARR: carriage	HSFH: hex socket flat head	RRB: rear roller brush
CCW: counter clockwise	HSH: hex socket head	SFH: slotted fillister head
CW: clockwise	HWH: hex washer head	SHH: slotted hex head
DEG: degrees	HWHTF: hex washer head thread forming	SHWH: slotted hex washer head
DPA: Dual Point Adjustment	HYD: hydraulic	SPH: slotted pan head
ECM: electronic control module	LH: left hand	SQH: square head
EXT: external	LP: low pressure	SRH: slotted round head
FH: flat head	LPG: Liquefied Petroleum Gas	STD: standard
GA: gauge	NI: nylon insert	TAP: self tapping
HD: heavy-duty	NPTF: national pipe thread fine	TTH: torx truss head
HF: hex flange	PFH: phillips flat head	
HH: hex head	PPH: phillips pan head	
HHF: hex head flange	PPHTF: phillips pan head thread forming	
HHFTF: hex head flange thread forming	PRH: phillips round head	
HJ: hex jam		

Touch Up Paint

Exmark black touch up spray paint – gloss black.

Exmark red touch up paint (spray paint – P/N 1-850337 - .6 oz liquid bottle – P/N 103-9140).




If your Exmark dealer does not have the Exmark part in stock, Exmark will get the parts to the dealer the next business day or the part will be FREE Guaranteed!! (Some restrictions apply. See your participating Exmark Dealer for details.)

Contents

Frame Assembly.....	4
Control Tower W/Decals No. 126-6398	6
Knee Pad Assembly.....	8
Steering Assembly.....	10
Steering Linkage Assembly	12
Spray System Assembly	14
Sprayer Tank Assembly.....	16
Control Valve Manifold Assembly	18
Control Valve Manifold Assembly (cont.)	20
Hose Assembly No. 126-2250	22
Hose Assembly No. 126-7304	24
Strainer Assembly	26
Left Nozzle Assembly No. 126-3667.....	28
Center Nozzle Assembly No. 126-3668	30
Right Nozzle Assembly No. 126-3669	32
Spreader Assembly	34
Side Deflector Assembly.....	36
Hopper Assembly.....	38
Spreader Motor Assembly	40
Ground Drive Assembly	42
Transaxle Cover Assembly No. 126-1462	44
Engine Assembly	46
Electrical Assembly	48

Frame Assembly

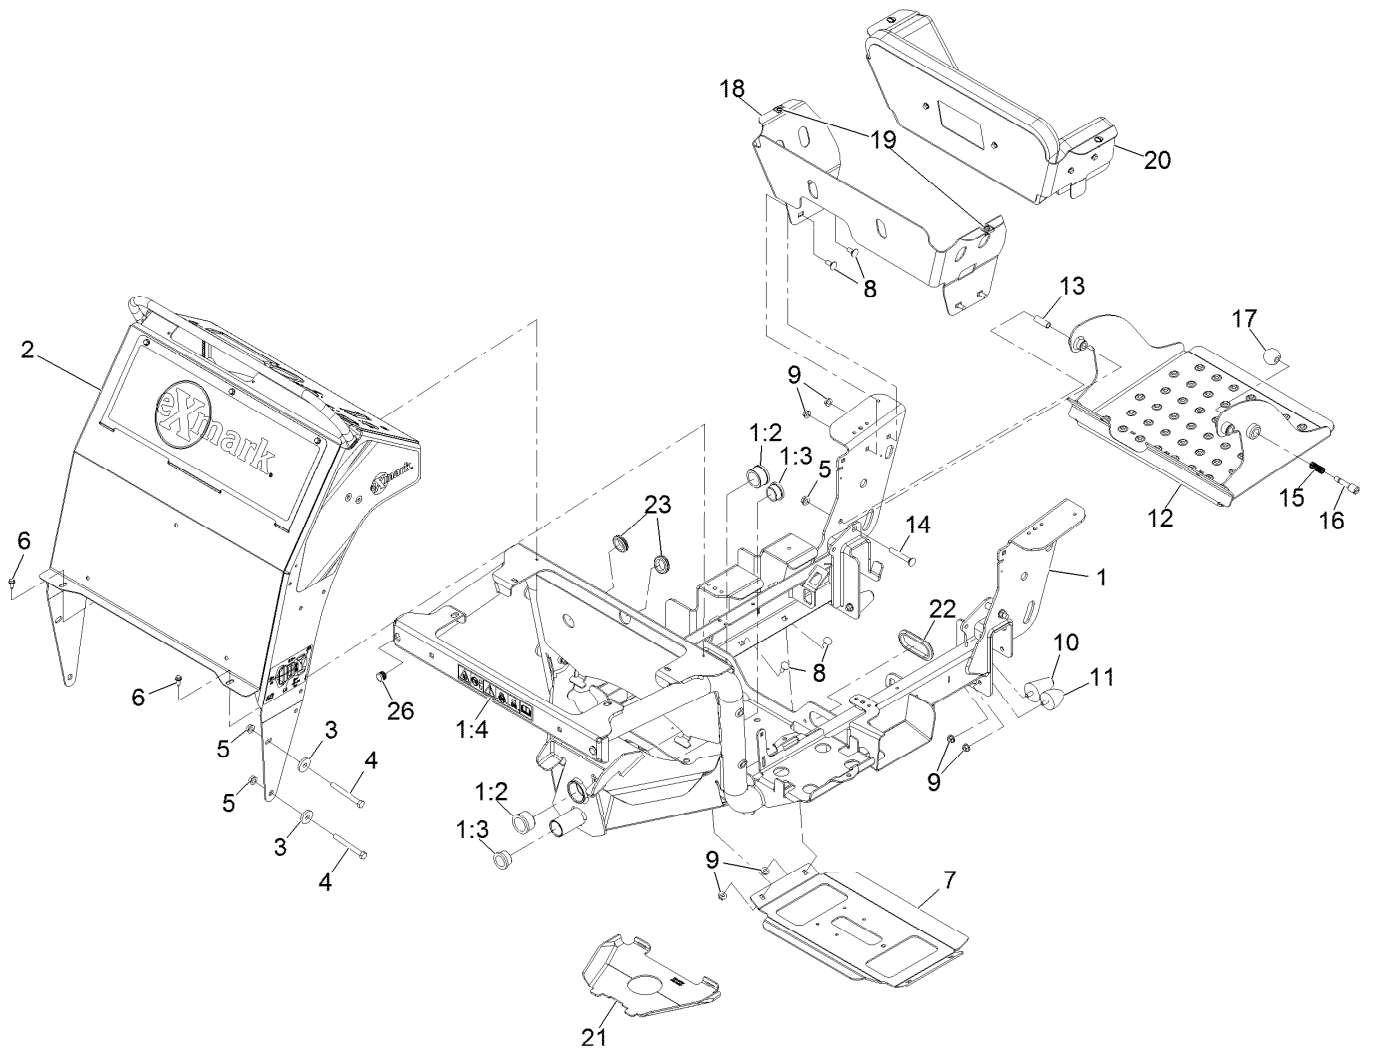


Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-0198	1	Frame ASM	12	126-0435	1	Operator Platform ASM
1:2	126-3008	2	Bearing-Flanged	13	126-0434	2	Bushing-Pivot, Platform
1:3	126-3002	2	Bearing-Flanged	14	126-0702	2	Screw-CARR
1:4	126-4994	1	Decal-Tie Down	15	114-5348	1	Spring
2	126-6398	1	Control Tower ASM	16	119-8650	1	Pin-Latch
3	126-3875	4	Washer	17	1-603175	1	Knob-Ball
4	126-2661	4	Screw-HH	18	126-1234-03	1	Mount-Pad, Knee
5	126-2233	6	Nut-Hex Flg 3/8-16 Nyloc Ss	19	119-1730	2	Receptacle-Clip, Mini
6	32144-10	2	Screw-HWH 1/4-20 X .62	20		1	Knee Pad ASM ●
7	126-1415	1	Guard-Lower	21	126-2567	1	Shield-Dust
8	126-0695	8	Screw-CARR	22	237-164	2	Grommet
9	126-2232	12	Nut-Nyloc 5/16-18 Ss	23	240-5	2	Grommet
10	114-1925	2	Bumper-Rubber	26	126-5147	2	Plug-Tube
11	114-1926	2	Bumper-Rubber				

● Not serviced separately

Control Tower W/Decals No. 126-6398

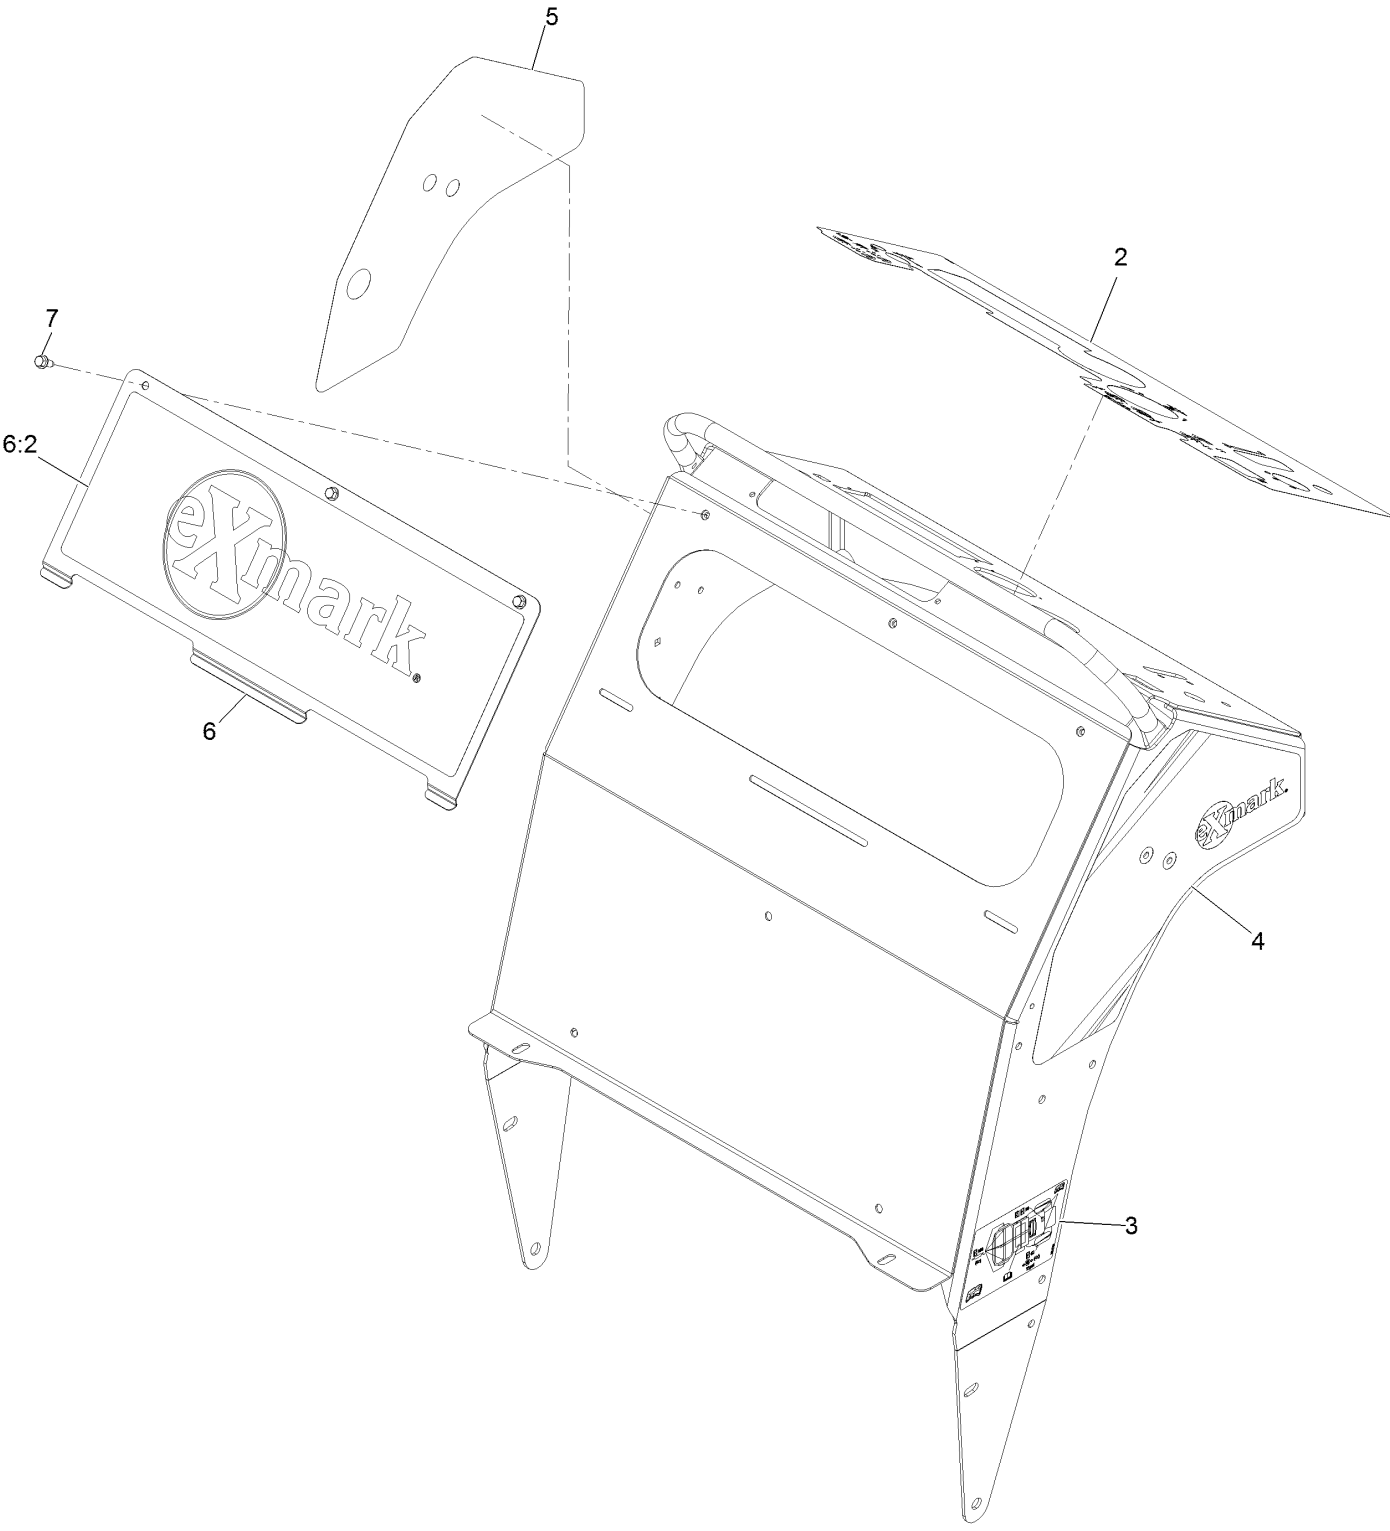


Control Tower W/Decals No. 126-6398 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	126-7312	1	Decal-Control
3	126-5186	1	Decal-Service Aid
4	126-7207	1	Decal-LH Side Panel
5	126-7208	1	Decal-RH Side Panel

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
6	126-7215	1	Access Panel W/ Decal
6:2	126-7206	1	Decal-Exmark Front Panel
7	32144-10	3	Screw-HWH 1/4-20 X .62

Knee Pad Assembly

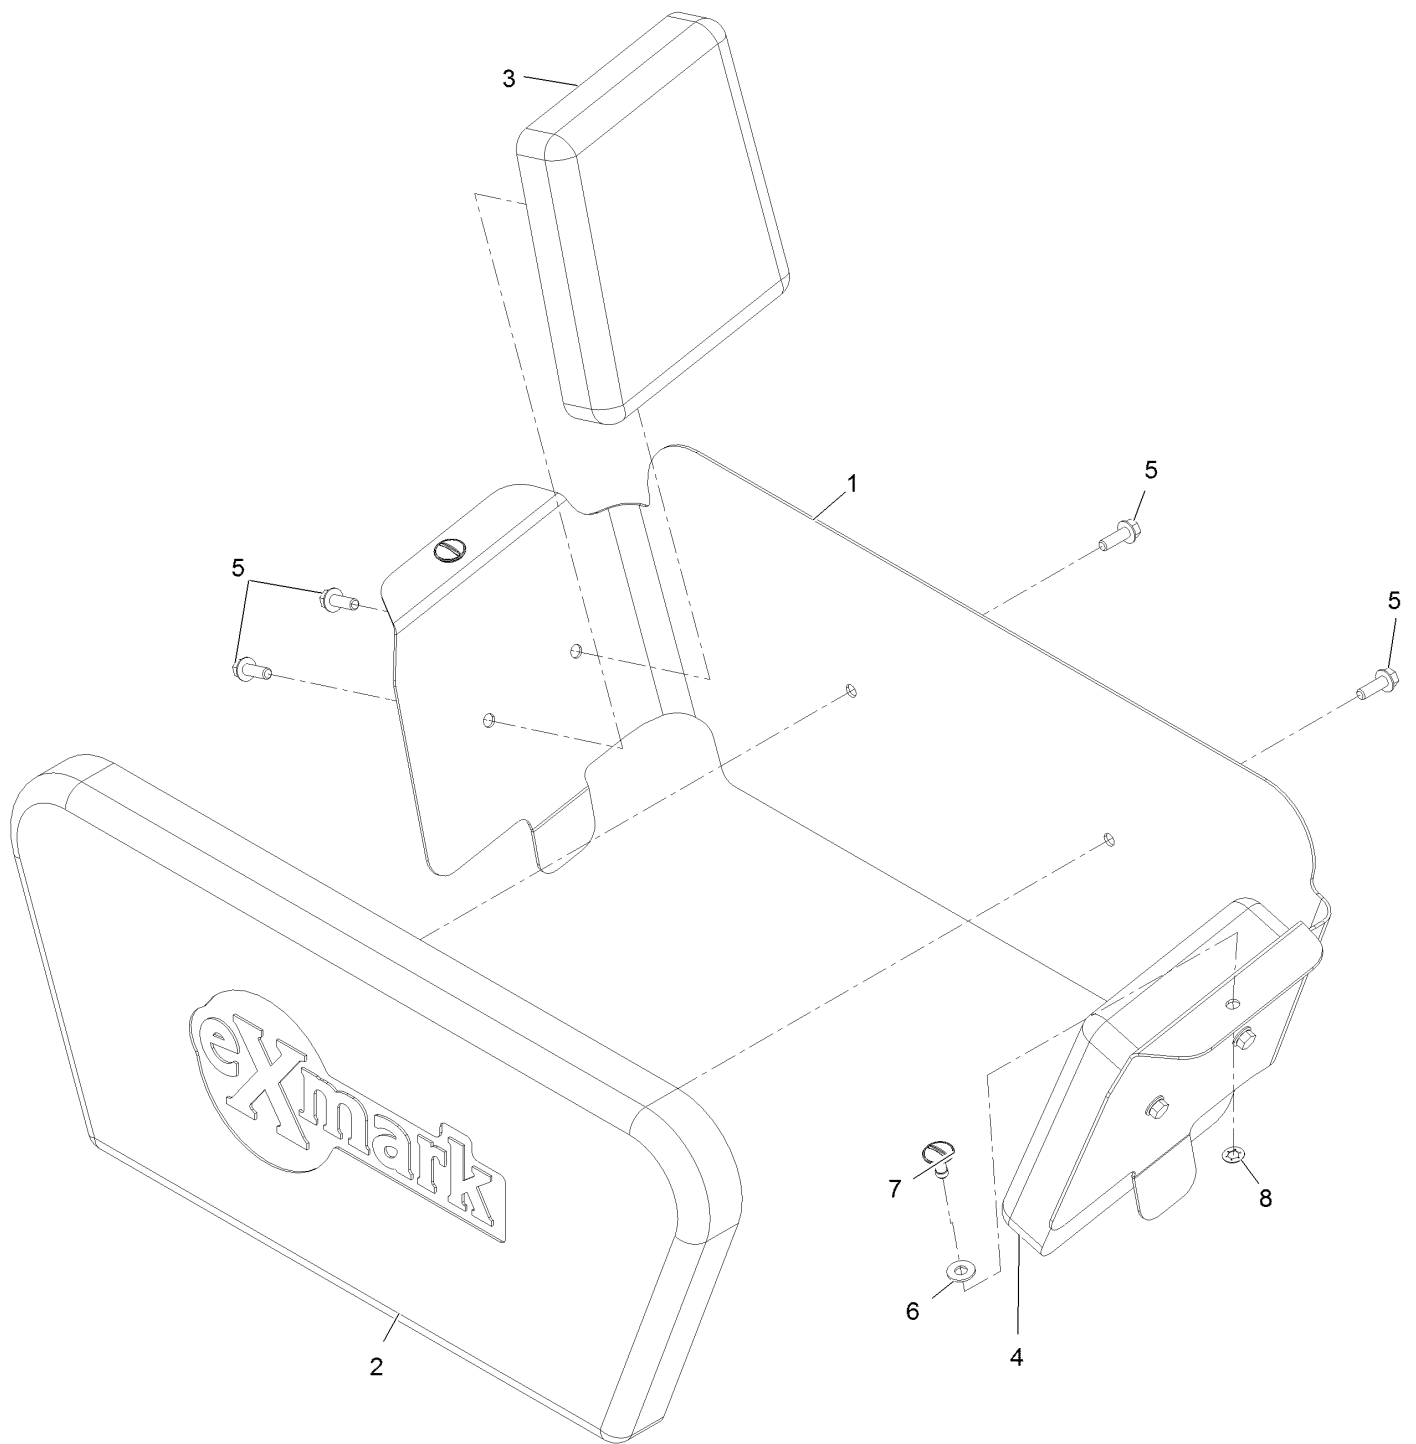

Knee Pad Assembly (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-1244-03	1	Bracket-Pad, Knee	6	360-0140	2	Washer-Flat
2	126-1249	1	Pad-Knee, Center	7	119-1728	2	Stud-1/4 Turn
3	126-1250	1	Pad-Knee, LH Side	8	119-1729	2	Retainer-Stud
4	126-2773	1	Pad-Knee, RH Side				
5	117-8304	6	Screw-Hex Flange 1/4-20 X 3/4				

This exploded perspective view illustrates the assembly of a mechanical device. The main body (1) is shown with various components being attached. Key parts include a handle assembly (19, 20, 21, 24, 25, 26, 27, 28, 29, 30, 31, 32) and a base assembly (2, 3, 13, 13:1, 13:1:1, 13:1:2, 13:2, 13:3, 13:4, 6, 8, 11). The exploded view shows the relative positions and assembly sequence of these components, with dashed lines indicating the paths of assembly.

Steering Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-7045	1	Front Axle ASM	16	126-2233	6	Nut-Hex Flg 3/8-16 Nyloc Ss
1:2	126-7048	4	Bearing-Sleeve	17	3257-7	1	Key-Woodruff
1:3	126-1375	3	Zerk-Grease	18	126-1614	1	Motion Handle ASM
2	126-0656	2	Washer-Flat	18:2	126-2612	1	Decal-Warning
3	126-3841	2	Nut-Hex Nyloc 5/8-11 Ss	19	126-1598	1	Motion Handle ASM
4	126-6048	1	Steering Shaft ASM	19:2	103-9928	2	Bearing
4:2	126-1375	1	Zerk-Grease	20	126-0496	1	Shaft-Pivot, Speed Control
5	126-7044	4	Washer-Thrust	21	116-4198	1	Spacer-Shaft, Drive Lever
6	126-6733	2	Front Axle ASM	22	117-8304	2	Screw-Hex Flange 1/4-20 X 3/4
7	126-7069	2	Arm-Steering	23	126-1604-03	1	Panel-Rear, Steering
8	126-3875	4	Washer	24	32144-10	4	Screw-HWH 1/4-20 X .62
10	126-7185	2	Steering Linkage ASM	25	2411-41	2	Rod End-Ball Joint
11	3235-22	4	Screw-HH, Lock	26	126-0498	2	Screw-HH 1/4-20 X 7/8 Ss
12	98-5975	2	Washer-Spring Disc 3/8	27	126-2231	2	Nut-Nyloc 1/4-20 Ss
13	126-7220	2	Wheel And Tire ASM	28	126-2169	1	Cable-Motion
13:1	126-7258	1	Wheel ASM	29	1-303335	2	Tie-Cable 7 15/16 (Large)
13:1:1	116-0720	2	Bearing-Ball	30	104-1412	2	Bumper-Rubber
13:1:2	126-7260	1	Spacer	31	3210-8	2	Screw-HH 5/16-24 X 1 1/2
13:2	126-1509	1	Tire	32	32152-5	2	Nut-Hex 5/16-24
13:3	232-27	1	Stem-Valve	33	126-7050	2	Spacer-Relief
13:4	302-62	1	Fitting-Grease				
14	116-9789	1	Bumper-Front				
15	126-0980	2	Screw-Carriage 3/8-16 X 1 Ss				


Steering Linkage Assembly

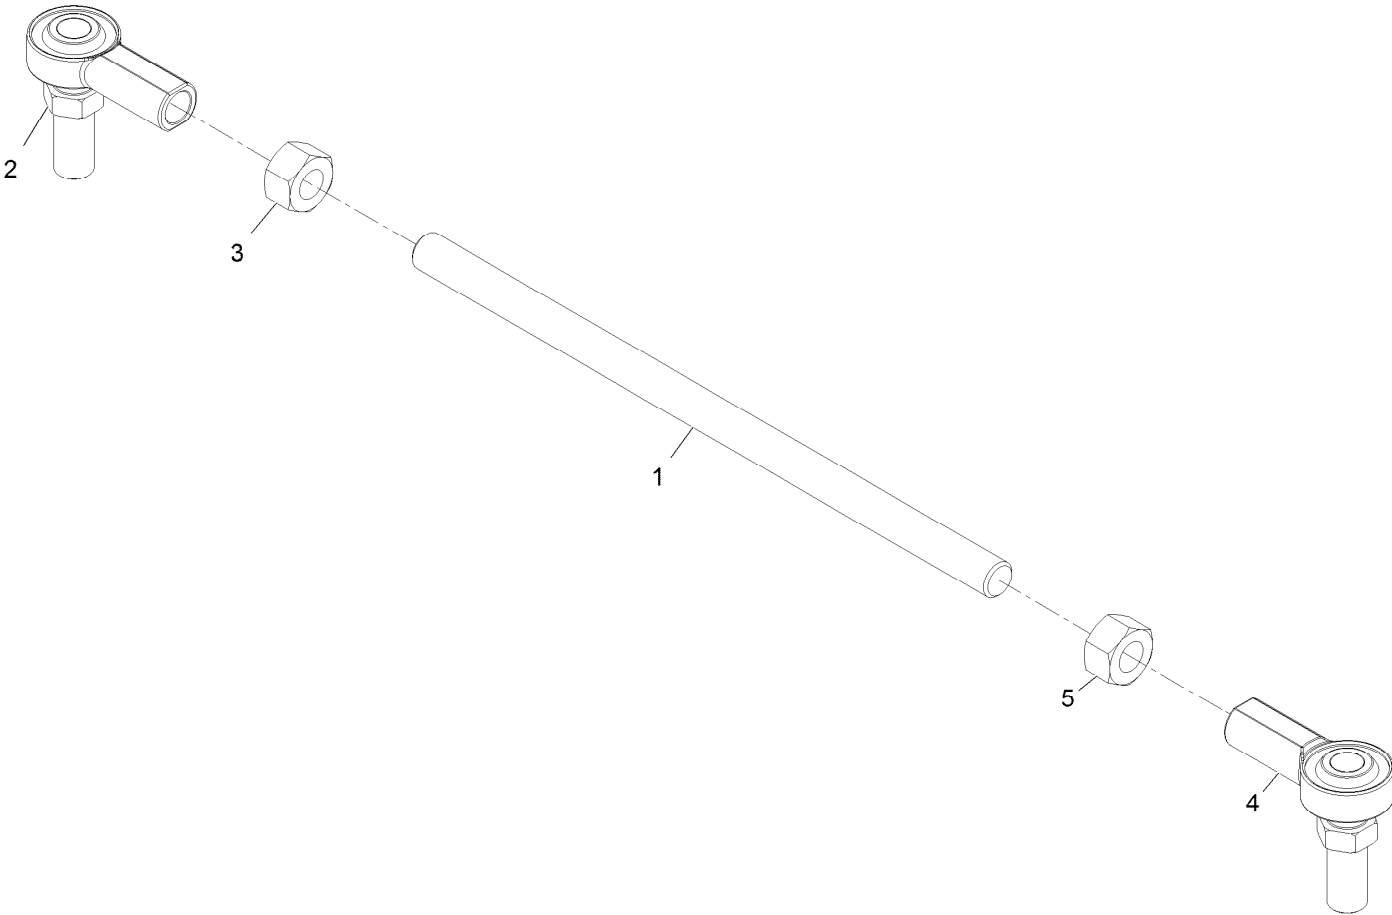

Steering Linkage Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-7183	1	Rod-Linkage, Steering	4	126-7182	1	Rod-End, LH
2	126-7181	1	Rod-End, RH	5	126-0688	1	Nut-Hex, LH
3	126-0687	1	Nut-Hex				

Spray System Assembly

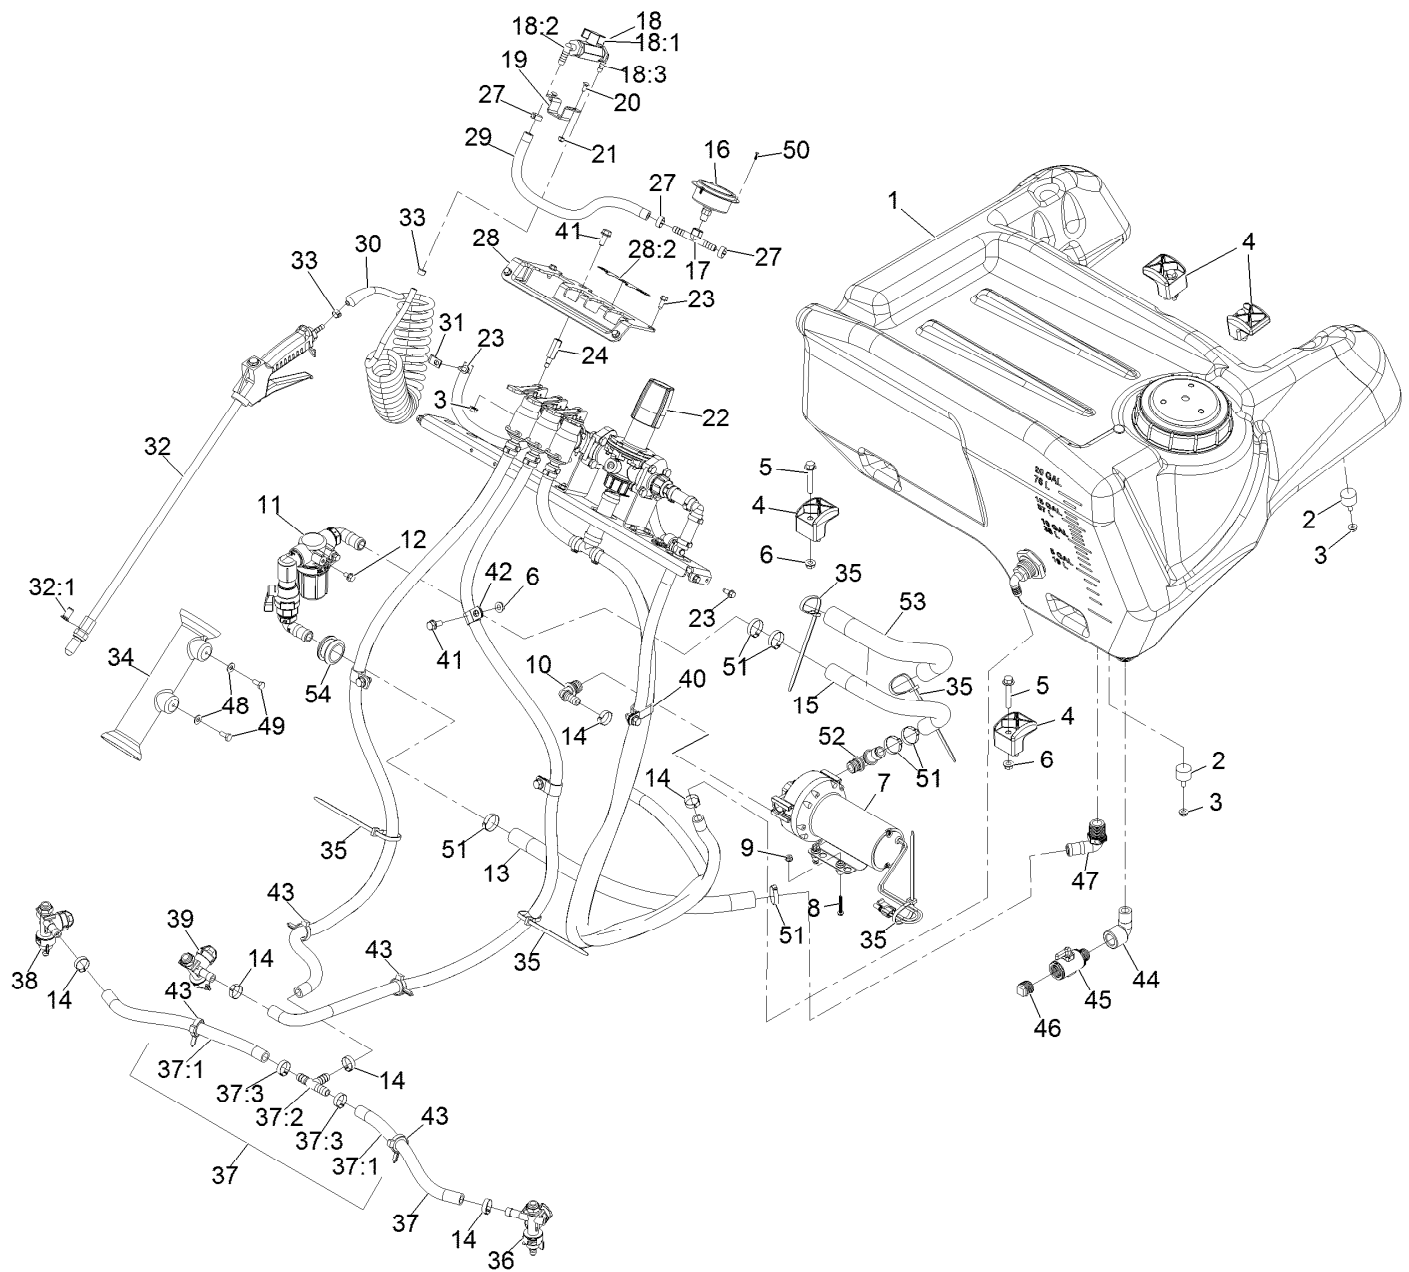


Spray System Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-0286	1	Tank-Sprayer	30	126-1493	1	Hose-Coiled
2	116-6380	4	Bumper-Rubber (W/ Stud)	31	2412-89	1	Clamp-R
3	126-2231	5	Nut-Nyloc 1/4-20 Ss	32	126-8000	1	Spray Wand ASM
4	107-4543	4	Clamp	32:1	126-3943	1	Strainer-Nozzle, 50M 5Psi
5	126-2711	4	Screw-HHF				Check
6	126-2232	8	Nut-Nyloc 5/16-18 Ss	33	126-2707	2	Clamp
7	126-4839	1	Pump-Diaphragm, 3.8 Gpm	34	126-3987	1	Holder-Wand
8	692501	4	Screw-SHWH	35	1-303335	5	Tie-Cable 7 15/16 (Large)
9	126-2645	4	Nut-HF	36	126-3667	1	Left Nozzle Sub ASM
10	126-0961	1	Fitting-Elbow, Barbed	37	126-2252	1	Hose ASM
11	126-4358	1	Strainer ASM	37:1	126-2264	2	Hose-Water
12	126-2713	2	Screw-HHF	37:2	126-0968	1	Fitting-Tee
13	126-4422	1	Hose-Water	37:3	126-4778	2	Clamp
14	126-4778	6	Clamp	38	126-3669	1	Right Nozzle Sub ASM
15	126-4637	1	Hose-Water	39	126-3668	1	Center Nozzle Sub ASM
16	126-4110	1	Gauge-Pressure	40	120-1959	1	Clamp-R, Double
17	126-2348	1	Fitting-Tee	41	126-2712	5	Screw-HHF 5/16-18 X 3/4
18		1	Wand Control ASM ●				Ss
18:1	126-0242	1	Valve-Ball	42	1-633396	3	Clip-Loom 5/8
18:2	126-4992	1	Fitting-Elbow-90	43	105-1853	4	Clamp-Hose
18:3	126-4993	1	Fitting-Elbow-90	44	108-3573	1	Elbow-90 DEG
19	126-0239-03	1	Bracket-Valve	45	126-1494	1	Microvalve
20	1-807513	2	Bolt-Carriage #10-24 X 1/2	46	363-3125	1	Plug
21	3296-2	2	Nut-Nyloc #10-24	47	119-0490	1	Elbow-Hosebarb
22		1	Control Valve Manifold ASM	48	360-0140	2	Washer-Flat
			●	49	126-1290	2	Screw-HH 1/4-20 X 5/8 Ss
23	32144-10	9	Screw-HWH 1/4-20 X .62	50	363-8552	3	Screw-TAP
24	126-4914	1	Spacer-Mount, Manifold	51	126-4779	6	Clamp
27	126-3749	3	Clamp	52	126-4420	1	Fitting-Elbow
28	126-4180	1	Cover-Controls	53	126-5065	1	Sleeve-Corrugated, Split
28:2	126-4161	1	Decal-Control, Lever	54	126-7410	1	Grommet
29	126-5847	1	Hose-Water, 3/8 Pvc Red				

● Not serviced separately

Sprayer Tank Assembly

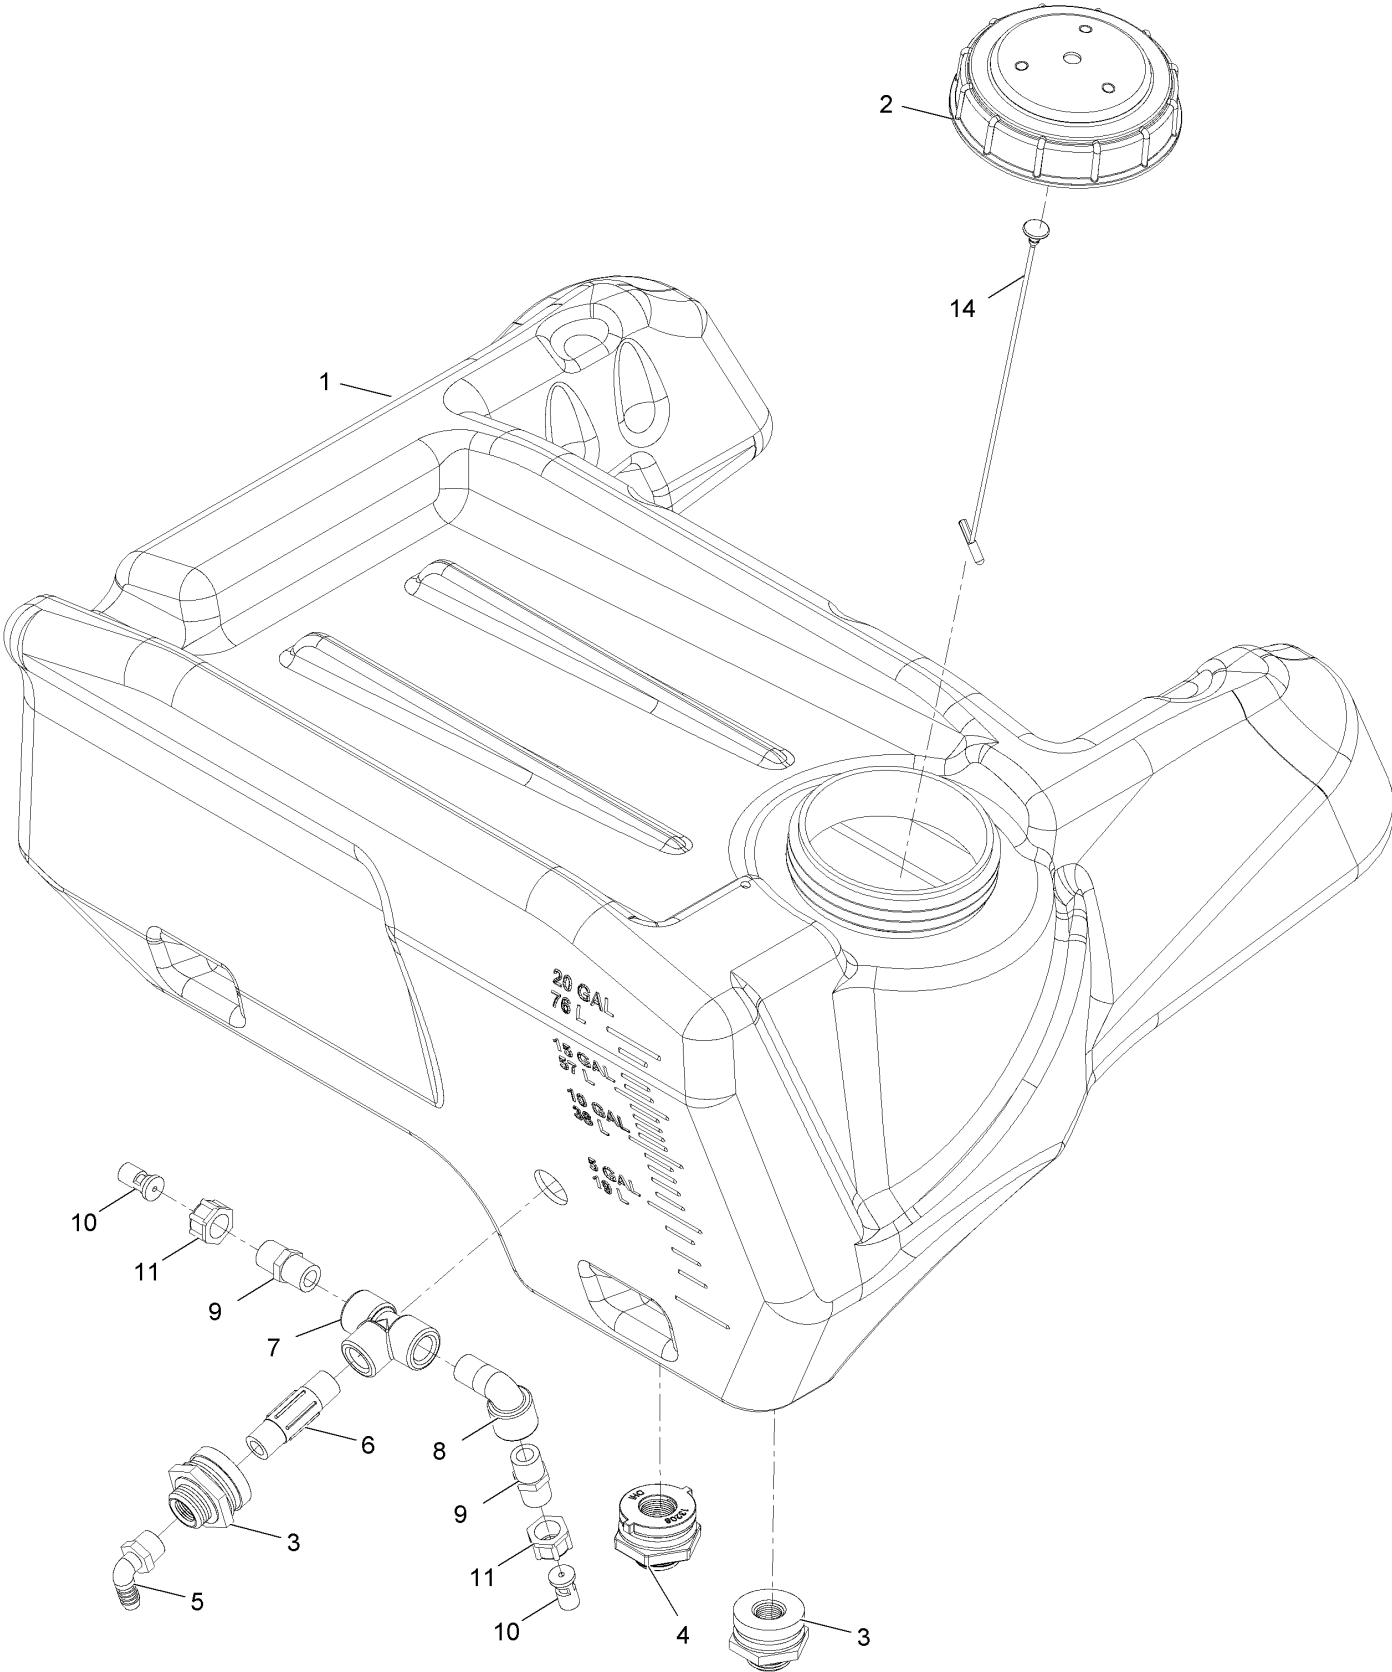


Sprayer Tank Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Tank-Sprayer ●	8	108-3573	1	Elbow-90 DEG
2	126-0285	1	Cap-Water, 5 Inch Vent	9	108-3574	2	Nipple-Short
3	126-0400	2	Fitting-Bulkhead	10	100-6705	2	Nozzle-Agitation
4	126-4393	1	Fitting-Bulkhead	11	99-0766	2	Nut
5	42046	1	Elbow-90 DEG	14	126-3381	1	Lanyard-Cap, Self Anchoring (12 Inch)
6	94-7103	1	Nipple				
7	94-7100	1	Tee				

● Not serviced separately

Control Valve Manifold Assembly

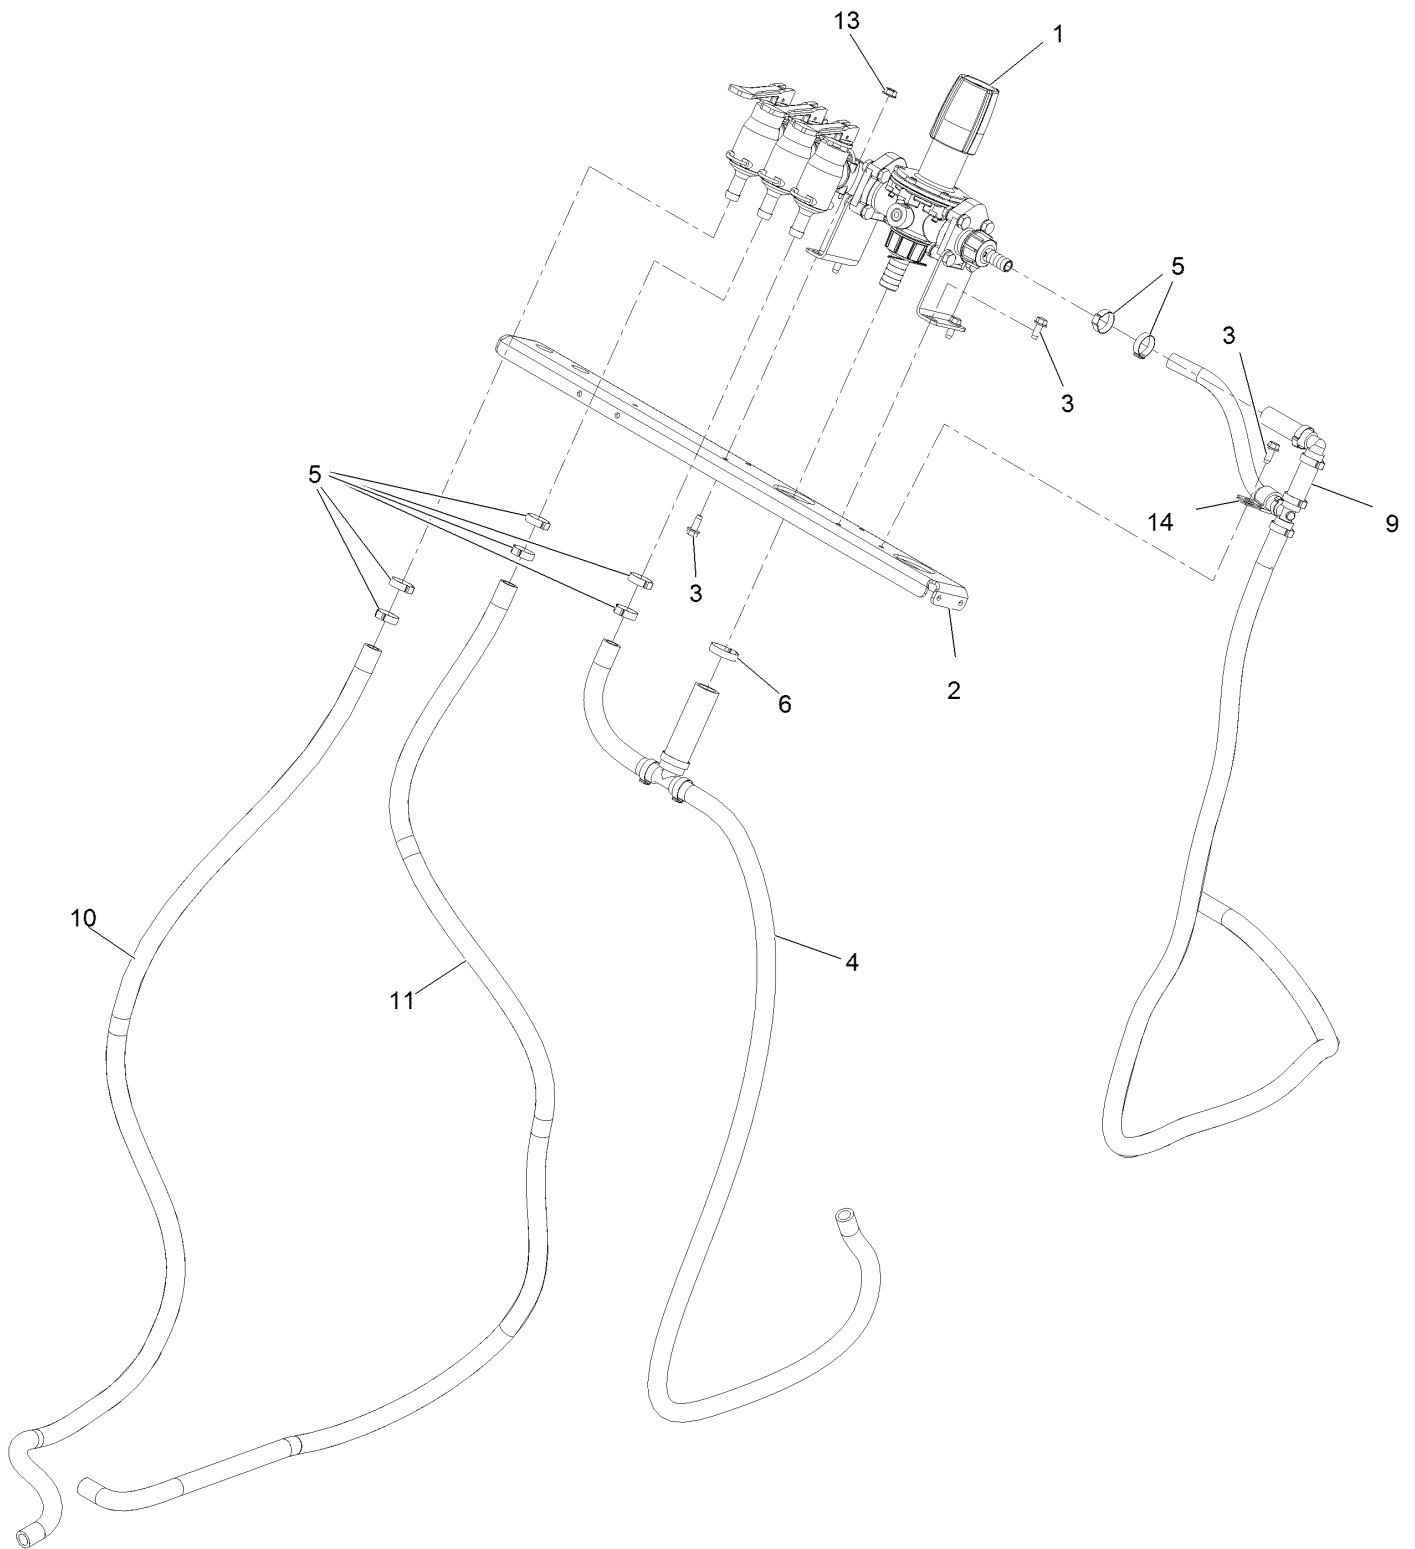


Control Valve Manifold Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-7635	1	Spray Manifold Assembly
2	126-7302-03	1	Crossmember-Column
3	32144-10	5	Screw-HWH 1/4-20 X .62
4	126-2250	1	Hose ASM
5	126-4778	8	Clamp
6	126-4779	1	Clamp

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
9	126-7304	1	Hose ASM
10	126-2263	1	Hose-Water
11	126-2261	1	Hose-Water
13	126-2231	1	Nut-Nyloc 1/4-20 Ss
14	1-633396	1	Clip-Loom 5/8


Control Valve Manifold Assembly (cont.)

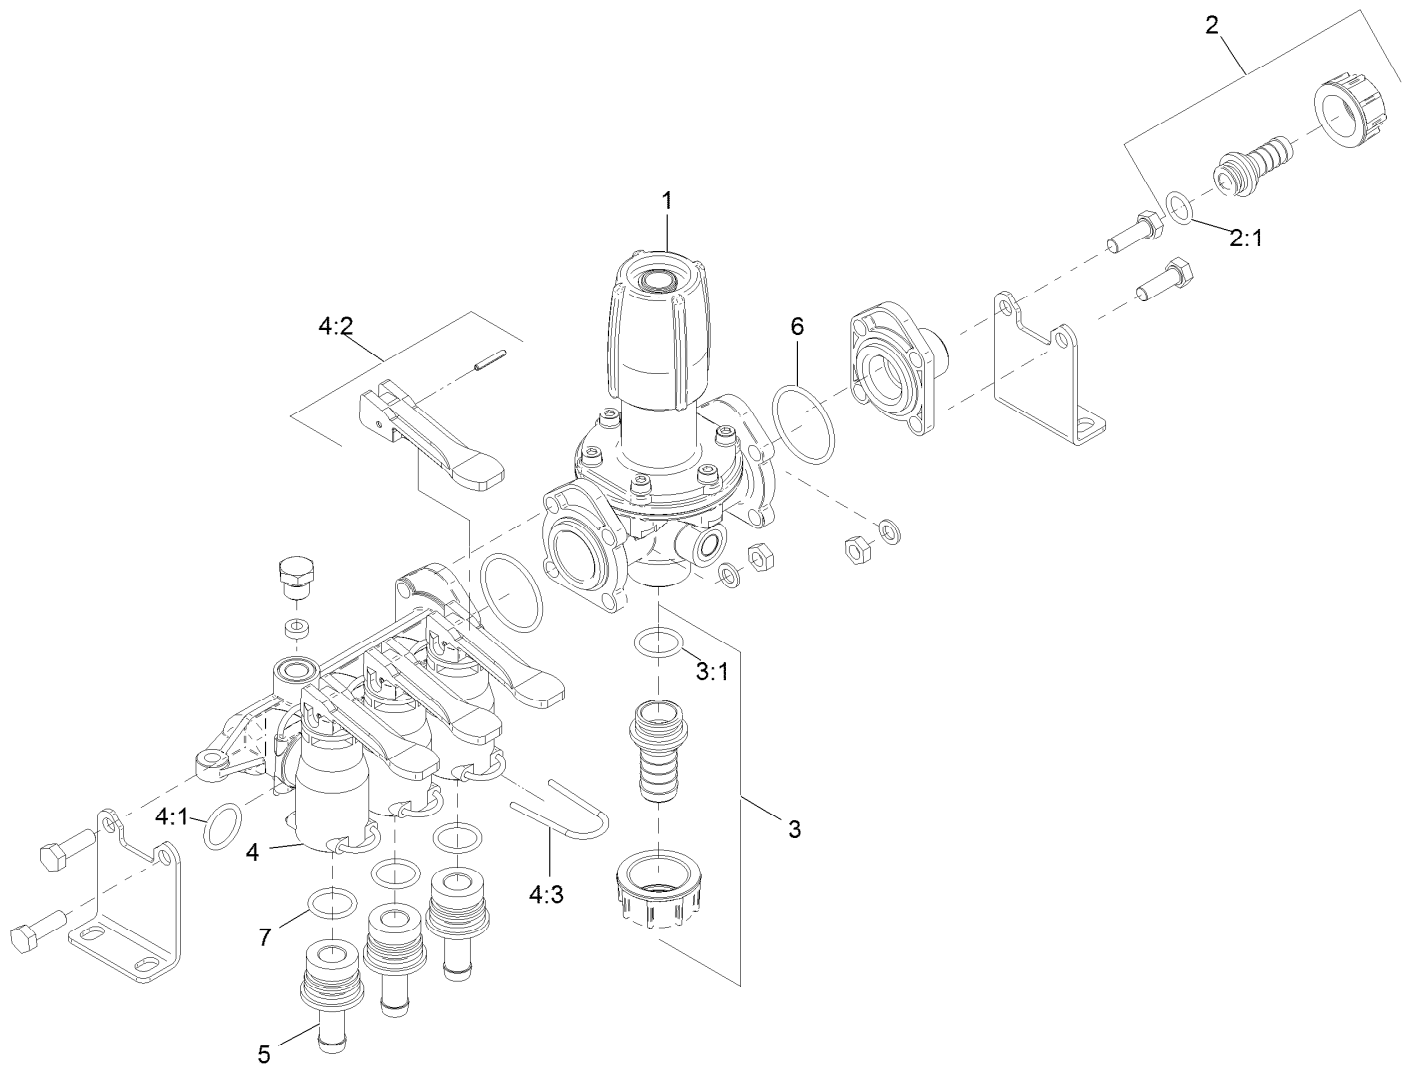

Control Valve Manifold Assembly (cont.) (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-6303	1	Regulator	4:1	126-6328	1	O-Ring Kit, Valve Inlet
2	126-6304	1	Flynut Assembly	4:2	126-6319	1	Lever And Pin Assembly
2:1	126-6322	1	O-Ring Kit, Regulator Inlet Barb	4:3	126-6332	1	Wireform Retainer Kit
3	126-6317	1	Flynut Assembly	5	126-6321	1	Hose Barb
3:1	126-6323	1	O-Ring Kit, Regulator Outlet Barb	6	126-6326	1	O-Ring Kit, Regulator Flange
4	126-7641	1	Valve Assembly W/ O-Ring	7	126-6327	1	O-Ring Kit, Valve Outlet Barb

Hose Assembly No. 126-2250

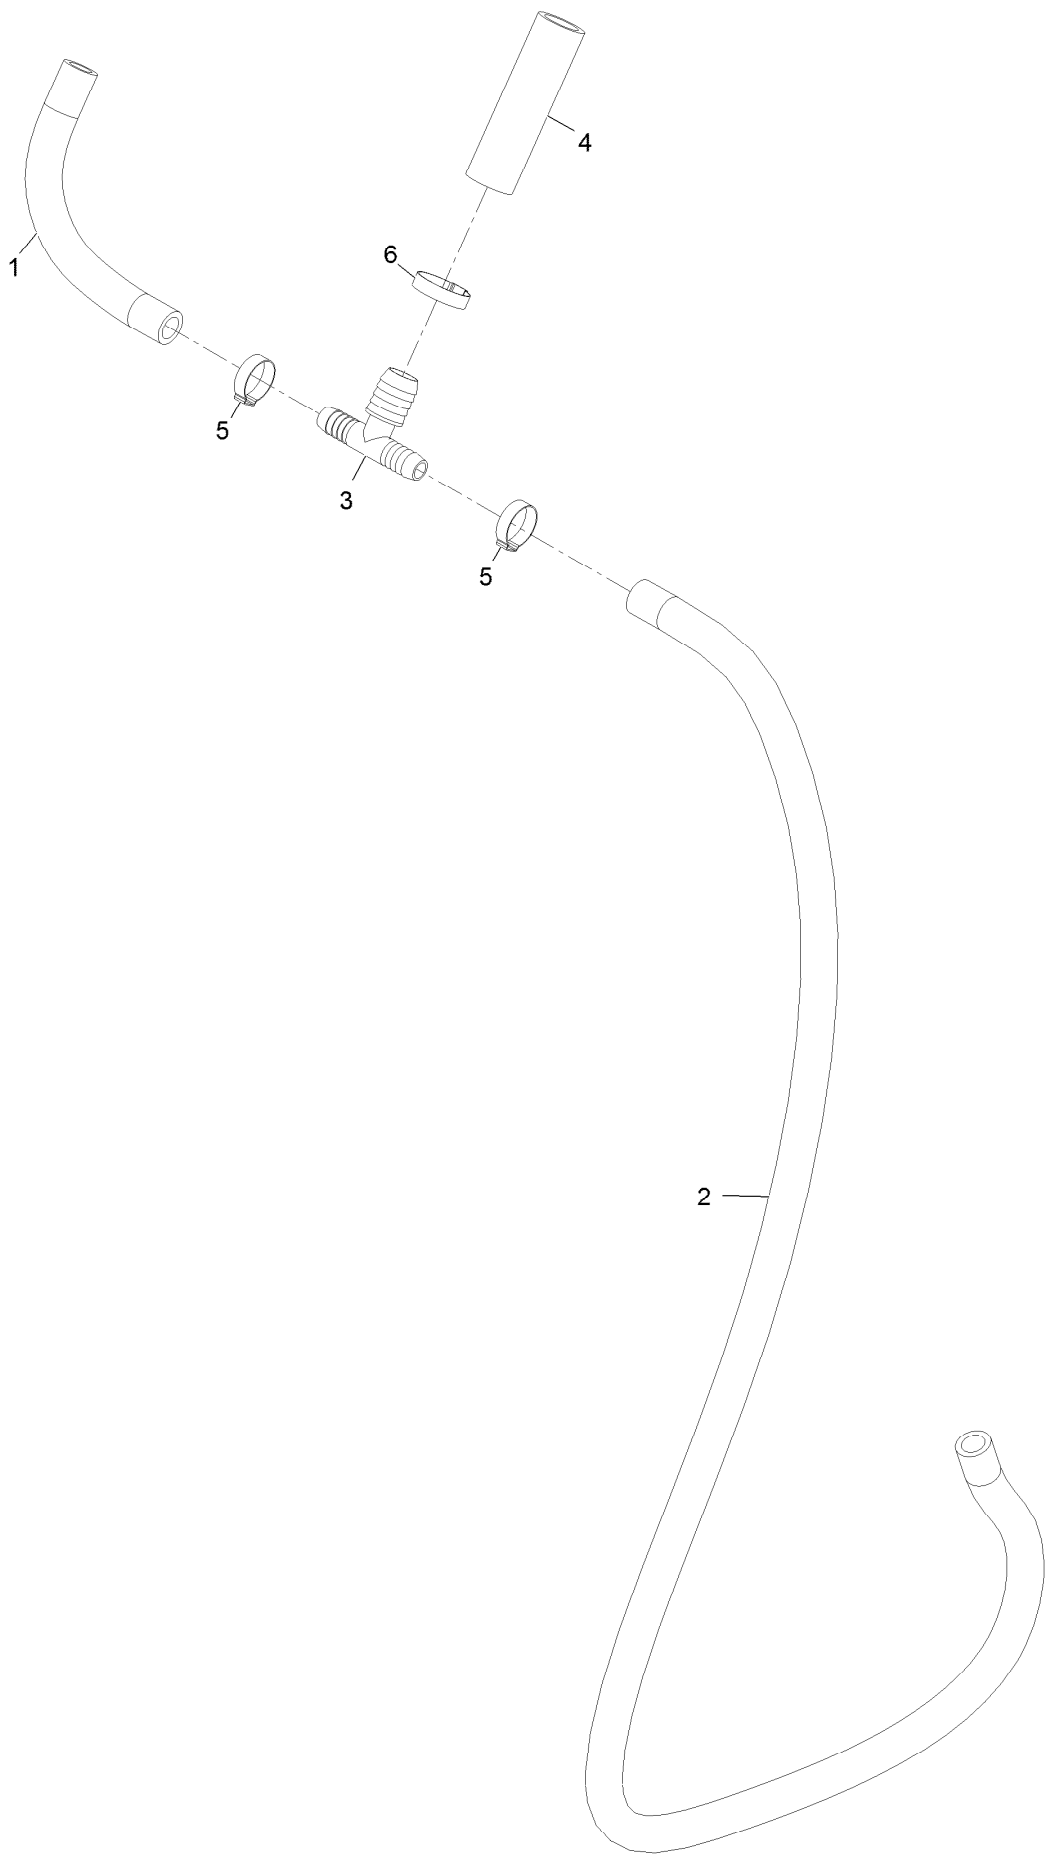


Hose Assembly No. 126-2250 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-2257	1	Hose-Water
2	126-2259	1	Hose-Water
3	126-0969	1	Fitting-Tee

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	126-0865	1	Hose-Water
5	126-4778	2	Clamp
6	126-4779	1	Clamp

Hose Assembly No. 126-7304

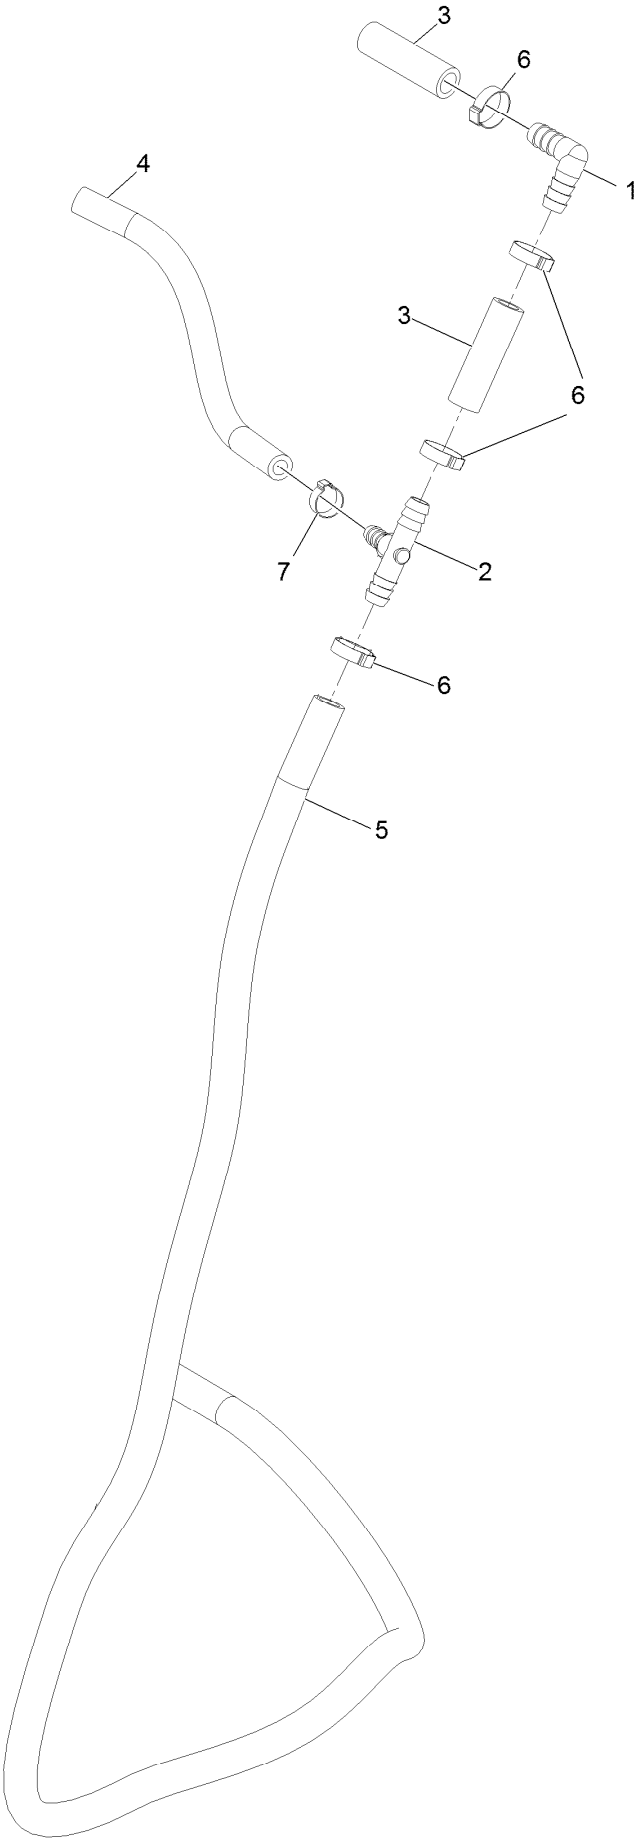


Hose Assembly No. 126-7304 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-1001	1	Fitting-Elbow-90
2	99-7371	1	Connector-Tee
3	126-7231	2	Hose-Water
4	126-7307	1	Hose-Water

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	126-7306	1	Hose-Water
6	126-4778	4	Clamp
7	126-3749	1	Clamp


Strainer Assembly

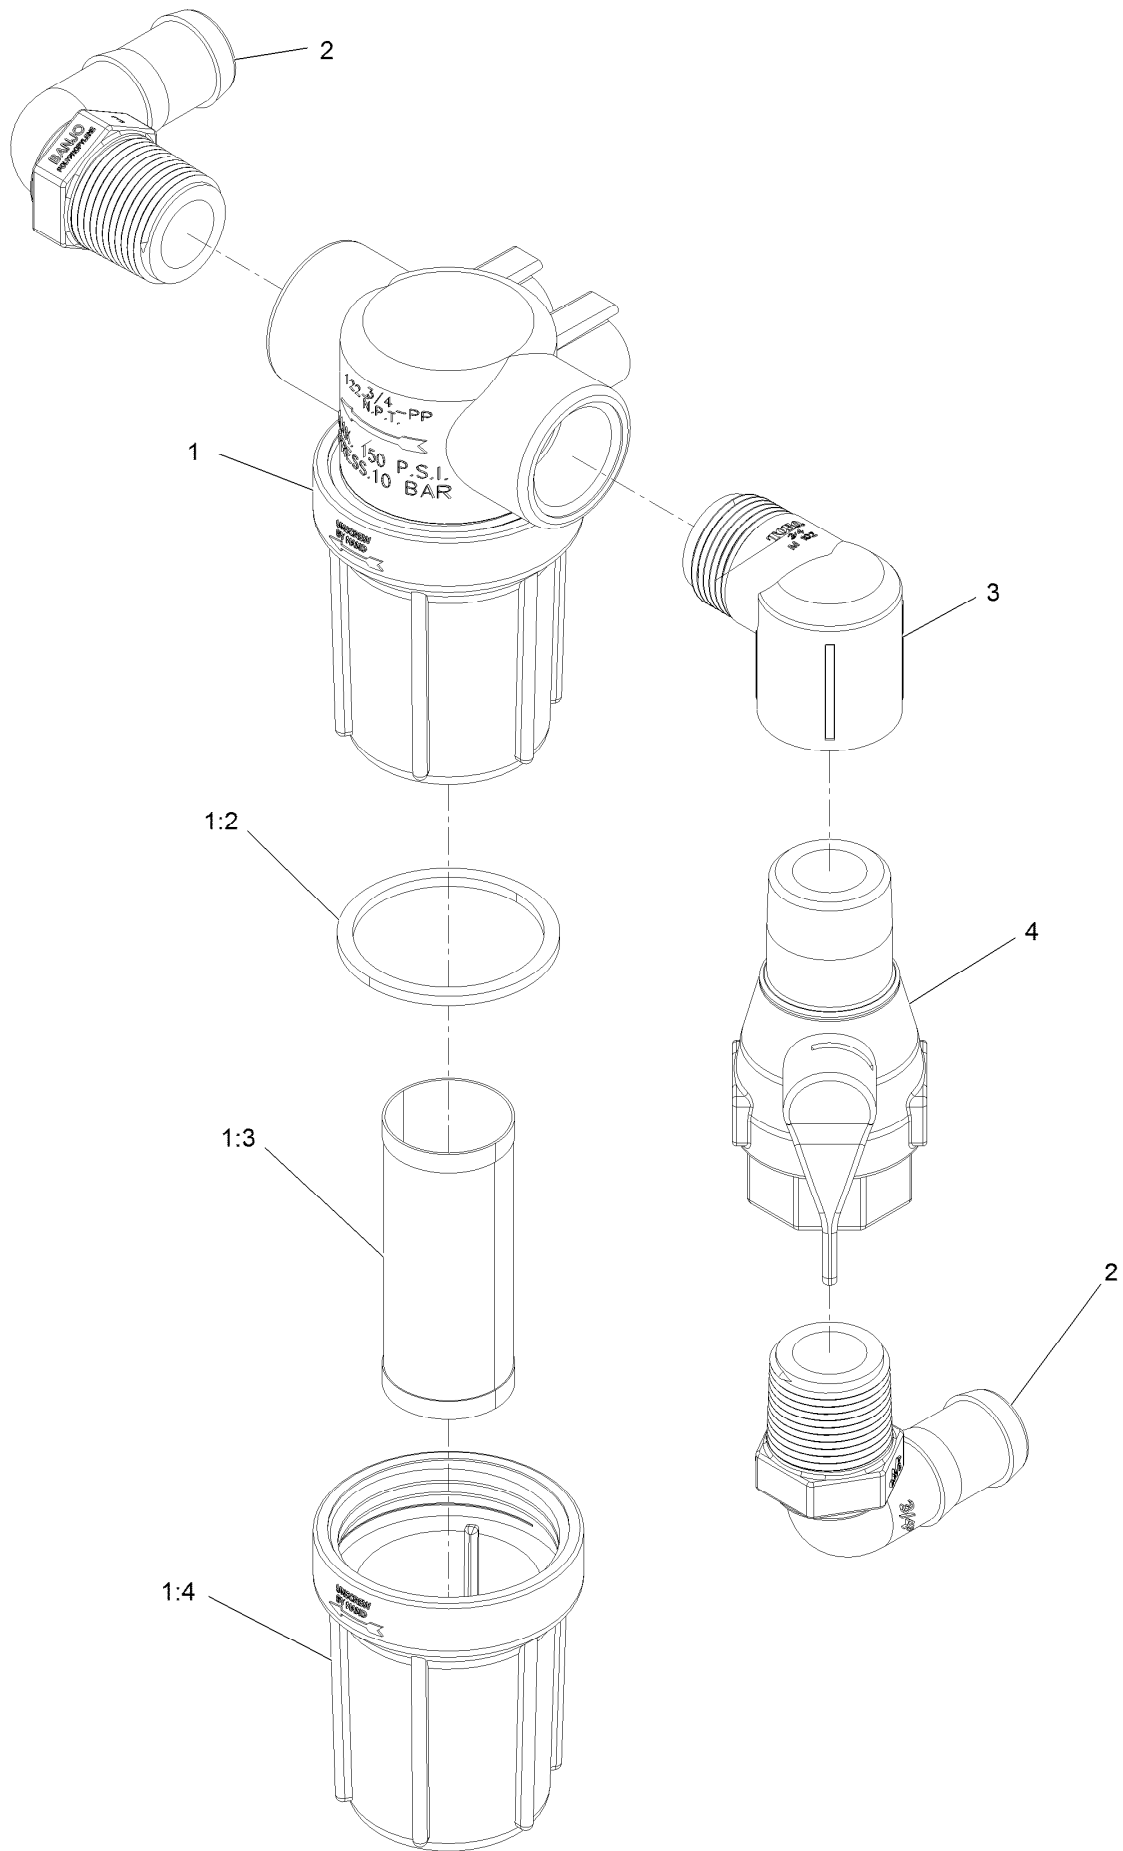

Strainer Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-4374	1	Strainer-Line	1:4	126-7195	1	Bowl-Strainer
1:2	126-2272	1	Gasket-Head, Line Strainer	2	119-0490	2	Elbow-Hosebarb
1:3	126-2273	1	Screen-Strainer, 30 Mesh Ss	3	102-4272	1	Elbow
				4	126-4451	1	Valve-Ball

Left Nozzle Assembly No. 126-3667

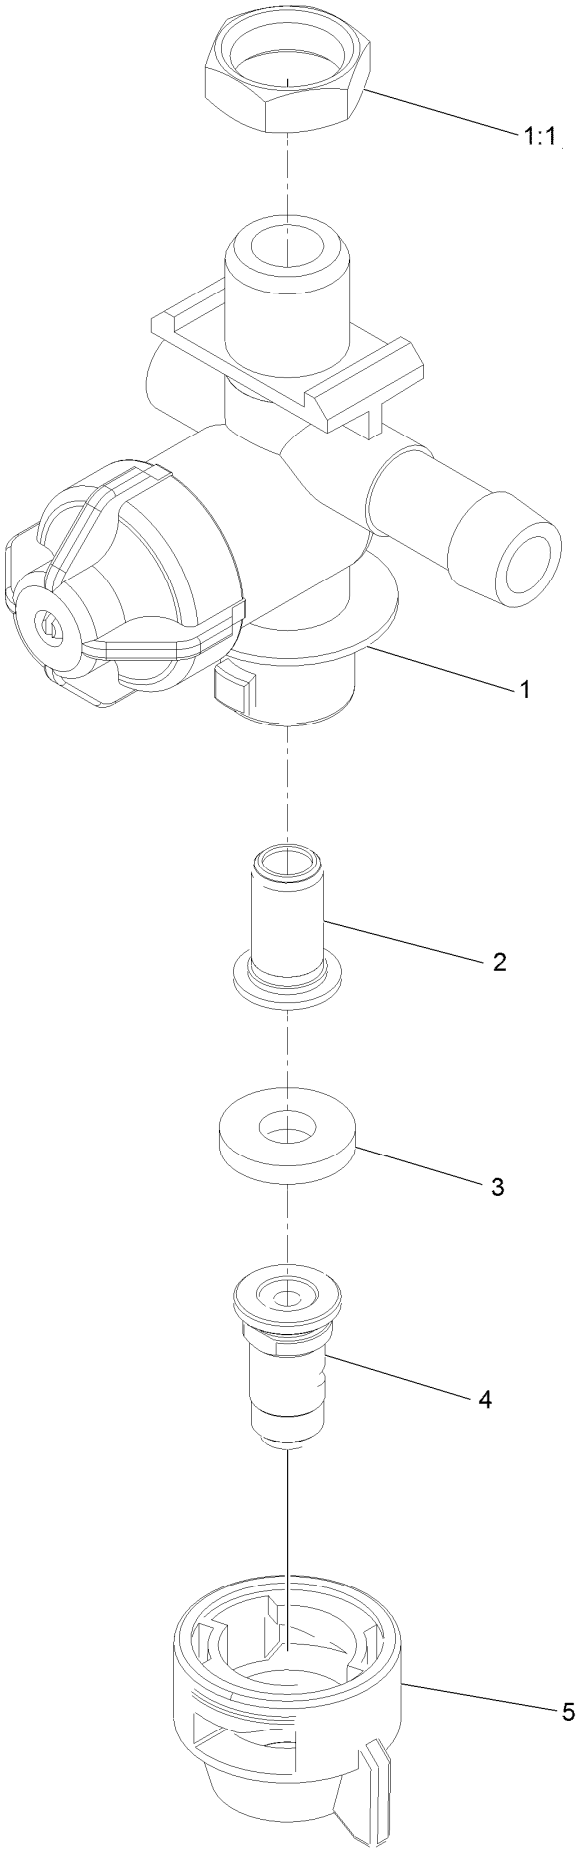


Left Nozzle Assembly No. 126-3667 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	116-9790	1	LH Nozzle Body ASM	5	116-9796	1	Cap-Nozzle
1:1	126-2801	1	Nut-Nylon	99	126-7172	1	Nozzle-Spray, Blue ●■
2	126-1212	1	Strainer-Tip	99	126-7171	1	Nozzle-Spray, Brown ●■
3	116-9797	1	Gasket-Seal	99	126-7170	1	Nozzle-Spray, Gray ●■
4	116-9798	1	Nozzle-Spray, White	99	126-2566	1	Nozzle-Spray, Red ●■

● Not illustrated

■ Sold separately

Center Nozzle Assembly No. 126-3668

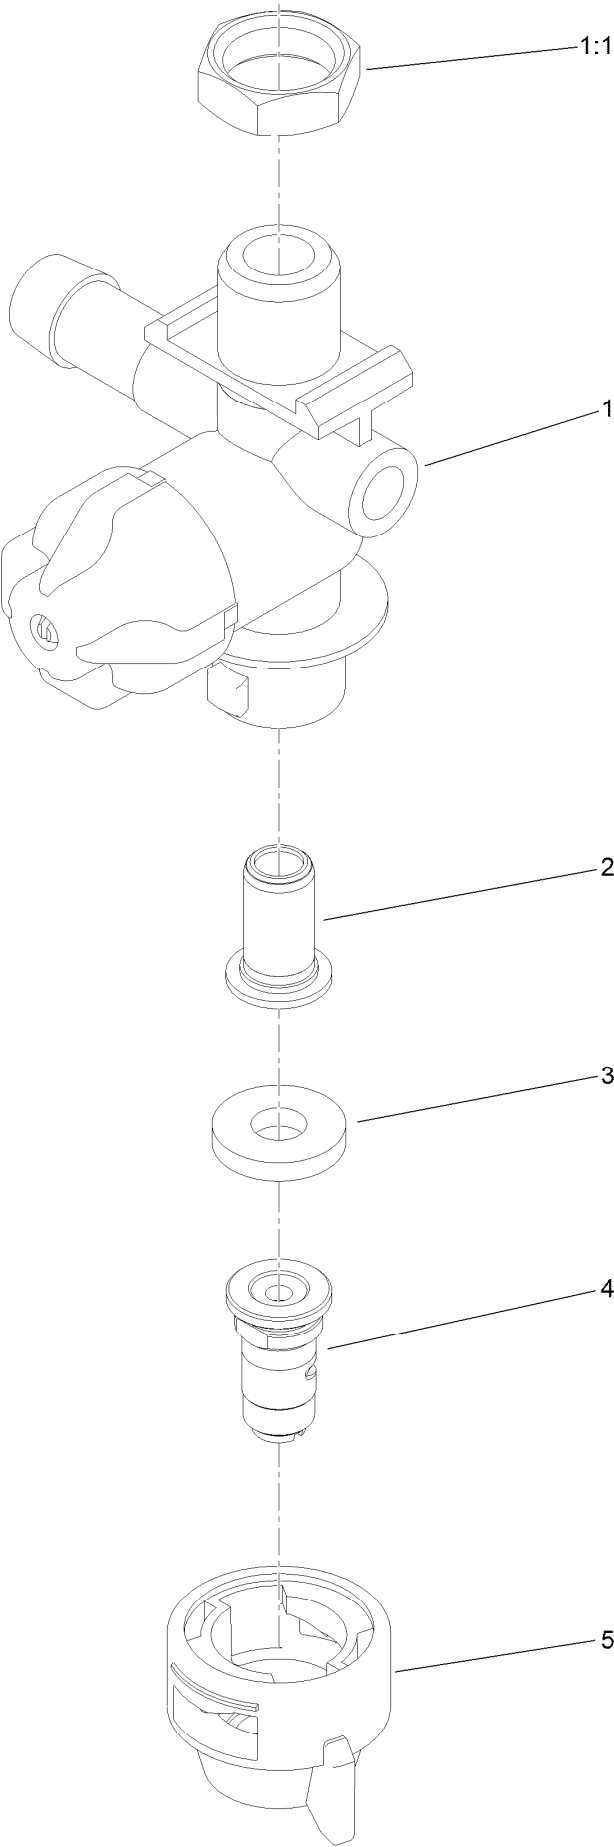

Center Nozzle Assembly No. 126-3668 (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	116-9791	1	RH Nozzle Body ASM
1:1	126-2801	1	Nut-Nylon
2	126-1212	1	Strainer-Tip
3	116-9797	1	Gasket-Seal
4	126-2566	1	Nozzle-Spray, Red

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	116-9796	1	Cap-Nozzle
99	126-7170	1	Nozzle-Spray, Gray ●■
99	116-9798	1	Nozzle-Spray, White ●■
99	126-7171	1	Nozzle-Spray, Brown ●■
99	126-7172	1	Nozzle-Spray, Blue ●■

● Not illustrated

■ Sold separately

Right Nozzle Assembly No. 126-3669

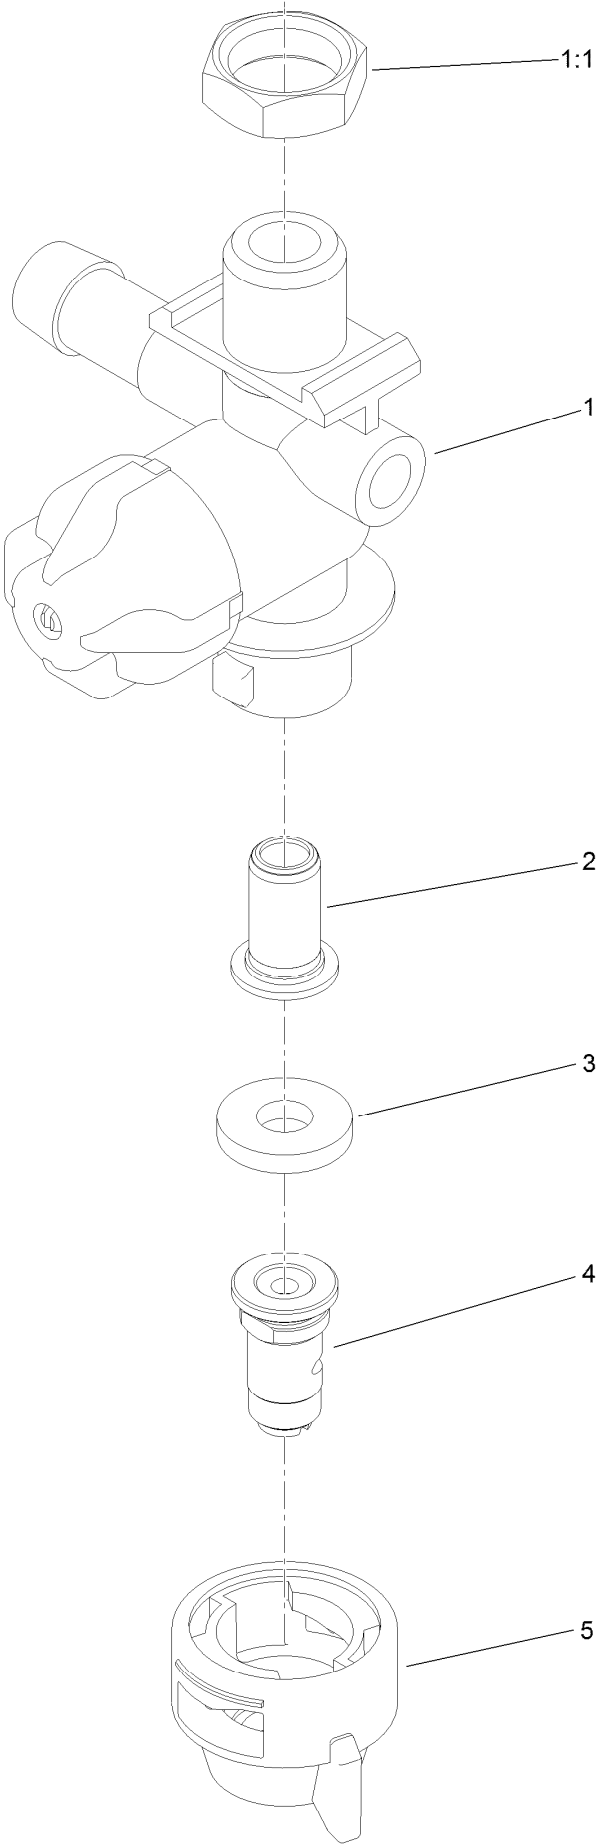


Right Nozzle Assembly No. 126-3669 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	116-9791	1	RH Nozzle Body ASM
1:1	126-2801	1	Nut-Nylon
2	126-1212	1	Strainer-Tip
3	116-9797	1	Gasket-Seal
4	116-9798	1	Nozzle-Spray, White

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	116-9796	1	Cap-Nozzle
99	126-7172	1	Nozzle-Spray, Blue ●
99	126-7171	1	Nozzle-Spray, Brown ●
99	126-7170	1	Nozzle-Spray, Gray ●
99	126-2566	1	Nozzle-Spray, Red ●

● Not illustrated

Spreader Assembly

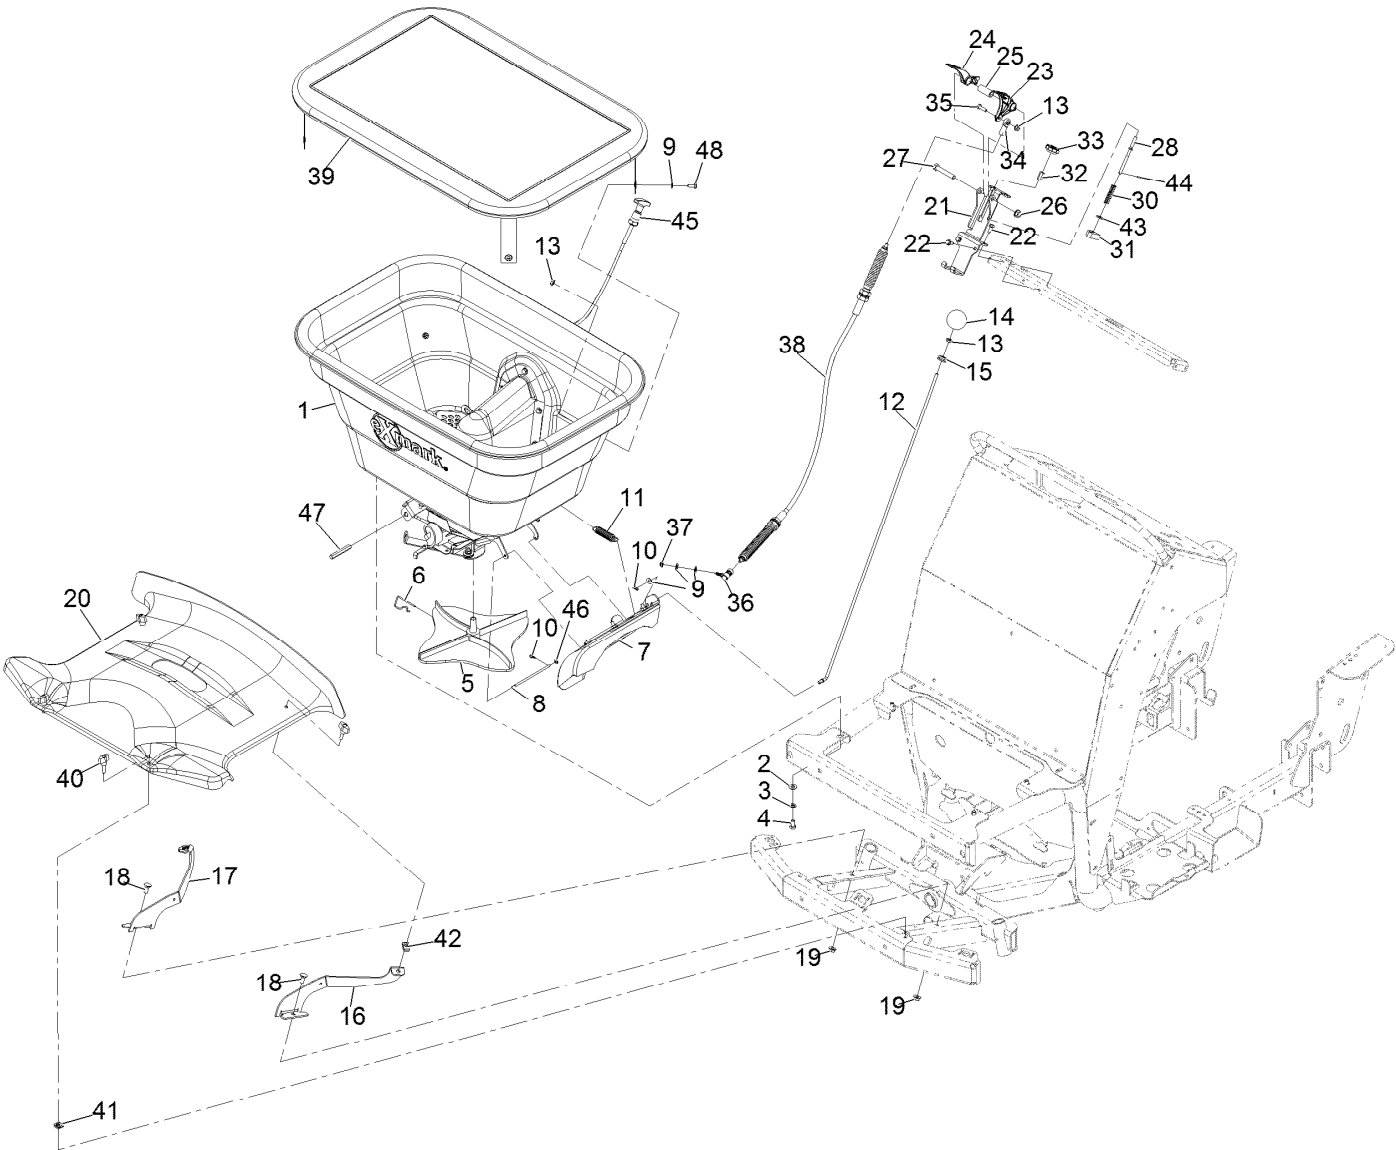


Spreader Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Spreader Hopper ASM ●	24	126-3948	1	Lever-Spread, Narrow
2	107-0279	4	Washer	25	126-3984	1	Spacer
3	107-0280	4	Washer-Lock	26	126-2233	1	Nut-HF
4	126-2506	4	Screw-HH	27	323-11	1	Screw-HH 3/8-16 X 2 1/4
5	126-0858	1	Spinner-Spreader	28	126-3929	1	Link-Adjust, Narrow
6	126-1246	1	Spinner Clip	30	125-0547	1	Spring-Compression, Bail
7		1	Side Deflector ASM ●	31	126-3147	1	Stop-Spread, Narrow
8	126-1629	1	Pin-Deflector	32	126-4891	1	Nut-Coupler
9	360-0140	5	Washer-Flat	33	126-3905	1	Knob
10	126-1631	2	Pin-Cotter, Hair	34	2411-41	1	Rod End-Ball Joint
11	126-2127	1	Spring-Extension	35	126-0498	1	Screw-HH
12	126-2190	1	Rod-Control, Deflector	36	126-2005	1	Ball-Joint
13	126-2231	4	Nut-Nyloc 1/4-20 Ss	37	126-2725	1	Nut-Hex, NI
14	121-1877	1	Knob-Rate, Flow	38	126-1783	1	Cable
15	1-633630	1	Grommet	39	126-2815	1	Cover-Hopper
16	126-2145	1	Bracket-Cover, Front (LH)	40	126-5846	4	Knob-T
17	126-2146	1	Bracket-Cover, Front (RH)	41	126-3740	2	Nut-Retainer, U Style
18	126-0695	2	Screw-CARR	42	126-3739	2	Nut-Retainer, U Style
19	126-2232	2	Nut-Nyloc 5/16-18 Ss	43	3256-78	1	Washer
20	126-2063	1	Cover-Front, Spreader/Sprayer	44	3272-5	1	Pin-Cotter 3/32 X 1/2
21	126-3133	1	Mount-Handle	45	126-4150	1	Cable-Control, Turn Lock
22	32144-10	3	Screw-HWH 1/4-20 X .62	46	126-0759	1	Washer-Flat
23	126-3947	1	Lever-Spread, Wide	47	126-4655	1	Post-Hex, Diffuser Guide
				48	126-1290	2	Screw-HH 1/4-20 X 5/8 Ss

● Not serviced separately

Side Deflector Assembly

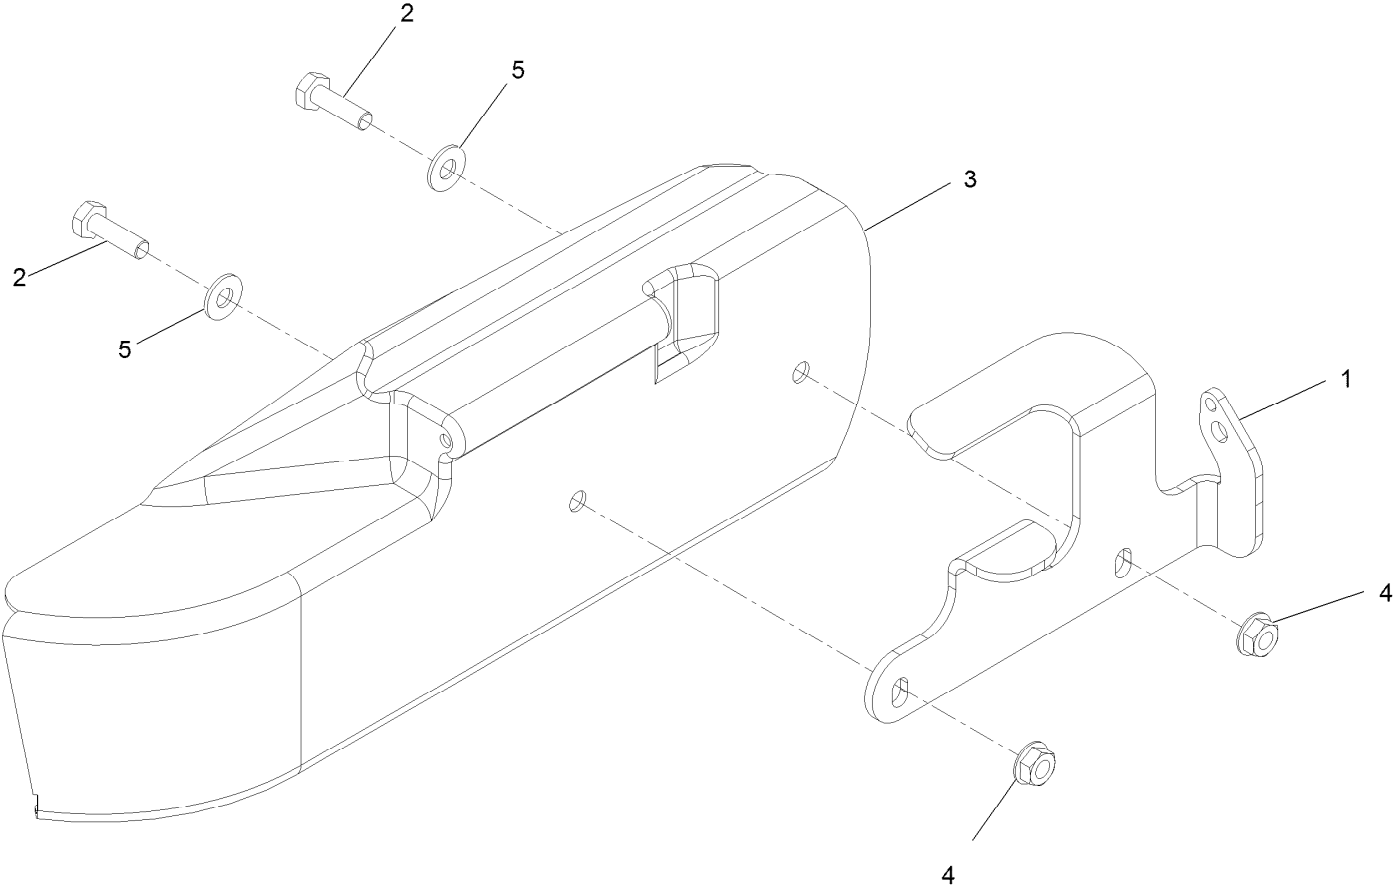


Side Deflector Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-0374	1	Bracket-Deflector, Side
2	126-0498	2	Screw-HH
3	126-1217	1	Deflector-Side

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	126-2231	2	Nut-HF
5	360-0140	2	Washer-Flat

Hopper Assembly

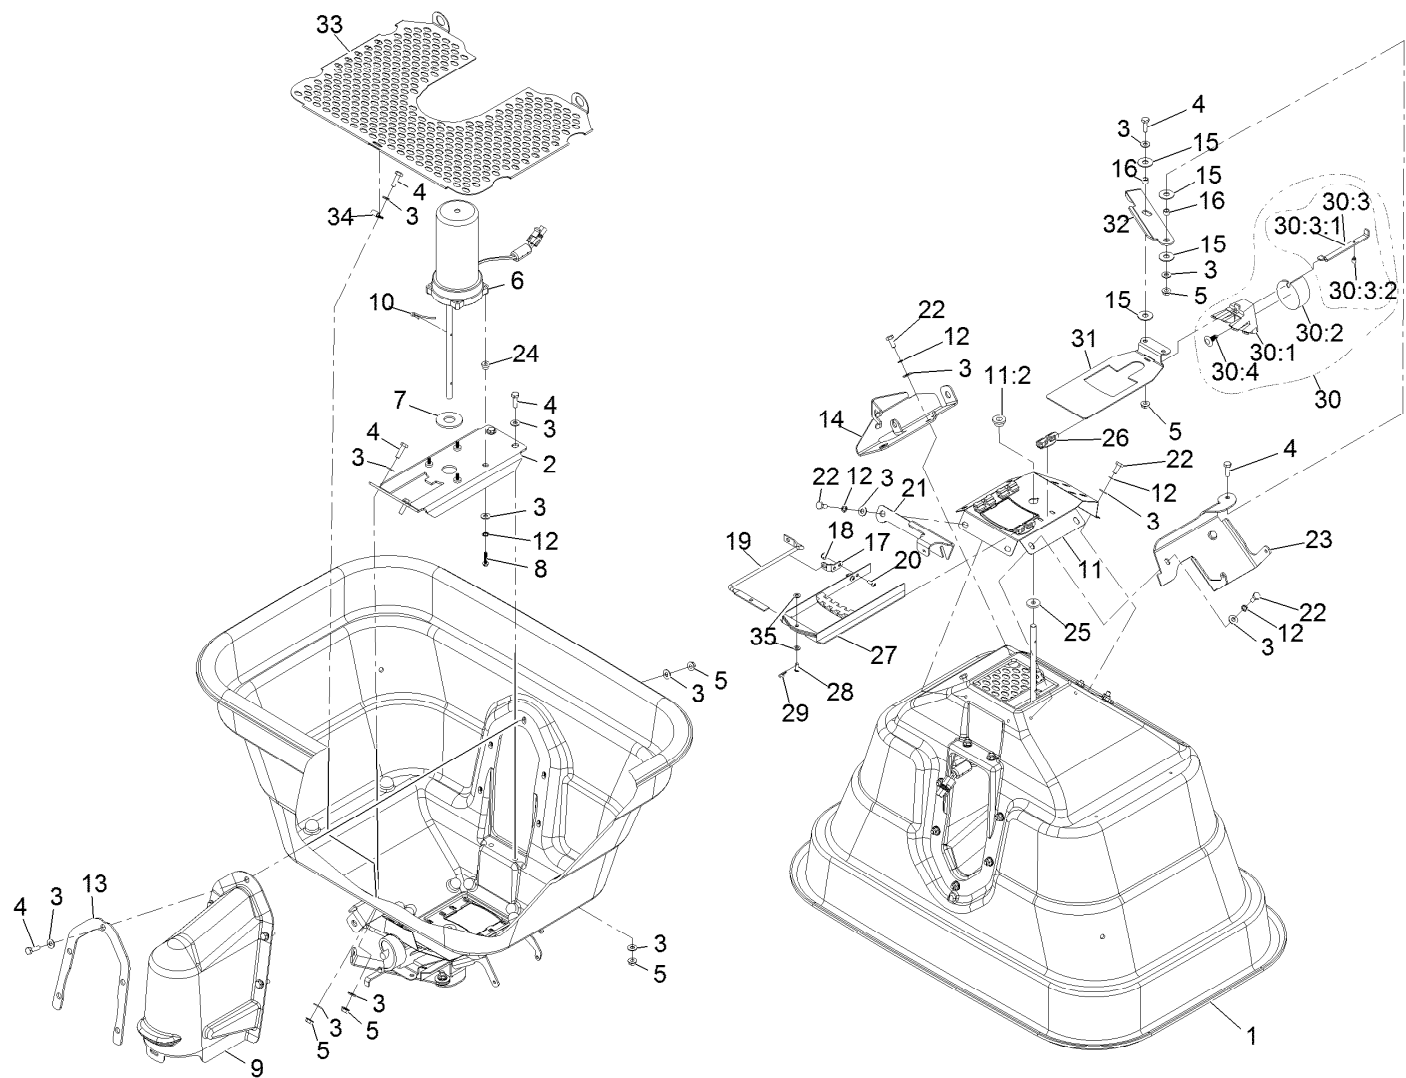


Hopper Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-1349	1	Hopper-175 Lb	22	126-1290	8	Screw-HH 1/4-20 X 5/8 Ss
2	126-4245	1	Bracket-Mount, Motor	23	126-1916	1	Bracket-Lever, Hopper Gate
3	360-0140	34	Washer-Flat	24	126-6190	4	Spacer-Flanged
4	126-0498	12	Screw-HH 1/4-20 X 7/8 Ss	25	126-1252	1	Washer-Felt
5	126-2231	12	Nut-Nyloc 1/4-20 Ss	26	126-0990	4	Guide-Rate, Gate
6	126-6231	1	Spreader Motor ASM	27	126-0991	1	Diffuser
7	83-2400	1	Spacer	28	126-3729	1	Pin-Clevis
8	739001	4	Screw-SHWH 10-32 X 7/8	29	126-1631	1	Pin-Cotter, Hair
9	126-1348	1	Cover-Motor	30	126-0998	1	Rate Dial ASM
10	126-1247	1	Agitator	30:1	126-0985	1	Mount-Dial
11	126-6284	1	Mulch Plate W/ Bearing ASM	30:2	126-0988	1	Dial
11:2	126-0984	1	Bearing-Bottom, Hopper	30:3		1	Rate Gate Link ASM ■
12	363-8641	12	Washer-Lock, Int	30:3:1	126-0987	1	Link-Gate, Rate
13	126-6334	1	Flange-Cover, Motor	30:3:2	126-4196	1	Screw-Shoulder, Slotted
14	126-4650	1	Bracket-Hopper, Gate Controls	30:4	126-0986	1	Clip
15	93-1633	4	Washer	31	126-1903	1	Gate-Rate
16	126-3684	2	Spacer	32	126-4112	1	Lever-Gate
17	126-1237	1	Bracket-Diffuser	33	126-3143	1	Screen-Hopper-Large Hole ●
18	364-0371	2	Nut-HJ, NI	33	126-3240	1	Screen-Hopper-Medium Hole
19	126-1646	1	Rod-Control, Diffuser	33	126-3242	1	Screen-Hopper-Small Hole ●
20	363-3707	2	Screw-PPH	34	126-1624	1	Clamp-Loop
21	126-2082	1	Bracket-Spring, Hopper Deflector	35	126-0759	2	Washer-Flat

● Sold separately

■ Not serviced separately

Spreader Motor Assembly

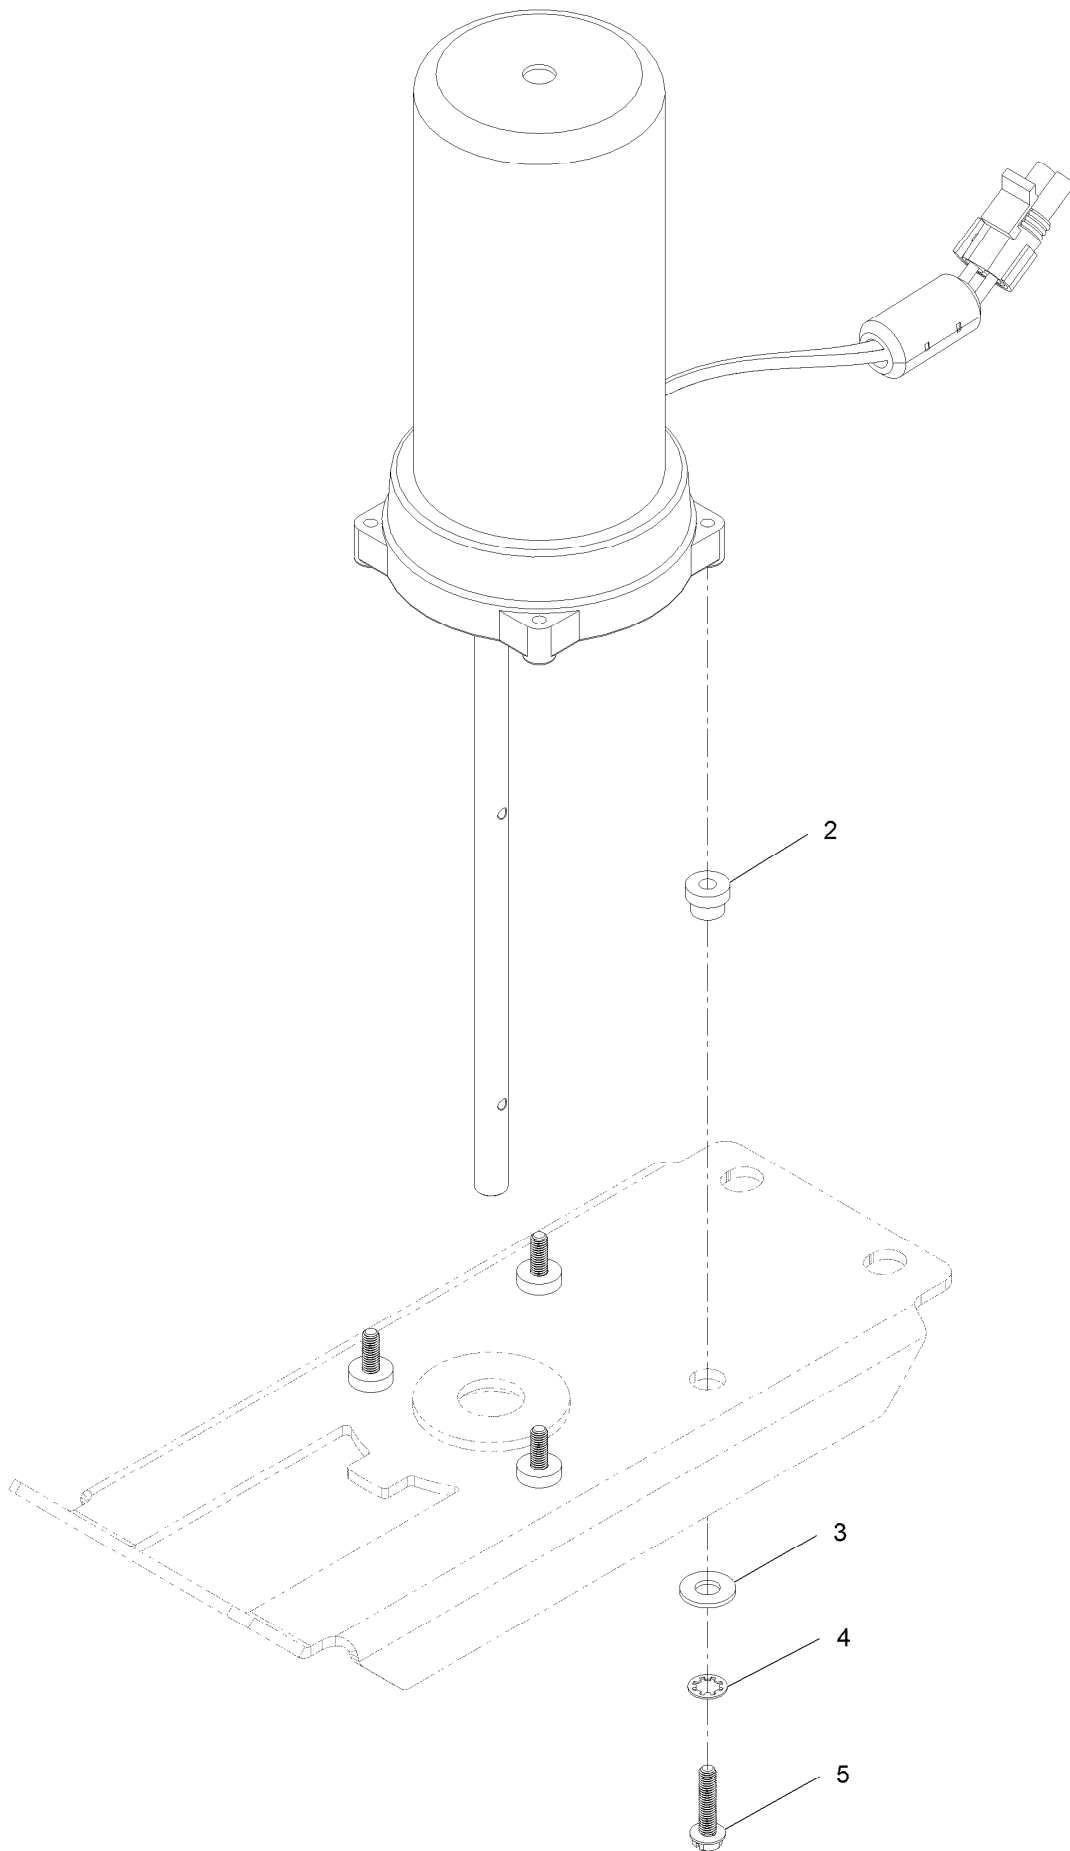


Spreader Motor Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	126-6190	4	Spacer-Flanged
3	360-0140	4	Washer-Flat

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	363-8641	4	Washer-Lock, Int
5	739001	4	Screw-SHWH


Ground Drive Assembly

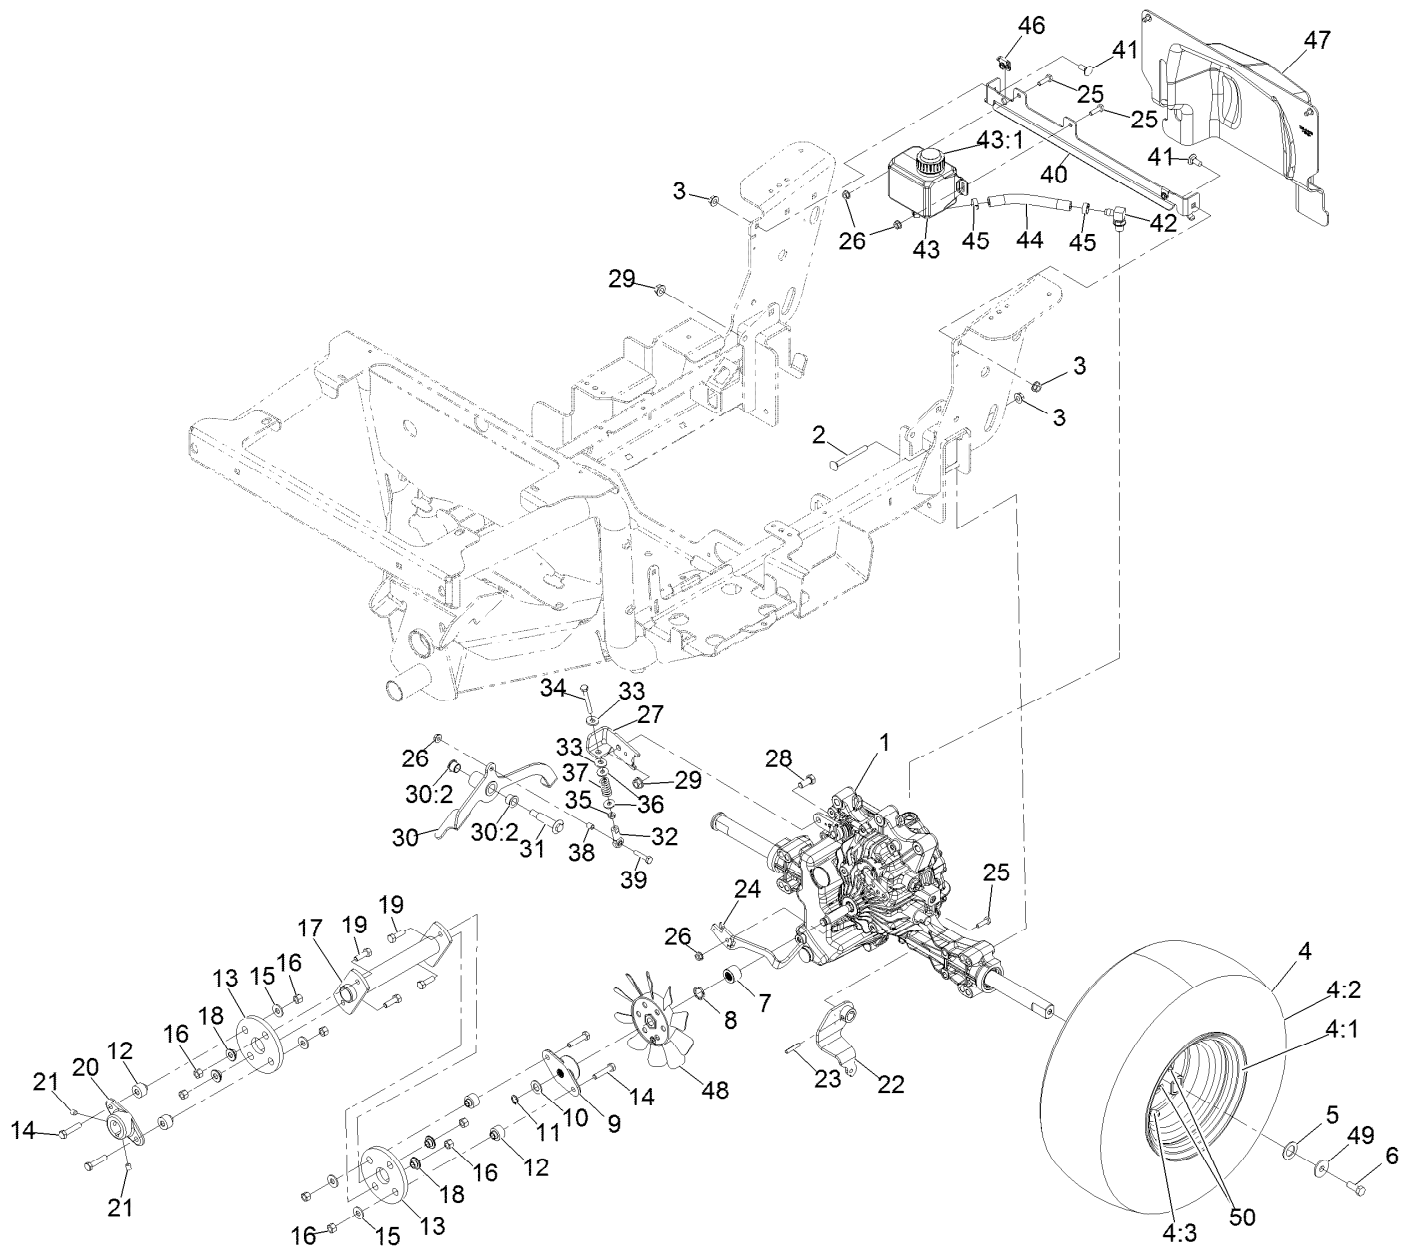

Ground Drive Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-2814	1	Transaxle	26	126-2231	4	Nut-Nyloc 1/4-20 Ss
2	126-0703	4	Screw-CARR	27	126-3937-03	1	Arm-Brake
3	126-2232	6	Nut-Nyloc 5/16-18 Ss	28	126-0520	1	Screw-HH
4	126-7265	2	Wheel And Tire ASM	29	126-2233	2	Nut-Hex Flg 3/8-16 Nyloc Ss
4:1	126-7266	1	Wheel	30	126-0433	1	Brake Lever ASM
4:2	126-1618	1	Tire	30:2	116-4279	2	Bearing-Flange
4:3	232-27	1	Stem-Valve	31	92-1057	1	Bolt-Shoulder
5	126-7888	2	Washer-Nylon	32	2411-41	1	Rod End-Ball Joint
6	3235-22	2	Screw-HH, Lock	33	1-303334	2	Washer-Spring Disc 5/16
7	126-2983	1	Spacer-Shaft, Input	34	126-4009	1	Screw-HH
8	3290-317	1	Washer-Spring	35	3220-1	1	Nut-Jam 1/4-28
9	116-9787	1	Hub-Shaft, Transaxle	36	3256-78	2	Washer
10	605256	1	Washer-Plain	37	1-323245	1	Spring-Compression
11	32151-61	1	Ring-Retaining	38	612503	1	Spacer
12	27-6590	4	Spacer-Coupling, Rubber	39	321-8	1	Screw-HH 1/4-20 X 1 1/4
13	115-4523	2	Coupling-Rubber	40	126-4423-03	1	Bracket-Mount, Tank
14	3210-8	4	Screw-HH 5/16-24 X 1 1/2	41	126-0695	2	Screw-CARR
15	3256-3	4	Washer-5/16 Std	42	126-2927	1	Fitting-90 DEG
16	32152-5	8	Nut-Hex 5/16-24	43	126-2578	1	Tank ASM
17	126-3838-03	1	Shaft-Drive	43:1	126-2579	1	Cap-Tank
18	125-9249	4	Spacer-Coupler, Rubber	44	126-2842	1	Hose-Expansion
19	3210-5	4	Screw-HH	45	126-3749	2	Clamp
20	116-9788	1	Hub-Shaft, Engine	46	119-1730	2	Receptacle-Clip, Mini
21	3246-18	2	Setscrew-5/16-18 X 3/8	47	126-1462	1	Transaxle Cover ASM
22	126-6243-03	1	Motion Arm ASM [black]	48	126-2980	1	Fan-7 Inch
23	126-4295	1	Pin-Spiral	49	126-7889	2	Spacer-Wheel
24	126-2811-03	1	Arm-Release	50	126-3824	4	Screw-Set, SQH
25	126-0498	3	Screw-HH 1/4-20 X 7/8 Ss				

Transaxle Cover Assembly No. 126-1462

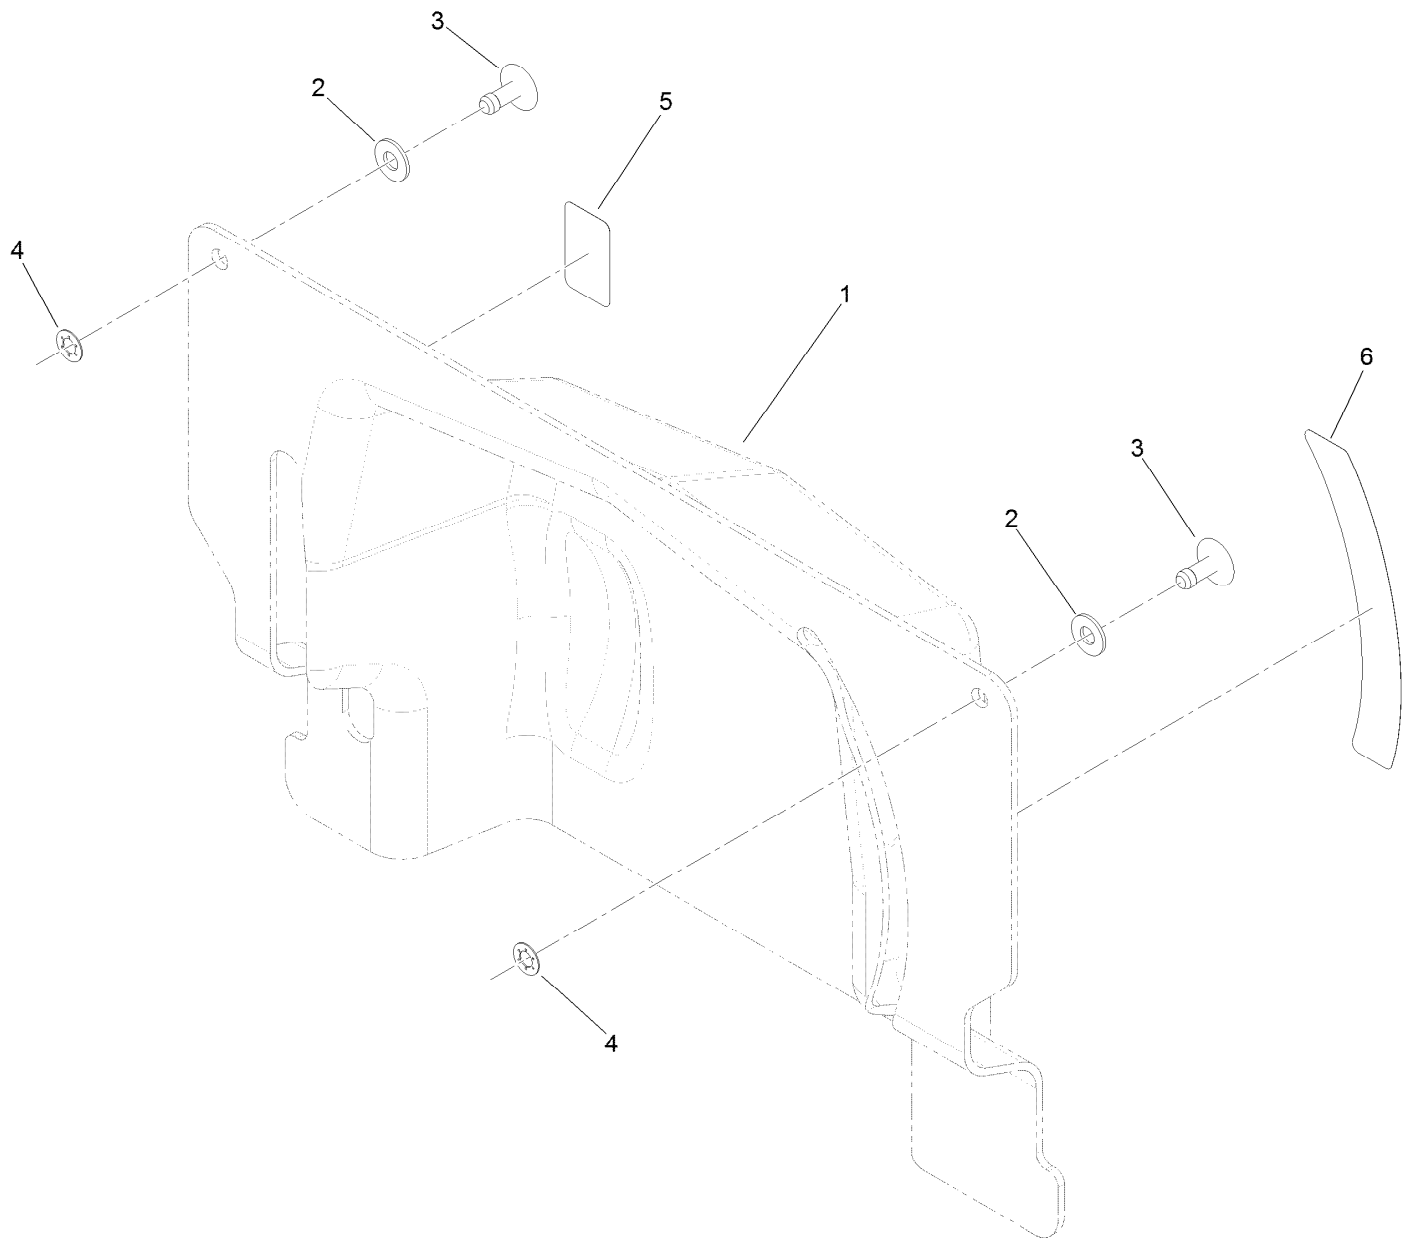


Transaxle Cover Assembly No. 126-1462 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Cover-Transaxle ●
2	360-0140	2	Washer-Flat
3	119-1728	2	Stud-1/4 Turn

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	119-1729	2	Retainer-Stud
5	126-2620	1	Decal-Brake, Park
6	126-2621	1	Decal-Release, Drive

● Not serviced separately

Engine Assembly


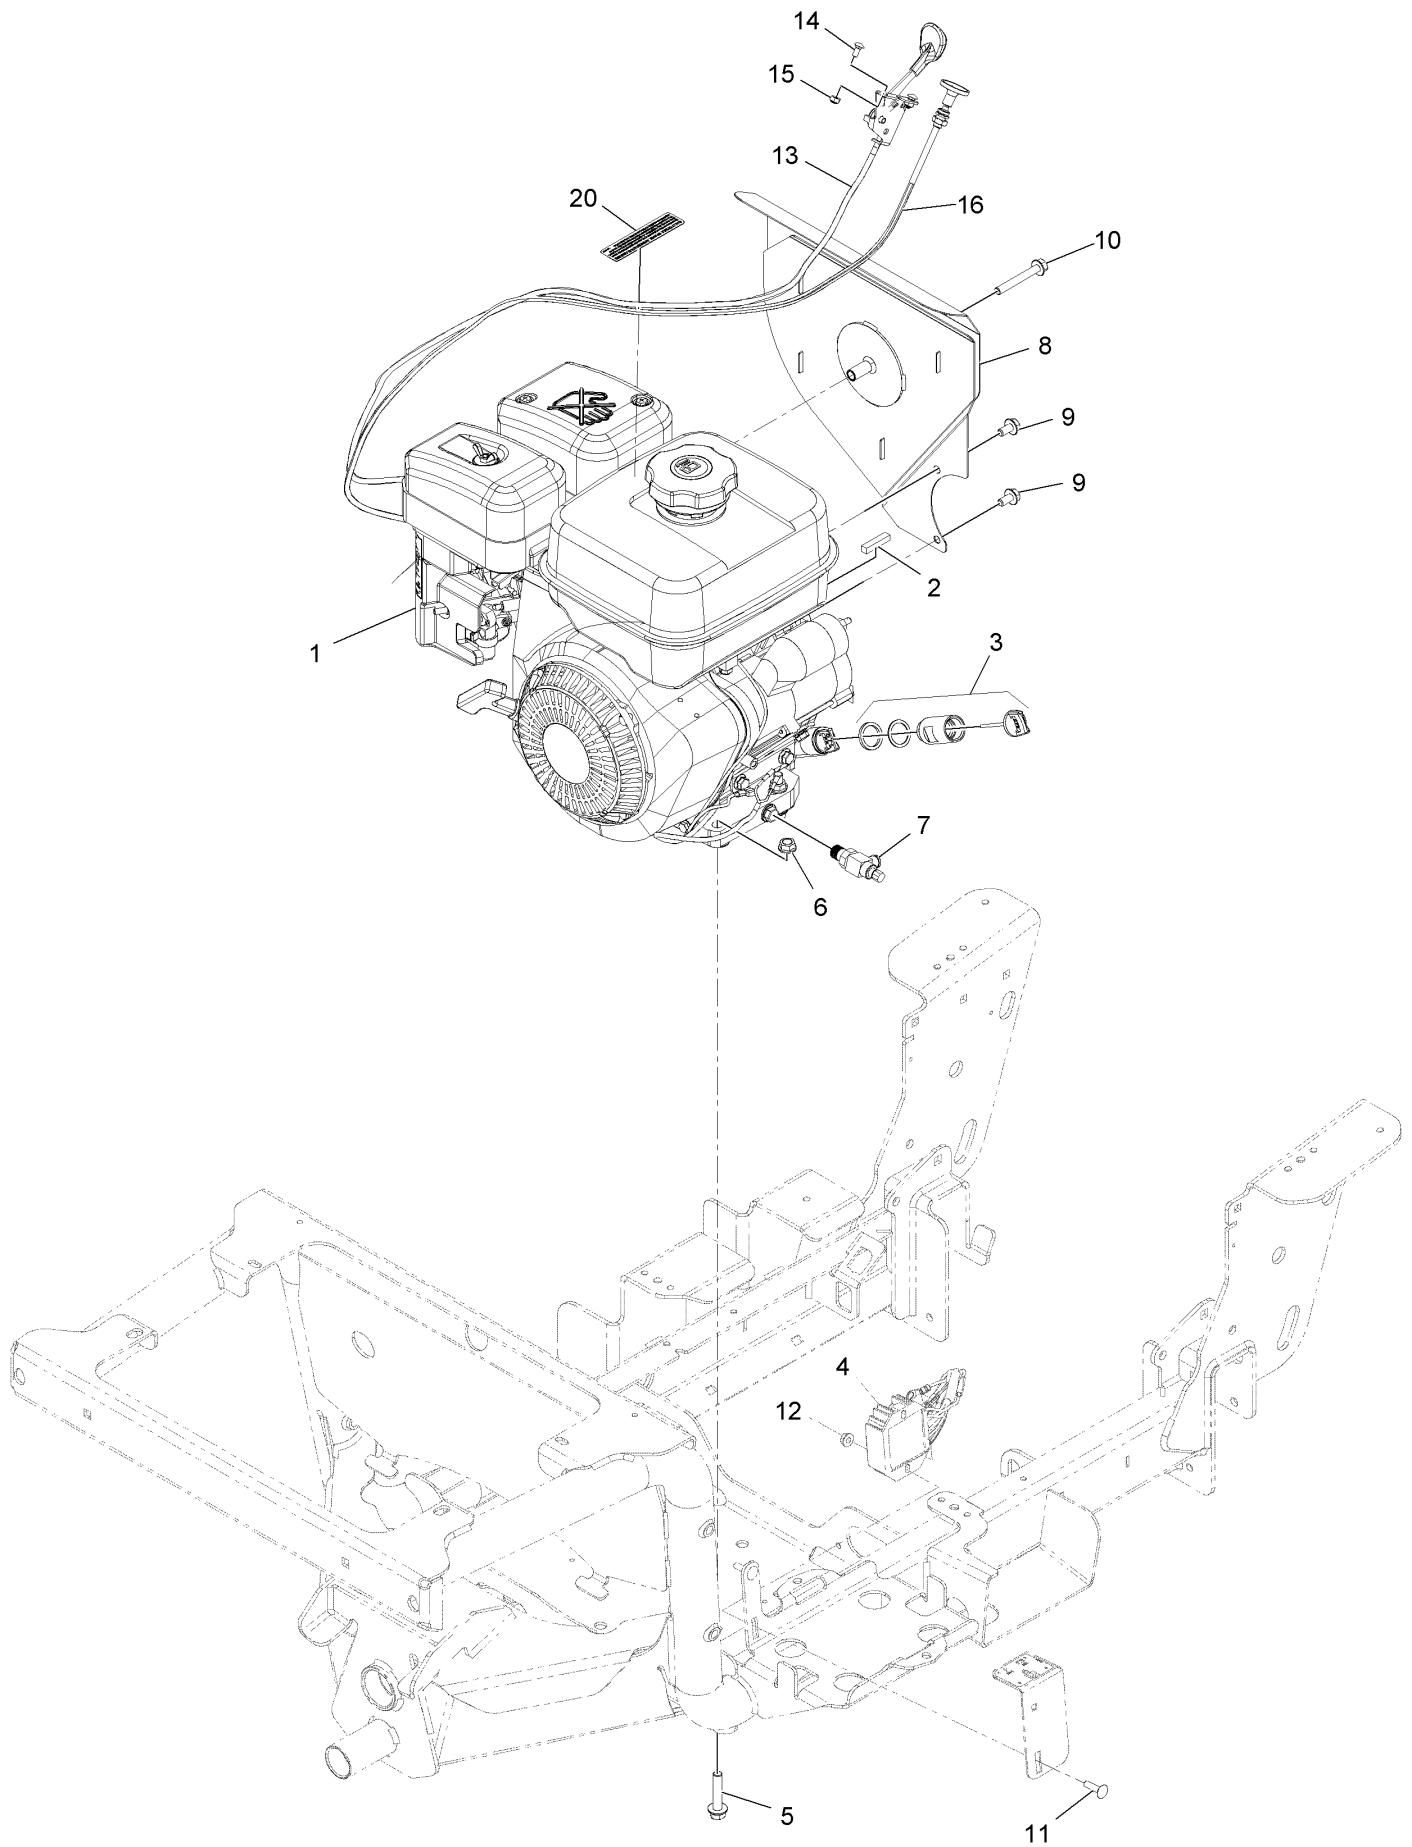


Engine Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Engine-Subaru, Ex27 ●	10	33104-060	1	Screw-HHF
2	126-2532	1	Key-Crankshaft	11	126-1455	2	Screw-CARR
3	126-1432	1	Extender-Dipstick	12	126-2231	2	Nut-HF
4	126-4658	1	Regulator	13	126-2240	1	Control-Throttle
5	126-2710	4	Screw-HHF	14	1-807513	2	Bolt-Carriage #10-24 X 1/2
6	126-2233	4	Nut-HF	15	3296-2	2	Nut-Nyloc #10-24
7	103-6602	1	Valve-Oil Drain	16	126-2285	1	Cable-Choke, Push/Pull
8	126-2426	1	Heat Shield ASM	20	117-2718	1	Decal-Arrester, Spark
9	117-1836	2	Screw-HHF, Lock				

● Not serviced separately

Electrical Assembly

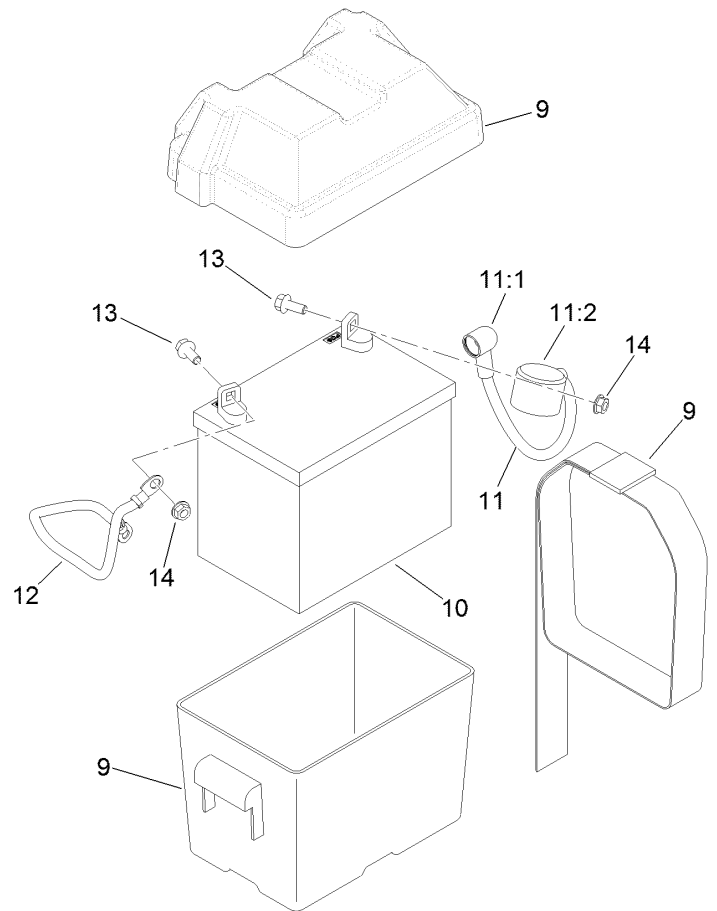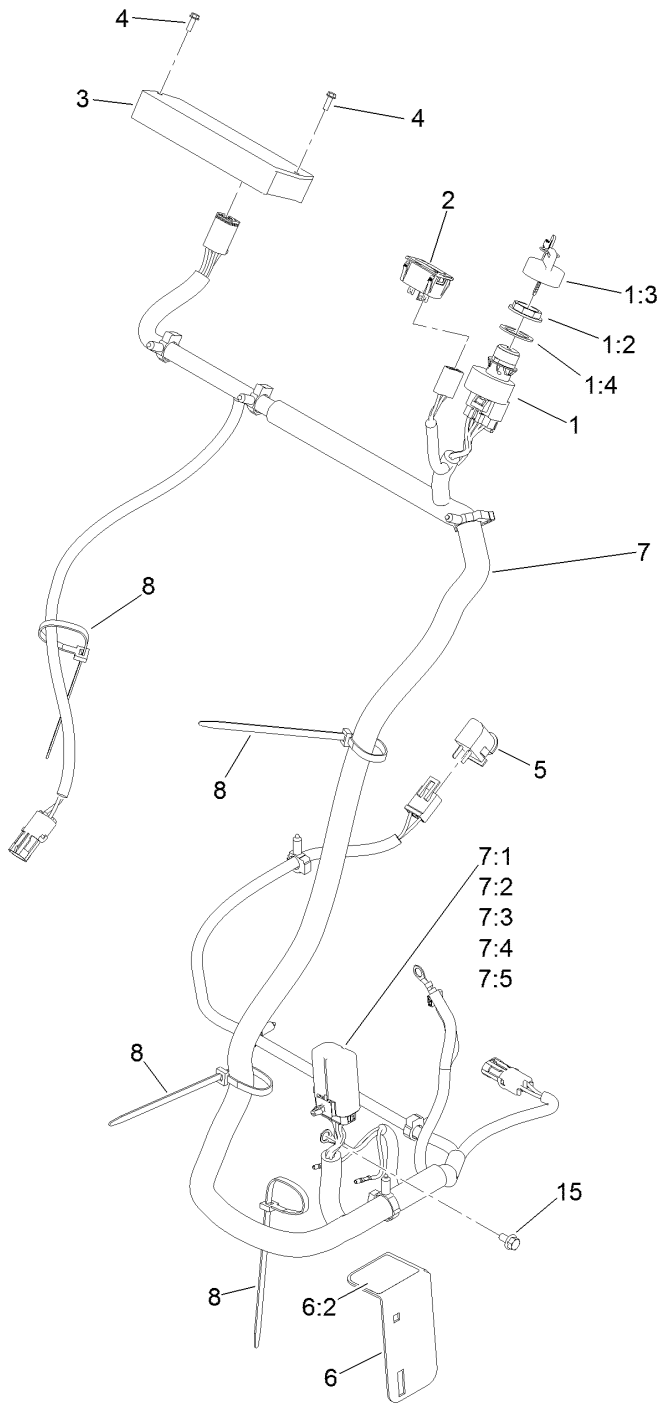

Electrical Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	120-3956	1	Ignition Switch ASM	7:4	126-4102	1	Clip-Power Distribution Module
1:2	108-8660	1	Nut-Mounting	7:5	126-6343	1	Block-Foam
1:3	106-5270	1	Ignition Key Set	8	1-303335	4	Tie-Cable 7 15/16 (Large)
1:4	108-8659	1	Washer-Backup	9	126-1424	1	Battery Box
2	126-3931	1	Hour Meter	10		1	Battery (300 Cca, Wet) ●
3	126-6622	1	Controller-Dc	11	116-4730	1	Cable-Battery, Positive
4	32144-87	2	Screw-HWHTF	11:1	1-543393	1	Insulator-Solenoid
5	82-2190	1	Switch	11:2	109-2407	1	Insulator-Battery
6	126-4656	1	Fuse Bracket ASM	12	114-9715	1	Cable-Battery, Negative
6:2	126-4122	1	Decal-Fuse	13	126-2712	2	Screw-HHF 5/16-18 X 3/4 Ss
7	126-3458	1	Harness-Wire ■	14	126-2232	2	Nut-Nyloc 5/16-18 Ss
7:1	121-8868	2	Fuse-Mini Blade, 20 Amp	15	33103-012	1	Screw-HHF
7:2	126-3991	1	Relay-Micro				
7:3	126-4101	1	Cap-Power Distribution Module				

● Not serviced separately

■ Use dielectric grease on all unsealed connectors and terminals only. Do not apply in sealed connectors.

Notes:



MAXIMIZE THE PERFORMANCE OF YOUR EXMARK MACHINE.



EXMARK® PREMIUM ENGINE OIL

Exmark now offers a family of engine oil viscosities to perform well in any environment. Each viscosity has the same synthetic formulation to give you what you need in punishing conditions. We designed each grade to the highest quality, making it ideal even for diesel applications. Coupled with Exmark Premium Fuel Treatment, we have the performance products to make your machine hum.

EXMARK PREMIUM ENGINE OIL SAE 30/10W-30

- Meets zero shear requirements of a straight grade SAE 30 as well as the cold temp properties of a 10W-30.
- Most versatile oil in the industry.
- Superior corrosion protection over conventional oil - even in corrosive, humid environments.

EXMARK PREMIUM ENGINE OIL SAE 20W-50

- Perfect for your big block engine, or any application in severe service.
- Same full synthetic formulation as all other Exmark Premium viscosities.
- Also effective for use in severe service small block engines.

EXMARK PREMIUM ENGINE OIL SAE 10W-50

- Full synthetic formulation gives you peak performance. Don't settle for less.
- Wide span multi-grade combines easy starting in cold weather with maximum protection in high temperature operation.
- Reduce friction & wear over standard mineral formulations.

EXMARK PREMIUM ENGINE OIL SAE 0W-40

- The perfect choice for when the weather turns cold or unpredictable, and your Exmark UTV has to perform.
- Commercial quality for severe service.
- Advanced additive package helps prevent corrosion from long-term storage.

EXMARK PREMIUM ENGINE OIL UTV FORMULATION

- 4-cycle high-temp formulation.
- Heavier viscosity, full synthetic, perfect for your UTV.

EXMARK PREMIUM UTV EXTREME CONDITIONS GEAR OIL

- SAE 80W-90, designed to keep your UTV performing at its peak.
- Shear stable, hypoid gear lube.
- Includes a premium additive system to combat wear, oxidation, rust & corrosion.

Available from your local Exmark dealer. Find your closest dealer at exmark.com

EXMARK ACCESSORIES AND OPTIONS*

MID-MOUNT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM	OPERATOR CONTROLLED DISCHARGE
FULL SUSPENSION SEAT	SUN SHADE
DECK LIFT ASSIST KIT	TRASH CONTAINER
HITCH KIT	TURF STRIPER
LIGHT KIT	ULTRA VAC COLLECTION SYSTEM
12V POWER PORT	ULTRA VAC QUICK DISPOSAL SYSTEM
MICRO-MULCH SYSTEM	

OUT-FRONT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM	SNOW BLADE
DUAL-TAIL WHEEL	SNOWBLOWER
FLOOR PAN EXTENDER	SUN SHADE
HITCH KIT	TRASH CONTAINER
LIGHT KIT	ULTRA VAC COLLECTION SYSTEM
MICRO-MULCH SYSTEM	ULTRA VAC QUICK DISPOSAL SYSTEM
ROLL OVER PROTECTION SYSTEM (ROPS)	WEATHER CAB

WALK-BEHIND ACCESSORIES AND OPTIONS

GRASS CATCHER	TURF STRIPER
MICRO-MULCH SYSTEM	STANDON

*Some accessories and options not available for some models.

Place Model No. and Serial No.
Label Here (Included in the Literature
Pack) or Fill in Below

Model No. _____

Serial No. _____

Date Purchased _____

Engine Model No. and Spec. No. _____

Engine Serial No. (E/No) _____

© 2015 Exmark Mfg. Co., Inc.
Industrial Park Box 808
Beatrice, NE 68310
All Rights Reserved

Part No. 4502-676 Rev. A
(402) 223-6300
Fax (402) 223-5489
Printed in the USA.



* 4 5 0 2 - 6 7 6 * A

www.exmark.com