 


TORO®

MODEL NO. 03800-70180 & UP
MODEL NO. 03800TE-70114 & UP
MODEL NO. 03801-70230 & UP
MODEL NO. 03801TE-70157 & UP

PARTS CATALOG


REELMASTER® 6500D – 2WD/4WD TRACTION UNIT

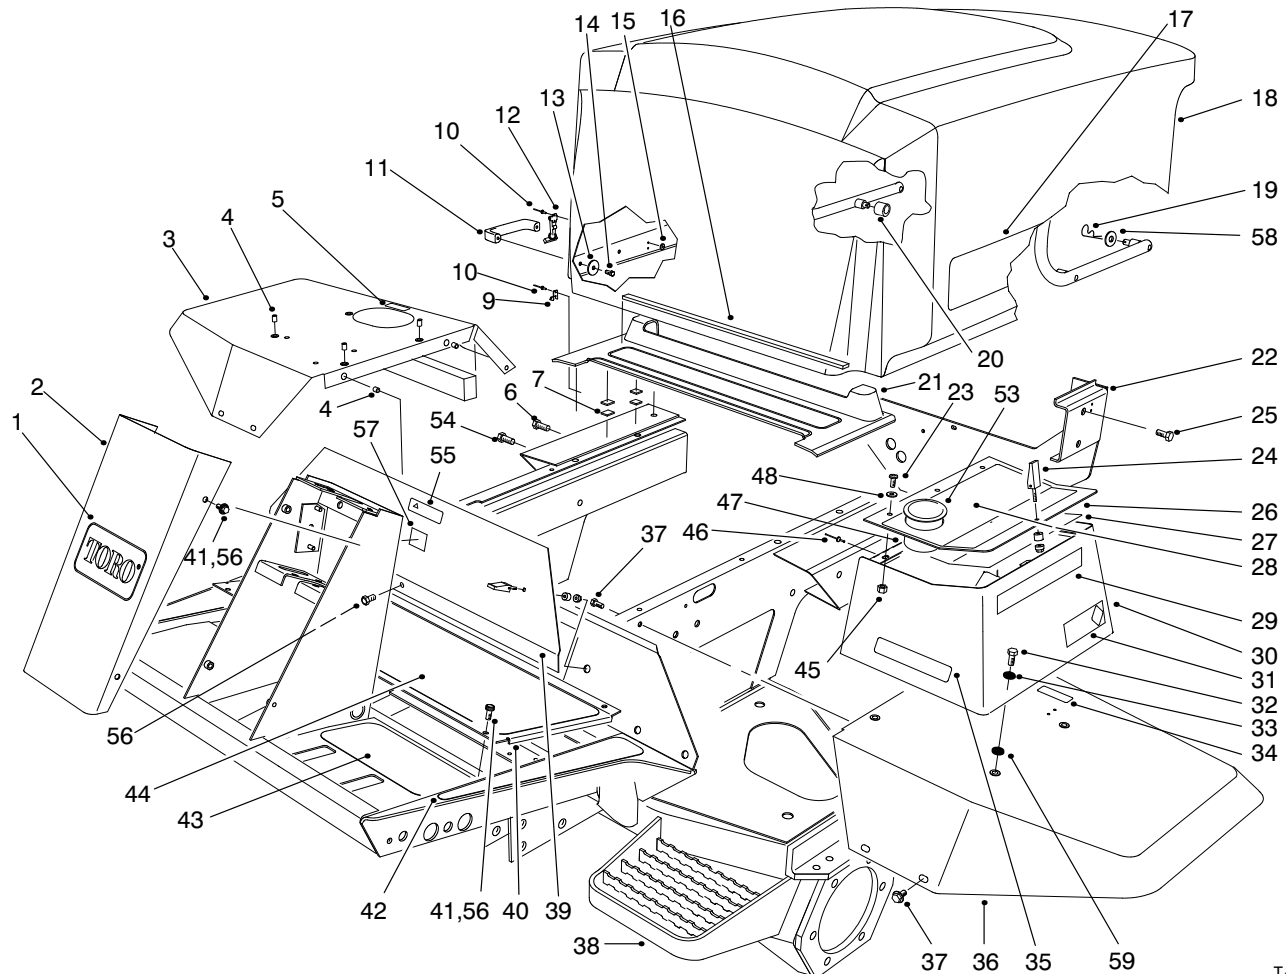

T-2366-3

FRAME & BODY ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	62-5550	Decal-Toro	1	16	92-7633	Strip-Bumper, Hood	1
2	93-7996	Cover-Tower	1	17	92-7532	Decal-RM6500D	2
3	93-7579	Fender-RH	1	18	92-7511	Hood	1
4	32148-7	Nut-Clinch	5	19	3290-467	Pin-Cotter, Hair	2
5	85-4730	Decal-Hydraulic Oil Only	1	20	93-7582	Hose	1
5	93-6686	Decal-Hydraulic Oil (Europe)	1	21	94-2617	Cover-Pump	1
5	88-1980	Decal-Hydraulic Oil (Japan)	1	22	98-2436	Frame-Rear (Incl. Ref. #1, Page 51)	1
6	33106-035	Screw-HHF	8	23	3258-166	Screw	3
7	93-9155	Velcro	2	24	74-5950	Latch-Swell	3
9	249-40	Keeper	1	25	33108-035	Screw	6
10	3269-13	Rivet-Pop	4	26	93-9180	Cover-Box, Tool	1
11	65-5100	Handle-Hood	1	27	93-9165	Decal-Instr. Service, 2WD	1
12	59-9740	Latch-Draw	1	27	94-2935	Decal-Service (Danish)	1
13	3256-78	Washer-Flat	2	27	94-2936	Decal-Service (Dutch)	1
14	46-8091	Screw-Tapping	2	27	94-2937	Decal-Service (Finnish)	1
15	3269-10	Washer-Flat	2	27	94-2938	Decal-Service (French)	1
				27	94-2939	Decal-Service (German)	1

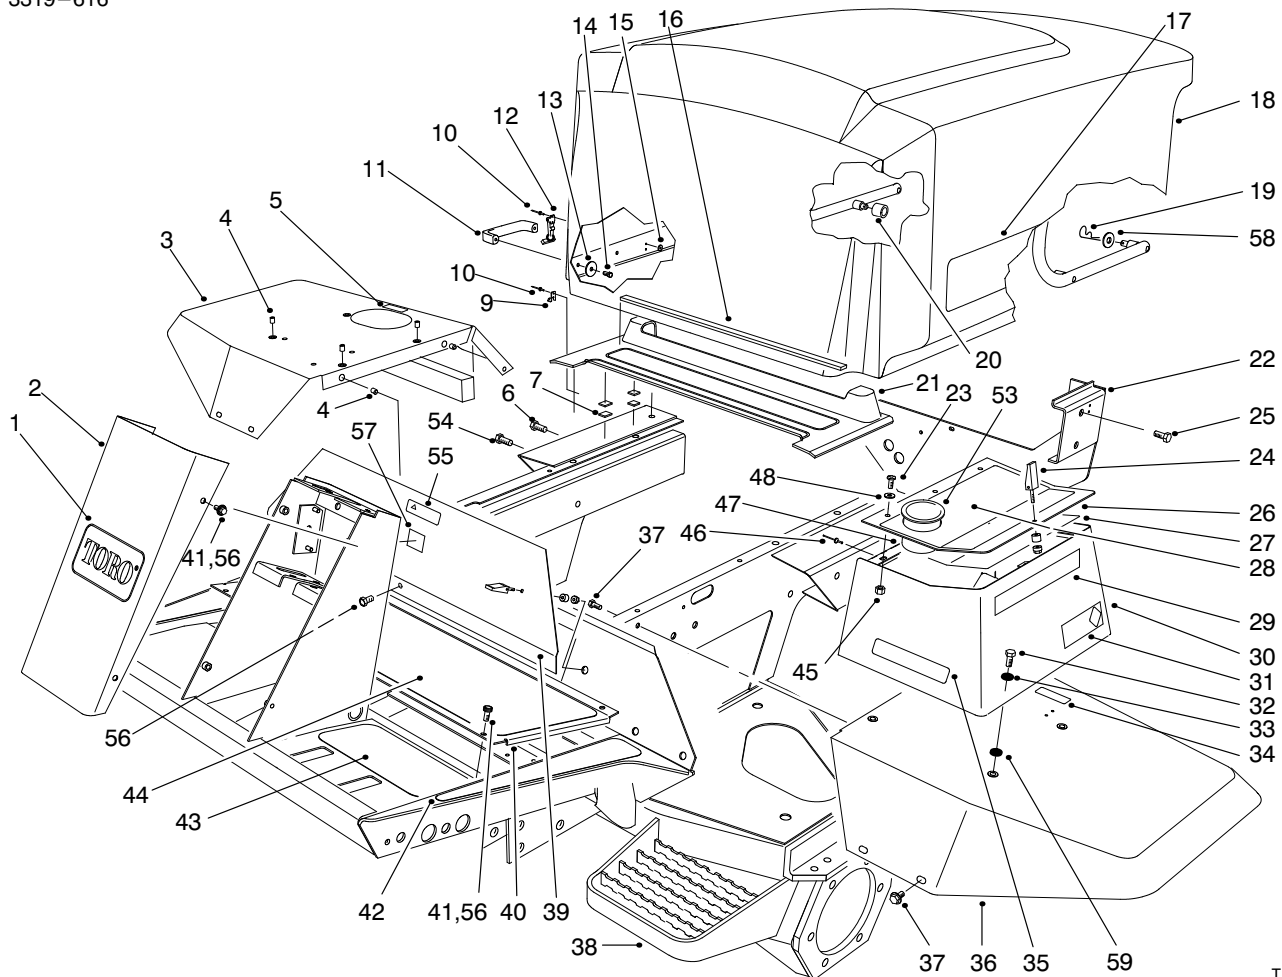 


T-2366-3

FRAME & BODY ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
27	94-2940	Decal-Service (Italian)	1
27	94-2942	Decal-Service (Norwegian)	1
27	94-2943	Decal-Service (Portuguese)	1
27	94-2944	Decal-Service (Spanish)	1
27	94-2945	Decal-Service (Swedish)	1
27	94-2941	Decal-Service (Japan)	1
27	93-9166	Decal-Instr. Service, 4WD	1
27	94-2924	Decal-Service (Danish)	1
27	94-2925	Decal-Service (Dutch)	1
27	94-2926	Decal-Service (Finnish)	1
27	94-2927	Decal-Service (French)	1
27	94-2928	Decal-Service (German)	1
27	94-2929	Decal-Service (Italian)	1
27	94-2931	Decal-Service (Norwegian)	1
27	94-2932	Decal-Service (Portuguese)	1
27	94-2933	Decal-Service (Spanish)	1
27	94-2934	Decal-Service (Swedish)	1
27	94-2930	Decal-Service (Japan)	1
28	93-9177	Decal-Warning, Hillside	1
28	93-1262	Decal-Hillside (Europe)	1
28	94-4572	Decal-Hillside (Japan)	1
29	72-3560	Decal-4WD (Model 03801)	1
30	75-5810	Box-Tool	1
31	93-0096	Decal-ACE	2
32	322-3	Screw-Hex. Hd.	4
33	3256-3	Washer-Flat	4
34	52-1320	Decal-Fuel, Diesel	1
34	93-6680	Decal-Fuel, Diesel (Europe)	1
34	84-2860	Decal-Fuel, Diesel (Japan)	1

Ref. No.	Part No.	Description	No. Used
35	75-5190	Decal-No Riders	1
35	93-6689	Decal-No Riders (Europe)	1
35	84-3420	Decal-No Riders (Japan)	1
36	75-3860	Fender-LH	1
37	3234-14	Screw-Flange	10
38	94-9953	Frame-Front (Incl. Ref. #42, 43 & on Page 67, #21)	1
39	75-1390	Cover-Access, Front	1
40	75-1410	Plate-Access, Floor	1
41	75-6840	Knob-Knurled	8
42	93-7592	Tread-Footrest	2
43	75-0620	Tread-Foot, LH	1
*	75-0610	Tread-Foot, RH	1
44	75-0630	Tread-Foot, Center	1
45	32128-33	Nut-Flange	3
46	93-8744	Rivet-Pop	3
47	75-5780	Hinge-Cover	1
48	3256-1	Washer-Flat	3
53	94-1410	Holder-Can, Beverage	1
54	33105-035	Screw-Flange	2
55	93-9426	Decal-Danger	1
55	93-9425	Decal-Danger (Europe)	1
55	94-4579	Decal-Danger (Japan)	1
56	3234-7	Screw-(Europe)	3
57	93-7252	Decal-(Europe)	1
58	66-6480	Washer	2
59	66-2920	Washer	4

 
*Not Illustrated

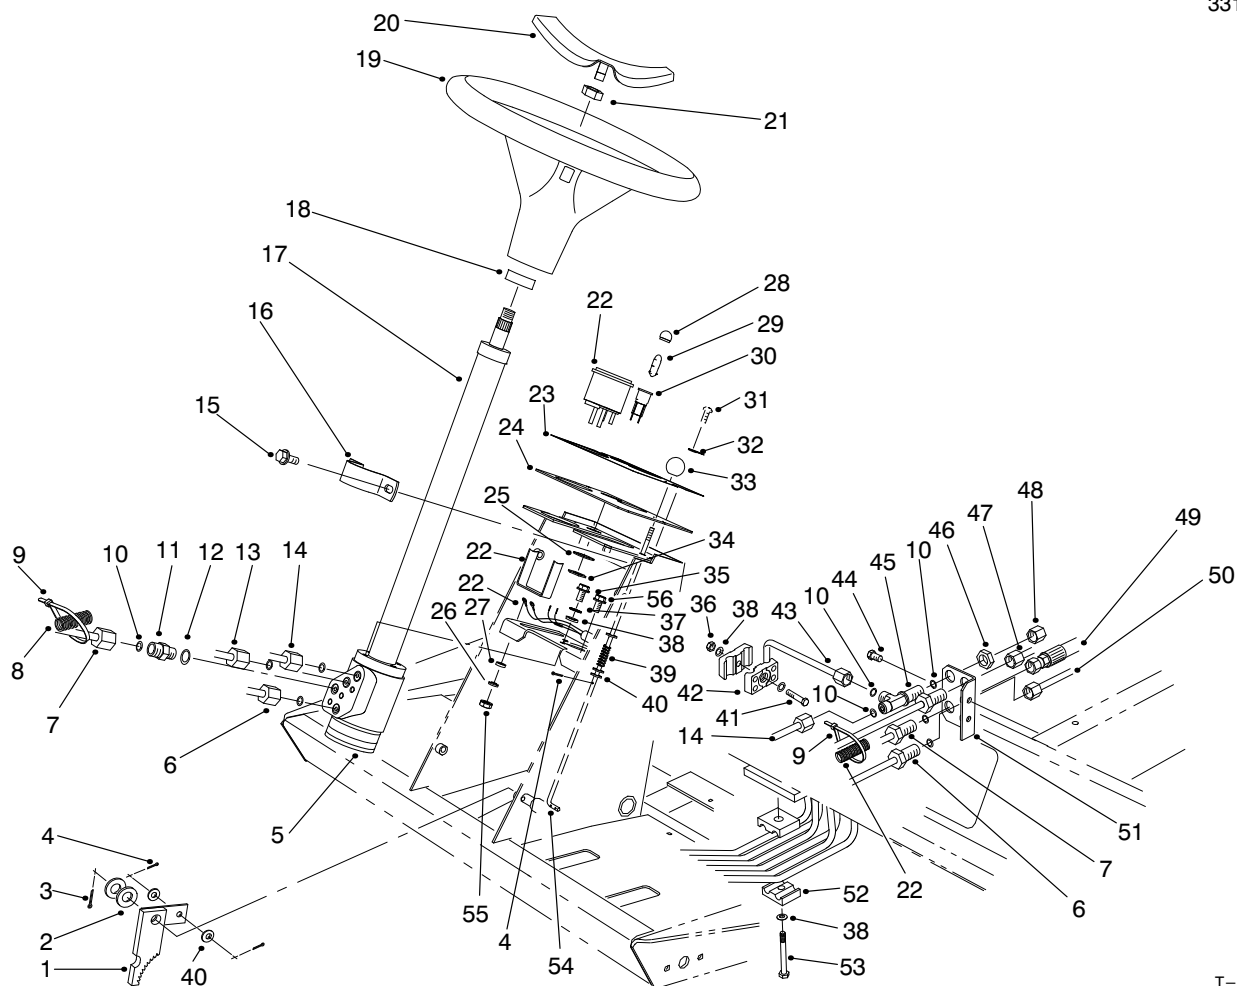

T-2447-3

STEERING TOWER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	63-7900	Rack	1	23	94-4573	Decal-Tower (Japan)	1
2	3256-26	Washer-Flat	2	24	93-7998	Plate-Instrument	1
3	3272-10	Pin-Cotter	1	25	218-536	Washer-Lock, Int. Tooth	1
4	3272-5	Pin-Cotter	3	26	3219-14	Washer-Lock	3
5	94-9950	Asm-Valve, Steering	1	27	3256-14	Washer-Flat	2
6	94-3059	Tube-Steering, RH	1	28	218-533	Lens-Red	1
7	94-3061	Tube-Steering, Front, In	1	29	93-7480	Bulb-LED	1
8	94-3090	Harness-Wire, Main	1	30	44-2210	Asm-Light, Warning (Incl. Ref. #25, 28, 29, & 34)	1
9	3290-378	Tie-Cable	7	31	87-6620	Screw-Torx Pan Hd.	2
10	237-22	O-Ring	10	32	3256-1	Washer-Flat	2
11	340-2	Adapter (Incl. Ref. #10 & 12)	4	33	233-17	Knob	1
12	237-42	O-Ring	4	34	218-535	Nut-Lock	1
13	94-3060	Tube-Steering, Front LH	1	35	33103-025	Screw-HHF	1
14	94-3062	Tube-Steering, Front, Out	1	36	3296-47	Nut-Lock	1
15	3234-7	Screw	2	37	3255-8	Washer-Lock	1
16	75-2810	Bracket-Column, Steering	1	38	3256-23	Washer-Flat	6
17	94-9951	Asm-Column, Steering	1	39	95-1821	Spring-Brake, Park	1
18	21-9260	Cover-Dust	1	40	3256-22	Washer-Flat	5
19	94-3500	Wheel-Steering (Incl. Ref. #20)	1	41	322-7	Screw-HH	1
20	88-3870	Cover	1	42	56-7972	Clamp	2
21	94-9952	Nut-Jam	1	43	94-1447	Tube-Steering, Return	1
22	93-4213	Asm-Speedometer (Incl. Ref. #26, 27 & 53)	1	44	32144-11	Screw-Thread Forming	2
23	93-7554	Decal-Tower	1	45	340-68	Fitting-Tee, Bulkhead (Incl. Ref. #10)	1
23	93-1263	Decal-Tower (Europe)	1	46	340-70	Nut-Lock, Bulkhead	4
				47	92-7495	Asm-Tube, Steering Rear	1

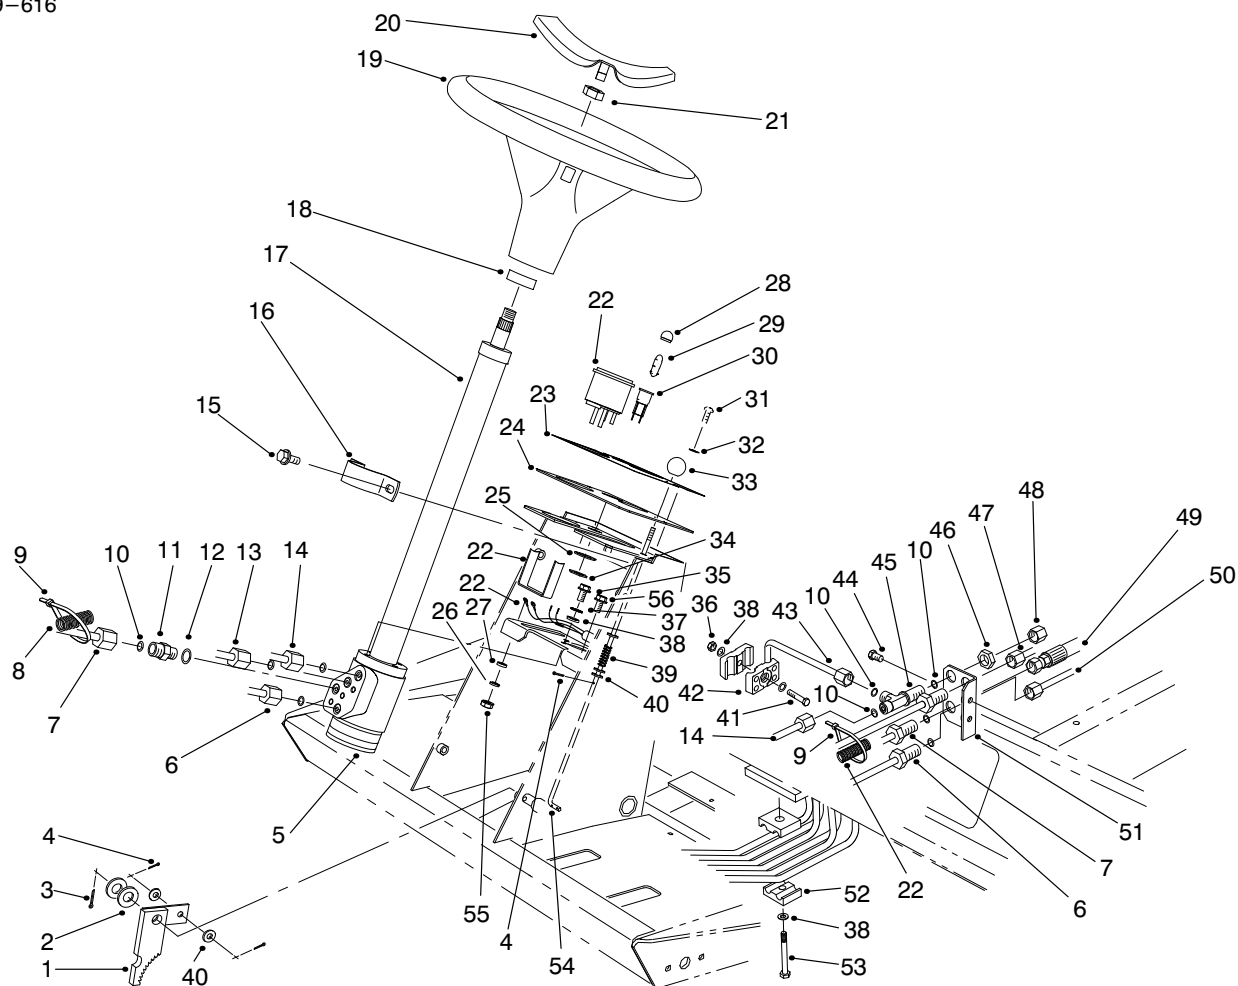 


T-2447-3

STEERING TOWER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
48	340-117	Cap-Fitting	1
49	92-7622	Hose-Steering	1
50	92-7494	Asm-Tube Steering Rear	1
51	92-7606	Bracket-Bulkhead	1
52	56-7973	Clamp	6

Ref. No.	Part No.	Description	No. Used
53	322-6	Screw-Hex. Hd.	3
54	75-1490	Rod-Brake, Park	1
55	3253-2	Nut-Hex.	9
56	33103-020	Screw-HHF	2

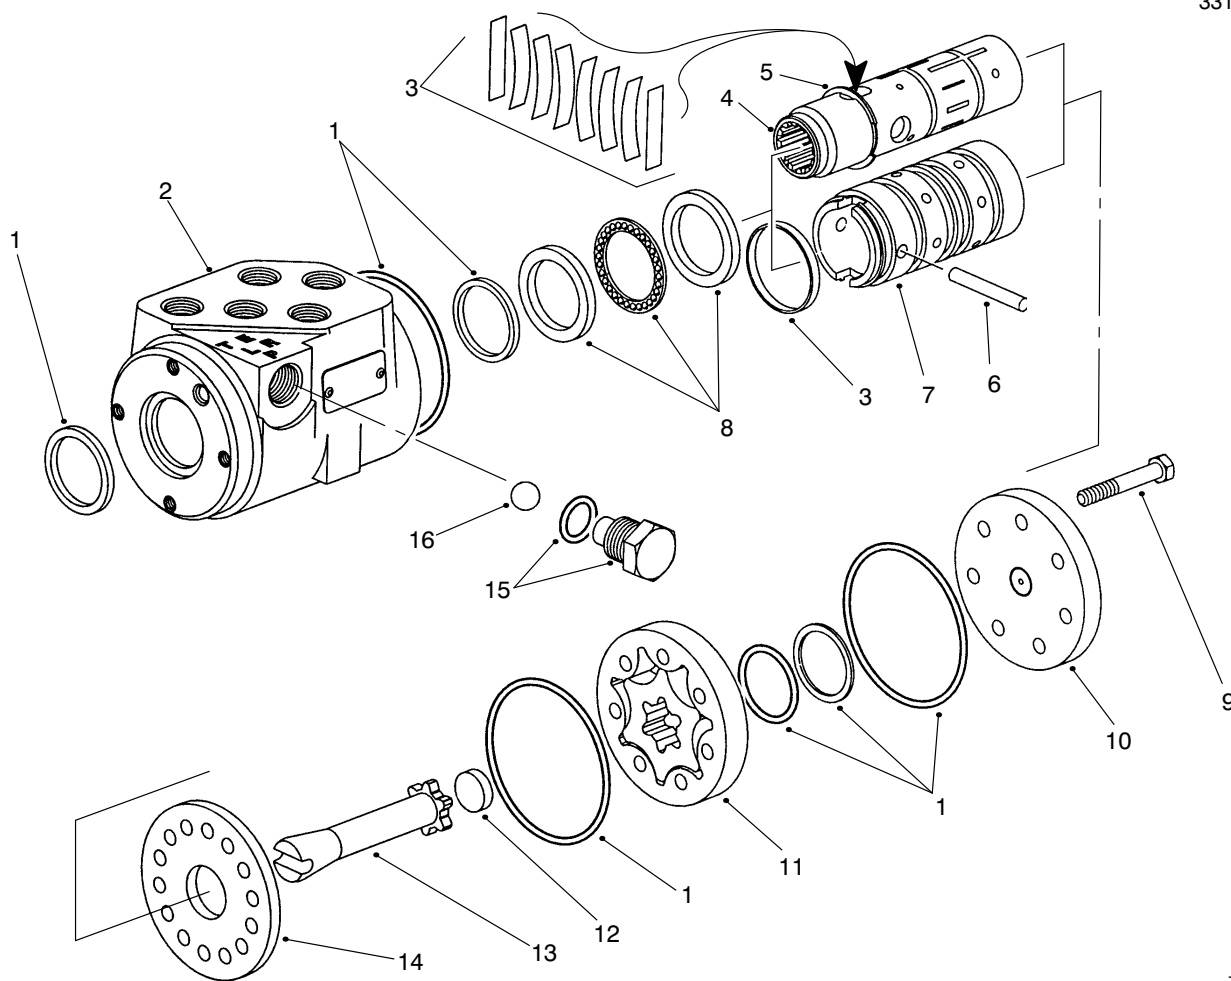 


T-2312-1

STEERING VALVE ASSEMBLY NO. 94-9950

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-4099	Kit-Seal	1	9	94-4088	Screw	7
†2		Housing	1	10	94-4089	Cap-End	1
3	94-4095	Kit-Spring, Centering	1	11	94-4090	Gerotor	1
†4		Spool	1	12	94-4091	Spacer	1
5	94-4098	Ring-Retaining	1	13	94-4093	Drive	1
6	94-4094	Pin	1	14	94-4092	Plate-Wear	1
†7		Sleeve	1	15	94-4097	Asm-Plug	1
8	94-4096	Kit-Bearing	1	16	94-4100	Ball	1

 † Not Serviced Separately.

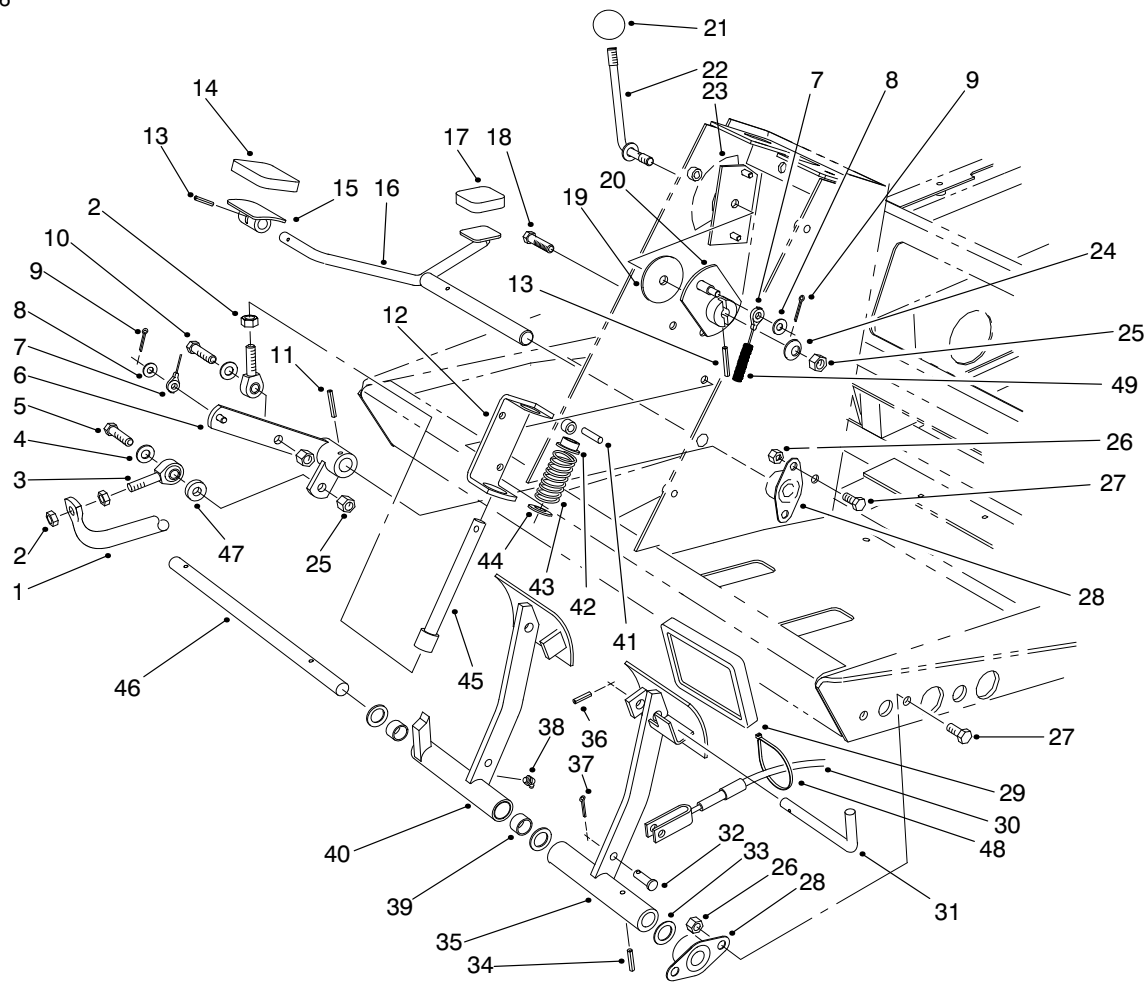


T-2063-4

TRACTION & BRAKE PEDAL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-7531	Tube-Control, Pump	1
2	3220-3	Nut-Jam	3
3	2411-36	Bearing-Rod End	2
4	3256-24	Washer-Flat	2
5	323-9	Screw-Hex. Hd.	1
6	75-3270	Hub-Pivot, Traction	1
7	75-6580	Cable-Pedal	1
8	3256-22	Washer-Flat	2
9	3272-2	Pin-Cotter	2
10	323-7	Screw-Hex. Hd.	1
11	32121-6	Pin-Roll	1
12	92-7608	Bracket-Spring	1
13	32121-45	Pin-Roll	2
14	74-9100	Pad-Pedal, Forward	1
15	49-6440	Pedal-Accelerator	1
16	75-2970	Pedal-Traction	1
17	74-9110	Pad-Pedal, Reverse	1
18	32144-14	Screw-Hex. Hd.	2
19	75-6550	Disc-Friction	1
20	75-6510	Bracket-Lever	1
21	233-42	Knob	1
22	75-6490	Lever	1
23	75-6710	Decal-Fast/Slow	1
23	93-6699	Decal-Fast/Slow (Europe)	1
23	84-3500	Decal-Fast/Slow (Japan)	1
24	3290-461	Washer-Belleville	1
25	3296-39	Nut-Lock	3

Ref. No.	Part No.	Description	No. Used
26	32128-20	Nut-Lock	8
27	322-3	Screw-Hex. Hd.	8
28	256-236	Bearing-Flange	4
29	93-8742	Pad-Brake	2
30	92-7530	Asm-Cable, Brake LH	1
*	92-7529	Asm-Cable, Brake RH	1
31	63-7880	Pin-Latch, Brake	1
32	283-58	Pin-Clevis	2
33	3256-69	Washer-Flat	3
34	32121-16	Pin-Roll	1
35	75-1440	Pedal-Brake, LH	1
36	32121-50	Pin-Roll	1
37	3272-10	Pin-Cotter	2
38	302-60	Fitting-Grease	1
39	256-42	Bushing	2
40	75-1430	Pedal-Brake, RH (Incl. Ref. #38 & 39)	1
41	32121-11	Pin-Roll	1
42	92-7610	Retainer-Spring	1
43	60-5700	Spring-Compression	1
44	3256-5	Washer-Flat	1
45	92-7609	Shaft-Spring	1
46	75-1470	Pin-Pivot, Brake	1
47	5-0652	Spacer	1
48	3290-378	Tie-Cable	1
49	95-7151	Tube-Convolute	1

 
*Not Illustrated

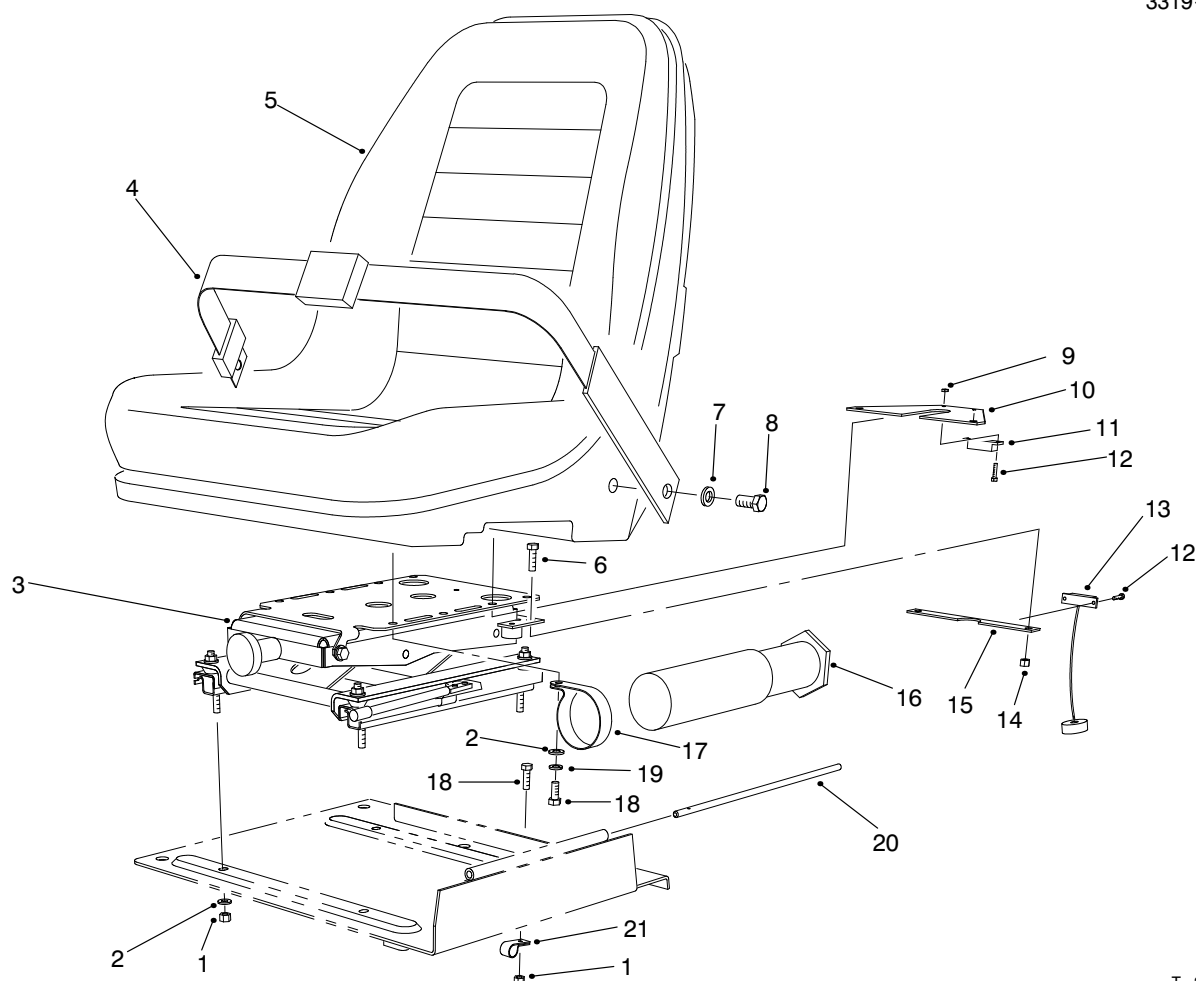

T-2064-1

SEAT FRAME & THROTTLE ASSEMBLY


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3296-29	Nut-Lock	5	10	75-4370	Bracket-Seat	1
2	3256-23	Washer-Flat	8	11	92-8753	Magnet-Switch, Reed	1
3		Suspension-Seat	1	12	3250-29	Screw	4
4	21-4191	Asm-Seat Belt (Model 03801 Only)	1	13	92-8001	Sensor-Switch, Reed	1
5	92-1180	Asm-Seat	1	14	3296-39	Nut-Lock	2
6	323-4	Screw-Hex. Hd.	2	15	75-4360	Bracket-Suspension, Seat	1
7	3253-6	Washer-Lock (Model 03801 Only)	2	16	74-0720	Tube-Manual	1
8	3212-4	Screw (Model 03801 Only)	2	17	2412-133	Clamp-R	2
9	3296-54	Nut-Lock	4	18	322-3	Screw-Hex. Hd.	2
				19	3253-4	Washer-Lock	4
				20	75-3400	Shaft-Pivot, Seat	1
				21	2412-93	Clamp-R	1

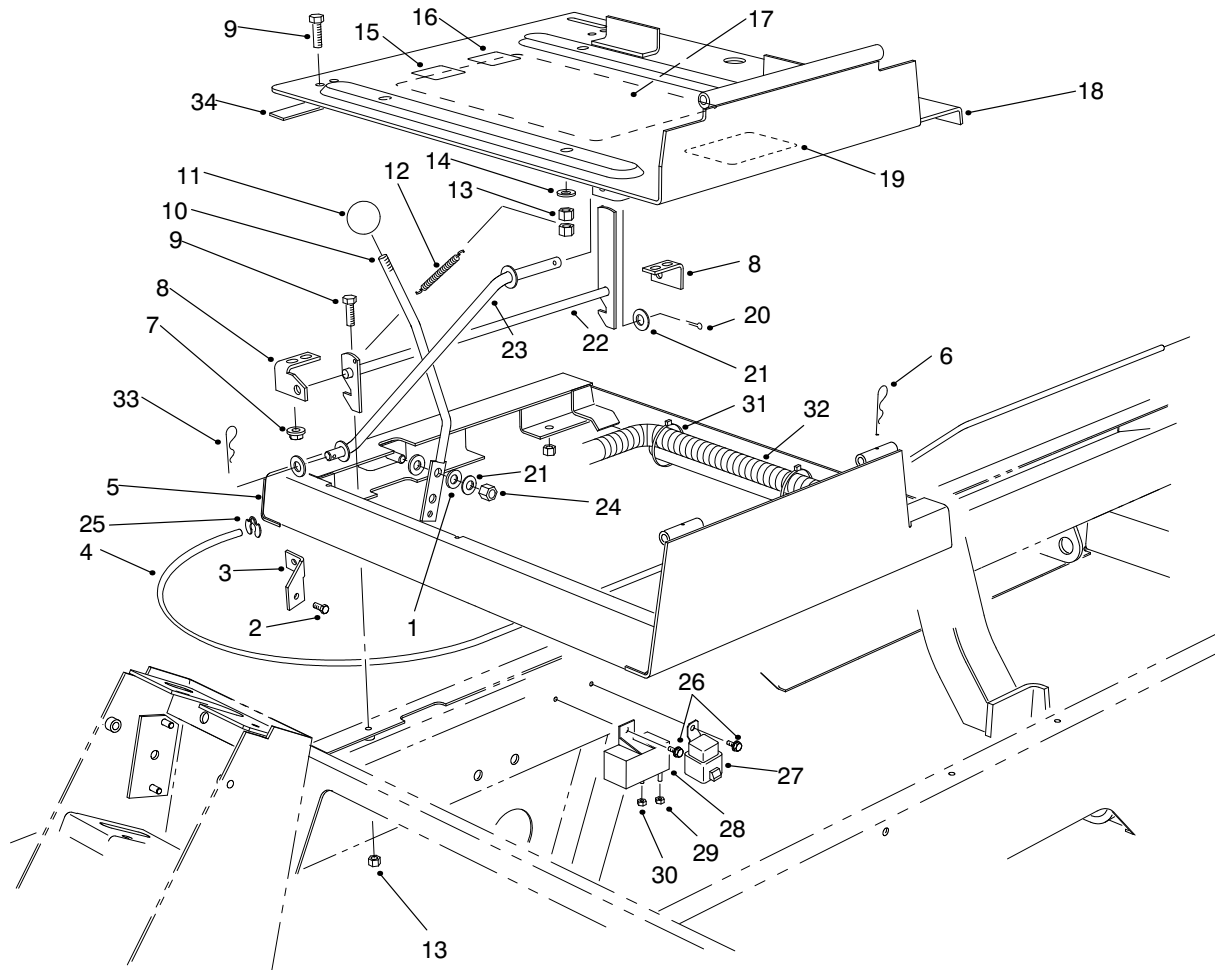 

T-2065-2

SEAT FRAME & THROTTLE ASSEMBLY (Continued)


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	66-2920	Washer-Nylon	2	18	98-2350	Plate-Seat	1
2	49-2040	Screw-Hex. Hd.	1	19	93-9184	Decal-Rear Manifold Block	1
3	92-7396	Mount-Cable	1	19	94-2913	Decal-Rear Manifold (DK)	1
4	92-7520	Cable-Throttle	1	19	94-2914	Decal-Rear Manifold (NL)	1
5	98-2352	Frame-Seat	1	19	94-2915	Decal-Rear Manifold (SF)	1
6	3290-467	Pin-Cotter, Hair	1	19	94-2916	Decal-Rear Manifold (F)	1
7	32128-25	Nut-Lock	4	19	94-2917	Decal-Rear Manifold (D)	1
8	98-2353	Bracket-Latch, Seat	2	19	94-2918	Decal-Rear Manifold (I)	1
9	322-3	Screw-HH	8	19	94-2920	Decal-Rear Manifold (N)	1
10	93-7598	Lever-Throttle	1	19	94-2921	Decal-Rear Manifold (P)	1
11	233-42	Knob	1	19	94-2922	Decal-Rear Manifold (ES)	1
12	66-4190	Spring	1	19	94-2923	Decal-Rear Manifold (S)	1
13	3296-29	Nut-Lock	9	19	94-2919	Decal-Rear Manifold (J)	1
14	3256-23	Washer-Flat	4	20	3272-10	Pin-Cotter	1
15	63-9920	Decal-EEC 105 DBA	1	21	3256-24	Washer-Flat	3
16	85-6910	Decal-EEC 86 DBA	1	22	98-2354	Latch-Seat	1
17	95-3466	Decal-Instructions, Clip	1	23	75-3680	Rod-Seat	1
17	95-3467	Decal-Clip (Danish)	1	24	3296-39	Nut-Lock	1
17	95-3468	Decal-Clip (Dutch)	1	25	52-5910	Ring-Retaining	1
17	95-3469	Decal-Clip (Finnish)	1	26	32144-10	Screw	2
17	95-3470	Decal-Clip (French)	1	27	70-1480	Relay	1
17	95-3471	Decal-Clip (German)	1	28	76-5260	Relay-Glow Plug	1
17	95-3472	Decal-Clip (Italian)	1	29	48-7880	Nut	1
17	95-3473	Decal-Clip (Norwegian)	1	30	48-7890	Nut	1
17	95-3474	Decal-Clip (Portuguese)	1	31	3290-378	Tie-Cable	2
17	95-3475	Decal-Clip (Spanish)	1	32	94-3090	Harness-Wire, Main	1
17	95-3476	Decal-Clip (Swedish)	1	33	3290-307	Pin-Cotter, Hair	1
17	95-3477	Decal-Clip (Japan)	1	34	94-8146	Strip-Foam, Seat	1

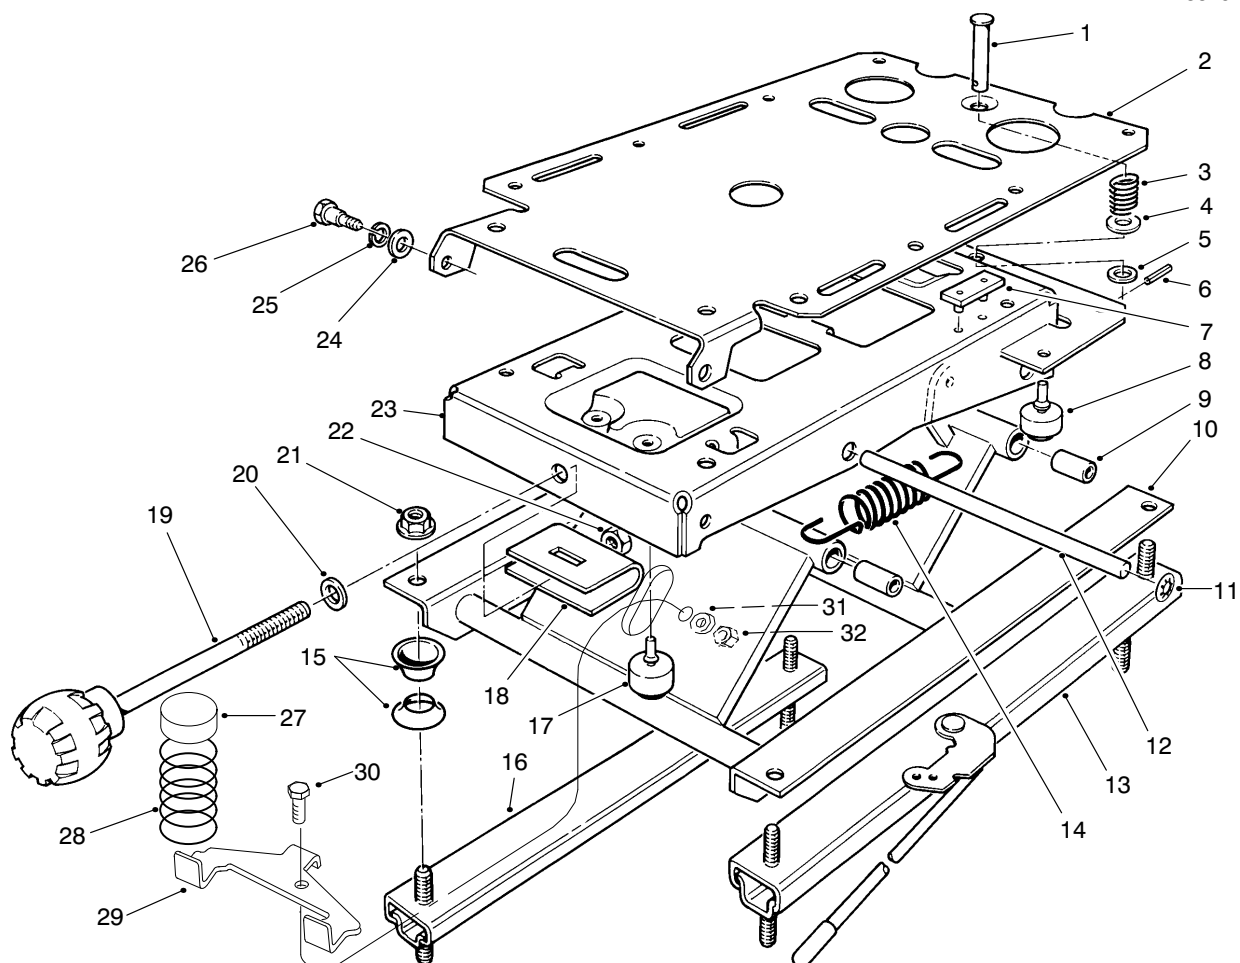 

T-1031-1

SEAT SUSPENSION ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	80-4860	Pin-Clevis	1	17	66-8520	Bumper-Down Stop	2
2	75-3580	Plate-Mounting, Seat	1	18	77-2870	Weldment-Hanger	1
3	75-3530	Spring-Compression	1	19	76-1930	Knob-Tension Adjustment	1
4	3256-5	Washer-Flat	1	20	3256-46	Washer-Flat	1
5	3256-24	Washer	1	21	32128-26	Nut-Flange	4
6	75-3540	Pin-Roll	1	22	3296-44	Nut-Lock	1
7	75-3550	Bumper-Seat	2	23	75-3480	Weldment-Upper	1
8	76-2940	Bumper-Rubber	2	24	3256-26	Washer-Flat	2
9	76-1920	Bushing-Sleeve	4	25	3253-6	Washer-Lock	2
10	66-8610	Weldment-Lower	1	26	75-3510	Bolt-Shoulder	2
11	66-8560	Nut-Push	4	27	93-3164	Cap	2
12	76-1910	Shaft-Pivot	2	28	93-3163	Spring	1
13	82-9060	Adjuster W/Handle	1	29	93-3165	Bracket	1
14	76-1940	Spring-Extension	2	30	322-6	Screw-Hex. Hd.	1
15	66-9290	Spacer	6	31	3253-33	Washer-Lock	1
16	66-8530	Adjuster	1	32	3217-6	Nut-Jam	1

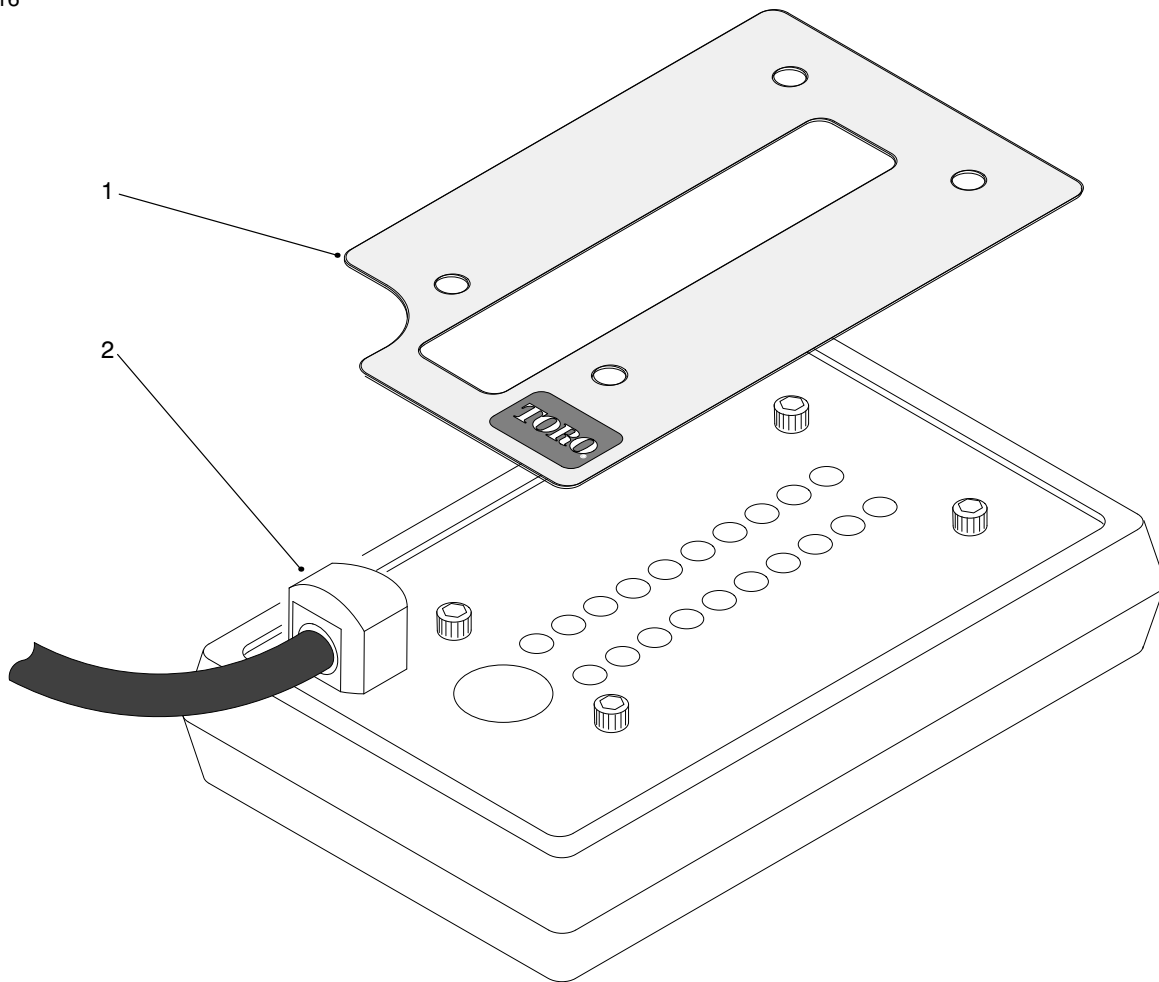 

T-1458-1


DIAGNOSTIC – ACE DISPLAY ASSEMBLY


Ref. No.	Part No.	Description	No. Used
1	92-7543	Decal-Diagnostic ACE V 1.0	1
1	94-3354	Decal-Diagnostic ACE V 1.0 (Danish)	1
1	94-3355	Decal-Diagnostic ACE V 1.0 (Dutch)	1
1	94-3356	Decal-Diagnostic ACE V 1.0 (Finnish)	1
1	94-3357	Decal-Diagnostic ACE V 1.0 (French)	1
1	94-3358	Decal-Diagnostic ACE V 1.0 (German)	1
1	94-3359	Decal-Diagnostic ACE V 1.0 (Italian)	1
1	94-3361	Decal-Diagnostic ACE V 1.0 (Norwegian)	1
1	94-3362	Decal-Diagnostic ACE V 1.0 (Portuguese)	1
1	94-3363	Decal-Diagnostic ACE V 1.0 (Spanish)	1
1	94-3364	Decal-Diagnostic ACE V 1.0 (Swedish)	1
1	94-3360	Decal-Diagnostic ACE V 1.0 (Japan)	1

Ref. No.	Part No.	Description	No. Used
2	85-4750	Display-Diagnostic ACE	1
*3	94-5386	Decal-Diagnostic	1
*3	94-8060	Decal-Diagnostic (Danish)	1
*3	94-8061	Decal-Diagnostic (Dutch)	1
*3	94-8062	Decal-Diagnostic (Finnish)	1
*3	94-8063	Decal-Diagnostic (French)	1
*3	94-8064	Decal-Diagnostic (German)	1
*3	94-8065	Decal-Diagnostic (Italian)	1
*3	94-8066	Decal-Diagnostic (Japanese)	1
*3	94-8067	Decal-Diagnostic (Norwegian)	1
*3	94-8068	Decal-Diagnostic (Portuguese)	1
*3	94-8069	Decal-Diagnostic (Spanish)	1
*3	94-8070	Decal-Diagnostic (Swedish)	1

*Not Illustrated

  ELECTRICAL SCHEMATIC

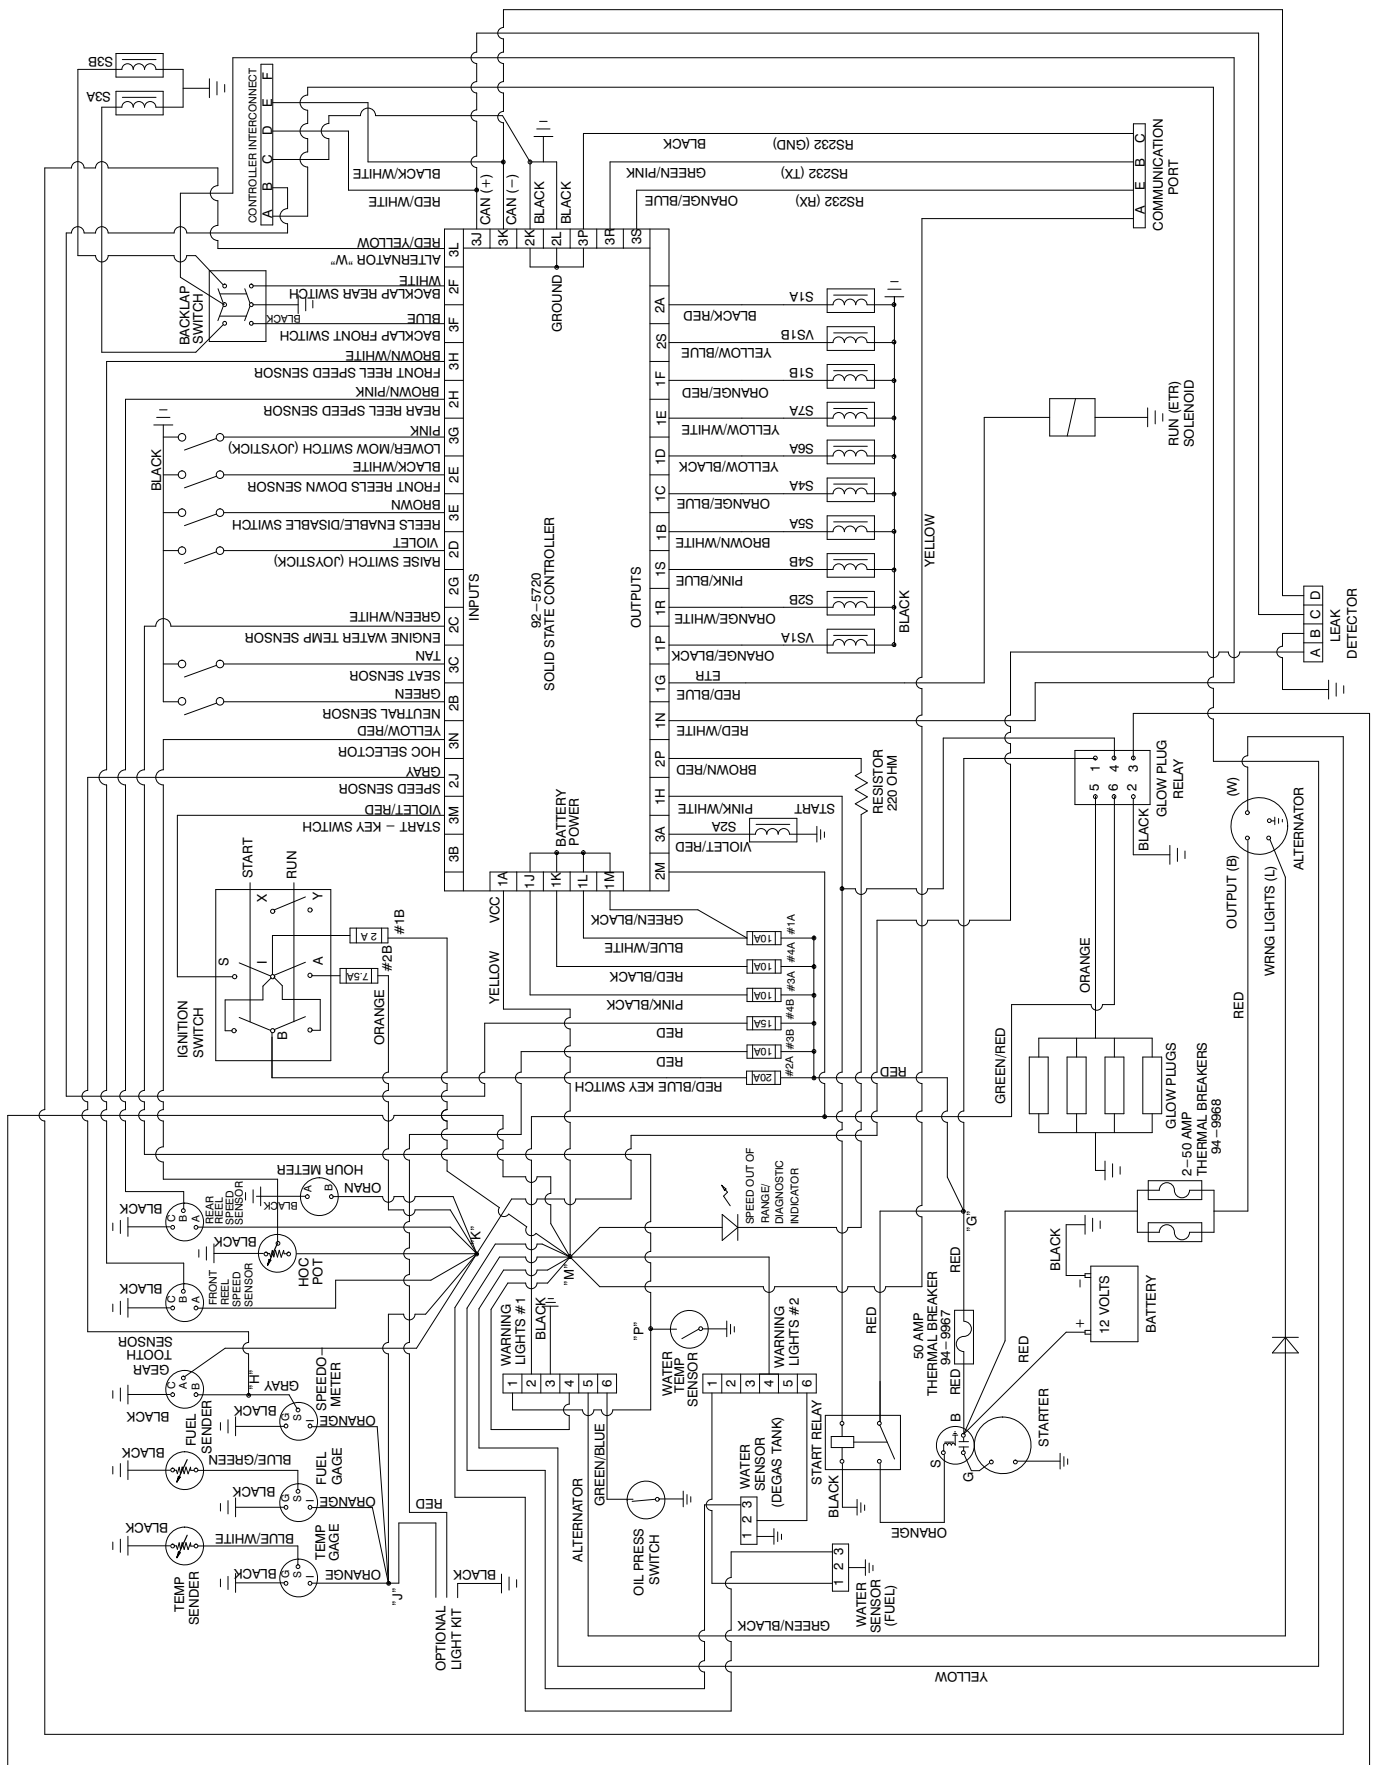


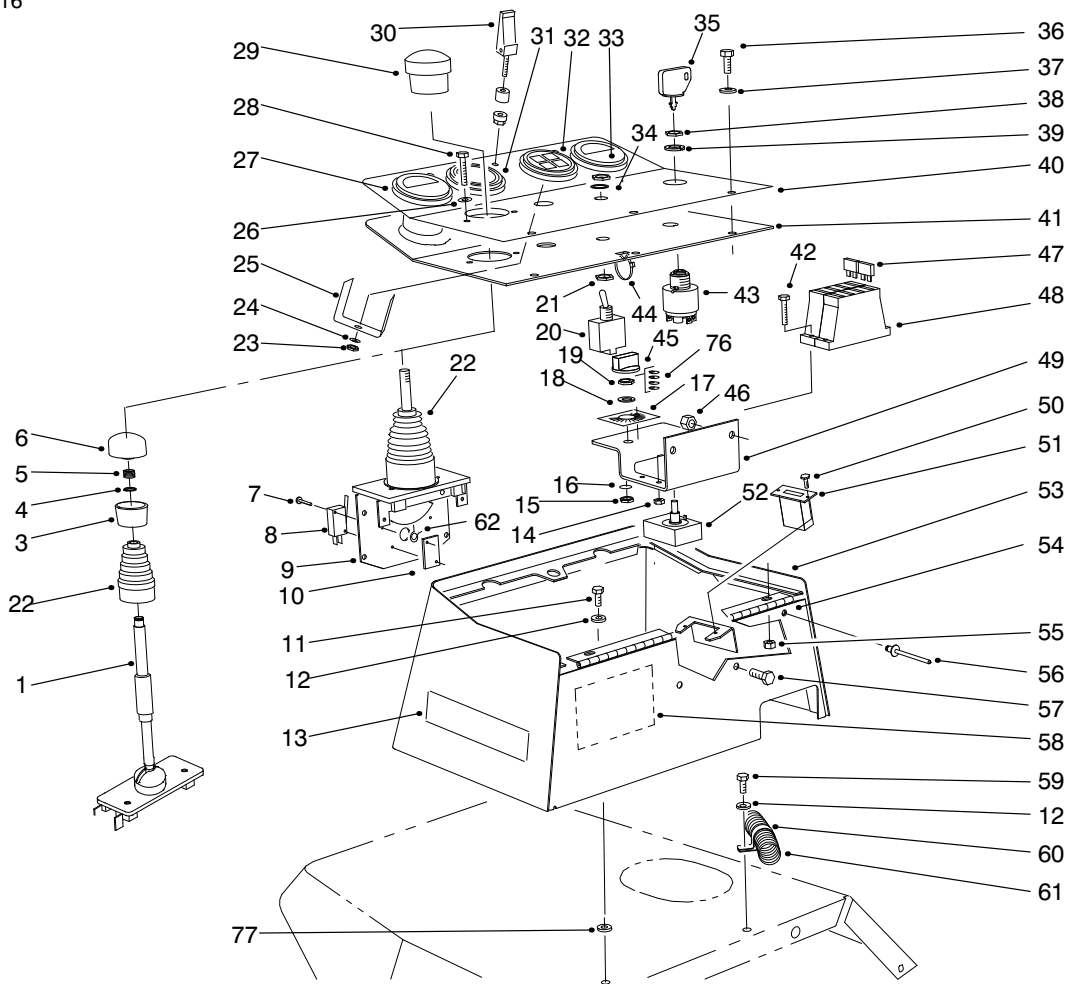

T-2066-6

CONTROL CONSOLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-8102	Tube-Interlock (Europe)	1	17	93-1268	Decal-HOC Selector (Europe)	1
3	94-3055	Cap-Lower, Joystick (Europe)	1	17	94-4575	Decal-HOC Selector (Japan)	1
4	94-3056	Snap Ring-Joystick (Europe)	1	18	3254-6	Washer-Lock	1
5	94-3057	Spring-Compression (Europe)	1	19	3220-24	Nut-Lock	1
6	94-3058	Cap-Upper, Joystick (Europe)	1	20	75-1010	Switch (Incl. Ref. #21, 34 & 74-75)	1
7	3290-93	Screw-HH	4	21	218-498	Nut-Hex.	2
8	94-8104	Switch-Micro	2	22	94-8103	Boot-Control, Lift	1
9	75-3420	Lever-Control (Incl. Ref. #7-8, 10, 22 & 29)	1	23	3217-26	Nut	1
9	94-6753	Joystick (Europe) (Incl. Ref. #1-6, 7-8, 10 & 22)	1	24	3254-1	Washer-Lock	1
10	3290-354	Plate-Nut	2	25		Clamp	1
11	322-3	Screw-HH	2	26	3256-14	Washer-Flat	2
12	3256-23	Washer-Flat	3	27	93-8497	Gauge-Fuel	1
13	75-5190	Decal-No Riders	1	28	3250-31	Screw-Pan Hd.	2
13	93-6689	Decal-No Riders (Europe)	1	29	3290-489	Knob-Control, Lift	1
13	84-3420	Decal-No Riders (Japan)	1	30	74-5950	Latch-Swell	1
14	3296-2	Nut-Lock	1	31	93-7484	Light-Warning Bank (Incl. Ref. #23-25 & 62-63)	1
15		Nu-Lock	1	32	93-7483	Light-Warning Bank (Incl. Ref. #23-25 & 62-63)	1
16		Washer-Lock	1	33	76-9060	Gauge-Temperature (Incl. Ref. #64-65)	1
17	92-7528	Decal-HOC Selector	1	34	218-589	Washer-Lock	1
				35	63-8360	Key-Ignition	1
				36	3258-166	Screw	3

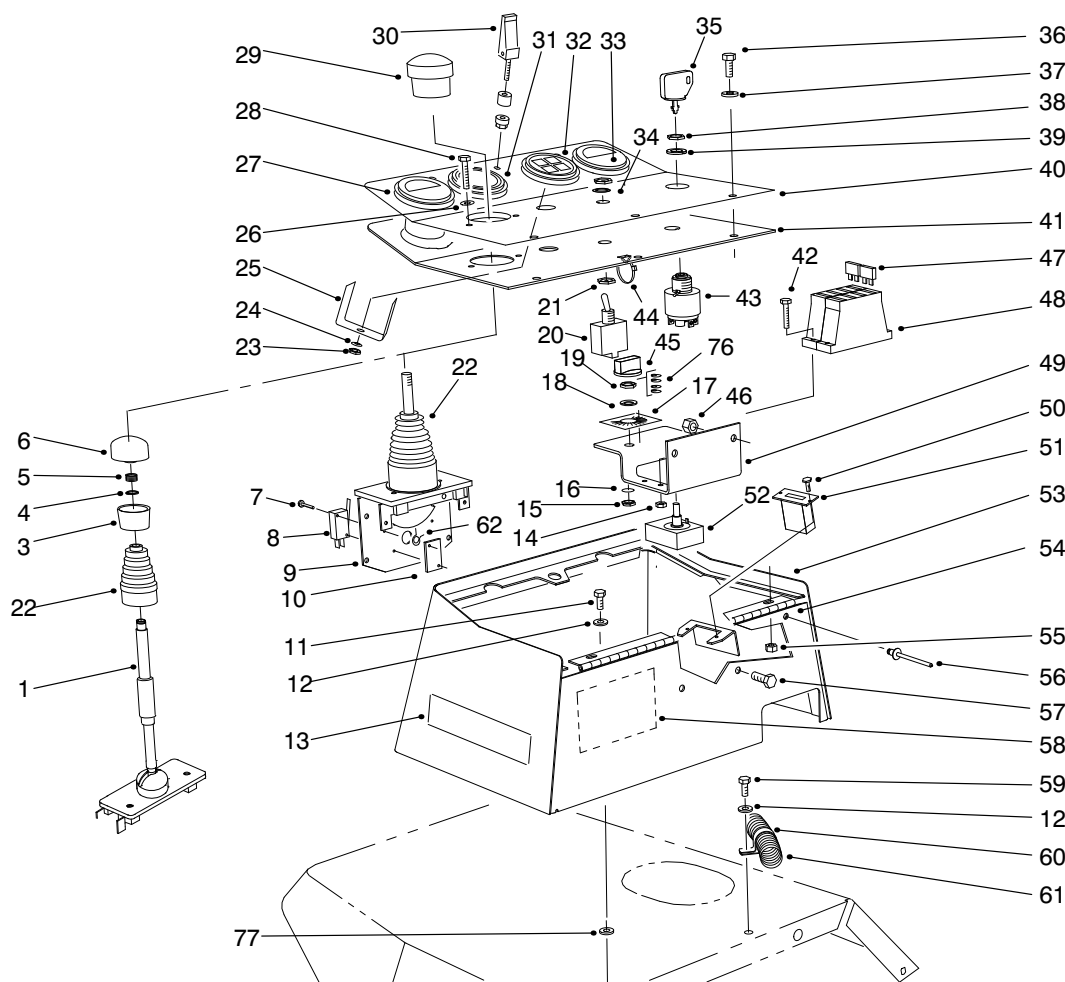 

T-2066-6


CONTROL CONSOLE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
37	3256-1	Washer	3	53	75-5740	Box-Control	1
38	218-447	Nut-Hex.	1	54	75-5780	Hinge-Cover	1
39	218-446	Washer-Lock	1	55	32128-33	Nut-Lock	3
40	93-9167	Decal-Console	1	56	93-8744	Rivet-Pop	3
40	93-1261	Decal-Console (Europe)	1	57	321-39	Screw-Hex. Hd.	2
40	94-4574	Decal-Console (Japan)	1	58	94-6349	Decal-Fuses	1
41	94-1417	Cover-Box, Control	1	58	93-1266	Decal-Fuses (Europe)	1
42	32105-13	Screw-HH	4	58	94-3091	Decal-Fuses (Japan)	1
43	27-2360	Switch-Ignition (Incl. Ref. #38 & 39)	1	59	322-5	Screw-Hex. Hd.	1
44	3290-378	Tie-Cable	2	60	2412-126	Clamp-R	1
45	85-4480	Knob	1	61	94-3090	Harness-Wire, Main	1
46	3296-42	Nut-Lock	2	62	93-3625	Spring-Return, Joystick	1
†47	218-594	Fuse-20A	1	*63	87-6270	Socket-Light	4
†47	218-578	Fuse-10A	4	*64	219-17	Bulb	4
†47	218-581	Fuse-15A	1	*65	3217-25	Nut-Hex.	2
†47	218-574	Fuse-7.5A	1	*66	3253-15	Washer-Lock	2
†47	94-6710	Fuse-2A	1	*67	3217-29	Nut-Hex.	6
†48	67-7160	Block-Fuse	2	*68	3255-24	Washer-Lock, Ext. Tooth	3
49	93-7587	Bracket-Fuse Block	1	*69	3219-14	Nut-Hex.	8
50	32144-18	Screw-Hex. Washer Hd.	2	*70	3253-2	Washer-Lock	5
51	75-6820	Hour Meter	1	*74	218-588	Screw	2
52	85-4470	Potentiometer (Incl. Ref. #18 & 19) Note: Replacement of this part requires recalibration of electronic controller by distributor after installation.	1	*75	3255-19	Washer-Lock	2
				*	94-6343	Decal-Wire Identification #1	1
				*	94-6344	Decal-Wire Identification #2	1
				76	237-7	O-Ring	4
				77	66-2920	Washer	3


*Not Illustrated

†Included in Main Wiring Harness

 HYDRAULIC SCHEMATIC (Model 03800)

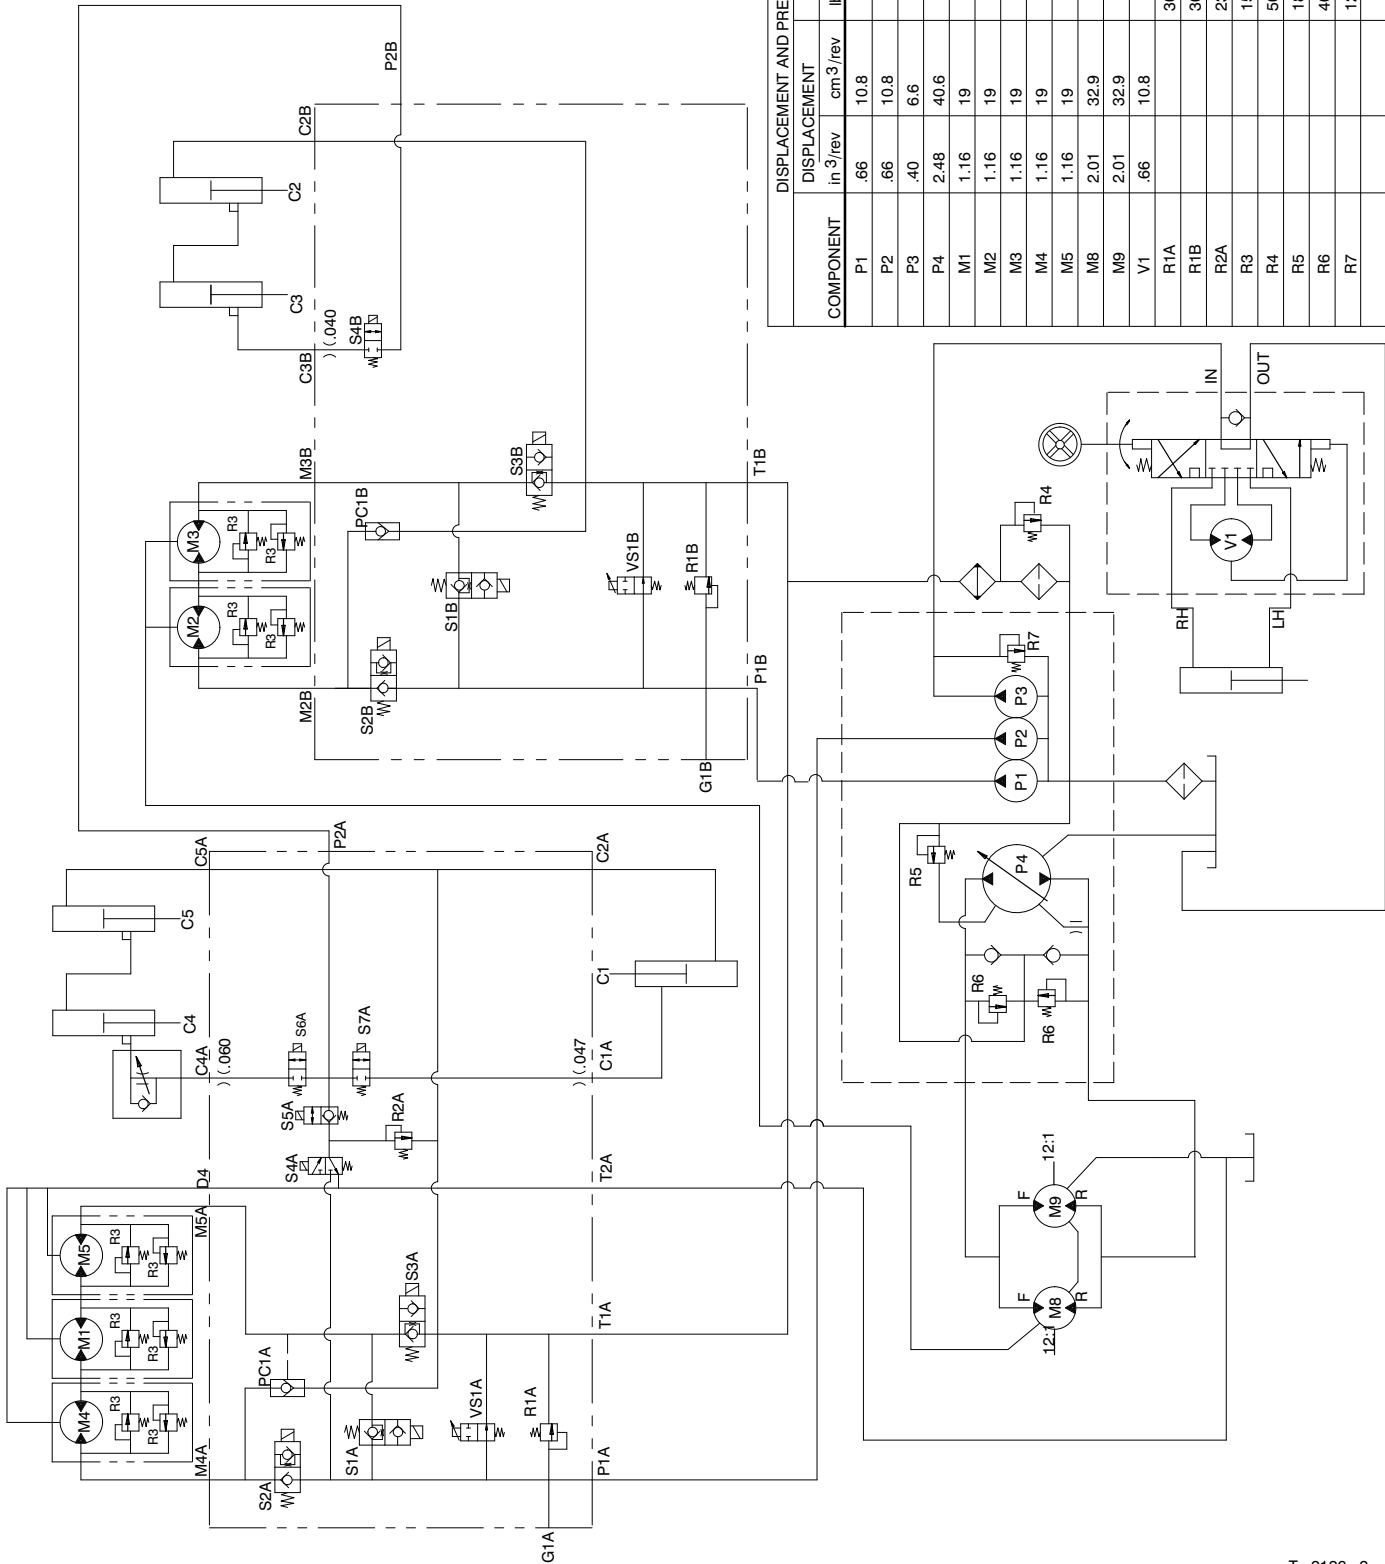


HYDRAULIC SCHEMATIC (Model 03801)

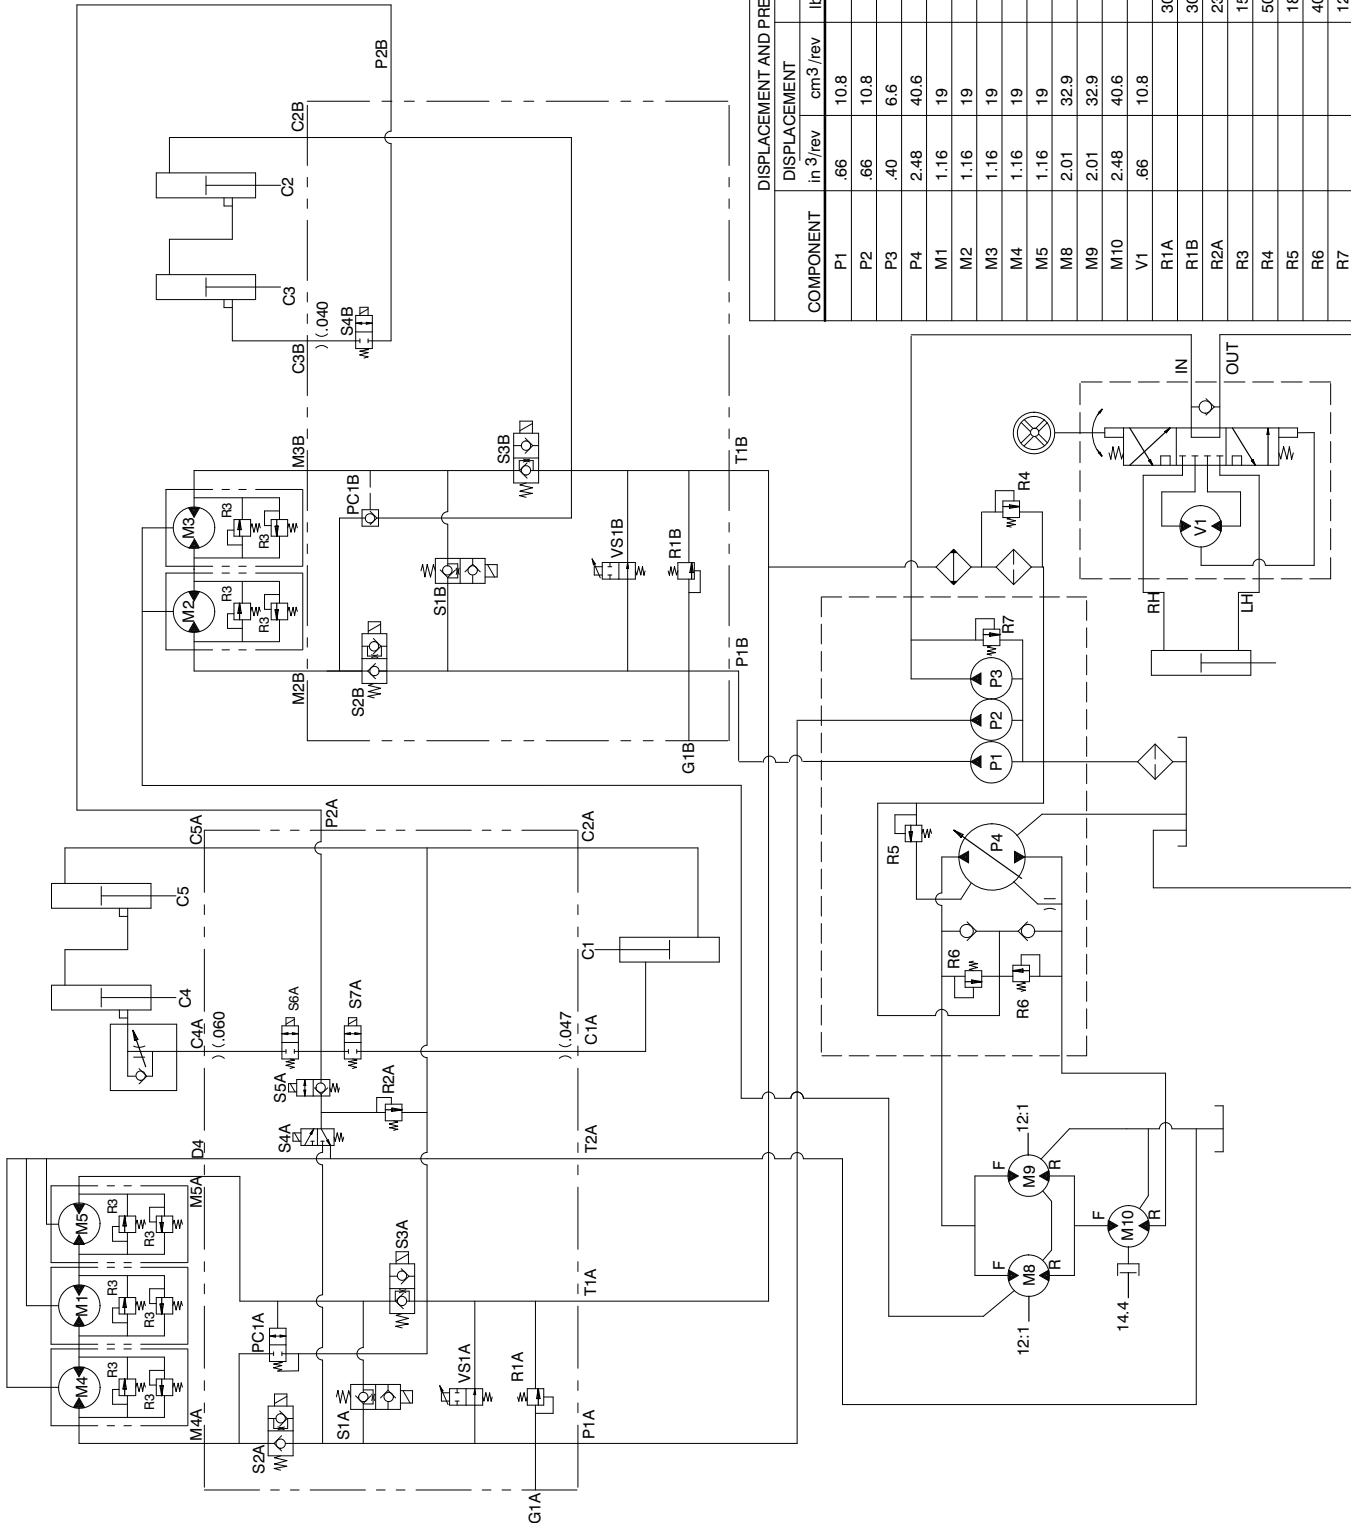 

DISPLACEMENT AND PRESSURE CHART				
COMPONENT	DISPLACEMENT in 3/rev	PRESSURE		*FLOW RATE LPM
		lbs/in 2	BARS	
P1	.66	10.8	7.0	26.5
P2	.66	10.8	7.0	26.5
P3	.40	6.6	4.2	15.9
P4	2.48	40.6		26.3
M1	1.16	19		
M2	1.16	19		
M3	1.16	19		
M4	1.16	19		
M5	1.16	19		
M8	2.01	32.9		
M9	2.01	32.9		
M10	2.48	40.6		
V1	.66	10.8		
R1A		3000	207	
R1B		3000	207	
R2A		2300	159	
R3		1500	103	
R4		50	3	
R5		180	12	
R6		4000	276	
R7		1250	86	

 *FLOW RATE CALCULATED AT 2500 RPM AND 98% EFFICIENCY.

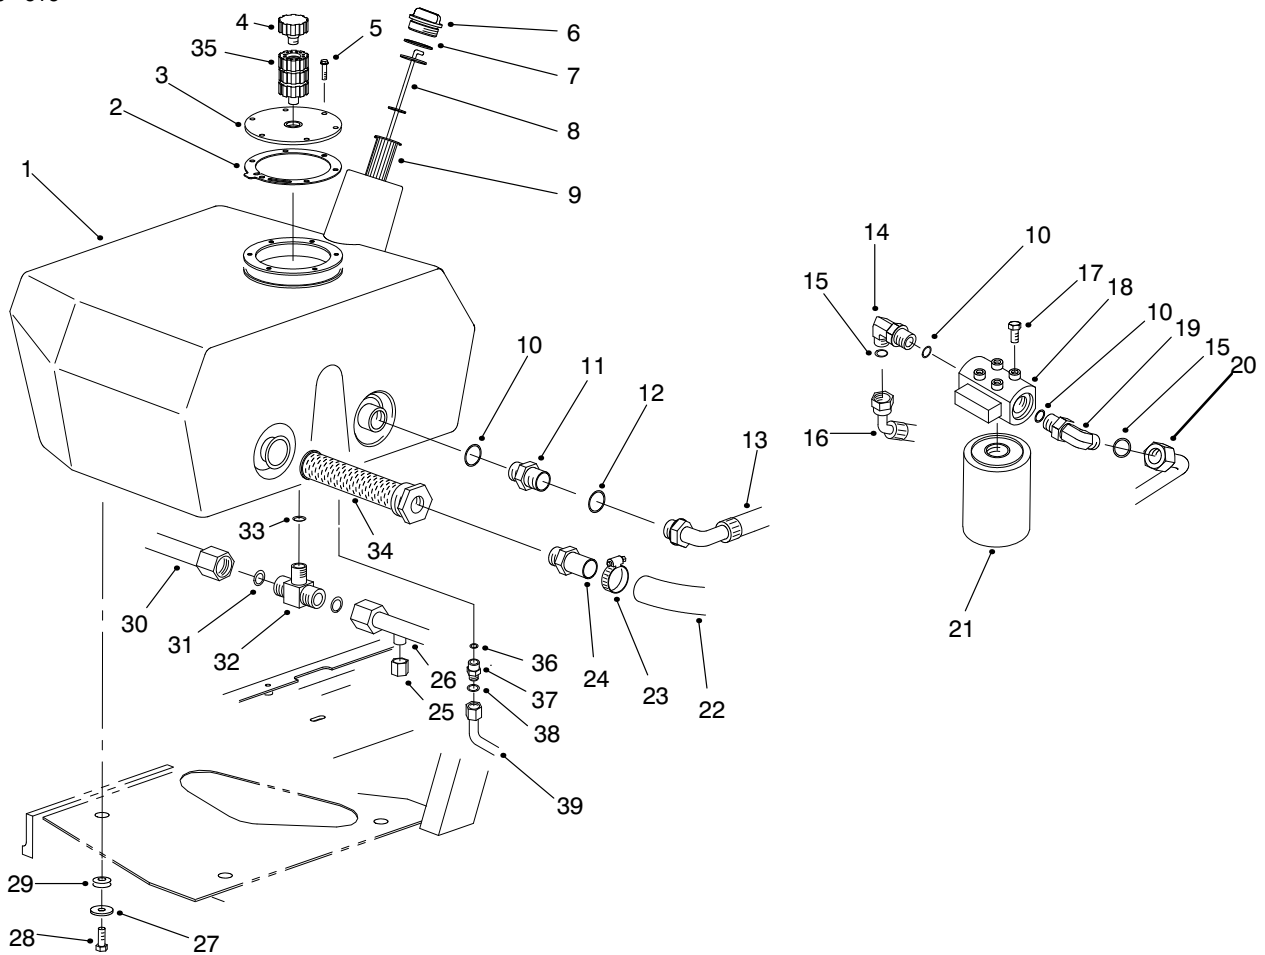


T-2067-1

HYDRAULIC FILTER & RESERVOIR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-7488	Tank-Hydraulic	1
2	93-7499	Gasket-Flange	1
3	93-7588	Cover-Tank	1
4	68-6150	Breather-Air	1
5	33104-020	Screw-Hex. Hd. Flange	6
6	93-7498	Plug-Plastic	1
7	94-8166	O-Ring	1
8	75-3710	Dipstick	1
9	61-2790	Filter-Screen	1
10	237-81	O-Ring	3
11	340-9	Fitting-Hydraulic (Incl. Ref. #10 & 12)	1
12	237-58	O-Ring	1
13	92-7489	Hose-Return	1
14	340-139	Fitting-Elbow 90° (Incl. Ref. #10 & 15)	1
15	237-65	O-Ring	2
16	92-7490	Hose-Filter	1
17	3234-1	Screw	2
18	94-2620	Head-Filter (Incl. Ref. #21)	1
19	340-142	Fitting-Hydraulic 90° (Incl. Ref. #10 & 15)	1

Ref. No.	Part No.	Description	No. Used
20	92-7493	Hose-Filter	1
21	94-2621	Element	1
22	92-7465	Hose-Suction	1
23	2412-111	Clamp	1
24	92-7525	Fitting-Hose	1
25	92-7551	Cap-Fitting	1
26	94-1446	Tube-Drain	1
27	63-8410	Washer-Flat	3
28	33105-025	Screw-Hex. Hd. Flange	3
29	240-11	Grommet	3
30	92-7478	Tube-Motor, RH	1
31	237-30	O-Ring	2
32	340-157	Fitting-Tee (Incl. Ref. #31 & 33)	1
33	237-79	O-Ring	1
34	92-7527	Strainer-Suction	1
35	92-8020	Adapter-Breather	3
36	237-42	O-Ring	1
37	340-2	Adapter (Incl. Ref. #36 & 38)	1
38	237-22	O-Ring	1
39	94-1447	Tube-Steering, Return	1

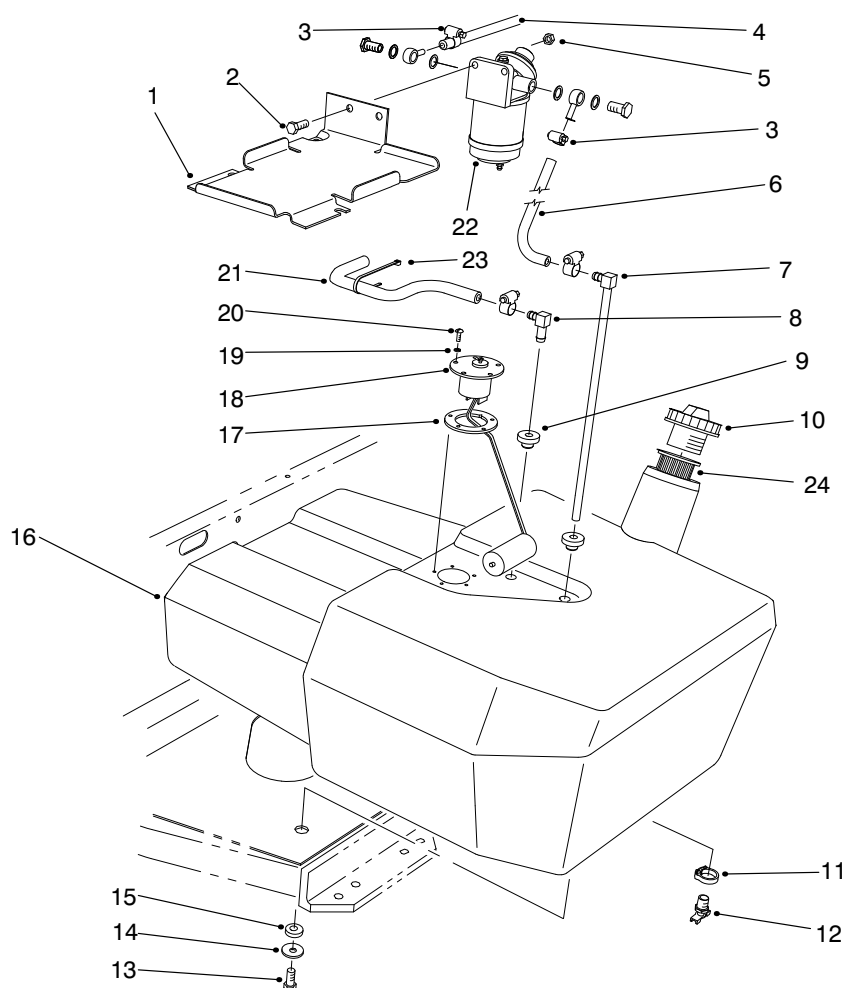 


T-2068-1

FUEL TANK & FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-7974	Plate-Box, Battery	1	14	63-8410	Washer-Flat	3
2	33105-030	Screw-Hex. Hd. Flange	2	15	240-11	Grommet	3
3	2412-108	Clamp-Hose	4	16	92-7422	Tank-Fuel (Incl. Ref. #11 & 12)	1
4	63-7627	Hose-Fuel	1	17	62-7650	Gasket	1
5	33005-00	Nut-Hex. Flange	2	18	63-7640	Sender-Fuel	1
6	92-7522	Hose-Fuel	1	19	3253-15	Washer-Lock	5
7	66-8121	Standpipe	1	20	32122-24	Screw	5
8	46-6550	Fitting-Connector	1	21	92-7521	Hose-Fuel	1
9	46-6560	Bushing	2	†22	76-5300	Asm-Filter, Fuel	1
10	93-3102	Cap-Fuel, Diesel	1	23	3290-378	Tie-Cable	3
11	2412-36	Clamp-Drain	1	24	61-2790	Filler-Screen	1
12	304-46	Fitting-Drain	1				
13	33105-025	Screw-Hex. Hd. Flange	3				

 
†Furnished with engine.

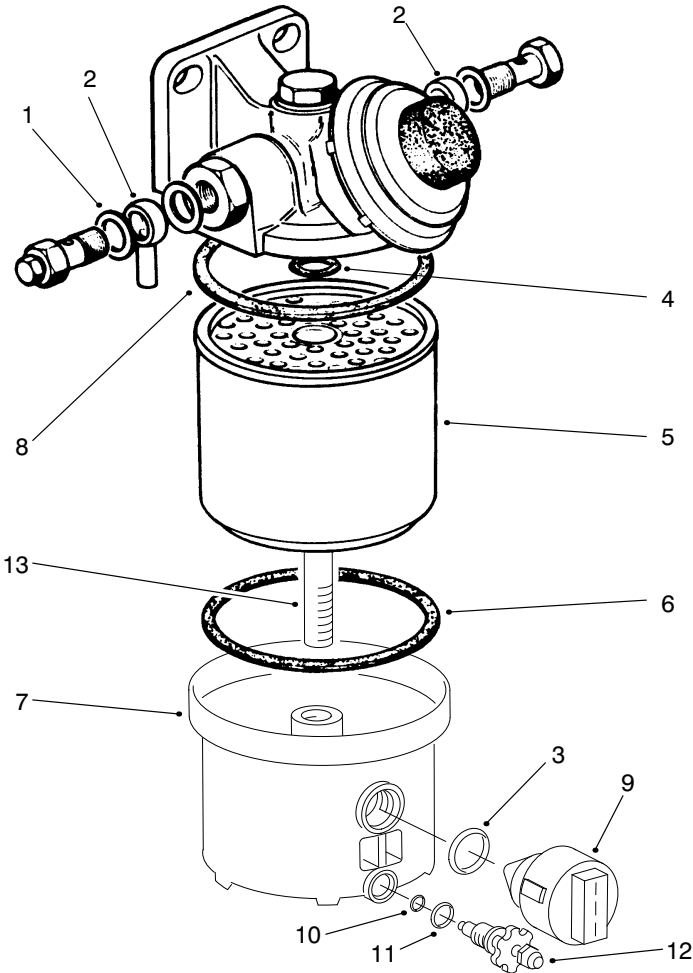

T-0966-2

FUEL FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	76-5180	Washer-Copper	4	9	76-5320	Sensor-Water (Incl. Ref. #3)	1
2	76-5190	Fitting-Adjustable	2	10	94-8027	O-Ring	1
3	94-8025	O-Ring	1	11	94-8028	O-Ring	1
4		O-Ring	1	12	94-8026	Vent Assembly (Incl. Ref. #10 & 11)	1
5	76-5220	Element-Filter (Incl. Ref. #4, 6 & 8)	1	13		Bolt	1
6		Seal-Gasket	1				
7		Cap-Filter, Fuel	1				
8		Seal-Gasket	1				

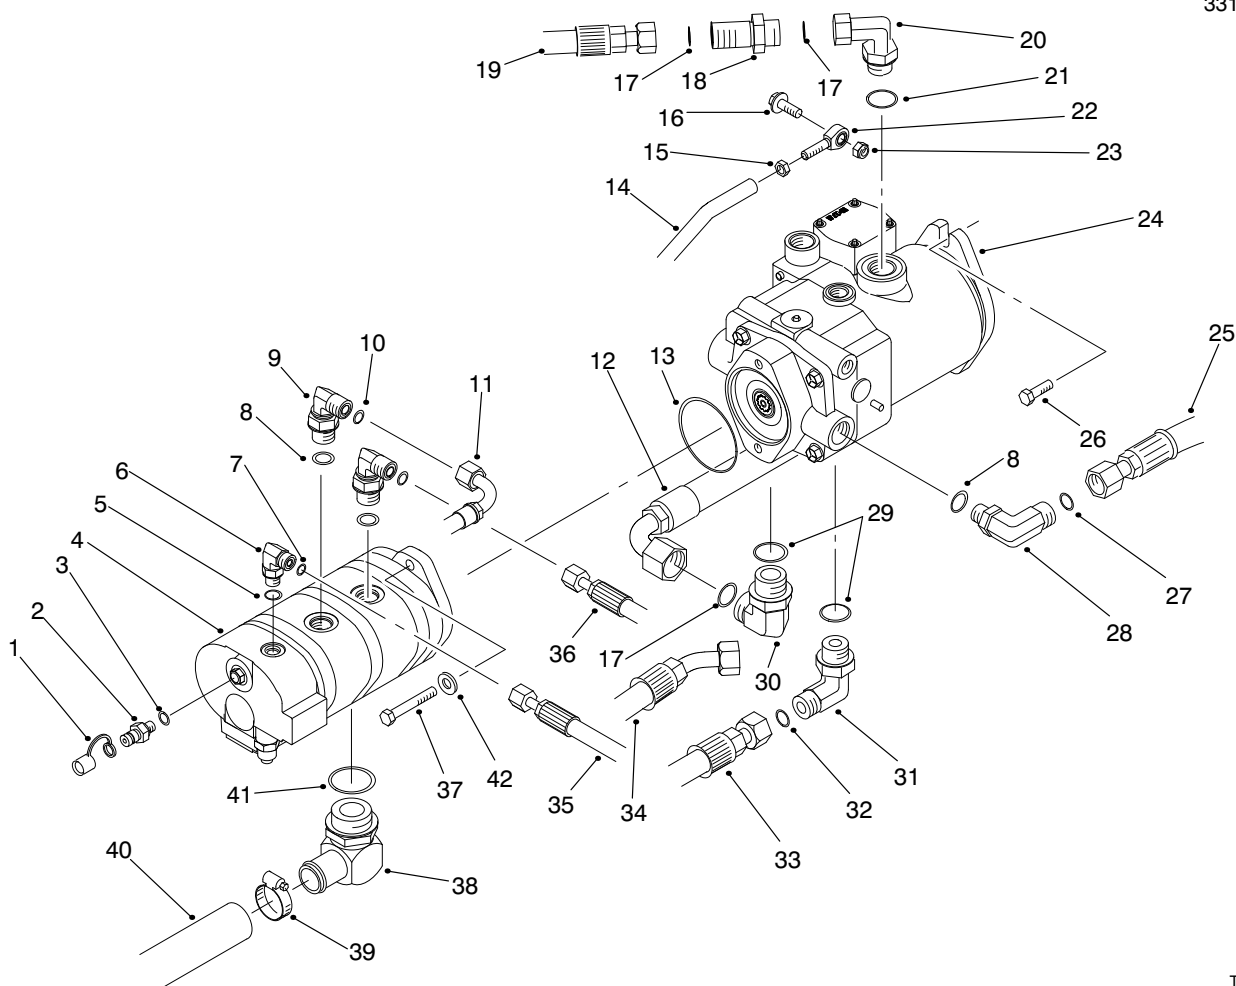 


T-2072-1

PUMP INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	354-79	Cap-Dust	4	24	95-23450	Pum-Piston	1
2	354-77	Fitting-Quick Connect (Incl. Ref. #3)	4	25	92-7490	Asm-Hose, Filter	1
3	237-78	O-Ring	4	26	82-5050	Screw-Hex. Hd.	2
4	93-2175	Asm-Pump, Gear	1	27	237-65	O-Ring	1
5	237-42	O-Ring	1	28	340-17	Fitting-Hydraulic 90° (Incl. Ref. #8 & 27)	1
6	340-77	Fitting-Hydraulic 90° (Incl. Ref. #5 & 7)	1	29	237-146	O-Ring	2
7	237-22	O-Ring	1	30	340-15	Fitting-Hydraulic 90° (Incl. Ref. #17 & 29) (Model No. 03801)	1
8	237-80	O-Ring	3	30	340-129	Fitting-Hydraulic 90° (Incl. Ref. #29 & 32) (Model #03800)	1
9	340-105	Fitting-Hydraulic 90° (Incl. Ref. #8 & 10)	2	31	340-129	Fitting-Hydraulic 90° (Incl. Ref. #29 & 32)	1
10	237-30	O-Ring	2	32	340-65	O-Ring	2
11	92-7491	Asm-Hose	1	33	92-7485	Asm-Hose	1
12	92-7484	Asm-Hose (Model No. 03801)	1	34	92-7634	Asm-Hose, Traction (Model No. 03800)	1
13	237-99	O-Ring	1	35	92-7622	Asm-Hose, Steering	1
14	92-7531	Tube-Rod, Control	1	36	92-7492	Asm-Hose	1
15	3220-3	Nut-Jam	1	37	323-7	Screw-Hex. Hd.	2
16	3234-11	Screw-Flange Head	1	38	92-7526	Fitting-Hydraulic, Suction	1
17	237-58	O-Ring	3	39	2412-111	Clamp-Hose	2
18	94-2637	Fitting-Hydraulic, Straight (Incl. Ref. #17)	1	40	92-7465	Hose-Suction	1
19	92-7489	Hose-Return	1	41	237-101	O-Ring	1
20	94-2636	Fitting-Hydraulic 90°	1	42	3256-46	Washer-Flat	2
21	237-81	O-Ring	1				
22	2411-36	Bearing-Rod End	1				
23	3296-59	Nut-Lock	1				

 GEAR PUMP ASSEMBLY NO. 93-2175

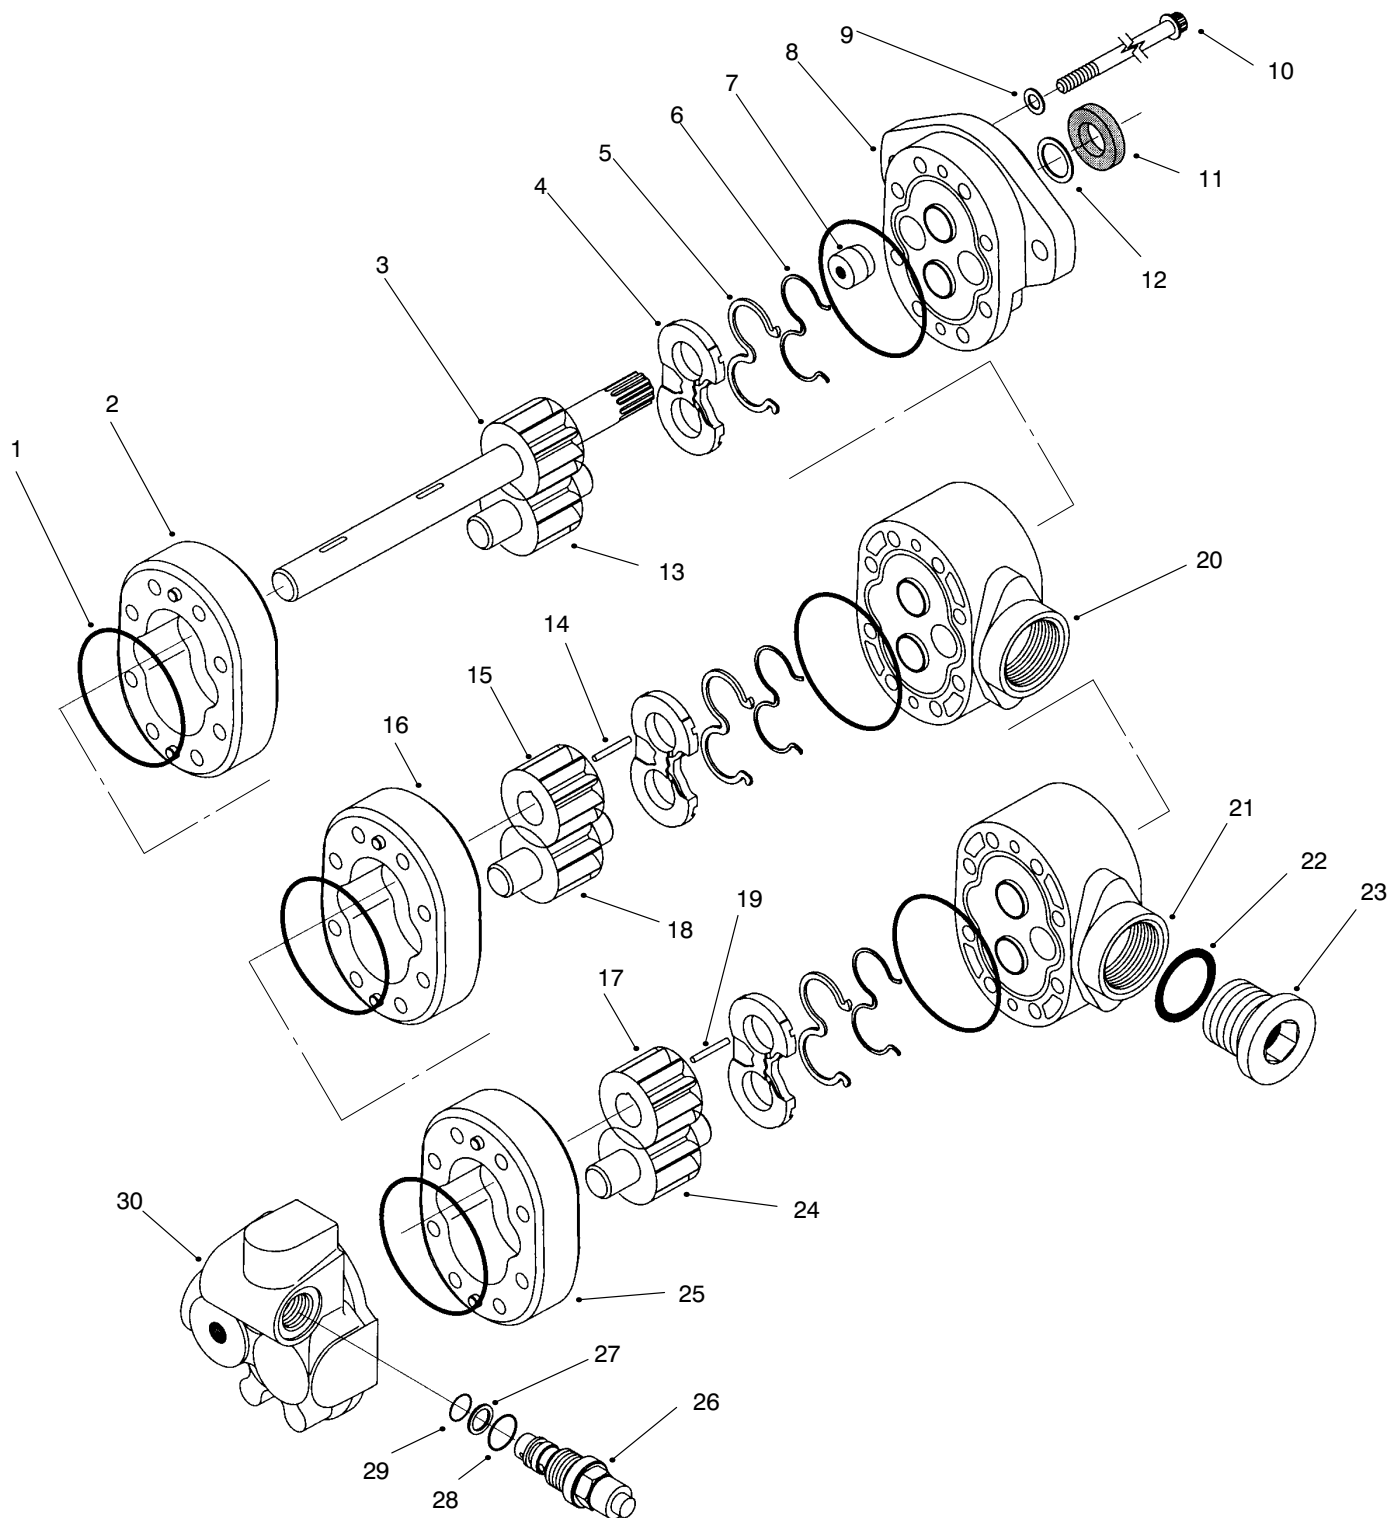


GEAR PUMP ASSEMBLY NO. 93-2175

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	56-6710	O-Ring	6	†18		Gear-Idler	1
†2		Body	1	†19		Key	1
†3		Asm-Gear, Drive	1	†20		Plate-Adaptor	1
4		Plate-Wear	3	†21		Plate-Adaptor	1
5		Seal-Pressure, Balance	3	†22		O-Ring	1
6		Gasket-Backup	3	23	94-3013	Plug	
7	94-3011	Plug	1			(Incl. Ref. #22)	1
†8		Asm-Plate, Front	1	†24		Gear-Idler	1
9	74-8920	Washer-Copper	4	†25		Body	1
10	94-3012	Screw	8	26	94-3014	Valve-Relief	
11	49-2640	Seal-Shaft	1			(Incl. Ref. #27-29)	1
12	60-5890	Washer	1	†27		Washer-Backup	1
†13		Gear-Idler	1	†28		O-Ring	1
†14		Key	1	†29		O-Ring	1
†15		Gear	1	†30		Asm-Backplate	1
†16		Body	1	*	94-3015	Kit-Seal	
†17		Gear	1			(Incl. Ref. #1, & 4-6)	1

*Not Illustrated

† Not Serviced Separately

 SERVO CONTROLLED PISTON PUMP ASM. NO. 95-3450

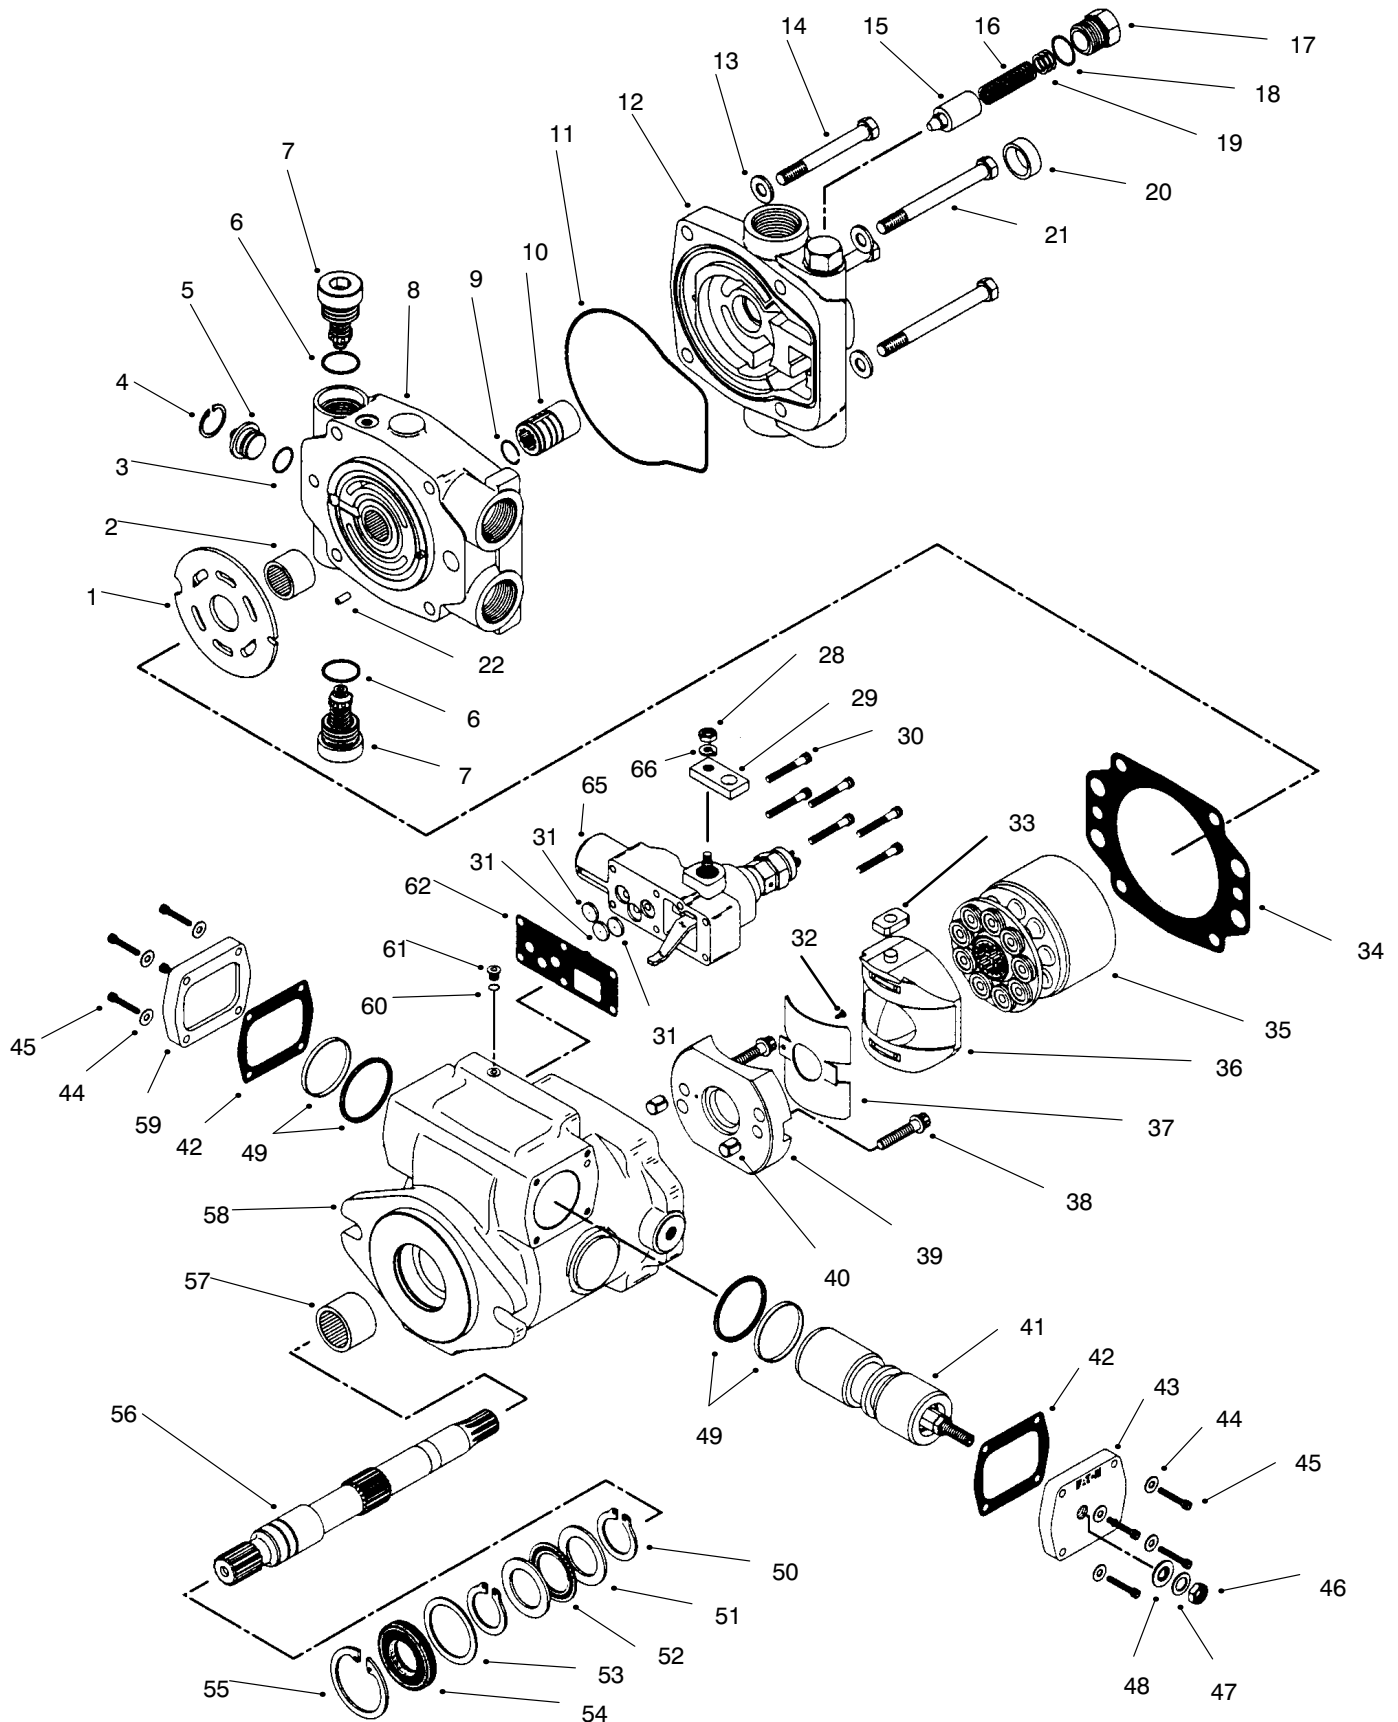


SERVO CONTROLLED PISTON PUMP ASM. NO. 95-3450

Ref. No.	Part No.	Description	No. Used
1	94-3022	Plate-Valve	1
†2		Bearing	1
3	94-3036	Ring-Quad	1
4	94-3037	Ring-Retaining	1
5	94-3038	Plug-Dump Valve	1
†6		O-Ring	2
7	94-9999	Valve-Relief	2
8	94-3016	Asm-Backplate (Incl. Ref. #2 & 22)	1
9	94-3035	Ring-Lock	1
10	94-3023	Coupler	1
†11		O-Ring-Molded	1
12	94-3017	Adaptor-Charge Relief (Incl. Ref. #15-20)	1
13	3256-24	Washer-Flat	4
14	94-3028	Screw	2
†15		Poppet	2
†16		Spring	2
†17		Plug	1
†18		O-Ring	1
†19		Washer	3
†20		Bushing	1
21	94-3029	Screw	2
†22		Pin-Roll	1
28	3217-5	Nut	1
29	94-3031	Arm-Control	1
30	3274-59	Screw-Cap	6
31	94-3040	Orifice-Valve, Control	3
†32		Screw	1
33	94-3032	Follower-Piston	1
†34		Gasket-Housing	1
35	94-3021	Asm-Kit, Rotating	1
36	94-3026	Asm-Camplate	1

Ref. No.	Part No.	Description	No. Used
†37		Bushing	1
†38		Screw	1
†39		Asm-Cradle	1
†40		Dowel-Bushing	2
41	94-3025	Asm-Piston, Servo	1
†42		Gasket-Plate, Cover	2
43	94-3034	Plate-Cover	1
44	3256-77	Washer-Flat	8
45	3274-81	Screw	8
46	3220-3	Nut-Jam	1
47	94-3030	Washer	1
48	94-3027	Washer-Seal	1
†49		Seal	2
50	76-7000	Ring-Retaining	2
51	76-6950	Race-Thrust	1
52	76-6960	Bearing-Thrust	1
53	94-3007	Washer	1
54	94-3008	Seal-Shaft	1
55	76-7010	Ring-Retaining	1
56	94-3020	Shaft-Drive	1
†57		Bearing	1
58	94-3018	Asm-Housing (Incl. Ref. #32, 37-40, 49, 57, & 60-61)	1
59	94-3033	Plate-Cover	1
†60		O-Ring	1
†61		Plug	1
†62		Gasket	1
65	94-3019	Control-Servo, Manual	1
66	3253-3	Washer-Lock	1
*	94-3039	Kit-Seal (Incl. Ref. #11, 34, 42 & 62)	1

*Not Illustrated

 † Not Serviced Separately.

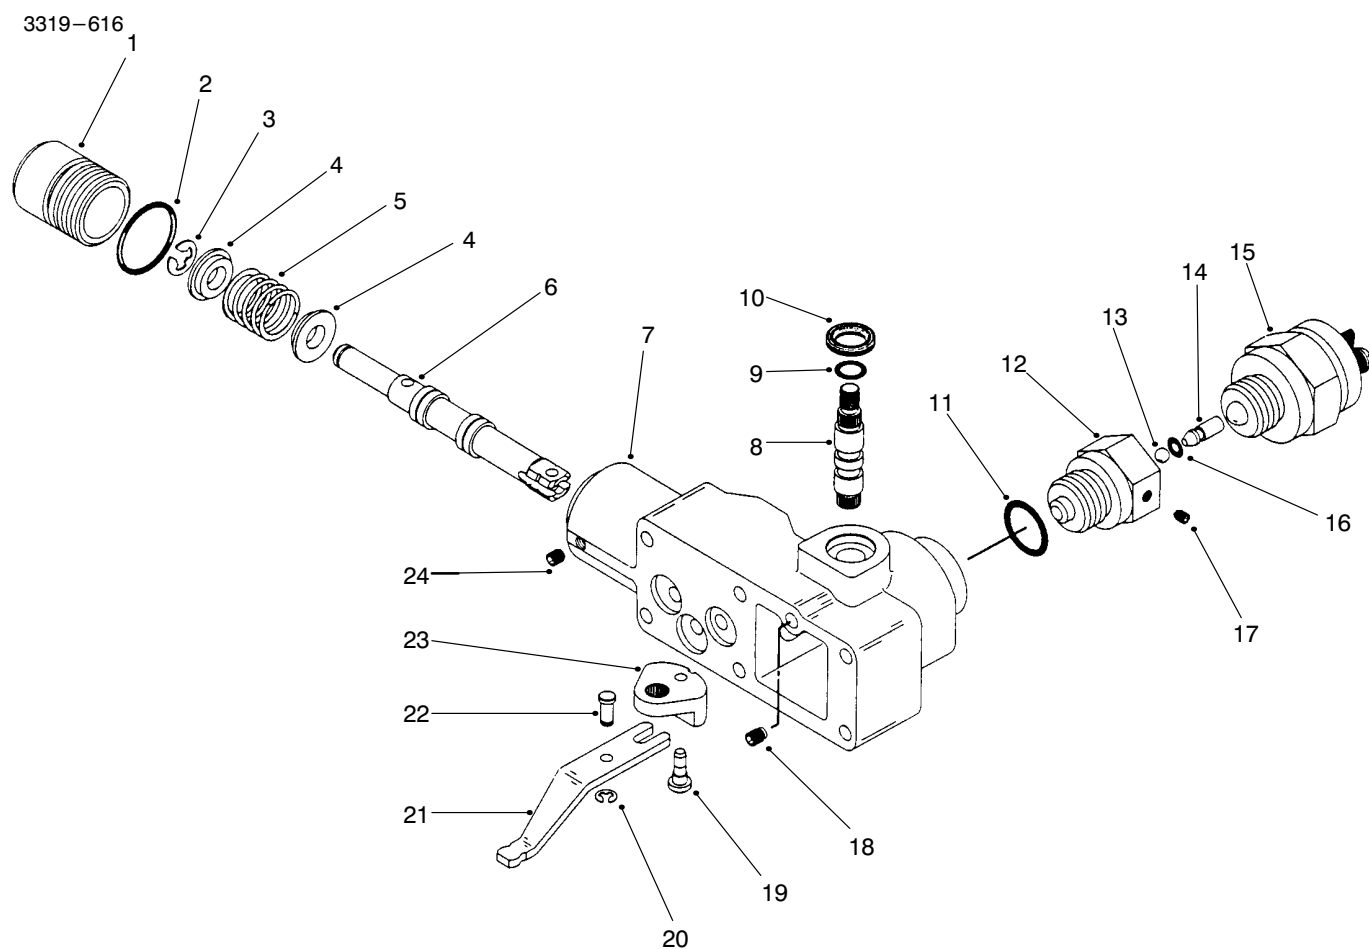


T-2119-1

MANUAL SERVO CONTROL NO. 94-3019

Ref. No.	Part No.	Description	No. Used
1		Plug	1
2		O-Ring	1
3		Ring-Retaining	1
4		Retainer-Spring	2
5		Spring	1
6		Valve-Spool	1
7		Housing-Control	1
8		Shaft-Input	1
9		O-Ring	1
10		Seal-Wiper	1
11		O-Ring	1
12		Adaptor	1
13		Ball	1

Ref. No.	Part No.	Description	No. Used
14		Pin	1
15	94-3043	Switch	1
16		O-Ring	1
17		Screw-Set	1
18		Screw-Set	1
19		Pin	1
20		Ring-Retaining	1
21		Link	1
22		Pin-Dowel	1
23		Crank-Bell	1
24		Screw-Set	1
*	94-3044	Kit-Seal (Incl. Ref. #2, 9-11 & 16)	1

 
*Not Illustrated

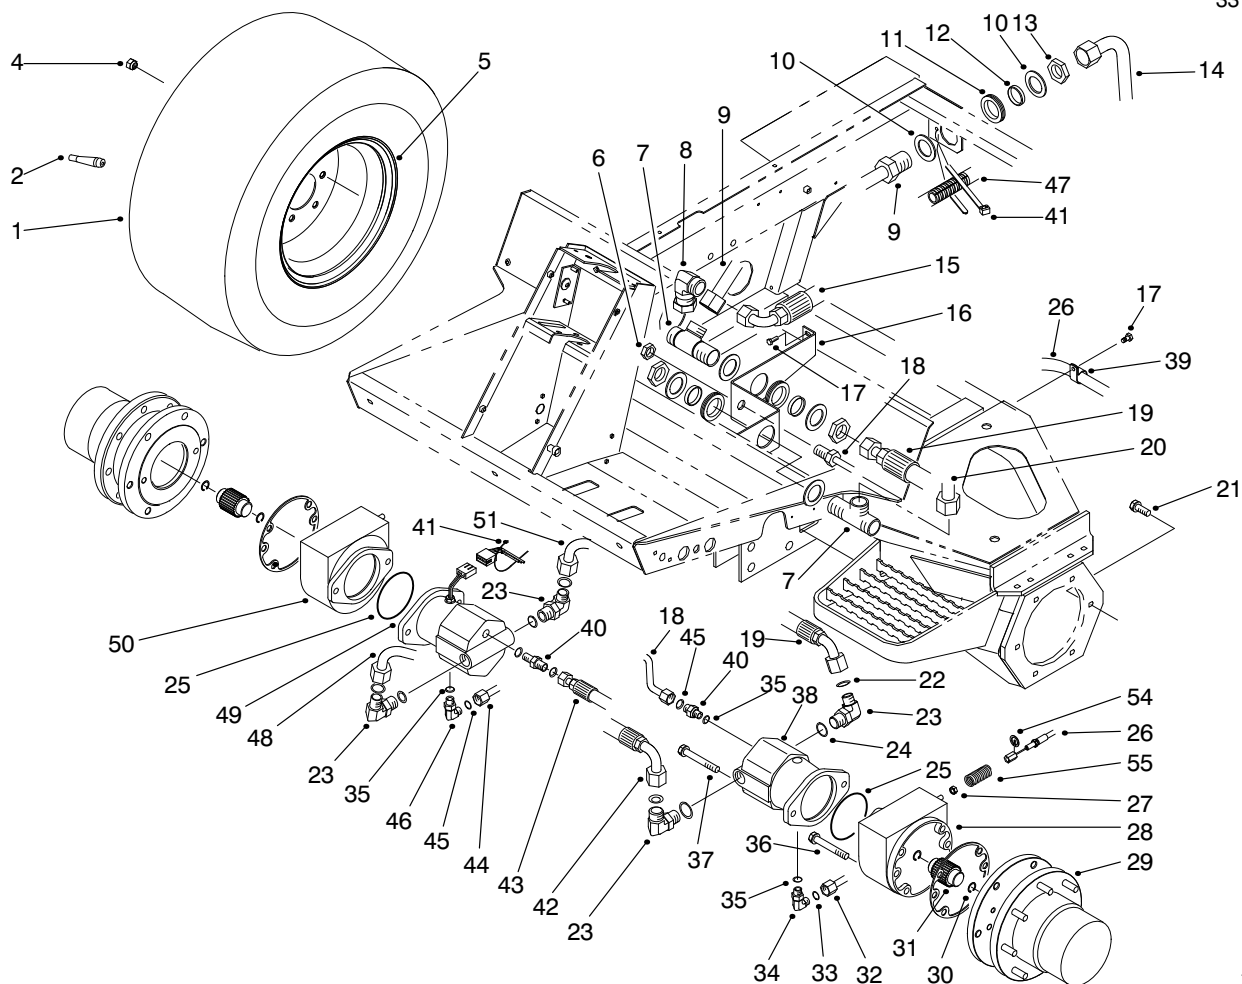

T-2069-2

FRONT HYDRAULIC DRIVE & BRAKE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	95-3465	Tire	2	14	92-7473	Asm-Tube, Rear (Model 03801)	1
2	232-24	Stem-Valve	2	15	92-7634	Asm-Hose, Traction (Model 03800)	1
4	92-7483	Nut-Lug	16	16	92-7455	Plate-Bulkhead	1
5	95-3464	Rim	2	17	32144-11	Screw-Thread Forming	5
6	340-127	Nut-Bulkhead	1	18	92-7477	Asm-Tube, Motor Drain	1
7	92-7550	Fitting-Tee, Bulkhead (Incl. Ref. #53)	2	19	92-7486	Asm-Hose	1
8	92-7645	Fitting-Hydraulic 90° (Model 03800)	1	20	92-7485	Asm-Hose	1
9	92-7474	Assembly-Tube, Front (Model 03801)	1	21	33106-030	Screw-Hex. Hd. Flange	12
10	69-8920	Washer (Model 03800)	4	22	237-58	O-Ring	4
10	69-8920	Washer (Model 03801)	6	23	340-142	Fitting-Hydraulic 90° (Incl. Ref. #22 & 24)	4
11	240-2	Grommet (Model 03800)	2	24	237-81	O-Ring	4
11	240-2	Grommet (Model 03801)	3	25	237-166	O-Ring	2
12	69-8950	Spacer (Model 03800)	2	26	92-7530	Cable-Brake, LH	1
12	69-8950	Spacer (Model 03801)	3	27	3218-4	Nut-Jam	2
13	340-128	Nut-Bulkhead (Model 03800)	2	28	92-7417	Asm-Brake, LH	1
13	340-128	Nut-Bulkhead (Model 03801)	3	29	92-7415	Asm-Drive, Planetary	2
				30	93-7972	Ring-Retaining	4
				31	93-7966	Shaft-Splined, Brake	2
				32	92-7598	Asm-Tube, Frt. Drain	1
				33	237-22	O-Ring	1
				34	340-18	Fitting-Hydraulic 90° (Incl. Ref. #33 & 35)	1
				35	237-79	O-Ring	4
				36	33106-090	Screw-Hex. Hd. Flange	8

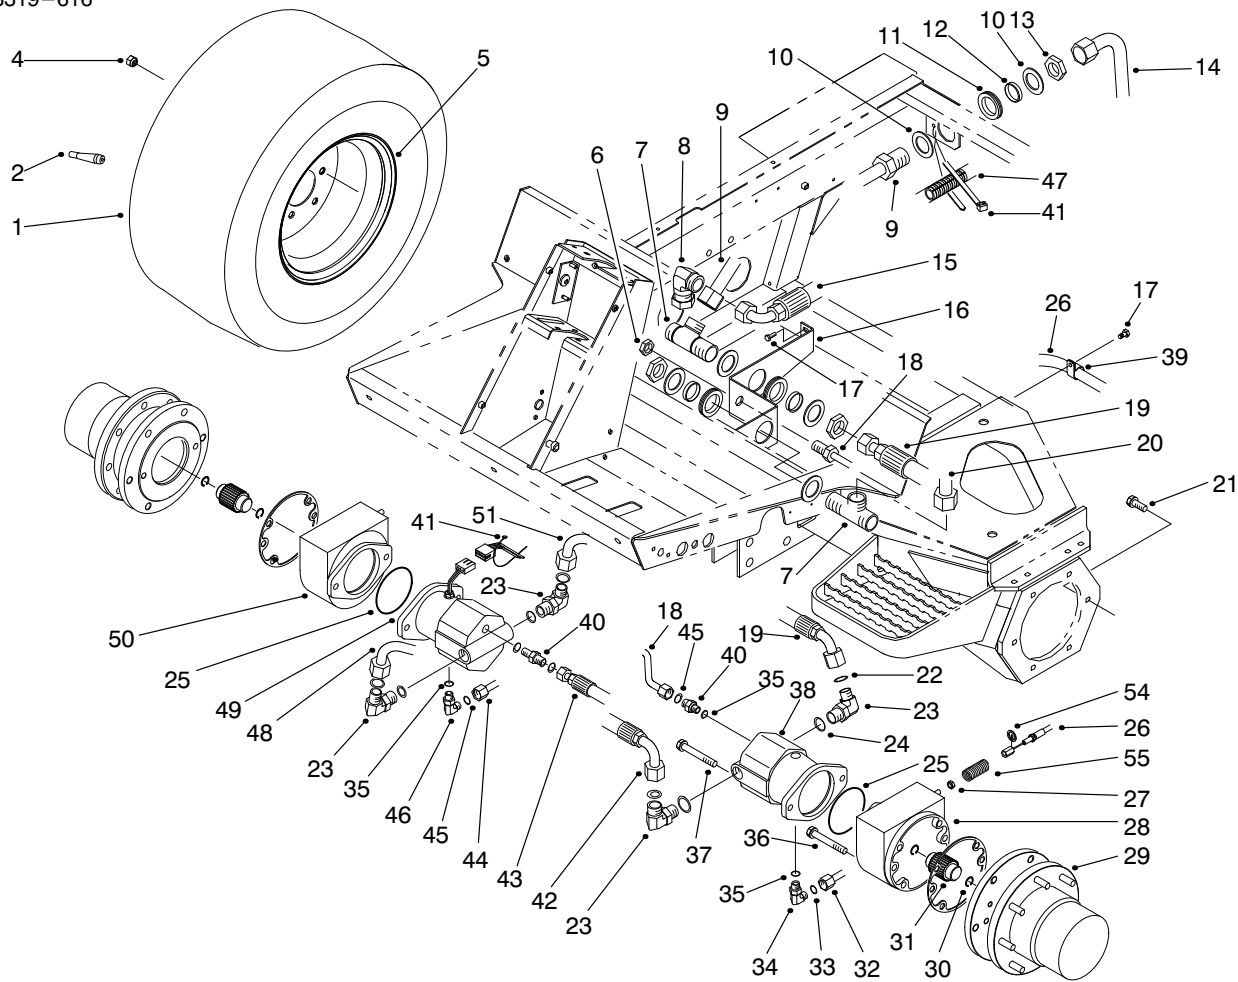 


T-2069-2

FRONT HYDRAULIC DRIVE & BRAKE ASM. (Continued)

Ref. No.	Part No.	Description	No. Used
37	33116-120	Screw-Hex. Hd.	4
38	92-7385	Motor-Planetary	1
39	2412-93	R-Clamp	2
40	340-5	Fitting-Hydraulic (Incl. Ref. #22 & 24)	2
41	3290-378	Tie-Cable	3
42	92-7487	Asm-Tube	1
43	92-7488	Asm-Hose	1
44	92-7478	Asm-Tube, Motor RH	1
45	237-30	O-Ring	3

Ref. No.	Part No.	Description	No. Used
46	340-98	Fitting-Hydraulic 90° (Incl. Ref. #35 & 45)	1
47	94-3090	Harness-Wire, Main	1
48	92-7476	Assembly-Tube, Traction	1
49	93-7476	Motor-Hydraulic W/Sensor	1
50	92-7414	Assembly-Brake, RH	1
51	92-7475	Assembly-Tube, Traction	1
*53	340-65	O-Ring	6
54	94-3050	Plate-Spring	2
55	94-3088	Spring-Brake	2

 *Not Illustrated

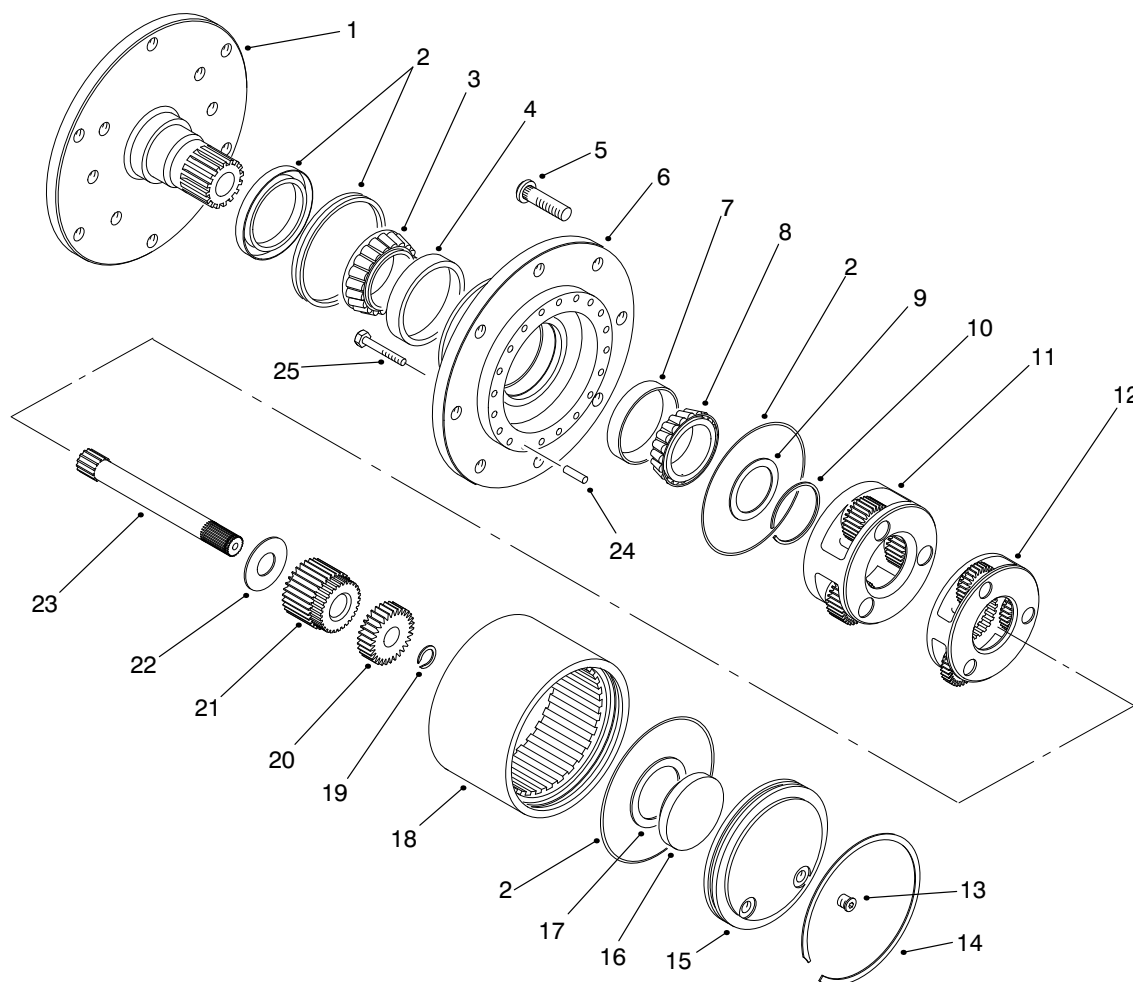


T-2070-1

PLANETARY DRIVE ASSEMBLY NO. 92-7415

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-7450	Spindle	1	15	93-7458	Plate-Cover	1
2	93-7474	Kit-Seal	1	16	93-7457	Spacer-Input	1
3	93-7451	Cone-Bearing	1	17	93-7460	Washer-Thrust	1
4	93-7452	Cup-Bearing	1	18	93-7456	Gear-Ring	1
5	93-7455	Stud-Wheel	8	19	93-7459	Ring-Retaining, External	1
6	93-7453	Housing	1	20	93-7463	Gear-Sun	1
7	93-7470	Cup-Bearing	1	21	93-7464	Gear-Sun	1
8	93-7469	Cone-Bearing	1	22	93-7465	Washer-Thrust	1
9	93-7468	Washer-Thrust	1	23	93-7471	Shaft-Input	1
10	93-7467	Ring-Retaining, External	1	24	93-7466	Pin-Dowel	2
11	93-7472	Asm-Carrier, Secondary	1	25	93-7454	Screw-HH	18
12	93-7473	Asm-Carrier, Primary	1	*	92-7415	Asm-Complete (Incl. Ref. #1-25)	1
13	93-7461	Plug-Pipe	2				
14	93-7462	Ring-Retaining, Internal	1				

 *Not Illustrated

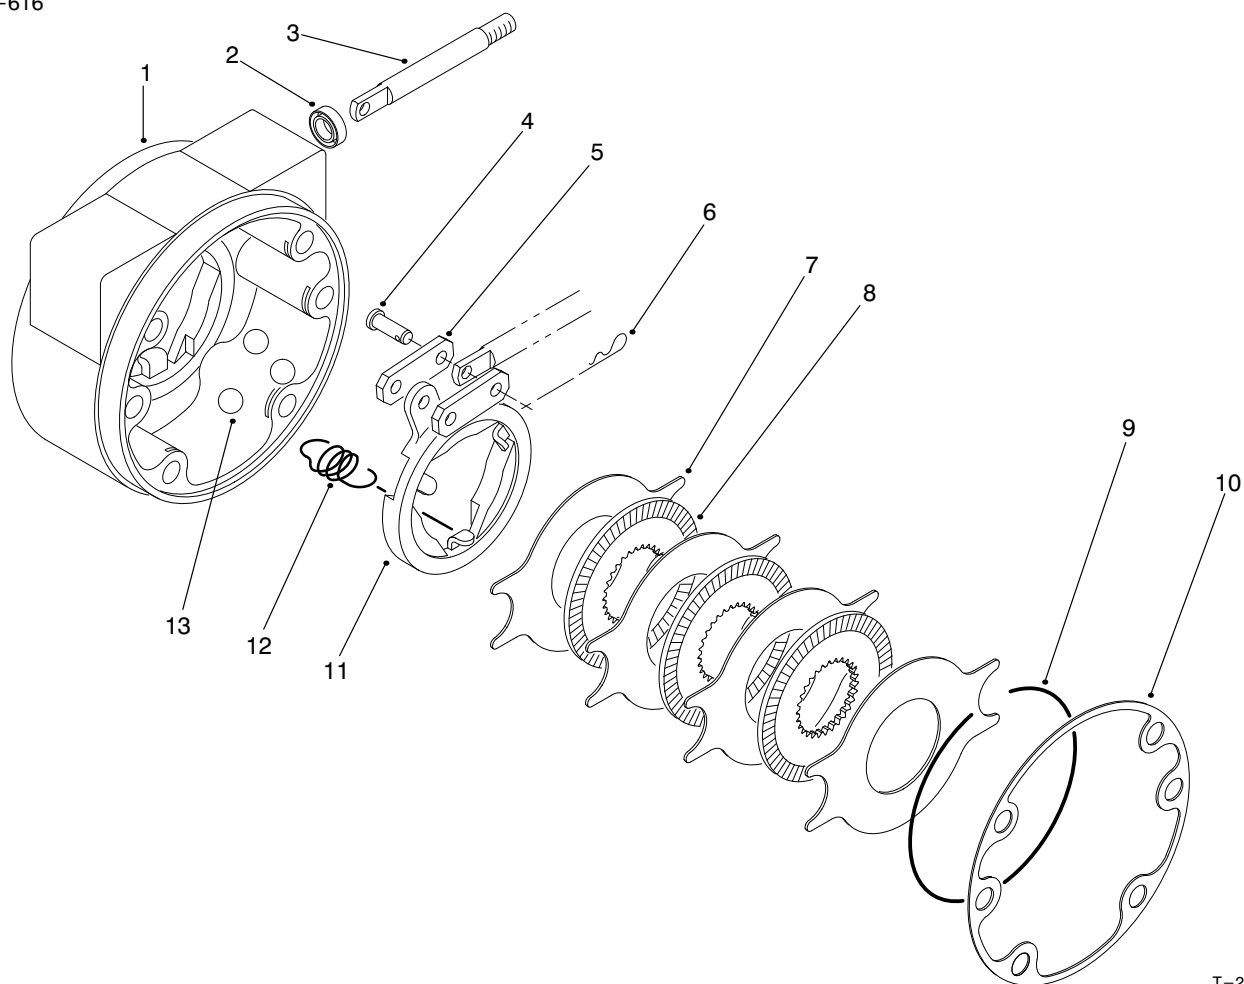

T-2071-1


BRAKE ASM NO. 92-7414 RH & 92-7417 LH (Shown)

Ref. No.	Part No.	Description	No. Used
†1		Housing-Brake, LH	1
†*		Housing-Brake, RH	1
2	93-7977	Seal	1
3	93-7978	Rod-Pull	1
4	93-7983	Pin-Clevis	2
5	93-7980	Link	2
6	93-7979	Pin-Cotter, Hair	2

Ref. No.	Part No.	Description	No. Used
7	93-7986	Disc-Stationary	4
8	93-7981	Disc-Rotating	3
9	93-7976	Ring-Retaining	1
10	93-7984	Gasket	1
11	93-7982	Actuator	1
12	93-7987	Spring-Extension	3
13	93-7985	Ball	3

*Not Illustrated

 
†Not Serviced Separately

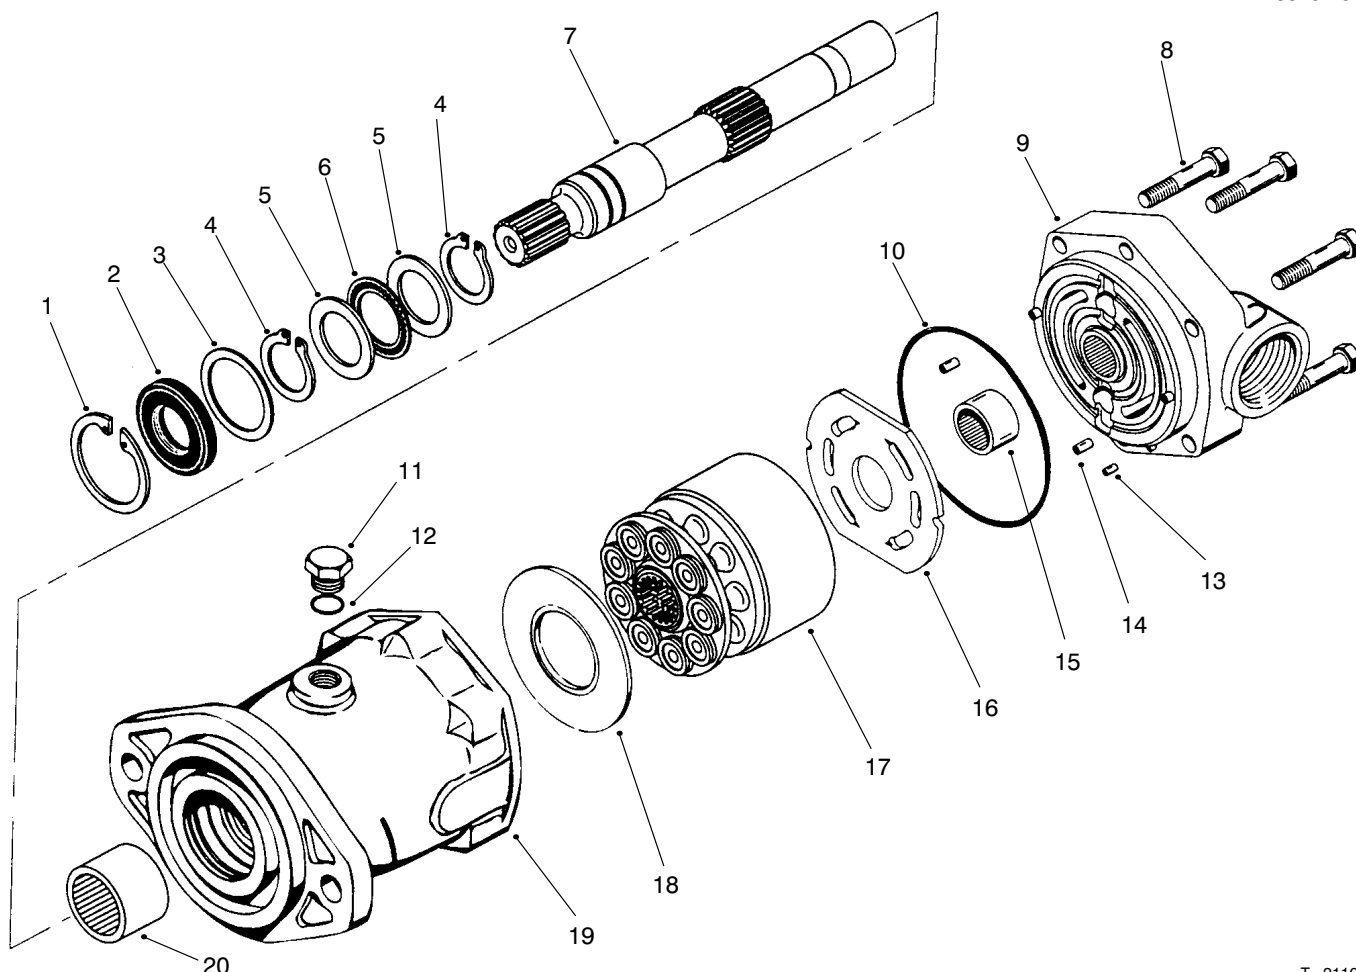

T-2116-1

HYDRAULIC MOTOR ASSEMBLY NO. 92-7385

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	76-7010	Ring-Retaining	1	12		O-Ring	1
2	94-3008	Seal-Shaft	1	13		Pin-Dowel	1
3	94-3007	Washer	1	14		Pin-Dowel	3
4	76-7000	Ring-Retaining	2	15		Bearin-Needle	1
5	76-6950	Race-Thrust	2	16	94-3003	Plate-Valve	1
6	76-6960	Bearing-Thrust	1	17	76-6910	Kit-Rotating	1
7	94-3004	Shaft-Drive, Splined	1	18	76-6970	Insert-Camplate	1
8	94-3002	Screw-HH	6	19	94-3006	Housing (Incl. Ref. #20)	1
9	94-3005	Asm-Backplate (Incl. Ref. #13-15)	1	20		Bearing-Needle	1
10	76-6980	O-Ring	1				
11	94-3009	Asm-Plug (Incl. Ref. #12)	1				

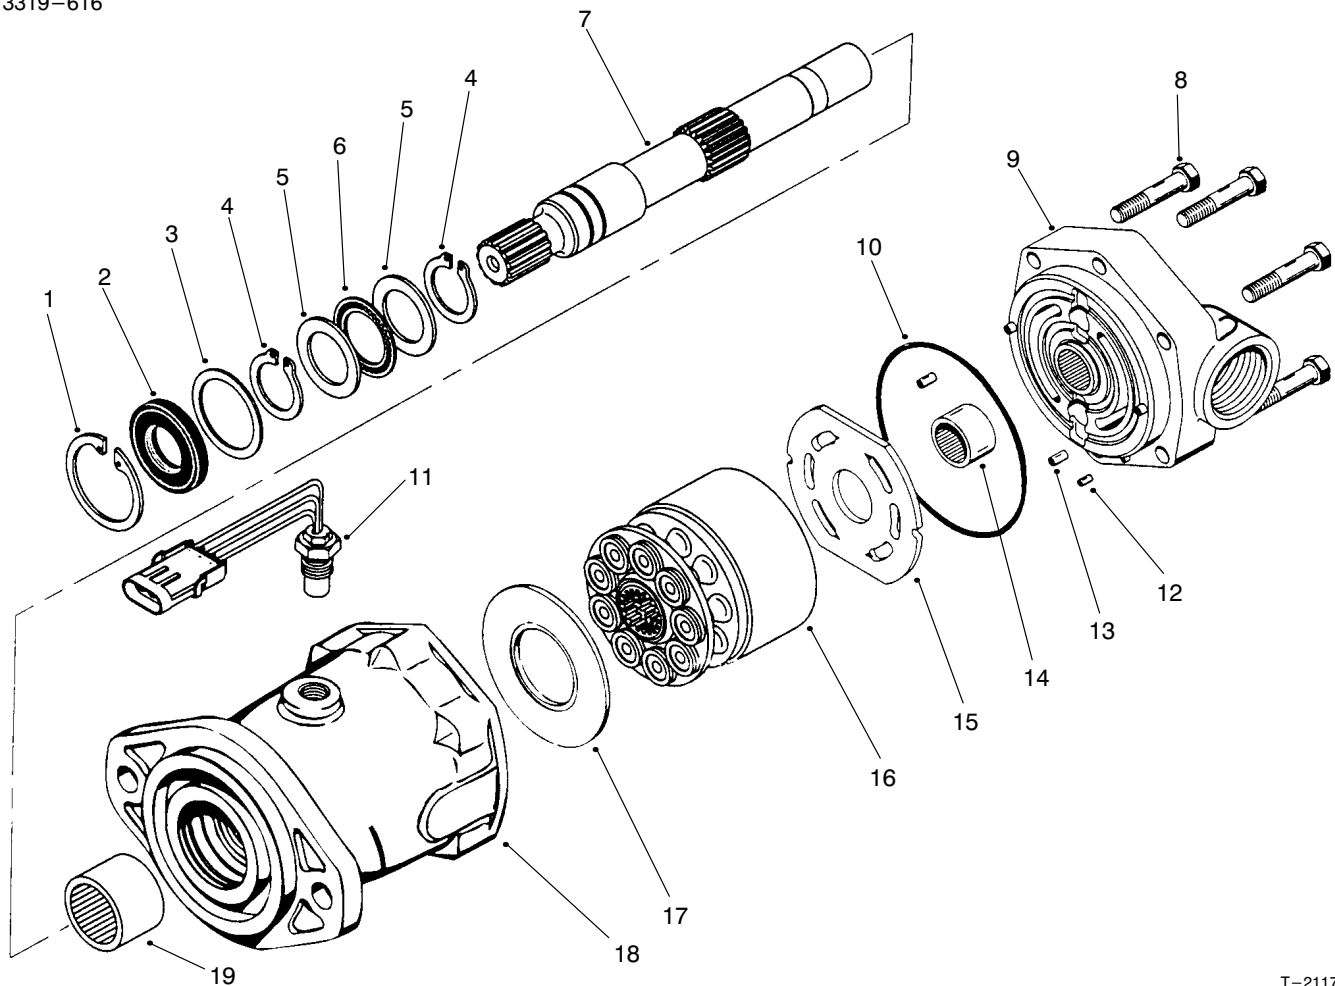 


T-2117-1

HYDRAULIC MOTOR ASM. NO. 93-7476 W/SENSOR

Ref. No.	Part No.	Description	No. Used
1	76-7010	Ring-Retaining	1
2	94-3008	Seal-Shaft	1
3	94-3007	Washer	1
4	76-7000	Ring-Retaining	2
5	76-6950	Race-Thrust	2
6	76-6960	Bearing-Thrust	1
7	94-3004	Shaft-Drive, Splined	1
8	94-3002	Screw-HH	6
9	94-3005	Asm-Backplate (Incl. Ref. #12-14)	1
10	76-6980	O-Ring	1


Ref. No.	Part No.	Description	No. Used
11	94-3010	Sensor-Speed Pickup	1
12		Pin-Dowel	1
13		Pin-Dowel	3
14		Bearing-Needle	1
15	94-3003	Plate-Valve	1
16	76-6910	Kit-Rotating	1
17	76-6970	Insert-Camplate	1
18	94-3006	Housing (Incl. Ref. #19)	1
19		Bearing-Needle	1

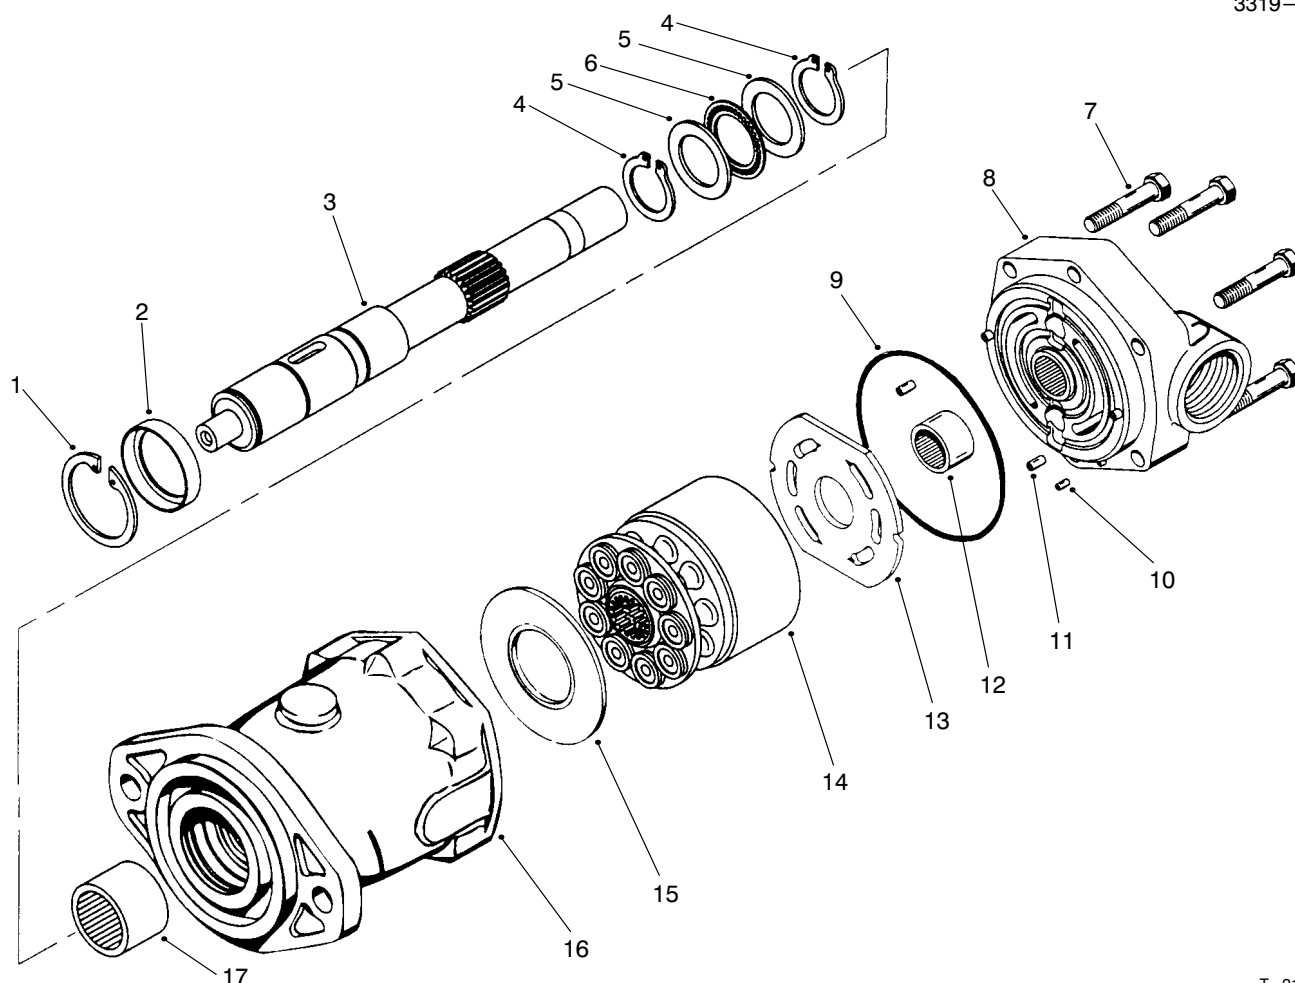 

T-2118-1

4 WD HYDRAULIC MOTOR ASM. NO. 92-7386

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	76-7010	Ring-Retaining	1	10		Pin-Dowel	3
2	76-7020	Spacer	1	11		Pin-Dowel	1
3	76-6930	Shaft-Drive, Straight	1	12		Bearing-Needle	1
4	76-7000	Ring-Retaining	2	13	94-3003	Plate-Valve	1
5	76-6950	Race-Thrust	2	14	76-6910	Kit-Rotating	1
6	76-6960	Bearing-Thrust	1	15	76-6970	Insert-Camplate	1
7	94-3002	Screw-HH	6	16	94-3001	Housing	1
8	94-3000	Asm.-Backplate (Incl. Ref. #10-12)	1	17		Bearing-Needle	1
9	76-6980	O-Ring	1				

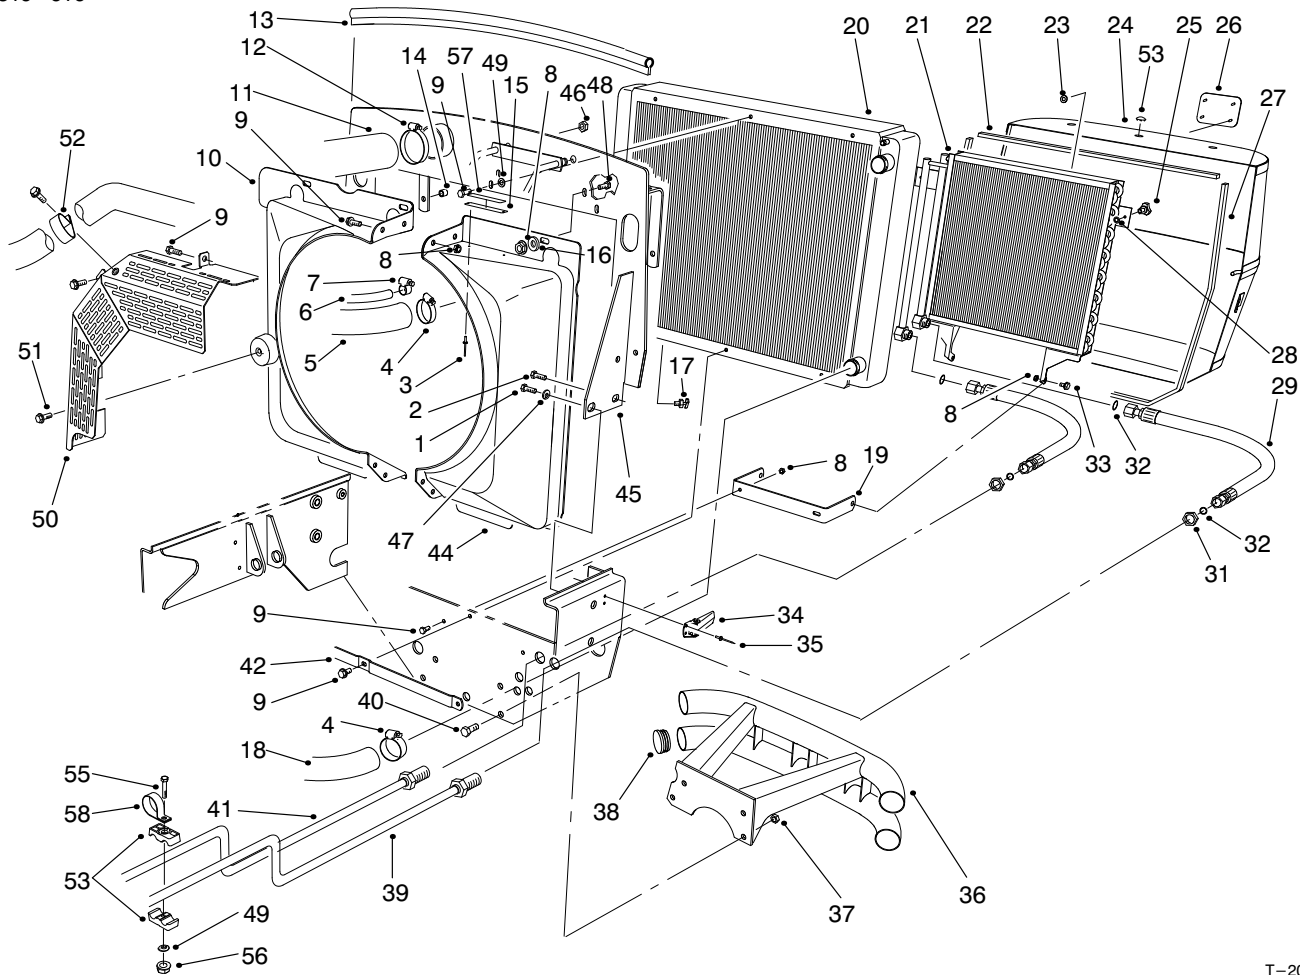 


T-2073-4

RADIATOR & SHROUD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	33108-025	Screw-Hex. Hd. Flange	2
2	33105-030	Screw-Hex. Hd. Flange	2
3	3290-271	Rivet-Pop	2
4	2412-3	Clamp-Hose	2
5	93-4215	Hose-Radiator, Upper Rear	1
6	92-7424	Hose-Radiator, Overflow	1
7	2412-36	Clamp-Hose	1
8	32128-20	Nut-Flange	4
9	3234-5	Screw-Flange	10
10	92-7374	Shroud-Fan RH	1
11	93-7584	Hose-Intake	1
12	2412-125	Clamp-Hose	1
13	93-7553	Seal-Hood	1
14	32148-10	Nut-Clinch	2
15	93-6681	Plate-Warning	1
15	94-2646	Decal-Warning (Europe)	1
15	94-4577	Decal-Warning (Japan)	1
16	3256-56	Washer-Flat	3
17	304-46	Nut-Drain Cock	1
18	92-7463	Hose-Radiator, Lower	1
19	92-7516	Bracket-Support, Cooler	1
20	74-3410	Asm-Radiator	1
21	82-3740	Cooler-Oil	1
22	92-7631	Sealstrip-Screen	1
23	94-2638	Nut-Push On	4
24	92-7505	Screen	1
25	77-3620	Retainer-Cover	2


Ref. No.	Part No.	Description	No. Used
26	93-6028	Plate-Logo, Toro	1
27	93-4208	Strip-Seal, Screen	1
28	32151-72	Retainer-Push On	2
29	92-7535	Asm-Hose, Oil Cooler	2
31	340-74	Nut-Bulkhead	2
32	237-65	O-Ring	4
33	37-8771	Bolt-Shoulder	2
34	69-3020	Latch-Draw	2
35	3269-4	Rivet-Pop	4
36	94-3084	Bumper (Model 03800)	1
36	92-7623	Bumper (Model 03801)	1
37	3296-23	Nut-Lock	4
38	2410-42	Cap-Bumper (Model 03800)	2
38	2410-42	Cap-Bumper (Model 03801)	4
39	92-7493	Asm-Tube, Filter	1
40	325-5	Screw-Hex. Hd.	2
41	92-7558	Asm-Tube, Cooler	1
42	92-7416	Strap-Radiator	1
44	92-7375	Shroud-Fan LH	1
45	92-7388	Support-Radiator	1
46	3296-23	Nut-Lock	2
47	3256-27	Washer-Flat	2
48	3230-2	Screw-Carriage	3
49	3256-23	Washer-Flat	4
50	94-2646	Guard-Fan (Europe)	1

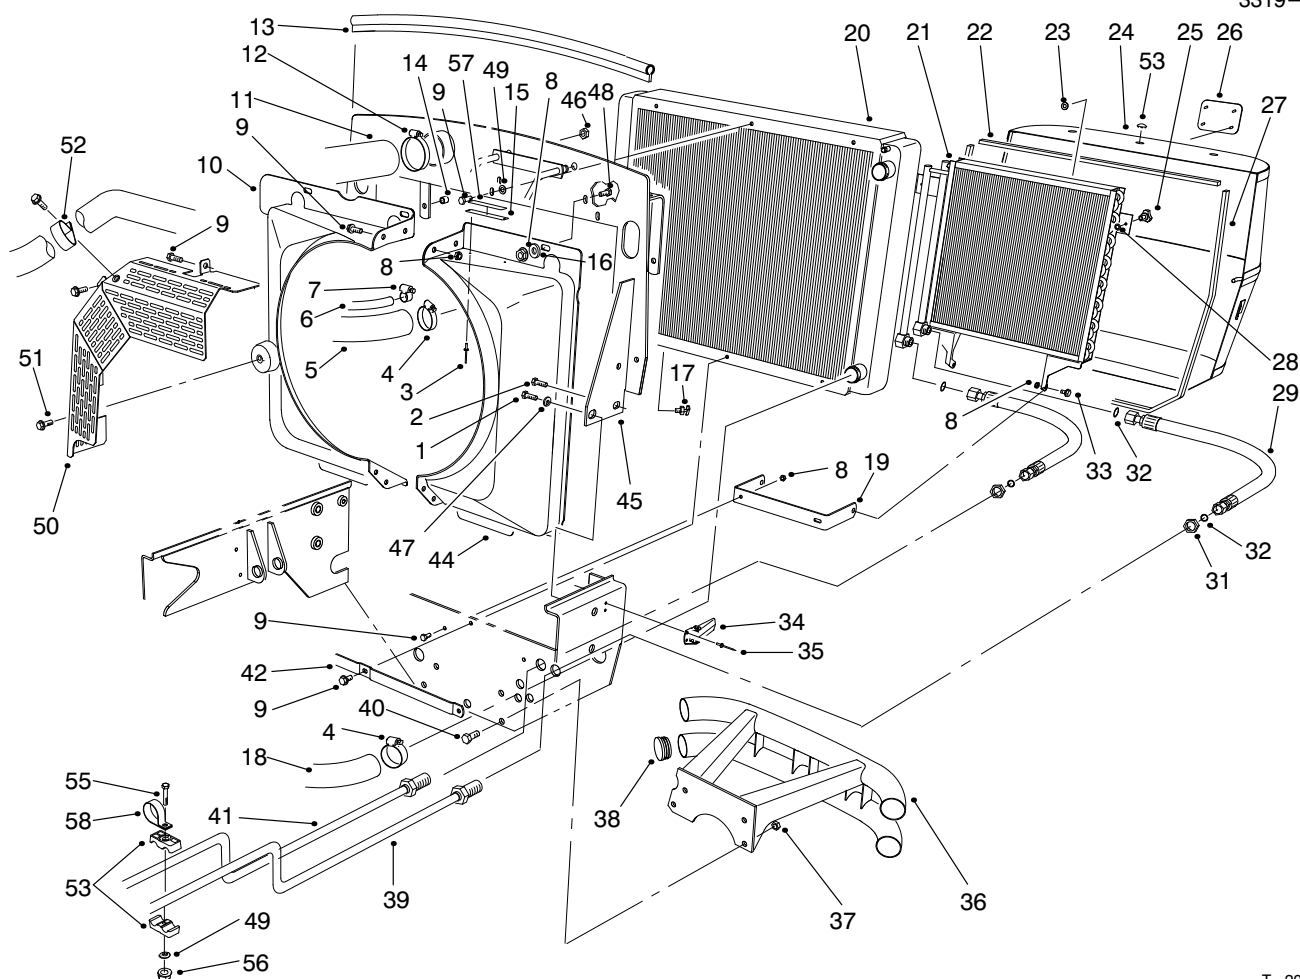 

T-2073-4

RADIATOR & SHROUD ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
51	33104-020	Screw-HHF (Europe)	3	56	3296-47	Nut-Lock	1
52	2412-96	Clamp-R (Europe)	1	57	76-8750	Plate - Warning, Fan (Europe)	1
53	2410-64	Button-Plug	3	58	2412-147	Clamp - R	1
54	94-8105	Clamp-Tube	2				
55	322-9	Screw-HH	1				

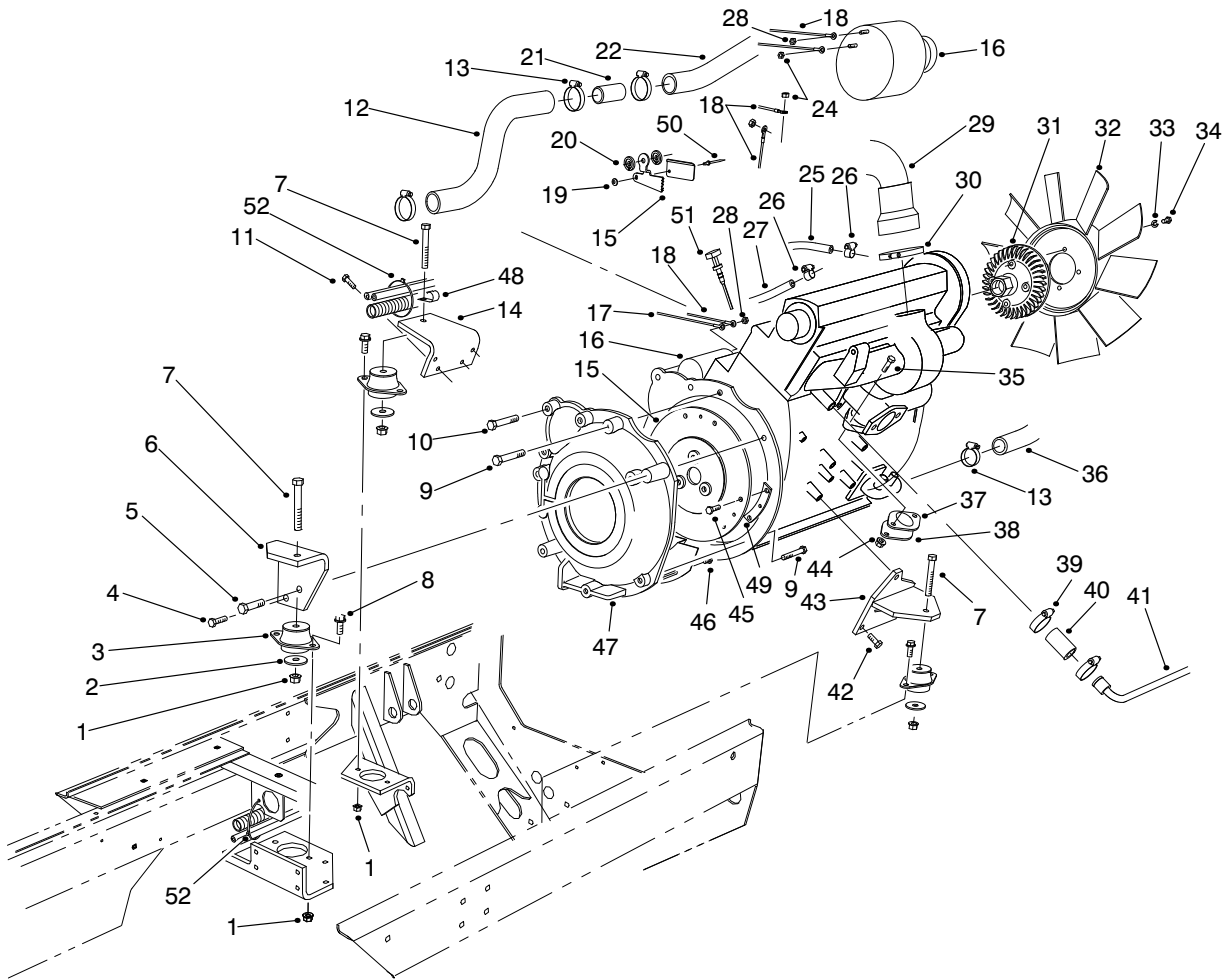 


T-2074-1

ENGINE INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	33005-00	Nut-Hex. Flange	9	26	2412-108	Clamp-Hose	2
2	87-5100	Washer-Snubbing	3	27	63-7627	Hose-Fuel	1
3	53-9681	Mount-Rubber	3	28	48-7930	Nut-Hex.	2
4	48-9470	Screw	1	29	94-2624	Hose-Manifold	1
5	48-7840	Screw-Hex. Hd.	1	30	2412-125	Clamp-Hose	1
6	92-7425	Support-Mount, Engine	1	31	92-7466	Clutch-Fan	1
7	33105-070	Screw-Hex. Hd. Flange	3	32	74-3650	Fan-Engine	1
8	33105-030	Screw-Hex. Hd. Flange	6	35	33104-020	Screw-Hex. Hd. Flange	2
9	48-7570	Screw-Hex. Hd.	3	36	92-7463	Hose-Radiator, Lower	1
10	48-7810	Screw-Hex. Hd.	3	37	77-3700	Gasket-Exhaust, Manifold	1
11	66-3160	Screw	4	38	92-7382	Cover-Manifold	1
12	94-1418	Hose-Radiator, Upper	1	39	2412-129	Clamp-Hose	4
13	2412-3	Clamp-Hose	4	40	74-6490	Hose-Water Line	2
14	92-7429	Mount-Motor, RH	1	41	92-7381	Tube-Water, Return	1
15	94-1421	Coupling-Center, Spring	1	42	48-7780	Screw-Hex. Hd.	3
16	93-4233	Asm-Engine	1	43	92-7426	Mount-Motor	1
17	75-1370	Cable-Battery, Positive	1	44	33004-00	Nut-Hex. Flange	2
18	94-3090	Harness-Wire, Main	1	45	48-7700	Screw-Hex. Hd.	6
*	94-9967	Circuit Breaker-50 Amp	1	46	48-7610	Screw-Hex. Hd.	3
*	94-9968	Circuit Breaker-100 Amp	1	47	82-5120	Adapter-Pump To Engine	1
19	3256-49	Washer-Flat	1	48	2412-150	J-Clip	1
20	86-2990	Mount-Cable, Throttle	2	49	94-1422	Spacer-Coupler	3
21	93-7594	Spacer-Tubular	1	50	3290-282	Rivet-Pop	1
22	93-4215	Hose-Radiator, Upper Rear	1	51	93-9176	Dipstick-Peugeot	1
24	48-7880	Nut	3	52	3290-378	Tie-Cable	2
25	92-7521	Hose-Fuel	1				

 *Not Illustrated

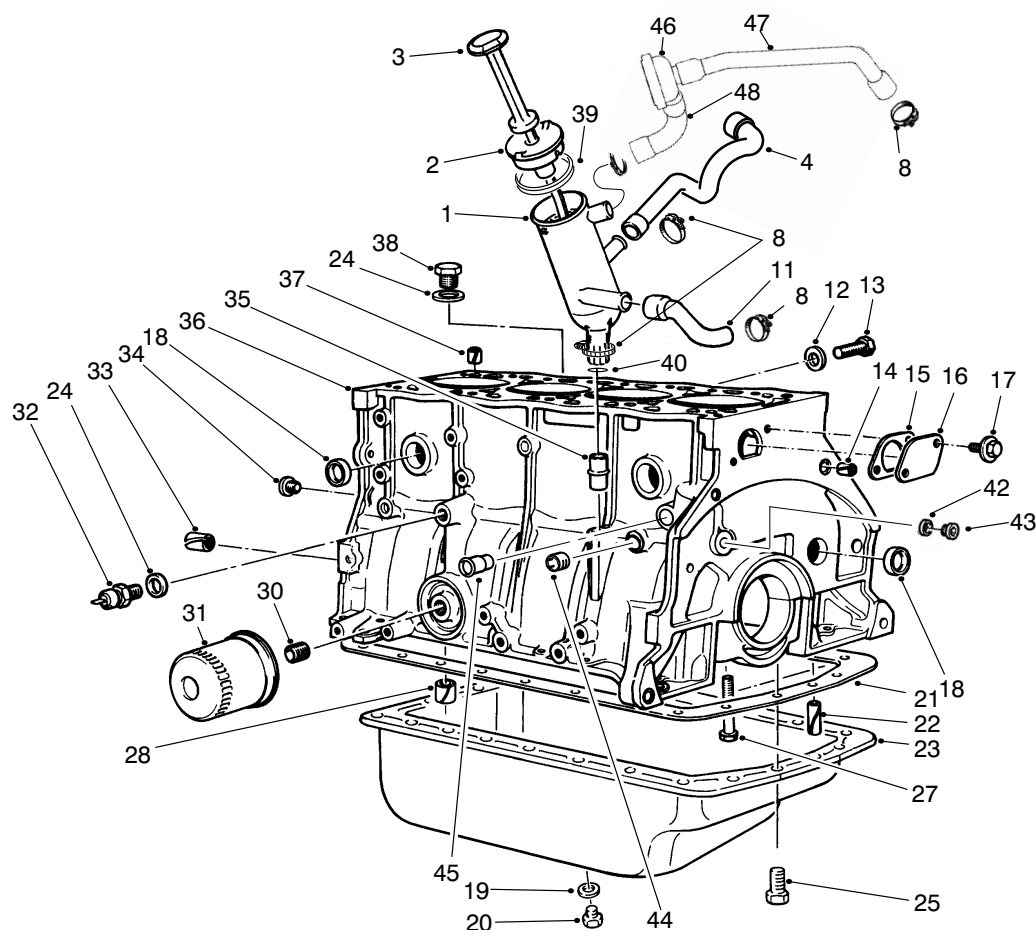


T-2142-3

CRANKCASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-3181	Oil Filler (Incl. Ref. 39)	1	27	74-7930	Screw-Bearing Cap	10
2	94-3182	Plug	1	28	74-7940	Bushing-Spring	1
3	93-9176	Dipstick-Oil	1	29	74-7950	Screw-Plate	6
4	94-3184	Union	1	30	74-7960	Stud-Filter	1
8	2412-129	Clamp-Hose	8	31	74-7970	Filter-Oil	1
11	74-7770	Hose-Crankcase	1	32	94-3180	Switch-Pressure	1
12	74-7780	Gasket	1	33	74-7990	Pin-Spring	4
13	74-7790	Screw	1	34	74-8000	Plug	2
14	94-3102	Pin	2	35	74-8010	Guide-Dipstick	1
15	74-7810	Gasket-Plate	1	36	94-3100	Asm-Short Block (Incl. Pistons next page)	1
16	74-7820	Plate	1	37	74-8030	Pin-Spring	1
17	94-3112	Screw-Washer Hd.	2	38	94-3105	Plug-Drain	1
18	74-7840	Plug-27 mm Dia.	8	39	94-3183	Gasket	1
*	94-3108	Plug-27.5 mm Dia.	8	40	94-3186	O-Ring	1
*	94-3109	Plug-28.5 mm Dia.	9	42	94-3106	Gasket	2
19	74-7320	Gasket	1	43	94-3104	Plug-Threaded	2
20	74-7310	Plug-Threaded	1	44	94-3103	Plug-Threaded	1
21	74-7380	Gasket-Oil Pan	1	45	94-3110	Stud	1
22	94-3111	Pin-Groove	2	46	94-3190	PCV Valve	1
23	74-7300	Pan-Oil	1	47	94-3192	Union	1
24	94-3107	Gasket	2	48	94-3191	Union	1
25	74-7330	Screw-Hex. Hd.	23	*	94-3101	Gasket Set (Without Head Gasket)	1
26	77-3790	Plug-Drain	1				

 *Not Illustrated

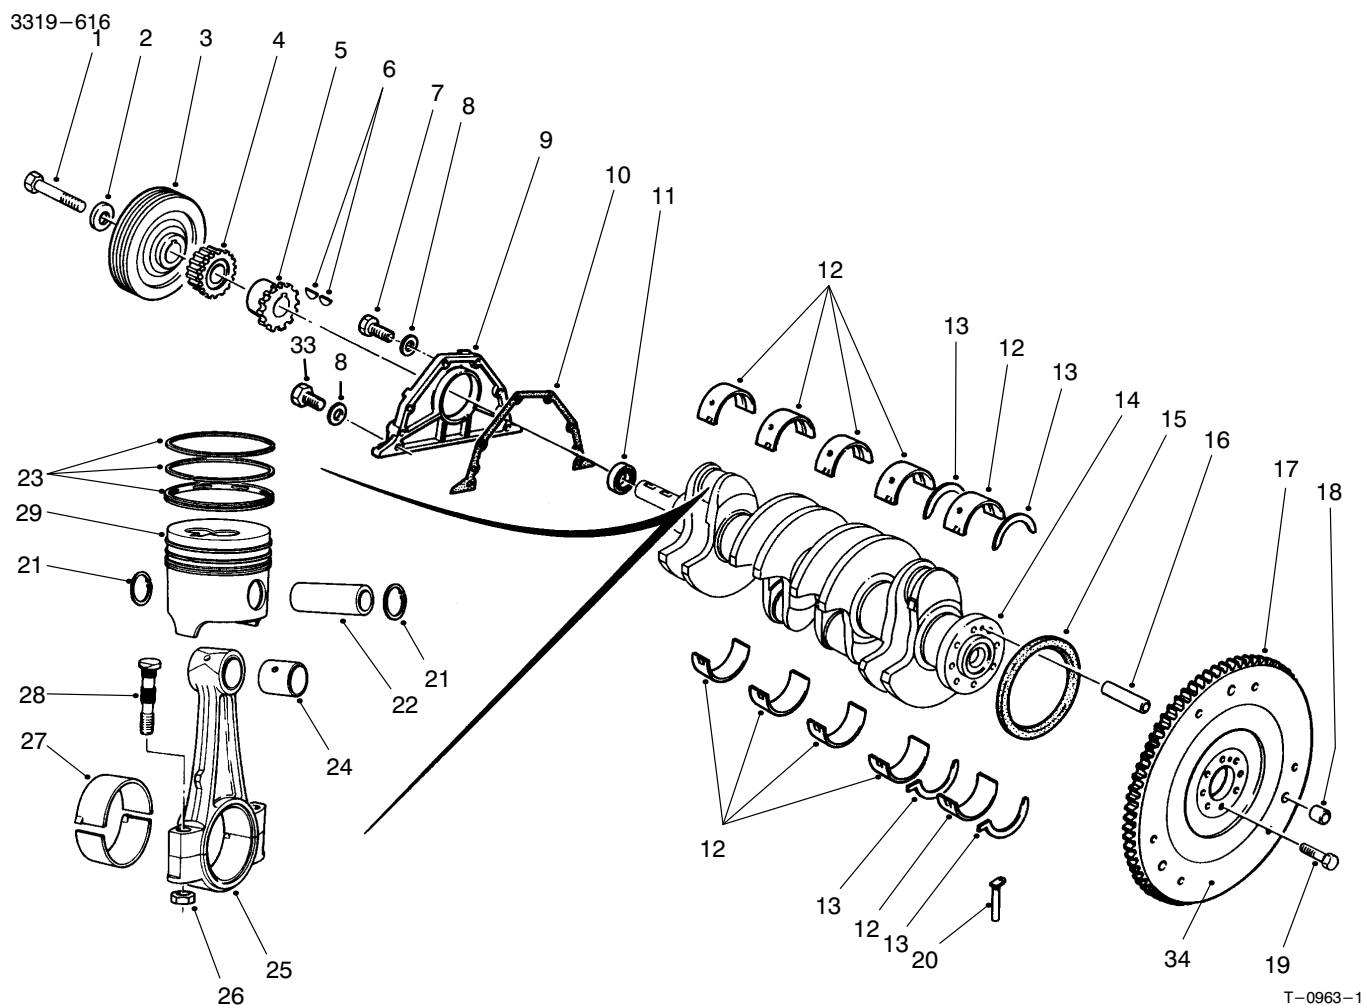


CRANKSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	94-3145	Screw-Hex. Hd.	1
2	94-3146	Washer	1
3	94-3144	Pulley	1
4	74-8100	Gear-Pinion	1
5	95-3485	Sprocket-Oil Pump	1
6	74-8120	Key-Woodruff	2
7	94-3150	Screw-Hex. Hd.	4
8	94-3151	Washer	6
9	74-8140	Cover	1
10	74-8150	Gasket-Cover	1
11	94-3148	Seal-Shaft	1
12	74-8170	Bearing Set (Std.)	2
*	94-3140	Bearing Set (.30mm OS)	2
13	94-3141	Thrust Bearing Set (Std.)	2
*	94-3142	Thrust Bearing Set (.10mm OS)	2
*	74-8210	Thrust Bearing Set (.15mm OS)	2
*	94-3143	Thrust Bearing Set (.20mm OS)	2
14	74-8230	Crankshaft	1
15	94-3147	Seal	1
16	74-7990	Pin	1
17	94-3149	Gear-Flywheel	1
18	74-8270	Pin	3
19	95-3484	Screw-Hex. Hd.	8
20	74-8290	Seal-#1 Bearing Cap	2
21	74-8300	Clip-Piston Pin	8

*Not Illustrated

Ref. No.	Part No.	Description	No. Used
22	74-8310	Pin-Piston	4
23	94-3158	Piston Ring Set Std.	4
*	74-8320	Piston Ring Set-0.20 mm	4
*	74-8330	Piston Ring Set-0.50 mm	4
*	74-8340	Piston Ring Set-0.80 mm	4
24	94-3154	Bushing-Sleeve	4
25	94-3153	Rod-Connecting	4
26		Nut-Hex.	8
27	74-8380	Bearing-Connecting Rod (Std.)	4
*	94-3155	Bearing-Connecting Rod (49.7mm ID)	4
28	94-3156	Bolt-Connecting Rod (Incl. Ref. #26)	8
29	94-3157	Piston Set-Std. (Incl. Ref. #21-23)	1
29	74-8420	Piston Set-Stage #1 (83.13mm OD) (Incl. Ref. #21-23)	1
*	74-8430	Piston Set-Stage #2 (83.43mm OD) (Incl. Ref. #21-23)	1
*	74-8440	Piston Set-Stage #3 (83.73mm OD) (Incl. Ref. #21-23)	1
33	94-3152	Screw-Hex. Hd.	2
34	74-8260	Flywheel	1

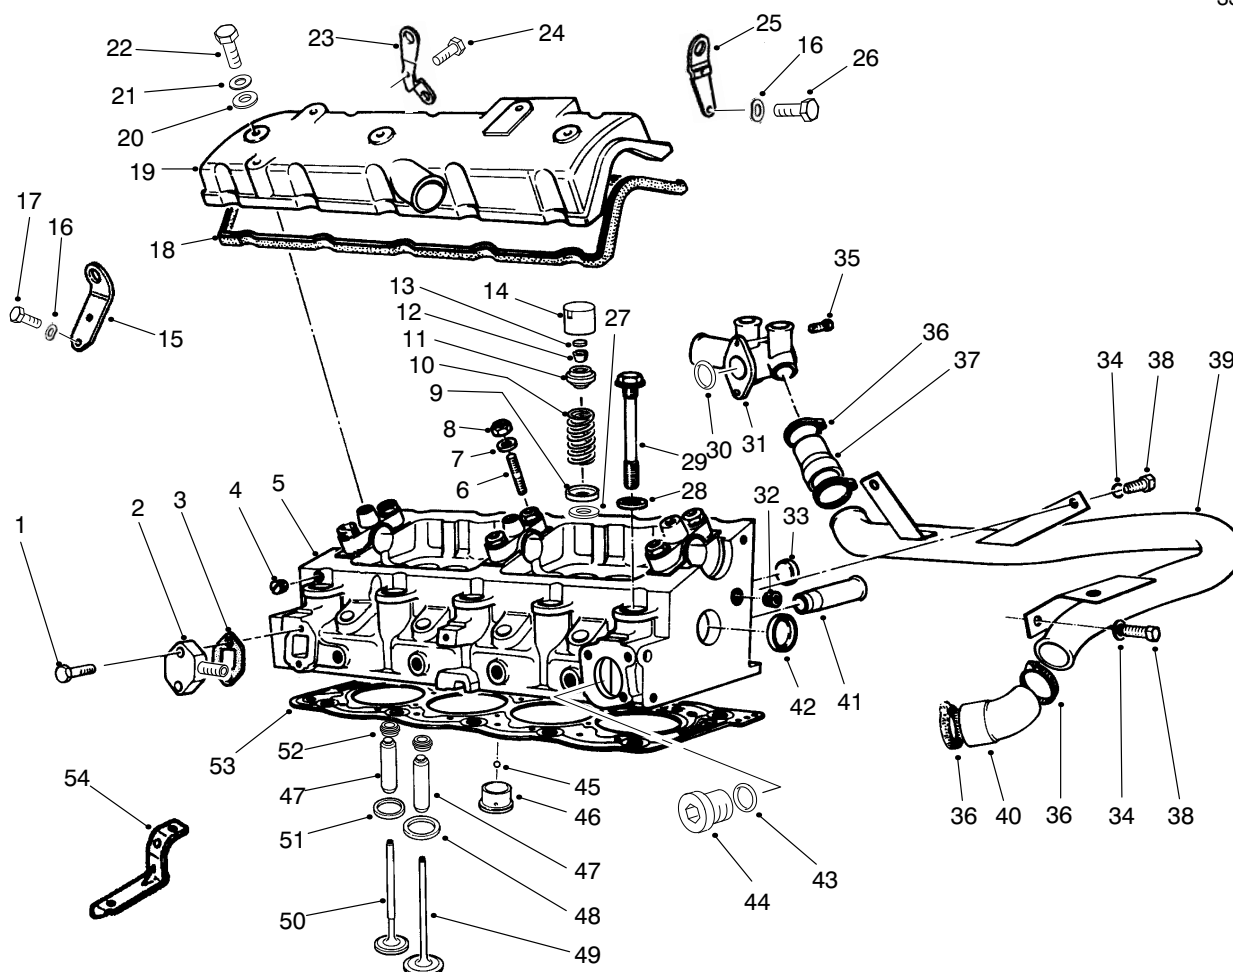 


T-2148-4

CYLINDER HEAD ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-3123	Screw-Hex. Hd.	2	13	74-6720	Insert-Valve (2.400mm)	8
2	94-3117	Plate	1	*	74-6730	Insert-Valve (2.425mm)	8
3	94-3116	Gasket	1	*	74-6740	Insert-Valve (2.450mm)	8
4	74-7600	Plug	4	*	74-6750	Insert-Valve (2.475mm)	8
5	94-3113	Asm-Cylinder Head	1	*	74-6760	Insert-Valve (2.500mm)	8
6	76-5130	Stud	6	*	74-6770	Insert-Valve (2.525mm)	8
7	74-8900	Washer-Flat	6	*	74-6780	Insert-Valve (2.550mm)	8
8	94-3115	Nut-Lock	6	*	74-6790	Insert-Valve (2.575mm)	8
9	74-6570	Cup-Lower Valve Spring	8	*	74-6800	Insert-Valve (2.600mm)	8
10	74-6560	Spring-Valve	8	*	74-6810	Insert-Valve (2.625mm)	8
11	74-6550	Cup-Upper Valve Spring	8	*	74-6820	Insert-Valve (2.650mm)	8
12	74-7240	Collar-Split	16	*	74-6830	Insert-Valve (2.675mm)	8
13	74-6580	Insert-Valve (1.650mm)	8	*	74-6840	Insert-Valve (2.700mm)	8
*	74-6590	Insert-Valve (1.725mm)	8	*	74-6850	Insert-Valve (2.725mm)	8
*	74-6600	Insert-Valve (1.800mm)	8	*	74-6860	Insert-Valve (2.750mm)	8
*	74-6610	Insert-Valve (1.900mm)	8	*	74-6870	Insert-Valve (2.775mm)	8
*	74-6620	Insert-Valve (1.975mm)	8	*	74-6880	Insert-Valve (2.800mm)	8
*	74-6630	Insert-Valve (2.050mm)	8	*	74-6890	Insert-Valve (2.825mm)	8
*	74-6640	Insert-Valve (2.125mm)	8	*	74-6900	Insert-Valve (2.850mm)	8
*	74-6650	Insert-Valve (2.225mm)	8	*	74-6910	Insert-Valve (2.875mm)	8
*	74-6660	Insert-Valve (2.250mm)	8	*	74-6920	Insert-Valve (2.900mm)	8
*	74-6670	Insert-Valve (2.275mm)	8	*	74-6930	Insert-Valve (2.925mm)	8
*	74-6680	Insert-Valve (2.300mm)	8	*	74-6940	Insert-Valve (2.950mm)	8
*	74-6690	Insert-Valve (2.325mm)	8	*	74-6950	Insert-Valve (2.975mm)	8
*	74-6700	Insert-Valve (2.350mm)	8	*	74-6960	Insert-Valve (3.000mm)	8
*	74-6710	Insert-Valve (2.375mm)	8	*	74-6970	Insert-Valve (3.025mm)	8

 *Not Illustrated

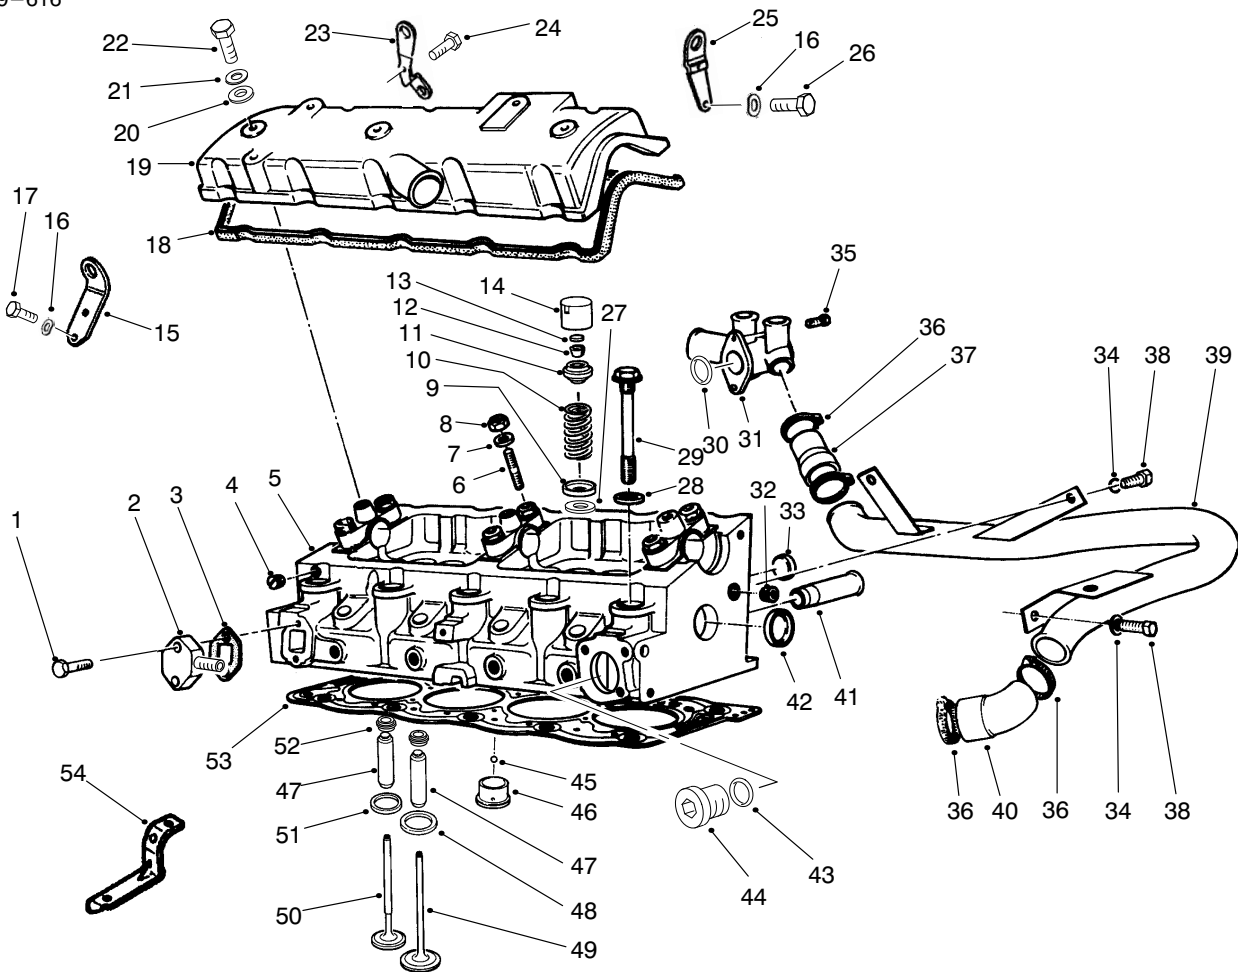


T-2148-4

CYLINDER HEAD ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
13	74-6980	Insert-Valve (3.050mm)	8
*	74-6990	Insert-Valve (3.075mm)	8
*	74-7000	Insert-Valve (3.100mm)	8
*	74-7010	Insert-Valve (3.125mm)	8
*	74-7020	Insert-Valve (3.150mm)	8
*	74-7030	Insert-Valve (3.175mm)	8
*	74-7040	Insert-Valve (3.200mm)	8
*	74-7050	Insert-Valve (3.225mm)	8
*	74-7060	Insert-Valve (3.250mm)	8
*	74-7070	Insert-Valve (3.275mm)	8
*	74-7080	Insert-Valve (3.300mm)	8
*	74-7090	Insert-Valve (3.325mm)	8
*	74-7100	Insert-Valve (3.350mm)	8
*	74-7110	Insert-Valve (3.375mm)	8
*	74-7120	Insert-Valve (3.400mm)	8
*	74-7130	Insert-Valve (3.425mm)	8
*	74-7140	Insert-Valve (3.450mm)	8
*	74-7150	Insert-Valve (3.475mm)	8
*	74-7160	Insert-Valve (3.500mm)	8
*	74-7170	Insert-Valve (3.550mm)	8
*	74-7180	Insert-Valve (3.625mm)	8
*	74-7190	Insert-Valve (3.700mm)	8
*	74-7200	Insert-Valve (3.775mm)	8
*	74-7210	Insert-Valve (3.850mm)	8
*	74-7220	Insert-Valve (3.925mm)	8
*	74-7230	Insert-Valve (4.000mm)	8

*Not Illustrated

Ref. No.	Part No.	Description	No. Used
14	74-6540	Tappet-Valve	8
15	94-3135	Bracket-Lifting	1
16	74-7560	Washer-Spring	3
17	76-5440	Screw	2
18	74-7630	Gasket-Valve Cover	1
19	74-7640	Cover-Valve	1
20	74-7650	Washer-Flat	3
21	94-3125	Washer	3
22	94-3124	Bolt-Valve Cover	3
23	94-3136	Bracket-Lifting	1
24	94-3138	Screw	1
25	94-3137	Bracket-Lifting	1
26	94-3139	Screw	1
27	94-3174	Washer	8
28	74-7270	Washer-Flat	10
29	74-7260	Bolt-Head	10
30	94-3197	O-Ring	1
31	94-3196	Inlet-Water	1
32	94-3118	Plug	1
33	74-7840	Plug-27 mm Dia.	2
*	94-3108	Plug-27.5 mm Dia.	2
*	94-3109	Plug-28.5 mm Dia.	2
34	68-9420	Washer-Lock	3
35	94-3198	Screw	2
36	2412-129	Clamp-Hose	4
37	94-3200	Hose-By-Pass	1

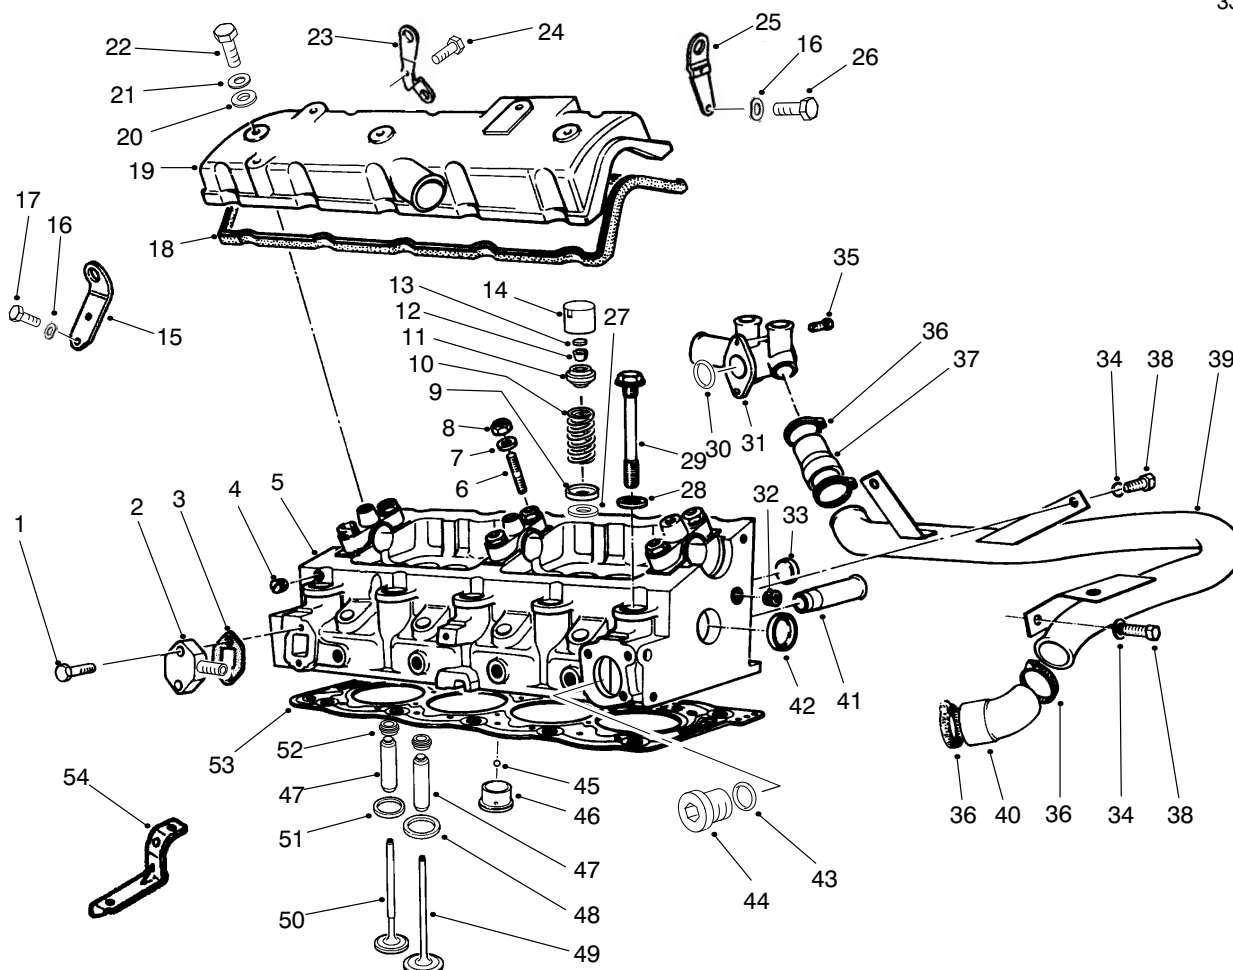 


T-2148-4

CYLINDER HEAD ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
38	48-7700	Screw-Hex. Hd.	3	49	74-7480	Valve-Intake	4
39	94-3199	Pipe-By-Pass	1	50	92-7794	Valve-Exhaust	4
40	94-3201	Hose-By-Pass	1	51	92-7795	Seat-Exhaust Valve (34.5mm)	4
41	74-7400	Tube	1	52	92-7791	Seal-Valve	8
42	74-7840	Plug	2	53	94-8132	Gasket-Head (1.48 mm)	1
43	94-3122	Gasket	1	*	94-8133	Gasket-Head (1.52 mm)	1
44	94-3121	Plug	1	*	94-8134	Gasket-Head (1.58 mm)	1
45	74-7420	Ball	4	*	94-8135	Gasket-Head (1.62 mm)	1
46	74-7430	Chamber-Turbulence (32.45mm)	4	54	94-3120	Bracket	1
*	74-7440	Chamber-Turbulence (32.65mm)	4	*	74-7670	Head Bolt & Washer Set (Incl. Ref. #28 & 29)	1
47	92-7792	Guide-Valve (14.29mm)	8	*	94-3119	Kit-Gasket	1
*	92-7793	Guide-Valve (14.59mm)	8	*	94-9965	Asm-Head, Cylinder	1
48	74-7450	Seat-Intake Valve (39.3mm)	4				
*	74-7460	Seal-Intake Valve (39.5mm)	4				

 *Not Illustrated

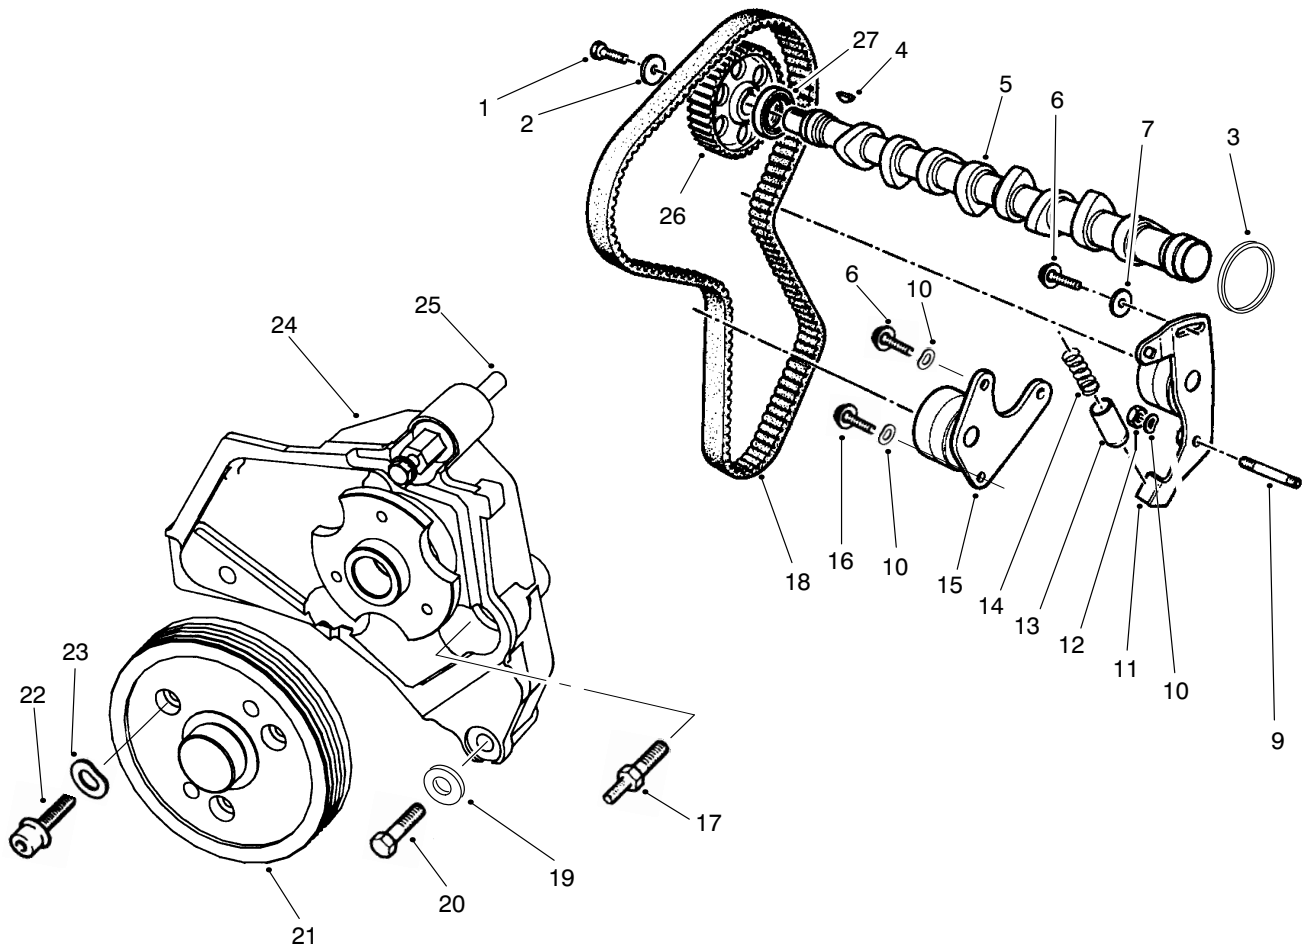


T-2141-1

CAMSHAFT & FAN SUPPORT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	77-3440	Screw	2
2	77-3450	Washer	2
3	77-3420	Gasket	1
4	77-3410	Key	1
5	77-3400	Camshaft	1
6	94-3163	Screw	1
7	94-3166	Washer-Flat	1
9	94-3162	Stud	1
10	94-3164	Washer-Spring	4
11	94-3159	Asm-Roller	1
12	94-3165	Nut-Lock	1
13	77-3520	Cup	1
14	77-3510	Spring	1


Ref. No.	Part No.	Description	No. Used
15	94-3160	Asm-Roller	1
16	94-3161	Screw	2
17	94-3170	Screw	1
18	74-8830	Belt	1
19	94-3172	Washer	3
20	94-3171	Screw	2
21	94-3168	Pulley-Fan	1
22	94-3173	Screw	3
23	76-5010	Washer	3
24	94-3167	Bracket-Fan	1
25	94-3169	Screw	1
26	92-7787	Pulley-Camshaft	1
27	94-9994	Gasket-Camshaft	1

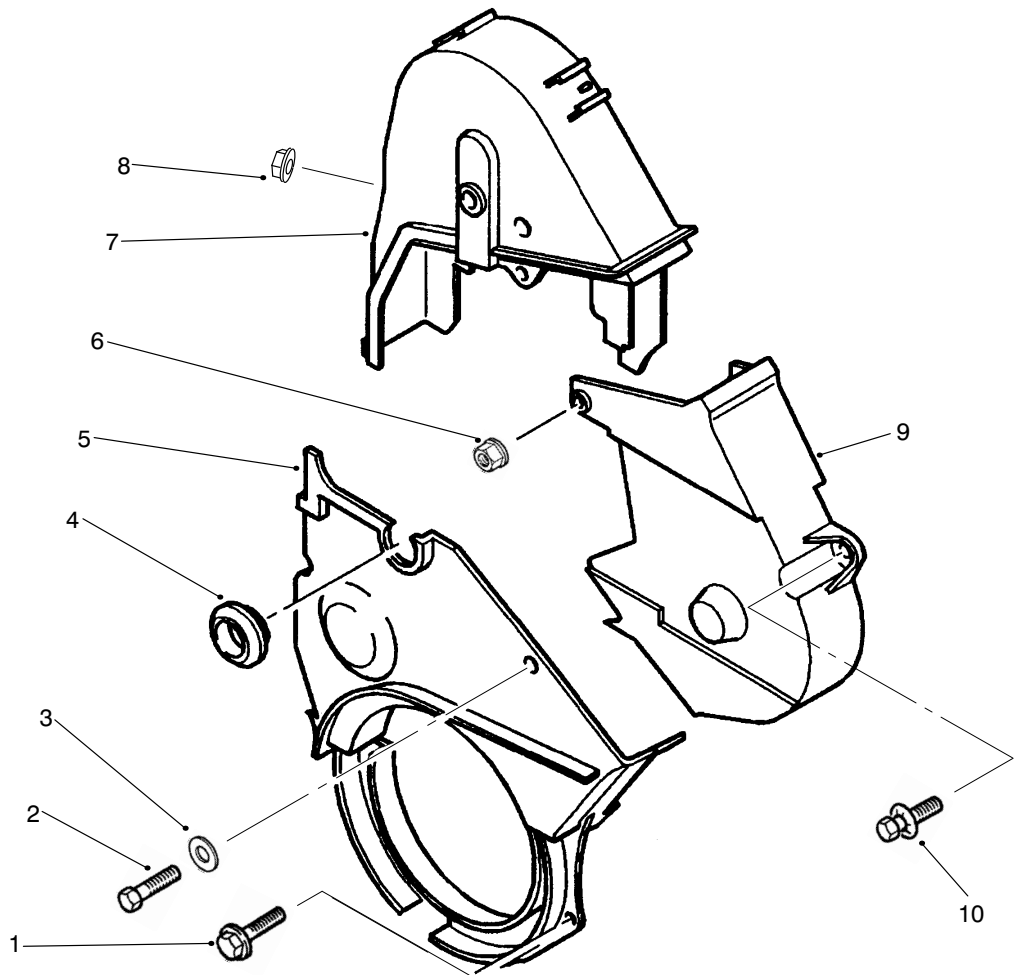 

T-2140-2

TIMING COVER

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-3132	Screw	2	6	94-3133	Nut W/Washer	1
2	94-3130	Screw	1	7	94-3127	Case-Timing, Left	1
3	94-3125	Washer-Flat	1	8	94-3134	Nut	1
4	94-3129	Plug	1	9	94-3128	Case-Timing, Right	1
5	94-3126	Protector-Lower	1	10	94-3131	Screw	1

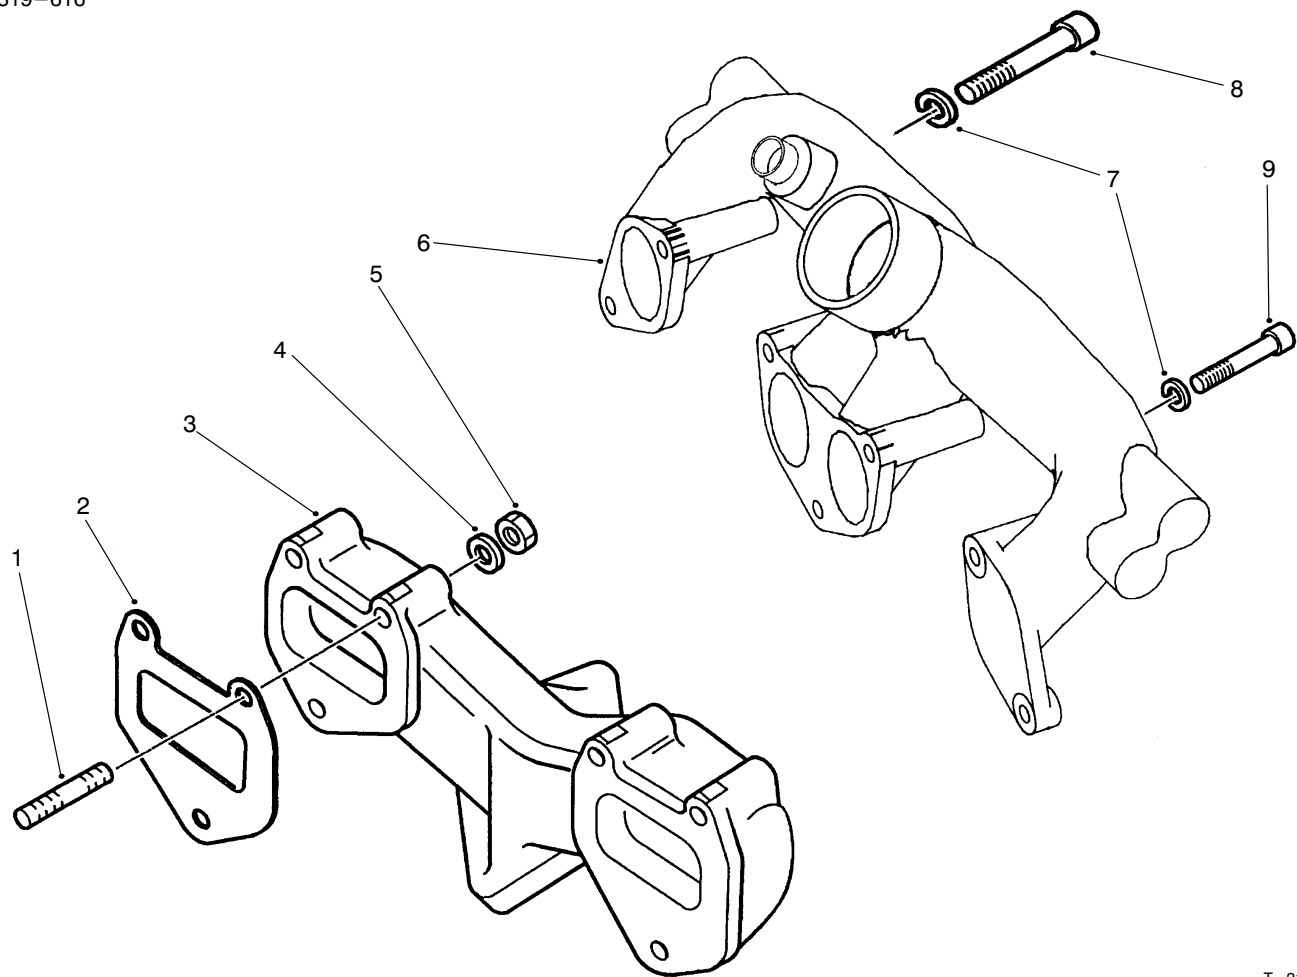 


T-2149-3

INTAKE & EXHAUST MANIFOLD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	77-3300	Stud	6
2	77-3310	Gasket	2
3	77-3340	Manifold-Exhaust	1
4	68-9420	Washer-Lock	6
5	77-3320	Nut-Hex	6

Ref. No.	Part No.	Description	No. Used
6	94-3215	Manifold-Intake	1
7	94-3164	Washer-Spring	7
8	94-3216	Screw	5
9	94-3217	Screw	4
*	94-3218	Screw	1

 
*Not Illustrated

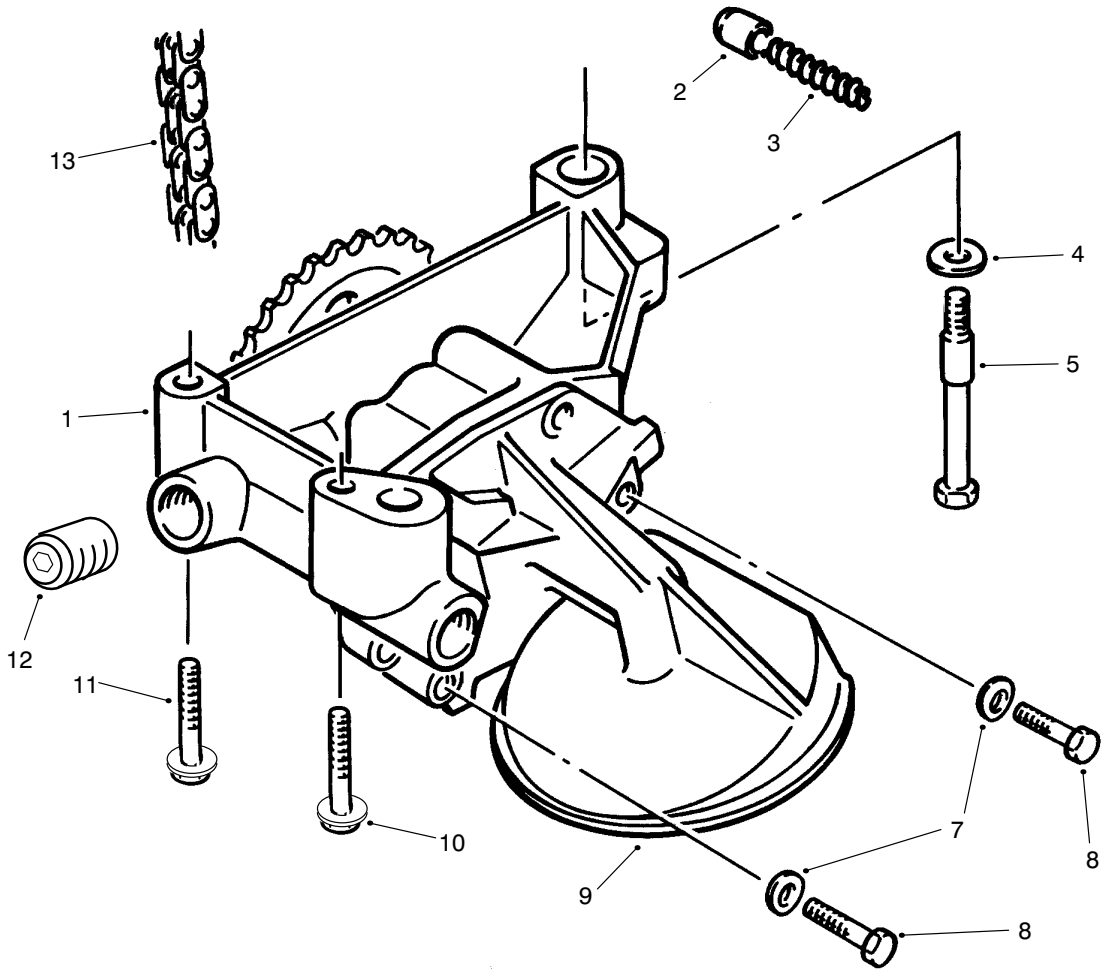

T-0964-2

OIL PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	76-5070	Asm-Oil Pump	1	8	94-3124	Screw-Hex. Hd.	2
2	94-3176	Gear-Oil Pump	1	9	94-3178	Strainer	1
3	76-5090	Spring-Piston	1	10	77-3470	Screw	1
4	94-3179	Washer-Spring	3	11	77-3490	Screw	1
5	76-5100	Bolt-Shoulder	1	12	94-3177	Plug	2
7	76-5010	Washer-Spring	5	13	76-5170	Chain-Pump Drive	1

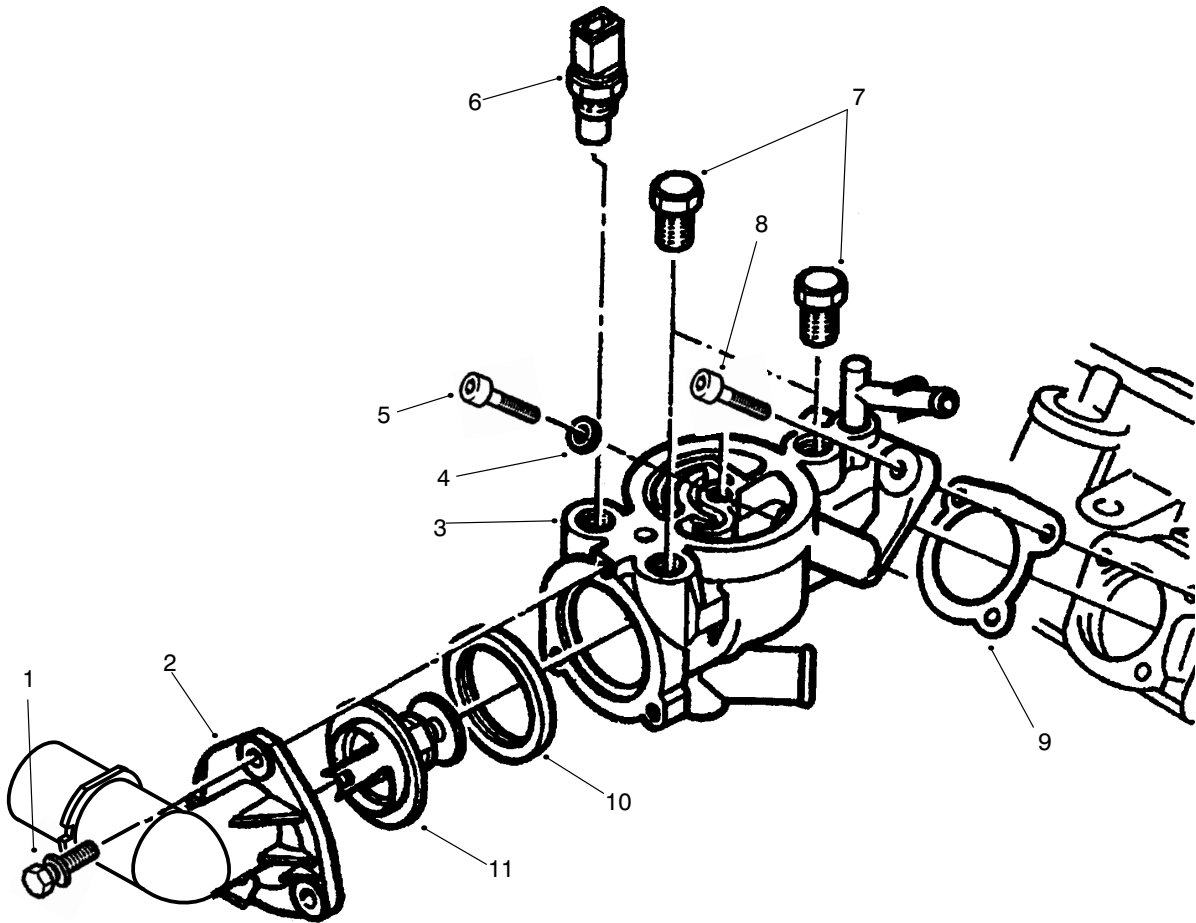 


T-2143-3

COLLECTOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	94-3131	Screw	3
2	94-3208	Stub-Outlet	1
3	94-3205	Box-Outlet	1
4	94-3207	Ring	1
5	94-3214	Screw	1
6	94-3211	Temp Sending Unit	1

Ref. No.	Part No.	Description	No. Used
7	94-3212	Plug	2
8	94-3213	Screw	1
9	94-3206	Gasket	1
10	94-3210	Gasket	1
11	94-3209	Thermostat	1

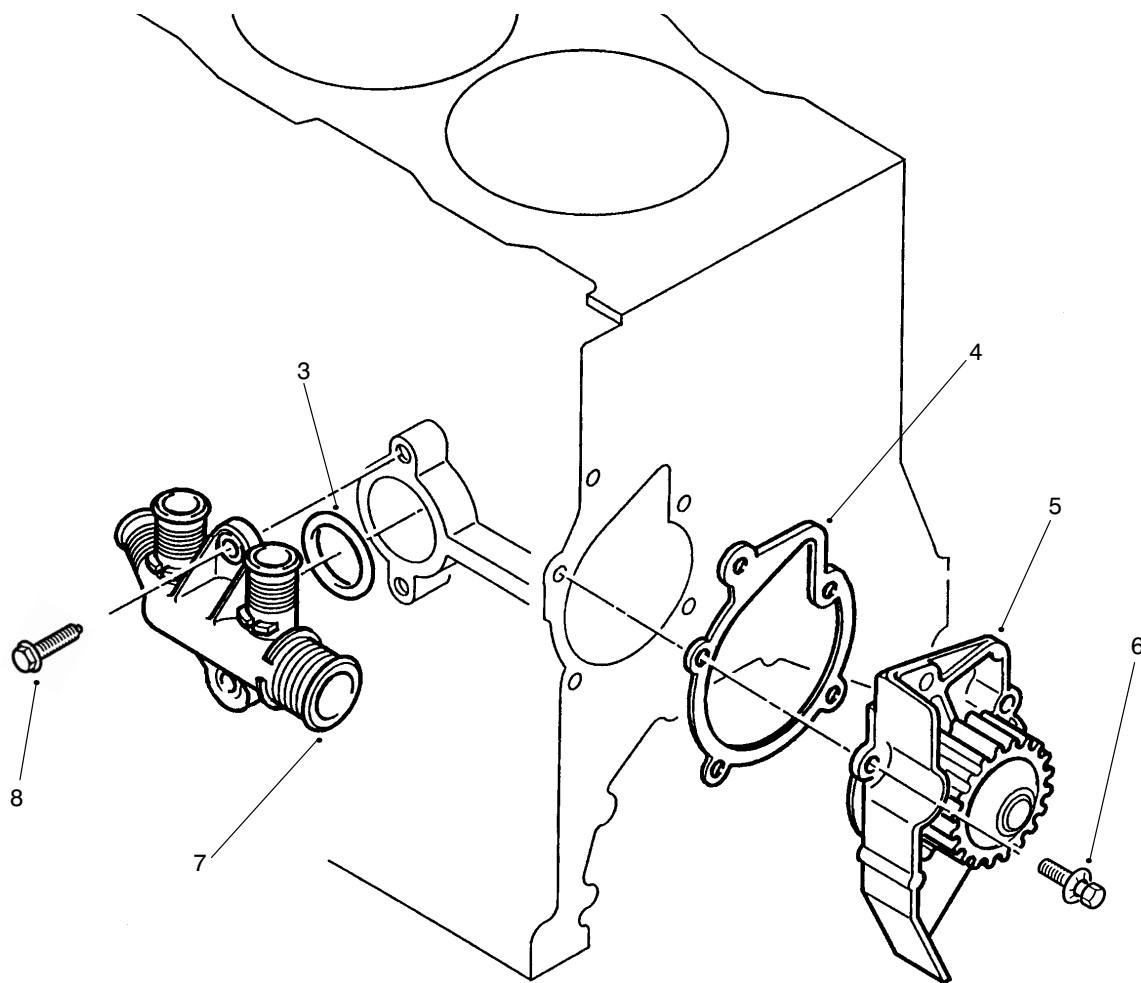 


T-2144-1

WATER PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
3	94-3197	O-Ring	1
4	94-3195	Gasket-Pump, Water	1
5	94-3194	Cover-Pump, Water (Incl. Ref. #4)	1

Ref. No.	Part No.	Description	No. Used
6	76-5500	Screw	5
7	94-3196	Inlet-Water	1
8	94-3198	Screw	2

 3319-616

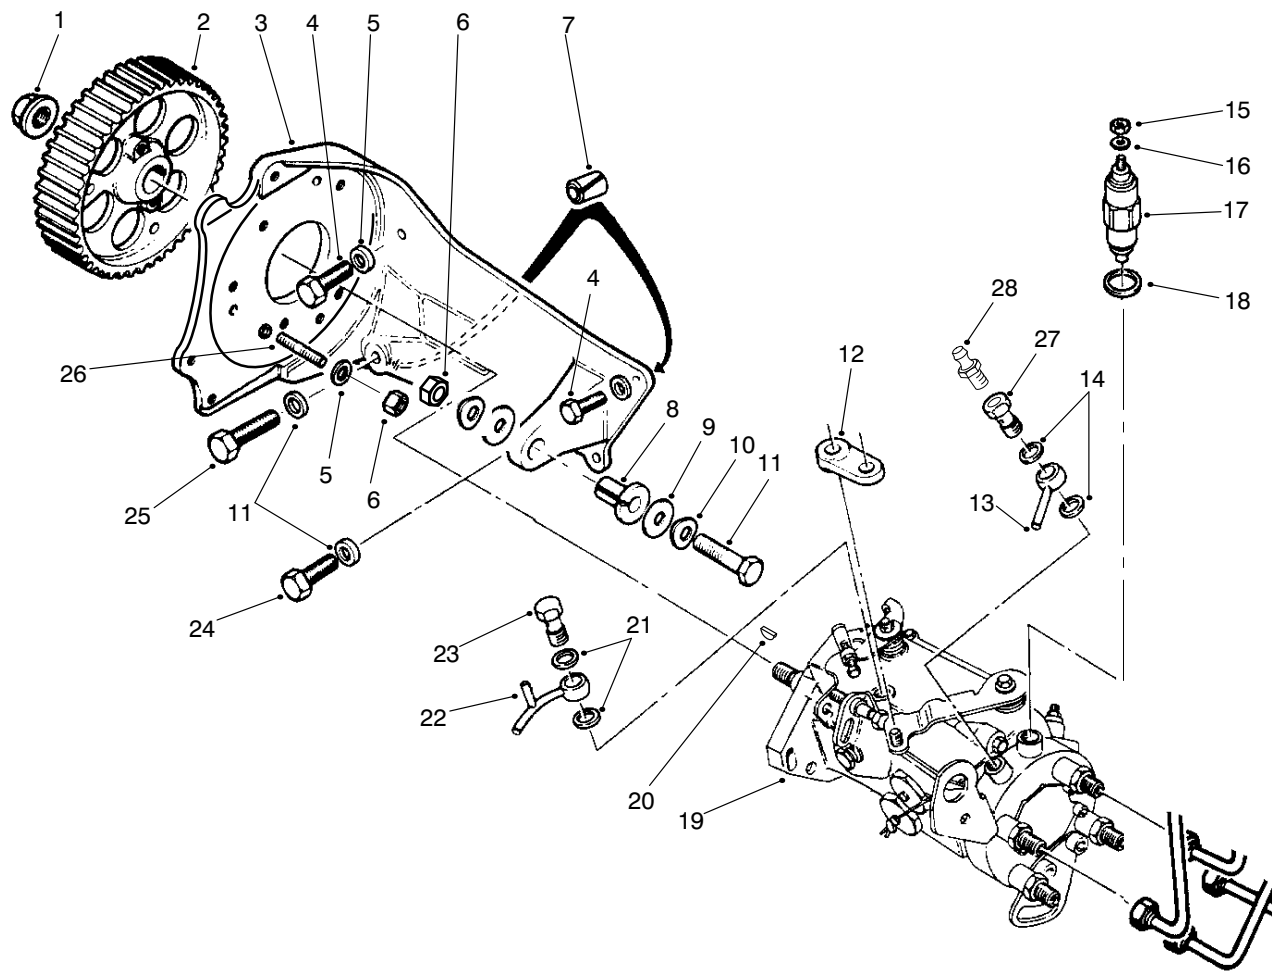


T-2146-1

FUEL INJECTION PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-4950	Nut	1
2	76-4940	Gear-Pump, Injection	1
3	94-3220	Bracket	1
4	94-3225	Screw	2
5	76-4930	Washer	3
6	94-3165	Nut	4
7	74-8610	Pin	2
8	74-8630	Bushing-Flange	1
9	94-3224	Washer-Flat	2
10	94-3164	Washer-Spring	6
11	94-3221	Screw	1
12	74-8650	Journal	1
13	74-8670	Union-Inlet	1
14	74-8680	Gasket	2

Ref. No.	Part No.	Description	No. Used
15	94-3251	Nut	1
16	74-8710	Washer	1
17	93-5856	Valve-Solenoid	1
18	94-3274	O-Ring	1
19	94-3219	Pump-Injection	1
20	94-3222	Key	1
21	74-8870	Gasket	2
22	94-3249	Tube-Outlet	1
23	94-3250	Screw-Connection	1
24	94-3161	Screw	1
25	94-3223	Screw	1
26	76-4910	Stud	3
27	94-9969	Screw-Connection	1
28	93-5835	Screw-Purge	1

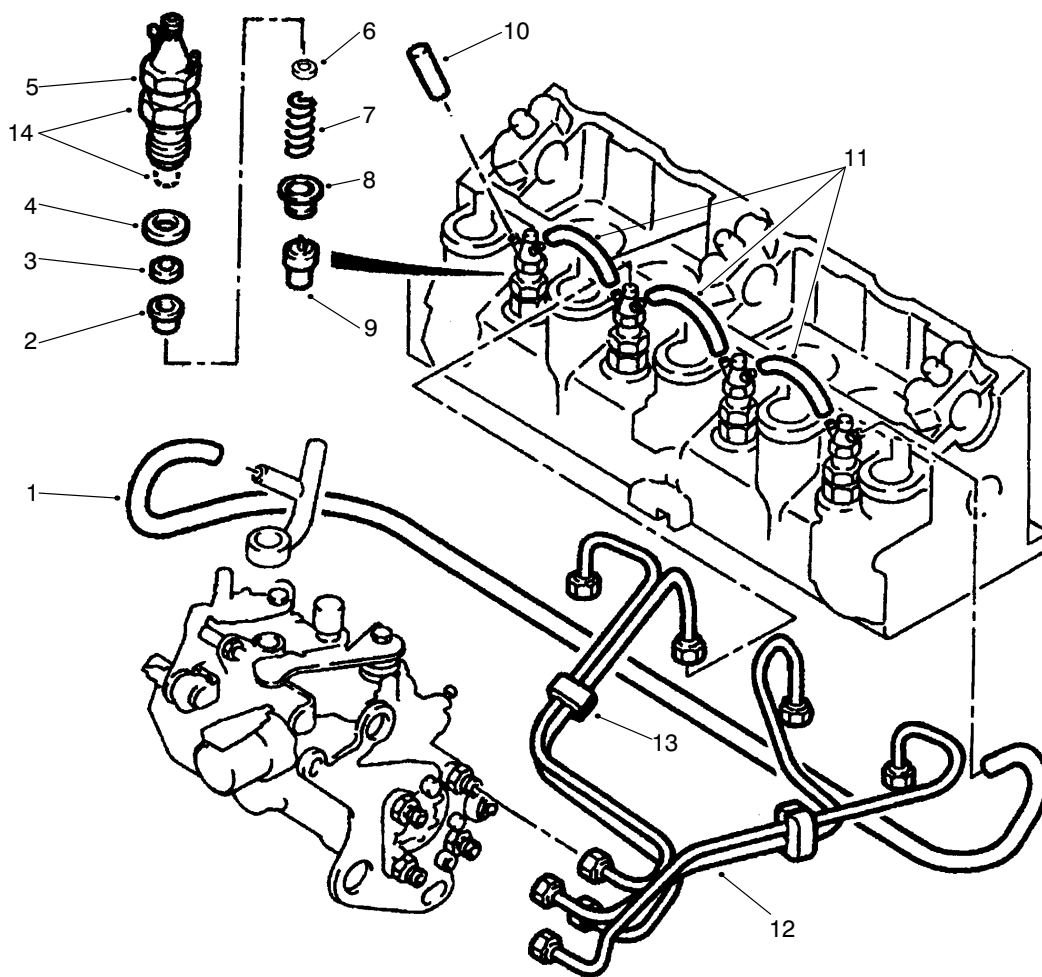 


T-2145-2

FUEL INJECTOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-3230	Hose	1	6	94-3242	Washer-1.30 mm	4
2	76-5540	Plug	4	*	94-3243	Washer-1.33 mm	4
3	76-5530	Gasket-Injector	4	*	94-3244	Washer-1.36 mm	4
4	94-3226	Gasket-Injector	4	*	94-3245	Washer-1.39 mm	4
5	76-5520	Holder-Injector	4	*	94-3246	Washer-1.42 mm	4
6	94-3232	Washer-0.79 mm	4	*	94-3247	Washer-1.45 mm	4
*	94-3233	Washer-0.82 mm	4	*	94-3248	Washer-1.48 mm	4
*	94-3234	Washer-0.85 mm	4	7	94-3228	Spring	4
*	94-3235	Washer-0.88 mm	4	8	94-3227	Spacer	4
*	94-3236	Washer-0.91 mm	4	9	94-8147	Nozzle-Injector	4
*	94-3237	Washer-0.94 mm	4	10	74-8770	Plug	1
*	94-3238	Washer-0.97 mm	4	11	94-3229	Union	3
*	94-3239	Washer-1.00 mm	4	12	74-8750	Pipe	1
*	94-3240	Washer-1.03 mm	4	13	94-3231	Bracket	2
*	94-3241	Washer-1.06 mm	4	14	76-5600	Asm-Holder, Injector	4

 *Not Illustrated

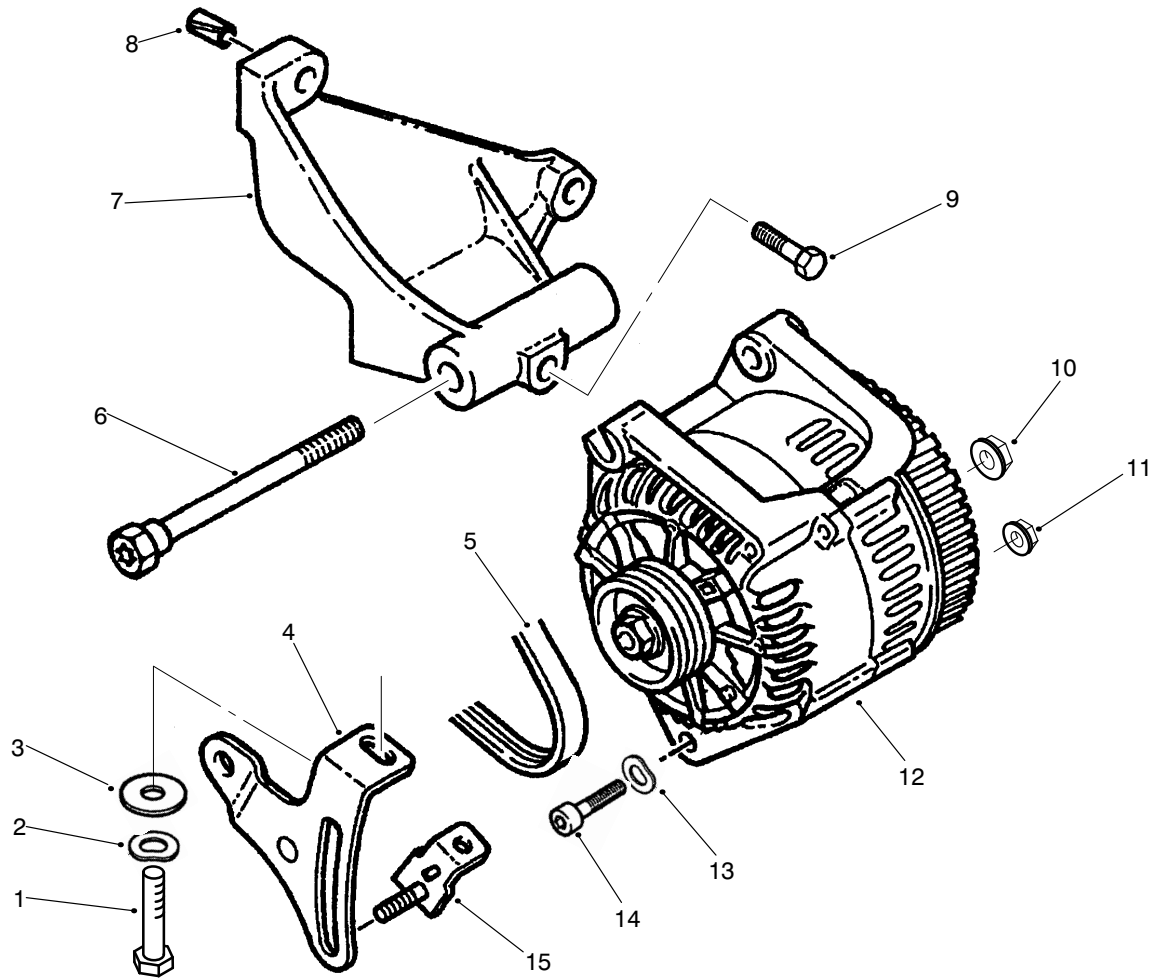


T-2147-2

ALTERNATOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	76-5060	Screw	1
2	76-5010	Washer-Spring	1
3	94-3260	Washer-Flat	1
4	94-3255	Slide	1
5	94-3256	Belt	1
6	94-3254	Screw	1
7	94-3253	Bracket	1
8	74-8610	Pin	2

Ref. No.	Part No.	Description	No. Used
9	94-3259	Screw	1
10	94-3262	Nut	1
11	94-3261	Nut	1
12	94-3252	Alternator	1
13	94-3257	Washer-Spring	1
14	94-3258	Screw	1
15	76-4990	Bracket	1

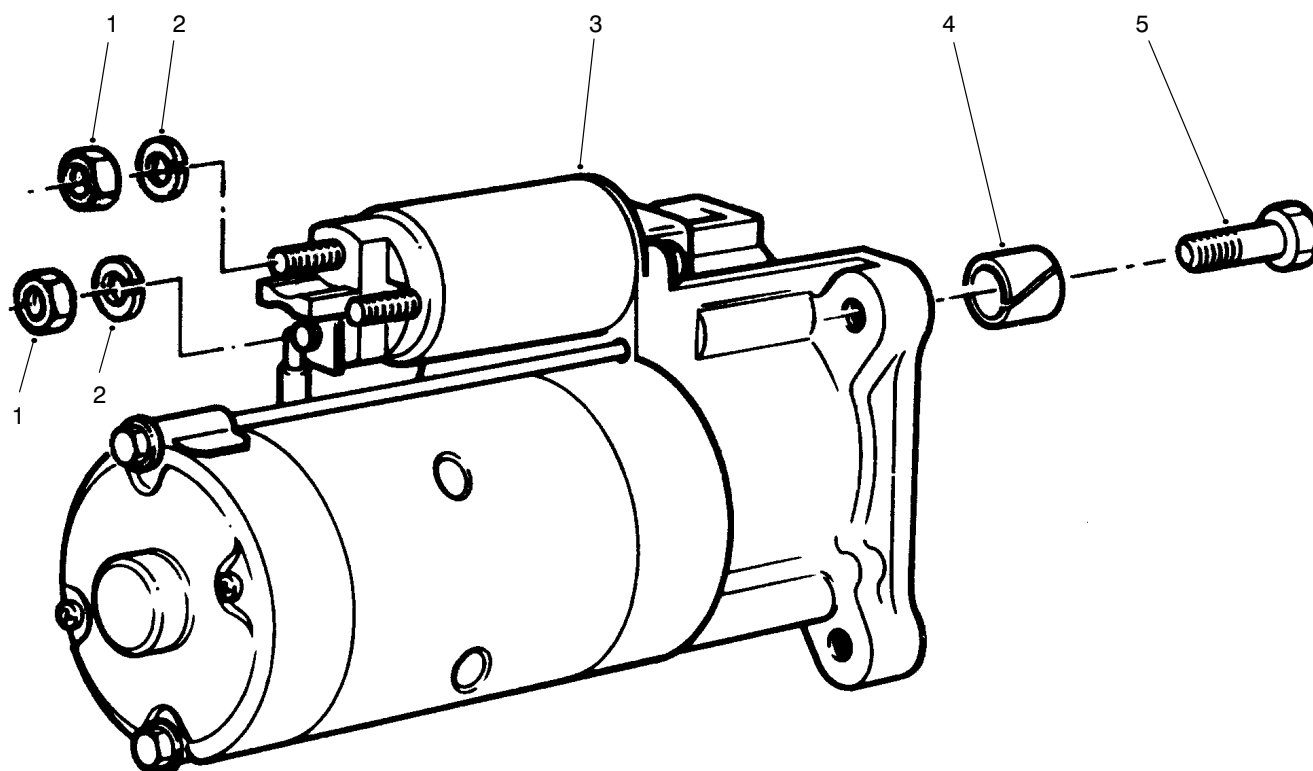 


T-0968-1

STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	46-0330	Nut-Hex	2
2	76-5570	Washer-Lock	2
3	94-3263	Starter	1
4	76-5590	Sleeve-Spring	1

Ref. No.	Part No.	Description	No. Used
5 *	48-7810 94-3275	Screw-Mounting Solenoid-Starter	3 1

 *Not Illustrated

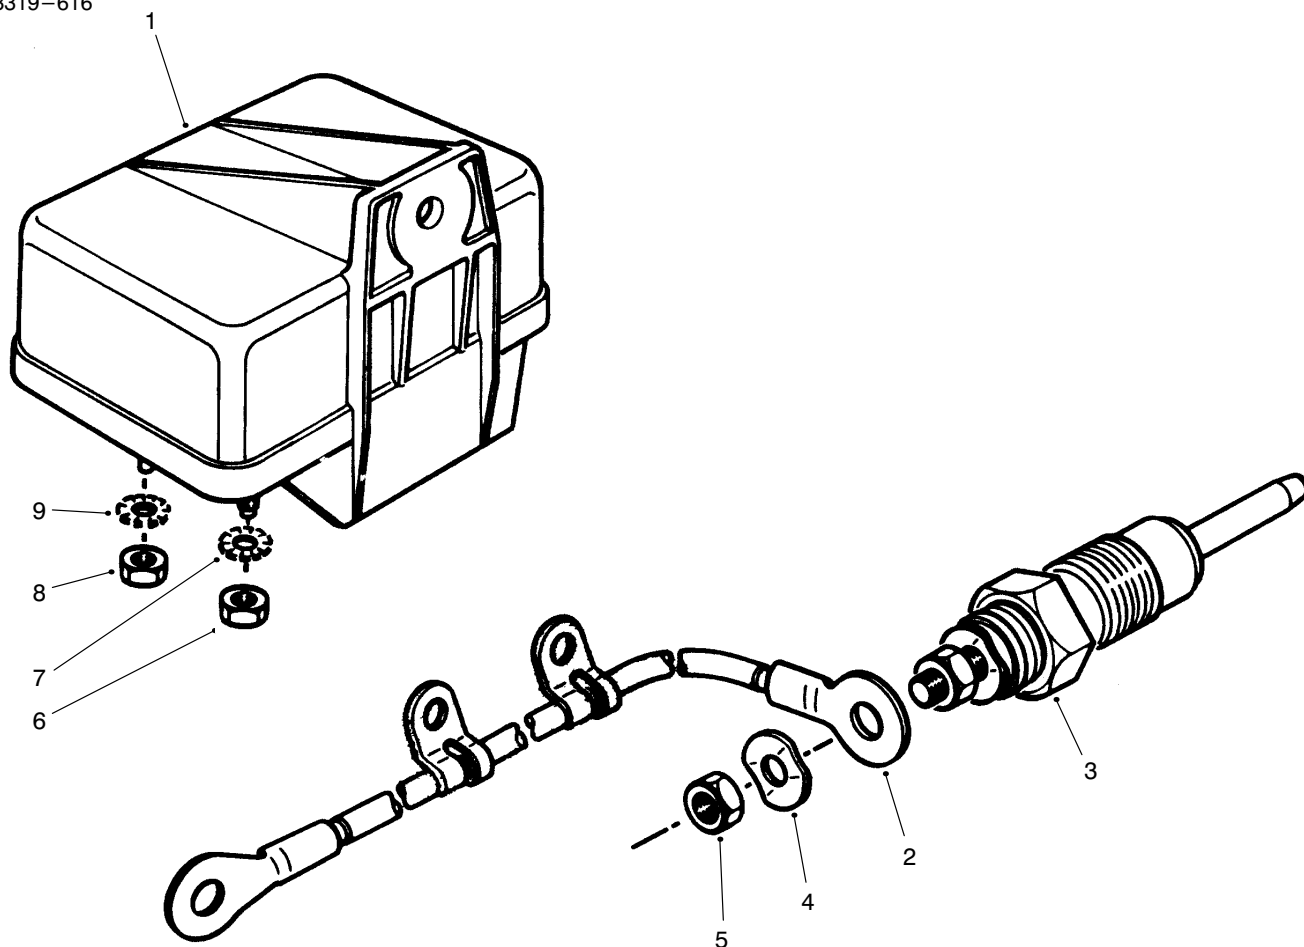


T-0972-1

GLOW PLUG & GLOW RELAY

Ref. No.	Part No.	Description	No. Used
1	76-5260	Relay-Glow Plug	1
2	94-3265	Cable-Glow Plug	4
3	94-3264	Plug-Glow	4
4	76-5290	Washer-Spring	4
5	94-3266	Nut-Hex.	4

Ref. No.	Part No.	Description	No. Used
6	94-3267	Nut-Lock	1
7	76-5310	Washer-E.T.L.W.	1
8	94-3251	Nut-Lock	1
9	74-8710	Washer-E.T.L.W.	1

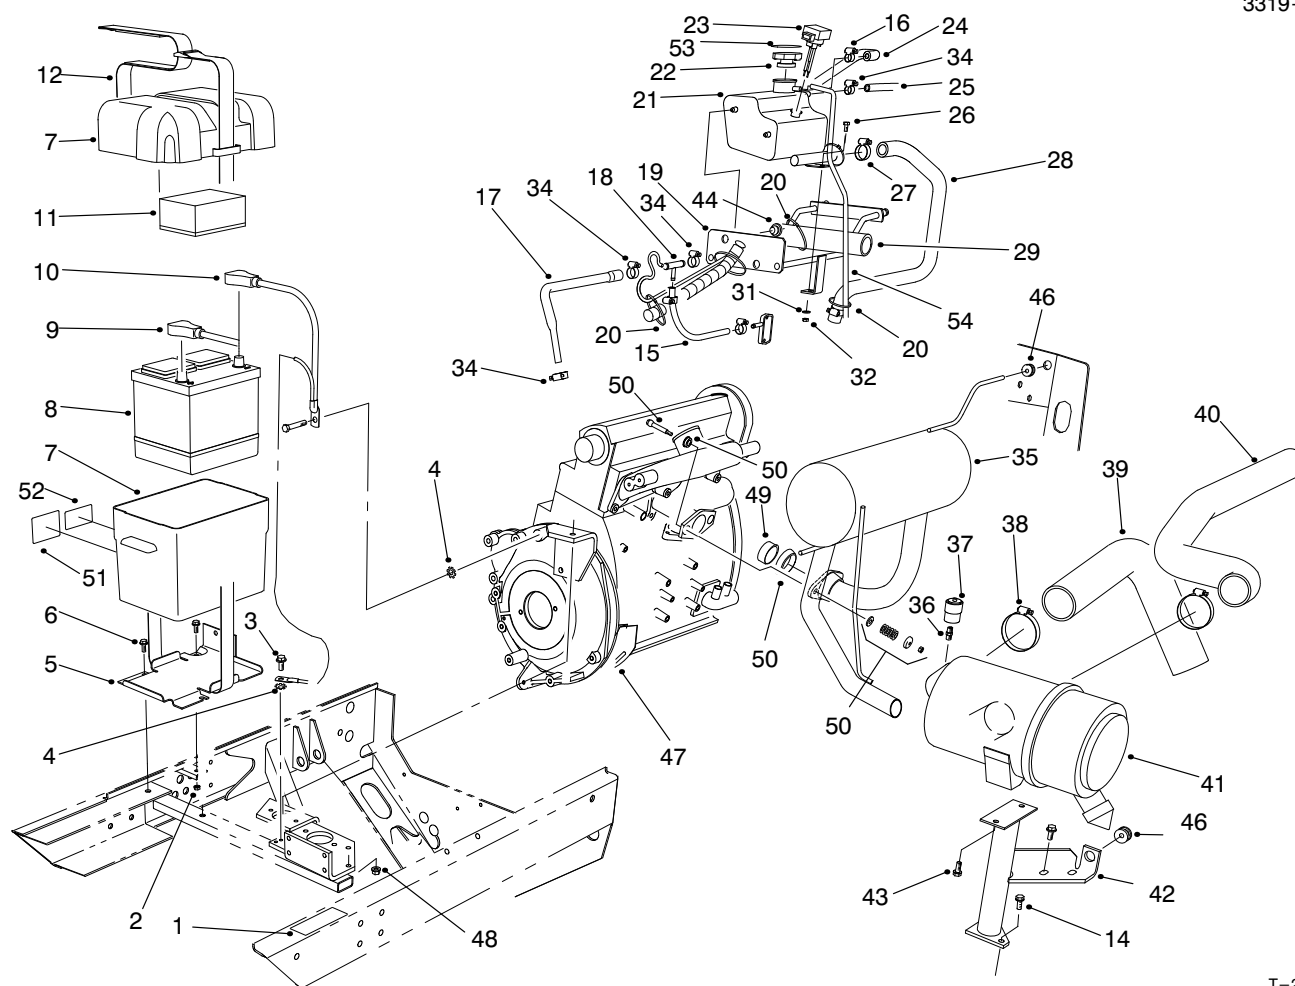 


T-2373-5

ENGINE COMPONENTS ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-9198	Decal-Hot Surface	1	27	2412-129	Clamp-Hose	2
1	93-1265	Decal-Hot Surface (Europe)	1	28	93-7589	Hose-Overflow	1
1	94-4578	Decal-Hot Surface (Japan)	1	29	93-4215	Hose-Radiator, Upper Rear	1
2	3296-29	Nut-Lock	1	31	33093-00	Washer	1
4	3255-9	Washer-Lock, Ext. Tooth	2	32	33023-00	Nut-Lock	1
5	93-7974	Plate-Battery, Box	1	34	2412-36	Clamp-Hose	4
6	3234-5	Screw-Flange Hd.	3	35	93-9178	Muffler	1
7	93-7595	Asm-Box, Battery	1	*	94-2849	Muffler-Spark Arrestor	1
†8		Battery	1	36	94-1416	Adapter-Indicator	1
9	75-1370	Cable-Battery, Positive	1	37	93-9164	Indicator-Service	1
10	94-1411	Cable-Battery, Negative	1	38	2412-125	Clamp-Hose	2
11	93-7968	Pad-Foam, Battery	1	39	94-2624	Hose-Manifold	1
12	94-1445	Strap-Battery	1	40	93-7584	Hose-Intake	1
14	33105-030	Screw-Hex. Hd. Flange	2	41	93-7485	Asm-Filter, Air	1
15	63-7622	Hose-Fuel	1	42	94-8108	Support-Filter, Air	1
16	2412-108	Clamp-Hose	3	43	33104-016	Screw-Hex. Hd. Flange	2
17	94-2630	Hose-Return	1	†44	94-2801	Grommet-Rubber	2
18	93-4207	Fitting-Tee	1	46	94-2812	Grommet	2
19	94-1408	Wireform-Overflow	1	†47	77-3600	Plate-Closing	1
20	3290-378	Tie-Cable	5	48	33005-00	Nut-Hex. Flange	2
†21	98-1805	Box-Degassing	1	†49	94-2815	Sleeve-Exhaust Flange	1
†22	94-2800	Cap-Radiator	1	†50	94-2814	Kit-Exhaust Coupler	1
22	66-3240	Cap-Radiator (Europe)	1	51	93-6668	Decal-Charging (Europe)	1
†23	94-9984	Sensor-Water Level	1	52	93-7276	Decal-Danger (Europe)	1
24	93-7591	Hose-Return	1	53	93-7840	Decal-Cap (Europe)	1
25	92-7424	Hose-Overflow, Radiator	1	54	55-4130	Hose-Fuel	1
26	33103-020	Screw-Hex. Hd. Flange	1				

† Furnished with engine.

 ‡ Obtain locally.

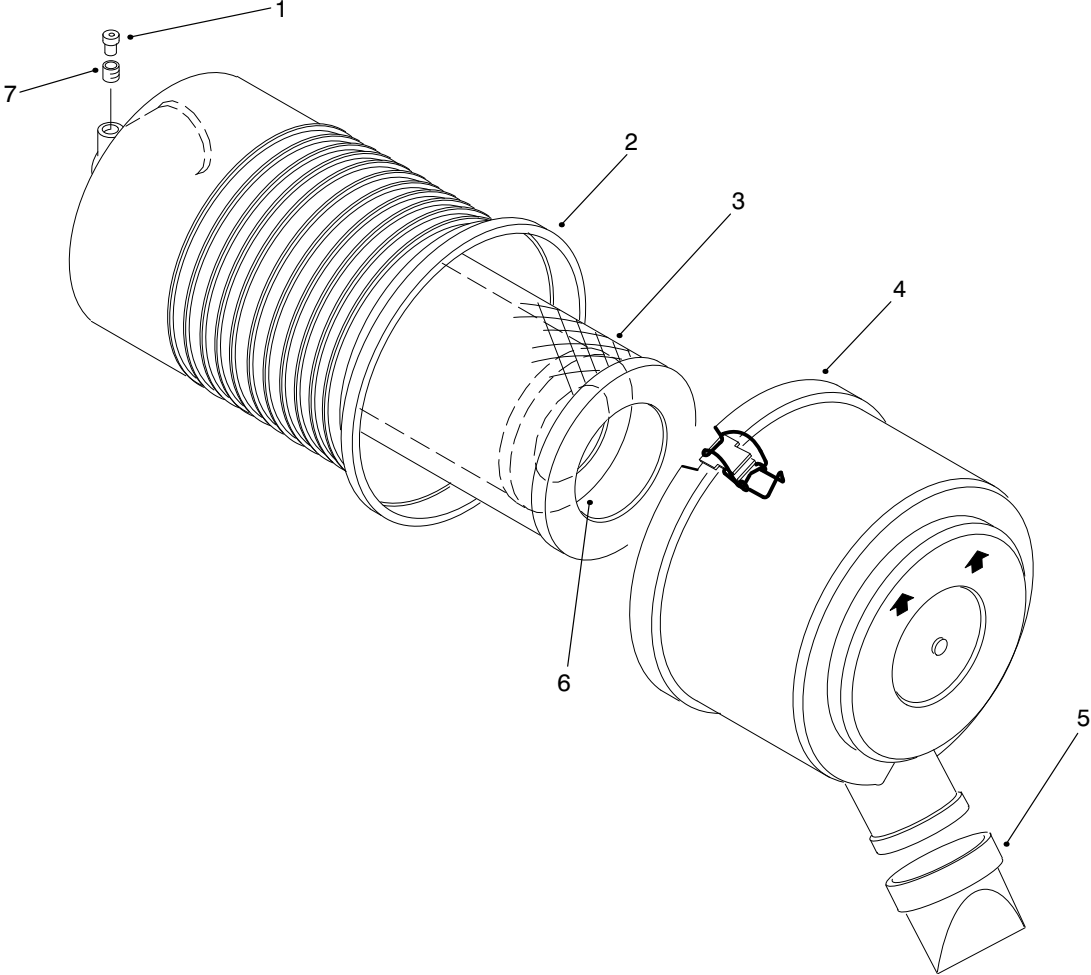


T-2076-1

AIR CLEANER ASSEMBLY NO. 93-7485

Ref. No.	Part No.	Description	No. Used
1	93-9164	Indicator	1
2		Asm-Body	1
3	93-9162	Filter-Primary	1
4	93-5986	Asm-Cover	1


Ref. No.	Part No.	Description	No. Used
5	94-1414	Valve-Vacuator	1
6	93-9163	Filter-Safety	1
7	94-1416	Asm-Adaptor	1

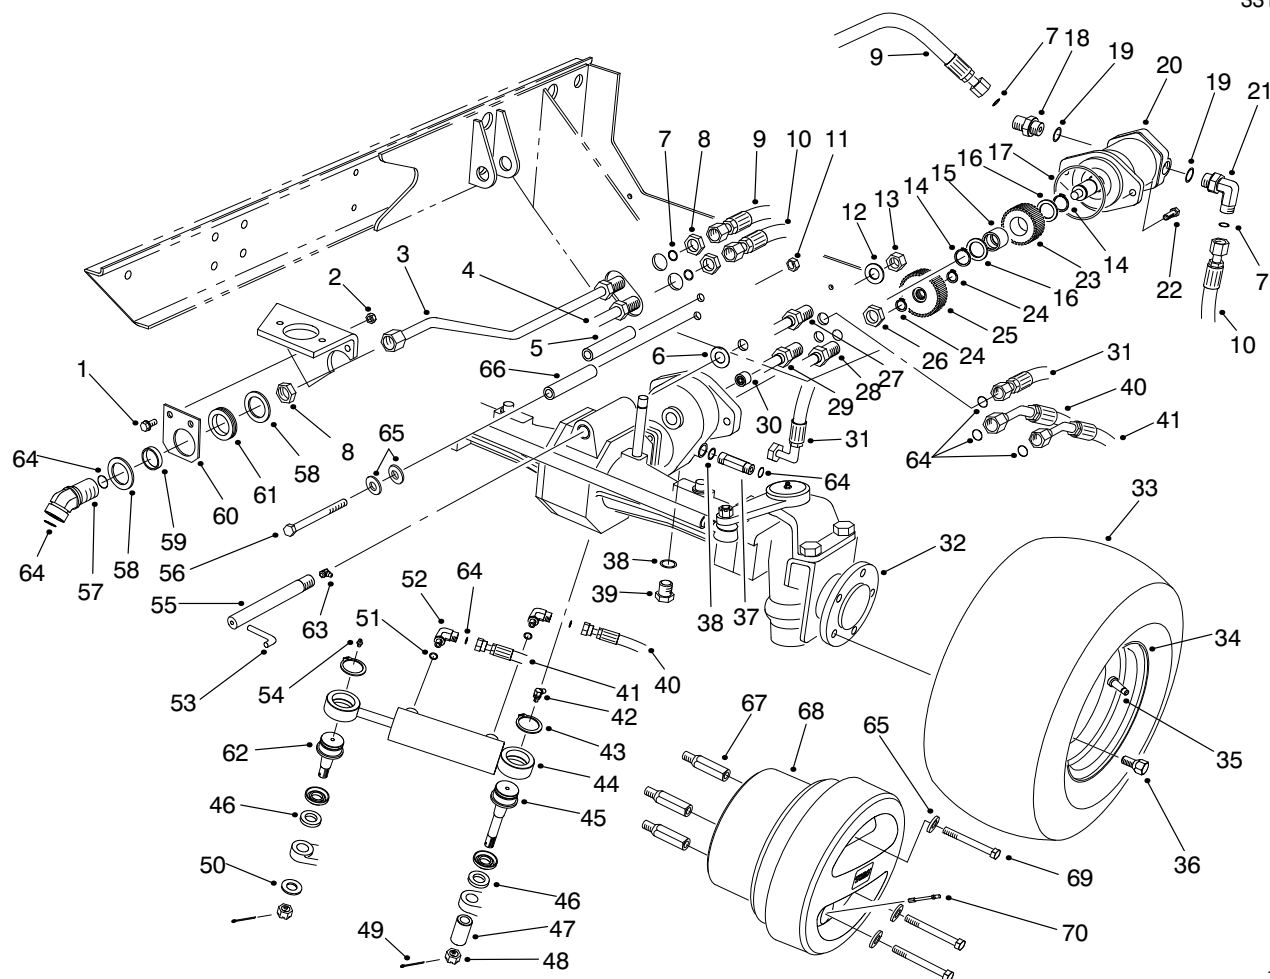 

T-2077-5

4-WD AXLE ASSEMBLY (Model No. 03801)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	323-6	Screw-Hex. Hd.	2	24	32120-15	Ring-Retaining	2
2	32128-21	Nut-Hex. Hd. Flange	2	25	92-7586	Gear-Driven	1
3	92-7472	Asm-Tube, Rear	1	26	340-70	Nut-Lock	2
4	92-7473	Asm-Tube, Rear	1	27	92-7553	Asm-Tube, Rear Drain	1
5	76-8350	Stop-Axle, 4WD	2	28	92-7495	Asm-Tube, Steering	1
6	93-7247	Washer-Thrust	1	29	92-7494	Asm-Tube, Steering	1
7	237-58	O-Ring	6	30	74-5700	Bearing-Needle	1
8	340-126	Nut-Bulkhead	3	31	92-7534	Assembly-Hose	1
9	92-7536	Asm-Hose, Rear Motor	1	32	93-7780	Axle-4WD	1
10	92-7537	Asm-Hose, Rear Motor	1	33	86-5910	Tire	2
11	3296-23	Nut-Lock	2	34	217-125	Wheel	2
12	3256-29	Washer-Flat	1	35	232-27	Stem-Valve	2
13	94-8000	Nut-Lock	1	36	74-5500	Bolt-Wheel	10
14	32151-96	Ring-Retaining	1	37	340-2	Adapter	1
15	71-4580	Clutch-Roller	1	38	237-42	O-Ring	2
16	71-4590	Washer-Thrust	2	39	353-508	Plug	1
17	237-166	O-Ring	1	40	92-7539	Asm-Hose	1
18	340-9	Fitting-Hydraulic (Incl. Ref. #7 & 19)	1	41	92-7538	Asm-Hose	1
19	237-81	O-Ring	2	42	302-60	Fitting-Grease 90°	1
20	92-7386	Motor-Hydraulic	1	43	32151-104	Ring-Retaining	2
21	340-142	Fitting-Hydraulic 90° (Incl. Ref. #7 & 19)	1	44	94-8141	Cylinder-Hydraulic	1
22	325-4	Screw-Hex. Hd.	2	45	92-5839	Ball Joint	1
23	92-7587	Gear-Driver	1	46	92-5833	Spacer-Ball Joint	2
				47	92-5844	Spacer-Ball Joint	1
				48	32136-14	Nut-Hex. Slotted	2

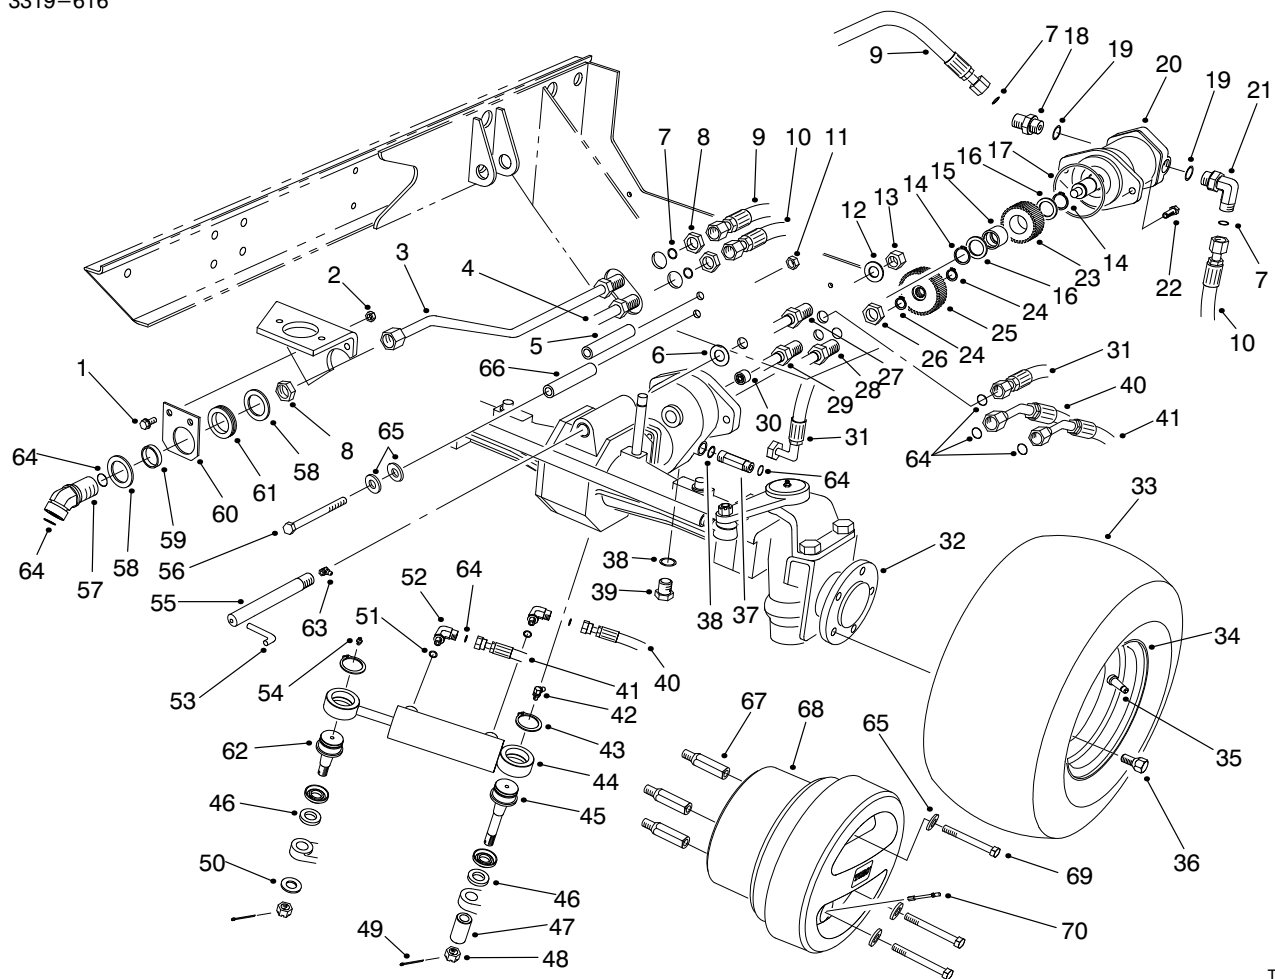 


T-2077-5

4-WD AXLE ASSEMBLY (Model No. 03801)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
49	3272-12	Pin-Cotter	2	60	92-7552	Bracket-Bulkhead	1
50	92-5836	Washer-Axle	1	61	240-7	Grommet	1
51	237-78	O-Ring	2	62	92-5838	Ball Joint	1
52	340-97	Fitting-Hydraulic 90° (Incl. Ref. #51 & 64)	2	63	302-33	Fitting-Grease	1
53	92-7604	Pin-Stop	1	64	237-22	O-Ring	6
54	302-5	Fitting-Grease	1	65	3256-26	Washer	1
55	94-8115	Pin-Axle, Pivot	1	66	88-1550	Stop-Axle	2
56	325-33	Screw-Hex. Hd. 2WD	2	67	94-2806	Adaptor-Nut (Europe)	6
56	325-33	Screw-Hex. Hd. 4WD	4	68	94-3052	Weight-Wheel (Europe)	2
57	92-7646	Fitting-Hydraulic 45° (Incl. Ref. #7)	1	69	3256-26	Washer-Flat (Europe)	6
58	69-8910	Washer	2	70	3213-14	Screw-HH (Europe)	6
59	69-8900	Spacer	1	71	94-3063	Extension-Stem, Valve (Europe)	2

 *Not Illustrated

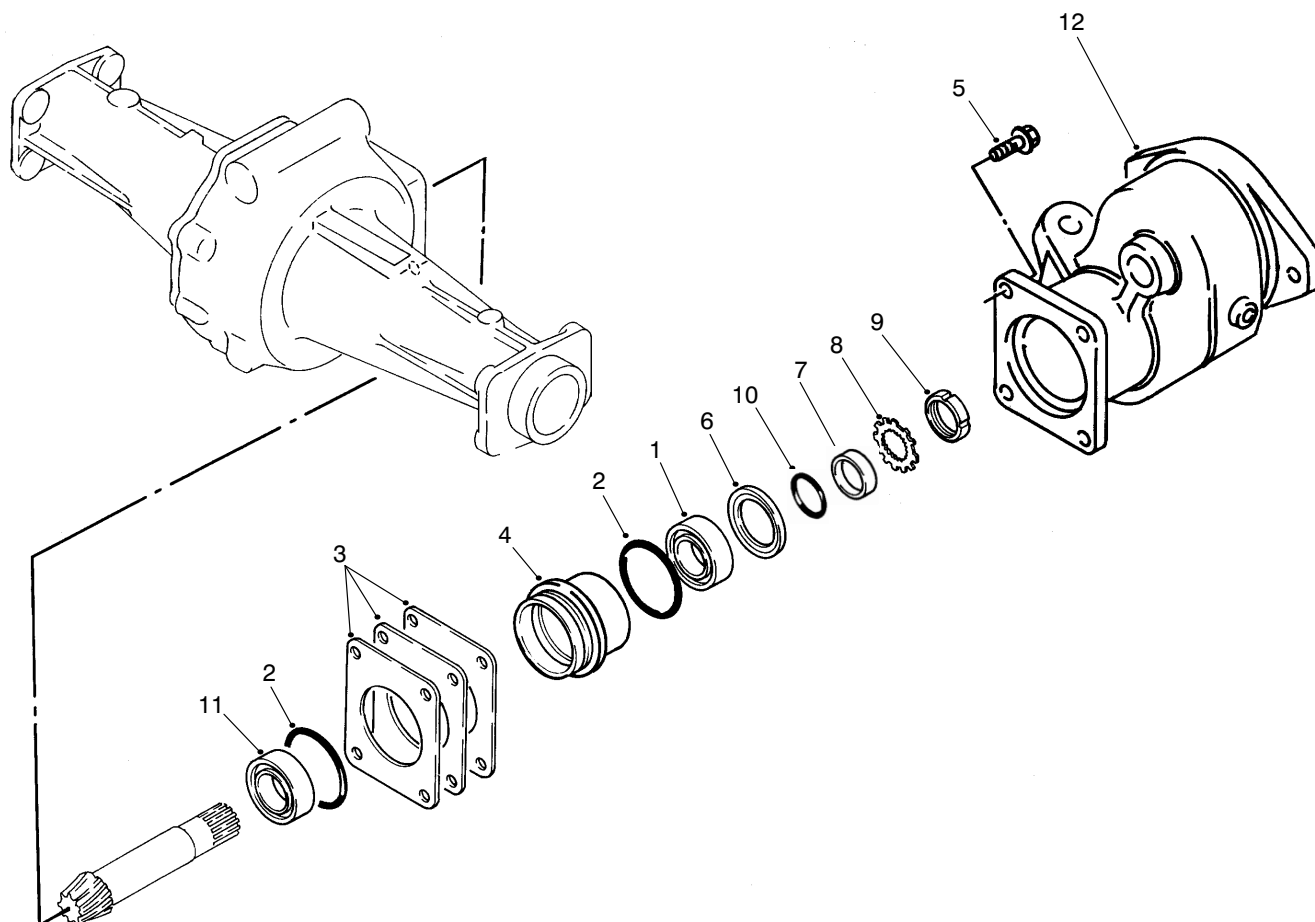


T-1109-3

SLEEVE ASSEMBLY AXLE NO. 93-7780 (Model No. 03801 Only)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	76-7330	Bearing	1	7	76-7350	Bushing	1
2	76-7400	O-Ring	2	8	76-7380	Washer	1
3	76-7410	Shim-0.1 mm	A/R	9	76-7390	Nut-Lock	1
*	76-7420	Shim-0.2 mm	A/R	10	76-7360	O-Ring	1
*	76-7430	Shim-0.4 mm	A/R	11	76-7370	Bearing	1
4	76-7320	Sleeve	1	12	76-8070	Adapter	1
5	93-7773	Bolt	4	*	77-4010	Shim Set (Incl. Ref. #3)	1
6	76-7340	Seal-Oil	1				

 *Not Illustrated

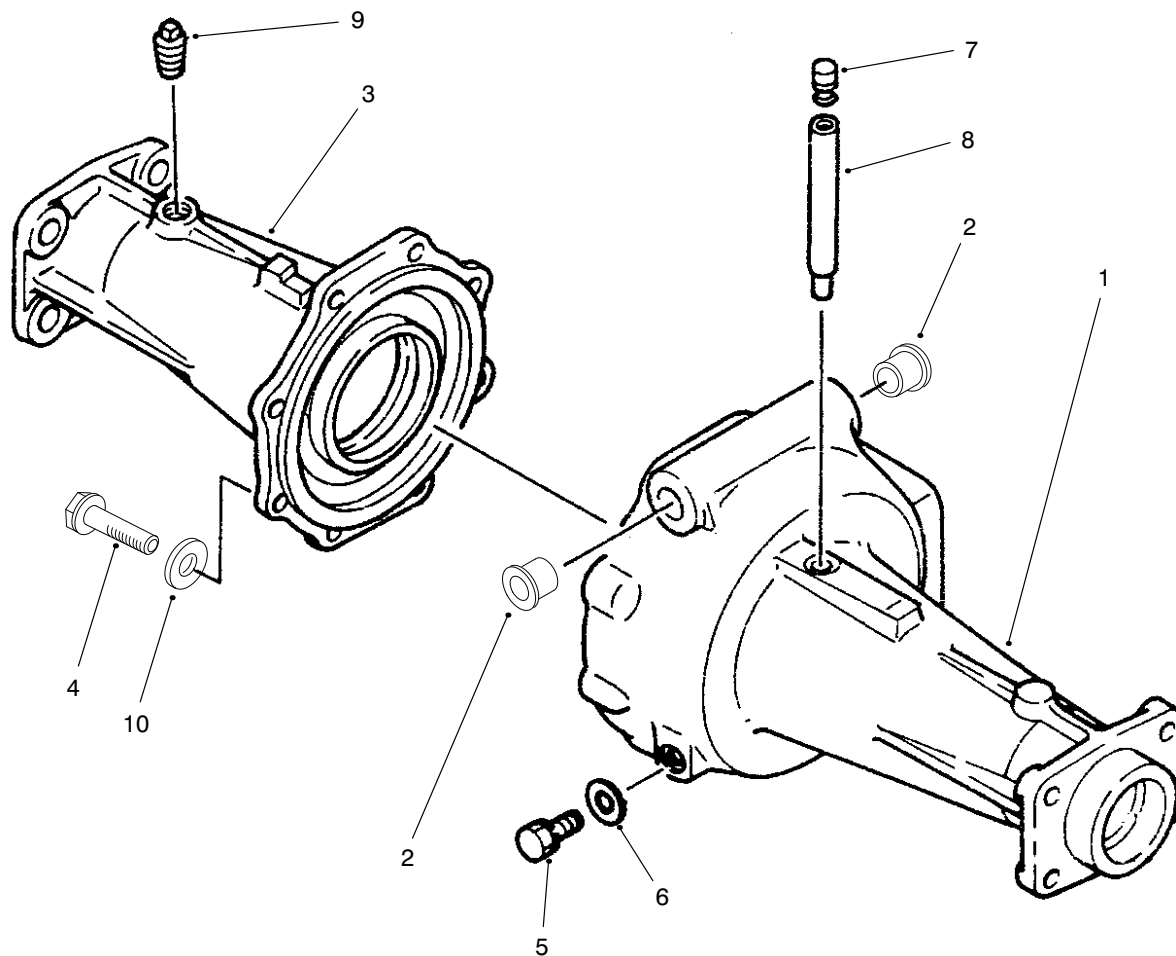


T-1112-3

AXLE HOUSING ASSEMBLY

AXLE NO. 93-7780 (Model No. 03801 Only)

Ref. No.	Part No.	Description	No. Used
1	93-7778	Housing-Axle A	1
2	93-7787	Bushing-Flange	2
3	93-7779	Housing-Axle B	1
4	93-7782	Screw-HHF	8
5	76-7110	Plug	1

Ref. No.	Part No.	Description	No. Used
6	76-7120	Seal-Washer	1
7	76-7480	Plug-Vent	1
8	76-7470	Pipe	1
9	76-7140	Plug	1
10	93-7781	Washer	8

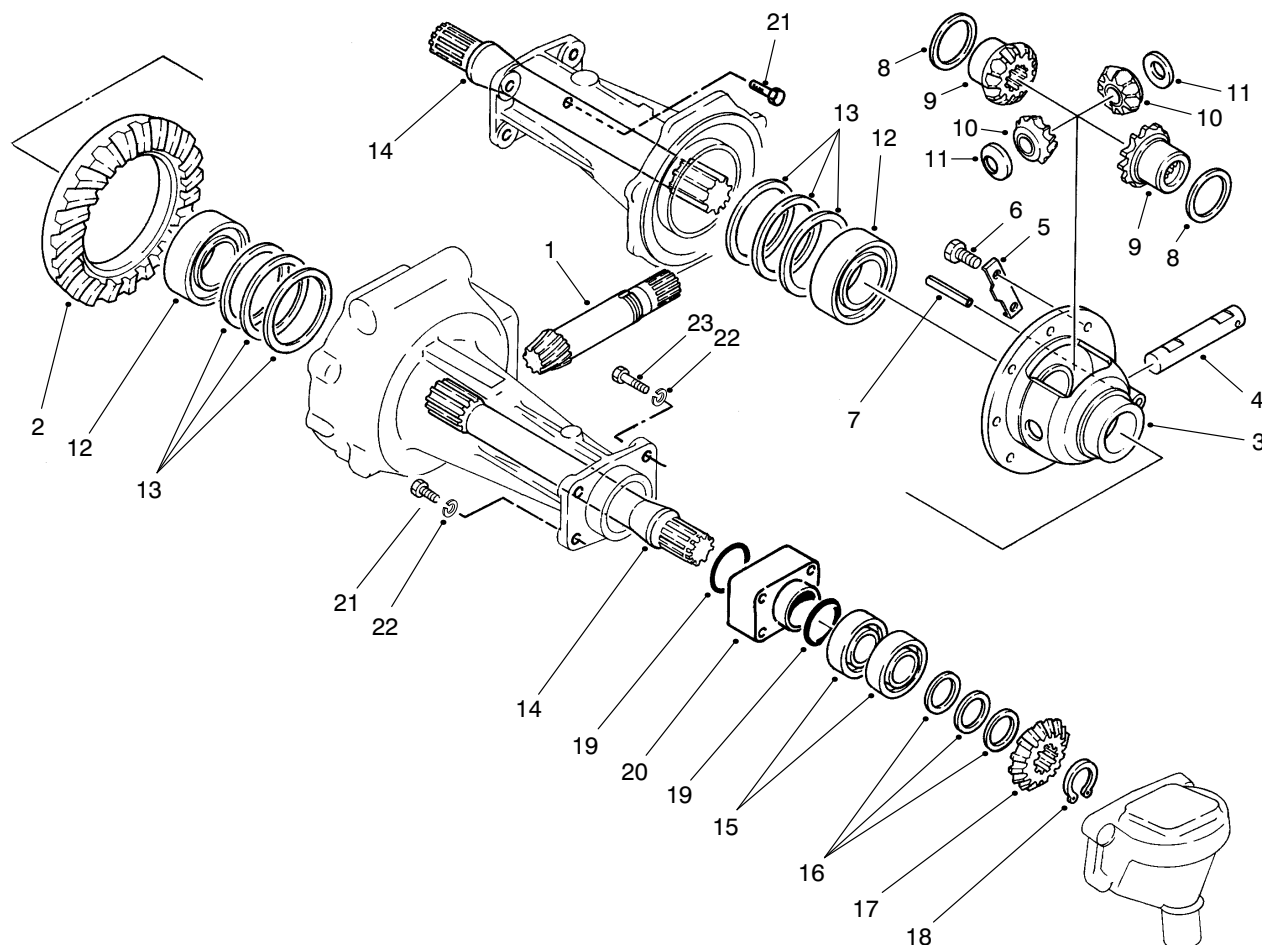 


T-1111-2

DIFFERENTIAL & SHAFT ASSEMBLY AXLE NO. 93-7780 (Model No. 03801 Only)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	76-7250	Shaft-Drive	1	16	76-7520	Shim-0.1 mm	A/R
2	76-7240	Ring-Gear	1	*	76-7530	Shim-0.2 mm	A/R
3	76-7170	Case-Differential	1	*	76-7540	Shim-0.4 mm	A/R
4	76-7200	Shaft-Pinion	1	17	76-7510	Pinion-14T	2
5	76-7230	Washer-Lock	4	18	76-7550	Ring-Retaining	2
6	76-7260	Bolt	8	19	76-7580	O-Ring	4
7	76-7270	Pin-Spring	1	20	76-7590	Spacer	2
8	76-7220	Washer-Thrust	2	21	76-7600	Bolt-Reamer	2
9	76-7190	Gear-Side	2	22	76-7620	Washer-Lock	8
10	76-7180	Pinion-Mate	2	23	76-7610	Bolt	6
11	76-7210	Washer-Thrust	2	*	76-7160	Asm-Gear Case (Incl. Ref. #2-11)	1
12	76-7280	Bearing	2	*	77-4000	Shim Set (Incl. Ref. #13)	1
13	76-7290	Shim-0.1 mm	A/R	*	77-4020	Shim Set (Incl. Ref. #16)	1
*	76-7300	Shim-0.2 mm	A/R				
*	76-7310	Shim-0.3 mm	A/R				
14	76-7490	Shaft-Differential	2				
15	76-7500	Bearing	4				

 *Not Illustrated

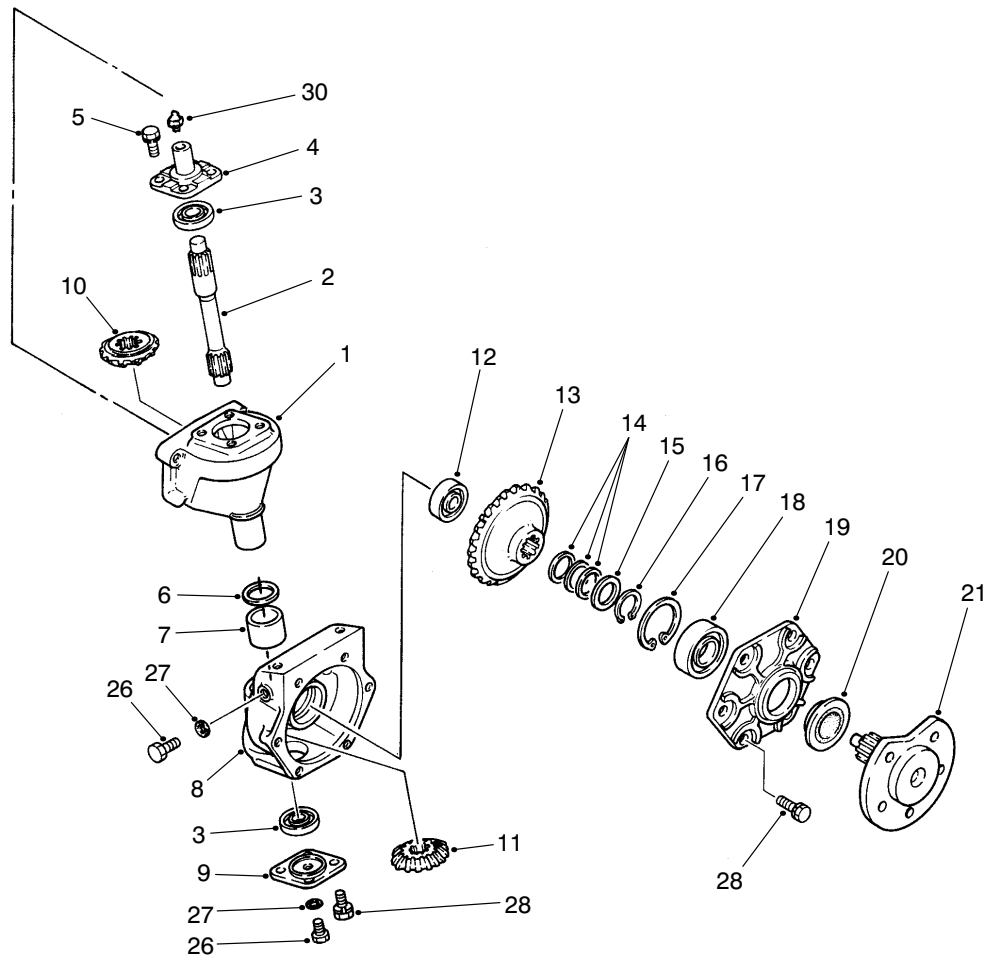


T-1110-1

STEERING GEAR CASE ASSEMBLY AXLE NO. 93-7780 (Model No. 03801 Only)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	76-7560	Case-Gear	2	15	76-7880	Spacer	2
2	76-7650	Shaft-Final Drive	2	16	76-7920	Ring-Retaining	2
3	76-7670	Bearing	4	17	76-7930	Ring-Retaining	2
4	76-7660	Holder-20 mm L.H.	1	18	93-7775	Bearing	2
*	76-7630	Holder-25 mm R.H.	1	19	76-7810	Holder-Bearing	2
5	76-7640	Bolt	8	20	76-7870	Seal-Oil	2
6	76-7740	Seal-Oil	2	21	76-7830	Shaft-Wheel	2
7	76-7730	Bushing	2	26	76-7110	Plug	4
8	76-7680	Case-Final Drive	2	27	76-7120	Seal-Washer	4
9	76-7770	Cover	2	28	76-7640	Bolt	20
10	76-7510	Pinion-14T	2	30	76-7960	Fitting-Grease	2
11	76-7750	Pinion-15T	2	*	77-4030	Shim Set (Incl. Ref. #14)	1
12	94-2803	Bearing	2				
13	76-7840	Gear-Bevel	2				
14	76-7890	Shim-0.15 mm	A/R				
*	76-7900	Shim-0.2 mm	A/R				
*	76-7910	Shim-0.4 mm	A/R				

 *Not Illustrated

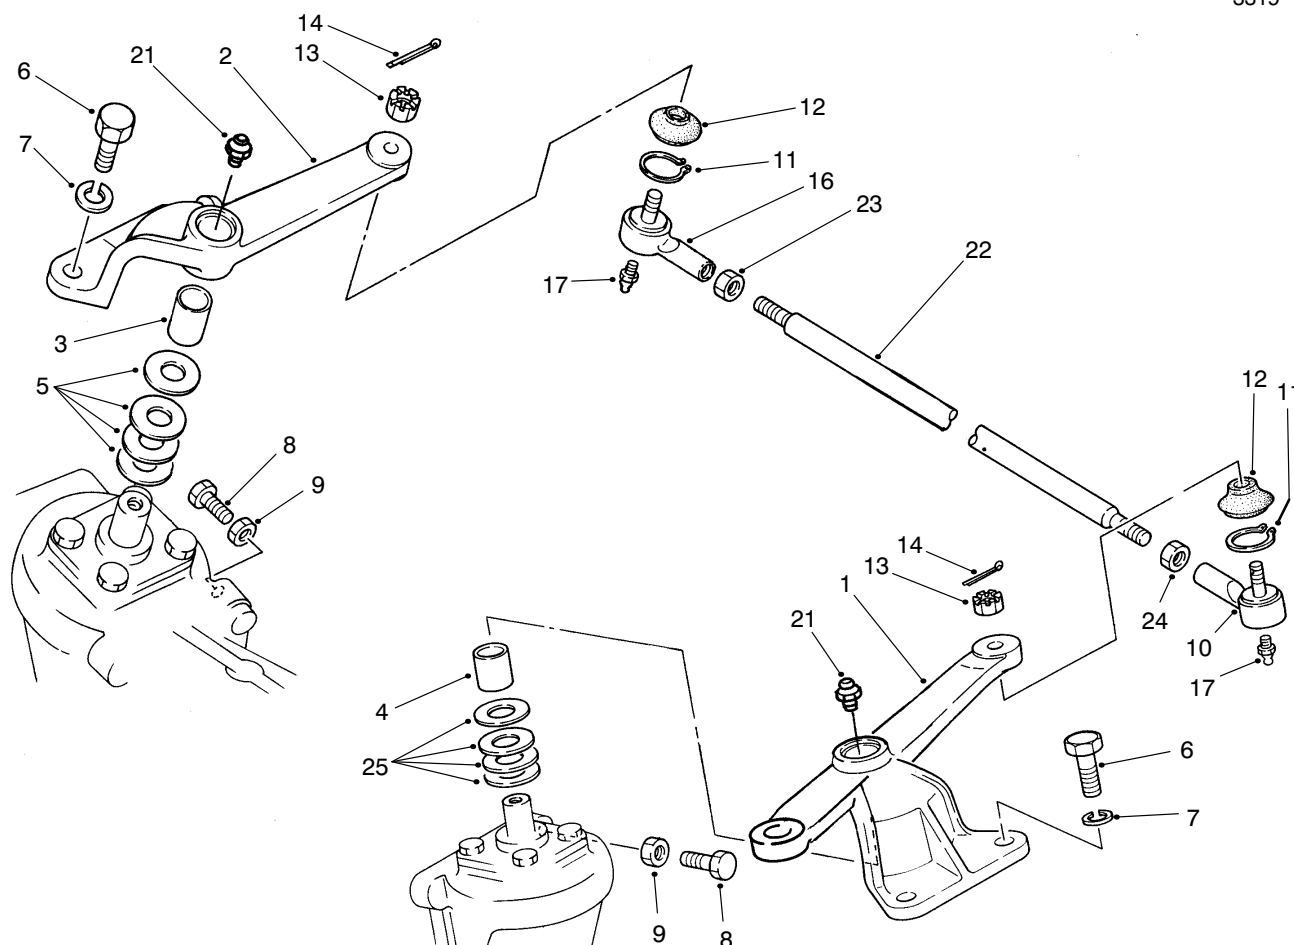


T-1108-1

STEERING ARM LINKAGE AXLE NO. 93-7780 (Model No. 03801 Only)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-8018	Arm-Drag Link	1	14	3272-7	Pin-Cotter	2
2	94-8019	Arm-Tie Rod	1	16	76-8050	Asm-R.H. Rod End (Incl. Ref. #11-14 & 17)	1
3	76-4260	Bushing	1	17	93-7786	Fitting-Grease	2
4	76-7950	Bushing	1	21	76-7960	Fitting-Grease	2
5	76-7820	Shim-1.0 mm	A/R	22	76-8020	Rod-Tie	1
*	76-7970	Shim-1.4 mm	A/R	23	76-8060	Nut-R.H.	1
*	76-7980	Shim-1.2 mm	A/R	24	76-8040	Nut-L.H.	1
*	76-7990	Shim-.08 mm	A/R	25	76-7700	Shim-0.8 mm	A/R
6	76-8000	Bolt	4	*	76-7760	Shim-1.0 mm	A/R
7	76-8010	Washer	2	*	76-7780	Shim-1.2 mm	A/R
8	76-7710	Bolt	2	*	76-7790	Shim-1.4 mm	A/R
9	76-7720	Nut	4	*	77-4050	Shim Set (Incl. Ref. #5)	1
10	76-8030	Asm-L.H. Rod End (Incl. Ref. #11-14 & 17)	1	*	77-4040	Shim Set (Incl. Ref. #25)	1
11	93-7783	Ring-Retaining	2				
12	93-7784	Cover	2				
13	93-7785	Nut-Slotted	2				

 *Not Illustrated

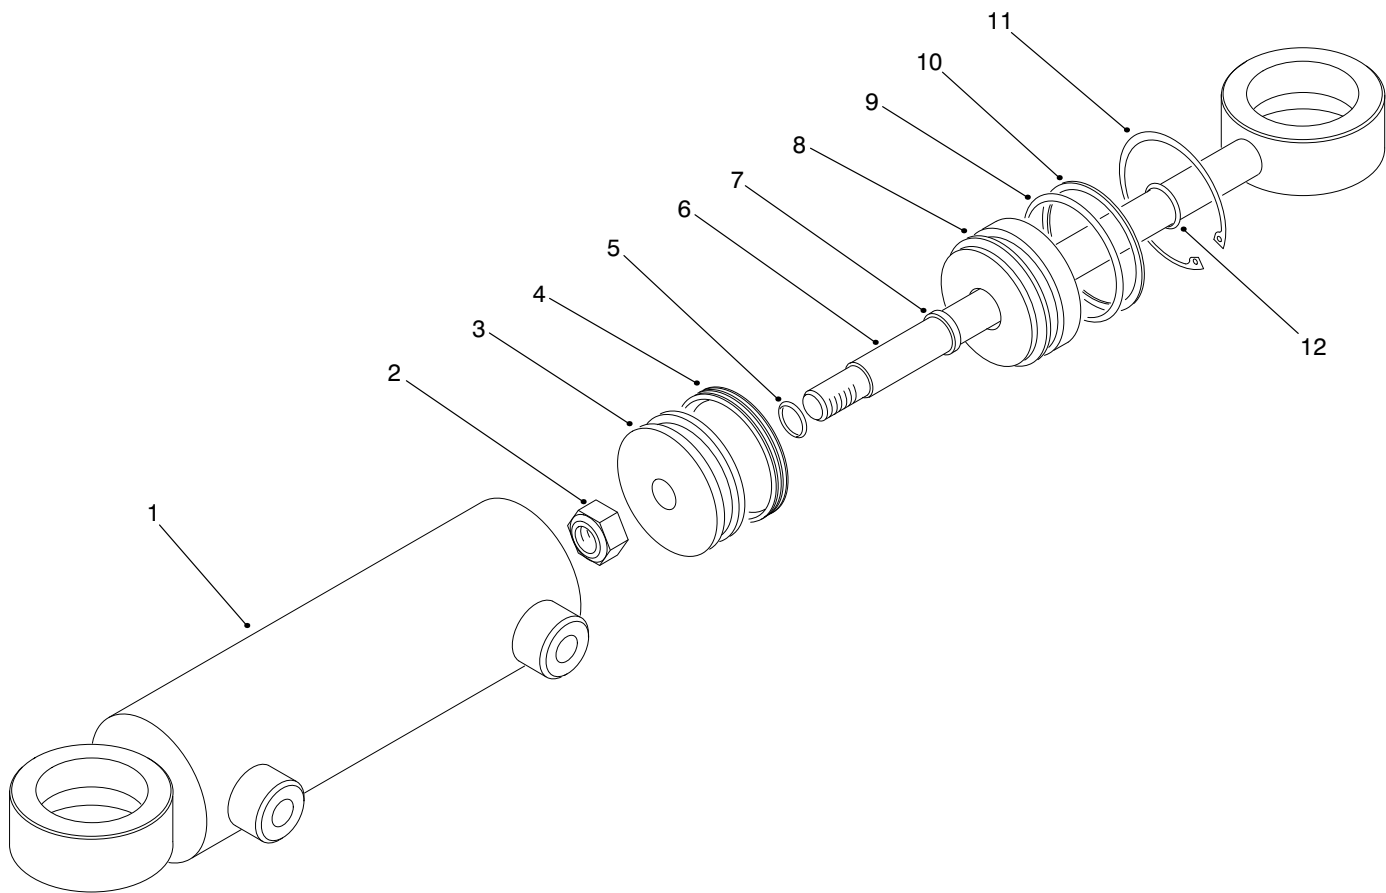


T-2452-1

HYDRAULIC CYLINDER NO. 94-8141 (Model No. 03801)

Ref. No.	Part No.	Description	No. Used
1	94-9955	Asm-Barrel	1
2	32152-10	Nut-Lock	1
3	94-9957	Piston	1
4		Uniring	1
5		O-Ring	1
6	94-9956	Asm-Piston Rod	1
7		Seal-Rod	1
8	94-9958	Gland-Cylinder	1

Ref. No.	Part No.	Description	No. Used
9		O-Ring	1
10		Backup	1
11	32120-8	Ring-Retaining	1
12		O-Ring	1
*	86-5390	Kit-Seal (Incl. Ref. #4, 5, 7, 9, 10 & 12)	1

 
*Not Illustrated

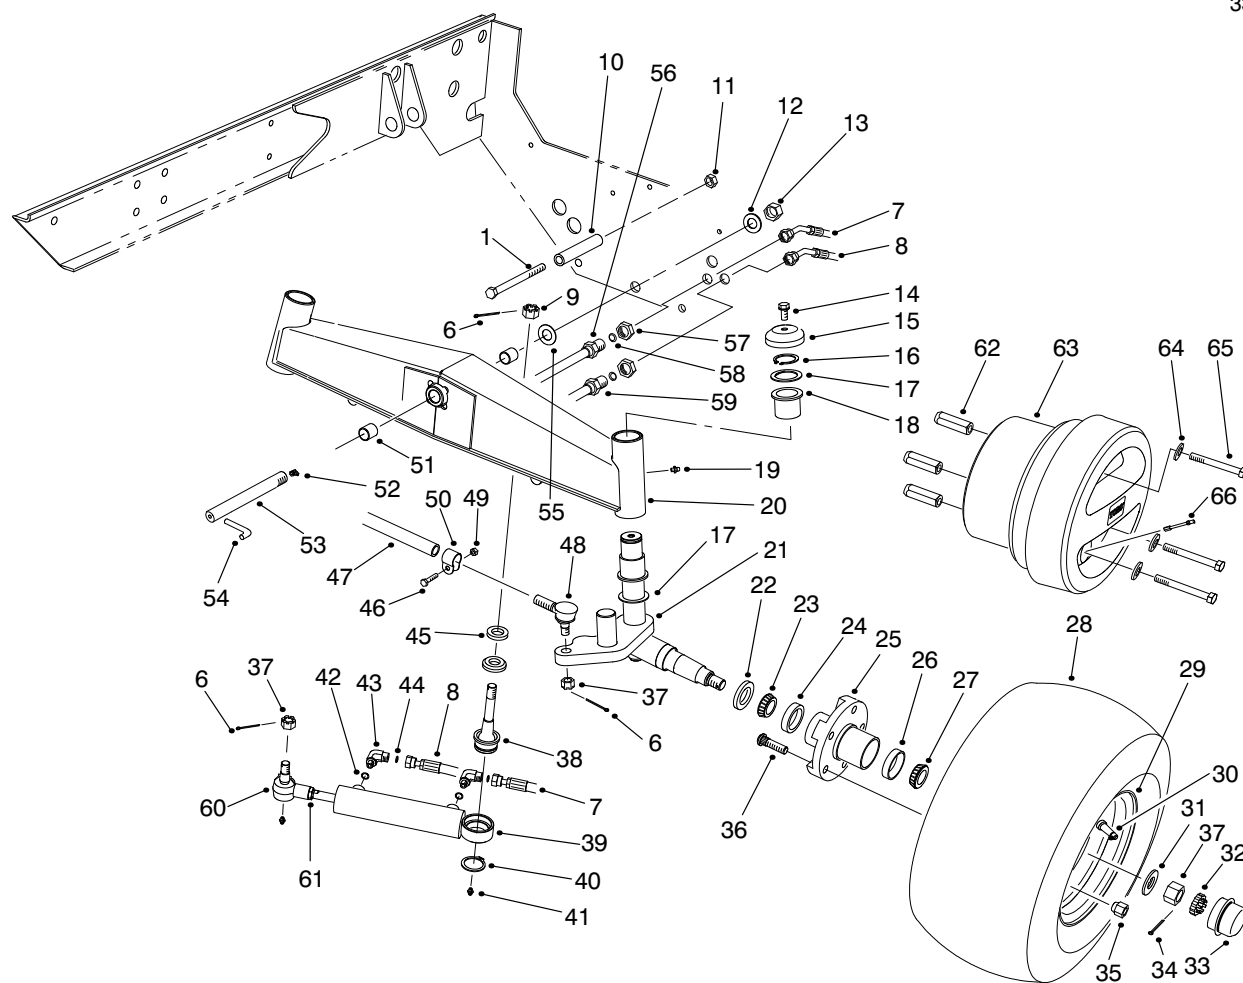

T-2078-3

2-WD REAR AXLE ASSEMBLY (Model No. 03800)


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	325-20	Screw-Hex. Hd.	2	28	86-5910	Tire	2
6	3272-12	Pin-Cotter	2	29	217-125	Wheel	2
7	92-7594	Asm-Hose	1	30	232-27	Stem-Valve	2
8	92-7595	Asm-Hose	1	31	93-0309	Washer-Tab	2
9	32136-14	Nut-Hex. Slotted	4	32	93-0307	Nut-Retainer	2
10	76-8350	Stop-Axle	2	33	95-7152	Protector - Bearing	2
11	3296-45	Nut-Lock	2	34	3272-13	Pin-Cotter	2
12	3256-29	Washer-Flat	1	35	242-50	Nut-Lug	10
13	94-8000	Nut-Lock	1	36	92-9652	Stud-Drive	10
14	3234-12	Screw-Hex. Hd. Flange	2	37	3220-7	Nut-Jam	2
15	69-8890	Cap-Spindle	2	38	92-5839	Ball Joint	1
16	32151-10	Ring-Retaining	2	39	94-8142	Asm-Cylinder	1
17	62-2170	Washer-Thrust	4	40	94-9973	Ring-Retaining	1
18	69-6470	Bushing-Flange	4	41	302-5	Fitting-Grease	1
19	302-11	Fitting-Grease	2	42	237-78	O-Ring	2
20	94-5607	Asm-Axle, Rear (Incl. Ref. #18, 19 & 51)	1	43	340-97	Fitting-Hydraulic 90° (Incl. Ref. #42 & 44)	2
21	92-9725	Spindle-LH	1	43	340-97	Fitting-Hydraulic 90° (Incl. Ref. #42 & 44)	2
*	92-9724	Spindle-RH	1	44	237-22	O-Ring	2
22	69-2980	Seal-Inner	2	45	92-5833	Spacer-Ball Joint	1
23	254-106	Cone-Bearing	2	46	3210-5	Screw-Hex. Hd.	2
24	254-107	Cup-Bearing	2	47	74-5940	Asm-Rod, Tie	1
25	92-9651	Asm-Hub (Incl. Ref. #24, 26, & 36)	2	48	2411-46	Joint-Ball, LH (Incl. Ref. #6)	1
26	254-72	Cup-Bearing	2				
27	254-92	Cone-Bearing	2				

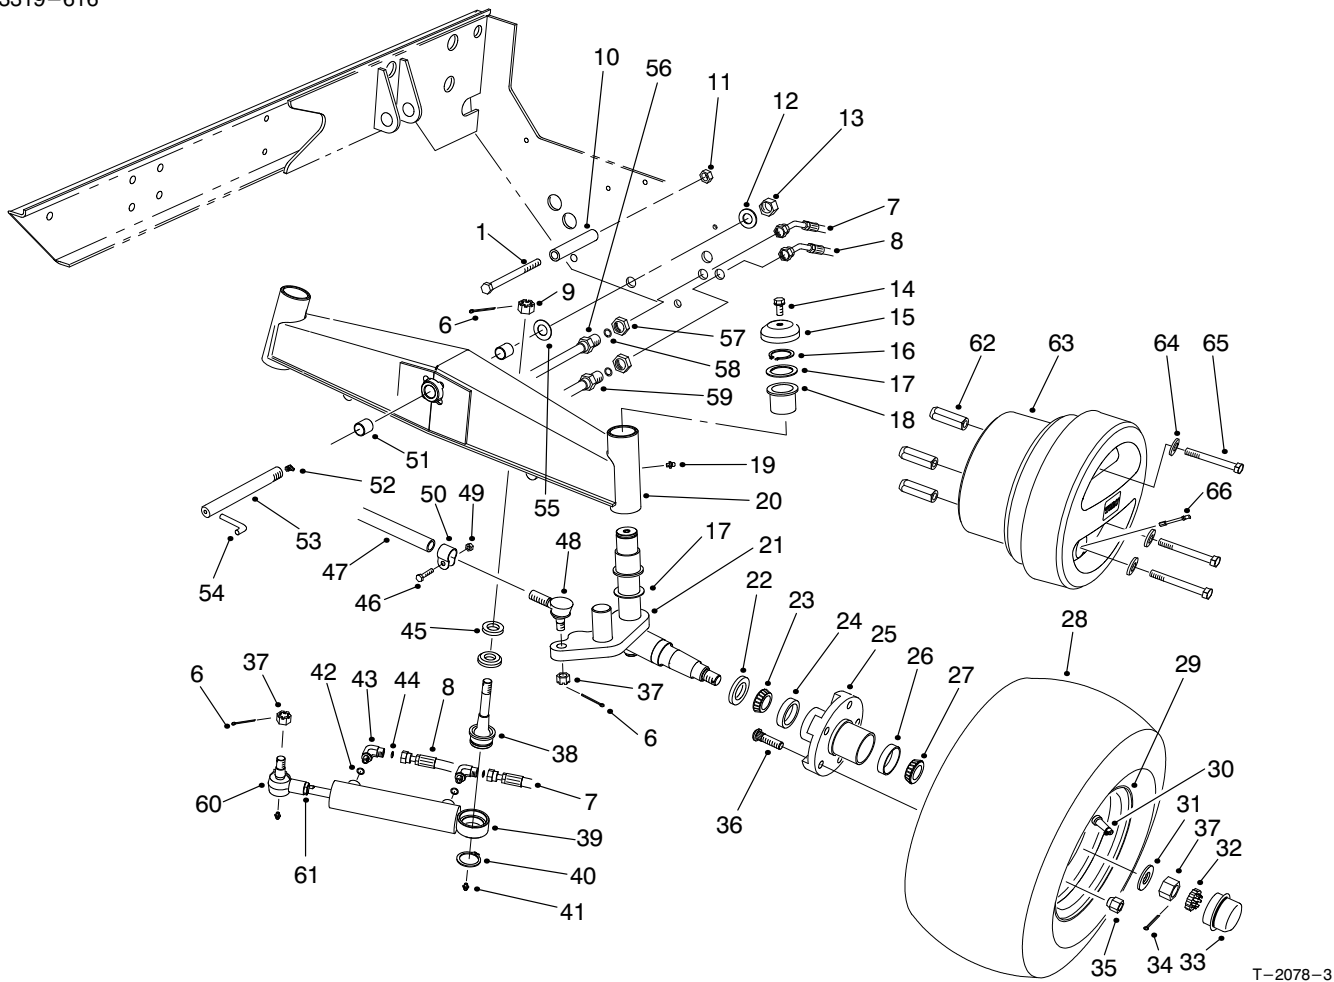 

T-2078-3

2-WD REAR AXLE ASSEMBLY (Model No. 03800) (Cont.)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
48	2411-45	Joint-Ball, RH (Incl. Ref. #6)	1	57	340-70	Nut-Lock, Bulkhead	2
49	32152-5	Nut-Lock	2	58	237-22	O-Ring	2
50	2412-122	Asm-Clamp (Incl. Ref. #46 & 49)	2	59	92-7494	Asm-Tube, Steering Rear	1
51	94-5603	Bushing-Sleeve	2	60	92-5837	Asm-Rod End	1
52	302-33	Fitting-Grease 90°	1	61	3220-11	Nut-Jam	1
53	94-8115	Pin-Axle, Pivot	1	62	94-2807	Adaptor-Nut (Europe)	6
54	92-7604	Pin-Stop	1	63	94-3052	Weight-Wheel (Europe)	2
55	93-7247	Washer-Thrust	1	64	3256-26	Washer-Flat (Europe)	6
56	92-7495	Asm-Tube, Steering Rear	1	65	3213-14	Screw-HH (Europe)	6
				66	94-3063	Extension-Stem, Valve (Europe)	2

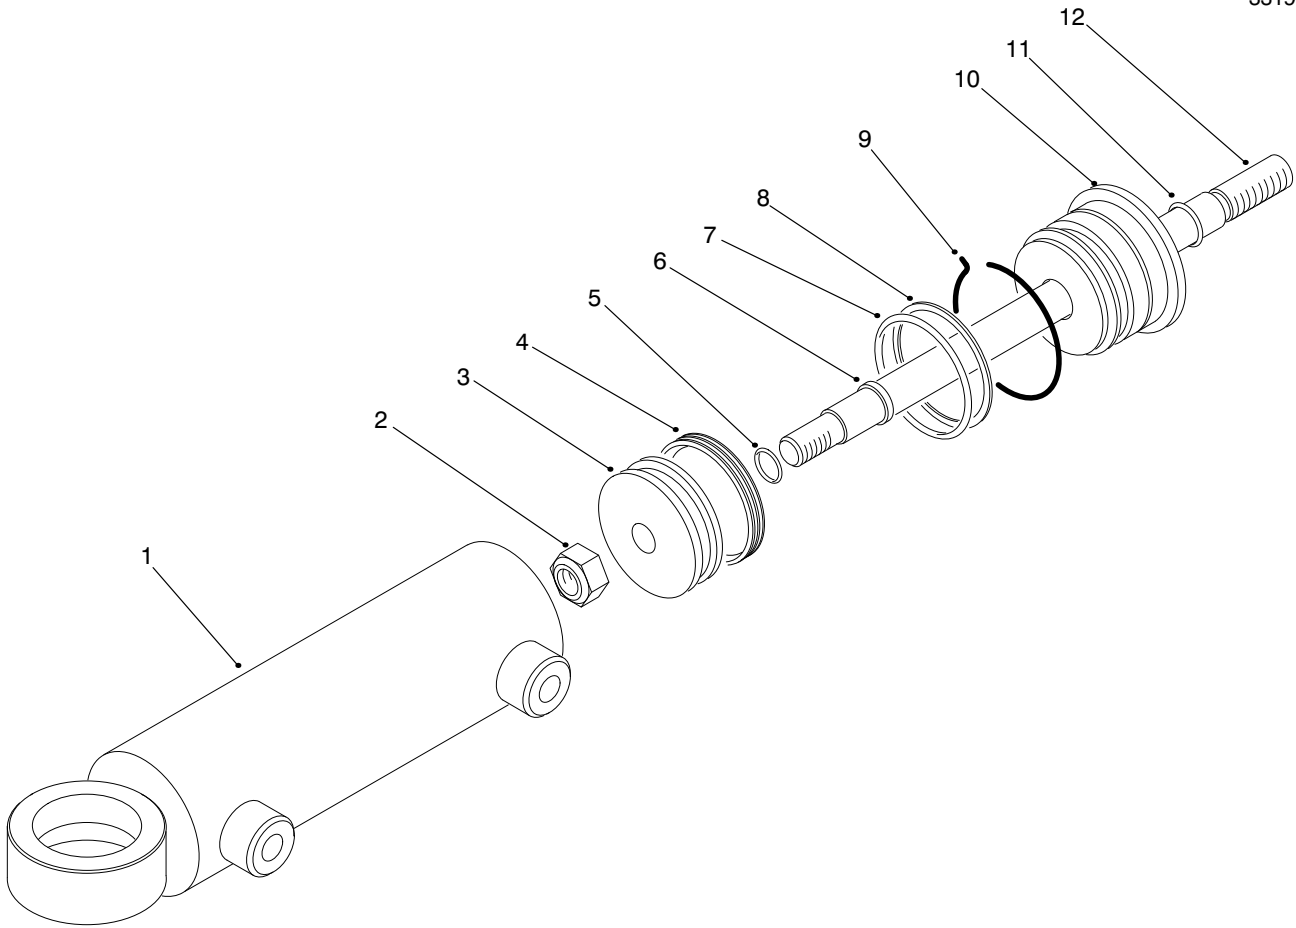 


T-2453-1

HYDRAULIC CYLINDER NO. 94-8142 (Model No. 03800)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-9959	Asm-Barrel	1	8		Backup	1
2	32152-10	Nut-Lock	1	9	94-9963	Ring-Retaining	1
3	94-9961	Piston	1	10	94-9962	Gland-Cylinder	1
4		Uniring	1	11		O-Ring	1
5		O-Ring	1	12	94-9960	Asm-Rod, Piston	1
6		Seal-Rod	1	*	94-9964	Kit-Seal	1
7		O-Ring	1			(Incl. Ref. #4-8, & 11)	

 *Not Illustrated

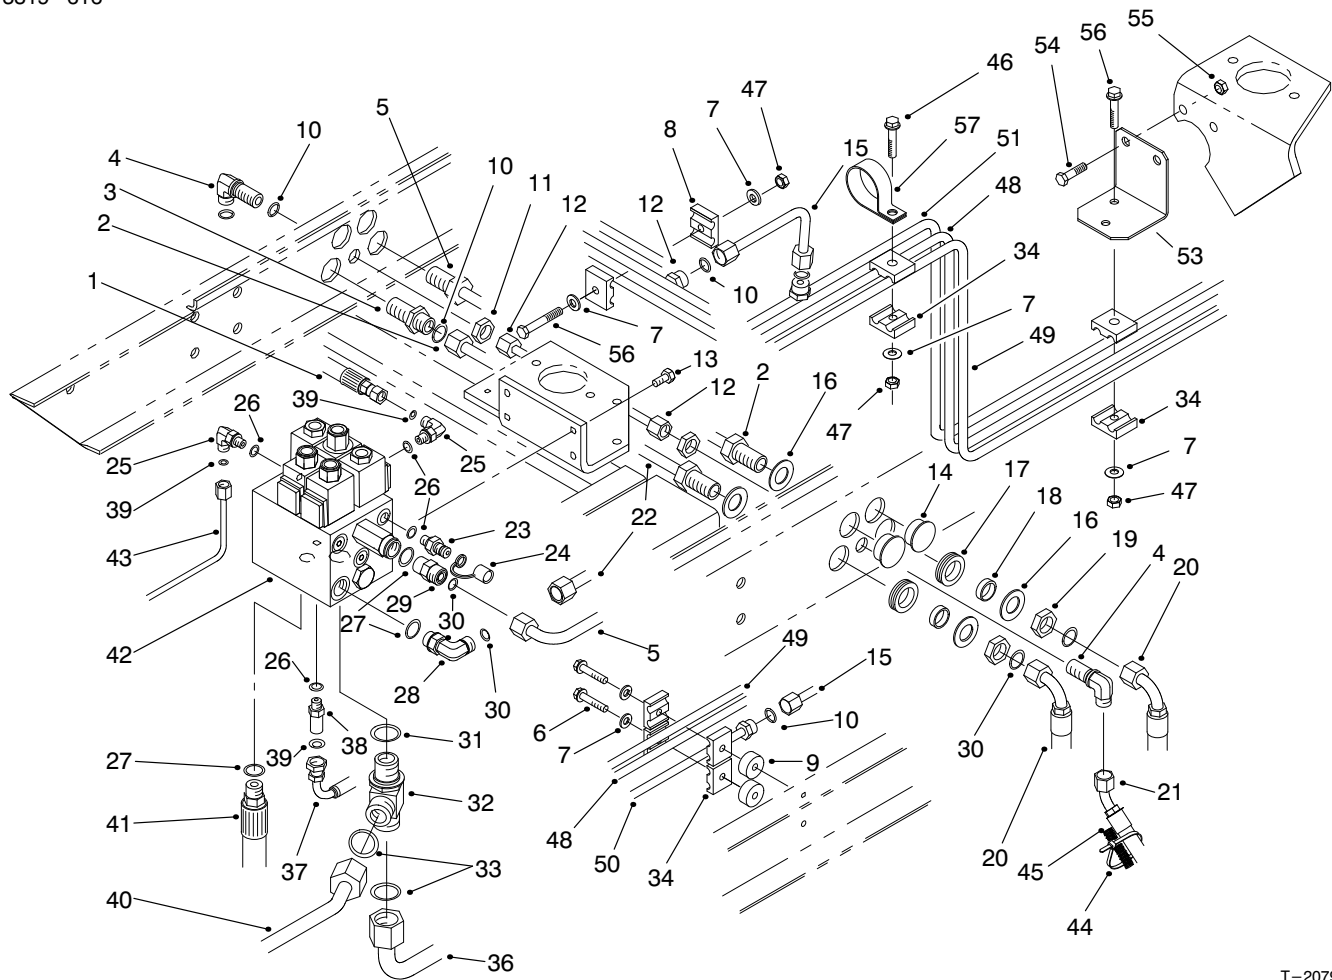


T-2079-2

REAR HYDRAULIC CONTROL BLOCK & TUBES

Ref. No.	Part No.	Description	No. Used
1	92-7638	Asm-Hose	1
2	92-7648	Asm-Hose	1
3	340-161	Fitting-Adapter (Incl. Ref. #30)	1
4	340-154	Fitting-Hydraulic 90° (Incl. Ref. #10)	2
5	92-7584	Asm-Tube	1
6	32104-37	Screw-Hex. Hd.	2
7	3256-23	Washer-Flat	8
8	56-7972	Clamp-Tube	2
9	80-8660	Spacer	2
10	237-22	O-Ring	2
11	340-70	Nut-Bulkhead	7
12	92-7647	Asm-Tube, Drain	1
13	33104-025	Screw-Hex. Hd. Flange	4
14	94-1402	Plug	4
15	93-4205	Asm-Tube, Drain (Model 03800)	1
15	93-4206	Asm-Tube, Drain (Model 03801)	1
16	69-8930	Washer	8
17	240-5	Grommet	4
18	69-8960	Spacer	4
19	340-127	Nut-Bulkhead	4
20	92-7649	Asm-Hose	4
21	93-4201	Asm-Hose	2


Ref. No.	Part No.	Description	No. Used
22	92-7585	Asm-Tube	1
23	354-77	Fitting-Quick Connect (Incl. Ref. #26)	1
24	354-79	Cap-Fitting	1
25	340-132	Fitting-Hydraulic 90° (Incl. Ref. #26 & 39)	2
26	237-78	O-Ring	4
27	237-79	O-Ring	3
28	340-98	Fitting-Hydraulic 90° (Incl. Ref. #27 & 30)	1
29	340-4	Fitting-Hydraulic (Incl. Ref. #27 & 30)	1
30	237-30	O-Ring	6
31	237-81	O-Ring	1
32	340-148	Fitting-Tee (Incl. Ref. #31, 33)	1
33	237-58	O-Ring	2
34	56-7973	Clamp-Tube	10
36	92-7558	Asm-Tube, Cooler Rear	1
37	92-7639	Asm-Hose	1
38	94-1403	Fitting-Hydraulic (Incl. Ref. #26 & 39)	1
39	237-21	O-Ring	2
40	92-7557	Asm-Tube, Cooler Front	1
41	92-7492	Asm-Hose	1
42	92-7419	Asm-Block, Manifold	1

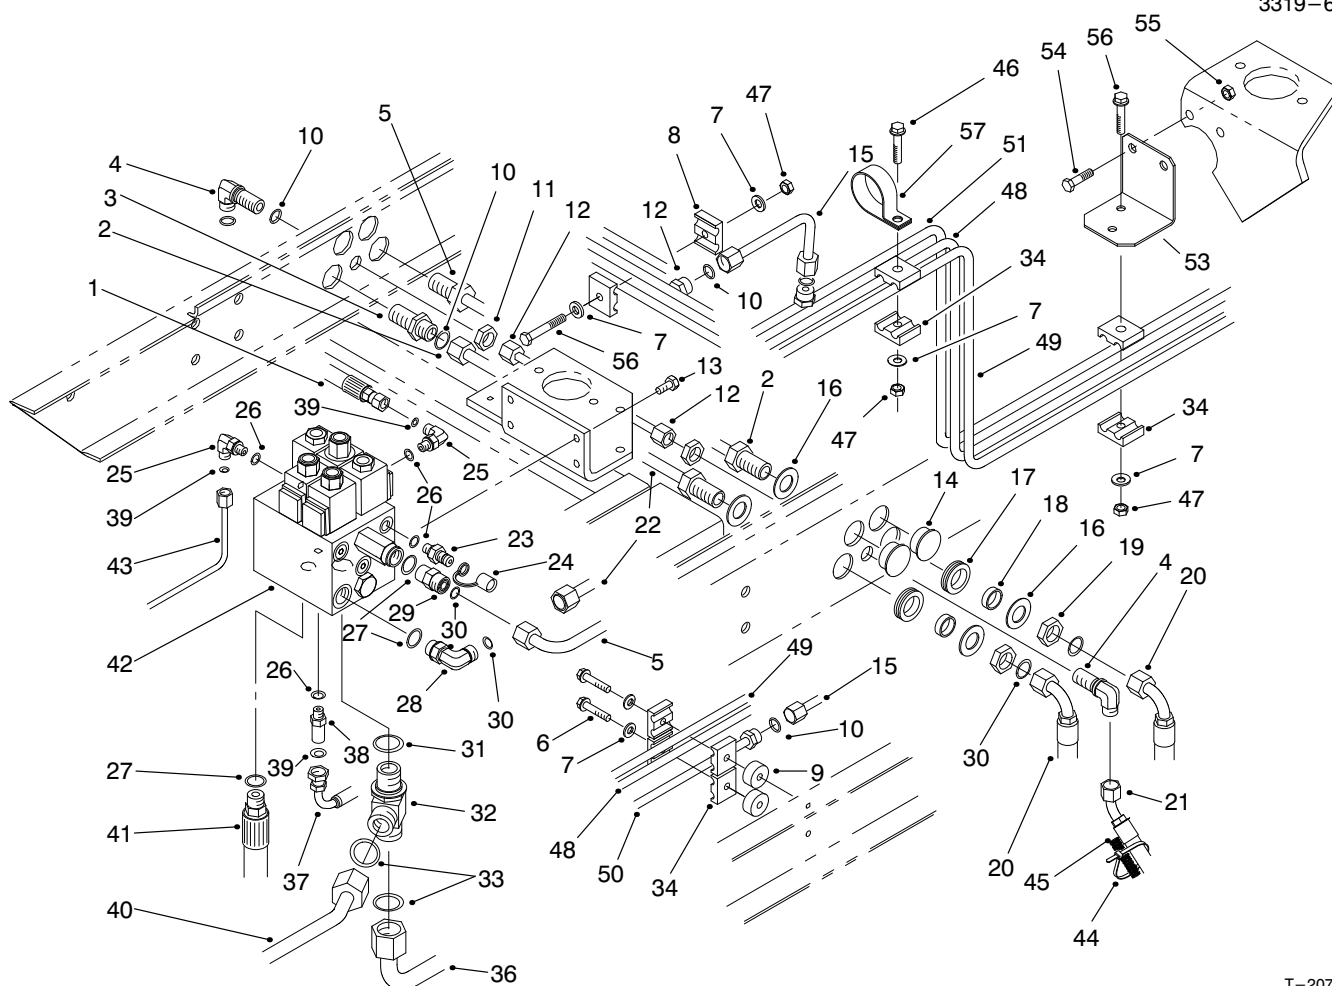 

T-2079-2

REAR HYDRAULIC CONTROL BLOCK & TUBES (Cont.)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
43	92-7591	Asm-Tube, P2A	1	51	92-7553	Asm-Tube, Rear Drain (Model 03801)	1
44	3290-378	Tie-Cable	6	52	237-42	O-Ring	2
45	94-3090	Harness-Wire, Main	1	53	94-2834	Bracket-Clamp	1
46	322-6	Screw-HH	1	54	323-6	Screw-Hex. Hd.	2
47	3296-47	Nut-Lock	4	55	32128-21	Nut-Lock	2
48	92-7494	Asm-Tube, Steering, Rear	1	56	322-7	Screw-Hex. Hd.	3
49	92-7495	Asm-Tube, Steering, Rear	1	57	2412-147	Clamp - R	1
50	92-7598	Asm-Tube, Front Drain	1				

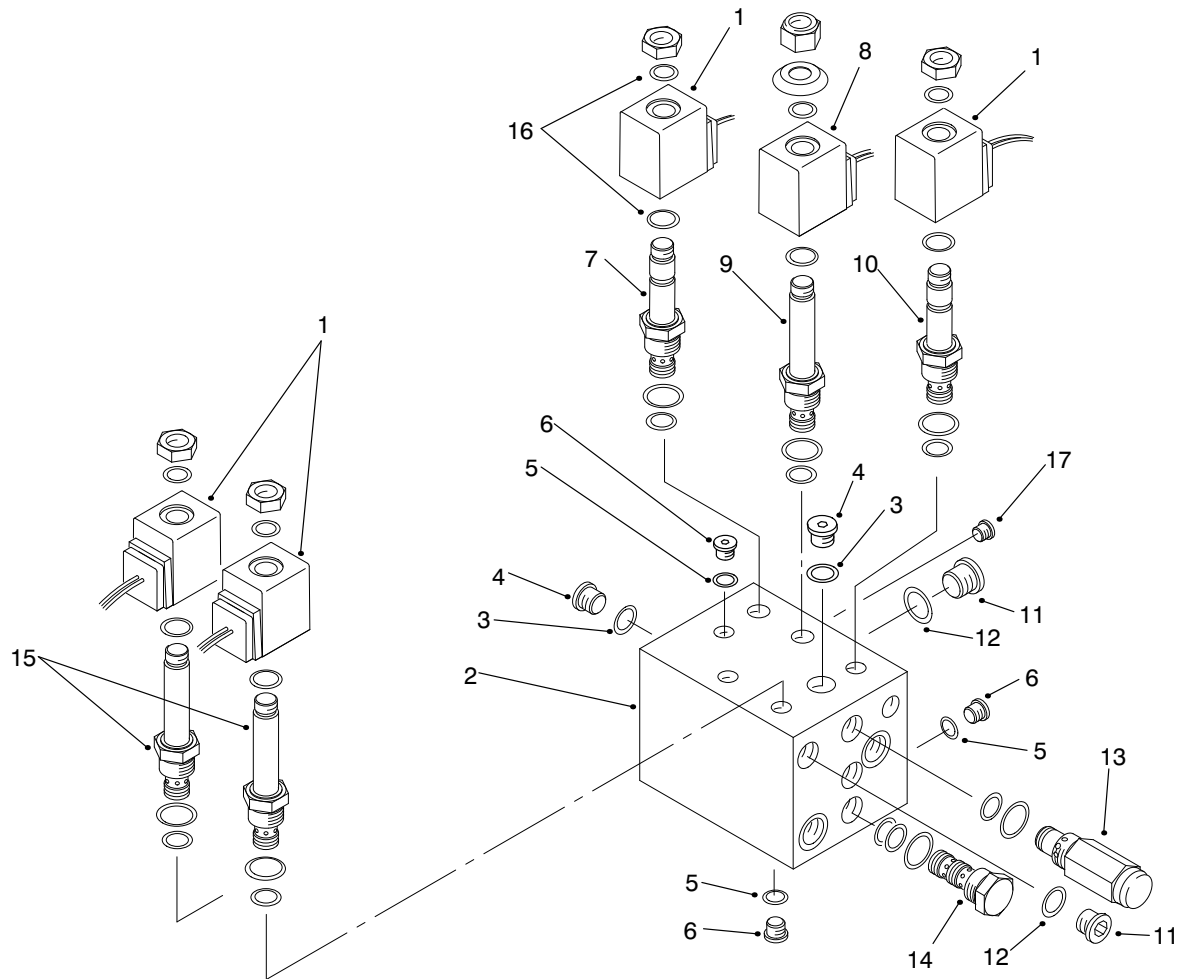 

T-2080-1


MANIFOLD ASSEMBLY NO. 92-7419

Ref. No.	Part No.	Description	No. Used
1	88-9190	Solenoid-20 Watt	4
†2		Block-Manifold, Rear	1
3	237-78	O-Ring	4
4	353-990	Plug (Incl. Ref. #30)	4
5	237-56	O-Ring	4
6	353-991	Plug (Incl. Ref. #5)	4
7	88-6990	Cartridge-N.C. Spool (Use Seal Kit 75-2080)	1
8	88-9200	Solenoid-28 Watt	1
9	95-3459	Cartridge-No Flow (Use Seal Kit 75-2080)	1
10	88-6980	Cartridge-N.C. Poppet (Use Seal Kit 75-2080)	1

Ref. No.	Part No.	Description	No. Used
11	353-989	Plug (Incl. Ref. #12)	5
12	237-42	O-Ring	5
13	75-0920	Cartridge-Relief 3000 psi (Use Seal Kit 75-2080)	1
14	93-7491	Cartridge-Pilot Check (Use Seal Kit 69-4260)	1
15	93-7494	Cartridge-N.O. Poppet (Use Seal Kit 75-2080)	2
16	94-5438	Seal-Solenoid	10
17	94-2626	Plug-Orifice	1
*	75-2080	Seal Kit	5
*	69-4260	Seal Kit	1

*Not Illustrated

 
†Not Serviced Separately

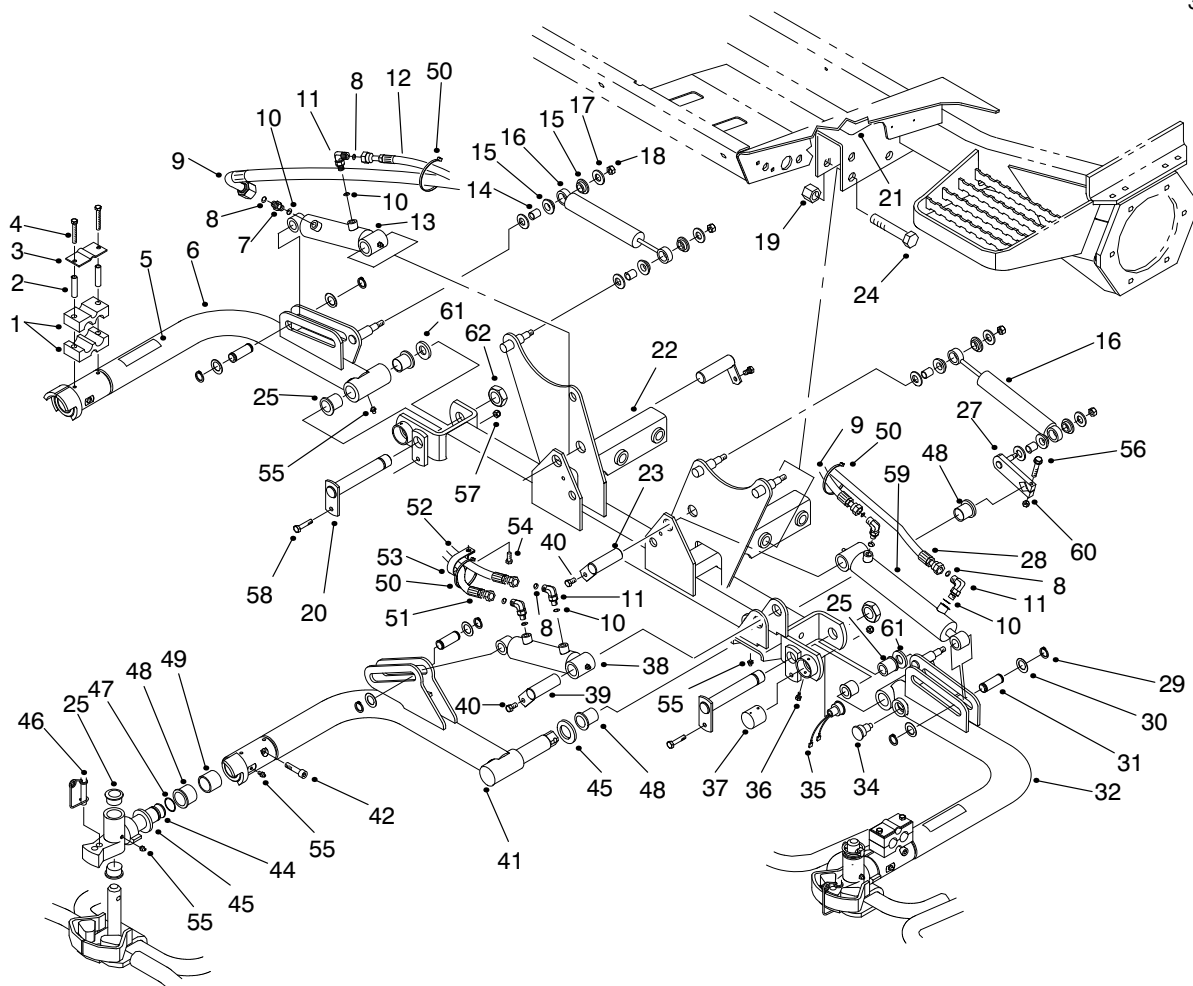

T-2081-3

FRONT LIFT ARMS ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	82-8170	Clamp	6	22	98-2437	Asm-Frame, Carrier	1
2	93-7960	Spacer	6	23	83-6780	Pin-Cylinder	2
3	93-7961	Clamp-Drain, Case	3	24	328-7	Screw-Hex. Hd.	4
4	60-6700	Screw-Hex. Hd.	6	25	94-8949	Bushing-Flange	12
5	36-3400	Decal-Warning	2	27	94-1425	Bar-Lift, Center	1
5	93-6687	Decal-No Step (Europe)	2	28	82-6490	Asm-Hose	1
5	84-2780	Decal-No Step (Japan)	2	29	94-9974	Ring-Retaining	6
6	93-9194	Lift Arm #5	1	30	94-9998	Washer-Thrust	6
7	340-92	Fitting-Hydraulic (Incl. Ref. #8 & 10)	1	31	75-5350	Pin-Cylinder, Slide	3
8	237-21	O-Ring	6	32	93-9193	Lift Arm #4	1
9	75-5890	Hose	2	34	92-8754	Magnet-Switch, Reed	1
10	237-78	O-Ring	6	35	92-8002	Sensor-Switch, Reed	1
11	340-132	Fitting-Hydraulic 90° (Incl. Ref. #8 & 10)	5	36	32104-76	Screw-Self Tapping	2
12	92-7564	Asm-Hose	1	37	75-6370	Cap-Sensor	1
13	93-7551	Cylinder-Hydraulic	1	38	93-2650	Cylinder-Hydraulic	1
14	256-172	Bushing	6	39	83-6790	Pin-Short, Cylinder	1
15	94-1430	Bushing-Flange	12	40	32144-14	Screw-Hex. Hd.	3
16	93-4224	Absorber-Shock	3	41	93-9190	Lift Arm #1	1
17	69-8980	Washer-Flat	12	42	93-4234	Screw-Socket Hd.	3
18	33025-00	Nut	6	44	93-9181	Knuckle-Pivot	3
19	3296-51	Nut-Lock	4	45	94-8946	Washer-Thrust	3
20	98-2431	Pin	2	46	93-9161	Pin	3
21	88-0440	Decal-Floor Plate	1	47	93-7524	O-Ring	3
21	93-6693	Decal-Floor Plate (Europe)	1	48	94-8947	Bushing-Flange	5
21	88-1900	Decal-Floor Plate (Japan)	1	49	94-8948	Bushing	3
				50	3290-378	Tie-Cable	3
				51	92-7565	Asm-Hose	1

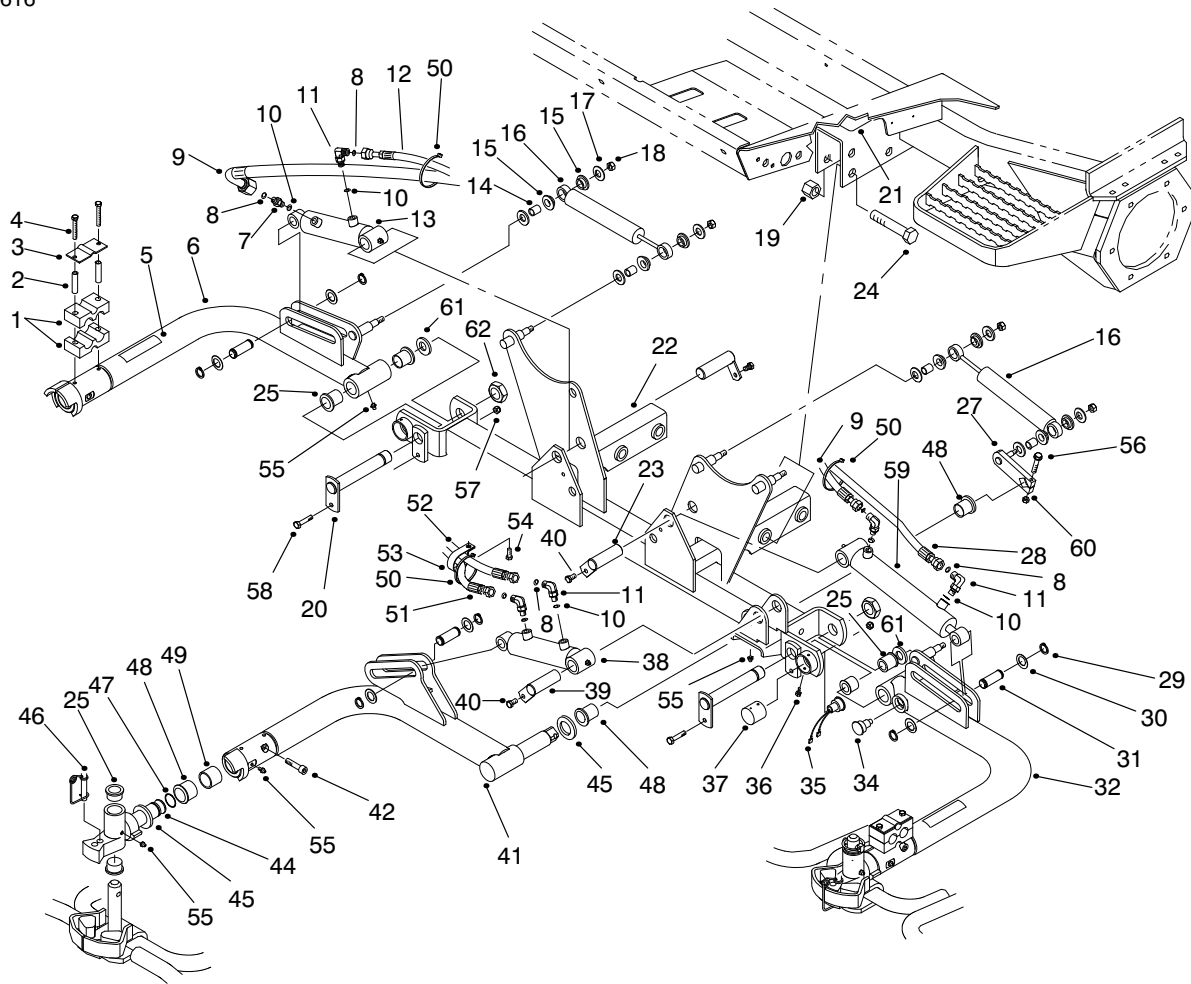 


T-2081-3

FRONT LIFT ARMS ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
52	92-7562	Asm-Hose	1
53	2412-96	Clamp	1
54	322-4	Screw-HH	1
55	302-5	Fitting-Grease	9
56	33104-060	Screw-HH	1
57	3296-29	Nut-Lock	2

Ref. No.	Part No.	Description	No. Used
58	3234-17	Screw-HH	2
59	93-7555	Cylinder-Hydraulic	1
60	33024-00	Nut	1
61	3256-42	Washer-Flat	2
62	3296-49	Nut-Lock	2

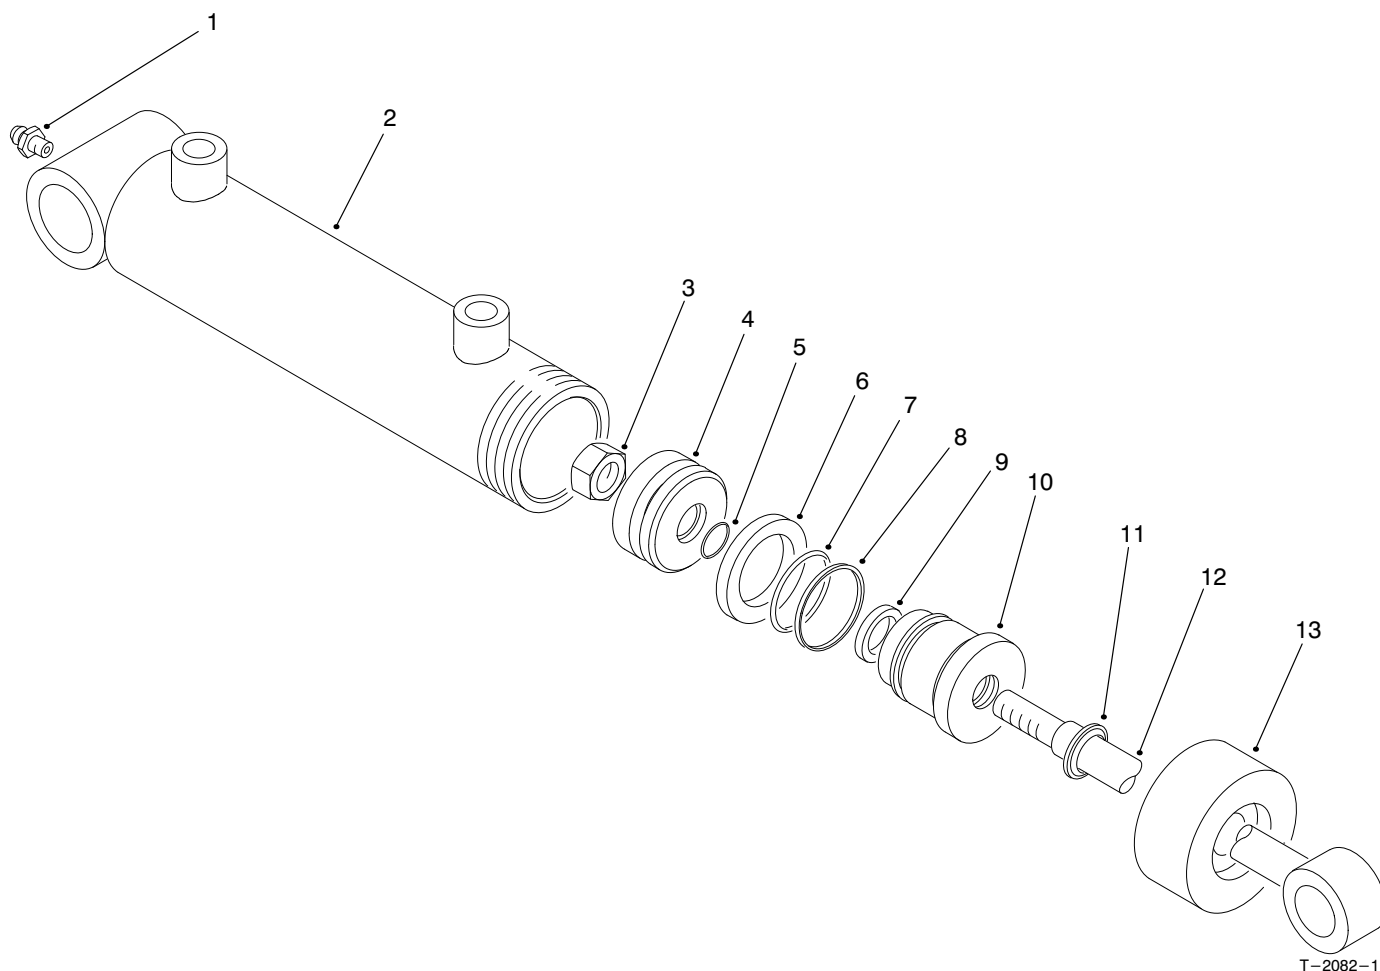 


T-2082-1

HYDRAULIC CYLINDER NO. 93-7555

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	302-5	Fitting—Grease	1	†9		Seal—Rod	1
†2		Assembly—Barrel	1	10	93-7990	Head	1
3	32152-10	Nut—Lock	1	†11		Seal—Dust	1
4	70-2780	Piston	1	12	75-2120	Shaft With Clevis	1
†5		O—Ring	1	13	93-7991	Collar	1
†6		Seal—Special	1	*	86-7330	Kit—Seal Repair (Incl. Ref. #5-9, & 11)	1
†7		O—Ring	1				
†8		Backup	1				

†Not Serviced Separately.

 *Not Illustrated

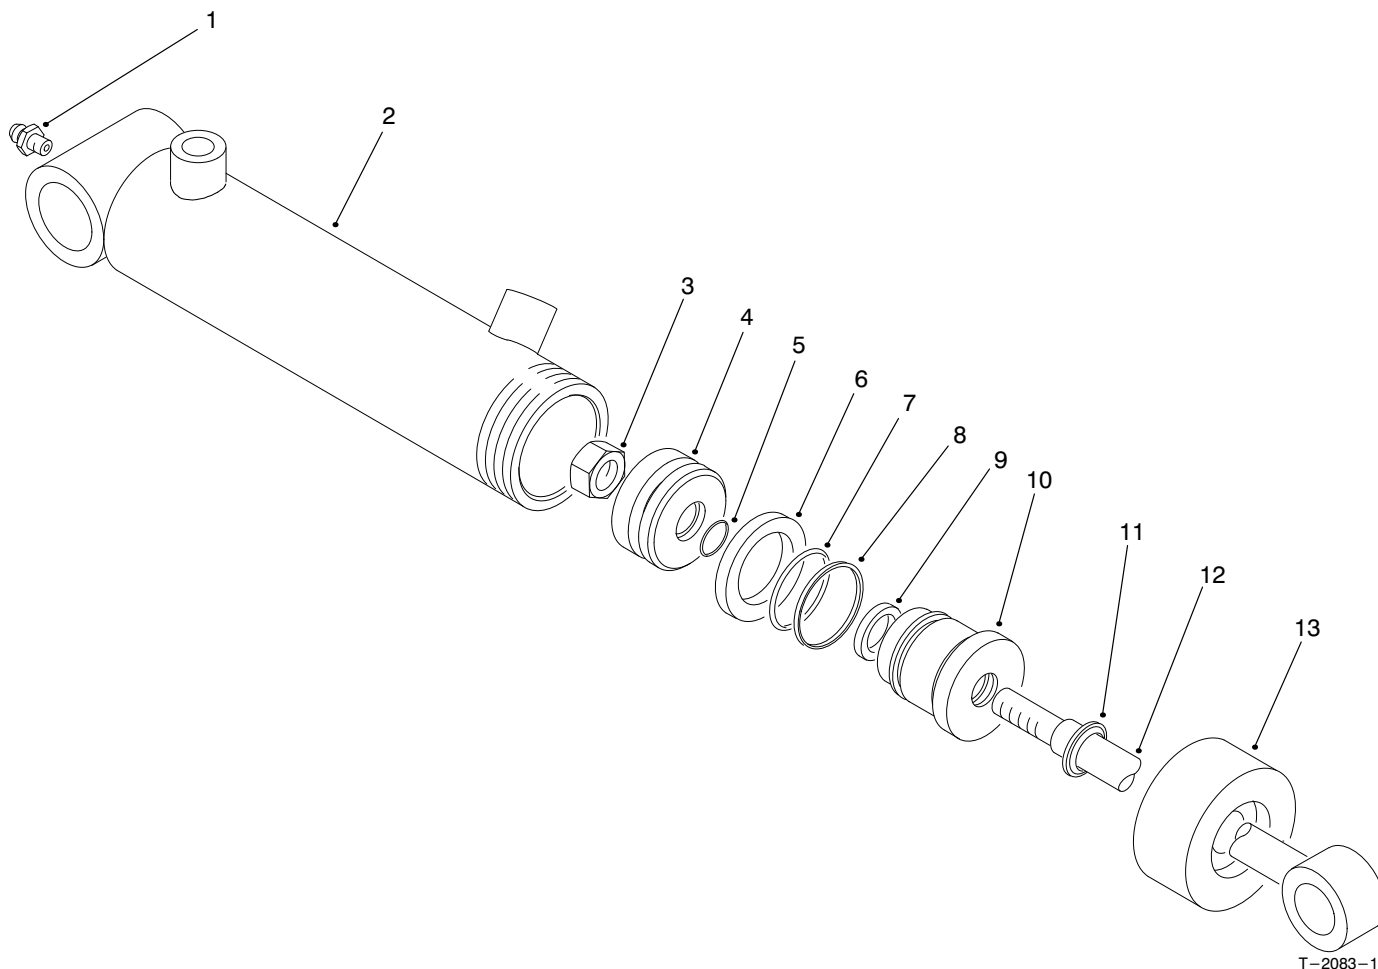


HYDRAULIC CYLINDER NO. 93-7551

Ref. No.	Part No.	Description	No. Used
1	302-5	Fitting—Grease	1
†2		Asm—Barrel	1
3	32152-10	Nut—Lock	1
4	84-1710	Piston	1
†5		O—Ring	1
†6		Seal—Special	1
†7		O—Ring	1
†8		Backup	1

Ref. No.	Part No.	Description	No. Used
†9		Seal—Rod	1
10	93-7993	Head	1
†11		Seal—Dust	1
12	84-1740	Shaft With Clevis	1
13	93-7994	Collar	1
*	84-1760	Kit—Seal Repair (Incl. Ref. #5-9, & 11)	1

† Not Serviced Separately.

 *Not Illustrated

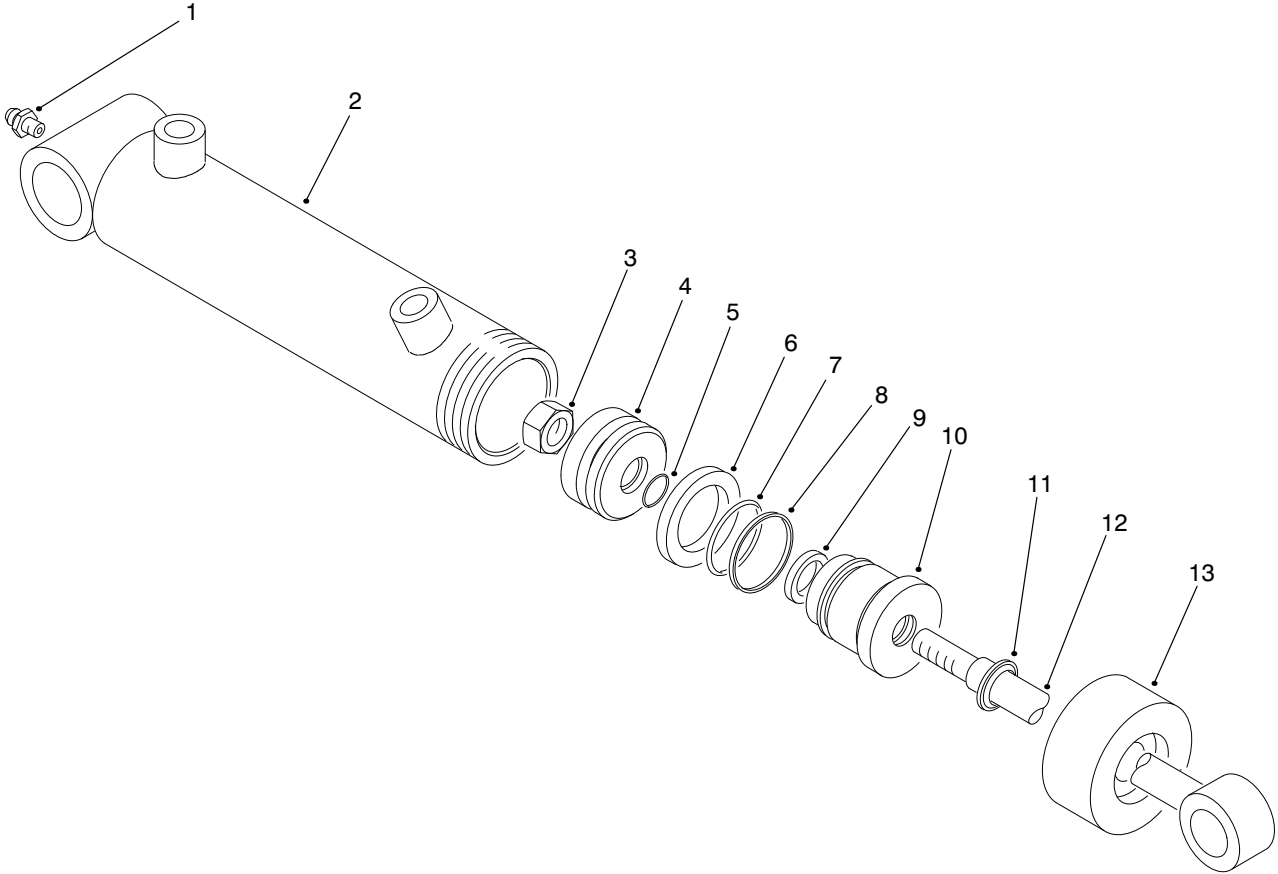


T-2084-1

HYDRAULIC CYLINDER NO. 93-2650

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	302-5	Fitting-Grease	1	†9		Seal-Rod	1
†2		Assembly-Barrel	1	10	93-7990	Head	1
3	32152-10	Nut-Lock	1	†11		Seal-Dust	1
4	70-2780	Piston	1	12	94-2644	Shaft With Clevis	1
†5		O-Ring	1	13	93-7991	Collar	1
†6		Seal-Special	1	*	86-7330	Kit-Seal Repair (Incl. Ref. #5-9, & 11)	1
†7		O-Ring	1				
†8		Backup	1				

 † Not Serviced Separately.
*Not Illustrated

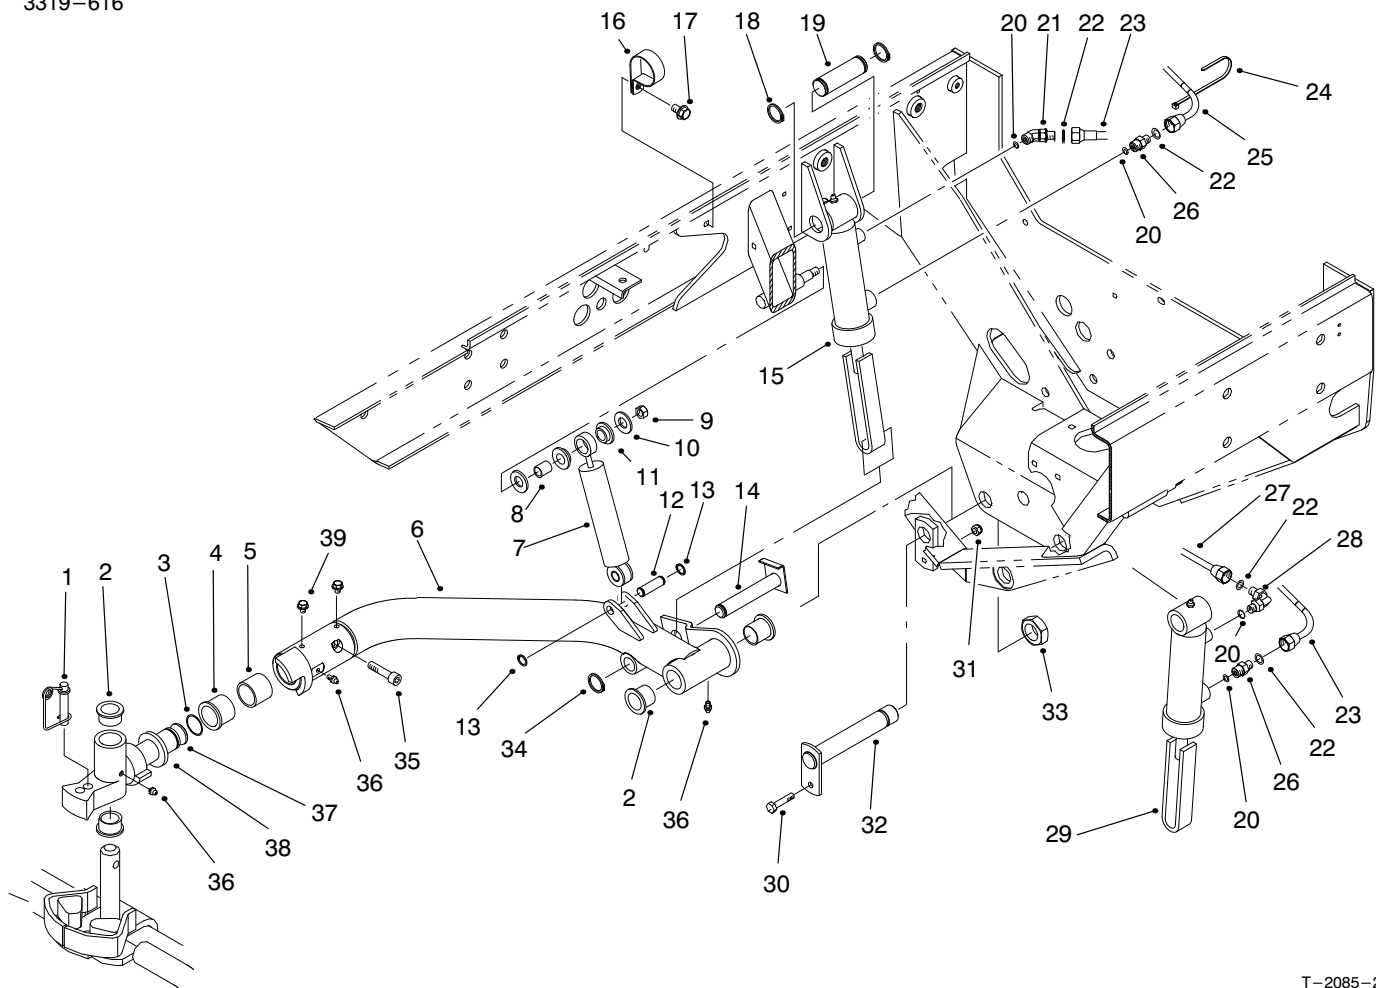


T-2085-2

REAR LIFT ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-9161	Pin	2
2	94-8949	Bushing-Flange	8
3	93-7524	O-Ring	2
4	94-8947	Bushing-Flange	2
5	94-8948	Bushing	2
6	93-9192	Lift Arm #3	1
*	93-9191	Lift Arm #2	1
7	93-4224	Absorber-Shock	2
8	256-172	Bushing	4
9	33025-00	Nut	2
10	69-8980	Washer-Flat	4
11	94-1430	Bearing-Flange	8
12	93-4246	Pin-Shock	2
13	32151-61	Ring-Retaining	4
14	92-7456	Pin	2
15	92-7420	Asm-Cylinder, Hyd. #3	1
16	2412-96	Clamp-R	1
17	32144-11	Screw-Self Tapping	1
18	32151-36	Ring-Retaining	4
19	92-7548	Pin-Cylinder	2
20	237-78	O-Ring	4

Ref. No.	Part No.	Description	No. Used
21	340-103	Fitting-Hydraulic 45° (Incl. Ref. #20 & 22)	1
22	237-21	O-Ring	4
23	92-7636	Asm-Hose	1
24	3290-378	Tie-Cable	2
25	92-7638	Asm-Hose	1
26	340-92	Fitting-Hydraulic (Incl. Ref. #20 & 22)	2
27	92-7639	Asm-Hose	1
28	340-132	Fitting-Hydraulic 90° (Incl. Ref. #20 & 22)	1
29	92-7421	Asm-Cylinder, Hyd. LH	1
30	3234-17	Screw-HHF	2
31	3296-29	Nut-Lock	2
32	98-2431	Pin	2
34	32120-93	Ring-Retaining	2
35	93-4234	Screw-Socket Hd.	2
36	302-5	Fitting-Grease	6
37	93-9181	Knuckle-Pivot	2
38	94-8946	Washer-Thrust	2
39	33104-010	Screw-HH	4
33	3296-49	Nut-Lock	2

 *Not Illustrated

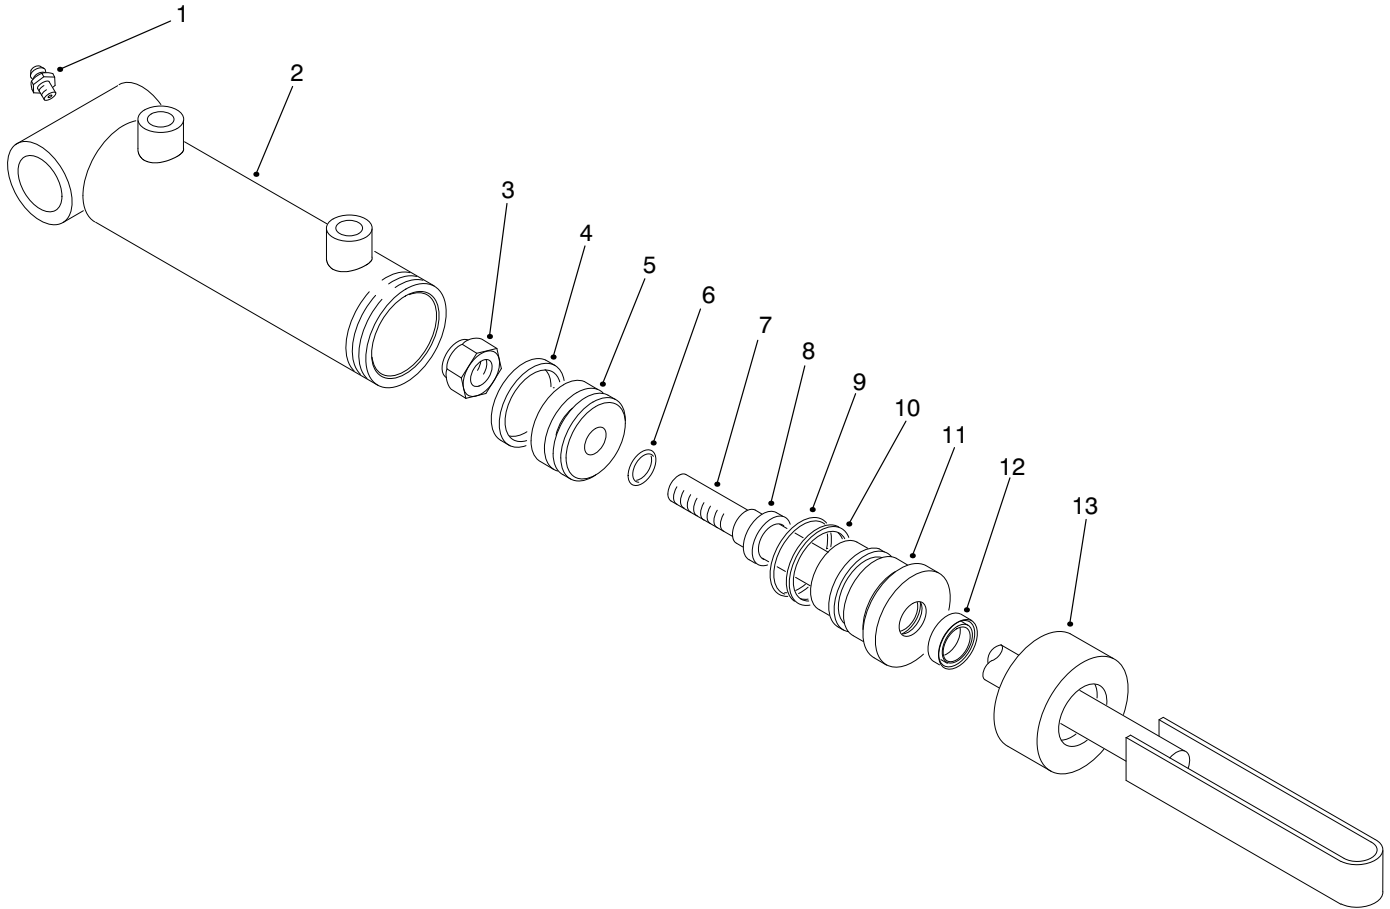


T-2086-1

HYDRAULIC CYLINDER NO. 92-7420

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	302-5	Fitting-Grease	1	9		O-Ring	1
2	93-7992	Asm.-Barrel	1	†10		Backup	1
3	32152-10	Nut	1	11	93-7990	Head	1
†4		Uni-ring	1	†12		Seal-Dust	1
5	70-2780	Piston	1	13	93-7991	Collar	1
†6		O-Ring	1	*	86-7330	Seal repair Kit	1
7	93-7989	Shaft W/Clevis	1			(Incl. Ref. #4, 6, 8-10 & 12)	
†8		Seal-Rod	1				

 *Not Illustrated
† Not Serviced Separately.

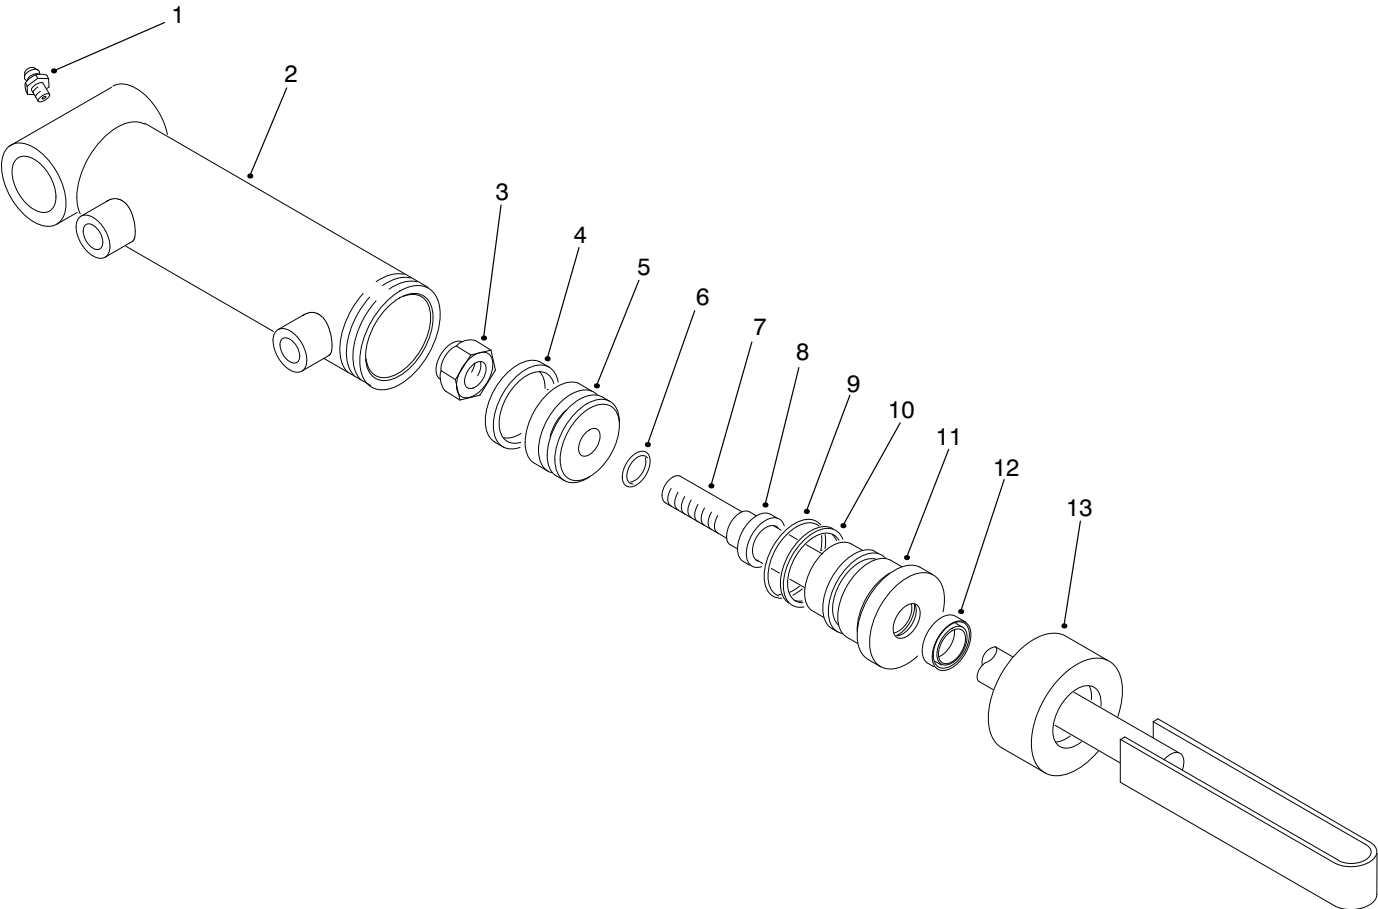


T-2087-1

HYDRAULIC CYLINDER NO. 92-7421

Ref. No.	Part No.	Description	No. Used
1	302-5	Fitting-Grease	1
2	93-7995	Asm-Barrel	1
3	32152-10	Nut	1
†4		Uni-ring	1
5	84-1710	Piston	1
†6		O-Ring	1
7	93-7989	Shaft W/Clevis	1
†8		Seal-Rod	1

Ref. No.	Part No.	Description	No. Used
9		O-Ring	1
†10		Backup	1
11	93-7993	Head	1
†12		Seal-Dust	1
13	93-7994	Collar	1
*	84-1760	Seal repair Kit (Incl. Ref. #4, 6, 8-10 & 12)	1

 
*Not Illustrated
†Not Serviced Separately.

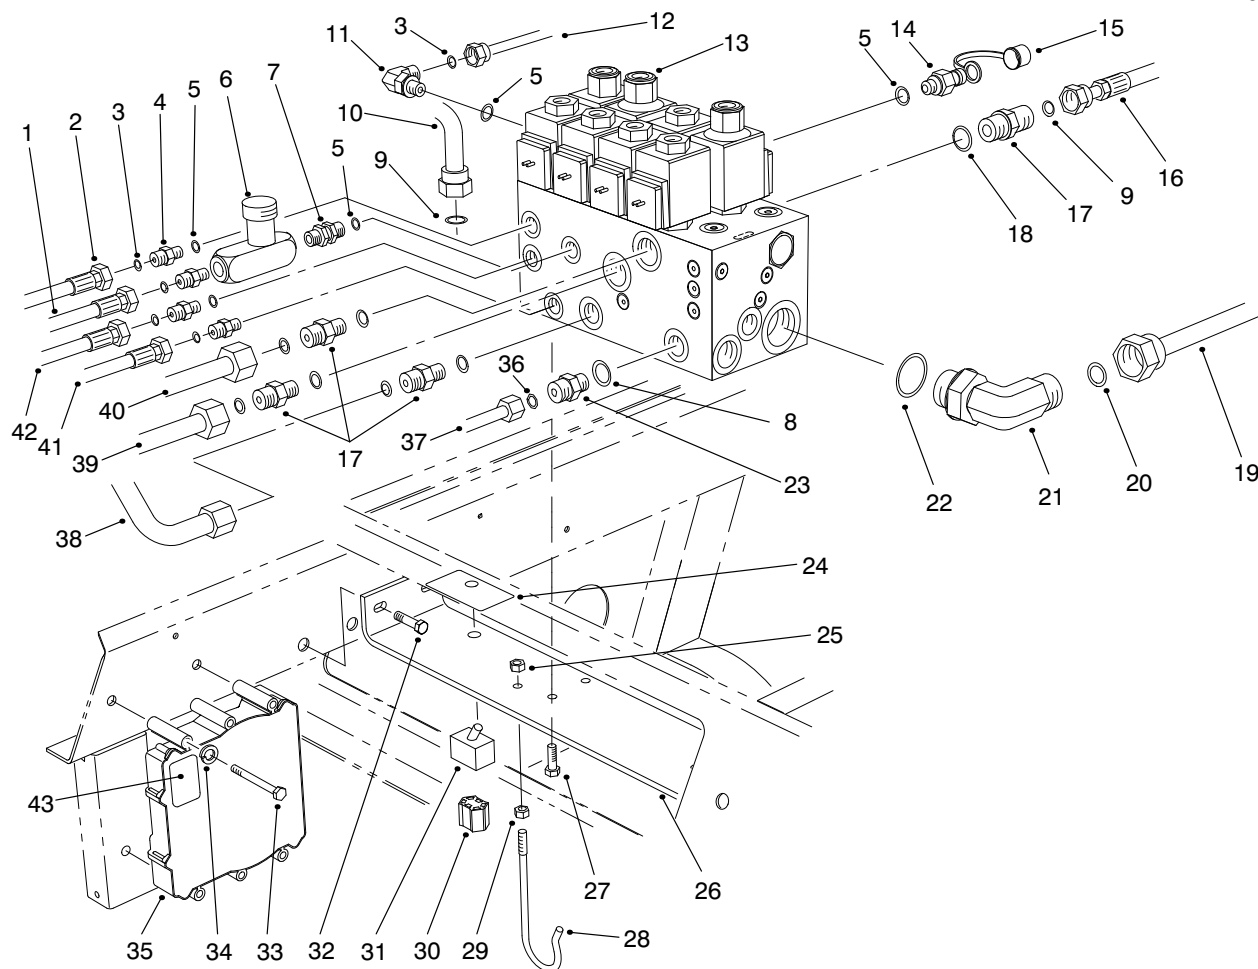

T-2088-1

FRONT HYDRAULIC CONTROL BLOCK & HOSES

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	82-6490	Asm-Hose	1	22	237-81	O-Ring	1
2	92-7562	Asm-Hose	1	23	340-2	Adapter-Hydraulic (Incl. Ref. #8 & 36)	1
3	237-21	O-Ring	5	24	93-9197	Decal-Switch, Backlap	1
4	340-92	Fitting-Hydraulic (Incl. Ref. #3 & 5)	4	24	93-1264	Decal-Switch, Backlap (Europe)	1
5	237-78	O-Ring	8	24	94-4580	Decal-Backlap (Japan)	1
6	93-7489	Valve-Control, Flow	1	25	3296-29	Nut-Lock	1
7	93-7597	Fitting-SAE (Incl. Ref. #5)	1	26	92-7519	Bracket-Block, Manifold	1
8	237-42	O-Ring	1	27	33104-016	Screw-Hex. Hd. Flange	4
9	237-30	O-Ring	4	28	93-7970	Form-Wire, Hose Mount	1
10	92-7479	Asm-Tube	1	29	3217-6	Nut-Jam	1
11	340-132	Fitting-Hydraulic 90° (Incl. Ref. #3 & 5)	1	30	94-3090	Harness-Wire, Main	1
12	92-7591	Asm-Tube	1	31	93-7487	Switch-Toggle	1
13	92-7418	Asm-Block, Control	1	32	3234-17	Screw-Flange Hd.	4
14	354-77	Fitting-Quick Connect (Incl. Ref. #5)	1	33	321-15	Screw-HH	3
15	354-79	Cap-Fitting	1	34	3253-3	Washer-Lock	3
16	92-7491	Asm-Hose	1	35	92-5720	Controller-Solid State	1
17	340-4	Fitting-Hydraulic (Incl. Ref. #9 & 18)	4	36	237-22	O-Ring	1
18	237-79	O-Ring	4	37	93-4222	Asm-Tube, Drain Return	1
19	92-7557	Asm-Tube	1	38	94-1447	Asm-Tube, Steering Ret.	1
20	237-65	O-Ring	1	39	93-4217	Asm-Tube	1
21	340-139	Fitting-Hydraulic 90° (Incl. Ref. #20 & 22)	1	40	93-4216	Asm-Tube	1
				41	92-7565	Asm-Hose	1
				42	92-7564	Asm-Hose	1
				43	93-8053	Decal-ECU Label (Europe)	1

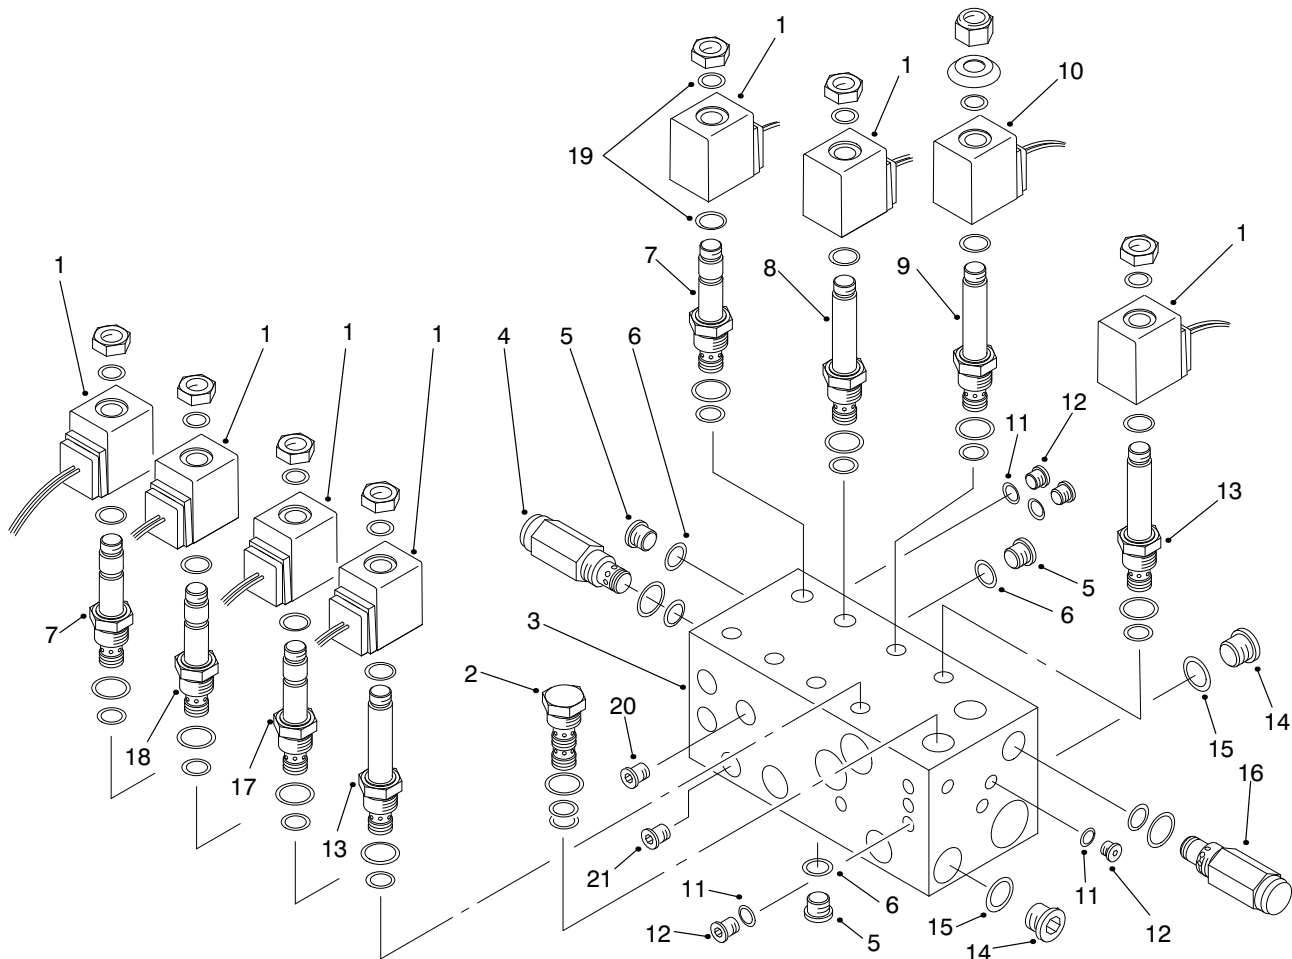 


T-2089-2

CONTROL BLOCK ASSEMBLY NO. 92-7418

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	88-9190	Solenoid-20 Watt	7	13	93-7494	Cartridge-N.O. Poppet (Use Seal Kit 75-2080)	2
2	93-7491	Cartridge-Pilot Check (Use Seal Kit 69-4260)	1	14	353-989	Plug (Incl. Ref. #15)	5
†3		Block-Manifold, Front	1	15	237-42	O-Ring	5
4	93-7492	Cartridge-Relief 2300 psi (Use Seal Kit 75-2080)	1	16	75-0920	Cartridge-Relief 3000 psi (Use Seal Kit 75-2080)	1
5	353-990	Plug (Incl. Ref. #6)	10	17	88-6980	Cartridge-N.O. Poppet (Use Seal Kit 75-2080)	1
6	237-78	O-Ring	10	18	92-6315	Cartridge-N.C. Poppet (Use Seal Kit 75-2080)	1
7	88-6990	Cartridge-N.C. (Use Seal Kit 75-2080)	2	19	94-5438	Seal-Solenoid	16
8	92-3071	Solenoid (Use Seal Kit 69-4260)	1	20	94-3077	Plug-Orifice	1
9	95-3459	Cartridge-N.O. (Use Seal Kit 75-2080)	1	21	94-8140	Plug-Orifice	1
10	88-9200	Solenoid-28 Watt	1	*	75-2080	Seal Kit	7
11	237-156	O-Ring	10	*	69-4260	Seal Kit	2
12	353-991	Plug (Incl. Ref. #11)	10				

*Not Illustrated

 †Not Serviced Separately

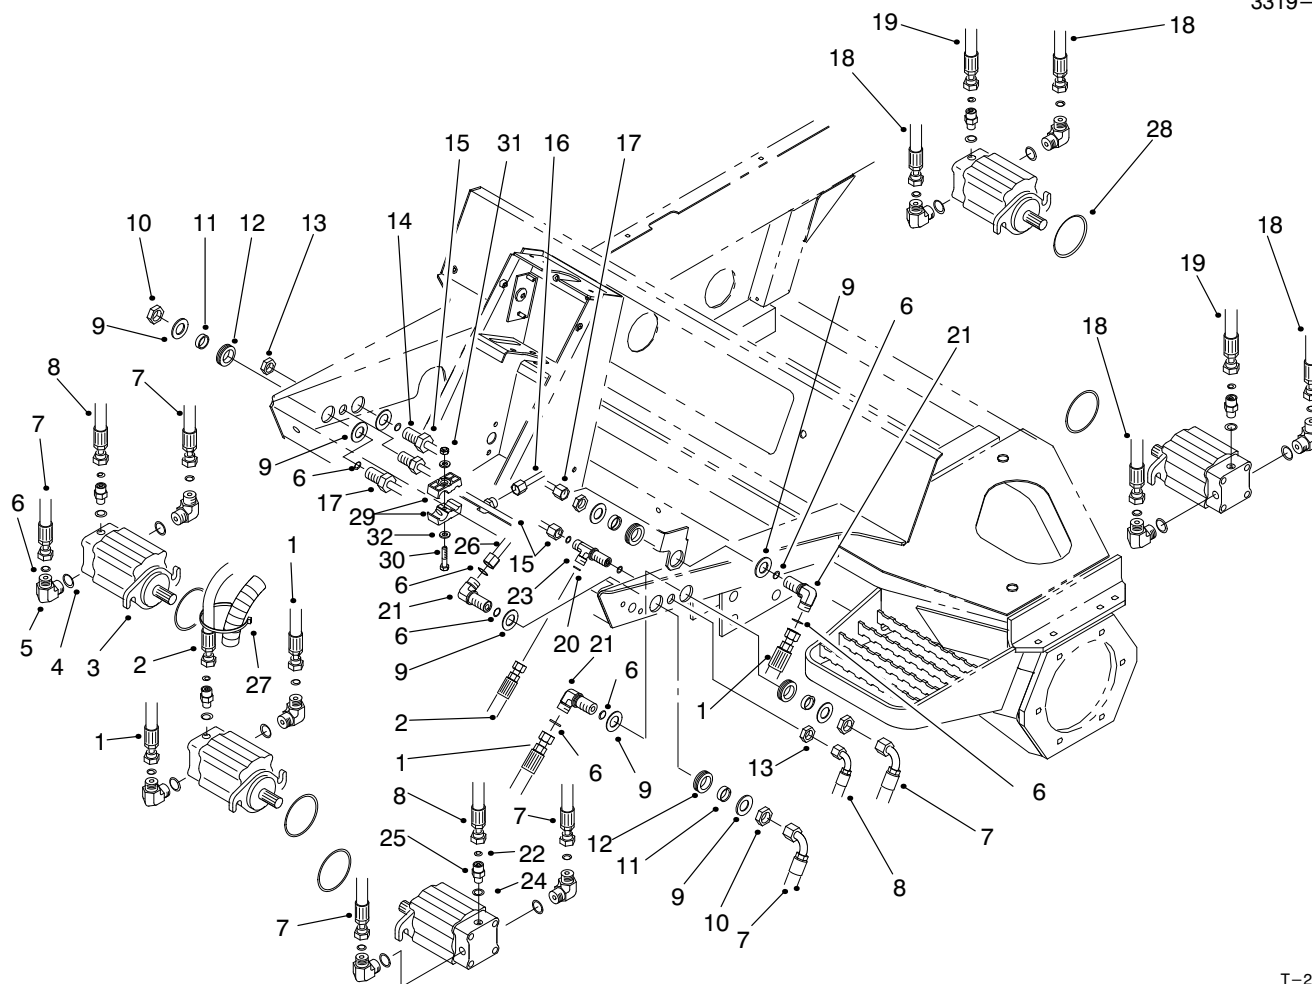


T-2090-1

REEL MOTORS & HOSES

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-7556	Asm-Hose	1	18	92-7649	Asm-Hose	4
2	92-7560	Asm-Hose	1	19	93-4201	Asm-Hose	2
3	92-7387	Motor-Hydraulic	5	20	237-22	O-Ring	3
4	237-79	O-Ring	10	21	93-9151	Fitting-Hydraulic 90° (Incl. Ref. #6)	3
5	340-98	Fitting-Hydraulic 90° (Incl. Ref. #4 & 6)	10	22	237-21	O-Ring	5
6	237-30	O-Ring	18	23	340-68	Fitting-Hydraulic, Tee (Incl. Ref. #20)	1
7	92-7555	Asm-Hose	4	24	237-78	O-Ring	5
8	92-7559	Asm-Hose	2	25	340-92	Fitting-Hydraulic (Incl. Ref. #22 & 24)	5
9	69-8930	Washer	10	26	93-4217	Asm-Tube	1
10	340-127	Nut-Bulkhead	5	27	3290-378	Tie-Cable	1
11	69-8960	Spacer	5	28	93-9783	O-Ring	10
12	240-5	Grommet	5	29	56-7972	Clamp-Tube	4
13	340-70	Nut-Bulkhead	2	30	322-7	Screw-HH	2
14	93-4216	Asm-Tube (Incl. Ref. #6)	1	31	3296-47	Nut-Lock	2
15	93-4223	Asm-Tube, Front Drain (Incl. Ref. #20)	1	32	3256-23	Washer- Flat	4
16	93-4222	Asm-Tube, Drain Return	1				
17	93-4219	Asm-Tube, #1 Bulkhead (Incl. Ref. #6)	1				

 3319-616

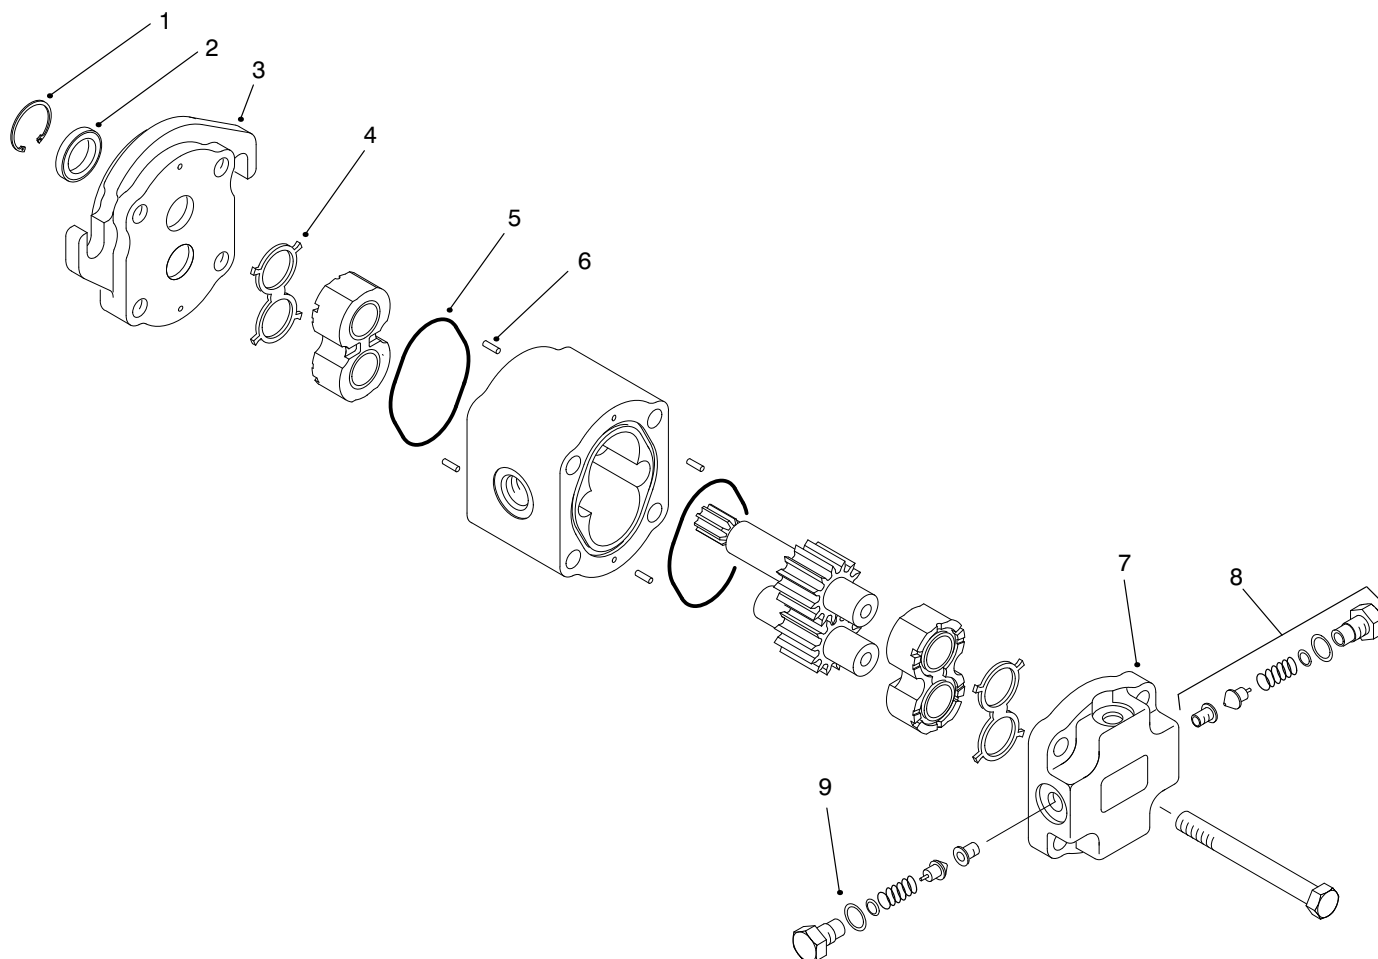


T-2091-1

REEL MOTOR NO. 92-7387 ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1		Ring-Retaining	1
2		Seal-Shaft	1
3		Flange	1
4		E-Seal	2
5		O-Ring	2
6		Pin-Dowel	4
7		Block-Valve (Incl. Ref. #8)	1

Ref. No.	Part No.	Description	No. Used
8		Valve-Adjusting	2
9		O-Ring	2
*	93-9152	Kit-Flange (Incl. Ref. #1-3 & 6)	1
*	93-9153	Kit-Seal (Incl. Ref. #1, 2, 4, 5 & 9)	1
*	93-9154	Kit-Valve Block (Incl. Ref. #6 & 7)	1

 
*Not Illustrated

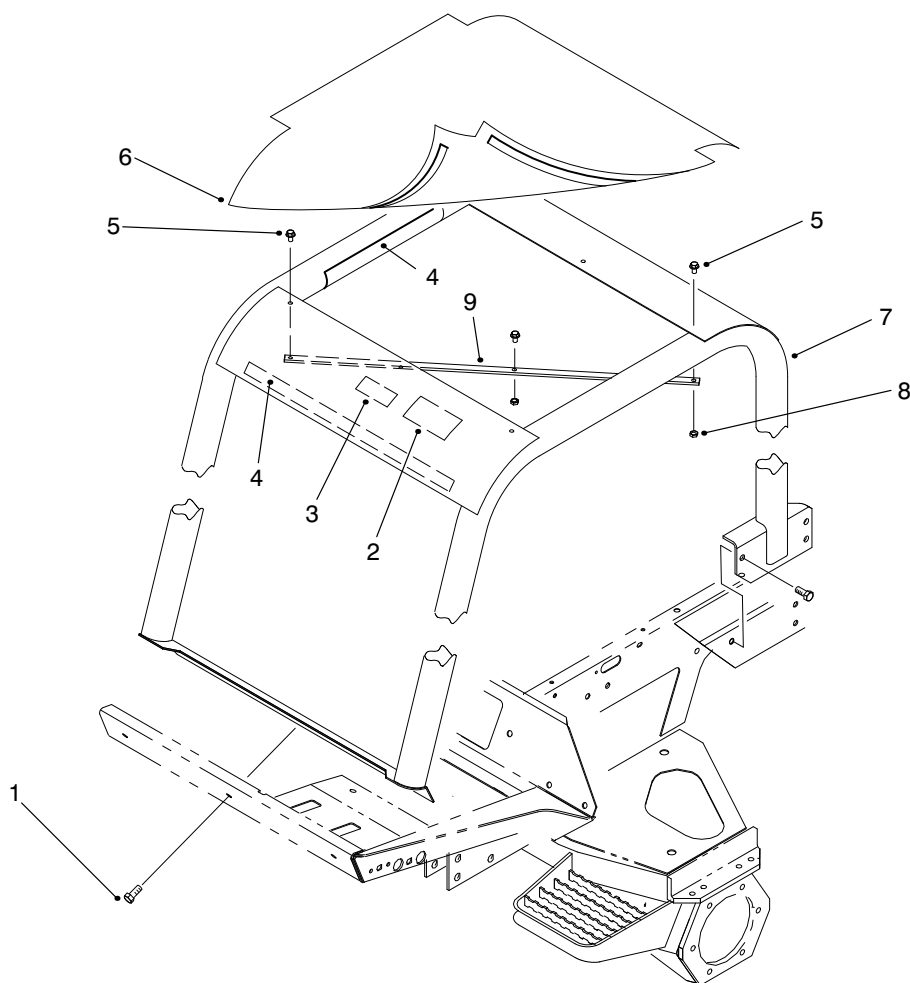

T-2092-1

ROLL OVER PROTECTION SYSTEM (ROPS)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	33106-035	Screw-HHF	3	5	33104-030	Screw-HHF	5
2	83-7430	Decal-Danger	1	6	93-9160	Cover-ROPS	1
2	93-8050	Decal-Warning (Europe)	1	7	94-2643	Frame-ROPS (Incl. Ref. #2-4)	1
2	84-4300	Decal-Warning (Japan)	1	8	33024-00	Nut-Lock	5
3	92-7540	Decal-ROPS	1	9	93-9159	Strap-Cover	2
3	93-8073	Decal-Blank (Europe)	1				
4	93-9157	Velcro	4				

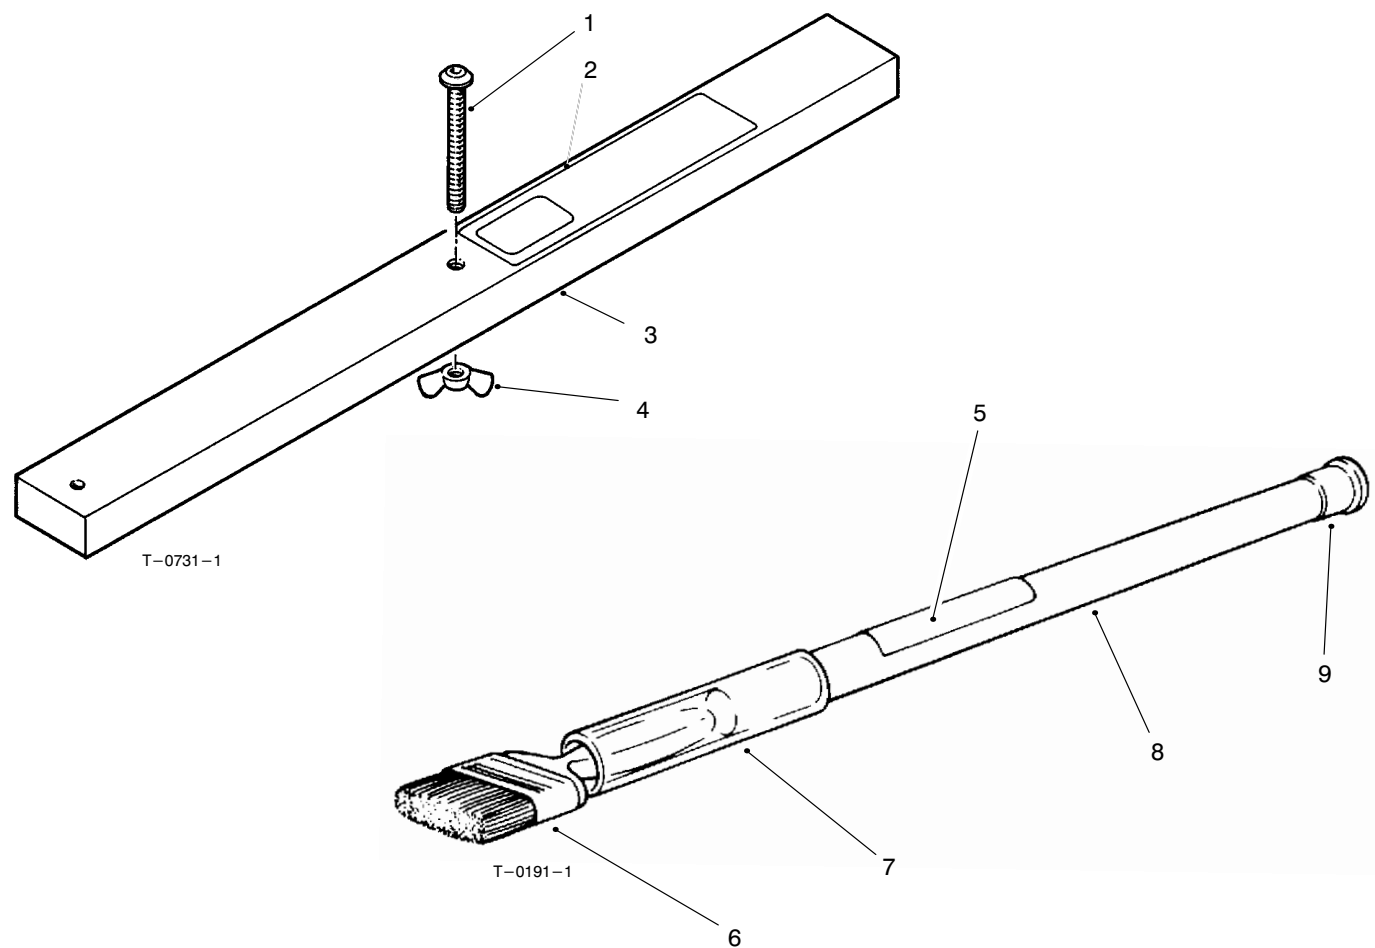 

GAUGE BAR & BACKLAPPING BRUSH ASSEMBLIES

Ref. No.	Part No.	Description	No. Used
1	32122-54	Screw-Machine Slot Hd.	1
2	59-7930	Decal	1
3	59-7900	Asm-Gauge Bar (Incl. Ref. #1-2 & 4)	1
4	32103-3	Nut-Wing	1
5	12-9140	Decal	1

Ref. No.	Part No.	Description	No. Used
6	36-4310	Brush	1
7	29-9090	Hose-Handle	1
8	29-9080	Handle	1
9	2410-18	Plug	1
*	29-9100	Asm-Backlapping Brush (Incl. Ref. #5-9)	1

*Not Illustrated

TORO PART NUMBER INDEX

3319-616

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
5-0652	Spacer	6 47 1	66-3240	Cap-Radiator (Europe)	51 22 1
12-9140	Decal	80 5 1	66-4190	Spring	8 12 1
21-4191	Asm-Seat Belt	7 4 1	66-6480	Washer	2 58 2
21-9260	Cover-Dust	3 18 1	66-8121	Standpipe	17 7 1
27-2360	Switch-Ignition	13 43 1	66-8520	Bumper-Down Stop	9 17 2
29-9080	Handle	80 8 1	66-8530	Adjuster	9 16 1
29-9090	Hose-Handle	80 7 1	66-8560	Nut-Push	9 11 4
29-9100	Asm-Backlapping Brush	80 * 1	66-8610	Weldment-Lower	9 10 1
36-3400	Decal-Warning	67 5 2	66-9290	Spacer	9 15 6
36-4310	Brush	80 6 1	67-7160	Block-Fuse	13 48 2
37-8771	Bolt-Shoulder	32 33 2	68-6150	Breather-Air	16 4 1
44-2210	Asm-Light, Warning	3 30 1	68-9420	Washer-Lock	42 4 6
46-0330	Nut-Hex	49 1 2	68-9420	Washer-Lock	38 34 3
46-6550	Fitting-Connector	17 8 1	69-2980	Seal-Inner	61 22 2
46-6560	Bushing	17 9 2	69-3020	Latch-Draw	32 34 2
46-8091	Screw-Tapping	1 14 2	69-4260	Seal Kit	66 * 1
48-7570	Screw-Hex. Hd.	34 9 3	69-4260	Seal Kit	76 * 2
48-7610	Screw-Hex. Hd.	34 46 3	69-6470	Bushing-Flange	61 18 4
48-7700	Screw-Hex. Hd.	39 38 3	69-8890	Cap-Spindle	61 15 2
48-7700	Screw-Hex. Hd.	34 45 6	69-8900	Spacer	54 59 1
48-7780	Screw-Hex. Hd.	34 42 3	69-8910	Washer	54 58 2
48-7810	Screw-Hex. Hd.	34 10 3	69-8920	Washer	25 10 4
48-7810	Screw-Mounting	49 5 3	69-8920	Washer	25 10 6
48-7840	Screw-Hex. Hd.	34 5 1	69-8930	Washer	77 9 10
48-7880	Nut	34 24 3	69-8930	Washer	64 16 8
48-7880	Nut	8 29 1	69-8950	Spacer	25 12 2
48-7890	Nut	8 30 1	69-8950	Spacer	25 12 3
48-7930	Nut-Hex.	34 28 2	69-8960	Spacer	77 11 5
48-9470	Screw	34 4 1	69-8960	Spacer	64 18 4
49-2040	Screw-Hex. Hd.	8 2 1	69-8980	Washer-Flat	72 10 4
49-2640	Seal-Shaft	21 11 1	69-8980	Washer-Flat	67 17 12
49-6440	Pedal-Accelerator	6 15 1	70-1480	Relay	8 27 1
52-1320	Decal-Fuel, Diesel	2 34 1	70-2780	Piston	69 4 1
52-5910	Ring-Retaining	8 25 1	70-2780	Piston	71 4 1
53-9681	Mount-Rubber	34 3 3	70-2780	Piston	73 5 1
55-4130	Hose - Fuel	51 54 1	71-4580	Clutch-Roller	53 15 1
56-6710	O-Ring	21 1 6	71-4590	Washer-Thrust	53 16 2
56-7972	Clamp	3 42 2	72-3560	Decal-4WD (Model 03801)	2 29 1
56-7972	Clamp-Tube	64 8 2	74-0720	Tube-Manual	7 16 1
56-7972	Clamp-Tube	77 29 4	74-3410	Asm-Radiator	32 20 1
56-7973	Clamp	4 52 6	74-3650	Fan-Engine	34 32 1
56-7973	Clamp-Tube	64 34 10	74-5500	Bolt-Wheel	53 36 10
59-7900	Asm-Gauge Bar	80 3 1	74-5700	Bearing-Needle	53 30 1
59-7930	Decal	80 2 1	74-5940	Asm-Rod, Tie	61 47 1
59-9740	Latch-Draw	1 12 1	74-5950	Latch-Swell	1 24 3
60-5700	Spring-Compression	6 43 1	74-5950	Latch-Swell	12 30 1
60-5890	Washer	21 12 1	74-6490	Hose-Water Line	34 40 2
60-6700	Screw-Hex. Hd.	67 4 6	74-6540	Tappet-Valve	38 14 8
61-2790	Filler-Screen	17 24 1	74-6550	Cup-Upper Valve Spring	37 11 8
61-2790	Filter-Screen	16 9 1	74-6560	Spring-Valve	37 10 8
62-2170	Washer-Thrust	61 17 4	74-6570	Cup-Lower Valve Spring	37 9 8
62-5550	Decal-Toro	1 1 1	74-6580	Insert-Valve (1.650mm)	37 13 8
62-7650	Gasket	17 17 1	74-6590	Insert-Valve (1.725mm)	37 * 8
63-7622	Hose-Fuel	51 15 1	74-6600	Insert-Valve (1.800mm)	37 * 8
63-7627	Hose-Fuel	17 4 1	74-6610	Insert-Valve (1.900mm)	37 * 8
63-7627	Hose-Fuel	34 27 1	74-6620	Insert-Valve (1.975mm)	37 * 8
63-7640	Sender-Fuel	17 18 1	74-6630	Insert-Valve (2.050mm)	37 * 8
63-7880	Pin-Latch, Brake	6 31 1	74-6640	Insert-Valve (2.125mm)	37 * 8
63-7900	Rack	3 1 1	74-6650	Insert-Valve (2.225mm)	37 * 8
63-8360	Key-Ignition	12 35 1	74-6660	Insert-Valve (2.250mm)	37 * 8
63-8410	Washer-Flat	17 14 3	74-6670	Insert-Valve (2.275mm)	37 * 8
63-8410	Washer-Flat	16 27 3	74-6680	Insert-Valve (2.300mm)	37 * 8
63-9920	Decal-EEC 105 DBA	8 15 1	74-6690	Insert-Valve (2.325mm)	37 * 8
65-5100	Handle-Hood	1 11 1	74-6700	Insert-Valve (2.350mm)	37 * 8
66-2920	Washer	2 59 4	74-6710	Insert-Valve (2.375mm)	37 * 8
66-2920	Washer	13 77 3	74-6720	Insert-Valve (2.400mm)	37 13 8
66-2920	Washer-Nylon	8 1 2	74-6730	Insert-Valve (2.425mm)	37 * 8
66-3160	Screw	34 11 4	74-6740	Insert-Valve (2.450mm)	37 * 8

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
74-6750	Insert-Valve (2.475mm)	37 * 8	74-7650	Washer-Flat	38 20 3
74-6760	Insert-Valve (2.500mm)	37 * 8	74-7670	Head Bolt & Washer Set	39 * 1
74-6770	Insert-Valve (2.525mm)	37 * 8	74-7770	Hose-Crankcase	35 11 1
74-6780	Insert-Valve (2.550mm)	37 * 8	74-7780	Gasket	35 12 1
74-6790	Insert-Valve (2.575mm)	37 * 8	74-7790	Screw	35 13 1
74-6800	Insert-Valve (2.600mm)	37 * 8	74-7810	Gasket-Plate	35 15 1
74-6810	Insert-Valve (2.625mm)	37 * 8	74-7820	Plate	35 16 1
74-6820	Insert-Valve (2.650mm)	37 * 8	74-7840	Plug	39 42 2
74-6830	Insert-Valve (2.675mm)	37 * 8	74-7840	Plug-27 mm Dia.	35 18 8
74-6840	Insert-Valve (2.700mm)	37 * 8	74-7840	Plug-27 mm Dia.	38 33 2
74-6850	Insert-Valve (2.725mm)	37 * 8	74-7930	Screw-Bearing Cap	35 27 10
74-6860	Insert-Valve (2.750mm)	37 * 8	74-7940	Bushing-Spring	35 28 1
74-6870	Insert-Valve (2.775mm)	37 * 8	74-7950	Screw-Plate	35 29 6
74-6880	Insert-Valve (2.800mm)	37 * 8	74-7960	Stud-Filter	35 30 1
74-6890	Insert-Valve (2.825mm)	37 * 8	74-7970	Filter-Oil	35 31 1
74-6900	Insert-Valve (2.850mm)	37 * 8	74-7990	Pin	36 16 1
74-6910	Insert-Valve (2.875mm)	37 * 8	74-7990	Pin-Spring	35 33 4
74-6920	Insert-Valve (2.900mm)	37 * 8	74-8000	Plug	35 34 2
74-6930	Insert-Valve (2.925mm)	37 * 8	74-8010	Guide-Dipstick	35 35 1
74-6940	Insert-Valve (2.950mm)	37 * 8	74-8030	Pin-Spring	35 37 1
74-6950	Insert-Valve (2.975mm)	37 * 8	74-8100	Gear-Pinion	36 4 1
74-6960	Insert-Valve (3.000mm)	37 * 8	74-8120	Key-Woodruff	36 6 2
74-6970	Insert-Valve (3.025mm)	37 * 8	74-8140	Cover	36 9 1
74-6980	Insert-Valve (3.050mm)	38 13 8	74-8150	Gasket-Cover	36 10 1
74-6990	Insert-Valve (3.075mm)	38 * 8	74-8170	Bearing Set (Std.)	36 12 2
74-7000	Insert-Valve (3.100mm)	38 * 8	74-8210	Thrust Bearing Set	36 * 2
74-7010	Insert-Valve (3.125mm)	38 * 8	74-8230	Crankshaft	36 14 1
74-7020	Insert-Valve (3.150mm)	38 * 8	74-8260	Flywheel	36 34 1
74-7030	Insert-Valve (3.175mm)	38 * 8	74-8270	Pin	36 18 3
74-7040	Insert-Valve (3.200mm)	38 * 8	74-8290	Seal-#1 Bearing Cap	36 20 2
74-7050	Insert-Valve (3.225mm)	38 * 8	74-8300	Clip-Piston Pin	36 21 8
74-7060	Insert-Valve (3.250mm)	38 * 8	74-8310	Pin-Piston	36 22 4
74-7070	Insert-Valve (3.275mm)	38 * 8	74-8320	Piston Ring Set-0.20 mm	36 * 4
74-7080	Insert-Valve (3.300mm)	38 * 8	74-8330	Piston Ring Set-0.50 mm	36 * 4
74-7090	Insert-Valve (3.325mm)	38 * 8	74-8340	Piston Ring Set-0.80 mm	36 * 4
74-7100	Insert-Valve (3.350mm)	38 * 8	74-8380	Bearing-Connecting Rod	36 27 4
74-7110	Insert-Valve (3.375mm)	38 * 8	74-8420	Piston Set-Stage #1	36 29 1
74-7120	Insert-Valve (3.400mm)	38 * 8	74-8430	Piston Set-Stage #2	36 * 1
74-7130	Insert-Valve (3.425mm)	38 * 8	74-8440	Piston Set-Stage #3	36 * 1
74-7140	Insert-Valve (3.450mm)	38 * 8	74-8610	Pin	46 7 2
74-7150	Insert-Valve (3.475mm)	38 * 8	74-8610	Pin	48 8 2
74-7160	Insert-Valve (3.500mm)	38 * 8	74-8630	Bushing-Flange	46 8 1
74-7170	Insert-Valve (3.550mm)	38 * 8	74-8650	Journal	46 12 1
74-7180	Insert-Valve (3.625mm)	38 * 8	74-8670	Union-Inlet	46 13 1
74-7190	Insert-Valve (3.700mm)	38 * 8	74-8680	Gasket	46 14 2
74-7200	Insert-Valve (3.775mm)	38 * 8	74-8710	Washer	46 16 1
74-7210	Insert-Valve (3.850mm)	38 * 8	74-8710	Washer-E.T.L.W.	50 9 1
74-7220	Insert-Valve (3.925mm)	38 * 8	74-8750	Pipe	47 12 1
74-7230	Insert-Valve (4.000mm)	38 * 8	74-8770	Plug	47 10 1
74-7240	Collar-Split	37 12 16	74-8830	Belt	40 18 1
74-7260	Bolt-Head	38 29 10	74-8870	Gasket	46 21 2
74-7270	Washer-Flat	38 28 10	74-8900	Washer-Flat	37 7 6
74-7300	Pan-Oil	35 23 1	74-8920	Washer-Copper	21 9 4
74-7310	Plug-Threaded	35 20 1	74-9100	Pad-Pedal, Forward	6 14 1
74-7320	Gasket	35 19 1	74-9110	Pad-Pedal, Reverse	6 17 1
74-7330	Screw-Hex. Hd.	35 25 23	75-0610	Tread-Foot, RH	2 * 1
74-7380	Gasket-Oil Pan	35 21 1	75-0620	Tread-Foot, LH	2 43 1
74-7400	Tube	39 41 1	75-0630	Tread-Foot, Center	2 44 1
74-7420	Ball	39 45 4	75-0920	Cartridge-Relief 3000 psi	66 13 1
74-7430	Chamber-Turbulence	39 46 4	75-0920	Cartridge-Relief 3000 psi	76 16 1
74-7440	Chamber-Turbulence	39 * 4	75-1010	Switch	12 20 1
74-7450	Seat-Intake Valve	39 48 4	75-1370	Cable-Battery, Positive	51 9 1
74-7460	Seal-Intake Valve	39 * 4	75-1370	Cable-Battery, Positive	34 17 1
74-7480	Valve-Intake	39 49 4	75-1390	Cover-Access, Front	2 39 1
74-7560	Washer-Spring	38 16 3	75-1410	Plate-Access, Floor	2 40 1
74-7600	Plug	37 4 4	75-1430	Pedal-Brake, RH	6 40 1
74-7630	Gasket-Valve Cover	38 18 1	75-1440	Pedal-Brake, LH	6 35 1
74-7640	Cover-Valve	38 19 1	75-1470	Pin-Pivot, Brake	6 46 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3319-616

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
75-1490	Rod-Brake, Park	4 54 1	76-5530	Gasket-Injector	47 3 4
75-2080	Seal Kit	66 * 5	76-5540	Plug	47 2 4
75-2080	Seal Kit	76 * 7	76-5570	Washer-Lock	49 2 2
75-2120	Shaft With Clevis	69 12 1	76-5590	Sleeve-Spring	49 4 1
75-2810	Bracket-Column, Steering	3 16 1	76-5600	Asm-Holder, Injector	47 14 4
75-2970	Pedal-Traction	6 16 1	76-6910	Kit-Rotating	31 14 1
75-3270	Hub-Pivot, Traction	6 6 1	76-6910	Kit-Rotating	30 16 1
75-3400	Shaft-Pivot, Seat	7 20 1	76-6910	Kit-Rotating	29 17 1
75-3420	Lever-Control	12 9 1	76-6930	Shaft-Drive, Straight	31 3 1
75-3480	Weldment-Upper	9 23 1	76-6950	Race-Thrust	29 5 2
75-3510	Bolt-Shoulder	9 26 2	76-6950	Race-Thrust	30 5 2
75-3530	Spring-Compression	9 3 1	76-6950	Race-Thrust	31 5 2
75-3540	Pin-Roll	9 6 1	76-6950	Race-Thrust	23 51 1
75-3550	Bumper-Seat	9 7 2	76-6960	Bearing-Thrust	29 6 1
75-3580	Plate-Mounting, Seat	9 2 1	76-6960	Bearing-Thrust	30 6 1
75-3680	Rod-Seat	8 23 1	76-6960	Bearing-Thrust	31 6 1
75-3710	Dipstick	16 8 1	76-6960	Bearing-Thrust	23 52 1
75-3860	Fender-LH	2 36 1	76-6970	Insert-Camplate	31 15 1
75-4360	Bracket-Suspension, Seat	7 15 1	76-6970	Insert-Camplate	30 17 1
75-4370	Bracket-Seat	7 10 1	76-6970	Insert-Camplate	29 18 1
75-5190	Decal-No Riders	12 13 1	76-6980	O-Ring	31 9 1
75-5190	Decal-No Riders	2 35 1	76-6980	O-Ring	29 10 1
75-5350	Pin-Cylinder, Slide	67 31 3	76-6980	O-Ring	30 10 1
75-5740	Box-Control	13 53 1	76-7000	Ring-Retaining	29 4 2
75-5780	Hinge-Cover	2 47 1	76-7000	Ring-Retaining	30 4 2
75-5780	Hinge-Cover	13 54 1	76-7000	Ring-Retaining	31 4 2
75-5810	Box-Tool	2 30 1	76-7000	Ring-Retaining	23 50 2
75-5890	Hose	67 9 2	76-7010	Ring-Retaining	29 1 1
75-6370	Cap-Sensor	67 37 1	76-7010	Ring-Retaining	30 1 1
75-6490	Lever	6 22 1	76-7010	Ring-Retaining	31 1 1
75-6510	Bracket-Lever	6 20 1	76-7010	Ring-Retaining	23 55 1
75-6550	Disc-Friction	6 19 1	76-7020	Spacer	31 2 1
75-6580	Cable-Pedal	6 7 1	76-7110	Plug	56 5 1
75-6710	Decal-Fast/Slow	6 23 1	76-7110	Plug	58 26 4
75-6820	Hour Meter	13 51 1	76-7120	Seal-Washer	56 6 1
75-6840	Knob-Knurled	2 41 8	76-7120	Seal-Washer	58 27 4
76-1910	Shaft-Pivot	9 12 2	76-7140	Plug	56 9 1
76-1920	Bushing-Sleeve	9 9 4	76-7160	Asm-Gear Case	57 * 1
76-1930	Knob-Tension Adjustment	9 19 1	76-7170	Case-Differential	57 3 1
76-1940	Spring-Extension	9 14 2	76-7180	Pinion-Mate	57 10 2
76-2940	Bumper-Rubber	9 8 2	76-7190	Gear-Side	57 9 2
76-4260	Bushing	59 3 1	76-7200	Shaft-Pinion	57 4 1
76-4910	Stud	46 26 3	76-7210	Washer-Thrust	57 11 2
76-4930	Washer	46 5 3	76-7220	Washer-Thrust	57 8 2
76-4940	Gear-Pump, Injection	46 2 1	76-7230	Washer-Lock	57 5 4
76-4950	Nut	46 1 1	76-7240	Ring-Gear	57 2 1
76-4990	Bracket	48 15 1	76-7250	Shaft-Drive	57 1 1
76-5010	Washer	40 23 3	76-7260	Bolt	57 6 8
76-5010	Washer-Spring	48 2 1	76-7270	Pin-Spring	57 7 1
76-5010	Washer-Spring	43 7 5	76-7280	Bearing	57 12 2
76-5060	Screw	48 1 1	76-7290	Shim-0.1 mm	57 13 A/R
76-5070	Asm-Oil Pump	43 1 1	76-7300	Shim-0.2 mm	57 * A/R
76-5090	Spring-Piston	43 3 1	76-7310	Shim-0.3 mm	57 * A/R
76-5100	Bolt-Shoulder	43 5 1	76-7320	Sleeve	55 4 1
76-5130	Stud	37 6 6	76-7330	Bearing	55 1 1
76-5170	Chain-Pump Drive	43 13 1	76-7340	Seal-Oil	55 6 1
76-5180	Washer-Copper	18 1 4	76-7350	Bushing	55 7 1
76-5190	Fitting-Adjustable	18 2 2	76-7360	O-Ring	55 10 1
76-5220	Element-Filter	18 5 1	76-7370	Bearing	55 11 1
76-5260	Relay-Glow Plug	50 1 1	76-7380	Washer	55 8 1
76-5260	Relay-Glow Plug	8 28 1	76-7390	Nut-Lock	55 9 1
76-5290	Washer-Spring	50 4 4	76-7400	O-Ring	55 2 2
76-5300	Asm-Filter, Fuel	17 22 1	76-7410	Shim-0.1 mm	55 3 A/R
76-5310	Washer-E.T.L.W.	50 7 1	76-7420	Shim-0.2 mm	55 * A/R
76-5320	Sensor-Water	18 9 1	76-7430	Shim-0.4 mm	55 * A/R
76-5440	Screw	38 17 2	76-7470	Pipe	56 8 1
76-5500	Screw	45 6 5	76-7480	Plug-Vent	56 7 1
76-5520	Holder-Injector	47 5 4	76-7490	Shaft-Differential	57 14 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
76-7500	Bearing	57 15 4	77-3450	Washer	40 2 2
76-7510	Pinion-14T	58 10 2	77-3470	Screw	43 10 1
76-7510	Pinion-14T	57 17 2	77-3490	Screw	43 11 1
76-7520	Shim-0.1 mm	57 16 A/R	77-3510	Spring	40 14 1
76-7530	Shim-0.2 mm	57 * A/R	77-3520	Cup	40 13 1
76-7540	Shim-0.4 mm	57 * A/R	77-3600	Plate-Closing	51 47 1
76-7550	Ring-Retaining	57 18 2	77-3620	Retainer-Cover	32 25 2
76-7560	Case-Gear	58 1 2	77-3700	Gasket-Exhaust, Manifold	34 37 1
76-7580	O-Ring	57 19 4	77-3790	Plug-Drain	35 26 1
76-7590	Spacer	57 20 2	77-4000	Shim Set	57 * 1
76-7600	Bolt-Reamer	57 21 2	77-4010	Shim Set	55 * 1
76-7610	Bolt	57 23 6	77-4020	Shim Set	57 * 1
76-7620	Washer-Lock	57 22 8	77-4030	Shim Set	58 * 1
76-7630	Holder-25 mm R.H.	58 * 1	77-4040	Shim Set	59 * 1
76-7640	Bolt	58 5 8	77-4050	Shim Set	59 * 1
76-7640	Bolt	58 28 20	80-4860	Pin-Clevis	9 1 1
76-7650	Shaft-Final Drive	58 2 2	80-8660	Spacer	64 9 2
76-7660	Holder-20 mm L.H.	58 4 1	82-3740	Cooler-Oil	32 21 1
76-7670	Bearing	58 3 4	82-5050	Screw-Hex. Hd.	19 26 2
76-7680	Case-Final Drive	58 8 2	82-5120	Adapter-Pump To Engine	34 47 1
76-7700	Shim-0.8 mm	59 25 A/R	82-6490	Asm-Hose	75 1 1
76-7710	Bolt	59 8 2	82-6490	Asm-Hose	67 28 1
76-7720	Nut	59 9 4	82-8170	Clamp	67 1 6
76-7730	Bushing	58 7 2	82-9060	Adjuster W/Handle	9 13 1
76-7740	Seal-Oil	58 6 2	83-6780	Pin-Cylinder	67 23 2
76-7750	Pinion-15T	58 11 2	83-6790	Pin-Short, Cylinder	67 39 1
76-7760	Shim-1.0 mm	59 * A/R	83-7430	Decal-Danger	79 2 1
76-7770	Cover	58 9 2	84-1710	Piston	70 4 1
76-7780	Shim-1.2 mm	59 * A/R	84-1710	Piston	74 5 1
76-7790	Shim-1.4 mm	59 * A/R	84-1740	Shaft With Clevis	70 12 1
76-7810	Holder-Bearing	58 19 2	84-1760	Kit-Seal Repair	70 * 1
76-7820	Shim-1.0 mm	59 5 A/R	84-1760	Seal repair Kit	74 * 1
76-7830	Shaft-Wheel	58 21 2	84-2780	Decal-No Step (Japan)	67 5 2
76-7840	Gear-Bevel	58 13 2	84-2860	Decal-Fuel, Diesel (Japan)	2 34 1
76-7870	Seal-Oil	58 20 2	84-3420	Decal-No Riders (Japan)	12 13 1
76-7880	Spacer	58 15 2	84-3420	Decal-No Riders (Japan)	2 35 1
76-7890	Shim-0.15 mm	58 14 A/R	84-3500	Decal-Fast/Slow (Japan)	6 23 1
76-7900	Shim-0.2 mm	58 * A/R	84-4300	Decal-Warning (Japan)	79 2 1
76-7910	Shim-0.4 mm	58 * A/R	85-4470	Potentiometer	13 52 1
76-7920	Ring-Retaining	58 16 2	85-4480	Knob	13 45 1
76-7930	Ring-Retaining	58 17 2	85-4730	Decal-Hydraulic Oil Only	1 5 1
76-7950	Bushing	59 4 1	85-4750	Display-Diagnostic ACE	10 2 1
76-7960	Fitting-Grease	59 21 2	85-6910	Decal-EEC 86 DBA	8 16 1
76-7960	Fitting-Grease	58 30 2	86-2990	Mount-Cable, Throttle	34 20 2
76-7970	Shim-1.4 mm	59 * A/R	86-5390	Kit-Seal	60 * 1
76-7980	Shim-1.2 mm	59 * A/R	86-5910	Tire	61 28 2
76-7990	Shim-.08 mm	59 * A/R	86-5910	Tire	53 33 2
76-8000	Bolt	59 6 4	86-7330	Kit-Seal Repair	69 * 1
76-8010	Washer	59 7 2	86-7330	Kit-Seal Repair	71 * 1
76-8020	Rod-Tie	59 22 1	86-7330	Seal repair Kit	73 * 1
76-8030	Asm-L.H. Rod End	59 10 1	87-5100	Washer-Snubbing	34 2 3
76-8040	Nut-L.H.	59 24 1	87-6270	Socket-Light	13 *63 4
76-8050	Asm-R.H. Rod End	59 16 1	87-6620	Screw-Torx Pan Hd.	3 31 2
76-8060	Nut-R.H.	59 23 1	88-0440	Decal-Floor Plate	67 21 1
76-8070	Adapter	55 12 1	88-1550	Stop-Axle	54 66 2
76-8350	Stop-Axle	61 10 2	88-1900	Decal-Floor Plate (Japan)	67 21 1
76-8350	Stop-Axle, 4WD	53 5 2	88-1980	Decal-Hydraulic Oil	1 5 1
76-8750	Plate - Warning, Fan	33 57 1	88-3870	Cover	3 20 1
76-9060	Gauge-Temperature	12 33 1	88-6980	Cartridge-N.C. Poppet	66 10 1
77-2870	Weldment-Hanger	9 18 1	88-6980	Cartridge-N.O. Poppet	76 17 1
77-3300	Stud	42 1 6	88-6990	Cartridge-N.C.	76 7 2
77-3310	Gasket	42 2 2	88-6990	Cartridge-N.C. Spool	66 7 1
77-3320	Nut-Hex	42 5 6	88-9190	Solenoid-20 Watt	66 1 4
77-3340	Manifold-Exhaust	42 3 1	88-9190	Solenoid-20 Watt	76 1 7
77-3400	Camshaft	40 5 1	88-9200	Solenoid-28 Watt	66 8 1
77-3410	Key	40 4 1	88-9200	Solenoid-28 Watt	76 10 1
77-3420	Gasket	40 3 1	92-1180	Asm-Seat	7 5 1
77-3440	Screw	40 1 2	92-3071	Solenoid	76 8 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3319-616

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
92-5720	Controller-Solid State	75 35 1	92-7494	Asm-Tube Steering Rear	4 50 1
92-5833	Spacer-Ball Joint	61 45 1	92-7494	Asm-Tube, Steering	53 29 1
92-5833	Spacer-Ball Joint	53 46 2	92-7494	Asm-Tube, Steering Rear	62 59 1
92-5836	Washer-Axle	54 50 1	92-7494	Asm-Tube, Steering, Rear	65 48 1
92-5837	Asm-Rod End	62 60 1	92-7495	Asm-Tube, Steering	53 28 1
92-5838	Ball Joint	54 62 1	92-7495	Asm-Tube, Steering Rear	3 47 1
92-5839	Ball Joint	61 38 1	92-7495	Asm-Tube, Steering Rear	62 56 1
92-5839	Ball Joint	53 45 1	92-7495	Asm-Tube, Steering, Rear	65 49 1
92-5844	Spacer-Ball Joint	53 47 1	92-7505	Screen	32 24 1
92-6315	Cartridge-N.C. Poppet	76 18 1	92-7511	Hood	1 18 1
92-7374	Shroud-Fan RH	32 10 1	92-7516	Bracket-Support, Cooler	32 19 1
92-7375	Shroud-Fan LH	32 44 1	92-7519	Bracket-Block, Manifold	75 26 1
92-7381	Tube-Water, Return	34 41 1	92-7520	Cable-Throttle	8 4 1
92-7382	Cover-Manifold	34 38 1	92-7521	Hose-Fuel	17 21 1
92-7385	Motor-Planetary	26 38 1	92-7521	Hose-Fuel	34 25 1
92-7386	Motor-Hydraulic	53 20 1	92-7522	Hose-Fuel	17 6 1
92-7387	Motor-Hydraulic	77 3 5	92-7525	Fitting-Hose	16 24 1
92-7388	Support-Radiator	32 45 1	92-7526	Fitting-Hydraulic, Suction	19 38 1
92-7396	Mount-Cable	8 3 1	92-7527	Strainer-Suction	16 34 1
92-7414	Assembly-Brake, RH	26 50 1	92-7528	Decal-HOC Selector	12 17 1
92-7415	Asm-Complete	27 * 1	92-7529	Asm-Cable, Brake RH	6 * 1
92-7415	Asm-Drive, Planetary	25 29 2	92-7530	Asm-Cable, Brake LH	6 30 1
92-7416	Strap-Radiator	32 42 1	92-7530	Cable-Brake, LH	25 26 1
92-7417	Asm-Brake, LH	25 28 1	92-7531	Tube-Control, Pump	6 1 1
92-7418	Asm-Block, Control	75 13 1	92-7531	Tube-Rod, Control	19 14 1
92-7419	Asm-Block, Manifold	64 42 1	92-7532	Decal-RM6500D	1 17 2
92-7420	Asm-Cylinder, Hyd. #3	72 15 1	92-7534	Assembly-Hose	53 31 1
92-7421	Asm-Cylinder, Hyd. LH	72 29 1	92-7535	Asm-Hose, Oil Cooler	32 29 2
92-7422	Tank-Fuel	17 16 1	92-7536	Asm-Hose, Rear Motor	53 9 1
92-7424	Hose-Overflow, Radiator	51 25 1	92-7537	Asm-Hose, Rear Motor	53 10 1
92-7424	Hose-Radiator, Overflow	32 6 1	92-7538	Asm-Hose	53 41 1
92-7425	Support-Mount, Engine	34 6 1	92-7539	Asm-Hose	53 40 1
92-7426	Mount-Motor	34 43 1	92-7540	Decal-ROPS	79 3 1
92-7429	Mount-Motor, RH	34 14 1	92-7543	Decal-Diagnostic ACE	10 1 1
92-7455	Plate-Bulkhead	25 16 1	92-7548	Pin-Cylinder	72 19 2
92-7456	Pin	72 14 2	92-7550	Fitting-Tee, Bulkhead	25 7 2
92-7463	Hose-Radiator, Lower	32 18 1	92-7551	Cap-Fitting	16 25 1
92-7463	Hose-Radiator, Lower	34 36 1	92-7552	Bracket-Bulkhead	54 60 1
92-7465	Hose-Suction	16 22 1	92-7553	Asm-Tube, Rear Drain	53 27 1
92-7465	Hose-Suction	19 40 1	92-7553	Asm-Tube, Rear Drain	65 51 1
92-7466	Clutch-Fan	34 31 1	92-7555	Asm-Hose	77 7 4
92-7472	Asm-Tube, Rear	53 3 1	92-7556	Asm-Hose	77 1 1
92-7473	Asm-Tube, Rear	53 4 1	92-7557	Asm-Tube	75 19 1
92-7473	Asm-Tube, Rear	25 14 1	92-7557	Asm-Tube, Cooler Front	64 40 1
92-7474	Assembly-Tube, Front	25 9 1	92-7558	Asm-Tube, Cooler	32 41 1
92-7475	Assembly-Tube, Traction	26 51 1	92-7558	Asm-Tube, Cooler Rear	64 36 1
92-7476	Assembly-Tube, Traction	26 48 1	92-7559	Asm-Hose	77 8 2
92-7477	Asm-Tube, Motor Drain	25 18 1	92-7560	Asm-Hose	77 2 1
92-7478	Asm-Tube, Motor RH	26 44 1	92-7562	Asm-Hose	75 2 1
92-7478	Tube-Motor, RH	16 30 1	92-7562	Asm-Hose	68 52 1
92-7479	Asm-Tube	75 10 1	92-7564	Asm-Hose	67 12 1
92-7483	Nut-Lug	25 4 16	92-7564	Asm-Hose	75 42 1
92-7484	Asm-Hose	19 12 1	92-7565	Asm-Hose	75 41 1
92-7485	Asm-Hose	25 20 1	92-7565	Asm-Hose	67 51 1
92-7485	Asm-Hose	19 33 1	92-7584	Asm-Tube	64 5 1
92-7486	Asm-Hose	25 19 1	92-7585	Asm-Tube	64 22 1
92-7487	Asm-Tube	26 42 1	92-7586	Gear-Driven	53 25 1
92-7488	Asm-Hose	26 43 1	92-7587	Gear-Driver	53 23 1
92-7489	Hose-Return	16 13 1	92-7591	Asm-Tube	75 12 1
92-7489	Hose-Return	19 19 1	92-7591	Asm-Tube, P2A	65 43 1
92-7490	Asm-Hose, Filter	19 25 1	92-7594	Asm-Hose	61 7 1
92-7490	Hose-Filter	16 16 1	92-7595	Asm-Hose	61 8 1
92-7491	Asm-Hose	19 11 1	92-7598	Asm-Tube, Front Drain	65 50 1
92-7491	Asm-Hose	75 16 1	92-7598	Asm-Tube, Frt. Drain	25 32 1
92-7492	Asm-Hose	19 36 1	92-7604	Pin-Stop	54 53 1
92-7492	Asm-Hose	64 41 1	92-7604	Pin-Stop	62 54 1
92-7493	Asm-Tube, Filter	32 39 1	92-7606	Bracket-Bulkhead	4 51 1
92-7493	Hose-Filter	16 20 1	92-7608	Bracket-Spring	6 12 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
92-7609	Shaft-Spring	6 45 1	93-4222	Asm-Tube, Drain Return	75 37 1
92-7610	Retainer-Spring	6 42 1	93-4223	Asm-Tube, Front Drain	77 15 1
92-7622	Asm-Hose, Steering	19 35 1	93-4224	Absorber-Shock	72 7 2
92-7622	Hose-Steering	4 49 1	93-4224	Absorber-Shock	67 16 3
92-7623	Bumper (Model 03801)	32 36 1	93-4233	Asm-Engine	34 16 1
92-7631	Sealstrip-Screen	32 22 1	93-4234	Screw-Socket Hd.	72 35 2
92-7633	Strip-Bumper, Hood	1 16 1	93-4234	Screw-Socket Hd.	67 42 3
92-7634	Asm-Hose, Traction	25 15 1	93-4246	Pin-Shock	72 12 2
92-7634	Asm-Hose, Traction	19 34 1	93-5835	Screw-Purge	46 28 1
92-7636	Asm-Hose	72 23 1	93-5856	Valve-Solenoid	46 17 1
92-7638	Asm-Hose	72 25 1	93-5986	Asm-Cover	52 4 1
92-7638	Asm-Hose	64 1 1	93-6028	Plate-Logo, Toro	32 26 1
92-7639	Asm-Hose	72 27 1	93-6668	Decal-Charging (Europe)	51 51 1
92-7639	Asm-Hose	64 37 1	93-6680	Decal-Fuel, Diesel (Europe)	2 34 1
92-7645	Fitting-Hydraulic 90°	25 8 1	93-6681	Plate-Warning	32 15 1
92-7646	Fitting-Hydraulic 45°	54 57 1	93-6686	Decal-Hydraulic Oil	1 5 1
92-7647	Asm-Tube, Drain	64 12 1	93-6687	Decal-No Step (Europe)	67 5 2
92-7648	Asm-Hose	64 2 1	93-6689	Decal-No Riders (Europe)	12 13 1
92-7649	Asm-Hose	77 18 4	93-6689	Decal-No Riders (Europe)	2 35 1
92-7649	Asm-Hose	64 20 4	93-6693	Decal-Floor Plate (Europe)	67 21 1
92-7787	Pulley-Camshaft	40 26 1	93-6699	Decal-Fast/Slow (Europe)	6 23 1
92-7791	Seal-Valve	39 52 8	93-7247	Washer-Thrust	53 6 1
92-7792	Guide-Valve (14.29mm)	39 47 8	93-7247	Washer-Thrust	62 55 1
92-7793	Guide-Valve (14.59mm)	39 * 8	93-7252	Decal-(Europe)	2 57 1
92-7794	Valve-Exhaust	39 50 4	93-7276	Decal-Danger (Europe)	51 52 1
92-7795	Seat-Exhaust Valve	39 51 4	93-7450	Spindle	27 1 1
92-8001	Sensor-Switch, Reed	7 13 1	93-7451	Cone-Bearing	27 3 1
92-8002	Sensor-Switch, Reed	67 35 1	93-7452	Cup-Bearing	27 4 1
92-8020	Adapter-Breather	16 35 3	93-7453	Housing	27 6 1
92-8753	Magnet-Switch, Reed	7 11 1	93-7454	Screw-HH	27 25 18
92-8754	Magnet-Switch, Reed	67 34 1	93-7455	Stud-Wheel	27 5 8
92-9651	Asm-Hub	61 25 2	93-7456	Gear-Ring	27 18 1
92-9652	Stud-Drive	61 36 10	93-7457	Spacer-Input	27 16 1
92-9724	Spindle-RH	61 * 1	93-7458	Plate-Cover	27 15 1
92-9725	Spindle-LH	61 21 1	93-7459	Ring-Retaining, External	27 19 1
93-0096	Decal-ACE	2 31 2	93-7460	Washer-Thrust	27 17 1
93-0307	Nut-Retainer	61 32 2	93-7461	Plug-Pipe	27 13 2
93-0309	Washer-Tab	61 31 2	93-7462	Ring-Retaining, Internal	27 14 1
93-1261	Decal-Console (Europe)	13 40 1	93-7463	Gear-Sun	27 20 1
93-1262	Decal-Hillside (Europe)	2 28 1	93-7464	Gear-Sun	27 21 1
93-1263	Decal-Tower (Europe)	3 23 1	93-7465	Washer-Thrust	27 22 1
93-1264	Decal-Switch, Backlap	75 24 1	93-7466	Pin-Dowel	27 24 2
93-1265	Decal-Hot Surface (Europe)	51 1 1	93-7467	Ring-Retaining, External	27 10 1
93-1266	Decal-Fuses (Europe)	13 58 1	93-7468	Washer-Thrust	27 9 1
93-1268	Decal-HOC Selector	12 17 1	93-7469	Cone-Bearing	27 8 1
93-2175	Asm-Pump, Gear	19 4 1	93-7470	Cup-Bearing	27 7 1
93-2650	Cylinder-Hydraulic	67 38 1	93-7471	Shaft-Input	27 23 1
93-3102	Cap-Fuel, Diesel	17 10 1	93-7472	Asm-Carrier, Secondary	27 11 1
93-3163	Spring	9 28 1	93-7473	Asm-Carrier, Primary	27 12 1
93-3164	Cap	9 27 2	93-7474	Kit-Seal	27 2 1
93-3165	Bracket	9 29 1	93-7476	Motor-Hydraulic W/Sensor	26 49 1
93-3625	Spring-Return, Joystick	13 62 1	93-7480	Bulb-LED	3 29 1
93-4201	Asm-Hose	77 19 2	93-7483	Light-Warning Bank	12 32 1
93-4201	Asm-Hose	64 21 2	93-7484	Light-Warning Bank	12 31 1
93-4205	Asm-Tube, Drain	64 15 1	93-7485	Asm-Filter, Air	51 41 1
93-4206	Asm-Tube, Drain	64 15 1	93-7487	Switch-Toggle	75 31 1
93-4207	Fitting-Tee	51 18 1	93-7488	Tank-Hydraulic	16 1 1
93-4208	Strip-Seal, Screen	32 27 1	93-7489	Valve-Control, Flow	75 6 1
93-4213	Asm-Speedometer	3 22 1	93-7491	Cartridge-Pilot Check	76 2 1
93-4215	Hose-Radiator, Upper Rear	32 5 1	93-7491	Cartridge-Pilot Check	66 14 1
93-4215	Hose-Radiator, Upper Rear	34 22 1	93-7492	Cartridge-Relief 2300 psi	76 4 1
93-4215	Hose-Radiator, Upper Rear	51 29 1	93-7494	Cartridge-N.O. Poppet	76 13 2
93-4216	Asm-Tube	77 14 1	93-7494	Cartridge-N.O. Poppet	66 15 2
93-4216	Asm-Tube	75 40 1	93-7498	Plug-Plastic	16 6 1
93-4217	Asm-Tube	77 26 1	93-7499	Gasket-Flange	16 2 1
93-4217	Asm-Tube	75 39 1	93-7524	O-Ring	72 3 2
93-4219	Asm-Tube, #1 Bulkhead	77 17 1	93-7524	O-Ring	67 47 3
93-4222	Asm-Tube, Drain Return	77 16 1	93-7551	Cylinder-Hydraulic	67 13 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3319-616

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
93-7553	Seal-Hood	32 13 1	93-8497	Gauge-Fuel	12 27 1
93-7554	Decal-Tower	3 23 1	93-8742	Pad-Brake	6 29 2
93-7555	Cylinder-Hydraulic	68 59 1	93-8744	Rivet-Pop	2 46 3
93-7579	Fender-RH	1 3 1	93-8744	Rivet-Pop	13 56 3
93-7582	Hose	1 20 1	93-9151	Fitting-Hydraulic 90°	77 21 3
93-7584	Hose-Intake	32 11 1	93-9152	Kit-Flange	78 * 1
93-7584	Hose-Intake	51 40 1	93-9153	Kit-Seal	78 * 1
93-7587	Bracket-Fuse Block	13 49 1	93-9154	Kit-Valve Block	78 * 1
93-7588	Cover-Tank	16 3 1	93-9155	Velcro	1 7 2
93-7589	Hose-Overflow	51 28 1	93-9157	Velcro	79 4 4
93-7591	Hose-Return	51 24 1	93-9159	Strap-Cover	79 9 2
93-7592	Tread-Footrest	2 42 2	93-9160	Cover-ROPS	79 6 1
93-7594	Spacer-Tubular	34 21 1	93-9161	Pin	72 1 2
93-7595	Asm-Box, Battery	51 7 1	93-9161	Pin	67 46 3
93-7597	Fitting-SAE	75 7 1	93-9162	Filter-Primary	52 3 1
93-7598	Lever-Throttle	8 10 1	93-9163	Filter-Safety	52 6 1
93-7773	Bolt	55 5 4	93-9164	Indicator	52 1 1
93-7775	Bearing	58 18 2	93-9164	Indicator-Service	51 37 1
93-7778	Housing-Axle A	56 1 1	93-9165	Decal-Instr. Service, 2WD	1 27 1
93-7779	Housing-Axle B	56 3 1	93-9166	Decal-Instr. Service, 4WD	2 27 1
93-7780	Axle-4WD	53 32 1	93-9167	Decal-Console	13 40 1
93-7781	Washer	56 10 8	93-9176	Dipstick-Oil	35 3 1
93-7782	Screw-HHF	56 4 8	93-9176	Dipstick-Peugeot	34 51 1
93-7783	Ring-Retaining	59 11 2	93-9177	Decal-Warning, Hillside	2 28 1
93-7784	Cover	59 12 2	93-9178	Muffler	51 35 1
93-7785	Nut-Slotted	59 13 2	93-9180	Cover-Box, Tool	1 26 1
93-7786	Fitting-Grease	59 17 2	93-9181	Knuckle-Pivot	72 37 2
93-7787	Bushing-Flange	56 2 2	93-9181	Knuckle-Pivot	67 44 3
93-7840	Decal-Cap (Europe)	51 53 1	93-9184	Decal-Rear Manifold Block	8 19 1
93-7960	Spacer	67 2 6	93-9190	Lift Arm #1	67 41 1
93-7961	Clamp-Drain, Case	67 3 3	93-9191	Lift Arm #2	72 * 1
93-7966	Shaft-Splined, Brake	25 31 2	93-9192	Lift Arm #3	72 6 1
93-7968	Pad-Foam, Battery	51 11 1	93-9193	Lift Arm #4	67 32 1
93-7970	Form-Wire, Hose Mount	75 28 1	93-9194	Lift Arm #5	67 6 1
93-7972	Ring-Retaining	25 30 4	93-9197	Decal-Switch, Backlap	75 24 1
93-7974	Plate-Battery, Box	51 5 1	93-9198	Decal-Hot Surface	51 1 1
93-7974	Plate-Box, Battery	17 1 1	93-9425	Decal-Danger (Europe)	2 55 1
93-7976	Ring-Retaining	28 9 1	93-9426	Decal-Danger	2 55 1
93-7977	Seal	28 2 1	93-9783	O-Ring	77 28 10
93-7978	Rod-Pull	28 3 1	94-1402	Plug	64 14 4
93-7979	Pin-Cotter, Hair	28 6 2	94-1403	Fitting-Hydraulic	64 38 1
93-7980	Link	28 5 2	94-1408	Wireform-Overflow	51 19 1
93-7981	Disc-Rotating	28 8 3	94-1410	Holder-Can, Beverage	2 53 1
93-7982	Actuator	28 11 1	94-1411	Cable-Battery, Negative	51 10 1
93-7983	Pin-Clevis	28 4 2	94-1414	Valve-Vacuator	52 5 1
93-7984	Gasket	28 10 1	94-1416	Adapter-Indicator	51 36 1
93-7985	Ball	28 13 3	94-1416	Asm-Adaptor	52 7 1
93-7986	Disc-Stationary	28 7 4	94-1417	Cover-Box, Control	13 41 1
93-7987	Spring-Extension	28 12 3	94-1418	Hose-Radiator, Upper	34 12 1
93-7989	Shaft W/Clevis	73 7 1	94-1421	Coupling-Center, Spring	34 15 1
93-7989	Shaft W/Clevis	74 7 1	94-1422	Spacer-Coupler	34 49 3
93-7990	Head	69 10 1	94-1425	Bar-Lift, Center	67 27 1
93-7990	Head	71 10 1	94-1430	Bearing-Flange	72 11 8
93-7990	Head	73 11 1	94-1430	Bushing-Flange	67 15 12
93-7991	Collar	69 13 1	94-1445	Strap-Battery	51 12 1
93-7991	Collar	71 13 1	94-1446	Tube-Drain	16 26 1
93-7991	Collar	73 13 1	94-1447	Asm-Tube, Steering Ret.	75 38 1
93-7992	Asm.-Barrel	73 2 1	94-1447	Tube-Steering, Return	16 39 1
93-7993	Head	70 10 1	94-1447	Tube-Steering, Return	3 43 1
93-7993	Head	74 11 1	94-2617	Cover-Pump	1 21 1
93-7994	Collar	70 13 1	94-2620	Head-Filter	16 18 1
93-7994	Collar	74 13 1	94-2621	Element	16 21 1
93-7995	Asm-Barrel	74 2 1	94-2624	Hose-Manifold	34 29 1
93-7996	Cover-Tower	1 2 1	94-2624	Hose-Manifold	51 39 1
93-7998	Plate-Instrument	3 24 1	94-2626	Plug-Orifice	66 17 1
93-8050	Decal-Warning (Europe)	79 2 1	94-2630	Hose-Return	51 17 1
93-8053	Decal-ECU Label (Europe)	75 43 1	94-2636	Fitting-Hydraulic 90°	19 20 1
93-8073	Decal-Blank (Europe)	79 3 1	94-2637	Fitting-Hydraulic, Straight	19 18 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
94-2638	Nut-Push On	32 23 4	94-3009	Asm-Plug	29 11 1
94-2643	Frame-ROPS	79 7 1	94-3010	Sensor-Speed Pickup	30 11 1
94-2644	Shaft With Clevis	71 12 1	94-3011	Plug	21 7 1
94-2646	Decal-Warning (Europe)	32 15 1	94-3012	Screw	21 10 8
94-2646	Guard-Fan (Europe)	32 50 1	94-3013	Plug	21 23 1
94-2800	Cap-Radiator	51 22 1	94-3014	Valve-Relief	21 26 1
94-2801	Grommet-Rubber	51 4 2	94-3015	Kit-Seal	21 * 1
94-2803	Bearing	58 12 2	94-3016	Asm-Backplate	23 8 1
94-2806	Adaptor-Nut (Europe)	54 67 6	94-3017	Adaptor-Charge Relief	23 12 1
94-2807	Adaptor-Nut (Europe)	62 62 6	94-3018	Asm-Housing	23 58 1
94-2812	Grommet	51 46 2	94-3019	Control-Servo, Manual	23 65 1
94-2814	Kit-Exhaust Coupler	51 50 1	94-3020	Shaft-Drive	23 56 1
94-2815	Sleeve-Exhaust Flange	51 49 1	94-3021	Asm-Kit, Rotating	23 35 1
94-2834	Bracket-Clamp	65 53 1	94-3022	Plate-Valve	23 1 1
94-2849	Muffler-Spark Arrestor	51 * 1	94-3023	Coupler	23 10 1
94-2913	Decal-Rear Manifold (DK)	8 19 1	94-3025	Asm-Piston, Servo	23 41 1
94-2914	Decal-Rear Manifold (NL)	8 19 1	94-3026	Asm-Camplate	23 36 1
94-2915	Decal-Rear Manifold (SF)	8 19 1	94-3027	Washer-Seal	23 48 1
94-2916	Decal-Rear Manifold (F)	8 19 1	94-3028	Screw	23 14 2
94-2917	Decal-Rear Manifold (D)	8 19 1	94-3029	Screw	23 21 2
94-2918	Decal-Rear Manifold (I)	8 19 1	94-3030	Washer	23 47 1
94-2919	Decal-Rear Manifold (J)	8 19 1	94-3031	Arm-Control	23 29 1
94-2920	Decal-Rear Manifold (N)	8 19 1	94-3032	Follower-Piston	23 33 1
94-2921	Decal-Rear Manifold (P)	8 19 1	94-3033	Plate-Cover	23 59 1
94-2922	Decal-Rear Manifold (ES)	8 19 1	94-3034	Plate-Cover	23 43 1
94-2923	Decal-Rear Manifold (S)	8 19 1	94-3035	Ring-Lock	23 9 1
94-2924	Decal-Service (Danish)	2 27 1	94-3036	Ring-Quad	23 3 1
94-2925	Decal-Service (Dutch)	2 27 1	94-3037	Ring-Retaining	23 4 1
94-2926	Decal-Service (Finnish)	2 27 1	94-3038	Plug-Dump Valve	23 5 1
94-2927	Decal-Service (French)	2 27 1	94-3039	Kit-Seal	23 * 1
94-2928	Decal-Service (German)	2 27 1	94-3040	Orifice-Valve, Control	23 31 3
94-2929	Decal-Service (Italian)	2 27 1	94-3043	Switch	24 15 1
94-2930	Decal-Service (Japan)	2 27 1	94-3044	Kit-Seal	24 * 1
94-2931	Decal-Service (Norwegian)	2 27 1	94-3050	Plate-Spring	26 54 2
94-2932	Decal-Service (Portuguese)	2 27 1	94-3052	Weight-Wheel (Europe)	62 63 2
94-2933	Decal-Service (Spanish)	2 27 1	94-3052	Weight-Wheel (Europe)	54 68 2
94-2934	Decal-Service (Swedish)	2 27 1	94-3055	Cap-Lower, Joystick	12 3 1
94-2935	Decal-Service (Danish)	1 27 1	94-3056	Snap Ring-Joystick	12 4 1
94-2936	Decal-Service (Dutch)	1 27 1	94-3057	Spring-Compression	12 5 1
94-2937	Decal-Service (Finnish)	1 27 1	94-3058	Cap-Upper, Joystick	12 6 1
94-2938	Decal-Service (French)	1 27 1	94-3059	Tube-Steering, RH	3 6 1
94-2939	Decal-Service (German)	1 27 1	94-3060	Tube-Steering, Front LH	3 13 1
94-2940	Decal-Service (Italian)	2 27 1	94-3061	Tube-Steering, Front, In	3 7 1
94-2941	Decal-Service (Japan)	2 27 1	94-3062	Tube-Steering, Front, Out	3 14 1
94-2942	Decal-Service (Norwegian)	2 27 1	94-3063	Extension-Stem, Valve	62 66 2
94-2943	Decal-Service (Portuguese)	2 27 1	94-3063	Extension-Stem, Valve	54 71 2
94-2944	Decal-Service (Spanish)	2 27 1	94-3077	Plug-Orifice	76 20 1
94-2945	Decal-Service (Swedish)	2 27 1	94-3084	Bumper (Model 03800)	32 36 1
94-3000	Asm.-Backplate	31 8 1	94-3088	Spring-Brake	26 55 2
94-3001	Housing	31 16 1	94-3090	Harness-Wire, Main	3 8 1
94-3002	Screw-HH	31 7 6	94-3090	Harness-Wire, Main	34 18 1
94-3002	Screw-HH	29 8 6	94-3090	Harness-Wire, Main	75 30 1
94-3002	Screw-HH	30 8 6	94-3090	Harness-Wire, Main	8 32 1
94-3003	Plate-Valve	31 13 1	94-3090	Harness-Wire, Main	65 45 1
94-3003	Plate-Valve	30 15 1	94-3090	Harness-Wire, Main	26 47 1
94-3003	Plate-Valve	29 16 1	94-3090	Harness-Wire, Main	13 61 1
94-3004	Shaft-Drive, Splined	29 7 1	94-3091	Decal-Fuses (Japan)	13 58 1
94-3004	Shaft-Drive, Splined	30 7 1	94-3100	Asm-Short Block	35 36 1
94-3005	Asm-Backplate	29 9 1	94-3101	Gasket Set	35 * 1
94-3005	Asm-Backplate	30 9 1	94-3102	Pin	35 14 2
94-3006	Housing	30 18 1	94-3103	Plug-Threaded	35 44 1
94-3006	Housing	29 19 1	94-3104	Plug-Threaded	35 43 2
94-3007	Washer	29 3 1	94-3105	Plug-Drain	35 38 1
94-3007	Washer	30 3 1	94-3106	Gasket	35 42 2
94-3007	Washer	23 53 1	94-3107	Gasket	35 24 2
94-3008	Seal-Shaft	29 2 1	94-3108	Plug-27.5 mm Dia.	35 * 8
94-3008	Seal-Shaft	30 2 1	94-3108	Plug-27.5 mm Dia.	38 * 2
94-3008	Seal-Shaft	23 54 1	94-3109	Plug-28.5 mm Dia.	35 * 9

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3319-616

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
94-3109	Plug-28.5 mm Dia.	38 * 2	94-3171	Screw	40 20 2
94-3110	Stud	35 45 1	94-3172	Washer	40 19 3
94-3111	Pin-Groove	35 22 2	94-3173	Screw	40 22 3
94-3112	Screw-Washer Hd.	35 17 2	94-3174	Washer	38 27 8
94-3113	Asm-Cylinder Head	37 5 1	94-3176	Gear-Oil Pump	43 2 1
94-3115	Nut-Lock	37 8 6	94-3177	Plug	43 12 2
94-3116	Gasket	37 3 1	94-3178	Strainer	43 9 1
94-3117	Plate	37 2 1	94-3179	Washer-Spring	43 4 3
94-3118	Plug	38 32 1	94-3180	Switch-Pressure	35 32 1
94-3119	Kit-Gasket	39 * 1	94-3181	Oil Filler	35 1 1
94-3120	Bracket	39 54 1	94-3182	Plug	35 2 1
94-3121	Plug	39 44 1	94-3183	Gasket	35 39 1
94-3122	Gasket	39 43 1	94-3184	Union	35 4 1
94-3123	Screw-Hex. Hd.	37 1 2	94-3186	O-Ring	35 40 1
94-3124	Bolt-Valve Cover	38 22 3	94-3190	PCV Valve	35 46 1
94-3124	Screw-Hex. Hd.	43 8 2	94-3191	Union	35 48 1
94-3125	Washer	38 21 3	94-3192	Union	35 47 1
94-3125	Washer-Flat	41 3 1	94-3194	Cover-Pump, Water	45 5 1
94-3126	Protector-Lower	41 5 1	94-3195	Gasket-Pump, Water	45 4 1
94-3127	Case-Timing, Left	41 7 1	94-3196	Inlet-Water	45 7 1
94-3128	Case-Timing, Right	41 9 1	94-3196	Inlet-Water	38 31 1
94-3129	Plug	41 4 1	94-3197	O-Ring	45 3 1
94-3130	Screw	41 2 1	94-3197	O-Ring	38 30 1
94-3131	Screw	44 1 3	94-3198	Screw	45 8 2
94-3131	Screw	41 10 1	94-3198	Screw	38 35 2
94-3132	Screw	41 1 2	94-3199	Pipe-By-Pass	39 39 1
94-3133	Nut W/Washer	41 6 1	94-3200	Hose-By-Pass	38 37 1
94-3134	Nut	41 8 1	94-3201	Hose-By-Pass	39 40 1
94-3135	Bracket-Lifting	38 15 1	94-3205	Box-Outlet	44 3 1
94-3136	Bracket-Lifting	38 23 1	94-3206	Gasket	44 9 1
94-3137	Bracket-Lifting	38 25 1	94-3207	Ring	44 4 1
94-3138	Screw	38 24 1	94-3208	Stub-Outlet	44 2 1
94-3139	Screw	38 26 1	94-3209	Thermostat	44 11 1
94-3140	Bearing Set (.30mm OS)	36 * 2	94-3210	Gasket	44 10 1
94-3141	Thrust Bearing Set (Std.)	36 13 2	94-3211	Temp Sending Unit	44 6 1
94-3142	Thrust Bearing Set	36 * 2	94-3212	Plug	44 7 2
94-3143	Thrust Bearing Set	36 * 2	94-3213	Screw	44 8 1
94-3144	Pulley	36 3 1	94-3214	Screw	44 5 1
94-3145	Screw-Hex. Hd.	36 1 1	94-3215	Manifold-Intake	42 6 1
94-3146	Washer	36 2 1	94-3216	Screw	42 8 5
94-3147	Seal	36 15 1	94-3217	Screw	42 9 4
94-3148	Seal-Shaft	36 11 1	94-3218	Screw	42 * 1
94-3149	Gear-Flywheel	36 17 1	94-3219	Pump-Injection	46 19 1
94-3150	Screw-Hex. Hd.	36 7 4	94-3220	Bracket	46 3 1
94-3151	Washer	36 8 6	94-3221	Screw	46 11 1
94-3152	Screw-Hex. Hd.	36 33 2	94-3222	Key	46 20 1
94-3153	Rod-Connecting	36 25 4	94-3223	Screw	46 25 1
94-3154	Bushing-Sleeve	36 24 4	94-3224	Washer-Flat	46 9 2
94-3155	Bearing-Connecting Rod	36 * 4	94-3225	Screw	46 4 2
94-3156	Bolt-Connecting Rod	36 28 8	94-3226	Gasket-Injector	47 4 4
94-3157	Piston Set-Std.	36 29 1	94-3227	Spacer	47 8 4
94-3158	Piston Ring Set Std.	36 23 4	94-3228	Spring	47 7 4
94-3159	Asm-Roller	40 11 1	94-3229	Union	47 11 3
94-3160	Asm-Roller	40 15 1	94-3230	Hose	47 1 1
94-3161	Screw	40 16 2	94-3231	Bracket	47 13 2
94-3161	Screw	46 24 1	94-3232	Washer-0.79 mm	47 6 4
94-3162	Stud	40 9 1	94-3233	Washer-0.82 mm	47 * 4
94-3163	Screw	40 6 1	94-3234	Washer-0.85 mm	47 * 4
94-3164	Washer-Spring	42 7 7	94-3235	Washer-0.88 mm	47 * 4
94-3164	Washer-Spring	40 10 4	94-3236	Washer-0.91 mm	47 * 4
94-3164	Washer-Spring	46 10 6	94-3237	Washer-0.94 mm	47 * 4
94-3165	Nut	46 6 4	94-3238	Washer-0.97 mm	47 * 4
94-3165	Nut-Lock	40 12 1	94-3239	Washer-1.00 mm	47 * 4
94-3166	Washer-Flat	40 7 1	94-3240	Washer-1.03 mm	47 * 4
94-3167	Bracket-Fan	40 24 1	94-3241	Washer-1.06 mm	47 * 4
94-3168	Pulley-Fan	40 21 1	94-3242	Washer-1.30 mm	47 6 4
94-3169	Screw	40 25 1	94-3243	Washer-1.33 mm	47 * 4
94-3170	Screw	40 17 1	94-3244	Washer-1.36 mm	47 * 4

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
94-3245	Washer-1.39 mm	47 * 4	94-6753	Joystick (Europe)	12 9 1
94-3246	Washer-1.42 mm	47 * 4	94-8000	Nut-Lock	53 13 1
94-3247	Washer-1.45 mm	47 * 4	94-8000	Nut-Lock	61 13 1
94-3248	Washer-1.48 mm	47 * 4	94-8018	Arm- Drag Link	59 1 1
94-3249	Tube-Outlet	46 22 1	94-8019	Arm-Tie Rod	59 2 1
94-3250	Screw-Connection	46 23 1	94-8025	O-Ring	18 3 1
94-3251	Nut	46 15 1	94-8026	Vent Assembly	18 12 1
94-3251	Nut-Lock	50 8 1	94-8027	O-Ring	18 10 1
94-3252	Alternator	48 12 1	94-8028	O-Ring	18 11 1
94-3253	Bracket	48 7 1	94-8060	Decal-Diagnostic	10 *3 1
94-3254	Screw	48 6 1	94-8061	Decal-Diagnostic	10 *3 1
94-3255	Slide	48 4 1	94-8062	Decal-Diagnostic	10 *3 1
94-3256	Belt	48 5 1	94-8063	Decal-Diagnostic	10 *3 1
94-3257	Washer-Spring	48 13 1	94-8064	Decal-Diagnostic	10 *3 1
94-3258	Screw	48 14 1	94-8065	Decal-Diagnostic	10 *3 1
94-3259	Screw	48 9 1	94-8066	Decal-Diagnostic	10 *3 1
94-3260	Washer-Flat	48 3 1	94-8067	Decal-Diagnostic	10 *3 1
94-3261	Nut	48 11 1	94-8068	Decal-Diagnostic	10 *3 1
94-3262	Nut	48 10 1	94-8069	Decal-Diagnostic	10 *3 1
94-3263	Starter	49 3 1	94-8070	Decal-Diagnostic	10 *3 1
94-3264	Plug-Glow	50 3 4	94-8102	Tube-Interlock (Europe)	12 1 1
94-3265	Cable-Glow Plug	50 2 4	94-8103	Boot-Control, Lift	12 22 1
94-3266	Nut-Hex.	50 5 4	94-8104	Switch-Micro	12 8 2
94-3267	Nut-Lock	50 6 1	94-8105	Clamp-Tube	33 54 2
94-3274	O-Ring	46 18 1	94-8108	Support-Filter, Air	51 42 1
94-3275	Solenoid-Starter	49 * 1	94-8115	Pin-Axle, Pivot	62 53 1
94-3354	Decal-Diagnostic ACE	10 1 1	94-8115	Pin-Axle, Pivot	54 55 1
94-3355	Decal-Diagnostic ACE	10 1 1	94-8132	Gasket-Head (1.48 mm)	39 53 1
94-3356	Decal-Diagnostic ACE	10 1 1	94-8133	Gasket-Head (1.52 mm)	39 * 1
94-3357	Decal-Diagnostic ACE	10 1 1	94-8134	Gasket-Head (1.58 mm)	39 * 1
94-3358	Decal-Diagnostic ACE	10 1 1	94-8135	Gasket-Head (1.62 mm)	39 * 1
94-3359	Decal-Diagnostic ACE	10 1 1	94-8140	Plug-Orifice	76 21 1
94-3360	Decal-Diagnostic ACE	10 1 1	94-8141	Cylinder-Hydraulic	53 44 1
94-3361	Decal-Diagnostic ACE	10 1 1	94-8142	Asm-Cylinder	61 39 1
94-3362	Decal-Diagnostic ACE	10 1 1	94-8146	Strip-Foam, Seat	8 34 1
94-3363	Decal-Diagnostic ACE	10 1 1	94-8147	Nozzle-Injector	47 9 4
94-3364	Decal-Diagnostic ACE	10 1 1	94-8166	O-Ring	16 7 1
94-3500	Wheel-Steering	3 19 1	94-8946	Washer-Thrust	72 38 2
94-4088	Screw	5 9 7	94-8946	Washer-Thrust	67 45 3
94-4089	Cap-End	5 10 1	94-8947	Bushing-Flange	72 4 2
94-4090	Gerotor	5 11 1	94-8947	Bushing-Flange	67 48 5
94-4091	Spacer	5 12 1	94-8948	Bushing	72 5 2
94-4092	Plate-Wear	5 14 1	94-8948	Bushing	67 49 3
94-4093	Drive	5 13 1	94-8949	Bushing-Flange	72 2 8
94-4094	Pin	5 6 1	94-8949	Bushing-Flange	67 25 12
94-4095	Kit-Spring, Centering	5 3 1	94-9950	Asm-Valve, Steering	3 5 1
94-4096	Kit-Bearing	5 8 1	94-9951	Asm-Column, Steering	3 17 1
94-4097	Asm-Plug	5 15 1	94-9952	Nut-Jam	3 21 1
94-4098	Ring-Retaining	5 5 1	94-9953	Frame-Front	2 38 1
94-4099	Kit-Seal	5 1 1	94-9955	Asm-Barrel	60 1 1
94-4100	Ball	5 16 1	94-9956	Asm-Piston Rod	60 6 1
94-4572	Decal-Hillside (Japan)	2 28 1	94-9957	Piston	60 3 1
94-4573	Decal-Tower (Japan)	3 23 1	94-9958	Gland-Cylinder	60 8 1
94-4574	Decal-Console (Japan)	13 40 1	94-9959	Asm-Barrel	63 1 1
94-4575	Decal-HOC Selector	12 17 1	94-9960	Asm-Rod, Piston	63 12 1
94-4577	Decal-Warning (Japan)	32 15 1	94-9961	Piston	63 3 1
94-4578	Decal-Hot Surface (Japan)	51 1 1	94-9962	Gland-Cylinder	63 10 1
94-4579	Decal-Danger (Japan)	2 55 1	94-9963	Ring-Retaining	63 9 1
94-4580	Decal-Backlap (Japan)	75 24 1	94-9964	Kit-Seal	63 * 1
94-5386	Decal-Diagnostic	10 *3 1	94-9965	Asm-Head, Cylinder	39 * 1
94-5438	Seal-Solenoid	66 16 10	94-9967	Circuit Breaker-50 Amp	34 * 1
94-5438	Seal-Solenoid	76 19 16	94-9968	Circuit Breaker-100 AMP	34 * 1
94-5603	Bushing-Sleeve	62 51 2	94-9969	Screw-Connection	46 27 1
94-5607	Asm-Axle, Rear	61 20 1	94-9973	Ring-Retaining	61 40 1
94-6343	Decal-Wire Identification #1	13 * 1	94-9974	Ring-Retaining	67 29 6
94-6344	Decal-Wire Identification #2	13 * 1	94-9984	Sensor-Water Level	51 23 1
94-6349	Decal-Fuses	13 58 1	94-9994	Gasket-Camshaft	40 27 1
94-6710	Fuse-2A	13 47 1	94-9998	Washer-Thrust	67 30 6

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3319-616

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
94-9999	Valve-Relief	23 7 2	237-22	O-Ring	54 64 6
95-1821	Spring-Brake, Park	3 39 1	237-30	O-Ring	77 6 18
95-3450	Pump-Piston	19 24 1	237-30	O-Ring	75 9 4
95-3459	Cartridge-N.O.	76 9 1	237-30	O-Ring	19 10 2
95-3459	Cartridge-No Flow	66 9 1	237-30	O-Ring	64 30 6
95-3464	Rim	25 5 2	237-30	O-Ring	16 31 2
95-3465	Tire	25 1 2	237-30	O-Ring	26 45 3
95-3466	Decal-Instructions, Clip	8 17 1	237-42	O-Ring	19 5 1
95-3467	Decal-Clip (Danish)	8 17 1	237-42	O-Ring	75 8 1
95-3468	Decal-Clip (Dutch)	8 17 1	237-42	O-Ring	3 12 4
95-3469	Decal-Clip (Finnish)	8 17 1	237-42	O-Ring	66 12 5
95-3470	Decal-Clip (French)	8 17 1	237-42	O-Ring	76 15 5
95-3471	Decal-Clip (German)	8 17 1	237-42	O-Ring	16 36 1
95-3472	Decal-Clip (Italian)	8 17 1	237-42	O-Ring	53 38 2
95-3473	Decal-Clip (Norwegian)	8 17 1	237-42	O-Ring	65 52 2
95-3474	Decal-Clip (Portuguese)	8 17 1	237-56	O-Ring	66 5 4
95-3475	Decal-Clip (Spanish)	8 17 1	237-58	O-Ring	53 7 6
95-3476	Decal-Clip (Swedish)	8 17 1	237-58	O-Ring	16 12 1
95-3477	Decal-Clip (Japan)	8 17 1	237-58	O-Ring	19 17 3
95-3484	Screw-Hex. Hd.	36 19 8	237-58	O-Ring	25 22 4
95-3485	Sprocket-Oil Pump	36 5 1	237-58	O-Ring	64 33 2
95-7151	Tube - Convolute	6 49 1	237-65	O-Ring	16 15 2
95-7152	Protector - Bearing	61 33 2	237-65	O-Ring	75 20 1
98-1805	Box-Degassing	51 21 1	237-65	O-Ring	19 27 1
98-2350	Plate-Seat	8 18 1	237-65	O-Ring	32 32 4
98-2352	Frame-Seat	8 5 1	237-78	O-Ring	19 3 4
98-2353	Bracket-Latch, Seat	8 8 2	237-78	O-Ring	66 3 4
98-2354	Latch-Seat	8 22 1	237-78	O-Ring	75 5 8
98-2431	Pin	67 20 2	237-78	O-Ring	76 6 10
98-2431	Pin	72 32 2	237-78	O-Ring	67 10 6
98-2437	Asm-Frame, Carrier	67 22 1	237-78	O-Ring	72 20 4
98-2463	Frame-Rear	1 22 1	237-78	O-Ring	77 24 5
217-125	Wheel	61 29 2	237-78	O-Ring	64 26 4
217-125	Wheel	53 34 2	237-78	O-Ring	61 42 2
218-446	Washer-Lock	13 39 1	237-78	O-Ring	54 51 2
218-447	Nut-Hex.	13 38 1	237-79	O-Ring	77 4 10
218-498	Nut-Hex.	12 21 2	237-79	O-Ring	75 18 4
218-533	Lens-Red	3 28 1	237-79	O-Ring	64 27 3
218-535	Nut-Lock	3 34 1	237-79	O-Ring	16 33 1
218-536	Washer-Lock, Int. Tooth	3 25 1	237-79	O-Ring	25 35 4
218-574	Fuse-7.5A	13 47 1	237-80	O-Ring	19 8 3
218-578	Fuse-10A	13 47 4	237-81	O-Ring	16 10 3
218-581	Fuse-15A	13 47 1	237-81	O-Ring	53 19 2
218-588	Screw	13 *74 2	237-81	O-Ring	19 21 1
218-589	Washer-Lock	12 34 1	237-81	O-Ring	75 22 1
218-594	Fuse-20A	13 47 1	237-81	O-Ring	25 24 4
219-17	Bulb	13 *64 4	237-81	O-Ring	64 31 1
232-24	Stem-Valve	25 2 2	237-99	O-Ring	19 13 1
232-27	Stem-Valve	61 30 2	237-101	O-Ring	19 41 1
232-27	Stem-Valve	53 35 2	237-146	O-Ring	19 29 2
233-17	Knob	3 33 1	237-156	O-Ring	76 11 10
233-42	Knob	8 11 1	237-166	O-Ring	53 17 1
233-42	Knob	6 21 1	237-166	O-Ring	25 25 2
237-7	O-Ring	13 76 4	240-2	Grommet	25 11 2
237-21	O-Ring	75 3 5	240-2	Grommet	25 11 3
237-21	O-Ring	67 8 6	240-5	Grommet	77 12 5
237-21	O-Ring	72 22 4	240-5	Grommet	64 17 4
237-21	O-Ring	77 22 5	240-7	Grommet	54 61 1
237-21	O-Ring	64 39 2	240-11	Grommet	17 15 3
237-22	O-Ring	19 7 1	240-11	Grommet	16 29 3
237-22	O-Ring	3 10 10	242-50	Nut-Lug	61 35 10
237-22	O-Ring	64 10 2	249-40	Keeper	1 9 1
237-22	O-Ring	77 20 3	2410-18	Plug	80 9 1
237-22	O-Ring	25 33 1	2410-42	Cap-Bumper	32 38 2
237-22	O-Ring	75 36 1	2410-42	Cap-Bumper	32 38 4
237-22	O-Ring	16 38 1	2410-64	Button-Plug	33 53 3
237-22	O-Ring	61 44 2	2411-36	Bearing-Rod End	6 3 2
237-22	O-Ring	62 58 2	2411-36	Bearing-Rod End	19 22 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
2411-45	Joint-Ball, RH	62 48 1	322-7	Screw-HH	3 41 1
2411-46	Joint-Ball, LH	61 48 1	322-7	Screw-Hex. Hd.	65 56 3
2412-3	Clamp-Hose	32 4 2	322-9	Screw-HH	33 55 1
2412-3	Clamp-Hose	34 13 4	323-4	Screw-Hex. Hd.	7 6 2
2412-36	Clamp-Drain	17 11 1	323-6	Screw-Hex. Hd.	53 1 2
2412-36	Clamp-Hose	32 7 1	323-6	Screw-Hex. Hd.	65 54 2
2412-36	Clamp-Hose	51 34 4	323-7	Screw-Hex. Hd.	6 10 1
2412-93	Clamp-R	7 21 1	323-7	Screw-Hex. Hd.	19 37 2
2412-93	R-Clamp	26 39 2	323-9	Screw-Hex. Hd.	6 5 1
2412-96	Clamp	68 53 1	325-4	Screw-Hex. Hd.	53 22 2
2412-96	Clamp-R	72 16 1	325-5	Screw-Hex. Hd.	32 40 2
2412-96	Clamp-R (Europe)	33 52 1	325-20	Screw-Hex. Hd.	61 1 2
2412-108	Clamp-Hose	17 3 4	325-33	Screw-Hex. Hd. 2WD	54 56 2
2412-108	Clamp-Hose	51 16 3	325-33	Screw-Hex. Hd. 4WD	54 56 4
2412-108	Clamp-Hose	34 26 2	328-7	Screw-Hex. Hd.	67 24 4
2412-111	Clamp	16 23 1	3210-5	Screw-Hex. Hd.	61 46 2
2412-111	Clamp-Hose	19 39 2	3212-4	Screw	7 8 2
2412-122	Asm-Clamp	62 50 2	3213-14	Screw-HH (Europe)	62 65 6
2412-125	Clamp-Hose	32 12 1	3213-14	Screw-HH (Europe)	54 70 6
2412-125	Clamp-Hose	34 30 1	3217-5	Nut	23 28 1
2412-125	Clamp-Hose	51 38 2	3217-6	Nut-Jam	75 29 1
2412-126	Clamp-R	13 60 1	3217-6	Nut-Jam	9 32 1
2412-129	Clamp-Hose	35 8 8	3217-25	Nut-Hex.	13 65 2
2412-129	Clamp-Hose	51 27 2	3217-26	Nut	12 23 1
2412-129	Clamp-Hose	38 36 4	3217-29	Nut-Hex.	13 *67 6
2412-129	Clamp-Hose	34 39 4	3218-4	Nut-Jam	25 27 2
2412-133	Clamp-R	7 17 2	3219-14	Nut-Hex.	13 *69 8
2412-147	Clamp - R	65 57 1	3219-14	Washer-Lock	3 26 3
2412-147	Clamp - R	33 58 1	3220-3	Nut-Jam	6 2 3
2412-150	J-Clip	34 48 1	3220-3	Nut-Jam	19 15 1
254-72	Cup-Bearing	61 26 2	3220-3	Nut-Jam	23 46 1
254-92	Cone-Bearing	61 27 2	3220-7	Nut-Jam	61 37 2
254-106	Cone-Bearing	61 23 2	3220-11	Nut-Jam	62 61 1
254-107	Cup-Bearing	61 24 2	3220-24	Nut-Lock	12 19 1
256-42	Bushing	6 39 2	3230-2	Screw-Carriage	32 48 3
256-172	Bushing	72 8 4	3234-1	Screw	16 17 2
256-172	Bushing	67 14 6	3234-5	Screw-Flange	32 9 10
256-236	Bearing-Flange	6 28 4	3234-5	Screw-Flange Hd.	51 6 3
283-58	Pin-Clevis	6 32 2	3234-7	Screw	3 15 2
302-5	Fitting-Grease	69 1 1	3234-7	Screw-(Europe)	2 56 3
302-5	Fitting-Grease	70 1 1	3234-11	Screw-Flange Head	19 16 1
302-5	Fitting-Grease	71 1 1	3234-12	Screw-Hex. Hd. Flange	61 14 2
302-5	Fitting-Grease	73 1 1	3234-14	Screw-Flange	2 37 10
302-5	Fitting-Grease	74 1 1	3234-17	Screw-HH	68 58 2
302-5	Fitting-Grease	72 36 6	3234-17	Screw-HHF	72 30 2
302-5	Fitting-Grease	61 41 1	3234-17	Screw-Flange Hd.	75 32 4
302-5	Fitting-Grease	54 54 1	3250-29	Screw	7 12 4
302-5	Fitting-Grease	68 55 9	3250-31	Screw-Pan Hd.	12 28 2
302-11	Fitting-Grease	61 19 2	3253-2	Nut-Hex.	4 55 9
302-33	Fitting-Grease	54 63 1	3253-2	Washer-Lock	13 *70 5
302-33	Fitting-Grease 90°	62 52 1	3253-3	Washer-Lock	75 34 3
302-60	Fitting-Grease	6 38 1	3253-3	Washer-Lock	23 66 1
302-60	Fitting-Grease 90°	53 42 1	3253-4	Washer-Lock	7 19 4
304-46	Fitting-Drain	17 12 1	3253-6	Washer-Lock	7 7 2
304-46	Nut-Drain Cock	32 17 1	3253-6	Washer-Lock	9 25 2
321-15	Screw-HH	75 33 3	3253-15	Washer-Lock	13 *66 2
321-39	Screw-Hex. Hd.	13 57 2	3253-15	Washer-Lock	17 19 5
322-3	Screw-HH	8 9 8	3253-33	Washer-Lock	9 31 1
322-3	Screw-HH	12 11 2	3254-1	Washer-Lock	12 24 1
322-3	Screw-Hex. Hd.	7 18 2	3254-6	Washer-Lock	12 18 1
322-3	Screw-Hex. Hd.	6 27 8	3255-8	Washer-Lock	3 37 1
322-3	Screw-Hex. Hd.	2 32 4	3255-9	Washer-Lock, Ext. Tooth	51 4 2
322-4	Screw-HH	68 54 1	3255-19	Washer-Lock	13 *75 2
322-5	Screw-Hex. Hd.	13 59 1	3255-24	Washer-Lock, Ext. Tooth	13 *68 3
322-6	Screw-HH	65 46 1	3256-1	Washer	13 37 3
322-6	Screw-Hex. Hd.	9 30 1	3256-1	Washer-Flat	3 32 2
322-6	Screw-Hex. Hd.	4 53 3	3256-1	Washer-Flat	2 48 3
322-7	Screw-HH	77 30 2	3256-3	Washer-Flat	2 33 4

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3319-616

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3256-5	Washer-Flat	9 4 1	3290-378	Tie-Cable	34 52 2
3256-5	Washer-Flat	6 44 1	3290-461	Washer-Belleville	6 24 1
3256-14	Washer-Flat	12 26 2	3290-467	Pin-Cotter, Hair	8 6 1
3256-14	Washer-Flat	3 27 2	3290-467	Pin-Cotter, Hair	1 19 2
3256-22	Washer-Flat	6 8 2	3290-489	Knob-Control, Lift	12 29 1
3256-22	Washer-Flat	3 40 5	3296-2	Nut-Lock	12 14 1
3256-23	Washer-Flat	77 32 4	3296-23	Nut-Lock	53 11 2
3256-23	Washer-Flat	7 2 8	3296-23	Nut-Lock	32 37 4
3256-23	Washer-Flat	64 7 8	3296-23	Nut-Lock	32 46 2
3256-23	Washer-Flat	12 12 3	3296-29	Nut-Lock	7 1 5
3256-23	Washer-Flat	8 14 4	3296-29	Nut-Lock	51 2 1
3256-23	Washer-Flat	3 38 6	3296-29	Nut-Lock	8 13 9
3256-23	Washer-Flat	32 49 4	3296-29	Nut-Lock	75 25 1
3256-24	Washer	9 5 1	3296-39	Nut-Lock	7 14 2
3256-24	Washer-Flat	6 4 2	3296-39	Nut-Lock	8 24 1
3256-24	Washer-Flat	23 13 4	3296-39	Nut-Lock	6 25 3
3256-24	Washer-Flat	8 21 3	3296-42	Nut-Lock	13 46 2
3256-26	Washer	54 65 1	3296-44	Nut-Lock	9 22 1
3256-26	Washer-Flat	3 2 2	3296-45	Nut-Lock	61 11 2
3256-26	Washer-Flat	9 24 2	3296-47	Nut-Lock	77 31 2
3256-26	Washer-Flat (Europe)	62 64 6	3296-47	Nut-Lock	3 36 1
3256-26	Washer-Flat (Europe)	54 69 6	3296-47	Nut-Lock	65 47 4
3256-27	Washer-Flat	32 47 2	3296-47	Nut-Lock	33 56 1
3256-29	Washer-Flat	53 12 1	3296-51	Nut-Lock	67 19 4
3256-29	Washer-Flat	61 12 1	3296-54	Nut-Lock	7 9 4
3256-42	Washer-Flat	68 61 2	3296-59	Nut-Lock	19 23 1
3256-46	Washer-Flat	9 20 1	32103-3	Nut-Wing	80 4 1
3256-46	Washer-Flat	19 42 2	32104-37	Screw-Hex. Hd.	64 6 2
3256-49	Washer-Flat	34 19 1	32104-76	Screw-Self Tapping	67 36 2
3256-56	Washer-Flat	32 16 3	32105-13	Screw-HH	13 42 4
3256-69	Washer-Flat	6 33 3	32120-8	Ring-Retaining	60 11 1
3256-77	Washer-Flat	23 44 8	32120-15	Ring-Retaining	53 24 2
3256-78	Washer-Flat	1 13 2	32120-93	Ring-Retaining	72 34 2
3258-166	Screw	1 23 3	32121-6	Pin-Roll	6 11 1
3258-166	Screw	12 36 3	32121-11	Pin-Roll	6 41 1
3269-4	Rivet-Pop	32 35 4	32121-16	Pin-Roll	6 34 1
3269-10	Washer-Flat	1 15 2	32121-45	Pin-Roll	6 13 2
3269-13	Rivet-Pop	1 10 4	32121-50	Pin-Roll	6 36 1
3296-29	Washer-Flat	72 31 2	32122-24	Screw	17 20 5
3296-29	Washer-Flat	68 57 2	32122-54	Screw-Machine Slot Hd.	80 1 1
3296-49	Nut-Lock	68 62 2	32128-20	Nut-Flange	32 8 4
3272-2	Pin-Cotter	6 9 2	32128-20	Nut-Lock	6 26 8
3272-5	Pin-Cotter	3 4 3	32128-21	Nut-Hex. Hd. Flange	53 2 2
3272-7	Pin-Cotter	59 14 2	32128-21	Nut-Lock	65 55 2
3272-10	Pin-Cotter	3 3 1	32128-25	Nut-Lock	8 7 4
3272-10	Pin-Cotter	8 20 1	32128-26	Nut-Flange	9 21 4
3272-10	Pin-Cotter	6 37 2	32128-33	Nut-Flange	2 45 3
3272-12	Pin-Cotter	61 6 2	32128-33	Nut-Lock	13 55 3
3272-12	Pin-Cotter	54 49 2	32136-14	Nut-Hex. Slotted	61 9 4
3272-13	Pin-Cotter	61 34 2	32136-14	Nut-Hex. Slotted	53 48 2
3274-59	Screw-Cap	23 30 6	32144-10	Screw	8 26 2
3274-81	Screw	23 45 8	32144-11	Screw-Self Tapping	72 17 1
3290-93	Screw-HH	12 7 4	32144-11	Screw-Thread Forming	25 17 5
3290-271	Rivet-Pop	32 3 2	32144-11	Screw-Thread Forming	3 44 2
3290-282	Rivet-Pop	34 50 1	32144-14	Screw-Hex. Hd.	6 18 2
3290-307	Pin-Cotter, Hair	8 33 1	32144-14	Screw-Hex. Hd.	67 40 3
3290-354	Plate-Nut	12 10 2	32144-18	Screw-Hex. Washer Hd.	13 50 2
3290-378	Tie-Cable	3 9 7	32148-7	Nut-Clinch	1 4 5
3290-378	Tie-Cable	51 20 5	32148-10	Nut-Clinch	32 14 2
3290-378	Tie-Cable	17 23 3	32151-10	Ring-Retaining	61 16 2
3290-378	Tie-Cable	72 24 2	32151-36	Ring-Retaining	72 18 4
3290-378	Tie-Cable	77 27 1	32151-61	Ring-Retaining	72 13 4
3290-378	Tie-Cable	8 31 2	32151-72	Retainer-Push On	32 28 2
3290-378	Tie-Cable	26 41 3	32151-96	Ring-Retaining	53 14 1
3290-378	Tie-Cable	13 44 2	32151-104	Ring-Retaining	53 43 2
3290-378	Tie-Cable	65 44 6	32152-5	Nut-Lock	62 49 2
3290-378	Tie-Cable	6 48 1	32152-10	Nut	73 3 1
3290-378	Tie-Cable	67 50 3	32152-10	Nut	74 3 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
32152-10	Nut-Lock	60	2	1	340-68	Fitting-Tee, Bulkhead	3	45	1
32152-10	Nut-Lock	63	2	1	340-70	Nut-Bulkhead	64	11	7
32152-10	Nut-Lock	69	3	1	340-70	Nut-Bulkhead	77	13	2
32152-10	Nut-Lock	70	3	1	340-70	Nut-Lock	53	26	2
32152-10	Nut-Lock	71	3	1	340-70	Nut-Lock, Bulkhead	3	46	4
33004-00	Nut-Hex. Flange	34	44	2	340-70	Nut-Lock, Bulkhead	62	57	2
33005-00	Nut-Hex. Flange	34	1	9	340-74	Nut-Bulkhead	32	31	2
33005-00	Nut-Hex. Flange	17	5	2	340-77	Fitting-Hydraulic 90°	19	6	1
33005-00	Nut-Hex. Flange	51	48	2	340-92	Fitting-Hydraulic	75	4	4
33023-00	Nut-Lock	51	32	1	340-92	Fitting-Hydraulic	67	7	1
33024-00	Nut	68	60	1	340-92	Fitting-Hydraulic	77	25	5
33024-00	Nut-Lock	79	8	5	340-92	Fitting-Hydraulic	72	26	2
33025-00	Nut	72	9	2	340-97	Fitting-Hydraulic 90°	61	43	2
33025-00	Nut	67	18	6	340-97	Fitting-Hydraulic 90°	61	43	2
33093-00	Washer	51	31	1	340-97	Fitting-Hydraulic 90°	54	52	2
33103-020	Screw-HHF	4	56	2	340-98	Fitting-Hydraulic 90°	77	5	10
33103-020	Screw-Hex. Hd. Flange	51	26	1	340-98	Fitting-Hydraulic 90°	64	28	1
33103-025	Screw-HHF	3	35	1	340-98	Fitting-Hydraulic 90°	26	46	1
33104-010	Screw-HH	72	39	4	340-103	Fitting-Hydraulic 45°	72	21	1
33104-016	Screw-Hex. Hd. Flange	75	27	4	340-105	Fitting-Hydraulic 90°	19	9	2
33104-016	Screw-Hex. Hd. Flange	51	43	2	340-117	Cap-Fitting	4	48	1
33104-020	Screw-HHF (Europe)	33	51	3	340-126	Nut-Bulkhead	53	8	3
33104-020	Screw-Hex. Hd. Flange	16	5	6	340-127	Nut-Bulkhead	25	6	1
33104-020	Screw-Hex. Hd. Flange	34	35	2	340-127	Nut-Bulkhead	77	10	5
33104-025	Screw-Hex. Hd. Flange	64	13	4	340-127	Nut-Bulkhead	64	19	4
33104-030	Screw-HHF	79	5	5	340-128	Nut-Bulkhead	25	13	2
33104-060	Screw-HH	68	56	1	340-128	Nut-Bulkhead	25	13	3
33105-025	Screw-Hex. Hd. Flange	17	13	3	340-129	Fitting-Hydraulic 90°	19	30	1
33105-025	Screw-Hex. Hd. Flange	16	28	3	340-129	Fitting-Hydraulic 90°	19	31	1
33105-030	Screw-Hex. Hd. Flange	17	2	2	340-132	Fitting-Hydraulic 90°	67	11	5
33105-030	Screw-Hex. Hd. Flange	32	2	2	340-132	Fitting-Hydraulic 90°	75	11	1
33105-030	Screw-Hex. Hd. Flange	34	8	6	340-132	Fitting-Hydraulic 90°	64	25	2
33105-030	Screw-Hex. Hd. Flange	51	14	2	340-132	Fitting-Hydraulic 90°	72	28	1
33105-035	Screw-Flange	2	54	2	340-139	Fitting-Elbow 90°	16	14	1
33105-070	Screw-Hex. Hd. Flange	34	7	3	340-139	Fitting-Hydraulic 90°	75	21	1
33106-030	Screw-Hex. Hd. Flange	25	21	12	340-142	Fitting-Hydraulic 90°	53	21	1
33106-035	Screw-HHF	79	1	3	340-142	Fitting-Hydraulic 90°	25	23	4
33106-035	Screw-HHF	1	6	8	340-142	Fitting-Hydraulic 90°	16	19	1
33106-090	Screw-Hex. Hd. Flange	25	36	8	340-148	Fitting-Tee	64	32	1
33108-025	Screw-Hex. Hd. Flange	32	1	2	340-154	Fitting-Hydraulic 90°	64	4	2
33108-035	Screw	1	25	6	340-157	Fitting-Tee	16	32	1
33116-120	Screw-Hex. Hd.	26	37	4	340-161	Fitting-Adapter	64	3	1
340-2	Adapter	3	11	4	353-508	Plug	53	39	1
340-2	Adapter	16	37	1	353-989	Plug	66	11	5
340-2	Adapter	53	37	1	353-989	Plug	76	14	5
340-2	Adapter-Hydraulic	75	23	1	353-990	Plug	66	4	4
340-4	Fitting-Hydraulic	75	17	4	353-990	Plug	76	5	10
340-4	Fitting-Hydraulic	64	29	1	353-991	Plug	66	6	4
340-5	Fitting-Hydraulic	26	40	2	353-991	Plug	76	12	10
340-9	Fitting-Hydraulic	16	11	1	354-77	Fitting-Quick Connect	19	2	4
340-9	Fitting-Hydraulic	53	18	1	354-77	Fitting-Quick Connect	75	14	1
340-15	Fitting-Hydraulic 90°	19	30	1	354-77	Fitting-Quick Connect	64	23	1
340-17	Fitting-Hydraulic 90°	19	28		354-79	Cap-Dust	19	1	4
340-18	Fitting-Hydraulic 90°	25	34	1	354-79	Cap-Fitting	75	15	1
340-65	O-Ring	26	*53	6	354-79	Cap-Fitting	64	24	1
340-65	O-Ring	19	32	2					
340-68	Fitting-Hydraulic, Tee	77	23	1					

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Reelmaster 6500D has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame under the operator's platform. In any correspondence concerning the Reelmaster 6500D, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the Reelmaster 6500D.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Frame & Body Assembly	1-2	Collector Assembly	44
Steering Tower Assembly	3-4	Water Pump Assembly	45
Steering Control Valve Asm. 94-9950	5	Fuel Injection Pump Assembly	46
Traction & Brake Pedal Assembly	6	Fuel Injector Assembly	47
Seat Frame & Throttle Assembly	7-8	Alternator Assembly	48
Seat Suspension Assembly	9	Starter Assembly	49
Diagnostic - ACE Display Assembly	10	Glow Plug & Glow Relay	50
Electrical Schematic	11	Engine Components Assembly	51
Control Console Assembly	12-13	Air Cleaner Assembly No. 93-7485	52
Hydraulic Schematic Model 03800	14	4-WD Axle Assembly (Model No. 03801)	53-54
Hydraulic Schematic Model 03801	15	Sleeve Assembly (Model No. 03801)	55
Hydraulic Filter & Reservoir Assembly	16	Axle Housing Assembly (Model No. 03801)	56
Fuel Tank & Filter Assembly	17	Differential & Shaft Assembly (Model No. 03801)	57
Fuel Filter Assembly	18	Steering Gear Case Asm. (Model No. 03801)	58
Pump Installation Assembly	19	Steering Arm Linkage (Model No. 03801)	59
Gear Pump Assembly No. 93-2175	20-21	Hydraulic Cylinder No. 94-8141	60
Servo Controlled Piston Pump Asm. No. 95-3450	22-23	2-WD Rear Axle Assembly (Model No. 03800)	61-62
Manual Servo Control No. 94-3019	24	Hydraulic Cylinder No. 94-8142	63
Front Hydraulic Drive & Brake Assembly	25-26	Rear Hydraulic Control Block & Tubes	64-65
Planetary Drive Assembly No. 92-7415	27	Manifold Assembly No. 92-7419	66
Brake Asm. No. 92-7414 RH & 92-7417 LH	28	Front Lift Arms Assembly	67-68
Hydraulic Motor Assembly No. 92-7385	29	Hydraulic Cylinder No. 93-7555	69
Hydraulic Motor Asm. No. 93-7476 W/Sensor	30	Hydraulic Cylinder No. 93-7551	70
4-WD Hydraulic Motor Asm. No. 92-7386	31	Hydraulic Cylinder No. 93-2650	71
Radiator & Shroud Assembly	32-33	Rear Lift Arm Assembly	72
Engine Installation Assembly	34	Hydraulic Cylinder No. 93-7420	73
Crankcase Assembly	35	Hydraulic Cylinder No. 93-7421	74
Crankshaft Assembly	36	Front Hydraulic Control Block & Hoses	75
Cylinder Head Assembly	37-39	Control Block Assembly No. 92-7418	76
Camshaft & Fan Support Assembly	40	Reel Motor & Hoses	77
Timing Cover	41	Reel Motor Assembly No. 92-7387	78
Intake & Exhaust Manifold Assembly	42	Roll Over Protection System (ROPS)	79
Oil Pump Assembly	43	Guage Bar & Backlapping Brush Assemblies	80
		Numerical Parts Index	81-94

MAINTENANCE RECORD

[illegible]

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

Litho in U.S.A.