



**Proline**  
**Recycler<sup>®</sup> /Rear Bagger**  
Model No. 22160 – 8900001 & Up

---

**Parts Catalog**

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

| Description                              | Page | Description                      | Page  |
|------------------------------------------|------|----------------------------------|-------|
| Housing Assembly . . . . .               | 1-2  | Engine-Gts 200 . . . . .         | 7-15  |
| Engine & Blade Assembly . . . . .        | 3    | Toro Part Number Index . . . . . | 16-17 |
| Fuel Tank Assembly . . . . .             | 4    |                                  |       |
| Handle Assembly . . . . .                | 5    |                                  |       |
| Grass Bag Assembly No. 98-9220 . . . . . | 6    |                                  |       |

Note:

Accessories

| Description                  | Model / Parts No. | Description | Model / Parts No. |
|------------------------------|-------------------|-------------|-------------------|
| Side Discharge Kit . . . . . | Model No. 59199   |             |                   |

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

| Abbreviation   | Meaning                | Abbreviation    | Meaning                           |
|----------------|------------------------|-----------------|-----------------------------------|
| AR . . . . .   | as required            | HWHTF . . . . . | hex washer head<br>thread forming |
| ASM . . . . .  | assembly               | INC . . . . .   | incorporated                      |
| CARR . . . . . | carriage               | LH . . . . .    | left hand                         |
| DEG . . . . .  | degrees                | PH . . . . .    | pan head                          |
| FH . . . . .   | flat head              | PPH . . . . .   | Phillips pan head                 |
| GA . . . . .   | gauge                  | PTO . . . . .   | power take off                    |
| HF . . . . .   | hex flange             | RH . . . . .    | right hand                        |
| HFW . . . . .  | hex flange washer      | SFH . . . . .   | slotted fillister head            |
| HH . . . . .   | hex head               | SH . . . . .    | square head                       |
| HHF . . . . .  | hex head flange        | SHWH . . . . .  | slotted hex washer head           |
| HHST . . . . . | hex head self tapping  | SPH . . . . .   | slotted pan head                  |
| HJ . . . . .   | hex jam                | STD . . . . .   | standard                          |
| HOC . . . . .  | height-of-cut          | TAP . . . . .   | self tapping                      |
| HS . . . . .   | hex socket             | TH . . . . .    | truss head                        |
| HSBH . . . . . | hex socket button head | TTH . . . . .   | Torx truss head                   |
| HSFH . . . . . | hex socket flat head   | WH . . . . .    | wing head                         |
| HSH . . . . .  | hex socket head        |                 |                                   |
| HWH . . . . .  | hex washer head        |                 |                                   |

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

## Service Assemblies

Parts within service assemblies have reference numbers in the form  $X:Y$ .  $X$  is the reference number of the service assembly and  $Y$  is a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

 
Reference numbers of this type appear in part lists and as callouts in illustrations.

## Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form  $X (Y)$ .  $X$  is the reference number.  $Y$  in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.




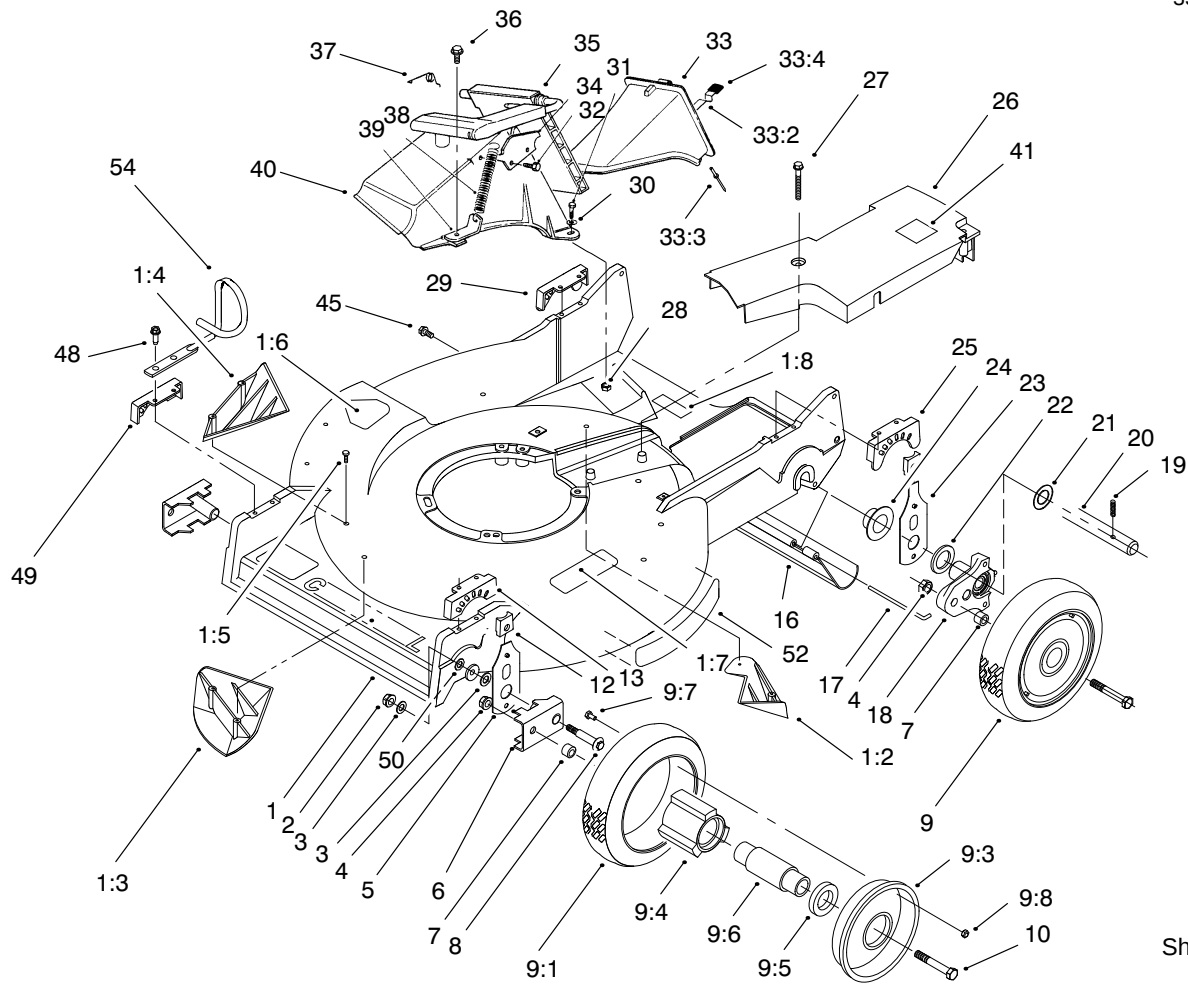

Sheet No.:2

## Housing Assembly (Cont.)

 
| Ref. No. | Part No. | Qty. | Description      | Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|------------------|----------|----------|------|-------------|
| 37       | 80-3770  | 1    | Retainer-Door    |          |          |      |             |
| 38       | 76-4660  | 1    | Spring-Extension |          |          |      |             |
| 39       | 71-9350  | 1    | Spring-Bracket   |          |          |      |             |
| 40       | 82-9152  | 1    | Chute-Discharge  |          |          |      |             |
| 41       | 52-2610  | 1    | Grease-Label-Hp  |          |          |      |             |
| 45       | 46-6810  | 1    | Screw HWH        |          |          |      |             |
| 48       | 49-2040  | 8    | Screw-HH         |          |          |      |             |
| 49       | 49-8770  | 1    | Quadrant-Front   |          |          |      |             |
| 50       | 257-3    | 2    | Washer-Thrust    |          |          |      |             |
| 52       | 92-7988  | 1    | Decal-Recycler   |          |          |      |             |
| 54       | 98-9227  | 1    | Guard-Primer     |          |          |      |             |

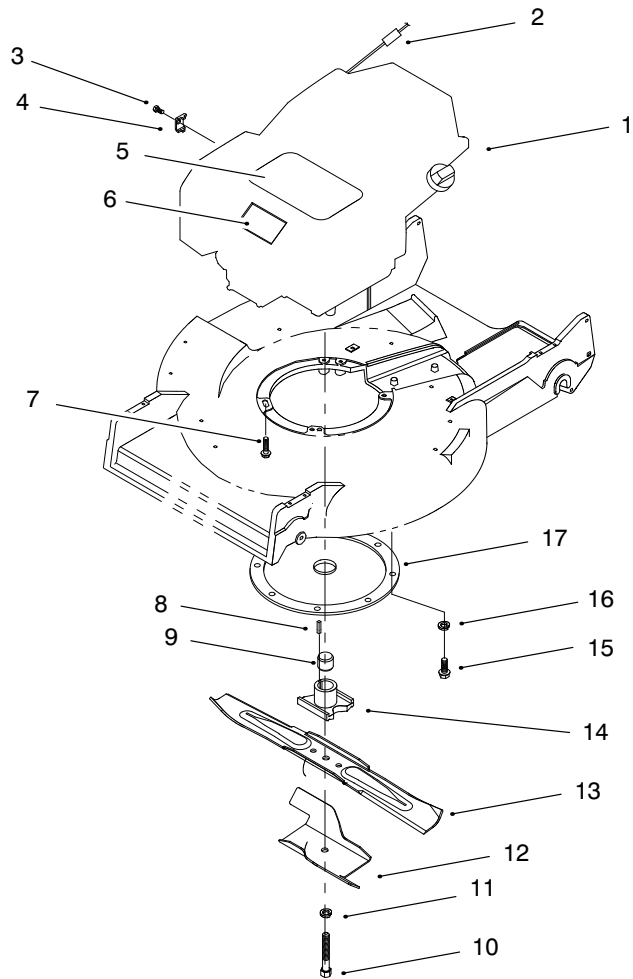

Sheet No.:3

Engine & Blade Assembly

| Ref. No. | Part No.  | Qty. | Description              | Ref. No. | Part No. | Qty. | Description |
|----------|-----------|------|--------------------------|----------|----------|------|-------------|
| 1        | 98-9236   | 1    | Engine-Gts 200           |          |          |      |             |
| 2        | 2210-316  | 1    | Rope-Stop                |          |          |      |             |
| 3        | 93-8470   | 1    | Screw-Clamp              |          |          |      |             |
| 4        | 2210-249  | 1    | Clamp-Casing             |          |          |      |             |
| 5        | 98-2002   | 1    | Decal-Engine             |          |          |      |             |
| 6        | 84-4960   | 1    | Decal-Proline            |          |          |      |             |
| 7        | 32144-102 | 3    | Screw                    |          |          |      |             |
| 8        | 27-8590   | 1    | Key-Square               |          |          |      |             |
| 9        | 52-2190   | 1    | Spacer-Retainer          |          |          |      |             |
| 10       | 26-0670   | 1    | Bolt-Blade               |          |          |      |             |
| 11       | 3253-22   | 1    | Washer-Lock              |          |          |      |             |
| 12       | 92-1599   | 1    | Stiffener-Blade          |          |          |      |             |
| 13       | 91-2256   | 1    | Blade-Generation li      |          |          |      |             |
| 14       | 52-2170   | 1    | Wa-Retainer              |          |          |      |             |
| 15       | 32144-70  | 3    | Screw-TAP                |          |          |      |             |
| 16       | 3254-6    | 3    | Washer-Lock Int          |          |          |      |             |
| 17       | 48-2591   | 1    | ASM-Crankshaft Protector |          |          |      |             |

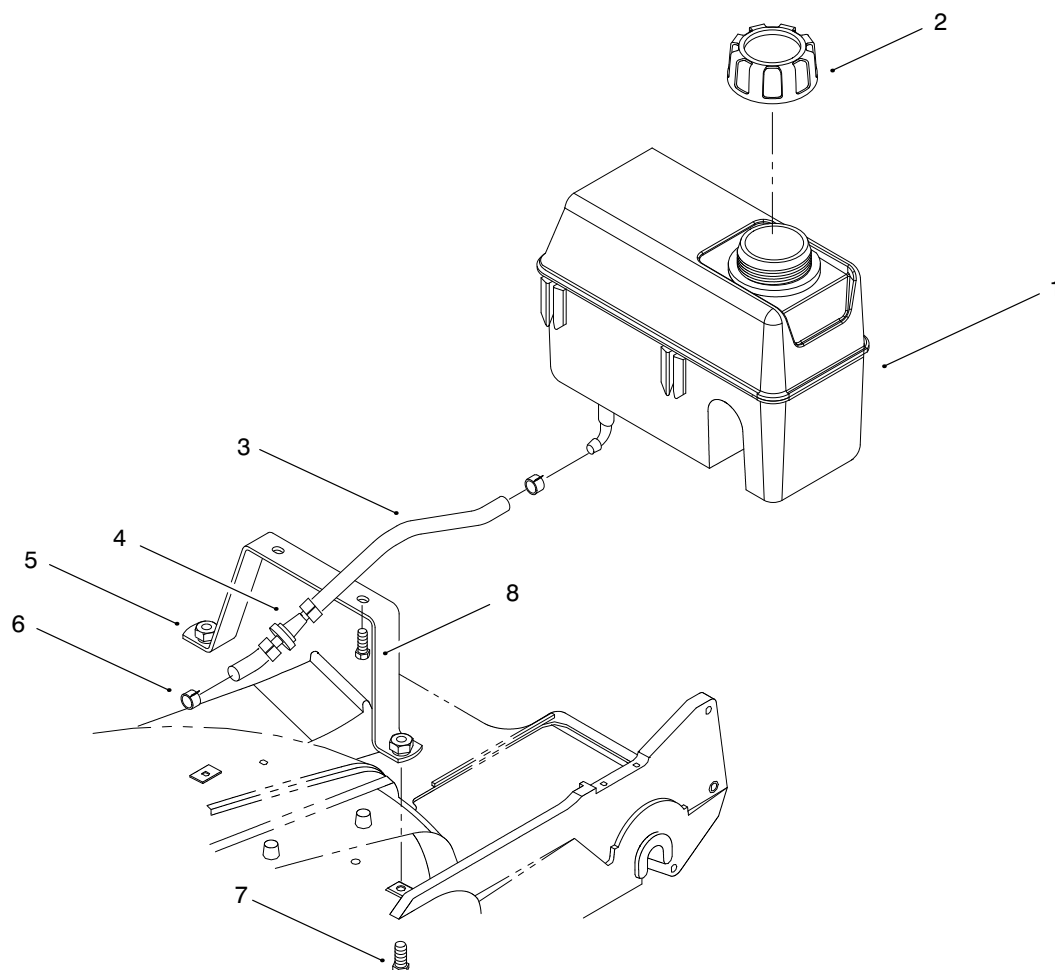 


Sheet No.:4

## Fuel Tank Assembly
 
| Ref. No. | Part No. | Qty. | Description   |
|----------|----------|------|---------------|
| 1        | 93-3166  | 1    | Tank-Gas      |
| 2        | 55-3570  | 1    | Cap-Fuel      |
| 3        | 51-3210  | 2    | Fuel Line     |
| 4        | 71-9280  | 1    | Filter-Fuel   |
| 5        | 84-9170  | 1    | Wa-Base       |
| 6        | 2412-95  | 4    | Clamp         |
| 7        | 323-6    | 2    | Screw-HH      |
| 8        | 46-8091  | 2    | Screw-Tapping |

| Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|-------------|
|          |          |      |             |

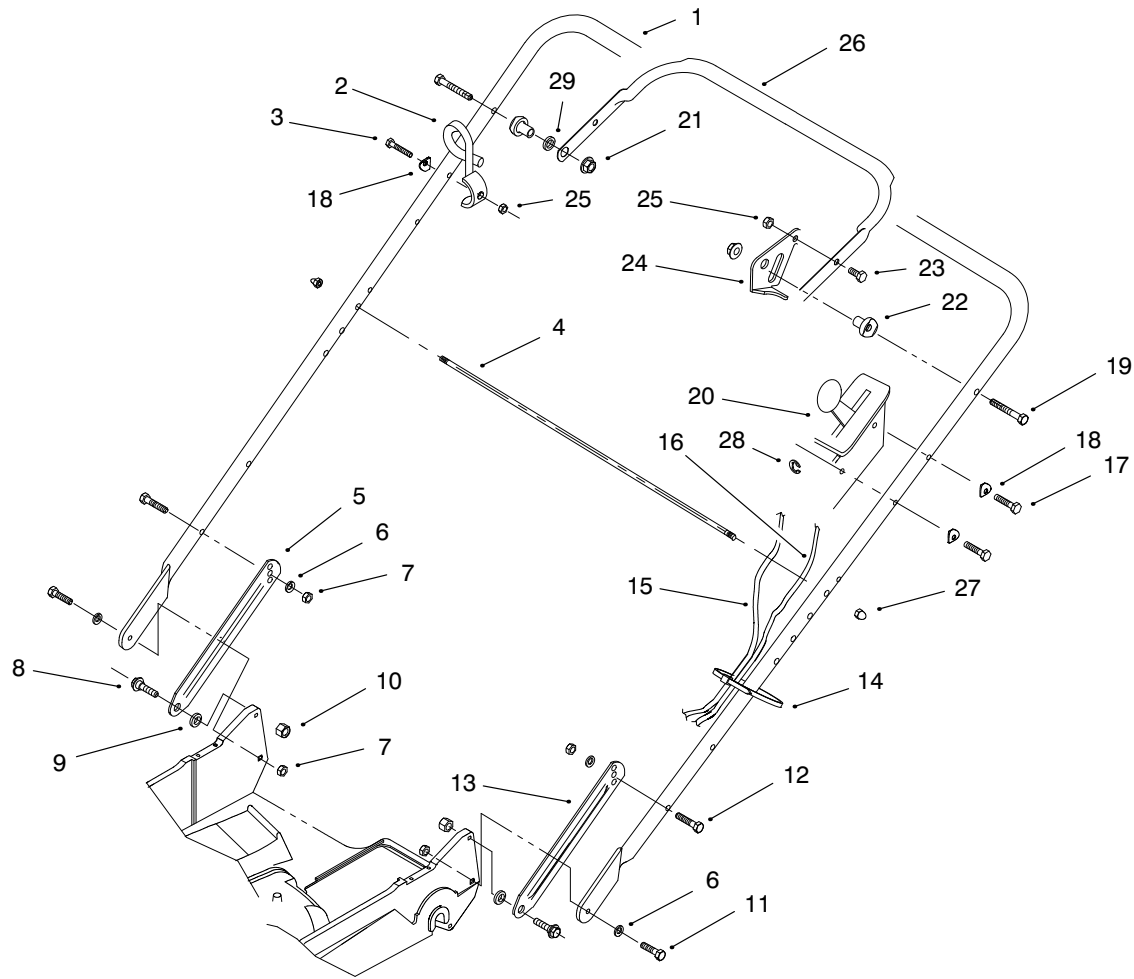


Sheet No.:5

## Handle Assembly
 
| Ref. No. | Part No. | Qty. | Description              |
|----------|----------|------|--------------------------|
| 1        | 98-2000  | 1    | Handle                   |
| 2        | 46-8081  | 1    | Guide-Rope               |
| 3        | 321-9    | 1    | Screw-HH                 |
| 4        | 48-2810  | 1    | Rod-Support              |
| 5        | 84-8401  | 1    | Latch-Handle             |
| 6        | 3290-456 | 4    | Washer-Lock              |
| 7        | 3296-29  | 4    | Nut-Lock                 |
| 8        | 27-7210  | 2    | Screw-Shoulder           |
| 9        | 3-3287   | 2    | Spacer                   |
| 10       | 3296-47  | 2    | Nut-Lock                 |
| 11       | 322-6    | 2    | Screw-HH                 |
| 12       | 322-7    | 2    | Screw-HH                 |
| 13       | 84-8361  | 1    | Latch-Handle             |
| 14       | 3290-378 | 1    | Tie-Cable                |
| 15       | 93-3662  | 1    | Cable-Brake              |
| 16       | 98-2047  | 1    | Cable-Throttle           |
| 17       | 321-13   | 2    | Screw-HH                 |
| 18       | 3-7501   | 3    | Washer-Curved            |
| 19       | 322-11   | 2    | Screw-HH                 |
| 20       | 98-2001  | 1    | Bracket-Throttle Control |
| 21       | 3296-58  | 2    | Nut-Flange               |
| 22       | 49-1630  | 2    | Spacer-Support           |
| 23       | 321-4    | 1    | Screw-HH                 |
| 24       | 66-5350  | 1    | Lever-Control            |
| 25       | 3296-42  | 2    | Nut-Lock                 |

| Ref. No. | Part No. | Qty. | Description  |
|----------|----------|------|--------------|
| 26       | 61-8270  | 1    | Bar-Control  |
| 27       | 32111-7  | 2    | Nut-Cap      |
| 28       | 32151-86 | 2    | Ring-E       |
| 29       | 256-276  | 2    | Spacer-Nylon |

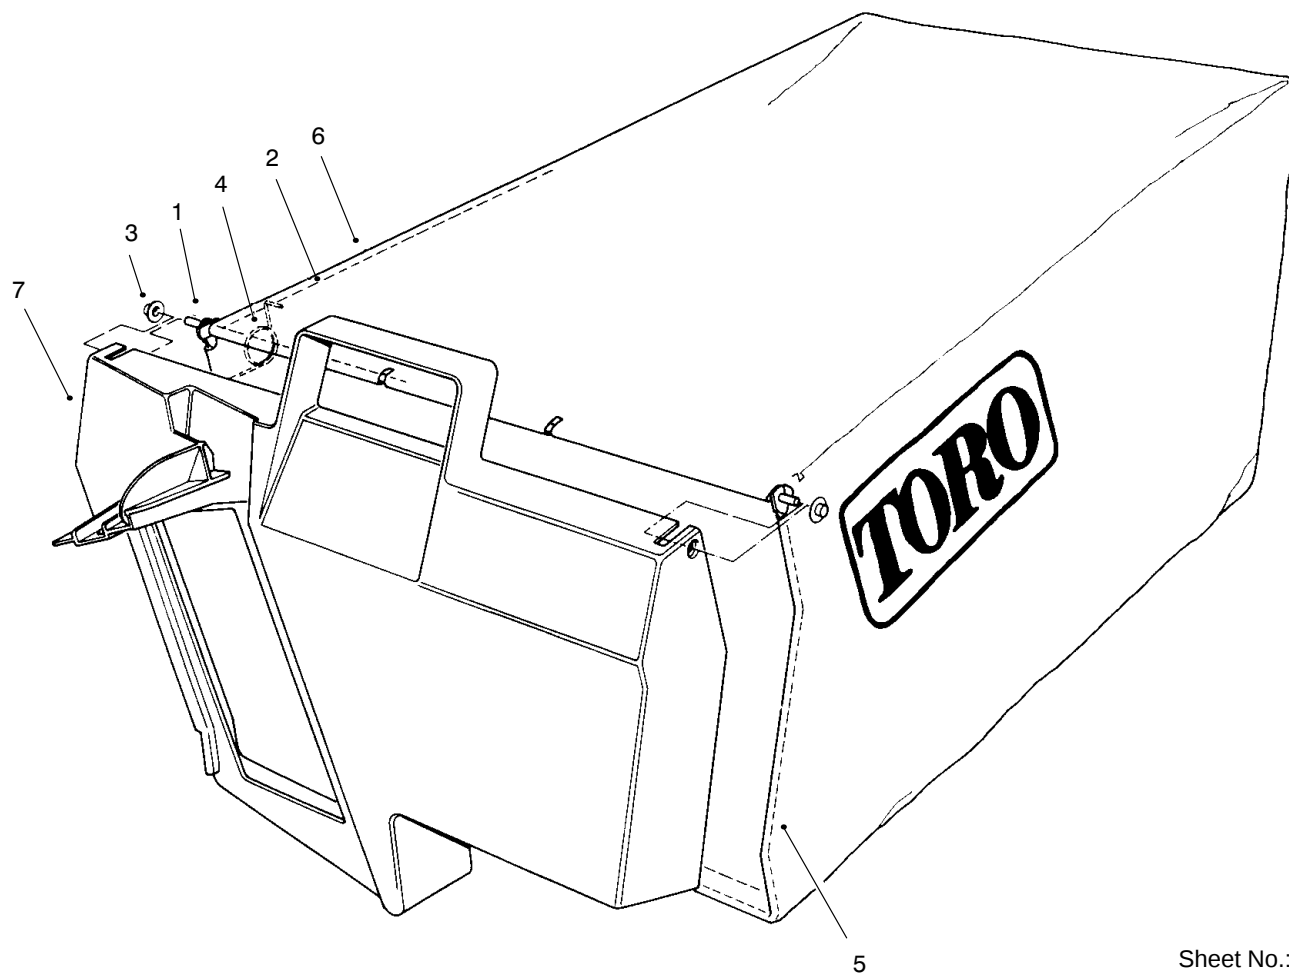


Sheet No.:100

# Grass Bag Assembly No. 98-9220
 
| Ref. No. | Part No. | Qty. | Description       |
|----------|----------|------|-------------------|
| *0       | 98-9220  | 1    | Grass Bag-Proline |
| 1        | 33-4820  | 1    | Hinge-Door        |
| 2        | 42-4030  | 1    | Frame-Bag         |
| 3        | 3290-422 | 2    | Nut-Push          |
| 4        | 36-6910  | 2    | Spring            |
| 5        | 42-4020  | 1    | Frame-Bag         |
| 6        | 98-9222  | 1    | Bag-Grass         |
| 7        | 48-2840  | 1    | Door-Bag          |

| Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|-------------|
|          |          |      |             |

\* Not illustrated

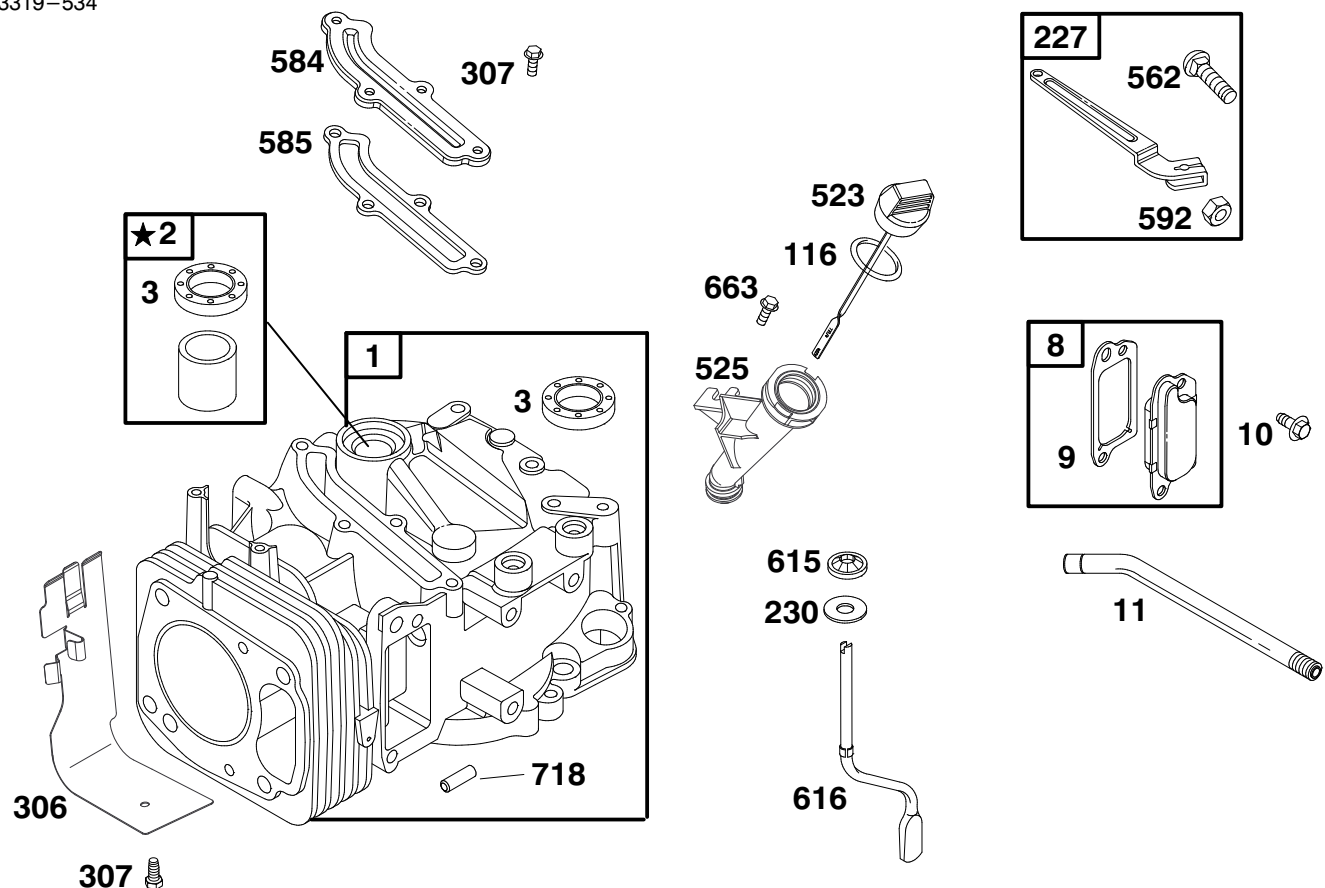

★ **REQUIRES SPECIAL TOOLS  
TO INSTALL. SEE REPAIR  
INSTRUCTION MANUAL.**

Assemblies include all parts shown in frames.


## ENGINE GTS-200
 
| Ref. No. | Part No. | Description           | No. Used |
|----------|----------|-----------------------|----------|
| 1        | 99-0900  | Cylinder Assembly     | 1        |
| 2        | 99-0911  | Bushing               | 1        |
| ★3       | 99-0912  | Seal - Oil            | 1        |
| 8        | 77-9260  | Breather Assy.        | 1        |
| †★9      | 99-0913  | Gasket - Breather     | 1        |
| 10       | 99-0914  | Screw - Hex.          | 1        |
| 11       | 99-0915  | Tube - Breather       | 1        |
| ★116     | 99-0916  | Seal - O Ring         | 1        |
| 227      | 99-0917  | Lever Assembly - Gov. | 1        |
| 230      | 99-0918  | Washer - Gov. Crank   | 1        |
| 306      | 99-0919  | Shield - Cylinder     | 1        |

| Ref. No. | Part No. | Description       | No. Used |
|----------|----------|-------------------|----------|
| 307      | 99-0920  | Screw - Hex.      | 1        |
| 523      | 77-7260  | Dipstick          | 1        |
| 525      | 99-0906  | Tube - Oil Filler | 1        |
| 562      | 99-0921  | Screw - Hex.      | 1        |
| 584      | 99-0922  | Baffle - Cylinder | 1        |
| ★585     | 99-0923  | Gasket - Breather | 1        |
| 592      | 99-0924  | Nut - Hex.        | 1        |
| 615      | 99-0925  | Fastener          | 1        |
| 616      | 99-0926  | Crank - Governor  | 1        |
| 663      | 99-0927  | Screw - Hex.      | 1        |
| 718      | 99-0928  | Dowel - Sleeve    | 1        |

★ Included in Gasket Set - Part No. 99-0902

† Included in Valve Overhaul Gasket Set - Part No. 99-0904

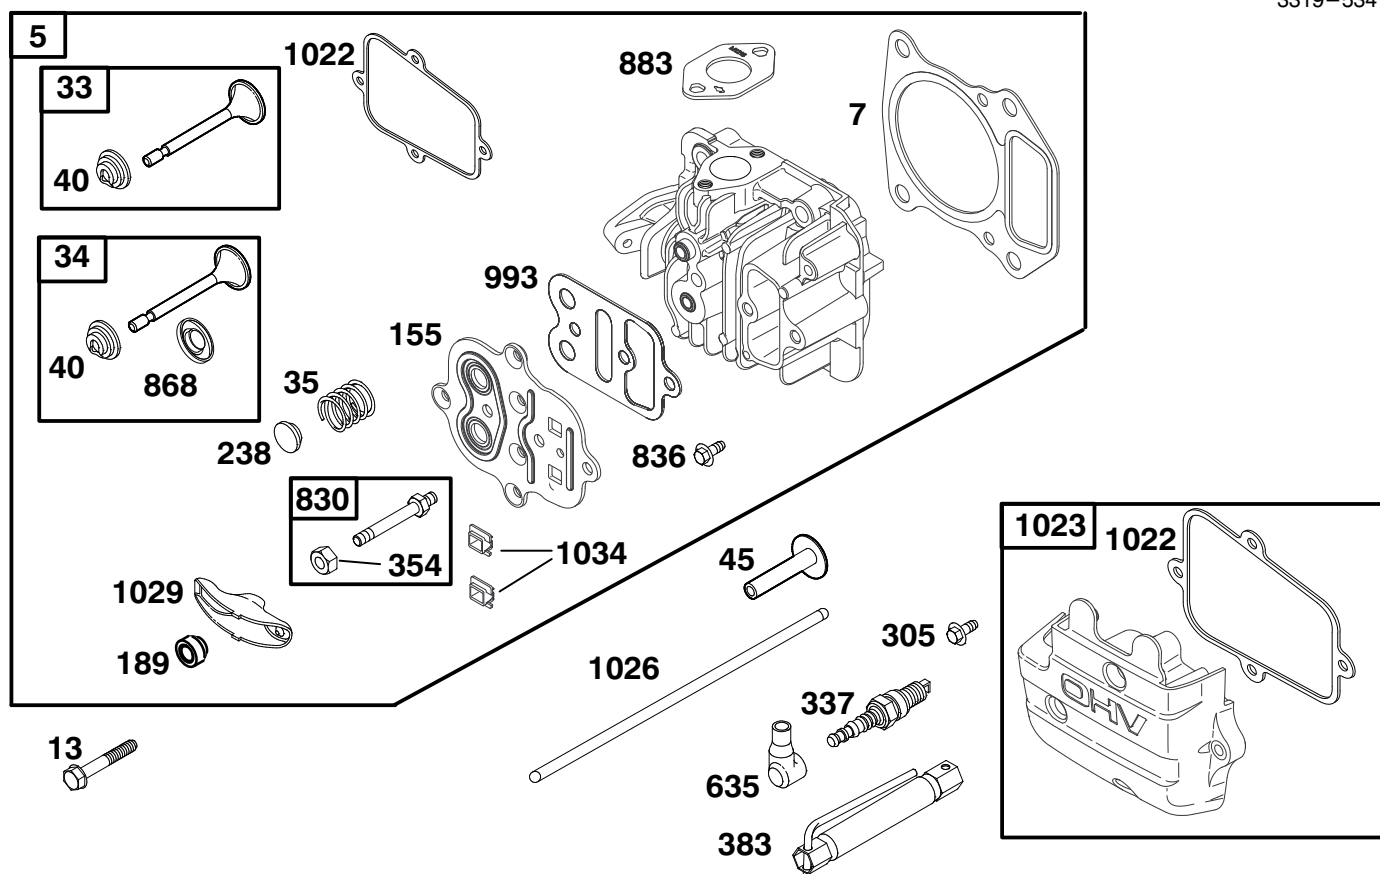


Assemblies include all parts shown in frames.

## ENGINE GTS-200
 
| Ref. No. | Part No. | Description                       | No. Used | Ref. No. | Part No. | Description           | No. Used |
|----------|----------|-----------------------------------|----------|----------|----------|-----------------------|----------|
| 5        | 99-0929  | Head - Cylinder                   | 1        | 383      | 99-0944  | Wrench - Spark Plug   | 1        |
| †★7      | 99-0930  | Gasket - Cylinder Head            | 1        | 635      | 77-9190  | Elbow - Spark Plug    | 1        |
| 13       | 99-0931  | Screw - Hex.                      | 1        | 830      | 99-0945  | Stud - Rocker Arm     | 1        |
| 33       | 99-0932  | Valve - Exhaust                   | 1        | 836      | 99-0941  | Screw - Hex.          | 1        |
| 34       | 99-0933  | Valve - Intake                    | 1        | †★868    | 99-0946  | Seal - Valve          | 1        |
| 35       | 99-0934  | Spring - Valve                    | 1        | †★883    | 99-0947  | Gasket - Exhaust      | 1        |
| 40       | 99-0935  | Retainer - Valve Spring           | 1        | †★993    | 99-0948  | Gasket - Plate        | 1        |
| 45       | 99-0936  | Tappet - Valve                    | 1        | †★1022   | 99-0907  | Gasket - Rocker Cover | 1        |
| 155      | 99-0938  | Plate - Cylinder Head             | 1        | 1023     | 98-9211  | Cover - Rocker        | 1        |
| 189      | 99-0939  | Ball - Rocker Arm                 | 1        | 1026     | 99-0949  | Rod - Push            | 1        |
| 238      | 99-0940  | Cap - Valve                       | 1        | 1029     | 99-0950  | Arm - Rocker          | 1        |
| 305      | 99-0942  | Screw - Hex.                      | 1        | 1034     | 99-0951  | Guide - Push Rod      | 1        |
| 337      | 99-0943  | Plug - Spark                      | 1        |          |          |                       |          |
| 354      |          | Nut - Hex.<br>(Sold in Kit Only). | 1        |          |          |                       |          |

★ Included in Gasket Set - Part No. 99-0902

† Included in Valve Overhaul Gasket Set - Part No. 99-0904

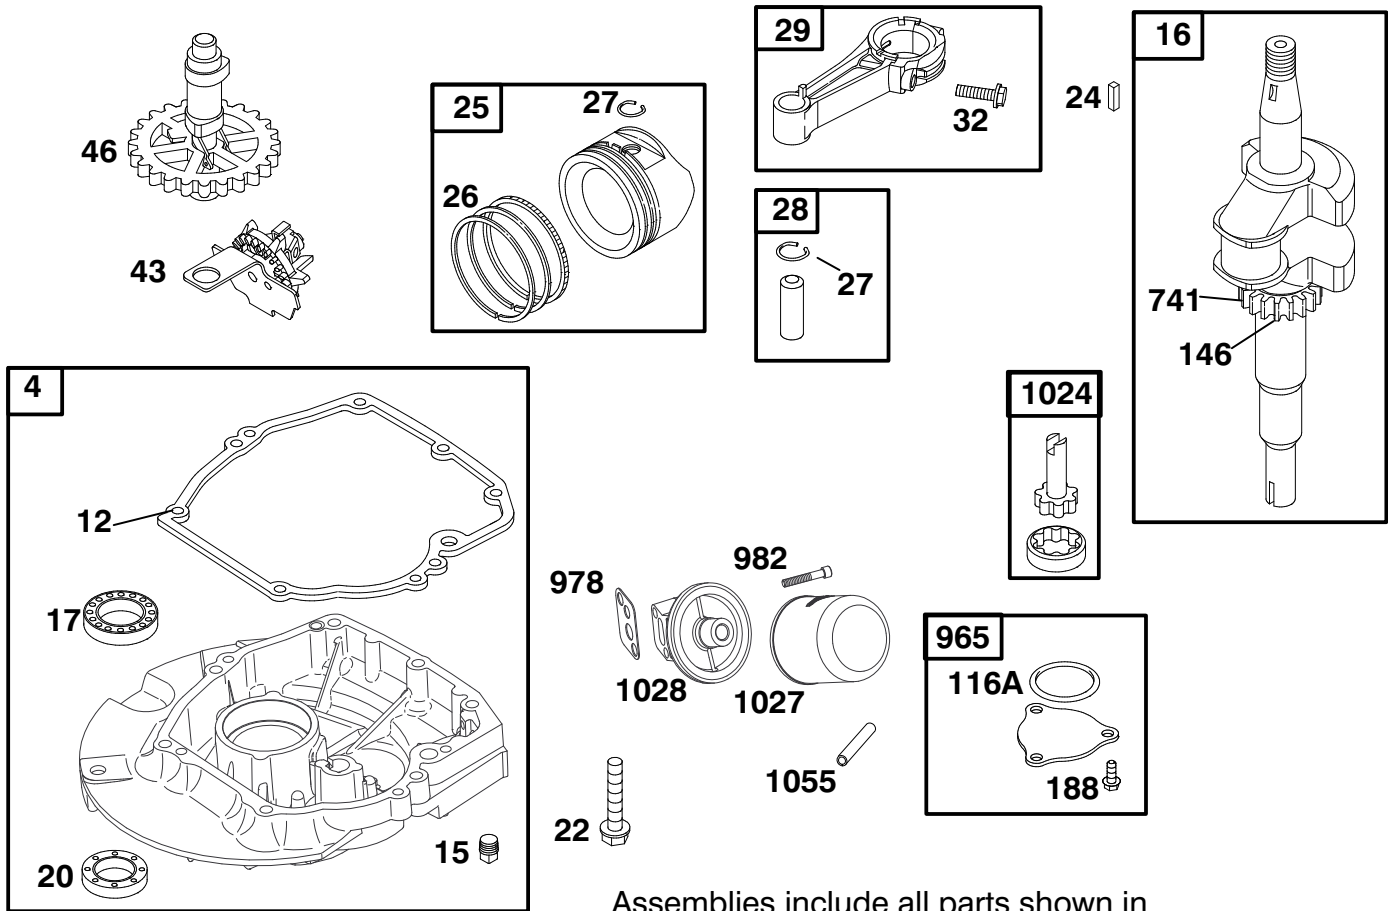


Assemblies include all parts shown in frames.

## ENGINE GTS-200
 
| Ref. No. | Part No. | Description                             | No. Used |
|----------|----------|-----------------------------------------|----------|
| 4        | 99-0980  | Sump – Engine                           | 1        |
| ★12      | 99-0953  | Gasket – Crankcase                      | 1        |
| 15       | 99-0954  | Plug – Oil Drain                        | 1        |
| 16       | 98-9214  | Crankshaft                              | 1        |
| 17       | 99-1031  | Bearing – Ball                          | 1        |
| ★20      | 99-0955  | Seal – Oil                              | 1        |
| 22       | 99-0956  | Screw – Hex.                            |          |
|          |          | <b>Note:</b> 99-1040                    |          |
|          |          | Screw – Hex.                            |          |
|          |          | (One (1) Used in Hole Nearest Breather) | 1        |
| 24       | 99-0957  | Key – Flywheel                          | 1        |
| 25       | 99-0958  | Piston Assy. (Standard)                 | 1        |
| 26       | 99-0959  | Ring Set (Standard)                     | 1        |
| 27       | 99-0960  | Lock – Piston Pin                       | 1        |
| 28       | 99-0961  | Pin – Piston (Standard)                 | 1        |

| Ref. No. | Part No. | Description            | No. Used |
|----------|----------|------------------------|----------|
| 29       | 99-0962  | Rod – Connecting       | 1        |
| 32       | 99-0963  | Screw – Connecting Rod | 1        |
| 43       | 99-0937  | Governor/Oil Slinger   | 1        |
| 46       | 99-0965  | Gear – Cam             | 1        |
| 116A     | 99-1032  | Seal – O-Ring          | 1        |
| 146      | 99-0966  | Key – Timing           | 1        |
| 188      | 99-1033  | Screw – Hex.           | 1        |
| 741      | 99-0967  | Gear – Timing          | 1        |
| 965      | 99-1034  | Cover – Oil Pump       | 1        |
| 978      | 99-1035  | Gasket – Adapter       | 1        |
| 982      | 99-1036  | Screw – Soc. Hd.       | 1        |
| 1024     | 99-1037  | Pump – Oil             | 1        |
| 1027     | 98-9217  | Filter – Oil           | 1        |
| 1028     | 99-1038  | Adapter – Oil Filter   | 1        |
| 1055     | 99-1039  | Tube – Oil Pump        | 1        |

★ Included in Gasket Set – Part No. 99-0902

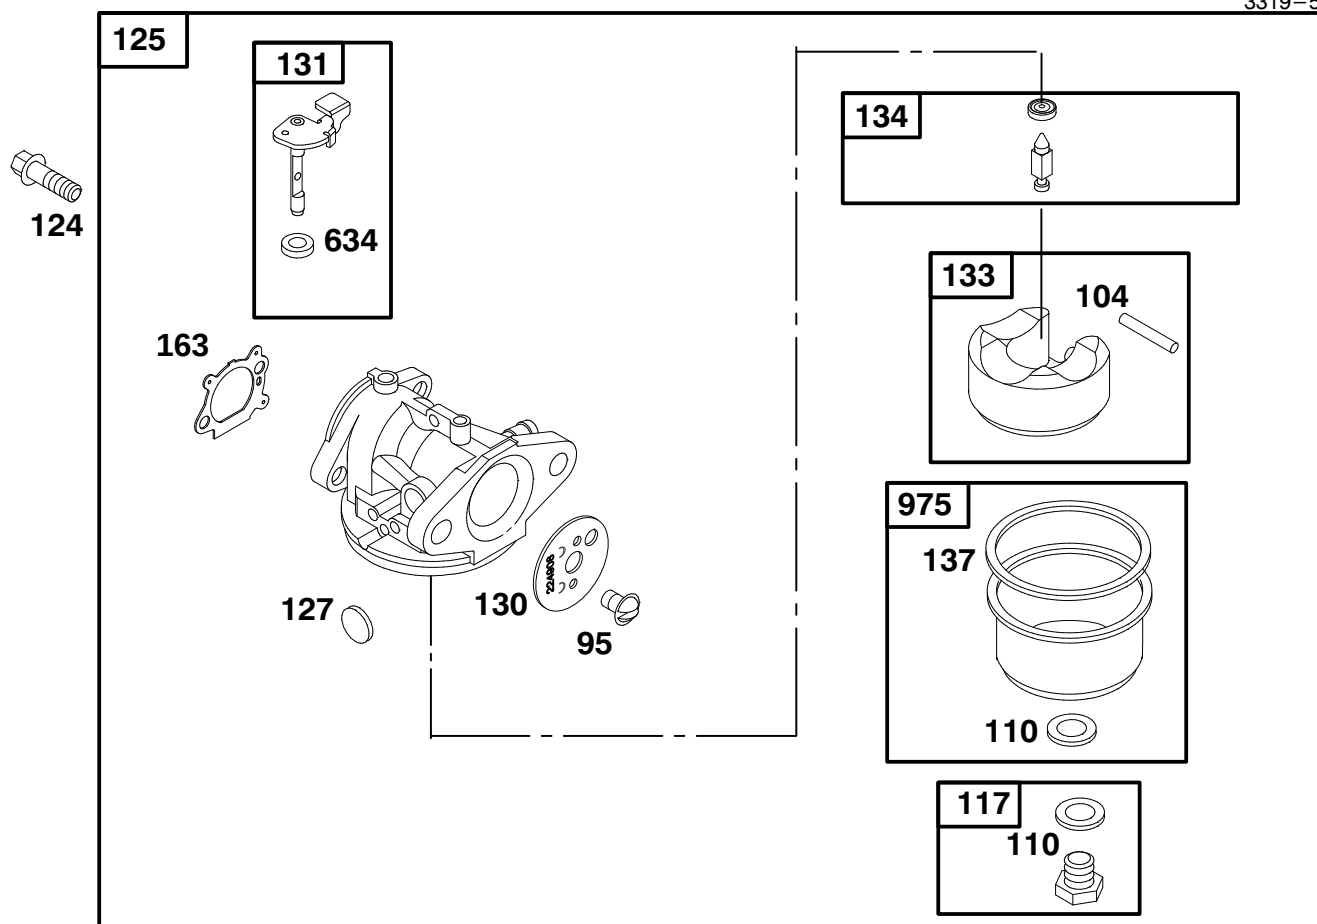

Assemblies include all parts shown in frames.


## ENGINE GTS-200
 
| Ref. No. | Part No. | Description                                                                | No. Used | Ref. No. | Part No. | Description                          | No. Used |
|----------|----------|----------------------------------------------------------------------------|----------|----------|----------|--------------------------------------|----------|
| 95       | 99-0969  | Screw - Slotted                                                            | 1        | 130      | 99-0974  | Valve - Throttle                     | 1        |
| ●104     | 99-0970  | Pin - Float Hinge                                                          | 1        | 131      | 99-0975  | Shaft - Throttle                     | 1        |
| ◆110     |          | Washer - Bowl<br>(Sold in Kit Only)                                        | 1        | 133      | 77-8170  | Float - Carburetor                   | 1        |
| 117      | 99-0971  | Jet - Main (Std.)<br><b>Note:</b> 99-1041<br>Jet - Main<br>(High Altitude) | 1        | ●134     | 77-8110  | Valve - Needle                       | 1        |
| 124      | 99-0972  | Screw - Shoulder                                                           | 1        | ◆137     |          | Gasket - Bowl<br>(Sold in Kit Only). | 1        |
| 125      | 99-0973  | Carburetor                                                                 | 1        | ◆◆★163   | 99-0976  | Gasket -<br>Air Cleaner              | 1        |
| ●127     |          | Plug - Welch<br>(Sold in Kit Only).                                        | 1        | ◆◆634    |          | Washer - Foam<br>(Sold in Kit Only). | 1        |
|          |          |                                                                            |          | 975      | 99-0977  | Bowl - Float                         | 1        |

● Included in Carburetor Kit - Part No. 99-0901

◆ Included in Carburetor Gasket Set - Part No. 99-0903

★ Included in Gasket Set - Part No. 99-0902

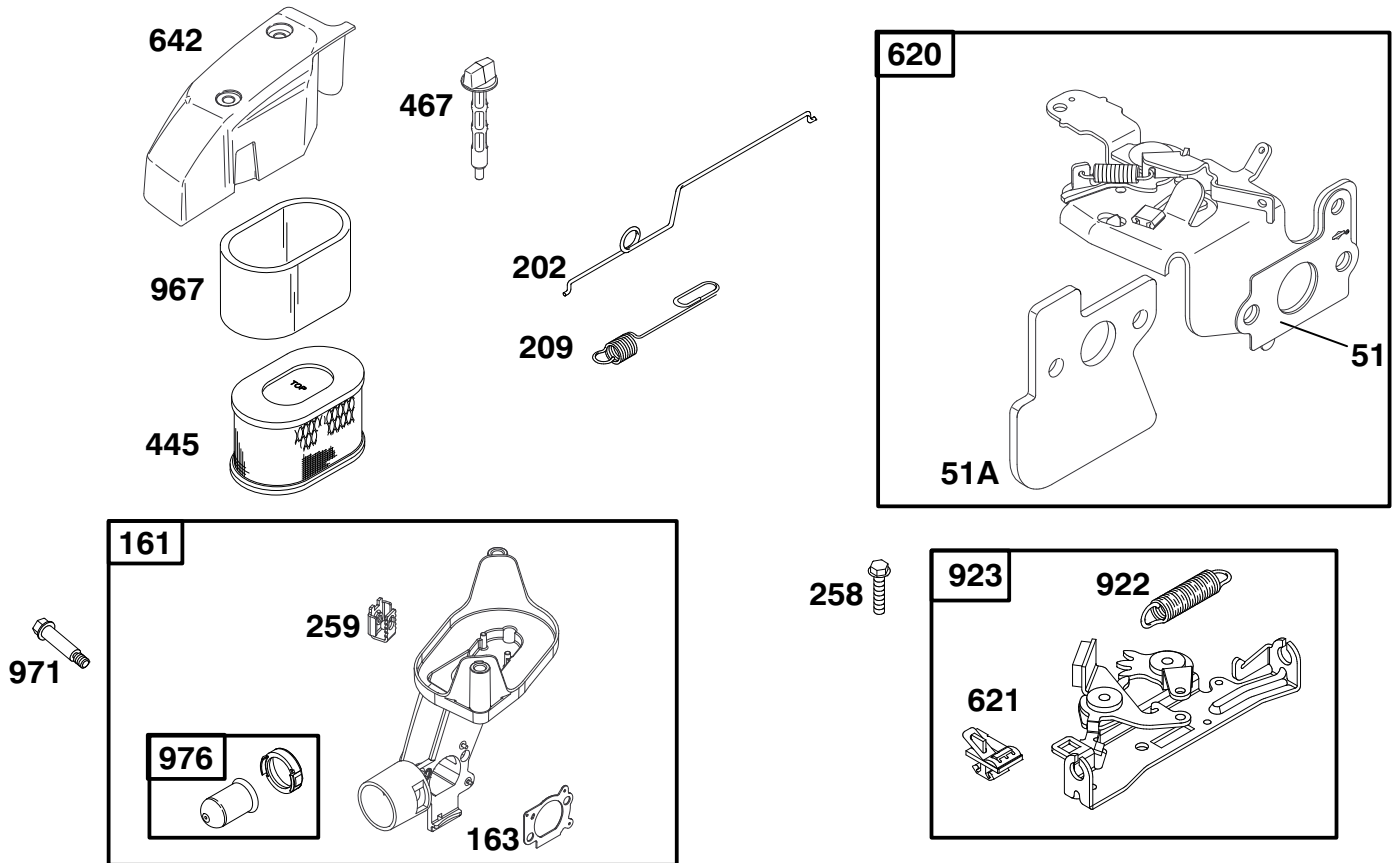

Assemblies include all parts shown in frames.

## ENGINE GTS-200

 
 
 
 
| Ref. No. | Part No. | Description               | No. Used |
|----------|----------|---------------------------|----------|
| 51       | 99-0968  | Gasket - Intake           | 1        |
| 51A      | 99-0978  | Gasket - Intake           | 1        |
| 161      | 99-0979  | Base - Air Cleaner/Primer | 1        |
| ◆★163    | 99-0976  | Gasket - Air Cleaner      | 1        |
| 202      | 99-0981  | Link - Governor           | 1        |
| 209      | 99-0982  | Spring - Governor         | 1        |
| 258      | 99-0983  | Screw - Hex.              | 1        |
| 259      | 99-0984  | Grommet                   | 1        |
| 445      | 98-9212  | Filter - Air              | 1        |

| Ref. No. | Part No. | Description         | No. Used |
|----------|----------|---------------------|----------|
| 467      | 98-9208  | Knob                | 1        |
| 620      | 99-0985  | Bracket - Control   | 1        |
| 621      | 99-0986  | Switch - Stop       | 1        |
| 642      | 98-9207  | Cover - Air Cleaner | 1        |
| 922      | 99-0987  | Spring - Brake      | 1        |
| 923      | 99-0988  | Brake Assembly      | 1        |
| 967      | 99-0989  | Filter - Air        | 1        |
| 971      | 99-0990  | Screw - Hex.        | 1        |
| 976      | 99-0991  | Primer - Carburetor | 1        |

● Included in Carburetor Kit - Part No. 99-0901

◆ Included in Carburetor Gasket Set - Part No. 99-0903

★ Included in Gasket Set - Part No. 99-0902

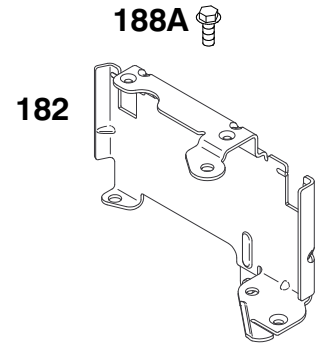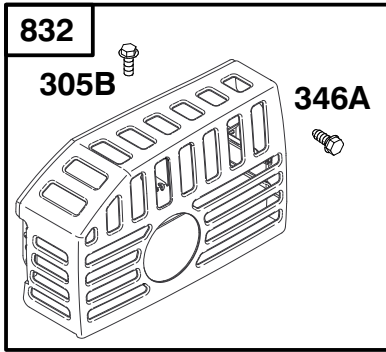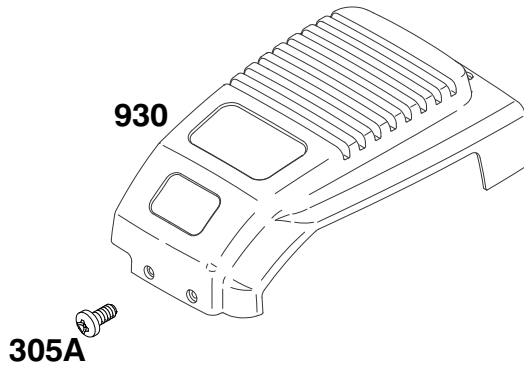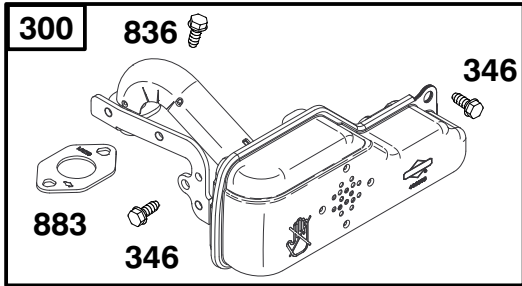

Assemblies include all parts shown in frames.


## ENGINE GTS-200
 
| Ref. No. | Part No. | Description             | No. Used |
|----------|----------|-------------------------|----------|
| 182      | 98-9205  | Bracket - Tank Mounting | 1        |
| 188A     | 98-9202  | Screw - Hex.            | 1        |
| 300      | 99-0995  | Muffler - Exhaust       | 1        |
| 305A     | 98-9204  | Screw - Hex.            | 1        |
| 305B     | 99-0998  | Screw - Hex.            | 1        |
| 346      | 99-1047  | Screw - Hex.            | 1        |


| Ref. No. | Part No. | Description      | No. Used |
|----------|----------|------------------|----------|
| 346A     | 99-0999  | Screw - Hex.     | 1        |
| 832      | 98-9206  | Guard - Muffler  | 1        |
| 836      | 99-0941  | Screw - Hex.     | 1        |
| †★883    | 99-0947  | Gasket - Exhaust | 1        |
| 930      | 98-9203  | Guard - Rewind   | 1        |

★ Included in Gasket Set - Part No. 99-0902

† Included in Valve Overhaul Gasket Set - Part No. 99-0904

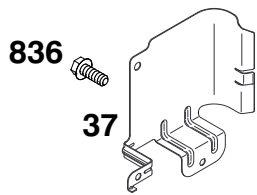

836

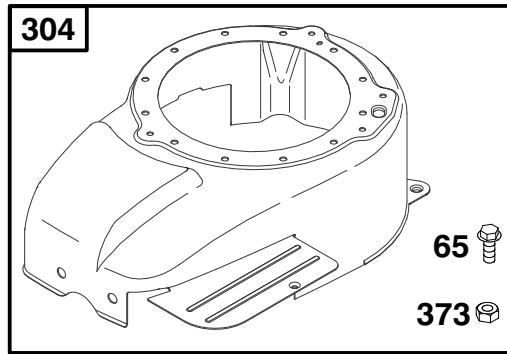 


65

373


332



 
455





1005

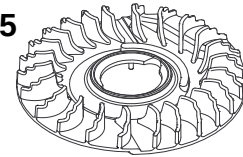 

23

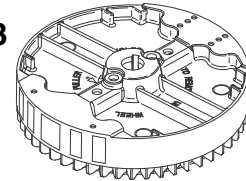 

363

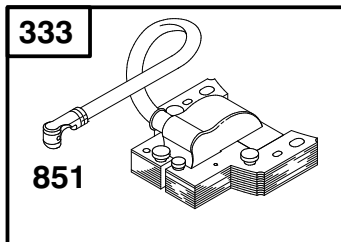  


333

851

334



 356


**1036 LABEL KIT - EMISSION**

Assemblies include all parts shown in frames.

**ENGINE GTS-200**
 
| Ref. No. | Part No. | Description        | No. Used |
|----------|----------|--------------------|----------|
| 23       | 99-1001  | Flywheel           | 1        |
| 37       | 99-1013  | Guard - Flywheel   | 1        |
| 65       | 99-1002  | Screw - Hex.       | 1        |
| 304      | 99-1003  | Housing - Blower   | 1        |
| 332      | 99-1004  | Nut - Flywheel     | 1        |
| 333      | 99-1005  | Armature - Magneto | 1        |
| 334      | 99-1006  | Screw - Hex.       | 1        |
| 356      | 99-1007  | Wire - Stop        | 1        |

| Ref. No. | Part No. | Description          | No. Used |
|----------|----------|----------------------|----------|
| 363      | 99-1008  | Puller - Flywheel    | 1        |
| 373      | 99-1009  | Nut - Hex.           | 1        |
| 455      | 99-1010  | Cup - Flywheel       | 1        |
| 836      | 99-0941  | Screw - Hex.         | 1        |
| 851      | 77-9450  | Terminal - Cable     | 1        |
| 1005     | 99-1015  | Fan - Flywheel       | 1        |
| 1036     | 99-1016  | Label Kit - Emission | 1        |




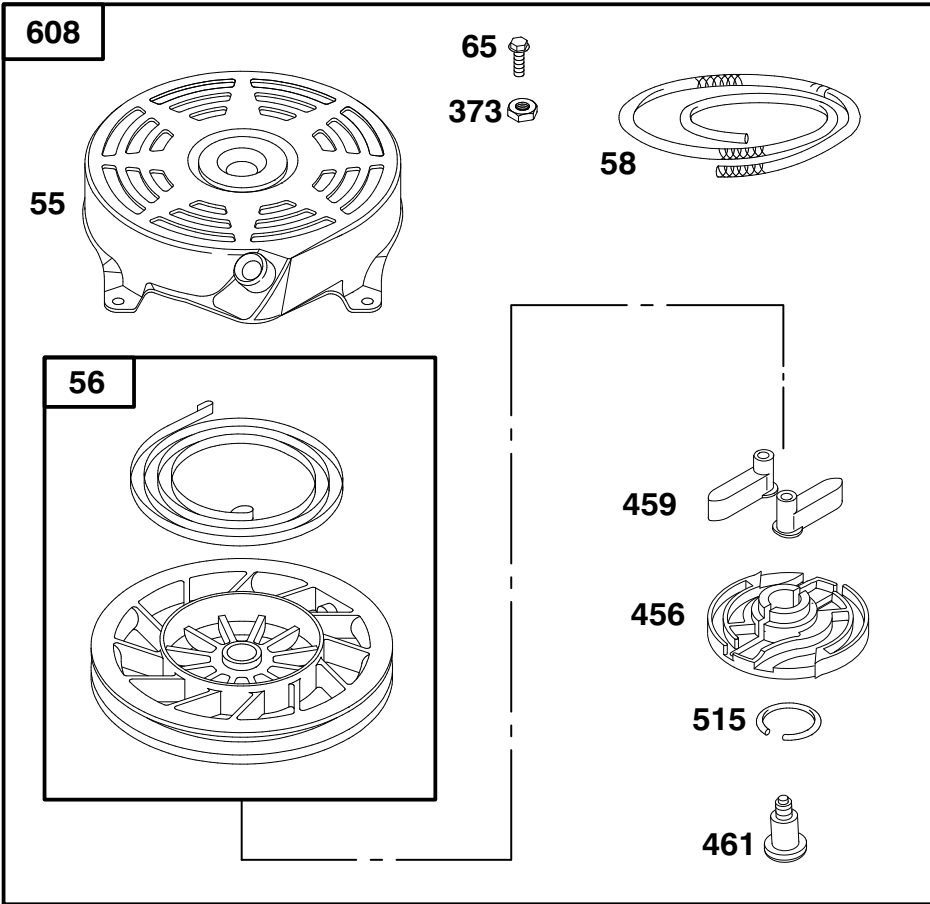


Assemblies include all parts shown in frames.

## ENGINE GTS-200
    
| Ref. No. | Part No. | Description              | No. Used |
|----------|----------|--------------------------|----------|
| 55       | 99-1048  | Housing - Rewind Starter | 1        |
| 56       | 94-1657  | Pulley - Starter         | 1        |
| 58       | 94-1668  | Rope - Starter           | 1        |
| 59       | 77-7210  | Insert - Starter Grip    | 1        |
| 60       | 77-8520  | Grip - Starter Rope      | 1        |
| 65       | 99-1002  | Screw - Hex.             | 1        |

| Ref. No. | Part No. | Description       | No. Used |
|----------|----------|-------------------|----------|
| 373      | 99-1009  | Nut - Hex.        | 1        |
| 456      | 94-1659  | Retainer - Spring | 1        |
| 459      | 94-1654  | Pawl - Ratchet    | 1        |
| 461      | 94-1600  | Screw - Shoulder  | 1        |
| 515      | 94-1655  | Spring - Friction | 1        |
| 608      | 98-9215  | Starter - Rewind  | 1        |

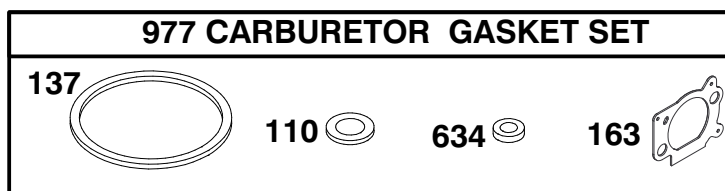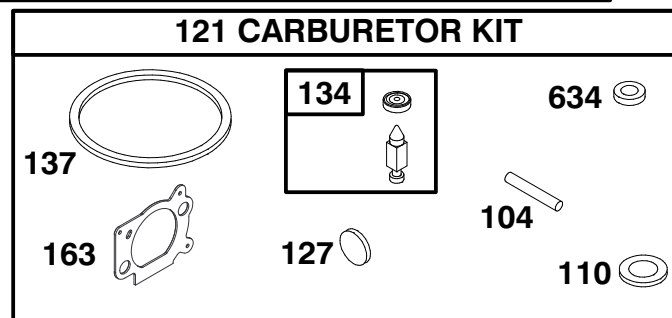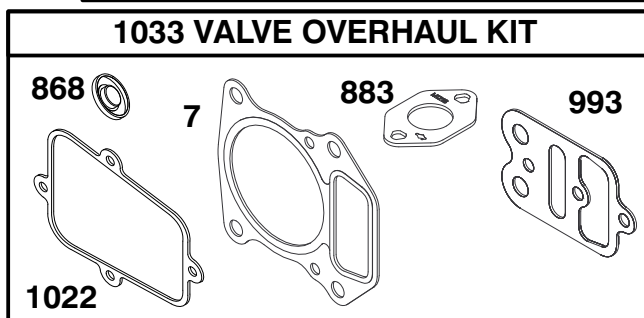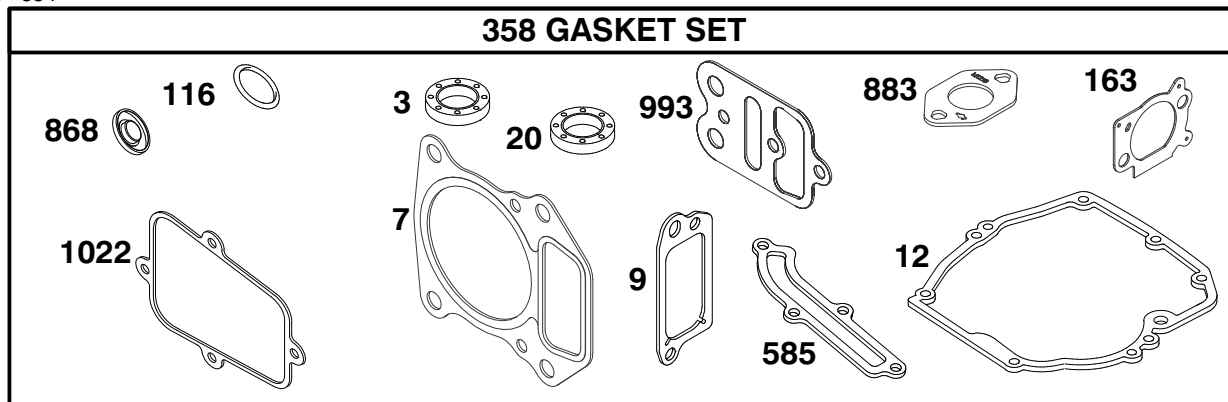

Assemblies include all parts shown in frames.

## ENGINE GTS-200

| Ref. No. | Part No. | Description                          | No. Used |
|----------|----------|--------------------------------------|----------|
| ★3       | 99-0912  | Seal – Oil                           | 1        |
| †★7      | 99-0930  | Gasket – Cylinder Head               | 1        |
| †★9      | 99-0913  | Gasket – Breather                    | 1        |
| ★12      | 99-0953  | Gasket – Crankcase                   | 1        |
| ★20      | 99-0955  | Seal – Oil                           | 1        |
| ●104     | 99-0970  | Pin – Float Hinge                    | 1        |
| ●◆110    |          | Washer – Bowl<br>(Sold in Kit Only). | 1        |
| ★116     | 99-0916  | Seal – O Ring                        | 1        |
| 121      | 99-0901  | Carburetor Kit                       | 1        |
| ●127     |          | Plug – Welch<br>(Sold in Kit Only).  | 1        |
| ●134     | 77-8110  | Valve – Needle                       | 1        |
| ●◆137    |          | Gasket – Bowl<br>(Sold in Kit Only). | 1        |

| Ref. No. | Part No. | Description                          | No. Used |
|----------|----------|--------------------------------------|----------|
| ●◆★163   | 99-0976  | Gasket – Air Cleaner                 | 1        |
| 358      | 99-0902  | Gasket Set                           | 1        |
| ★585     | 99-0923  | Gasket – Breather                    | 1        |
| ●◆634    |          | Washer – Foam<br>(Sold in Kit Only). | 1        |
| †★868    | 99-0946  | Seal – Valve                         | 1        |
| †★883    | 99-0947  | Gasket – Exhaust                     | 1        |
| 977      | 99-0903  | Gasket Set – Carburetor              | 1        |
| †★993    | 99-0948  | Gasket – Plate                       | 1        |
| †★1022   | 99-0907  | Gasket – Rocker Cover                | 1        |
| 1033     | 99-0904  | Gasket Set –<br>Valve Overhaul       | 1        |

★ Included in Gasket Set – Part No. 99-0902

† Included in Valve Overhaul Gasket Set – Part No. 99-0904

◆ Included in Carburetor Gasket Set – Part No. 99-0903

● Included in Carburetor Kit – Part No. 99-0901

# Toro Part Number Index

| Part No. | Page No. | Ref. No. | Qty. | Description              |
|----------|----------|----------|------|--------------------------|
| 3-3287   | 5        | 9        | 2    | Spacer                   |
| 3-7501   | 5        | 18       | 3    | Washer—Curved            |
| 25-7740  | 1        | 12       | 4    | Knob—Arm                 |
| 26-0670  | 3        | 10       | 1    | Bolt—Blade               |
| 27-6232  | 1        | 8        | 2    | Bolt—Wheel HH            |
| 27-7210  | 5        | 8        | 2    | Screw—Shoulder           |
| 27-8590  | 3        | 8        | 1    | Key—Square               |
| 33-3208  | 1        | 17       | 1    | Rod—Shield               |
| 33-4820  | 6        | 1        | 1    | Hinge—Door               |
| 36-4780  | 1        | 21       | 2    | Washer—Thrust            |
| 36-6910  | 6        | 4        | 2    | Spring                   |
| 37-7260  | 1        | 27       | 2    | Screw—TAP                |
| 39-5770  | 1        | 1:6      | 1    | Decal—Danger             |
| 40-1940  | 1        | 3        | 4    | Washer                   |
| 42-3510  | 1        | 18       | 2    | ASM—Pivot Arm            |
| 42-4020  | 6        | 5        | 1    | Frame—Bag                |
| 42-4030  | 6        | 2        | 1    | Frame—Bag                |
| 44-0580  | 1        | 16       | 1    | Shield—Trailing          |
| 46-6810  | 2        | 45       | 1    | Screw HWH                |
| 46-6811  | 1        | 36       | 1    | Screw—HWH                |
| 46-8081  | 5        | 2        | 1    | Guide—Rope               |
| 46-8090  | 1        | 32       | 2    | Screw—Tapping            |
| 46-8091  | 4        | 8        | 2    | Screw—Tapping            |
| 48-2170  | 1        | 24       | 2    | Cap—End                  |
| 48-2591  | 3        | 17       | 1    | ASM—Crankshaft Protector |
| 48-2810  | 5        | 4        | 1    | Rod—Support              |
| 48-2840  | 6        | 7        | 1    | Door—Bag                 |
| 49-1630  | 5        | 22       | 2    | Spacer—Support           |
| 49-2040  | 2        | 48       | 8    | Screw—HH                 |
| 49-8740  | 1        | 25       | 1    | Quadrant—Rear            |
| 49-8750  | 1        | 29       | 1    | Quadrant—Rear            |
| 49-8760  | 1        | 13       | 1    | Quadrant—Front           |
| 49-8770  | 2        | 49       | 1    | Quadrant—Front           |
| 49-8790  | 1        | 20       | 1    | Shaft—Rear Axle          |
| 51-3210  | 4        | 3        | 2    | Fuel Line                |
| 52-2170  | 3        | 14       | 1    | Wa—Retainer              |
| 52-2190  | 3        | 9        | 1    | Spacer—Retainer          |
| 52-2410  | 1        | 9:4      | 4    | Hub—Bearing Support      |
| 52-2440  | 1        | 9:6      | 4    | Spacer—Bearing           |
| 52-2450  | 1        | 9:5      | 8    | Ball Bearing             |
| 52-2480  | 1        | 7        | 4    | Spacer                   |
| 52-2610  | 2        | 41       | 1    | Grease—Label—Hp          |
| 53-7720  | 1        | 9        | 4    | ASM—Wheel & Tire         |
| 53-7740  | 1        | 9:1      | 4    | Tire—8.00                |
| 53-7780  | 1        | 9:3      | 8    | Plate—Wheel Half         |
| 55-3570  | 4        | 2        | 1    | Cap—Fuel                 |
| 61-8270  | 5        | 26       | 1    | Bar—Control              |
| 61-8300  | 1        | 6        | 2    | ASM—Arm                  |
| 66-5350  | 5        | 24       | 1    | Lever—Control            |
| 66-7560  | 1        | 5        | 2    | ASM—Arm                  |
| 66-7561  | 1        | 23       | 2    | ASM—Arm                  |
| 71-1280  | 1        | 1:7      | 1    | Decal—Warning            |
| 71-9280  | 4        | 4        | 1    | Filter—Fuel              |
| 71-9350  | 2        | 39       | 1    | Spring—Bracket           |
| 74-1810  | 1        | 22       | 2    | Washer—Thrust            |
| 76-4640  | 1        | 33:2     | 1    | Latch Discharge Plug     |
| 76-4650  | 1        | 33:4     | 1    | Grip Latch               |
| 76-4660  | 2        | 38       | 1    | Spring—Extension         |
| 77-0500  | 1        | 33       | 1    | ASM—Plug                 |
| 80-3770  | 2        | 37       | 1    | Retainer—Door            |
| 82-9152  | 2        | 40       | 1    | Chute—Discharge          |
| 84-4960  | 3        | 6        | 1    | Decal—Proline            |

\*Not Illustrated

# Toro Part Number Index (cont.)

| Part No.  | Page No. | Ref. No. | Qty. | Description              |
|-----------|----------|----------|------|--------------------------|
| 84-8361   | 5        | 13       | 1    | Latch-Handle             |
| 84-8401   | 5        | 5        | 1    | Latch-Handle             |
| 84-9170   | 4        | 5        | 1    | Wa-Base                  |
| 91-2256   | 3        | 13       | 1    | Blade-Generation li      |
| 92-1599   | 3        | 12       | 1    | Stiffener-Blade          |
| 92-1720   | 1        | 1:3      | 1    | Kicker-RH                |
| 92-1730   | 1        | 1:4      | 1    | Kicker-LH                |
| 92-1750   | 1        | 1:2      | 1    | Plate-Kicker Rear        |
| 92-1779   | 1        | 1:8      | 1    | Decal-Warning            |
| 92-7988   | 2        | 52       | 1    | Decal-Recycler           |
| 93-3154   | 1        | 34       | 1    | Plate-Latch              |
| 93-3166   | 4        | 1        | 1    | Tank-Gas                 |
| 93-3662   | 5        | 15       | 1    | Cable-Brake              |
| 93-7351   | 1        | 35       | 1    | ASM-Door                 |
| 93-8470   | 3        | 3        | 1    | Screw-Clamp              |
| 98-2000   | 5        | 1        | 1    | Handle                   |
| 98-2001   | 5        | 20       | 1    | Bracket-Throttle Control |
| 98-2002   | 3        | 5        | 1    | Decal-Engine             |
| 98-2047   | 5        | 16       | 1    | Cable-Throttle           |
| 98-3217   | 1        | 26       | 1    | Cover-Belt               |
| 98-7139   | 1        | 1        | 1    | Housing-Commercial(Mach) |
| 98-9220   | 6        | 0        | 1    | Grass Bag-Proline        |
| 98-9222   | 6        | 6        | 1    | Bag-Grass                |
| 98-9227   | 2        | 54       | 1    | Guard-Primer             |
| 2210-249  | 3        | 4        | 1    | Clamp-Casing             |
| 2210-316  | 3        | 2        | 1    | Rope-Stop                |
| 2412-95   | 4        | 6        | 4    | Clamp                    |
| 256-276   | 5        | 29       | 2    | Spacer-Nylon             |
| 257-3     | 2        | 50       | 2    | Washer-Thrust            |
| 321-2     | 1        | 9:7      | 16   | Screw-HH                 |
| 321-4     | 5        | 23       | 1    | Screw-HH                 |
| 321-7     | 1        | 31       | 2    | Screw-Cap                |
| 321-9     | 5        | 3        | 1    | Screw-HH                 |
| 321-13    | 5        | 17       | 2    | Screw-HH                 |
| 322-6     | 5        | 11       | 2    | Screw-HH                 |
| 322-7     | 5        | 12       | 2    | Screw-HH                 |
| 322-11    | 5        | 19       | 2    | Screw-HH                 |
| 323-6     | 4        | 7        | 2    | Screw-HH                 |
| 323-12    | 1        | 10       | 4    | Screw                    |
| 3253-22   | 3        | 11       | 1    | Washer-Lock              |
| 3254-6    | 3        | 16       | 3    | Washer-Lock Int          |
| 3256-22   | 1        | 30       | 2    | Washer-Flat              |
| 3290-378  | 5        | 14       | 1    | Tie-Cable                |
| 3290-422  | 6        | 3        | 2    | Nut-Push                 |
| 3290-456  | 5        | 6        | 4    | Washer-Lock              |
| 3295-35   | 1        | 33:3     | 1    | Rivet Solid              |
| 3296-6    | 1        | 2        | 2    | Nut-Lock                 |
| 3296-29   | 5        | 7        | 4    | Nut-Lock                 |
| 3296-42   | 1        | 9:8      | 16   | Nut-Lock                 |
| 3296-42   | 1        | 28       | 2    | Nut-Lock                 |
| 3296-42   | 5        | 25       | 2    | Nut-Lock                 |
| 3296-47   | 5        | 10       | 2    | Nut-Lock                 |
| 3296-58   | 5        | 21       | 2    | Nut-Flange               |
| 32111-7   | 5        | 27       | 2    | Nut-Cap                  |
| 32121-108 | 1        | 19       | 2    | Pin-Spring               |
| 32144-70  | 3        | 15       | 3    | Screw-TAP                |
| 32144-102 | 3        | 7        | 3    | Screw                    |
| 32144-111 | 1        | 1:5      | 6    | Screw - PPH              |
| 32151-86  | 5        | 28       | 2    | Ring-E                   |
| 32152-2   | 1        | 4        | 4    | Nut-Lock HH              |

\*Not Illustrated